



Declaration of Conformity with the requirements of the e-waste (Management and Handling) Rules, 2011, adopted by Notification S.O.1035(E) of Ministry of Environment and Forests.

This Product is in conformity with the requirements of Rule 13 of the e-waste (Management and Handling) Rules, 2011.

The content of hazardous substance in the product, along with the exemption of the applications listed in **SCHEDULE II** of the (Management and Handling) Rules, 2011 are:

1. Lead (Pb) - not over 0.1 % by weight;
2. Cadmium (Cd) - not over 0.01 % by weight;
3. Mercury (Hg) - not over 0.1 % by weight;
4. Hexavalent chromium (Cr6+) - not over 0.1 % by weight;
5. Polybrominated biphenyls (PBBs) - not over 0.1% by weight;
6. Polybrominated diphenyl ethers (PBDEs) -not over 0.1 % by weight.



PLANET MOBILES PRIVATE LIMITED
Marketing Office:
Plot no.: 254, IInd Floor, Udyog Vihar, Phase-IV
Gurgaon - 122015, Haryana, India.

Website: www.videoconmobiles.com
Tel: 0124-33660000

1100123016



*Please read this instruction manual carefully before operating your Android Tablet. Retain it for the future reference.
Record model name & Serial number of the machine. Please quote this information when you need service.*

THIS PAGE IS INTENTIONALLY LEFT BLANK

User Manual VTAB ACE Pro

Safety Precautions...

Please comply with these precautions to avoid putting yourself or other around you in a dangerous or illegal situation, and ensure peak performance of your device.

	ROAD SAFETY Do not use your Android Tablet while driving.		AIRCRAFT Switch off your device in aircraft. Wireless devices can cause interference in aircraft.		USE SENSIBLY Use in normal condition, as explained in the User's manual. Do not touch the antenna unnecessarily.
	INTERFERENCE All wireless devices could affect your device performance.		REFUELLING Switch off the device when refueling. Do not use the device at refueling point.		QUALIFIED SERVICE Only qualified personnel may install or repair Device.
	HOSPITALS Switch off your device near hospitals and medical.		BLASTING AREAS Switch off the device near blasting areas.		BATTERIES Use only approved batteries. Do not connect incompatible products.
	Flame				WATER-RESISTANCE Your device is not water-resistant. Keep it dry.

● Important safety measures

Your Device is designed to comply with all the necessary precautions and requirements and should be treated with care. The suggested safety measures will help you to use this product without causing you any health hazards. Your Device is designed to comply with all the necessary precautions and requirements and should be treated with care. The suggested safety measures will help you to use this product without causing you any physical hazards. Do not store the device in high or cold temperature. Extreme temperatures can shorten the life of electronic devices and damage batteries.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will rust electronic Circuits. If your device does get wet were move wipe it with a dry cloth and take it the service center.

THIS PAGE IS INTENTIONALLY LEFT BLANK

THIS PAGE IS INTENTIONALLY LEFT BLANK

arising out of, or in connection with, any information contained in, or as a result of the use of any content or service by you or any third party, even if advised of the possibility of such damages.”

► Third party services may be terminated or interrupted at any time, and VIDEOCON makes no representation or warranty that any content or service will remain available for any period of time. Videocon reserves the right, in its sole discretion to change/modify/update the software (including without limitation, the availability of any feature or content) of the Device at any time without prior notice.

Key points...

This manual includes security measures and correct operating methods. For personal safety, please make sure to read this Manual before using. Thank you!

The machine adopts capacitive touch screen, you can just touch it by finger or click with capacitive pen for operation. (Never use the sharp objects to click the screen, or the touch screen may be damaged).

Do not put the device at any high temperature, high humidity or dusty place.

Do not drop or crash the device to prevent the violent impacting between the display and the capacitive touch screen. Or the customers have to take the consequence by themselves.

Please choose the suitable volume and never make the too loud volume. If you feel uncomfortable please turn down the volume or stop to use the device soon.

Please charge if you meet those situations as below:

A. Low battery on the battery icon.  B. The system turns off automatically.

C. The keys do not work. D.  is battery charging

In the charging process the device may be warning up a little (not too hot), this is normal phenomenon, but it won't effect.

Do not disconnect the device while formatting, downloading or uploading, or it may make the error.

Our company won't bear the duty for the loss of the memory erasing on account of the damage, repair or some other reason. Please operate the device according to the user manual rightly and backup the important data in time.

Do not dismantle this device by yourself, and do not polish it with alcohol, dilution, or benzene.

Do not use this device where electronics is forbidden, such as on the airplane.

User Manual

- ▶ Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can get damaged.
- ▶ Do not drop, knock, shake or bend the device. Rough handling can break internal circuit boards and fine mechanics.
- ▶ Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- ▶ Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for extended period of time as it may interfere with the electronic circuits and display.
- ▶ Use manufacturer approved batteries, chargers, accessories and supplies. Videocon will not be held responsible for user's safety when using unapproved accessories or supplies. This goes against the warranty rules.

Disclaimer

- ▶ Some applications accessible through your device belong to third parties and are protected by patent, copyright, trademark And/or other intellectual property laws. Those applications are provided solely for your personal non-commercial use. You may not use any application in a manner that has not been authorized by the application owner or provider.
- ▶ Without limiting the foregoing, unless expressly authorized by the applicable content owner or service provider, you may not modify, copy, republish, upload, post, transmit, translate, sell, create derivate works, exploit, or distribute in any manner or medium any content or services displayed through this device.
- ▶ "Third party content and services are provided "as is". VIDEOCON does not warrant content or services so provided, either expressly or impliedly. VIDEOCON disclaims any implied warranties including but not limited to, warranties of merchantability or fitness for a particular purpose. VIDEOCON does not guarantee the accuracy, validity, timeliness, legality, or completeness of any content or service made available through this device. Under no circumstances, including negligence, shall VIDEOCON be liable, whether in contract or tort, for any direct, indirect, incidental, special or consequential damages, attorney fees, expenses, or any other damages

SERVICE STATION COPY

Model No. _____ IMEI / Serial No: _____

NAME OF PURCHASER _____

Last Name

First Name

Middle Name

ADDRESS _____

CITY _____ STATE _____ PIN CODE _____

PHONE NO. (Residence) _____ (Office) _____

DATE OF PURCHASE _____

CUSTOMER'S SIGNATURE _____

VIDEOCON 

DEALER'S SIGNATURE & STAMP _____



WARRANTY

Manufacturer of this Videocon Brand Portable Digital Automatic Data Processing Equipment undertake that the product is warranted against manufacturing defects arising within 1 year from the date of purchase as per the terms and conditions mentioned here below.

TERMS & CONDITIONS

1. The warranty is void if the Android Tablet is not used in accordance with the instructions given in the user's manual.
 2. The warranty will not be applicable to the Android Tablet, which has been damaged due to misuse, neglect, accident or improper installation. Damages caused by pests or by natural calamities are also not covered by this warranty.
 3. This warranty does not cover loss or damage in transit, whether carried by the company's transport or by the purchaser.
 4. The company shall not be liable for any delay in rectifying the Android Tablet, in the event of non availability of the components and shall in no way be responsible for any losses, direct or indirect, arising out of the delay, if any.
 5. The warranty does not hold good, if the Android Tablet is repaired by any agency not authorized by the company, the serial number of the Android Tablet is deleted or altered or if any modification is made in the circuitry of the set.
 6. The Warranty period for handset is one year and for accessories (Battery, Charger, Headset, Data Cable and OTG Cable) it is six months, both periods commencing from the date of purchase of the handset.
 7. In the event the set requires attention, the purchaser should arrange to deliver the same to the nearest service centre at his/her own cost.
 8. The warranty shall be confined to the first purchaser of the Android Tablet only.
 9. The warranty is issued subject to jurisdiction of civil courts at Mumbai only.
 10. This Android Tablet is meant for home entertainment purpose. Warranty is not valid if the Android Tablet is used for commercial purpose.
- The warranty card should be completely filled and service station copy dispatched to the nearest service centre within 10 days from the date of purchase.

NOTE:-

- The 1 year warranty scheme is applicable on selected Android tablet models
- Manufacturer will not be responsible for any injury, loss or damage, direct or consequential, arising out of the use of inability to use this Android Tablet.
- The warranty stands void in case of transfer of ownership of this Android Tablet.
- In case of replacement of any part the defective part shall be owned by the company.

- ❖ Do not use this device while walking and driving, avoiding traffic accident.
 - ❖ USB is for transferring data.
 - ❖ Virus can damage this device. So please use proper computer antivirus and keep it updated.
 - ❖ For any support needed for this device please contact the company or the authorized distributor.
 - ❖ Any unauthorized dismantling of the device will make the warranty null and void.
- We reserve the right to keep the change of the products, the specification and design is subject to change without notice!

Packing List...

● Items in Gift Box

1. V-TAB ACE Pro Android Tablet
2. User Manual with Product Warranty
3. Power Adaptor
4. Data Cable
5. Earphone
6. OTG Cable

Note-

- Other accessories can be purchased at local retailers.
- The accessories may not be compatible with other devices


● Power Adaptor Specification

- MODEL: V-TAB ACE Pro
- INPUT: AC 100-240V 50/60Hz 0.35A MAX
- OUTPUT: 5.0VDC==2.0A

User Manual

Device Description...

SN	FUNCTION	DESCRIPTION	SN	FUNCTION	DESCRIPTION
1	POWER	Press button for over 2 Seconds for set to ON Press once to turn ON Tablet from Sleep Listen during calls	7	SIM SLOT	Place SIM Card
2	VOLUME - KEY	Turn Down volume	8	Camera	Capture photos
3	VOLUME + KEY	Turn up volume	9	MIC	Built In Mic
4	MINI USB	5-Pin USB can be used To charge & share data	10	Speaker	Listen to your favourite music
5	EARPHONE	3.5mm standard earphone jack	11	RESET	Reset the device
6	MICRO SD	Micro SD / TF Card			

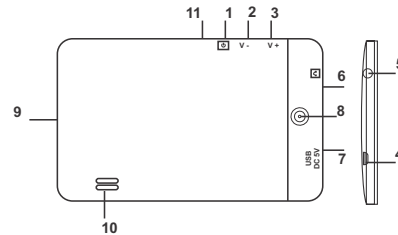

[TIPS]: 1. When the battery is low, it will power off automatically.
2. Shutdown illegally, when restart, device would scan and repair the disk.

 
Setting up for the first time...

● Charging your device

For first-time use, you need to charge the device for ten hours. After that you can recharge the device as needed. Connect the DC-in jack to your device and plug the AC adaptor into any AC outlet.

● TIPS

1. This device adopts built-in polymer battery. Only the



CUSTOMER WARRANTY CARD

VIDEOCON

MODEL NO. _____

SERIAL NO. _____

IMEI NO. _____

NAME OF PURCHASER _____

ADDRESS _____
Last Name First Name Middle Name

CITY _____ STATE _____ PIN CODE _____

PHONE NO. (Residence) _____ (Office) _____

DATE OF PURCHASE _____

CUSTOMER'S SIGNATURE _____

DEALER'S SIGNATURE & STAMP _____

*Refer terms and conditions.



E-Waste Management



What is E-Waste?

E-Waste means waste Electrical & Electronic Equipment (WEEE).

How Harmful is E-Waste?

E-Wastes are considered dangerous as certain components of some electronic products contain material that are hazardous, depending on their condition and density. If improperly disposed, they can leach lead and other harmful substance into soil & ground water. Govt. of India vide notification dated May 12, 2011 has announced E-Waste (Management & Handling) Rules, 2011 ("Rules"). According to these rules, the consumer now has the legal responsibility to dispose of the waste electrical and electronic equipment (popularly known as "WEEE") in the prescribed manner and not by just throwing it into a dustbin or giving/selling it to scrap dealer.

V RECYCLE is an initiative by Videocon where we recycle your old and no longer useful tablets. There are three easy steps to begin playing your part:

Step 1: Grab your old and useless tablet (or its accessories).

Step 2: Locate a Videocon collection point near you, available at <http://www.videoconmobiles.com>

Step 3: Drop your tablet into the designated collection boxes.

Participate in this initiative to help make the world safer & healthier place for all the mankind.

specified charger should be used.
 2. It is normal for the device's surface to become warm during charging or long periods of use.
 3. All devices are factory tested before release.
 4. If you do not use this set for a long time, please charge/release it once one month to avoid deep discharge.
 5. The damage caused by battery over-consuming is not included in the warranty.

- **Battery Saving**

To save battery running life, please see below key points. With below suggestions, battery can run longer time after fully charged each time.

1. When device is not in use, press power button once to go to sleep mode.
2. Shut down the applications when not in use.
3. Turn off WLAN when not in use.
4. Shut off application sync selection
5. Set a shorter time for display backlight
6. Reduce brightness of display

- **Power On**

Keep pressing power button over 2 seconds, device will start up opening screen; Android system is activating and enter the main screen.

- **Sleep Mode**

After device is on, press power button once and it goes to sleep mode. The screen is now on standby and under low battery consumption. To wake up device, press one more time power button.

- **Power off and Forced Shut down**

When you are not using the device, keep pressing power key to power set OFF; if key is pressed continuously will



display "shut down", select "Yes" to power off unit completely. If device is hanging, use a small pin to press Reset hole, it will forced shut down and the device will power on again.

● Operation of Touch Panel

	Click Use finger to touch, so as to select or activate function, or select menu or turn on applications.		Slide Slide up, down, left or right for fast scrolling browsing page and display screen		Double Click Double click to enlarge or shrink the display size of picture or under browsing webpage.
	Tap and Hold Tap over 2 seconds; it will turn on option list		Drag Drag an icon and relocate the position		Enlarge/Shrink Use two fingers at a time on touch panel, to enlarge/shrink display

● Home Screen

● How to Enter in User Guide In Android Tablet?

1. Go to APPS screen
2. Drag the screen & go to second page of APPS screen
3. Click on User Guide option shown in picture at right side (Icon with circle)
4. After you will find two options for User Guide & service Center Directory, Select as your choice & get know more better about Android Tablet.



● Installation Of SIM Card

1. Unlock your V-TAB ACE Pro
2. Insert SIM card in SIM slot of V-TAB ACE Pro
3. Now power off/shut down V-TAB ACE Pro
4. Now click on power button to Power on V-TAB ACE Pro
5. After V-TAB ACE Pro is restarted SIM Card gets detected in it.
6. V-TAB ACE Pro is now ready to make Calls and use data connectivity through SIM card



● SAR

Your device meets the SAR requirements for exposure to radio waves, recommended by Govt. Of India. Your mobile device is a radio transmitter and receiver. It is designed and manufactured so as not to exceed the limits for exposure to radio frequency (RF) energy, as recommended by the Govt of India.

These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The limits include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health.

The exposure standard for mobile devices employs a unit of measurement known as SAR (Specific Absorption Rate). The SAR limit recommended by Govt. of India is 1.6 watt/kg taken over a volume containing a mass of 1 gram of tissue. The highest SAR value for V-TAB ACE Pro is 1.577 W/kg.

Dial *#07# to check the SAR value on your device display.