
# 1. Introduction


## **1.1 Verykool T7442**

Details	Description					
CPU +GPU	ARM Cortex A7 1.3GHz Dual core Processor					
Memory	512MB RAM					
Storage	8GB Built-in storage (Approx. 4GB of built in storage is used by OS an					
	application files)					
	Micro SD Slot with up to 32GB expandable					
Operating	Android™ 4.4 KitKat.					
System						
Connectivity	GSM Dual SIM (Normal + Micro) Quad-band 850/900/1800/1900 MHz; WCDMA 850/2100; HSPA+ 21 Mbps downlink and 5.76					
	Mbps uplink, Wi-Fi 802.11 b\g\n, Bluetooth(4.0), GPS/A-GPS,					
	USB OTG.					
G-Sensor	Rotate screen					
Camera	13.0 MP Rear camera with Flash					
	5.MP Front camera for video calling					
Display	17.78 cm (7Inch)display with HD Screen Resolution 1024*600					
	Full Capacitive Multi Touch					

Video	Support 3GP,AVI,MP4,M4V,MKV, WMV,MOV, FLV (With 3 <sup>rd</sup>				
Formats	party application)				
Image	Support JPG,PNG,BMP,GIF				
Viewer					
Audio	Support AAC,AMR, FLAC, MP2, MP3, OGG				
Formats					
FM Radio	Yes				
Audio Port	Speaker /3.5mm Earphone Jack / Internal Mic. and Earpiece				
Hardware	Power and Volume controller				
Keys					
Soft Keys	Return , Home, & Menu				
Battery/	2500mAh Polymer battery				
Power					
Power	5V—1A				
Dimension	191.89mm x 108.02mm x 9.65mm				
Weight	274gm				

#### 1.2 Know Your Device

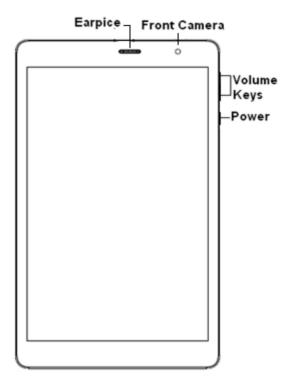

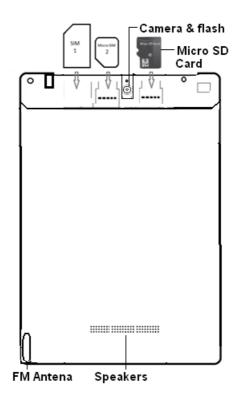

# 2. Getting Started

#### Installing the SIM card and Memory card

You need to remove a portion of the back cover before you can install the SIM card and Micro SD card. Also, make sure to always turn off the power before installing or replacing the SIM card and Micro SD card.

**To install the SIM card:** The SIM card contains your phone number, service details, and phonebook/ message memory. Your device supports both 2G& 3G SIM cards.

**To install the memory card:** To have additional storage for your images, videos, music, and files, you can purchase a memory card and install it into your device.

# 3. Read your notifications

7	SIM network	N	Silent mode	C	Call in progress
E	EDGE network	D.	Vibration mode	<b>C</b> !!	Call on hold
3G	3G connection	O	Headset mode	~	Missed call
.ill	Roaming network	ψ	USB connected	C	Speaker On
<u>*41</u>	No SIM	0	Alarm set	۳	New message
H	HSPA network		Battery indication	$\overline{\mathbf{v}}$	New email
8	Bluetooth On	7	Battery charging	M	New Gmail message
<u>†</u>	Uploading data	0	Music playback	Q	Google search
<u>+</u>	Downloading data	Ì	FM Radio playback	0	New WhatsApp message
×	Airplane mode	O	Data sync	9	New Hangouts message
*	Wi-Fi	A	Warning	B	Play store update available
٥	GPS	1	Event Reminder		Screenshot captured

# 4. Using phone features

- a. Turning the phone function on or off: To enable or disable Airplane Mode:
- I. Touch→Settings→More...→Airplane mode
- II. Touch 'airplane Mode' to enable or disable
- b. Making a call: On Home screen, touch → Phone to enter the dial screen
- I. Call log tab: select an entry listed in the log to call the number.
- II. Contacts tab: Contacts with phone numbers are listed. Select a contact and then select the phone number to dial.
- **c. Internet**: You device's networking capabilities allow you to access internet using browser, Through Wi-Fi, GPRS and EDGE.
- d. E-mail: Using the Email, you can send or receive emails from other email accounts.
- **e. Messaging:** Select whether you want to create SMS after entering create new function. Enter text message, press option key to get the following options. There are different options available for SMS like Sending options, Input method and more.

- f. Gallery: Using gallery you can see picture and video.
- **g. Music:** Use the Music player to play music files. The songs saved in your Memory Card can be played using the Music Player of the device.
- h. Camera: Use the rear and front camera to capture the picture and record the video.
- i. Calendar: Use Calendar to create and manage events, meetings, and Appointments.
- j. Video Player: Using this you can play your videos from gallery.
- **k. FM radio:** This device presents radio function. Using this you can play as well as record your favorite song from FM.
- **I. File manager:** The phone provides a certain space for users to manage files and supports the memory card. You can use file manager to conveniently manage various directories and files on the memory card. Choose file manager and press options to perform operations like 'Open', 'New folder', 'Rename', 'Delete', 'Copy', 'Move' and more.

# 5. Settings

#### Wireless & Networks

**SIM Management:** You can select to activate or deactivate the SIM card you want to open .Set the default SIM to use voice call, video call, and messaging and data connection on/off switch.

**Wi-Fi:** Wi-Fi on/off: Select Wi-Fi checkbox from settings if you prefer to use Wi-Fi for your data connection.

**Wi-Fi settings:** Open the Wi-Fi settings screen; select it from the network list. Provide your username or password if required.

**Bluetooth:** Bluetooth on/off: Use Bluetooth check box from settings to turn Bluetooth services on or off.

**Bluetooth settings:** With Bluetooth services on, you can open the Bluetooth settings screen to: Rename phone, advance settings.

**Data Usage:** It provides a graphical representation of data usage for a specified Data usage cycle through Mobile internet or Wi-Fi

More settings

Airplane Mode: Using this you can on/off Airplane mode.

**Default SMS app:** The system settings allow users to select a "default SMS app." Once selected, only the default SMS app is able to write to the SMS Provider and only the default SMS app receives the SMS. The default SMS app is responsible for writing details to the SMS Provider when it receives or sends a new message.

**Tethering & portable hotspot:** The device is used as a wireless modem for a PC, when it's connected to PC using a USB cable.

**VPN:** VPN stands for virtual private mode. Using this feature .You can connect to your private network through a public network.

Mobile Network: Select data roaming capability.

**USB internet:** using this function sharing windows PC internet via USB cable.

**Device** 

**Audio Profiles:** There are four types of user profiles available, they are general, silent meeting and outdoor. Select one user profile and enter the following options:

Vibrate: select to have your phone vibrate for incoming calls.

10

Volume: select to open volume control.

Voice call ring tone: select a ring tone to use for incoming call.

**Default Notification sound:** Select a ring tone to use for a notification.

**Display:** Using various options in 'display' in settings, you can able to set your wallpaper, lock screen notifications, auto rotate screen and many more.

Storage: View and manage the data storage on your phone.

**Battery:** It gives you the current battery level, along with the distribution of battery consumption by different apps.

Apps: Using this you can manage your applications in Phone.

Personal

Gesture control: Gestures allows you to hide soft keys, and control your

device with simple gestures. Just swipe your finger across the screen, and

the predefined action will be performed.

Location: Helps you locate yourself on the map.

Security: Change the settings of screen lock, Owner info, SIM card lock,

passwords, device administration and Credential storage.

Language & input: Include language settings, keyboard and input methods

and so on.

Backup & reset: If you reset your phone to the settings that were configured at the factory, all of your personal data from internal phone

storage, including information about your Google Account, any other

accounts, your system and application settings, and any downloaded

applications will be erased.

Accounts

Add Accounts: You can add new accounts like Gmail, WhatsApp etc. here.

System

**Date & time:** You can set your device's date and time settings from here.

12

**Scheduled power On & Off:** You can set the scheduled time at which you automatically want your device to power on/off.

**Accessibility:** These are the settings to help visually impaired users.

**Printing:** To print your photos, documents, and more from your phone, check to see if your printer's manufacture has an app on Google Play Store. Then touch Apps →Settings →Printing to get started.

**Developer options:** This provides you the option to customize the device settings.

**Power Saving Mode:** with various options you can consume your battery power less, which can increase your battery backup.

**About verykool T7442:** This provides the device information like model number, kernel version, build number, android version etc.

# 6. Applications

Gmail: Configure your Gmail account in phone and access your mails.

**Google Search:** Google Search for Android is an application by Google which integrates Google search and Google Now into an application for Android phones.

**Hangouts:** Hangouts is an instant messaging service that provides both text and voice communication. The updated version of Talk is known as Hangouts.

**Maps:** Use this application to pinpoint the location of the device, search for places, or get directions.

**Play movies & TV:** Enjoy Movies and TV show on Play Movies & TV. Some are for rental, some for purchase and others for both rental and purchase.

**Play Music**: This is Google initiative in music world. Using this you can create libraries and enjoy songs.

**Play Store:** Use this application to purchase and download applications and games that are able to run your T7442

**YouTube:** Browse the videos using this application. It is the direct link to the website www.youtube.com .

# 7. Product and safety information

#### Warning

Use only chargers, and accessories approved for use with this particular model. The use of any other types may invalidate any approval or warranty, and may be dangerous .For availability of approved accessories, please check with your dealer.

#### **Battery and charger information**

Your device is powered by a rechargeable Lithium-polymer battery. verykool may make additional battery models available for this device. The battery can be charged and discharged many times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery. Use only verykool approved batteries, and recharge your battery only with verykool approved chargers designated for this device. If a battery is being used for the first time or if the battery has not been used for a prolonged period, it may be necessary to connect the charger, then disconnect and reconnect it to begin charging the battery. If the battery is

completely discharged, it may take several minutes before the charging indicator appears on the display or before any calls can be made.

#### Safety information

Please do not use your phone during charging. Disconnect device from charger before use.

Keep the phone at least an inch away from your body while dialing / answering calls.

Do not use the phone if the screen is cracked or broken. Cracked or broken screen could cause injury to hands and / or face.

Avoid exposing your phone and batteries to extreme temperature.

Your device contains electronics parts and circuits. Keep them out of the reach of small children.

Switch off your device in any area with a potentially explosive atmosphere. Obey all posted instructions.

## **Protect environment**

#### Save energy

You do not need to charge your T7442 phone battery so often if you do the following:

- -Close applications and data connections, for example, your Bluetooth connection, when not in use.
- -Deactivate unnecessary sounds, such as touch screen and key tones.

# **FCC Caution**

Labeling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

#### 21 Specific Absorption Rate (SAR)

#### information:

This Automotive Diagnosis Computer meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: T7442 (FCC ID: WA6T7442) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.25W/kg, when properly worn on the body is 1.37W/kg, when used as a wireless router is 1.37W/kg, and during simultaneous transmission is 1.56W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.0cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not

satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

#### **Body-worn Operation**

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 1.0 cm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.