# ZTE Imperial MAX



# User Manual

U.S. Cellular<sup>®</sup> Customer Service 1-888-944-9400

# About This Manual

Thank you for choosing this ZTE mobile device. In order to keep your device in its best condition, please read this manual and keep it for future reference.

#### Copyright

#### Copyright © 2016 ZTE CORPORATION

#### All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

#### Notice

This guide is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice. Every effort has been made in the preparation of this guide to ensure accuracy of the contents, but all statements, information, and recommendations in this guide do not constitute a warranty of any kind, expressed or implied. We offer self-service for our smart terminal device users. Please visit the ZTE official website (at <u>www.zteusa.com</u>) for more information on self-service and supported product models. Information on the website takes precedence.

#### Disclaimer

4G LTE is not available in all areas. See uscellular.com/4G for



complete coverage details. 4G LTE service provided through King Street Wireless, a partner of U.S. Cellular. LTE is a trademark of ETSI.

ZTE Corporation expressly disclaims any liability for faults and damages caused by unauthorized modifications of the software.

Images and screenshots used in this manual may differ from the actual product. Content in this manual may differ from the actual product or software.

#### Trademarks

ZTE and the ZTE logos are trademarks of the ZTE Corporation. Google and Android are trademarks of Google, Inc.

The Bluetooth® trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such trademarks by ZTE Corporation is under license.

microSDXC Logo is a trademark of SD-3C, LLC.

Qualcomm<sup>®</sup> Snapdragon<sup>™</sup> processors are

Qualcomm and Snapdragon are trademarks of Qualcomm Incorporated, registered in the United States and other countries. Used with permission.

Other trademarks and trade names are the property of their respective owners.



Version No.: R1.0 Edition Time : January 15, 2016

Contents	
Getting Started	15
Getting to Know Your Phone	15
Knowing the Keys	
Installing the nano-SIM card /microSDXC Card	18
Charging the Battery	
Extending the Battery Life	22
Powering On/Off	22
Setting Up for the First Time	22
Locking/Unlocking the Screen and Keys	23
Using the Touch Screen	24
Getting to Know the Home Screen	28
Personalizing	31
Changing the System Language	31
Setting the Date and Time	
Changing Ringtone and Notification Sound	32
Turning On/Off System Sounds	32
Adjusting Volume	32
Switching to Silent Mode	33
Applying New Wallpapers	34
Changing Screen Brightness	34
Setting the Theme	35
Setting the Home Screen Transition Effect	35
Protecting Your Phone With Screen Locks	35
Protecting Your Phone With Encryption	36
5	

Protecting Your Phone With Screen Pinning	
Turn On Screen Pinning	
Pin a Screen	
Unpin the Screen	
Knowing the Basics	40
Monitoring the Phone Status	40
Managing Notifications	41
Notification Icons	41
Open/Close the Notification Panel	41
Respond to or Remove a Notification	42
Use Quick Settings	43
Managing Shortcuts and Widgets	44
Add Shortcuts and Widgets	
Move Shortcuts or Widgets	45
Remove Shortcuts or Widgets	45
Adjust Widget Size	45
Organizing Icons With a Folder	45
Rearranging the Primary Shortcuts	46
Entering Text	46
Enable or Disable Input Methods	
Change Input Methods	47
Google Keyboard	48
Google Voice Typing	50
Editing Text	51
Opening and Switching Apps	52
Open an App	

Switch Between Recently Opened Apps	52
Uninstalling or Disabling an App	
Sharing your phone	
Adding a New User	53
Removing a User	54
Switching Between Different Users	54
Connecting to Networks and Devices	55
Connecting to Mobile Networks	55
Control Mobile Data Use	55
Set Access Point Names	55
Connecting to Wi-Fi <sup>®</sup>	56
Turn Wi-Fi On and Connect to a Wi-Fi Network	56
Get Notified of Open Networks	56
Add a Wi-Fi Network	57
Connect to a WPS Network	57
Forget a Wi-Fi Network	58
Adjust Advanced Wi-Fi Settings	59
Using Wi-Fi Direct <sup>®</sup>	60
Connect to Another Device via Wi-Fi Direct	60
Send Data via Wi-Fi Direct	60
Receive Data via Wi-Fi Direct	61
Connecting to Bluetooth <sup>®</sup> Devices	61
Turn Bluetooth On/Off	61
Change the Device Name	62
Pair With Another Bluetooth Device	
Forget (Unpair With) a Bluetooth Device	63

Send Data via Bluetooth	63
Receive Data via Bluetooth	63
Connecting to Your Computer via USB	64
Connect Your Phone to a Computer via USB	
Connect With Windows Media <sup>®</sup> Player	65
Disconnect Your Phone From the Computer	65
Remove the microSDXC Card From Your Phone	65
Erase the microSDXC Card	66
Connecting to Virtual Private Networks	66
Add a VPN	67
Connect to a VPN	67
Modify a VPN	67
Phone Calls	68
Placing and Ending Calls	68
Placing and Ending Calls Place a Call by Dialing	
Place a Call by Dialing End a Call	68 69
Place a Call by Dialing	68 69
Place a Call by Dialing End a Call	68 69 69
Place a Call by Dialing End a Call Answering or Rejecting Calls	68 69 69 69
Place a Call by Dialing End a Call Answering or Rejecting Calls Answer a Call	68 69 69 69 70
Place a Call by Dialing End a Call Answering or Rejecting Calls Answer a Call Reject a Call	68 69 69 69 70 70
Place a Call by Dialing End a Call Answering or Rejecting Calls Answer a Call Reject a Call Working With the Call History	68 69 69 70 70 70
Place a Call by Dialing End a Call Answering or Rejecting Calls Answer a Call Reject a Call Working With the Call History Place a Call From the Call History	68 69 69 70 70 70 71
Place a Call by Dialing End a Call Answering or Rejecting Calls Answer a Call Reject a Call Working With the Call History Place a Call From the Call History Add a Number From Call History as a Contact	68 69 69 70 70 70 71 71
Place a Call by Dialing End a Call Answering or Rejecting Calls Answer a Call Reject a Call Working With the Call History Place a Call From the Call History Add a Number From Call History as a Contact Take Other Actions on a Call History Entry	68 69 69 70 70 70 71 71 72 72

Managing Multi-party Calls	74
Switch Between Current Calls	74
Set Up a Conference Call	75
Adjusting Your Call Settings	75
Set Contact Display Options	75
Set Sound and Vibration	76
Edit Quick Response to Rejected Callers	77
Set Voicemail	77
Set TTY Mode	78
Set Hearing Aids	79
Set Speed Dials	79
Set DTMF Tones	80
Call Ended Operation Tips	80
Answer Calls Automatically	80
Forward Incoming Calls	81
Voice Privacy	81
Plus Code Dialing Setting	81
Contacts	83
Checking Contact Details	83
Adding a New Contact	83
Setting Up Your Own Profile	84
Importing, Exporting, and Sharing Contacts	
Import Contacts From the microSDXC Card or Phore	ıe
Storage	85
Export Contacts to the microSDXC Card or Phone	
Storage	85

9		
	ς	J

Share Contacts	
Working With Favorite Contacts	
Add a Contact to Favorites	
Remove a Contact From Favorites	
Working With Groups	
View Your Contact Groups	
Set Up a New Group	
Delete a Group	
Edit a Group	
Searching for a Contact	
Editing Contacts	
Edit Contact Details	
Set a Ringtone for a Contact	
Delete Contacts	89
Join Contacts	90
Separate Contact Information	90
Web Accounts	91
Adding or Removing Accounts	91
Add an Account	91
Remove an Account	91
Configuring Account Sync	92
Configure Auto Sync Setting	92
Sync Manually	93
Change an Account's Sync Settings	93
Email	94

1	Δ	
I	υ	


Setting Up the First Email Account	94
Checking Your Emails	94
Responding to an Email	95
Reply to or Forward an Email	95
Mark an Email as Unread	95
Delete an Email	96
Writing and Sending an Email	96
Adding and Editing Email Accounts	97
Add an Email Account	97
Edit an Email Account	97
Changing General Email Settings	98
Messaging	99
Opening the Messaging Screen	
Sending a Message	
Replying to a Message	100
Deleting Messages	101
Changing Message Settings	101
Calendar	
Viewing Your Calendars and Events	
Select Visible Calendars	
Change Calendar Views	
View Event Details	
Creating an Event	103
Editing or Deleting an Event	104
Changing Calendar Settings	104

Camera	105
Capturing a Photo	105
Recording a Video	108
Using Other Camera Modes	
Using Manual Camera Mode	110
Customizing Camera/Camcorder Settings	
Gallery	113
Opening Gallery	113
Working With Albums	113
Working With Pictures	114
Retouching Your Pictures	116
Making a GIF Picture or a Collage	117
Playing Videos	118
Music	119
Copying Music Files to Your Phone	119
Copy From a Computer	
Download From the Internet	119
Receive via Bluetooth	119
Viewing Your Music Library	120
Setting a Song as the Default Ringtone	120
Playing Music	121
Managing Playlists	123
FM Radio	124
Scanning and Saving Channels	124
Listening to FM Radio	125

More Apps	126
Calculator	126
Clock	126
Set a New Alarm	126
Check World Time	127
Use the Stopwatch and Countdown	127
Downloads	127
File Manager	128
Mi-Moment	128
Sound Recorder	129
Record a Voice Memo	129
Play a Voice Memo	129
Task Manager	130
Voice Dialer	130
Google Apps	131
Settings	133
General Settings	133
Airplane Mode	133
Wi-Fi	133
Bluetooth	133
Mobile Networks	134
Mobile hotspot	134
Sound & Notifications	134
Display	134
Date and Time	136
Language and Input	136

Wireless and Networks 137
Data Usage137
VPN137
Default SMS App 138
USB tethering 138
Bluetooth tethering138
Device
Storage
Power Manager 139
Apps140
Users
Connect to PC 140
Call Settings 141
Personal141
Navigation Key141
Location141
Security142
Backup and Reset 143
Accounts144
System 144
Accessibility144
Printing144
About Phone144
Troubleshooting145



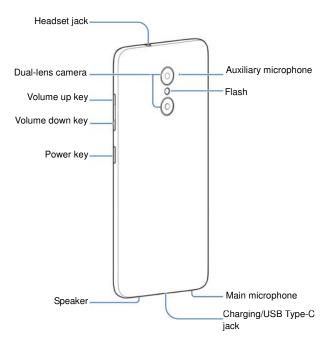



# Knowing the Keys

Кеу	Function
Power key	<ul> <li>Press and hold to turn on or off airplane mode, power off or restart the phone.</li> <li>Press to turn off or on the screen display.</li> </ul>
Home key	<ul><li>Touch to return to the home screen.</li><li>Touch and hold to open Google Search.</li></ul>
Back key	Touch to go to the previous screen.
Recent apps key	Touch to see recently used applications.
Volume up key	Press or hold the key to turn up the volume for media, alarm, ringtone, or notification.
Volume down key	Press or hold the key to turn down the volume for media, alarm, ringtone, or notification.

NOTE:

The positions of the **Recent apps** key and the **Back** key are interchangeable through **Settings > Navigation key**.

## **WARNING!**

Do not open the back cover. It may cause unexpected damage to your phone.

# Installing the nano-SIM card /microSDXC Card

### Notice on the 4G LTE SIM card:

This phone requires a 4G LTE nano-SIM card to connect to the 4G LTE network. Prior to turning on the phone please insert the 4G LTE nano-SIM card as instructed below. This 4G LTE nano-SIM card will only work with this phone. Once the card has been inserted, do not remove it!


If your 4G LTE nano-SIM card is ever separated from the phone or damaged, your phone will not fully function. If you experience any issues with your phone, contact customer service at 1-888-944-9400 or visit your nearest U.S. Cellular<sup>®</sup> retail location.

The nano-SIM card, and the microSDXC card can be installed or removed while the phone is turned on. You need to unmount the microSDXC card before removing it.

#### **O** WARNING!


To avoid damage to the phone, do not use any non-standard nano-SIM card cut from a card. You can get a standard nano-SIM card from your service provider.

1. Insert the tip of the tray eject tool into the hole on the card

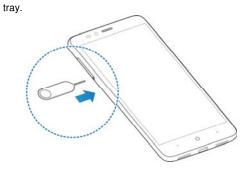

 Pull out the card tray and place the nano-SIM card (right) /microSDXC card (left) facing down on the tray. Gently slide the card tray in until it clicks into place.



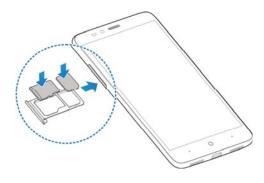

# **Charging the Battery**

Your phone's battery should have enough power for the phone to turn on, find a signal, and make a few calls. You should fully charge the battery as soon as possible.

• WARNING! Use only ZTE-approved chargers and cables. The use of unapproved accessories could damage your phone or cause the battery to explode.

1. Connect the adapter to the charging/USB Type-C jack.





- Connect the charger to a standard AC power outlet. If the phone is on, you'll see a charging icon, such as or 
   appear in the status bar.
- 3. Disconnect the charger when the battery is fully charged.

# NOTE:

If the battery is extremely low, you may be unable to power on the phone even when it is being charged. In this case, try again after charging the phone for at least 20 minutes. Contact the



customer service if you still cannot power on the phone after prolonged charging.

# **Extending the Battery Life**

Active applications, screen brightness levels, Bluetooth and Wi-Fi usage and GPS functionality can drain your battery. You can follow the helpful tips below to conserve your battery power:

- 1. Reduce the screen backlight time.
- 2. Lower the screen brightness.
- 3. Turn Wi-Fi, Bluetooth and auto-sync off when not in use.
- Disable the GPS function when not in use. Most applications using this function will periodically query the GPS satellites for your current location, and each query drains your battery.

## **Powering On/Off**

- Press and hold the **Power** key to turn on your phone.
- To turn it off, press and hold the **Power** key to open the options menu. Then touch **Power off > OK**.

# Setting Up for the First Time

When you first power on your phone after you purchase it or reset it to factory settings, you need to do some settings before

using it.

- 1. Touch the language field to select the language.
- 2. Touch 💛.
- 3. Follow the prompts to **Select Wi-Fi**, type your **Name**, set screen lock to protect your phone, etc.

# Locking/Unlocking the Screen and Keys

Your phone allows you to quickly lock the screen and keys (put the phone to sleep mode) when not in use and to turn the screen back on and unlock it when you need it.

#### To lock the screen and keys:

To quickly turn the screen off and lock the keys, press the **Power** key.

## NOTE:

To save battery power, the phone automatically turns off the screen after a certain period of time when you leave it idle. You will still be able to receive messages and calls while the phone screen is off.

#### To unlock the screen and keys:

1. Press the **Power** key to turn the screen on.

2. Touch and hold any blank area of the screen.

- or -

On the blank area of the screen, touch and hold of at the bottom right of the screen to open the Camera app.

- or -

Touch a notification twice consecutively to open the related app.

NOTE:

If you have set an unlock pattern, a PIN or a password for your phone (see <u>Protecting Your Phone With Screen Locks</u>), swipe up on the screen and draw the pattern or enter the PIN or password to unlock your phone.

# **Using the Touch Screen**

Your phone's touch screen enables you to control actions through a variety of touch gestures.

Touch

When you want to type using the onscreen keyboard, select items on the screen such as the application and settings icons, or press the onscreen buttons, simply touch them with your finger.





Touch and Hold

To open the available options for an item (for example, a message or link in a web page), touch and hold the item.



• Swipe or Slide

To swipe or slide means to quickly drag your finger vertically or horizontally across the screen.



• Drag

To drag, press and hold your finger with some pressure before you start to move your finger. While dragging, do not release your finger until you have reached the target position.



Pinch

٠

In some apps (such as Maps, Chrome, and Gallery), you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).



Rotate the screen

For most screens, you can automatically change the screen orientation from portrait to landscape by turning the phone sideways.

## NOTE:

The auto-rotate feature needs to be enabled for the screen orientation to automatically change. Touch the **Home** key > **(a)** > **Settings > Display** and check **Auto-rotate screen**.



You can also access the screen rotation control by sliding down the status bar and touch **Auto Rotate**.

# Getting to Know the Home Screen

The home screen is the starting point for your phone's applications, functions, and menus. You can customize your home screen by adding shortcuts, folders, widgets, and more.

# NOTE:

Your home screen extends beyond the initial screen, providing more space for shortcuts, widgets, and folders. Simply swipe left or right to see the extended home screens.





#### **Extended Home Screen Panels**

Your home screen is extendable, providing more space for shortcuts, widgets, and more. Simply swipe left or right on the home screen to see the extended panels. You can add or remove home screen panels, or adjust their order.

#### To add a new home screen panel:

- Touch the Home key > (1), or touch and hold an empty area of the home screen and select Widgets.
- Touch and hold an application icon or a widget and drag it to the right edge of the screen to create a new home screen panel and put the icon or widget on it.

#### To delete a home screen panel:

- 1. Touch and hold an empty area of the home screen and slide left or right to view the home screen thumbnails.
- 2. Touch Y on the top right corner of a thumbnail.
- 3. Touch OK. The items on the panel will also be removed.NOTE:

When there are only three home screen panels, you cannot delete any of them.

To adjust the order of a home screen panel:

- 1. Touch and hold an empty area of the home screen and slide left or right to view the home screen thumbnails.
- 2. Touch and hold a thumbnail and drag it left or right to the place you need.



Touch  $\triangleq$  at the bottom of a home screen thumbnail to set it as the main home screen.



# Personalizing

# **Changing the System Language**

- Touch the Home key > (1) > Settings > Language & input > Language.
- 2. Select the language you need.

# Setting the Date and Time

- 1. Touch the Home key > (IIII) > Settings > Date & time.
- Set the date, time, time zone, and date/time format.
  To adjust the date and time automatically, check
  - Automatic date & time.
  - To adjust the date and time manually, uncheck
     Automatic date & time and touch Set date / Set time to change the date and time.
  - To adjust the time zone automatically, check Automatic time zone.
  - To adjust the time zone manually, uncheck Automatic time zone and touch Select time zone to set the correct time zone.
  - To adjust the format of time and date, touch Use 24-hour format or Choose date format.

# Changing Ringtone and Notification Sound

You can customize the default ringtone for incoming calls and the default notification sound.

- Touch the Home key > (a) > Settings > Sound & notifications.
- 2. Touch Phone ringtone or Default notification ringtone.
- 3. Select the ringtone you want to use and touch OK.

NOTE:

See <u>Set a Ringtone for a Contact</u> for how to assign a special ringtone to an individual contact.

# **Turning On/Off System Sounds**

- Touch the Home key > (I) > Settings > Sound & notifications > Other sounds.
- 2. Touch Dial pad tones, Screen lock sounds, Touch sounds, or Vibrate on touch, or set the Emergency tone.

## **Adjusting Volume**

- Touch the Home key > (1) > Settings > Sound & notifications.
- 2. Drag the sliders below Media volume, Alarm volume, Ring volume, and Notification volume to adjust the volume for

<sup>32</sup> 

each type of audio.

#### NOTE:

You can adjust the volume levels any time by pressing the **Volume up** key or **Volume down** key. Then touch  $\checkmark$  and drag a volume slider.

# **Switching to Silent Mode**

You can set the phone to silent mode by using one of the following methods.

- Press the Volume up key or the Volume down key, and touch V. Drag the ringtone slider to the minimum to switch the phone to silent mode with vibration.
- Press and hold the Volume down key when no media or phone call is active. When the phone vibrates, it is switched to silent mode with vibration; press the Volume down key again to switch to silent mode.
- Swipe down from the top of the screen to open the notification panel and drag the panel downwards. Use the **Sound** button to switch the phone to silent mode. See <u>Use Quick Settings</u>.
- Touch the Home key > Image: Sound & notifications > Notification mode and select Vibrate or Mute to switch to silent mode with or without vibration.
- Touch the Home key > Image: Settings > Sound & notifications > Interruptions > When calls and notifications arrive, and touch Don't interrupt to switch the phone to silent mode.

#### NOTE:

In addition to silent mode and vibration, you can also allow priority apps to send out notifications when you switch the phone to priority interruption mode.

# **Applying New Wallpapers**

You can set the wallpaper for the home screen and lock screen.

- 1. Touch and hold an empty place on the home screen and then touch **Wallpapers**.
- Slide left or right on the wallpaper panel to select a wallpaper, or touch GALLERY or LIVE WALL PAPER to choose the image or animation you want to use as the wallpaper. Some cropping may be needed for Gallery and Photos images.

#### NOTE:

In addition, you can touch the **Home** key > (1) > Settings > Display > Wallpaper to pick an image from Gallery, Photos or Wallpapers, or an animation from Live Wallpapers.

# **Changing Screen Brightness**

- 2. Drag the slider to manually adjust the screen brightness.

#### NOTE:

Your phone can automatically adjust the screen brightness for available light. Touch **Adaptive brightness** in the **Display** 



settings screen to turn the feature on or off.
NOTE:
You can also use the Quick Settings to manage the screen brightness. See <u>Use Quick Settings</u>.

# **Setting the Theme**

- 1. Touch and hold an empty place on the home screen.
- 2. In the window that appears at the bottom, touch Themes.
- 3. Select a theme you like.

# Setting the Home Screen Transition Effect

- 1. Touch and hold an empty place on the home screen.
- 2. In the window that appears at the bottom, touch Effects.
- 3. Pick an effect and the phone will demonstrate how it works. Touch other effects until you find the favourite one.

# **Protecting Your Phone With Screen**

## Locks

You can protect your phone by creating a screen lock. When it is enabled, you need to touch and hold on the screen, draw a pattern or enter a numeric PIN or password to unlock the phone's screen and keys.

- 1. Touch the Home key > 🐵 > Settings > Security > Screen lock.
- 2. Touch None, Long press, Pattern, PIN or Password.
  - Touch **None** to disable the screen lock.
  - Touch Long press to enable screen lock and allow unlock with a 'touch and hold' gesture. You can unlock the screen by touching and holding on the blank area of the screen.
  - Touch Pattern to create a pattern you must draw to unlock the screen.
  - Touch PIN or Password to set a numeric PIN or a password that you must enter to unlock your screen.

# **Protecting Your Phone With Encryption**

You can encrypt all the data on your phone: Google accounts, application data, music and other media, downloaded information, and so on. If you do, you must enter a numeric PIN or a password each time you power on your phone.

#### **WARNING!**

Encryption is irreversible. The only way to revert to an unencrypted phone is to perform a factory data reset, which erases all your data.

Encryption provides additional protection in case your phone is stolen, and may be required or recommended in some organizations. Consult your system administrator before turning it on. In many cases the PIN or password you set for encryption is



controlled by the system administrator.

Before turning on encryption, prepare as follows:

- Set a lock screen PIN or password.
- Charge the battery.
- Keep the phone connected to the charger.
- Schedule an hour or more for the encryption process: you
  must not interrupt it or you will lose some or all of your data.

When you're ready to turn on encryption:

- 1. Touch the Home key > 🐵 > Settings > Security > Encrypt phone.
- 2. Read the information about encryption carefully.

The **ENCRYPT PHONE** button is dimmed if your battery is not charged or your phone's not plugged in.

If you change your mind about encrypting your phone, touch the  ${\pmb{\mathsf{Back}}}$  key.

## **O** WARNING!

- If you interrupt the encryption process, you will lose data.
- 3. Touch ENCRYPT PHONE.
- 4. Enter your lock screen PIN or password and touch NEXT.
- 5. Touch ENCRYPT PHONE again.

The encryption process starts. Encryption can take an hour or more, during which time your phone may restart several times. When encryption is completed, you're prompted to enter your PIN or password.

Subsequently, you must enter your PIN or password each time you power on your phone in order to decrypt it.

# Protecting Your Phone With Screen Pinning

You can use the screen pinning feature to keep an app in view, so others cannot switch to other apps or access your personal information.

#### **Turn On Screen Pinning**

- Touch the Home key > 
   Settings > Security > Screen pinning.
- 2. Touch the **On/Off** switch.
- 3. Touch the Ask for unlock pattern/PIN/password before unpinning switch.

#### Pin a Screen

- 1. Ensure that screen pinning is turned on.
- 2. Open the app you want to keep in view.
- 3. Touch the **Recent apps** key.
- 4. If there are many app tabs, swipe up to find on the front-most tab.
- 5. Touch 🕛.

# Unpin the Screen

To unpin the screen and return to normal use, touch and hold the **Recent apps** key.

If you have checked **Ask for unlock pattern/PIN/password before unpinning** when turning on screen pinning, swipe up on the lock screen and draw the pattern or enter the PIN/password.

# Knowing the Basics

# **Monitoring the Phone Status**

The status bar at the top of the home screen provides phone and service status icons on the right side. Below are some of the icons you may see.

* * 3G	3G connected (allow data access over 3G mobile network)	*0 <u></u> #41	4G LTE connected (allow data access over 4G LTE mobile network)	
$\square$	No signal	Ę	Signal strength	
S.	Silent mode	✦	Airplane mode	
Ē	Vibration mode	∻	Bluetooth on	
*	Priority mode	((t-	Connected to a Wi-Fi <sup>®</sup> network	
	Battery low	(	Wi-Fi in use	
	Battery full	Ï	Speaker on	
<del>7</del> / <del>7</del>	Battery charging	Ļ	Phone microphone off	
$\bigcirc$	Alarm set	•	GPS on	

# **Managing Notifications**

# **Notification Icons**

The status bar at the top of the home screen provides notification icons on the left. Below are some of the icons you may see.

.)(:	New SMS	-	Upcoming event	
<b>.</b>	New MMS	9	New Wi-Fi network detected	
$\mathbf{\mathbf{\mathbf{\mathbf{\mathbf{\mathbf{\mathbf{\mathbf{\mathbf{\mathbf{\mathbf{\mathbf{\mathbf{\mathbf{\mathbf{\mathbf{\mathbf{\mathbf{$	New message(s) from the Email app	+	Downloading data	
M / M	New message(s) from the Gmail app	1	Sending data	
2<	Missed call	Φ	Updates available	
L.	Call in progress	Ţ.	USB connected	
<b>G</b> / <b>G</b>	Song playing		Wired headset connected	

# **Open/Close the Notification Panel**

Notifications report the arrival of new messages, calendar events, and alarms, as well as ongoing events, such as when you are playing music. You can open the notification panel to view the details of notifications.

• To open the notification panel, swipe your finger down on the home screen or from the top of the screen.



 To close the notification panel, swipe your finger up on the screen or touch the **Back** key.

#### **Respond to or Remove a Notification**

In the notification panel, you can respond to a notification or remove the notifications. The notification panel also supports expandable notifications that let you perform additional actions right from the notification itself.

- To respond to a notification, just touch it.
- Slide down with one finger to expand certain notifications. You can also swipe two fingers vertically or pinch-zoom to expand or collapse certain notifications.
- To remove a notification, swipe it left or right.
- To remove all notifications, touch below all the notifications.
- To manage notifications you have received, touch and hold a notification to identify the application that created it. You can then touch 
  and enable **Block** to hide future notifications from this app (only for notifications from some specific apps such as Messaging), touch **Sensitive** to hide any sensitive content from this app's notifications when the phone is locked, or touch **Priority** to show them in priority mode.

#### NOTE:

If you block notifications for an app, you may miss its important alerts and updates. The notifications of some apps cannot be blocked.

#### **Use Quick Settings**

The Quick Settings make it convenient to view or change the most common settings for your phone.

Open the notification panel and drag the panel downwards to find the following Quick Settings on the screen.

- **Sync:** Sync the information of the accounts on your phone between the app client and the app server. The information may include Calendar, Contacts, and Email, etc.
- Sound: Touch to switch between mute and sound.
- Vibrate: Touch to enable or disable the vibration function.
- PowerSaver: Touch and hold to access the Power manager menu.
- Location: Touch to turn on or off the GPS function. Touch and hold to open the Location settings. See *Location*.
- Airplane: Touch to turn on or off airplane mode.
- Flashlight: Touch to turn on or off the flash.
- Hotspot: Protable Wi-Fi Hotspot allows your pone to be used as a mobile hotspot.
- Auto Rotate: Touch to turn on or off the auto-rotate screen feature.
- Wi-Fi: Touch to turn on or off Wi-Fi. Touch and hold to open the Wi-Fi settings menu. See *Connecting to Wi-Fi*.
- Data: Touch to enable or disable data access over the mobile network. Touch and hold to open the Data usage menu. See <u>Data Usage</u>.

- Bluetooth: Touch to turn on or off Bluetooth. Touch and hold to open the Bluetooth menu. See <u>Connecting to Bluetooth</u>
   <u>Devices</u>
- Brightness: Uncheck Auto and drag the brightness slider to adjust the screen brightness.
- NOTE:

In the Quick Settings screen, touch <sup>(1)</sup>/<sub>(2)</sub> at the top to get to the **Settings** menu; touch the battery icon to open the battery usage information; touch <sup>(2)</sup>/<sub>(2)</sub> to share your phone (see <u>Sharing your</u> <u>phone</u>); touch **EDIT** at the bottom to change control switch position.

# **Managing Shortcuts and Widgets**

# Add Shortcuts and Widgets

- Touch the Home key > Image: Touch the Home ke
  - or -

To add widgets, touch and hold an empty area of the home screen and select **Widgets**.

- 2. Slide left or right to browse the available applications or widgets.
- 3. Touch and hold a widget or an application icon and drag it to a home screen panel.

NOTE:

While holding the item, you can drag it to the right edge of the

screen to create a new home screen panel and put the item on it.

#### Move Shortcuts or Widgets

- 1. Touch and hold a shortcut or widget on the home screen.
- 2. Drag it to the place you need.

# **Remove Shortcuts or Widgets**

- 1. Touch and hold a shortcut or widget on the home screen.
- 2. Drag it to **i** (Delete) to remove it.

NOTE:

When there are more than three home screen panels, empty panels are automatically deleted.

## **Adjust Widget Size**

- 1. Touch and hold a widget on the home screen and then release it.
- 2. An outline appears around the widget. Drag the outline to resize the widget.

#### NOTE:

Not all widgets can be resized.

# **Organizing Icons With a Folder**

- 1. Touch and hold a shortcut on the home screen.
- 2. Drag the shortcut to **(Folder)** to create a new folder. Or



drag the shortcut to an existing folder to add the shortcut into the folder.

3. If needed, drag more shortcuts and drop them into the folder.

# NOTES:

- Touch the folder and then touch the name field to rename the folder.
- Drag the folder to **(Extract)** to move the app shortcuts in the folder to the last home screen and delete the folder.

# **Rearranging the Primary Shortcuts**

The home screen includes a customizable primary shortcuts area at the bottom visible from all home screens. You can keep at most four items in the primary shortcuts area. Drag shortcuts or folders in or out of the area to rearrange the area.



# **Entering Text**

You can enter text using the onscreen keyboard. Some apps open it automatically. In others, you open it by touching where you want to type. Touch the **Back** key to hide the onscreen keyboard. You can also enter text by speaking with the Google voice typing feature.



## **Enable or Disable Input Methods**

- 1. Touch the Home key > 🕮 > Settings > Language & input > Current Keyboard.
- 2. Touch CHOOSE KEYBOARDS at the bottom.
- 3. Slide the switches beside the input methods to enable or disable them.

#### NOTE:

Some default input methods may not be disabled.

#### **Change Input Methods**

- 1. When you use the onscreen keyboard to enter text, the icon appears on the status bar.
- 2. Open the notification panel and touch Change keyboard.
- 3. Select the input method you need.

### NOTE:

The icon appears only when more than one input method is installed and enabled for use.

-or-

Choose the input method settings by touching (a) > Settings > Language & input from the home screen.

In the **Keyboard & input methods** section, you can set the current input method and choose the settings for input methods.



#### **Google Keyboard**

The Google Keyboard provides a layout similar to a desktop computer keyboard. When screen auto-rotation is enabled, turn the phone sideways and the keyboard will change from portrait to landscape. The landscape keyboard is not supported in all applications.



- Touch the alphabetic keys to enter letters. Touch and hold some specific keys to enter associated accented letters or numbers. For example, to enter È, touch and hold E<sup>\*</sup> and the available accented letters and number 3 appear. Then slide to choose È.
- As you enter a word, candidates appear above the keyboard. Touch to select the correct one; touch and hold to see more possible options.
- Touch 1 to use uppercase. Double-tap 1 to lock uppercase. This key also changes to indicate the current



case you are using:  $\stackrel{\bullet}{\cong}$  for lowercase,  $\stackrel{\bullet}{\cong}$  for uppercase, and  $\stackrel{\bullet}{\cong}$  when locked in uppercase.

- Touch 🖾 to delete the text before the cursor.
- Touch ?123 to select numbers and symbols. You can then touch = \ < to find more.</li>
- Touch (2) to enter miniature icons, such as expressions, horoscopes, and animals.
- Touch I to use Google voice typing.
- Touch and hold 7 to change the input languages or set up the Google keyboard.

#### Gesture Typing

The Google keyboard supports the gesture typing feature. You use this feature to input a word by sliding through the letters. To enable and use gesture typing:

- 1. Touch and hold *r* on the Google keyboard and then touch **Google Keyboard Settings**.
- 2. Touch **Gesture Typing** and then touch **Enable gesture typing** if this feature is turned off.
- Move your finger from letter to letter on the keyboard to trace a word without lifting the finger until you reach the end of the word.



#### NOTES:

- Touch when you want to. If you want to enter a single letter, go ahead and touch.
- Lift your finger at the end of the word. A space is added automatically when you begin to input the next word.

# **Google Voice Typing**

Google Voice typing uses the Google voice recognition service to convert speech to text.

 Touch I to access the voice typing feature when you are using the Google Keyboard.

Or flick down the status bar when entering text and touch **Change keyboard**, and then select **Google voice typing**.



- 2. When you see the microphone image, speak what you want to type.
- 3. You can continue entering text to keep it or to delete it.

NOTE:

Say "comma," "period," "question mark," "exclamation mark," or "exclamation point" to enter punctuation.

# **Editing Text**

- Move the insertion point: Touch where you want to type. The cursor blinks in the new position, and a tab appears below it. Drag the tab to move the cursor.
- Select text: Touch and hold or double-tap within the text. The nearest word highlights, with a tab at each end of the selection. Drag the tabs to change the selection.
- Cut or copy: Select the text you want to manipulate. Then touch the Cut X or Copy D button to cut or copy the text to the clipboard.
- Replace text with the clipboard text: Select the text you want to replace. Then touch 🗍 or PASTE.

÷	0	ж	Ū	۵
	insynced		1	8
John Carter	_		•	9

# **Opening and Switching Apps**

## **Open an App**

- 1. Touch the Home key > .
- 2. Slide left or right on the screen and touch an app to open it.

# Switch Between Recently Opened Apps

- 1. Touch the **Recent apps** key. The apps you've used recently are displayed in a series of tabs. Slide up and down to see all the tabs.
- 2. Touch a tab to open that app.

### NOTE:

You can swipe a tab sideways to remove it from the screen, or touch **Clear all** to remove all tabs.

# **Uninstalling or Disabling an App**

- 1. Touch the **Home** key > 
  to open the application list screen.
- Touch and hold an application icon and drag the icon to (Uninstall) or () (Disable) at the top of the screen.
- 3. Touch **OK** to uninstall or disable the app.
- NOTES:
- Pre-installed apps cannot be uninstalled.



To find the disabled applications, touch the Home key > 
 Settings > Apps > DISABLED. You can then touch an application and touch ENABLE to restore it.

You can share your phone with other people by creating additional user accounts. Each user with a separate account has his/her own storage space, wallpaper, screen lock and so on. Users can also adjust device settings like Wi-Fi that affect everyone and update apps for all other users.

# Sharing your phone

You can share your phone with other people by creating additional user accounts. Each user with a separate account has his/her own storage space, wallpaper, screen lock and so on. Users can also adjust device settings like Wi-Fi that affect everyone and update apps for all other users.

#### Adding a New User

By default, a Guest account is available for anyone who needs to use your phone temporarily. You can create three more user accounts.

- 1. When the phone's current user is the owner, slide down the status bar and touch  $\bigcirc$ .
- 2. Touch 🙁.
- 3. Touch Add user.
- 4. Touch OK.
- 5. Touch SET UP NOW, do the settings as prompts on the



screen.

# **Removing a User**

- 1. When the phone's current user is the owner, slide down the status bar and touch  $\bigcirc$ .
- 2. Touch 🖰.
- 3. Touch 🌣 next to an account.
- 4. Touch Remove user.
- 5. Touch DELETE.
- NOTE:

When a guest user is finished using your phone, he/she can touch **Remove guest** in the **User** menu to delete all his/her data from your phone.

## **Switching Between Different Users**

When the phone's current user is the owner, touch the **New** user/Guest icon in User menu to switch the phone to the corresponding home screen of the user/guest.

When the phone's current user is a user or guest, touch the **Owner** icon in **User** menu to switch the phone to the owner's home screen.

# Connecting to Networks and Devices

# **Connecting to Mobile Networks**

## **Control Mobile Data Use**

#### To enable or disable data access:

- 1. Touch the Home key > 🐵 > Settings > Mobile networks.
- 2. Touch the **Mobile Data** switch to enable or disable mobile data use.

#### To get data services when roaming:

- 1. Touch the Home key > (1) > Settings > Mobile networks.
- 2. Touch the Data roaming switch if it is turned off.

#### NOTE:

Data roaming may incur significant roaming charges.

# **Set Access Point Names**

To connect to the Internet you can use the default Access Point Names (APN). And if you want to add a new APN, please contact the service provider to get the necessary information.

Touch the Home key > Image > Settings > Mobile networks > Access Point Names.

2. Touch 🕀.

- 3. Touch each item to enter the information you get from your service provider.
- 4. Touch > Save to complete.
- NOTE:

To set the APN to default settings, touch > Reset to default.

# Connecting to Wi-Fi<sup>®</sup>

Wi-Fi is a wireless networking technology that can provide Internet access at distances of up to 100 meters, depending on the Wi-Fi router and your surroundings.

# Turn Wi-Fi On and Connect to a Wi-Fi Network

- 1. Touch the Home key > 🕮 > Settings > Wi-Fi.
- 2. Slide the Wi-Fi switch to the On position to turn on Wi-Fi.
- 3. Touch a network name to connect to it.
- 4. If the network is secured, enter the password and touch **CONNECT**.

#### NOTE:

Your phone automatically connects to previously used Wi-Fi networks when they are in range.

# Get Notified of Open Networks

1. Touch the Home key > 🐵 > Settings > Wi-Fi.

- 2. Slide the Wi-Fi switch to the On position.
- 3. Touch > Advanced.

#### 4. Slide the Network notification switch.

When Wi-Fi is on, you receive notifications in the status bar when your phone detects an open Wi-Fi network. Uncheck the option to turn off notifications.

# Add a Wi-Fi Network

You can add a Wi-Fi network if the network does not broadcast its name (SSID), or to add a Wi-Fi network when you are out of range.

To connect to a secured network, you first need to get the security details from the network's administrator.

- 1. Touch the Home key > (1) > Settings > Wi-Fi.
- 2. Slide the Wi-Fi switch to the On position.
- 3. Touch **\*** > Add network.
- 4. Enter the network SSID (name). If necessary, enter security or other network configuration details.
- 5. Touch SAVE.

# **Connect to a WPS Network**

Wi-Fi Protected Setup (WPS) is a feature that makes it easy to add your phone to the access points which support WPS. You can use one of the following methods to connect your phone to a wireless network using WPS.

#### Method one: WPS button (Recommended)

- 1. Touch the Home key > 🐵 > Settings > Wi-Fi.
- 2. Slide the **Wi-Fi** switch to the **On** position.
- 3. Touch > Advanced > WPS Push Button.
- 4. Press the WPS button on the wireless router and the access point will recognize your phone and add it to the network.

# Method two: PIN number

- 1. Touch the Home key > 🐵 > Settings > Wi-Fi.
- 2. Slide the Wi-Fi switch to the On position.
- 3. Touch > Advanced > WPS Pin Entry.
- 4. The WPS PIN number displays on the screen. Enter the PIN number into the access point's setup page.

After entering the PIN number, your phone automatically finds the access point and configures the connection.

#### NOTE:

For detailed information about the WPS feature of the access point, please refer to its user documents.

#### Forget a Wi-Fi Network

You can make your phone forget about the details of a Wi-Fi network that you added - for example, if you don't want the phone to connect to it automatically or if it is a network that you no longer use.

- 1. Touch the Home key > 🐵 > Settings > Wi-Fi.
- 2. Slide the Wi-Fi switch to the On position.
- 3. Touch the Wi-Fi network name and then touch FORGET.

# **Adjust Advanced Wi-Fi Settings**

- 1. Touch the Home key > 🕮 > Settings > Wi-Fi.
- 2. Touch **i** > **Advanced** to adjust the following settings.
  - Network notification: Get notifications in the status bar when Wi-Fi is on and an open network is available.
  - Scanning always available: Allow Google location services and other apps to scan for networks even when Wi-Fi is turned off.
  - Keep Wi-Fi on during sleep: Set whether to keep Wi-Fi on in sleep mode.
  - Wi-Fi frequency band: To avoid radio interference, set the preferred frequency band on the phone and the hotspot.
  - Install certificates: Install certificates needed for connecting to certain Wi-Fi networks.
  - Wi-Fi Direct: Use the Wi-Fi Direct feature. See <u>Using</u> <u>Wi-Fi Direct®</u>.
  - WPS Push Button: Connect to a WPS network via the push button method.
  - ▶ WPS Pin Entry: Connect to a WPS network via the

phone PIN method.

- MAC address: Check the MAC address.
- ▶ IP address: Check the phone's IP address.

# Using Wi-Fi Direct<sup>®</sup>

Wi-Fi Direct allows Wi-Fi devices to connect to each other without the need for wireless access points (hotspots).

## **Connect to Another Device via Wi-Fi Direct**

- 1. Touch the Home key > 🐵 > Settings > Wi-Fi.
- 2. If Wi-Fi is off, slide the Wi-Fi switch to the On position.
- Touch Sourced > Wi-Fi Direct. Your phone will search for other devices enabled with Wi-Fi direct connections.
- 4. Touch a device name under **Peer devices** and touch **CONNECT**.

The other device will receive a connection prompt and need to accept the request for connection. Both devices may need to enter a common PIN.

5. Once connected the device is displayed as "Connected" in the **Peer devices** list.

# Send Data via Wi-Fi Direct

- 1. Open the appropriate application and select the file or item you want to share.
- 2. Select the option for sharing via Wi-Fi Direct. The method

may vary by application and data type.

3. Touch a device the phone has connected with or wait for it to search for new devices and touch one of them.

#### **Receive Data via Wi-Fi Direct**

When an attempt to transfer data via Wi-Fi Direct is received, you can see a notification in the status bar. Open the notification panel, touch the notification and select **Accept** to start receiving the data.

Received files are stored automatically in a dedicated folder (*WiFiShare*, for instance). You can access them with the **File Manager** app.

# Connecting to Bluetooth<sup>®</sup> Devices

Bluetooth<sup>®</sup> is a short-range wireless communication technology. Phones or other devices with Bluetooth capabilities can exchange information wirelessly within a distance of about 10 meters (32.8 feet). The Bluetooth devices must be paired before the communication is performed.

## Turn Bluetooth On/Off

- 1. Touch the Home key > (a) > Settings > Bluetooth.
- 2. Slide the Bluetooth switch to the On or Off position.

When Bluetooth is on, the \* icon will appear in the status bar.

## **Change the Device Name**

- 1. Touch the **Home** key > (1) > **Settings** > **Bluetooth**.
- Slide the Bluetooth switch to the On position if Bluetooth is off.
- 3. Touch > Rename this device.
- 4. Edit the name and touch RENAME.

### **Pair With Another Bluetooth Device**

- 1. Touch the Home key > (1) > Settings > Bluetooth.
- 2. Slide the **Bluetooth** switch to the **On** position if Bluetooth is off.

Your phone automatically scans for and displays the IDs of all available Bluetooth devices in range. You could touch **\*** > **Refresh** if you want to scan again.

- 3. Touch the device you want to pair with.
- Confirm that the Bluetooth passkeys are the same between the two devices and touch PAIR. Alternately, enter a Bluetooth passkey and touch PAIR. Pairing is successfully completed when the other device
- accepts the connection or the same passkey is entered. **NOTE:**

The Bluetooth passkey may be fixed for certain devices, such as headsets and hands-free car kit. You can try entering 0000 or 1234 (the most common passkeys), or refer to the documents for that device.



## Forget (Unpair With) a Bluetooth Device

You can make your phone forget its pairing connection with another Bluetooth device. To connect to the device again, you need to search it and enter or confirm a passkey again.

- Touch the Home key > (1) > Settings > Bluetooth and ensure that Bluetooth is turned on.
- In the list of paired devices, touch the icon S beside the Bluetooth device you want to forget.
- 3. Touch FORGET.

#### Send Data via Bluetooth

- 1. Open the appropriate application and select the file or item you want to share.
- 2. Select the option for sharing via Bluetooth. The method may vary by application and data type.
- 3. Touch a Bluetooth device the phone has paired with or wait for it to search for new devices and touch one of them.

#### Receive Data via Bluetooth

- 1. Turn Bluetooth on before trying to receive data via Bluetooth.
- 2. Flick down the status bar and touch \*.
- 3. Touch ACCEPT to start receiving the data.

Depending on your storage setting and whether a microSDXC card is installed, received files are stored automatically in a dedicated folder (*Bluetooth*, for instance) in the phone storage or microSDXC card. You can access them with the **File Manager** app.



# **Connecting to Your Computer via USB**

You can connect your phone to a computer with a USB cable and transfer music, pictures, and other files in both directions. Your phone stores these files in the phone storage or on a removable microSDXC card.

# **Connect Your Phone to a Computer via USB**

- 1. Connect your phone to the PC with a USB cable.
- 2. Open the notification panel and touch  $\Psi$ .
- 3. Choose one of the following options:
  - ► Charge only: Charge your phone via USB.
  - Install driver: Install the driver needed for some USB connection modes (such as MTP). You only need to install the driver on the same PC once.

#### NOTE:

You can also install the driver on PC by running the executable file in the new CD-ROM drive.

 Media device (MTP): Transfer files on Windows<sup>®</sup> or Mac<sup>®</sup>.

#### NOTE:

For Windows XP, please install the drivers and Media Player 11 (or later version) when you use Media device (MTP) for the first time.

► Camera (PTP): Transfer photos using camera software.



# NOTE:

To make your phone connect to the computer automatically using the selected connection type, check **Don't ask me again**.

## Connect With Windows Media<sup>®</sup> Player

You can sync music, picture, and video files from your computer to your phone via Windows Media Player.

- 1. Connect the phone with your computer via USB and choose Media device (MTP).
- 2. Open Windows Media Player and synchronize music, picture, and video files.

#### **Disconnect Your Phone From the Computer**

To disconnect the phone from the computer, simply unplug the USB cable when you're finished.

# Remove the microSDXC Card From Your Phone

If you need to remove the microSDXC card while the phone is on, you must unmount it first.

#### NOTE:

You cannot unmount or erase SD card while  $\ensuremath{\mathsf{MTP}}$  or  $\ensuremath{\mathsf{PTP}}$  function is active.

- 1. Touch the Home key > 🕮 > Settings > Storage.
- 2. Scroll down and touch **Unmount SD card > OK**.
- 3. The 📕 icon appears in the status bar and you can now



safely remove the microSDXC card from the phone.

#### NOTE:

If you unmount the microSD card, some apps that you are using will stop and may be unavailable until you remount the microSDXC card.

# Erase the microSDXC Card

- 1. Touch the **Home** key > (a) > Settings > Storage.
- Scroll down and touch Erase SD card > ERASE SD CARD > ERASE EVERYTHING.

#### CAUTION:

The formatting procedure erases all the data on the microSDXC card, after which the files CANNOT be retrieved.

# **Connecting to Virtual Private Networks**

Virtual private networks (VPNs) allow you to connect to the resources inside a secured local network. VPNs are commonly deployed by corporations, schools, and other institutions to let people access local network resources when not on campus, or when connected to a wireless network.

Depending on the type of VPN you are using, you may be required to enter your login credentials or install security certificates before you can connect to your VPN. You can get this information from your network administrator.



# Add a VPN

- 1. Touch the Home key > (a) > Settings > More > VPN.
- 2. Touch + at the top right and fill in the information provided by your network administrator.
- 3. Touch SAVE.

The VPN is added to the list on the VPN screen.

# NOTE:

You must set a lock screen pattern, PIN or password before using VPN.

# Connect to a VPN

- 1. Touch the Home key > (1) > Settings > More > VPN.
- 2. Touch the VPN that you want to connect to.
- 3. When prompted, enter any requested credentials, and then touch **CONNECT**.

# Modify a VPN

- 1. Touch the Home key > (1) > Settings > More > VPN.
- 2. Touch and hold the VPN that you want to modify.
- 3. Touch Edit profile and edit the VPN settings you want.
- 4. Touch SAVE.

# Phone Calls

You can place calls from the Phone app, the Contacts app, or other apps or widgets that display contact information. Wherever you see a phone number, you can usually touch it to dial.

# **Placing and Ending Calls**

# Place a Call by Dialing

- 1. Touch the **Home** key >
- 2. Touch 🔍 and enter the phone number or the contact name with the dialpad. Touch < to delete incorrect digits.

#### NOTE:

As you enter the phone number or the contact name, your phone searches for matching information in your contacts. If you see the number and contact you want to call, touch it to place the call immediately.

3. Touch 🕓 below the keypad to dial.

You can also touch the search box at the top of the **Phone** app screen and enter the phone number or contact name you want to call. Touch the matching contact or **Call** [number] to place the call.

# NOTE:

To make an international call, touch and hold the 0 key to enter the plus (+) symbol. Next, enter the country code, followed by the city/area code and then the phone number.

## NOTE:

To redial the last call you made, just touch the **Home** key > > = > = and touch  $\bigcirc$  again.

#### End a Call

During a call, touch **for a call** on the screen.

# **Answering or Rejecting Calls**

When you receive a phone call, the incoming call screen opens, displaying the caller ID or the information about the caller that you've entered in the Contacts app. You can answer or reject the call, or reject it with a text message.

#### Answer a Call

When you receive a phone call, slide down the green bar to answer the call.

#### NOTE:

To silence the ringer before answering the call, press the **Volume up** key or the **Volume down** key.



# **Reject a Call**

When you receive a phone call, slide up the red bar to reject the call.

You can also slide  $\blacksquare$  up to reject the call and select a preset text message or edit one to send to the caller.

#### NOTE:

To edit the preset text response from within the Phone app, touch

in the top search field and select Settings > General

settings > Quick responses.

# Working With the Call History

The call history is a list of all the calls you've placed, received, or missed. It provides a convenient way to redial a number, return a call, or add a number to your contacts.

To open the call history, you can touch the **Home** key  $> \langle \rangle > |$  (in the top search field) > **Call History**.

# Place a Call From the Call History

- 1. Open the call history.
- 2. Touch 🔽 beside a number to call back.

NOTE:

You can touch **MISSED**, **OUTGOING**, or **INCOMING** to filter the records by call type.

# Add a Number From Call History as a Contact

- 1. Open the call history.
- 2. Touch the contact icon in front of a number.
- 3. Touch **\*** on the contact information tab.
- To add the number to an existing contact, touch a contact in the list. To add a new contact, touch \* at the top right corner.

# Take Other Actions on a Call History Entry

Open the call history and touch a number to view more call information.

- Touch 🔳 to delete the entry.
- While viewing the call details, touch > Edit number before call to edit the number in the dialer before calling it.
- Touch the contact icon in front of the entry to open the contact information tab from the bottom, where you can send a message, call back, edit the contact, add the contact to favorites, or add the number to contacts.

# NOTE:

You can touch > Clear call log in the call history screen to delete all history records.

# **Calling Your Contacts**

- Touch the Home key > S. Your favourite contacts and frequently called contacts are displayed in the SPEED DIAL tab.
- 2. Touch a contact to place the call, or touch or swipe to the **CONTACTS** tab to view all your contacts and touch beside a contact to make a call.

# **Checking Voicemail**

If you have set the phone to divert calls to voicemail, callers can leave voicemail messages when they cannot reach you. Here's how to check the messages they left.

- 1. Touch the Home key > 📞 > 🖲.
- 2. Touch and hold the 1 key in the dialer. If prompted, enter your voicemail password.
- Follow the voice prompts to listen to and manage your voicemail messages.

#### NOTE:

See Set Voicemail for how to set your voicemail service. For

detailed information, please contact the service provider.

# **Using Options During a Call**

During a call, you will see a number of onscreen options. Touch an option to select it.

- 1. Touch 🙆 to view all call options.
- Touch iii to switch to the keypad when you need to enter a code (for example, the PIN for your voicemail or bank account) during the call.
- 3. Touch  $\cancel{\slash}$  /  $\cancel{\slash}$  to mute or unmute your microphone.
- 4. Touch / to turn on or off the speaker.
- 5. Touch + to make another call separately from the first call, which is put on hold.
- 6. Touch 📥 to open the Contacts app.
- 7. Touch 📕 to open the Messaging app.
- Touch C to put the caller you are speaking to on hold, and switch to the other call that has been put on hold.
- Touch 1 to merge the separate calls into a single conference call.
- 10. Touch **for a set of the current call.**

**WARNING!** 

Because of higher volume levels, do not place the phone near

your ear during speakerphone use.

## **Managing Multi-party Calls**

When the call waiting and three-way call features are available,

you can switch between two calls or set up a conference call.

#### NOTE:

The call waiting and three-way call features need network

support and may result in additional charges. Please contact your

service provider for more information.

#### **Switch Between Current Calls**

When you're on a call and another call comes in, your phone screen informs you and displays the caller ID.

To respond to an incoming call while you're on a call:

1. Touch Answer to answer the call. (This puts the first caller on hold and answers the second call.)

2. Touch to reject the second call.



- 3. Touch to reject the second call and select a
  - preset text message or edit one to send to the caller.

## To switch between two calls:

Touch  $\bigcirc$  >  $\bigcirc$  to switch back to the other call.

## Set Up a Conference Call

With this feature, you can talk to two people at the same time.

- 1. Place the first call.
- Once you have established the connection, touch O > + and dial the second number. (This puts the first caller on hold.)

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all callers are disconnected.

To end the conference call, touch

# **Adjusting Your Call Settings**

## Set Contact Display Options

You can set the order of the contacts displayed in the

<sup>75</sup> 

CONTACTS tab of the Phone app.

- Touch the Home key > 
   (in the top search field) > Settings > General settings.
- 2. Touch Sort by or Name format to set the order of the

contacts and the format of the contact names.

## Set Sound and Vibration

Set the sound and vibration for incoming calls as well as dialpad sounds.

- Touch the Home key > 
   i (in the top search field) > Settings > General settings.
- 2. In the Sounds and vibrate section, touch the option you

want to configure.

- Touch Phone ringtone to select the ringtone for incoming call notification.
- Check Dialpad tones to play sounds when you touch the dialpad keys.
- Check Also vibrate for calls to enable vibration for incoming call notification.

NOTE:

You can set the vibration pattern for incoming call notification.

Touch the **Home** key > \$\$ (in the top search field) >

Settings > Call settings > Vibrate pattern and select one.

#### **Edit Quick Response to Rejected Callers**

- Touch the Home key > 
   > : (in the top search field) > Settings > General settings > Quick responses.
- 2. Touch a text message to edit it.

## Set Voicemail

1. Touch the Home key >  $\checkmark$  >  $\vdots$  (in the top search field) >

Settings > Call settings.

- 2. Touch Voicemail to configure voicemail settings.
  - ► Touch Service to select the voicemail service provider. My carrier is the default.
  - Touch Setup > Voicemail number to edit the voicemail number.
  - Touch Sound to select the notification sound for new voicemails.
  - Check Vibrate to enable vibration for notification.

## Set TTY Mode

Your phone is a TTY compatible device. A TTY device can allow people who have hearing or speech disabilities to communicate by telephone. Simply connect the TTY device to the phone's headset jack.

Select a TTY mode for your phone to work with a TTY device, or turn TTY off.

- Touch the Home key > 
   i (in the top search field) > Settings > Call settings > TTY mode.
- 2. Select one of the following options. Consult your teletypewriter manufacturer's manual if necessary.
  - TTY Off: Users who can hear and talk can disable TTY support.
  - TTY Full: Users who cannot talk or hear may use this mode to send and receive text messages through TTY device.
  - TTY HCO: Users who can hear, but cannot talk, may use this mode to listen to conversation of the other party, and respond via text messages.
  - TTY VCO: Users who can talk, but cannot hear, may use this mode to talk through the phone and receive responses via text messages.

7	o
1	o

#### **Set Hearing Aids**

Your phone supports HAC (Hearing Aid Compatibility) function. When you turn on the hearing aid compatibility and use a hearing aid with a Telecoil to answer the phone, it will help you hear more clearly during the phone call.

- Touch the Home key > 
   > i (in the top search field) > Settings > Call settings.
- 2. Check Hearing aids to turn on hearing aid compatibility.

#### Set Speed Dials

You can touch and hold the 1  $\sim$  9 keys from the dialer to call the corresponding speed dial number.

The number key 1 is reserved to speed dial your voicemail.

To assign a speed dial key:

- Touch the Home key > 
   > i (in the top search field) > Settings > Call settings > Speed dial.
- 2. Touch a speed dial key.
- 3. Enter a phone number or select one from the contact list.



4. Touch OK.

## Set DTMF Tones

You can set the length of Dual-tone multi-frequency (DTMF) signal tones.

- Touch the Home key > 
   > i (in the top search field) > Settings > Call settings > DTMF tones.
- 2. Touch Normal or Long.

## **Call Ended Operation Tips**

When this feature is enabled, the phone will prompt you to call back, send a message to the contact, or add the new number to your contacts after you finish a call.

- Touch the Home key > 
   i (in the top search field) > Settings > Call settings.
- 2. Check Call ended operation tips to enable this feature.

## **Answer Calls Automatically**

The Auto answer feature allows the phone to automatically answer incoming calls so your hands are free to do something else.

1. Touch the **Home** key > 4 > 1 (in the top search field) >



Settings > Call settings > Auto answer.

- 2. Touch Auto answer if the feature is off.
- If necessary, touch Call duration to configure how long the phone should wait before it answers a call; touch Auto answer conditions to set the condition when Auto answer works.

#### **Forward Incoming Calls**

Call forwarding feature allows you to forward your incoming calls to another phone number.

- Touch the Home key > 
   > i (in the top search field) > Settings > Call settings > Call forwarding.
- Touch an available option (Always forward, Forward when busy, or Forward when unanswered) to enable it, or touch DISABLE to disable it.

#### Voice Privacy

This option allows you to enable enhanced privacy mode.

- Touch the Home key > 
   > i (in the top search field) > Settings > Call settings > Additional settings.
- 2. Check Voice privacy to enable this feature.

## **Plus Code Dialing Setting**

Plus Code Dialing allows the phone to automatically dial the international access code for your location when you touch and



hold the 0 key in the dialer.

- To activate Plus Code Dialing:
- Touch the Home key > 
   i (in the top search field) > Settings > Call settings > Additional settings > Plus code dialing setting.
- 2. Check Setup Plus Code Replacement to enable this feature.
- To change the international dialing code:
- Touch the Home key > 
   > i (in the top search field) > Settings > Call settings > Additional settings > Plus code dialing setting > Replace Code of Plus Code.
- 2. Input a new code and touch **OK**.

## Contacts

You can add contacts on your phone and synchronize them with the contacts in your Google account or other accounts that support contact syncing.

To see your contacts, touch the **Home** key > 2. From there, you can touch the tabs on the top of the screen to quickly switch to the contact groups or favorite contacts.

# **Checking Contact Details**

- 1. Touch the **Home** key > and touch the **CONTACTS** tab to access your contact list.
- 2. Scroll through the list to view all your contacts.
- 3. Touch a contact to view its details.

#### NOTE:

If you have a lot of contacts stored, you'll see a slider on the right side of the screen. Drag the slider to the initial letter you need.

## Adding a New Contact

- 1. Touch the **Home** key > 🔁 and touch the **CONTACTS** tab.
- 2. Touch 🕙 to add a new contact.
- Touch the account field near the top of the screen to choose where to save the contact. If a sync account is selected, the



contacts will be synced automatically with your account online.

- Enter the contact name, phone numbers, email addresses, and other information. Touch ADD ANOTHER FIELD to add more information if you want.
- 5. Touch  $\checkmark$  to save the contact.

# **Setting Up Your Own Profile**

You can create your own name card in your phone.

- 1. Touch the **Home** key > 🔁 and touch the **CONTACTS** tab.
- 3. Edit your profile information. Touch **ADD ANOTHER FIELD** to add more information if you want.
- 4. Touch 🗸.

# Importing, Exporting, and Sharing Contacts

You can import/export contacts from/to your the phone storage, or the microSDXC card. This is especially useful when you need to transfer contacts between different devices. You can also quickly share your contacts using Bluetooth, Google Drive, Email,

<sup>84</sup> 

Gmail, or Messaging, etc.

## Import Contacts From the microSDXC Card or Phone Storage

- 1. Touch the **Home** key > 🔼
- 2. Touch > Import/Export > Import from storage.
- 3. If you have added contact accounts other than the phone, select an account in which to save the contacts.
- Select the vCard file(s) in the microSDXC card or the phone storage and touch OK.

#### NOTE:

If the microSDXC card is not installed in the phone, you can import vCard file(s) in the phone storage.

## Export Contacts to the microSDXC Card or Phone Storage

- 1. Touch the Home key > 🔼
- 2. Touch > Import/Export > Export to storage.
- The phone will prompt you with the name of the vCard file and the directory in which the file will be saved. Touch OK to create the file.

NOTE:

If the microSDXC card is not installed in the phone, you can



export vCard file(s) into the phone storage.

## **Share Contacts**

- 1. Touch the Home key > 🔁 and touch the CONTACTS tab.
- 2. Touch > Multi-Select.
- 3. Check the contacts you want to share and then touch  $\leq$ .
- 4. Choose how to share the contacts. Options depend on the applications and services installed.

# **Working With Favorite Contacts**

In the favorite contacts tab, you can find your favorite contacts and frequently contacted contacts.

#### Add a Contact to Favorites

You can add the contacts you use frequently to **FAVORITES** so that you can find them quickly.

- 1. Touch the **Home** key > **and** touch the **CONTACTS** tab.
- 2. Touch a contact and then touch  $\overleftrightarrow{}$  at the top.

## **Remove a Contact From Favorites**

- 1. Touch the **Home** key > and touch the **FAVORITES** tab.
- 2. Touch a favorite contact and then touch  $\star$  at the top.

## **Working With Groups**

## **View Your Contact Groups**

- 1. Touch the Home key > 🔁 and touch the GROUPS tab.
- 2. Scroll through the list to view the preset groups and any groups you have created.
- 3. Touch a group to view its members.

#### NOTE:

To send a message or an email to the group members, you can touch **Send Group message** / Send Group email after you open the group.

## Set Up a New Group

- 1. Touch the **Home** key > **and** touch the **GROUPS** tab.
- 2. Touch 😇 to create a new group.
- 3. Touch to choose an account for the new group.
- 4. Touch the **Group's name** field and enter the group name.
- 5. Touch **Add member** and select the contacts you wish to be the group members.
- 6. Touch 🗸.
- If necessary, touch **Default** below **RingTone** to set a special ringtone for incoming calls from the group members. Touch **OK**.

8. Touch  $\checkmark$  to save the group.

## **Delete a Group**

- 1. Touch the **Home** key > **and** touch the **GROUPS** tab.
- 2. Touch a group and then touch > **Delete Group**.
- 3. Touch **OK** to disband the group. The contacts in the group will not be deleted.
- NOTE:

Pre-set groups cannot be deleted.

#### Edit a Group

- 1. Touch the **Home** key > **and** touch the **GROUPS** tab.
- 2. Touch a group and then touch .
- Touch Edit to edit the group name, add more members, or change the ringtone. Or touch Multi-Select to select the members you don't need and touch to remove them from the group.

# Searching for a Contact

- 1. Touch the **Home** key >
- 2. Touch  $\mathbf{Q}$  at the top of the screen.

3. Input the contact name or any information the contact has to search for it. The contacts matched will be listed.

## **Editing Contacts**

## **Edit Contact Details**

- 1. Touch the Home key > 🔼
- 2. Touch a contact you need to edit and then touch  $\checkmark$ .
- 3. Edit the contact and touch  $\checkmark$ .

## Set a Ringtone for a Contact

Assign a special ringtone to a contact, so you know who is calling when you hear the ringtone.

- 1. Touch the **Home** key > 🔼
- 2. Touch a contact you want to set a ringtone for and then touch
  > Set ringtone.
- 3. Select a ringtone you like and touch **OK**.

## **Delete Contacts**

- 1. Touch the **Home** key > **Solution** and touch the **CONTACTS** tab.
- 2. Touch > Multi-Select.
- 3. Check the contacts you want to remove and then touch  $\blacksquare$ .



4. Touch **OK** to confirm.

## Join Contacts

As your phone synchronizes with multiple online accounts, you may see duplicate entries for the same contact. You can merge all the separate information of a contact into one entry in the contacts list.

- 1. Touch the **Home** key > 🔼
- 3. Touch > Join.
- 4. Touch the contact whose information you want to join with the first entry.
- 5. Touch 🗸.

The information from the second contact is added to the first contact, and the second contact is no longer displayed in the contacts list.

You can repeat these steps to join another contact to the main contact.

## **Separate Contact Information**

If contact information from different sources was joined in error, you can separate the information back into individual contacts on your phone.

1. Touch the **Home** key >



- 2. Touch a contact entry you have merged and want to separate.
- 3. Touch / > > Separate.

4. Touch **OK** to confirm.

# **Web Accounts**

## **Adding or Removing Accounts**

You can add multiple Google accounts and Microsoft Exchange ActiveSync<sup>®</sup> accounts. You may also add other kinds of accounts, depending on the apps installed on your phone.

#### Add an Account

- 1. Touch the Home key > 🐵 > Settings > Accounts.
- 2. Touch Add account. Touch the type of account you want to add.
- Follow the onscreen steps to enter the information about the account. Most accounts require a username and password, but the details may vary. You may also need to obtain some information from IT support or your system administrator.

#### **Remove an Account**

Removing an account will delete it and all information associated with it from your phone, such as emails and contacts.

 
<sup>91</sup> 

- 1. Touch the **Home** key > (1) > Settings.
- 2. Touch the account category in the **Accounts** section and then touch the account.
- 3. Touch **Fremove account > REMOVE ACCOUNT**.

# **Configuring Account Sync**

## **Configure Auto Sync Setting**

1. Find the **Power control** widget on the home screen.

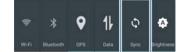

## NOTE:

If the widget is not on the home screen, you can add it from the Widgets panel. See <u>Add Shortcuts and Widgets</u>.

- Touch Sync on the widget to enable or disable automatic sync.
  - When automatic sync is turned on, changes you make to information on your phone or on the web are automatically synced with each other.
  - ▶ When automatic sync is turned off, you need to sync



manually to collect emails, updates, or other recent information.

## Sync Manually

- 1. Touch the Home key > 🕮 > Settings.
- 2. In the **Accounts** section, touch the account category and then the account you want to sync.
- 3. Touch **Sync now**. Or touch the types of information you want to sync.

## Change an Account's Sync Settings

- 1. Touch the **Home** key > (1) > Settings.
- 2. In the **Accounts** section, touch the account category and then the account. The **Sync** screen appears, showing a list of information the account can sync.
- 3. When auto-sync is enabled, check or uncheck items as you need. Checked types of information on the phone and the web will be kept in auto-sync. When auto-sync is disabled, touch a listing to sync that type of information between the phone and the web.

# Email

Touch in the home screen and select **Email**. Use it to receive and send emails from your webmail or other accounts using POP3 or IMAP, or access your Exchange ActiveSync account for your corporate email needs.

# **Setting Up the First Email Account**

- 1. Touch the **Home** key > 🕮 > **Email**.
- 2. Select an email server and enter the email address and password.
- 3. Touch **Next** to let the phone retrieve the network parameters automatically.

NOTE:

You can also enter these details manually by touching **Manual setup** or when automatic setup fails.

4. Follow the on-screen instructions to finish the setup. Your phone will show the inbox of the email account and start to download email messages.

## **Checking Your Emails**

Your phone can automatically check for new emails at the interval you set when setting up the account. You can also check new emails manually by dragging down on

<sup>94</sup> 

the message list. To check earlier emails for your IMAP or POP3 accounts, swipe upwards to the bottom of the message list and touch **Load more messages**.

## **Responding to an Email**

You can reply to or forward a message that you receive. You can also delete messages and manage them in other ways.

#### Reply to or Forward an Email

- 1. Open the email you want to reply to or forward from the Inbox.
- 2. Do the following as you need:
  - ► To reply to the sender, touch ▲.
  - ► To reply to the sender and all recipients of the original email, touch <.</p>
  - ► To forward the email to someone else, touch ➡.
- 3. Edit your message and touch ▶.

#### Mark an Email as Unread

You can return a read email to the unread state - for example, to remind yourself to read it again later. You can also mark a batch of emails as unread.

• While reading a message, touch : > Mark as unread.



 While in a message list (for instance, the inbox), touch the checkboxes before the messages and then touch M.

#### **Delete an Email**

You can delete an email from its folder. You can also delete a batch of emails.

- While reading a message, touch **Solution** > **OK**.
- While in a message list (for instance, the Inbox), touch the checkboxes before the messages and then touch 
   > OK.

# Writing and Sending an Email

Open your email inbox and touch 
 NOTE:

If you have more than one email account added on the phone, touch the sender line to select the account you want to use for sending the message.

2. Enter a contact name or email address in the 'To' field.

Separate each recipient with a comma. You can also touch

Let to select recipients from your contacts.

NOTE:

Touch **\*** > Add Cc/Bcc to send a carbon copy or blind carbon copy to other recipients.

- 3. Enter the email subject and compose the email text.
- 4. Touch **\*** > Attach file to add audio files, images, videos and other types of files as attachments.
- Touch ➤ at the top right of the screen to send the message.

# **Adding and Editing Email Accounts**

## Add an Email Account

After setting up your first email account (see <u>Setting Up the</u> <u>First Email Account</u>), you can add more email accounts and manage them separately.

- 1. Open Email to get the Inbox screen.
- 2. Touch i > Settings and touch + at the top right of the screen.
- 3. Follow the prompts to set up the account as you did with the first one.

#### **Edit an Email Account**

You can change a number of settings for an account, including how often you check for email, how you're notified of new mails, your email signature, and details about the servers the account uses to send and receive mails.

- 1. Open Email to get the Inbox screen.
- 2. Touch > Settings and touch the account whose settings



you want to change.

3. Make the changes and touch the  ${\pmb{\mathsf{Back}}}$  key when you finish.

# **Changing General Email Settings**

- 1. General settings apply to all email accounts you add.
- 2. Open Email to get the Inbox screen.
- 3. Touch **Settings > General**.
- 4. Make the changes and touch the **Back** key when you finish.

## Messaging

You can use Messaging to exchange text messages (SMS) and multimedia messages (MMS).

# **Opening the Messaging Screen**

Touch the **Home** key > <sup>—</sup>.

The **Messaging** screen opens, where you can create a new message, search for messages, or open an ongoing message thread.

- Touch 😶 to write a new text or multimedia message.
- Touch  ${\bf Q}$  to search for a message using keywords.
- Touch an existing message thread to open the conversation you've had with a certain number.

## Sending a Message

1. On the **Messaging** screen, touch 🙂 at the bottom.

2. Add recipients by one of the following ways.

- Touch the To field and manually enter the recipient's number or the contact name. If the phone presents a few suggestions, touch the one you want to add.
- ▶ Select recipients from your contacts or call log by



touching 🚢.

- 3. Touch the Type message field and enter the message text.
- If you want to send a multimedia message, touch > Add subject to add a message subject or touch to attach a file or a slideshow to the message.
- 5. Touch >.

```
NOTE:
```

You can also include email addresses as recipients for multimedia messages.

NOTE:

Do not add a message subject or any attachment if you want to send a text message. Otherwise you may be charged for a multimedia message.

## **Replying to a Message**

Messages you receive are appended to existing threads for the same number. If the new message comes from a new number, a new thread is created.

- 1. On the **Messaging** screen, touch the thread that has the message you want to reply to.
- Type your reply in the text box at the bottom. You can touch
   if you want to reply with an MMS.
- 3. Touch >.



## **Deleting Messages**

- Touch and hold a message that you want to delete on the Messaging screen. You can multi-check the checkboxes behind the messages if you want to delete more messages.
- 2. Touch **■** > **OK**.

You can delete all the messages manually.

- 1. On the **Messaging** screen, touch > **Delete all threads**.
- 2. Touch OK.

You phone can delete the old messages automatically if the number of messages has exceeded the upper limit.

- 1. Touch **Settings** in the **Messaging** screen.
- 2. Touch **Text message limit.** Slide up or down to set the number of messages to save.
- 3. Touch SET.
- 4. Touch the checkbox behind **Delete old messages**.

## **Changing Message Settings**

Touch **\*** > **Settings** in the **Messaging** screen to change messaging settings.

## Calendar

Calendar on the phone works with the web-based Google Calendar™ service for creating and managing events, meetings, and appointments. It also works with the Microsoft Exchange ActiveSync calendar once you sign into your Exchange account on the phone.

To open Calendar, touch (a) in the home screen and select Calendar.

## **Viewing Your Calendars and Events**

## **Select Visible Calendars**

- 1. Open the Calendar app.
- 2. Touch > Calendars to display.
- Touch the calendars to check the ones you want to see or uncheck the ones you'd like to hide.

Events from hidden calendars are not shown in the Calendar app.

#### **Change Calendar Views**

You can view your calendars in different forms. The app offers four view types: Month, Week, Day, and Agenda.

To change calendar views, touch the current view at the top left and select the view you prefer. You can also change to Day view from Month view by touching any day block in the monthly

<sup>102</sup> 

calendar.

- In Month view, swipe vertically to see previous and future months.
- In Week or Day view, swipe horizontally to see previous and future weeks/days.
- When you are viewing past or future days, weeks, or months, touch the icon at the top right to quickly switch to today.

#### **View Event Details**

In Agenda, Day, or Week view, touch an event to view its details.

In Month view, touch a day to switch to Day view or Agenda view. Then touch an event to view its details.

## **Creating an Event**

- In any Calendar view, touch +. You can also touch a spot in Day or Week view twice to add an event to that time block.
- 2. If you have more than one calendar account, touch the current account above the **Event name** line to choose one.
- 3. Enter the event details and touch **SAVE** at the bottom.

# **Editing or Deleting an Event**

- 1. Find the event you want to edit or delete.
- 2. Open its details screen (see View Event Details in this
- chapter). 3. Do one of the following as you need.
  - ► To edit the event, touch Area . Touch SAVE to save your changes.
  - To delete the event, touch  $\frac{1}{2}$  > **OK**.

# **Changing Calendar Settings**

To change the calendar settings, open a calendar view (Day, Week, Month, or Agenda), and touch **\*** > Settings. You can change **General settings**, which apply to all accounts, or other settings that only apply to specific accounts.

## Camera

You can use your phone to take photos and record videos. Photos and videos are stored on the microSDXC card you have installed or in the phone storage. You can copy them to your computer or access them in the **Gallery** app.

# **Capturing a Photo**

- 1. Touch the **Home** key > (a) > **Camera**.
- 2. Aim the camera at the subject and make any necessary adjustment. Auto camera mode is used by default.

## NOTE:

You can pinch or spread on the screen to zoom in or zoom out before taking pictures.



Number	Function
1	Change the camera/video settings.
2	Change flash mode (only available for the back camera).
3	Switch to Bokeh camera mode to adjust aperture (only available for the back camera).
4	View photos and videos you have taken.
5	Select a special effect for pictures and videos.
6	Capture a photo.
7	Record a video.
8	Take a panorama picture, a multi-exposure picture, or manually adjust the settings before taking a picture (only available for the back camera).
9	Switch to auto camera mode (only available for the back camera).
10	Enable High-Dynamic Range (HDR) mode when capturing a photo with high illumination contrast to keep more details in both the bright and the dark areas. Or turn off this feature.
11	Set a time delay before the camera takes a picture automatically after you touch the shutter icon, or turn off this feature.
12	Switch between the front and the back camera.

#### **O** WARNING!

Keep a safe distance when using the flash. Do not point the flash toward people or animals' eyes.

3. Touch the area where you want the camera to focus, or leave the camera to autofocus on the center of the image.

NOTE:

In Auto camero mode, when you touch the screen to focus, the

exposure bar 📍 appears beside the focus point. You can drag

- 🌞 up or down to adjust the exposure.
- Lightly touch . The Volume up key or Volume down key can also be used to take a photo when the Camera app is launched.

NOTE:

When you use the front camera, you can also touch  $\bigcirc$  or  $\bigcirc$  to adjust beauty face or smile detection setting.

# **Recording a Video**

- 1. Touch the **Home** key > (1) > **Camera**.
- 2. Aim the camera at the subject. You can touch any area on the screen that you want the camcorder to focus on before and during recording.

## NOTE:

You can spread or pinch on the screen to zoom in or out before and during recording.

## NOTE:

When you touch the screen to focus during recording, the

exposure bar <sup>1</sup> appears beside the focus point. You can drag

ip or down to adjust the exposure.

3. Touch () to start recording.

NOTE:

While the recording is in progress, touch in to pause the

recording or touch (a) to save the frame as a separate photo.

4. Touch 🖲 to stop recording.

# **Using Other Camera Modes**

Besides capturing photos and videos in the traditional way, your camera app offers other powerful and interesting camera modes. Touch **MODES** to find them all.

- **PANORAMA:** Capture panorama pictures.
- MULTI EXPOSURE: Capture two pictures for collage.
- MANUAL: Adjust some professional photographic

<sup>109</sup> 

parameters like shutter speed, exposure, ISO, white balance and more.

## **Using Manual Camera Mode**

- 1. You can use manual camera mode to adjust more camera options for your photo such as ISO, white balance, exposure, etc.
- 2. Touch the **Home** key > 🐵 > **Camera**.
- 3. Touch **MODES > MANUAL**.
- 4. Aim the camera at the subject and you can make the following adjustments.
  - Drag U to any area on the screen that you want to focus on.
  - Drag + to any area on the screen where you want the camera to meter exposure so as to adjust the photo brightness.
  - ► Touch <sup>(()</sup>) to adjust shutter speed.
  - ▶ Touch is to adjust ISO.
  - ► Touch 🕙 to adjust overall exposure.
  - ▶ Touch 
    Ito adjust white balance.
  - Touch (1) to set the interval for time lapse pictures or turn off this feature.

- Touch S to adjust the focus manually or turn on auto-focus.
- 5. Touch the shutter icon (i) to take the photo.

# Customizing Camera/Camcorder Settings

Before capturing a photo or a video, you can touch ô to open the following camera and camcorder setting options.

## NOTE:

Some camera and video options will change according to different camera modes.

- CAMERA
  - ► Full screen: Set the viewfinder screen as full screen or not when the back camera is in use.
  - ▶ Shutter tone: Turn on or off the shutter tone.
  - Geo-tagging: Select whether to store the GPS location in your captured photos and videos.
  - Anti-banding: Set the anti-banding value when you take pictures of TV or computer screens to avoid stripes on the screen.
  - Review: When you take a picture you can review the picture, and decide to keep or discard the picture.
  - ► Storage location: Touch Save location to change the

storage location for captured photos and videos.

- Restore defaults: Restore default camera and video settings.
- VIDEO
  - ► Video quality: Set the quality for your video.
  - Time lapse: Set the time interval between each frame when you shot time lapse videos with the back camera.
  - ► Focus lock when recording: Select whether to lock the focus point on the center of the screen during video recording using the back camera.
  - ► Geo-tagging: Select whether to store the GPS location in your captured photos and videos.
  - ► Anti-banding: Available for the back camera. Set the anti-banding value when you record videos of TV or computer screens to avoid stripes on the screen.
  - ► Storage location: Touch Save location to change the storage location for captured photos and videos.
  - ► Restore defaults: Restore default camera and camcorder settings.

# Gallery

## **Opening Gallery**

Touch the **Home** key > (a) > **Gallery** to view albums of your pictures and videos.

## **Working With Albums**

When you open Gallery, all pictures and videos on your phone are displayed in a number of albums.

#### To view album contents:

Touch an album to view the pictures and videos it contains.

#### To share albums, pictures, or videos:

- 1. Touch and hold an item in the Albums view to select an album or after you open an album to select a picture or a video.
- 2. Touch more items that you want to share.
- 3. Touch  $\leq$  and select how you want to share the items.

#### To delete albums, pictures, or videos:

- 1. Touch and hold an item in the Albums view to select an album or after you open an album to select a picture or a video.
- 2. Touch more items that you want to delete.



3. Touch **■** > **OK**.

To hide albums:

- 1. Touch and hold an album to select it.
- 2. Touch more albums that you want to hide.
- 3. Touch <sup>™</sup> > **OK**.

NOTE:

To show the hidden albums again, touch Manage hidden albums. Touch the albums you want to restore and touch **Show** at the bottom.

## **Working With Pictures**

Touch a picture in an album to view the picture in full screen. When viewing a picture in full screen, the following features are available.



- 1. Swipe horizontally to see more pictures or videos.
- Pinch a picture or video to make it smaller. You'll then see a filmstrip-style view of all your pictures and videos in a row. Swipe left or right to scan through them all.

## NOTE:

You can delete a picture or video by swiping it upwards in the filmstrip view. If you accidentally delete one, touch **UNDO** to retrieve it.

3. Double-tap the picture, or pinch two fingers together or



spread them apart to zoom out or in.

- 4. Touch \* to share, rename, print, or edit the picture, set it as wallpaper or contact photo, edit its tag, check file details, or browse the album contents in a slideshow.
- 5. Touch 📕 to manage picture tags.
- 6. Touch 🕥 / Ć to rotate the picture.

NOTE:

Some options may not be available for certain albums or pictures.

# **Retouching Your Pictures**

You can edit any photos you took and some other pictures in  $\ensuremath{\textbf{Gallery}}$  .

- 1. Touch **\*** > Edit while viewing a picture in full screen and select Photo Editor to open the Photo Editor interface.
- 2. Touch the icons along the bottom of the screen to edit the picture.

#### NOTE:

Slide left or right on the bottom of the screen to find all icons.

	Apply	filters	and	old	photo	effects.
--	-------	---------	-----	-----	-------	----------

Crop, straighten, rotate, or flip (mirror) the pictu	cture.
--	--------

Adjust exposure, saturation, hue, sharpness, and other color options.

Add a frame to the picture.

Decorate people in the picture with comical moustaches, eye glasses, hats and more.

Apply a blur effect to the picture.

Select a color and draw anything on the picture.

- Add some text to the picture and adjust its effect.
- 3. Touch  $\checkmark$  to keep the change or imes to cancel it.
- 4. Touch 🖺 to save the new picture.

NOTE:

Touch 🕒 in the **Photo Editor** screen to see the edits you have made and undo or redo them.

## Making a GIF Picture or a Collage

You can put together a few pictures in the same album to make an animated GIF picture or a collage of pictures.

- Open the Gallery app and touch > Gif Maker or Collage Maker.
- 2. Touch an album.
- 3. Touch the pictures you need.
  - To make a GIF, touch 2 to 50 pictures in the order or reverse to the order that you want them to appear in the GIF.



- To make a collage, touch 2 to 9 pictures.
   The pictures you touched are displayed along the bottom.
- Touch  $\bigotimes$  to remove the pictures you do not need.
- 4. Touch **NEXT**. The GIF or collage is displayed.
- 5. Touch the options along the bottom to adjust the final picture.
  - ► For GIF, you can adjust the speed, order, and size.
  - ► For collage, touch **Template**, **Free**, or **Mosaic** and then select a border, shading and style.
- When you are satisfied with the final picture, touch ☐ to save the GIF or touch ✓ to save the collage.

Depending on your storage setting, the picture is saved to the *zte\_editor/save* folder in your phone storage or your microSDXC card.

## **Playing Videos**

- 1. Touch an album in the gallery and then touch the thumbnail of a video.
- Touch I at the center and select a player to start playing. Touch the video to view the playback controls.

In the **Video Player**, you can touch D to play the video in a small floating window and continue with other tasks on the phone.

## **Music**

Touch the **Home** key > (IIII) > **Music** to play audio files stored on your phone. **Music** supports a wide variety of audio formats, so it can play music you purchase from online stores, music you copy from your CD collection, and so on.

## **Copying Music Files to Your Phone**

Before using Music, you need to copy or download audio files to your phone.

## **Copy From a Computer**

- 1. Connect your phone and the computer with a USB cable.
- 2. Open the notification panel and touch  $\Psi$ .
- 3. Touch Media device (MTP). See <u>Connect Your Phone to a</u> <u>Computer via USB</u>.
- 4. Copy the music files from the PC and paste them to the phone storage or the microSDXC card.

### **Download From the Internet**

You can download music files when browsing web pages.

## Receive via Bluetooth

You can receive music files from other devices via Bluetooth.

See Receive Data via Bluetooth.

## **Viewing Your Music Library**

Touch the **Home** key  $> \textcircled{\baselinetwidth{\ba$ 

- Touch All Songs to view all music files on your phone.
- Touch Artists/Albums to browse music files on your phone organized by the artist or album name.
- Touch **Folders** to find music files through the folders they are stored in.
- Touch **Favorites** to browse music files you have marked as favorites.
- Touch Playlists to view all music playlists you have created.

## NOTE:

If an audio file is being played, its name and player controls are displayed at the bottom of the screen. Touch the area to open the playback screen.

# Setting a Song as the Default Ringtone

The song will be used as the ringtone for all incoming calls, except those from contacts to whom you have assigned special

ringtones (see <u>Set a Ringtone for a Contact</u>).

# NOTE:

If you are in the playback screen, touch to return to the music library.

- 2. Touch  $\blacksquare$  next to a song in any list.
- 3. In the menu that opens, touch **Set as ringtone**.

NOTE:

If the song is being played and you're in the playback screen, you can touch **> Set as ringtone**.

# **Playing Music**

Touch a song in the music library to listen to it. Touch the bottom of the screen to open the following playback screen.





Number	Function	
1	Return to the music library.	
2	Album artwork. Swipe left to see lyrics (if available) and right the current playlist.	
3	Check the track information.	
4	Toggle repeat mode: sequential (no repeat), repeat the current track, or repeat the current playlist.	
5	Playback control: Skip songs or pause and resume playback. Drag the progress bar to jump to any part of the track.	
6	Turn on or off shuffle.	
7	Add the track to the Favorites playlist.	
8	Share the track.	
9	Track name, artist, and album information.	
10	Access additional options. You can trim the song, set the song as ringtone, etc.	

# Managing Playlists

Create playlists to organize your music files into sets of songs, so that you can play the songs you like in the order you prefer.

• Touch = > Add to next to a song to add it to a playlist or create a new playlist.

- Touch <sup>III</sup> > Delete next to a playlist to delete the playlist.
- Touch 
   Rename next to a playlist to rename the playlist.
- Touch a playlist to view its content. You can touch and hold a song to select multiple songs for removal from the playlist.

## FM Radio

With the FM radio, you can search for radio channels, listen to them, and save them on your phone. Note that the quality of the radio broadcast depends on the coverage of the radio station in your area. The wired headset works as an antenna, so always connect the headset when using the radio. When you receive an incoming call while listening to the radio, the radio will be turned off.

# **Scanning and Saving Channels**

- Plug in a wired headset and touch the Home key > Image > FM Radio.
- Touch I > Scan. Your phone scans for all available channels and saves them to the channel list.

-or-

Touch  $\bigcirc$  to scan and save all channels, and also you can Check **Keep favorite** to keep your favorite channels unlosted.

<sup>124</sup> 

3. Touch  $\blacksquare$  > All channels to view all the channels.

NOTE:

Touch  $\,\,+\,$  to manually add a channel frequency to the  $\mbox{All}$  channels list.

Touch O behind the channel to set it as your favorite.

## Listening to FM Radio

- Plug in a wired headset and touch the Home key > Image > FM Radio.
- 2. Touch **E** > **All channels** and touch to select a channel.

NOTE:

Touch 🍽 or 🛤 switch to next channel. Touch



# More Apps

## **Calculator**

Touch the **Home** key > (a) > **Calculator** to use the phone's convenient built-in calculator for some basic as well as advanced mathematical equations. Touch <sup>(2)</sup> to calculate tips.

#### NOTE:

Slide left while holding the phone upright, or hold the phone on its side, to access advanced buttons.

## Clock

Touch the **Home** key > (1) > **Clock**. The **Clock** app allows you to check local time in places around the world, set alarms, and use timers.

#### Set a New Alarm

- 1. Touch the O tab in the **Clock** app.
- Touch an existing alarm to configure it, or touch 
   the bottom of the screen to create a new alarm.
- 3. Set up the alarm options, such as time, alarm days, snooze, and alarm ringtone.
- 4. Touch **SAVE** to save and exit.

NOTES:

- To enable or disable existing alarms directly, just slide the switches on the right side.
- Touch in the tab to configure alarm settings, including ringtone volume, vibration, alarm duration, volume crescendo, and alarm in silent mode.

## **Check World Time**

Touch the tab in the **Clock** app to check local time around the world.

Touch 🔨 at the bottom to add a new city or country.

## Use the Stopwatch and Countdown

Touch the  $\bigcirc$  or  $\boxtimes$  tab in the **Clock** app to use the stopwatch or the countdown timer.

Stopwatch allows you to record lap times (20 laps at most), while countdown allows you to set a time and count down to zero.

## **Downloads**

The **Downloads** app keeps a record of the files you have downloaded using apps such as **Chrome** or **Email**.

Touch the **Home** key > (10) > **Downloads** to check the record.

- Touch a file to open it with the appropriate application.
- Touch and hold a file to delete or share it.



## **File Manager**

Quickly access all of your images, videos, audio clips, and other types of files on your phone storage and the microSDXC card.

Touch the **Home** key > (19) > **File Manager**. You can touch to find the file you need by category, or touch or to browse folders and files on the phone storage or the microSDXC card.

- Touch folders and files to access stored items.
- Touch and hold an item to access option icons such as Copy, Move, Share, or Delete.
- To copy or move an item, navigate to a new location and touch **PASTE**.
- Touch + to create a new folder in the current directory.

## **Mi-Moment**

Touch the **Home** key > (a) > **Mi-Moment** to create, view and manage your notes. You can add audios, pictures, videos and other types of files to your notes, and store the notes in different folders.

#### NOTE:

Touch **\*** > **Settings** to set up a lock password. You can lock your notes with the password to protect your personal information.



## **Sound Recorder**

Sound Recorder enables you to record voice memos and listen to them whenever you like.

## **Record a Voice Memo**

- 1. Touch the Home key > 🕮 > Sound Recorder.
- - ▶ Touch (1) / (3) to pause or continue the recording.
  - Touch imes to cancel the recording.
- 3. Touch **t** to stop recording. The memo is automatically saved.

If you don't want to save the memo after recording it, touch  $\widehat{\blacksquare}$  > **OK** to delete it.

## Play a Voice Memo

## To play a memo you just recorded:

Touch let at the bottom of the screen.

## To play any saved memo:

- Touch at the top right of the screen to see all recordings.
- 2. Touch the title of a memo to play it.



## NOTE:

You can also touch is next to a memo to delete, rename, share, trim it, check its file information, add a tag, or set it as your phone ringtone.

## Task Manager

Touch the **Home** key > (a) > **Task Manager** to view or stop applications.

- Touch a task in the **TASKS** tab to check the details of the application or force it to stop.
- Touch the **APPS** tab to manage all the apps on your phone.
- Touch the **RESOURCES** tab to view the real-time use of the system resources (CPU, RAM and storages).

## **Voice Dialer**

Voice Dialer is speech recognition software. You can use it to dial a phone number in your contacts, open menus or launch phone functions.

- 1. Touch the **Home** key > (1) > **Voice Dialer**.
- 2. When you see "Listening", follow the onscreen examples to speak "Call...", "Dial...", or "Open..." to make phone calls or open phone menus and applications.

## **Google Apps**

Open the Google apps to use Google services.

#### NOTE:

Some contents or Google services may not be available in your region.

- Chrome: Use the Chrome app to browse the Internet and get your bookmarks, browsing history, and more synced with your Google account.
- Drive: Store files on Google servers for free after you sign in to your Google account. You can access them on your computers, your phones and other devices, share them, or collaborate with others.
- Gmail: Send and receive emails via your Gmail account or other personal email accounts.
- **Google:** Use Google search or get information when you need it with Google Now.
- Google+: Socialize with friends on the Google+ online community.
- Hangouts: Chat with Google+ friends or send text or multimedia messages.
- Maps: Find your place and find your way in the world.
- Photos: Manage photos on the phone and your Google account.
- Play Movies & TV: Purchase, download and watch the

latest and your favorite movies and TV shows.

- Play Music: Play music on the phone and on your Google account.
- Play Store: Buy and download apps, games, and other content from the Google Play Store.
- Play Games: With Google Play Games Services, you can build a range of features into your Android apps, including leader boards, achievements, multiplayer game play, cloud storage, and Google+ sign-in.
- **Play Books:** With Google Play Books, you can read your favorite books charged or free with you on the go and personalize your reading experience.
- Play Newsstand: With Google Play Newsstand, discover more of the news you care about on your Phone. Enjoy breaking news and in-depth articles featuring audio, video and more. With hundreds of premier publishers from sports, business, cooking, entertainment, fashion and more it's all there, easy to follow, read, and share.
- Voice Search: Search for information with your voice.
- YouTube: Watch video clips from YouTube.com, or upload your own and share with the world.

## Settings

Touch the **Home** key > (1) > **Settings**. The **Settings** app contains most of the tools for customizing and configuring your phone.

# **General Settings**

## **Airplane Mode**

Touch the **Home** key > (1) > **Settings** and slide the switch beside **Airplane mode** to turn airplane mode on or off. All the phone's radios that transmit voice or data are turned off when airplane mode is on.

#### Wi-Fi

Touch the **Home** key > (1) > **Settings** > **Wi-Fi**. You can turn Wi-Fi on or off and configure your Wi-Fi connections. See <u>Connecting to Wi-Fi</u>.

#### Bluetooth

Touch the **Home** key > (1) > **Settings** > **Bluetooth**. You can turn Bluetooth on or off and configure your Bluetooth connections. See <u>Connecting to Bluetooth Devices</u>.



#### **Mobile Networks**

Touch the **Home** key > (1) > **Settings** > **Mobile networks** to control mobile data use, set access point names, or select network types. See <u>Connecting to Mobile Networks</u>.

#### Mobile hotspot

Touch the **Home** key > (IIII) > **Settings** > **Mobile hotspot** to allow your phone to be used as a mobile hotspot for up to 10 devices using your phone's data connection. If using this service, you should secure the connection to deny unauthorized access. This service consumes battery power and increases your data usage.

#### **Sound & Notifications**

Touch the **Home** key > (a) > **Settings** > **Sound & notifications**. You can adjust different types of volume (see <u>Adjusting Volume</u>), toggle sound, vibration and mute (see <u>Switching to Silent Mode</u>), set up ringtone and notification sound (see <u>Changing Ringtone and Notification Sound</u>), select system sounds (see <u>Turning On/Off System Sounds</u>), or control notification display.

## Display

Touch the **Home** key > (1) > **Settings** > **Display** to configure the following options.

• Brightness level: Set the brightness of the display.

- Adaptive brightness: Automatically adjust screen brightness.
- Wallpaper: Select a background image or animation for the home screen and the lock screen.
- Sleep: Set the length of time of inactivity before the screen turns off automatically.
- **Daydream:** Manage the Daydream function. When Daydream is enabled, photos or animations will be displayed as a screensaver.
- Font size: Set the font size of the text on the screen.
- Auto-rotate screen: Select whether the screen contents should rotate when the phone is rotated.
- Pulse notification light: Flash the indicator light to notify you of missed calls, new messages, and other events.
- Navigation key light duration: This feature lets you control the backlight of the touch keys (the Home key, the Back key, and the Recent apps key). Choose one of the following options to set the backlight duration.
  - Always off: Turn off the touch keys backlight.
  - Always on: Keep the touch keys backlight on while the screen is turned on.
  - 2 seconds / 5 seconds: The touch keys light for 2 or 5 seconds each time you touch the screen or touch keys while the screen is turned on.
  - Auto: Let your phone turn on or off the touch keys backlight automatically.

## **Date and Time**

Set date, time, time zone, and how date and time are displayed. You can also use network-provided data. See <u>Setting the Date</u> <u>and Time</u>.

## Language and Input

- Language: Select a language and region for your system.
- Spell checker: Use Google Spell Checker to check for spelling errors when entering text.
- **Personal dictionary:** Add new words to the phone's dictionary or remove words from the dictionary. The words you add are used for spelling check and word suggestion.
- Keyboard & input methods: Configure text input settings. See <u>Change Input Methods</u>.
- Voice input: Select and configure voice input services.
- Text-to-speech output:
  - **Preferred engine:** Select the speech synthesis engine you want to use or change its settings.
  - Speech rate: Select how quickly you want the synthesizer to speak.
  - **Pitch:** Adjust the tone of the synthesizer voice.
  - Listen to an example: Play a brief sample of the speech synthesizer, using your current settings.
  - Default language status: Check whether the

text-to-speech output feature supports the current system language.

• **Pointer speed:** Select how fast the pointer/mouse should scroll when you connect the phone to a trackpad or mouse accessory.

## **Wireless and Networks**

## Data Usage

Touch the **Home** key > (1) > Settings > Data usage to manage mobile data use.

Touch the **Mobile data** or **Set mobile data limit** switches to turn on or off mobile data or mobile data limit.

You can check how much data has been used during the time cycle you set, set mobile data limit and warning (after some data has been used), see what apps have been using mobile data, or restrict background data for individual apps.

#### NOTE:

The data usage is measured by your phone, and your carrier's data usage accounting may differ.

## VPN

Touch the **Home** key > (1) > **Settings** > **More** > **VPN** to set up and connect to virtual private networks. See <u>Connecting to</u> <u>Virtual Private Networks</u>.

## **Default SMS App**

Touch the **Home** key > (19) > **Settings** > **More** > **Default SMS app** to choose the preferred application for sending and receiving messages.

## **USB** tethering

You can access the Internet on your computer via the USB tethering feature of your phone. The feature needs data connection on a mobile network and may result in data charges.

Touch the Home key > (a) > Settings > More > USB tethering. Slide the switch to turn on the feature.

#### **Bluetooth tethering**

If your device such as a computer can obtain an Internet

connection via Bluetooth, you can configure your phone to share

its mobile data connection with the devices.

Touch the **Home** key > (1) > **Settings** > **More** > **Bluetooth tethering**. Slide the switch to turn on the feature.

## **Device**

#### Storage

Touch the **Home** key > (1) > **Settings** > **Storage** to view memory information of the internal phone storage and the microSDXC card.

<sup>138</sup> 

The **Storage** settings menu lets you check memory information for your microSDXC card and internal storage.

You can choose the default location for new data, such as files downloaded, photos captured, and voice recorded. Touch **Save location** and select **Phone** or **SD card** to store items in the phone storage or the installed microSDXC card.

Touch **Unmount SD card** to unmount the microSDXC card from your phone so that you can safely remove the card while the phone is on. Touch **Erase SD card** to delete all data on the microSDXC card.

#### **Power Manager**

Touch the **Home** key > (IIII) > **Settings** > **Power manager**. The **Power manager** menu allows you to view the battery level, check what has been using the battery, and enable power saving modes.

- **BATTERY:** View the battery level and available time for different applications such as voice call, music playing, or web browsing.
- USAGE: Check the battery status and what has been using the battery.

#### NOTE:

You can touch an app to adjust its settings in order to save battery life. For example, touch **Screen > DISPLAY** to change screen brightness and sleep.

• MODE: Enable the power saving mode you need. Touch a



mode to get its detailed information.

## Apps

See apps installed on your phone and manage them. Touch an app in the **DOWNLOADED**, **RUNNING**, or **ALL** tab to see its information. You can stop or disable/uninstall the app, or clear data and cache.

## NOTE:

Not all applications can be uninstalled.

#### Users

You can share your phone with other people by creating additional user accounts. Each user with a separate account has his/her own storage space, wallpaper, screen lock and so on. Users can also adjust device settings like Wi-Fi that affect everyone and update apps for all other users.

#### Touch the Home key > @ > Settings > Users.

By default, a Guest account is available for anyone who needs to use your phone temporarily. You can create three more user accounts.

## **Connect to PC**

Touch the **Home** key > (a) > **Settings** > **Connect to PC** to select your USB connection type between your phone and PC. See <u>Connecting to Your Computer via USB</u>.

## **Call Settings**

Touch the **Home** key > (1) > Settings > Call settings to configure the call options. See <u>Adjusting Your Call Settings</u>.

## **Personal**

## **Navigation Key**

Touch the **Home** key > (1) > Settings > Navigation key to swap the positions of the **Back** key and the **Recent apps** key. Select an option to make the switch.

#### Location

Touch the **Home** key > (1) > **Settings** > **Location** to manage location services, which help your phone and apps determine your location. To use location-related applications, such as finding your location on Google Maps, you must have location services turned on on your phone.

- 1. Slide the switch at the top to turn location services on or off.
- 2. When location is enabled, touch **Mode** to select location sources you want to use.
  - High accuracy: Get accurate location using both GPS and Wi-Fi as well as mobile networks.
  - Battery saving: Use only Wi-Fi and mobile networks to get your approximate location. This will drain less power from your battery than using GPS.

- ▶ Device only: Use GPS to pinpoint your location.
- ► Accelerated location: Use Qualcomm<sup>®</sup> IZat<sup>TM</sup> hardware accelerated location to determine your location.

#### Security

Touch the **Home** key > (19) > **Settings** > **Security** to configure options that help keep your phone and data safe.

- Screen lock: Disable the screen lock or enable it with long press, pattern, PIN, or password. See <u>Protecting Your</u> <u>Phone With Screen Locks</u>.
- Owner info: Set the text that you may display on the lock screen.
- Smart Lock: Keep the phone unlocked when connected to trusted devices, in trusted places, or unlocked by trusted faces or voice, or unlocked when your phone is being carried on the body.
- Encrypt phone: Encrypt your data on the phone to protect your privacy. See <u>Protecting Your Phone With Encryption</u>.
- Make passwords visible: Show the passwords as you type it.
- **Device administrators:** View or deactivate apps you have authorized to be device administrators.
- Unknown sources: Check this option to permit installation of apps from sources other than the Play Store.
- Storage type: Check the credential storage type.
- Trusted credentials: Display trusted CA certificates.



- Install from SD card: Install certificates from the phone storage or the microSDXC card.
- Clear credentials: Delete all certificates.
- Trust agents: View or deactivate trust agents.
- Screen pinning: Keep a screen of your choice in view, so that others cannot switch to other apps and access your personal information. Touch this option to see how it works. See <u>Protecting Your Phone With Screen Pinning</u>.
- Apps with usage access: Turn on or off some apps' access to your phone usage information.

#### **Backup and Reset**

Touch the **Home** key > (1) > **Settings** > **Backup & reset** to manage data backup and restoration options and to reset the phone to factory status.

- Back up my data: Back up app data, Wi-Fi passwords, and other settings to Google servers after you sign in to your Google account.
- Backup account: Set the Google account that the data is backed up to.
- Automatic restore: Restore previously backed up settings and data when you reinstall an app.
- Factory data reset: Reset your phone to factory default settings. All your data on the phone's internal storage will be erased during the process. You can also erase the data on the microSDXC card during the process.

### Accounts

Manage your accounts and synchronization. Touch **Accounts** to sign in to or create accounts on your phone. Touch an account type to see that type of accounts you have added and adjust the accounts settings.

## System

## Accessibility

Touch the **Home** key > (1) > **Settings** > **Accessibility** to configure accessibility plug-ins and services on your phone, such as using **Color inversion** or **Large text** for users with sight problems.

## Printing

Touch the **Home** key > (1) > **Settings** > **Printing** to manage Google Cloud Print service or other printer plug-ins installed from the Google Play Store or your printer manufacturer.

## About Phone

Touch the **Home** key > (a) > **Settings** > **About phone** to view the phone status, legal information and other information.

# Troubleshooting

If you encounter problems while using the phone, or if it performs abnormally, you can refer to the chart below. If your particular problem cannot be resolved using the information in the chart, contact the dealer where you purchased the phone.

Problem	Possible causes	Possible solution
Poor reception	The network signal is too weak at your current location, for example, in a basement or near a tall building, because wireless transmissions cannot effectively reach it.	Move to a location where the network signal can be properly received.
	The network is busy at the current time (for example, during peak times, there may be too much network traffic to handle additional calls).	Avoid using the phone at such times, or try again after waiting a short time.
	You are too far away from a base station for your service provider.	You can request a service area map from your service provider.
Echo or noise	Poor network link quality on the part of your service provider.	End the call and dial again. You may be switched to a better-quality network link or phone line.

Problem	Possible causes	Possible solution
	Poor local telephone line quality.	End the call and dial again. You may be switched to a better-quality network link or phone line.
Unable to select certain features	Your service provider does not support these features, or you have not applied for services that provide these features.	Contact your service provider.
Battery not charging	The battery or battery charger is damaged.	Contact the dealer.
	The phone's temperature is below 0°C or higher than 45 °C.	Adjust the battery charging environment to avoid extremes of temperature.
	Poor contact between the battery and charger.	Check all connectors to ensure that all connections have been properly made.
Shortened standby time	The standby time is related to your service provider system configuration. The same phone used with different service providers' systems will not provide exactly the same length of standby time.	If you are located in an area where signaling is weak, temporarily power off the phone.
	The battery is depleted. In high temperature environments, battery life will be shortened.	Use a new battery.

Problem	Possible causes	Possible solution
	If you are not able to connect to the network, the phone will continue to send out signals as it attempts to locate a base station. Doing so consumes battery power and will consequently shorten standby time.	Change your location to one where the network is accessible, or temporarily turn off your phone.
Cannot turn your phone on	Battery power has been depleted.	Recharge the phone's battery.
4G LTE nano-SIM card error	4G LTE nano-SIM card malfunction or damage.	Take the 4G LTE nano-SIM card to your service provider for testing.
	4G LTE nano-SIM card inserted improperly.	Insert the nano-SIM card properly.
	Debris on the 4G LTE card contacts.	Use a soft, dry cloth to clean the nano-SIM card contacts.
Unable to connect to the	4G LTE card invalid.	Contact your service provider.
network	You are not within the network's service area.	Check the service area with your service provider.
	Poor signal.	Move to an open space, or if you are inside a building, move closer to a window.
Phone crashes, reboots, freeze, or cannot be powered on	Some third-party software is not compatible with your phone.	Reset the phone to factory status.

Problem	Possible causes	Possible solution
		Uninstall the software that may cause the problem.
		Upgrade the phone software.