your guide to

from Orange

Monte Carlo

LEGAL INFORMATION

Copyright © 2011 ZTE CORPORATION.

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

Trademarks

Orange and the Orange logo are trademarks of Orange.

The $Bluetooth^{\circ}$ trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such trademarks by ZTE Corporation is under license. Other trademarks and trade names are the property of their respective owners.

Version No.: R1.0

Edition Time: 20110616

Manual No.: 079584503360

Dolby Mobile

Trademark Acknowledgement Statement for Marketing Materials

Dolby and the double-D symbol are registered trademarks of Dolby Laboratories.

Notice

The information contained in this manual is subject to change without notice. This handbook has been designed with the utmost care to ensure the accuracy of its content. However, all statements, information and recommendations contained therein do not constitute a warranty of any kind, either expressed or implied. Please refer to chapter "the boring safety section you really should read" to be sure to use your phone properly and safely.

Disclaimer

All content and services accessible through this device belong to third parties and are protected by copyright, patents, trademarks and/or other intellectual property laws. Such content and services are provided solely for your personal use and not for commercial use. You may not use them without the expressed permission of the content owner or service provider. Although this does not limit the foregoing, unless expressly authorized by the content owner or service provider concerned, you may not modify, copy, republish, upload, post, transmit, translate, sell, create derivative works, distribute or exploit in any manner or medium any content or services displayed through this device.

THE CONTENT AND SERVICES OF THIRD PARTIES ARE PROVIDED "AS IS". TO THE FULLEST EXTENT PERMITTED BY LOCAL LAW. ZTE CORPORATION DOES NOT WARRANT THE CONTENT OR SERVICES PROVIDED, EITHER EXPRESSED OR IMPLIED, FOR ANY PURPOSE, ZTE CORPORATION EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO, THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. 7TF CORPORATION DOES NOT GUARANTEE THE ACCURACY. VALIDITY, TIMELINESS, LEGALITY, OR COMPLETENESS OF THE CONTENT OR SERVICES PROVIDED THROUGH THIS DEVCE AND UNDER NO. CIRCUMSTANCES SHALL ZTE CORPORATION BE LIABLE. INCLUDING NEGLIGENCE, WHETHER UNDER CONTRACT OR TORT, FOR ANY DIRECT. INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, ATTORNEY FEES, EXPENSES, OR ANY OTHER DAMAGES ARISING FROM, OR IN CONNECTION WITH, THE INFORMATION CONTAINED IN, OR AS A RESULT OF THE USE OF ANY CONTENT OR SERVICE BY YOU OR ANY THIRD PARTY, EVEN IF ZTE CORPORATION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. TO THE EXTENT SOME STATES DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES OR THE LIMITATION OF LEGAL RIGHTS.

OF THE CONSUMER. IT IS POSSIBLE THAT THESE EXCLUSIONS AND

LIMITATIONS DO NOT APPLY.

The services of third parties may be suspended or discontinued at any time, and ZTE CORPORATION does not guarantee that any content or service will remain available for a certain period. The content and services are provided by others via

networks and transmission equipment outside the control of ZTE CORPORATION. Without limiting the generality of this disclaimer, ZTE CORPORATION expressly disclaims liability for any interruption or suspension of any content or service provided through this device. ZTE CORPORATION is not responsible for customer service related to content and services. Any question or request for service on the content or services must be addressed directly to the respective content and services providers.

Downloading content without permission may infringe copyright and/or intellectual property right of the artist. ZTE CORPORATION shall not be held liable for offenses committed on copyright and intellectual property right resulting from downloading by the user.

what's in it for you...

let's get started	16
the boring safety section you really should read	17
general safety	
radio frequency (RF) exposure	18
understanding 'Specific Absorption Rate' (SAR)	19
limiting your exposure to radio Frequency (RF)	19
antennae and radio waves	20
National Restrictions on Wi-Fi Usage	21
regulatory information	22
driving and operating machinery: avoiding distraction	22
warning: air bag danger	23
looking after your phone – and yourself	23
keep children safe	24
avoid demagnetization	24
prevent electrostatic discharge	25
warning: seizures and blackouts	25
avoid repetitive strain injury (RSI)	25
making emergency calls	25
don't damage your hearing	

phone getting warm?	26
electrical safety	26
using the right accessories	
installing in a car	
faulty or damaged equipment	27
interference	27
pacemakers	27
hearing aids	
medical devices	28
hospitals	28
aircraft	28
vehicles	29
explosive environments	29
petrol stations and other explosive atmospheres	29
blasting areas	29
getting to know your phone	30
the keys explained	
starting up	
installing the SIM/microSD card and battery	
charging the battery	
c. a. g g a . c catter,	

switching your phone on/off	35
selecting your phone settings	
switching to sleep mode	36
waking up your phone	37
getting around Monte Carlo	37
let your fingers take you anywhere	37
welcome to your home screen	38
removing things from your Home Screen	40
status symbols: icons explained	41
applications and settings - what does what?	44
how to make calls	51
calling from the dialler	51
calling from your contacts	52
calling from your call history	52
calling from a text	53
using speed dial	53
how to receive calls	54
answering a call	54
rejecting a call	54
muting a call	54

putting a call on hold	55
turning the speakerphone on/off	55
ending a call	55
adjusting your call settings	
making and using contacts	57
importing and exporting contacts	
Sharing Contacts Information	
creating a contact	
adding a contact to favorites	
searching for a contact	
creating a new group	
entering text	61
android keyboard	
XT9 text input	
choosing touch input settings	66
sending and receiving messages	67
sending a text	
sending an MMS	
managing messages and their 'threads'	

message settings	69
emailing	72
creating an email account	
receiving emails	
writing and sending emails	73
replying to and forwarding emails	74
choosing your email settings	75
getting connected to the Internet	76
adding a new GPRS/EDGE/3G connection	
turning on Wi-Fi	
adding a Wi-Fi network	78
checking the Wi-Fi network status	78
using the phone as a modem	79
enabling the phone as a modem	79
disabling the modem function	80
using the phone as a wi-fi hotspot	80
enabling the wi-fi hotspot	81
disabling the wi-fi hotspot	81

browsing the Internet	82
browsing options	
browser settings	
opening links in web pages	
using bookmarks	
edit a bookmark	
delete a bookmark	
going wireless with Bluetooth®	87
turning Bluetooth on/off	
making your phone visible	
change your phone's name	
hook up with another Bluetooth device	
making the most of multimedia	90
taking pictures with your camera	
adjusting camera settings	90
shooting video with your camcorder	91
adjusting your video settings	
listening to your FM radio	
playing your music	
creating playlists	

managing playlists	95
setting a song as ringtone	
playing your videos	
opening your gallery	
making memorable memos	
using your Google™ applications	99
Gmail	
Using Google Calendar	100
Places	
Latitude	101
sorting out your phone settings	102
sorting out your phone settingssetting time and date	
setting time and date	102
setting time and datechanging display settings	102 102
setting time and date changing display settingssound settings	102 103
setting time and datechanging display settingssound settingslanguage settings	
setting time and datechanging display settingssound settingslanguage settingsmobile network services	
setting time and date	
setting time and datechanging display settingssound settingslanguage settingsmobile network services	

switching networks	106
setting Access Point Names	
security settings	
protecting your phone with a screen unlock pattern	
protecting your phone with a PIN or password	108
disabling screen unlock security	109
protecting your SIM with a PIN	
setting up credential storage	111
managing your device memory	111
privacy: reset to factory settings	112
managing applications and their settings	112
installing an application	113
managing other settings	114
search settings	114
voice interaction	114
other applications	115
alarms	
Docs To Go	115
task manager	115
note pad	116

calculator	116
Orange Plus	116
stopwatch	117
specifications	118
Declaration of RoHS Compliance	119
Disposal of Your Old Appliance	120
Limited warranty statement	121
Cleaning and Maintenance	125
EC DECLARATION OF CONFORMITY	127

let's get started

Thanks for choosing the Monte Carlo from Orange. If you'd like your new phone to live a long and fruitful life, please read this guide carefully and keep it for future reference. You never know when you might need it.

And don't worry if the pictures we use to demonstrate your phone's functions look a little different from what you see on its screen. It's the functions they show that matter.

and get in touch with your phone

Another thing you'll notice is that we talk about 'tapping' a lot. That's because your Monte Carlo has a touch-screen, which means a simple tap with your finger can both select and open a file. Indeed, you can 'slide' switches on the screen, 'hold' files until a list of shortcuts pops up, casually 'flick' from page to page, 'drag' items into the bin with a well-aimed index finger, or even pinch with two fingers to zoom a web page or a photo. It's a joy to use.

And that's exactly what this guide is about: making sure the relationship with your new phone is a pleasure from day one. So please read on and enjoy...

the boring safety section you really should read...

general safety

It may not be the most exciting read but it's for your safety, and those around you. There are certain things you shouldn't do with you phone and some of them might come as a bit of surprise. So please have a look at the following dos and don'ts...

	Don't make or receive handheld calls while driving. And never text while driving.	A	Don't use at petrol stations.
İ -8	Keep your phone at least 15mm away from your ear or body while making calls.		Your phone may produce a bright or flashing light.
	Small parts may cause a choking.	B	Don't dispose of your phone in fire.
风景	Your phone can produce a loud sound.	E	Avoid contact with anything magnetic.

	Keep away from pacemakers and other electronic medical devices.		Avoid extreme temperatures.
A	Switch off when asked to in hospitals and medical facilities.		Avoid contact with liquids. Keep your phone dry.
	Switch off when told to in aircrafts and airports.	=	Don't take your phone apart.
**	Switch off when near explosive materials or liquids.	© X	Only use approved accessories.
ф.	Don't rely on your phone for emergency communications.		

radio frequency (RF) exposure

Your phone is a radio transmitter and a receiver. When switched on, it receives and transmits RF energy. When you make or receive a call, the phone controls the RF energy level – using only as much as it needs to make a connection to the network.

understanding 'Specific Absorption Rate' (SAR)

The Monte Carlo is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed ICNIRP, an independent body of scientific experts. The guidelines include safety margins so that nobody, regardless of age and health, is at risk.

The guidelines use a unit of measurement known as Specific Absorption Rate (SAR). The SAR limit for mobile devices is 2W/kg and the highest SAR value for the Monte Carlo when tested (in accordance with EN 50360, EN 62209-1 and EN 62209-2) by the ear was 1.10 W/kg.

SAR is measured when the phone is at its highest transmitting power. However, the actual SAR of your phone is usually below the test level. This is because your phone is designed to use the minimum power necessary to make and receive calls.

limiting your exposure to radio Frequency (RF)

Please remember that, however you use your phone, RF exposure guidelines say that you should keep it 15mm away from your body while using the phone. Otherwise your RF exposure could exceed recommended limits.

If you want to limit your exposure to RF, the World Health Organization (WHO) gives the following advice:

'Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using hands-free devices to keep mobile phones away from the head and body.'

You can find more information about this from the WHO fact sheet N°193 on the WHO home page at http://www.who.int/mediacentre/factsheets/fs193/en.

antennae and radio waves

Radio waves are sent and received via antennae. The main antenna in the Monte Carlo is low down in the phone, near the microphone into which you speak...



Do not touch the antenna unnecessarily.

So here's how to hold your phone...



National Restrictions on Wi-Fi Usage

2400.0-2483.5 MHz

Country	Restrictions	Reason/remark
Bulgaria		General authorization required for outdoor use and public service
	10mW e.i.r.p. within	Military Radiolocation use. Refarming of the 2.4 GHz band has been ongoing in recent years to allow current relaxed regulation. Full implementation planned 2012.

Country	Restrictions	Reason/remark
Italy		If used outside of own premises, general authorization is required.
Luxembourg	None	General authorization required for network and service supply (not for spectrum).
Norway	Implemented	This subsection does not apply for the geographical area within a radius of 20 km from the centre of Ny-Ålesund.
Russian Federation		Only for indoor applications.

Note: Please don't use the product outdoors in France.

regulatory information

Please find the section Declaration of RoHS Compliance and CE DOC in the end of this manual.

driving and operating machinery: avoiding distraction

Using your phone while driving or operating machinery (even with a legal hands-free kit) can cause distraction and accidents.

Make sure you obey local laws and regulations on the use of wireless devices while driving or operating machinery.

warning: air bag danger

When driving, don't place your phone on anywhere in or on the air bag deployment area.

Put it somewhere safe before setting off.

looking after your phone - and yourself

You're responsible for how you use your phone and any consequences of that use. Most of the following are common sense, but it's really important to read these dos and don'ts, just in case there's something you didn't know...

- Switch off your phone wherever its use is prohibited.
- Treat your phone and its accessories with care keeping them in a clean, dust-free place.
- Don't expose your phone or accessories to open flames or lit tobacco products.
- Don't expose your phone or its accessories to liquid, moisture or high humidity.
- Don't drop, throw or try to bend your phone or its accessories.

- Don't use harsh chemicals, cleaning solvents, or aerosols to clean your phone
 or its accessories.
- Don't paint your phone or its accessories.
- Don't try to mend or take apart your phone. That's a job for qualified technicians.
- Don't expose your phone or its accessories to extreme temperatures of less than -5 and more than 50 degrees Celsius.
- Don't put your phone in a back pocket as it could break when you sit down.
- Please check local laws and regulations before disposing of electronic products.

keep children safe

Your phone contains small parts with sharp edges that could cause an injury or may become detached and create a choking hazard.

So don't leave your phone and its accessories within the reach of small children or allow them to play with them. They could hurt themselves, others, or damage the phone.

avoid demagnetization

If your phone is close to – or placed on – electronic devices or magnetic media for a long time, it could get damaged by being demagnetized.

prevent electrostatic discharge

When the phone's back cover is off (for example, when you're inserting your SIM) don't touch the SIM card's metal connectors. And try not to touch the antenna either.

warning: seizures and blackouts

The phone can produce a bright or flashing light which can cause seizures or blackouts in some people.

avoid repetitive strain injury (RSI)

To reduce the risk of RSI when texting or playing games on your phone:

- · Don't grip the phone too tightly.
- Press buttons lightly.
- Use the special features, such as message templates and predictive text that reduce the need to press buttons.
- Give yourself and your fingers regular breaks.

making emergency calls

This phone operates using radio signals and cannot guarantee connection in all conditions. Therefore, you must never rely solely on your phone for emergency communications.

don't damage your hearing

Your phone can produce loud noises which could damage your hearing. In particular, remember to lower the volume before using headphones, Bluetooth® stereo headsets or other audio devices.

phone getting warm?

Your phone may become warm (but should not become hot) while charging or being used. Don't worry as this is normal.

electrical safety

using the right accessories

Only use approved accessories for the Monte Carlo. Connecting it with incompatible products or accessories is likely to damage it. And when the back cover is off, take care not to touch or allow metal objects, such as coins or key rings, to contact the battery terminals. It could cause a short circuit.

installing in a car

Seek professional advice when connecting your phone to a vehicle's electrical system.

faulty or damaged equipment

Don't try to mend or take apart your phone or its accessories. Leave that to the professionals. Only qualified technicians from an authorised service centre should service or repair them.

If your phone (or its accessories) has been submerged in water, punctured, or dropped from a height, don't use it. Take it to an authorised service centre.

interference

Care must be taken when using your phone in close proximity to medical devices, such as pacemakers and hearing aids. It can also interfere with navigational systems in planes and even car electronics...

pacemakers

Pacemaker manufacturers recommend a minimum distance of 15cm between phone and pacemaker. So, if you've got a pacemaker, use your phone on the ear furthest from your pacemaker (usually the right ear). And don't carry your phone in a breast pocket.

hearing aids

Your phone might interfere with hearing aids. The level of interference depends on the type of hearing aid and the distance between it and your phone. So increasing the distance between the two may help. If interference continues to be an issue for you or someone you know, a hearing aid manufacturer might be able to offer a solution.

medical devices

Please consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

hospitals

To prevent possible interference with sensitive medical equipment, switch off your phone when asked to do so in hospitals, clinics or healthcare facilities.

aircraft

Switch off your phone whenever you are instructed to do so by airport or airline staff.

Or, if allowed, switch your phone to 'Airplane mode' before boarding.

vehicles

Because of possible interference with electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a hands-free kit with an external antenna is fitted.

explosive environments

petrol stations and other explosive atmospheres

One tiny spark can cause a massive explosion. So please obey all signs and requests to turn off wireless devices, such as your phone.


Areas with potentially volatile or explosive atmospheres include fuelling areas, below deck on boats, chemical transfer/storage facilities, and places where the air contains chemicals or particles, such as grain, dust, or metal powders.


blasting areas

Switch off your mobile phone or wireless device when in or near blasting areas, such as quarries. Not just because of the danger from explosives, but also because of the interference your phone may cause with blasting operations.

getting to know your phone

First, find out where everything is...

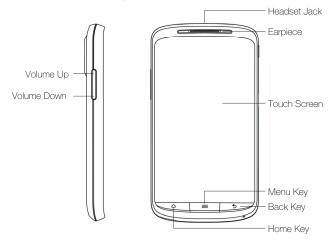

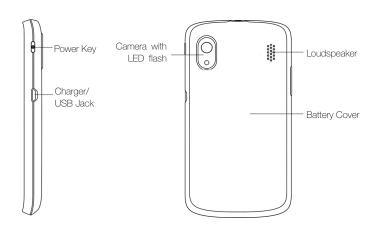

the keys explained

Next, see what everything does...

Key	Function	
Power Key	 Hold to switch the phone to silent or airplane mode, or power off. Press to switch your phone to Sleep mode. Press to wake up your phone. 	
Home Key	 Press to return to the Home Screen from any application or screen. Hold to see recently used applications. 	
Menu Key	Press to get the options on the current screen.	
Back Key	Press to go to the previous screen.	
Volume Keys	Press higher end of the key to turn the volume up and the lower end of the key to turn it down.	

starting up

Now you're ready to get your new phone working. Here's how...

installing the SIM/microSD card and battery

Switch off your phone before installing or replacing the battery, SIM, or memory card.

1. Remove the back cover like so...



2. Hold the SIM and slip it into the card holder.



3. Hold your microSD card and slide it in.



microSD logo is a trade mark of the SD Card Association.

 Insert the battery by aligning the gold contacts on the battery with the gold contacts in the battery compartment. Gently push down on the battery down until it clicks into place.



5. Press the cover gently back into place until you hear a click.

charging the battery

When you first get your new phone you'll need to charge the battery like this...

1. Connect the adapter to the charger jack.



- 2. Connect the charger to a standard AC wall outlet.
- 3. Disconnect the charger when the battery is fully charged.

switching your phone on/off

- 1. Make sure the SIM is in your device and the battery is charged.
- 2. Hold Power Key to switch on your phone.
- To switch it off, hold Power Key to get the phone options. Select Power off, and then tap OK.

selecting your phone settings

When you first switch on your new Monte Carlo (or if you've reset it to Factory Settings – as explained in sorting out your phone settings in this guide) you need to select some settings before you can use it.

- 1. In the welcome screen, change the display language if necessary and tap Start.
- 2. Configure the date & time settings and tap Next.
- Learn how to use the touch screen keyboard. Tap Skip or try the keyboards out and then tap Next.
- 4. Tap Skip or set up Mobile Mail on your phone and then tap Next.
- 5. Select how your phone access the Internet and tap Next.
- 6. Tap Finish.

switching to sleep mode

To save battery power, Sleep Mode suspends your device to a low-power-consumption state while the display is off. Your device also goes into Sleep Mode automatically when the display is automatically turned off after a certain period of time, which you can set in **Settings > Display > Screen timeout**. Press **Power Key** to switch to Sleep Mode.

waking up your phone

If your phone is in Sleep Mode, you can wake it up by...

- 1. Pressing Power Key to activate your screen display.
- 2. Drag the (a) icon to the right.

NOTE: If you have set an 'unlock pattern', or a PIN/password, for your phone (see sorting out your phone settings – security settings in this guide) you'll need to draw the pattern or enter the PIN/password to unlock your screen.

getting around Monte Carlo

Like the city it's named after, this is an exciting phone – so much to do and see, so much fun to be had. It's great for both work and play – especially when you know how to use it properly. Let us take you on a tour, so you can get the very best out of your Monte Carlo...

let your fingers take you anywhere

You can use finger gestures to control your phone. The controls on your touch screen change dynamically depending on the tasks you're performing.

- 1. Tap the buttons, icons, or applications to select items or to open applications.
- 2. Keep your finger on an item to see the available options.

- 3. Flick the screen to scroll up, down, left or right.
- 4. Point, drag and drop to move particular items across the screen into files etc.
- 5. Pinch with two fingers, or double-tap the screen, to zoom in/out on a web page or an image.

TOUCHPOINT: You can view the phone screen in portrait or landscape simply by holding it upright or turning it on its side.

welcome to your home screen

You choose what you have on your Home Screen.

Set your own wallpaper, add the widgets or application shortcuts you need, or remove them as you like.



enjoy more space with the screen extension

The Home Screen extends beyond the screen width, giving you loads more space to play with. Simply slide your finger to the left or right to see the extended Home Screen.

choose your wallpaper

- 1. Tap **Home Key** to return to the Home Screen.
- 2. Tap Menu Key and select Wallpaper.
- Select the wallpaper you want to use from Gallery, Live wallpaper, or Wallpaper.
- 4. Tap Save or Set wallpaper.

adding things to your Home Screen

- 1. Tap Home Key to return to the Home Screen.
- 2. Slide left or right to find a free space.
- 3. Tap Menu Key and select 💿.

You can also tap and hold the blank area of the Home Screen to get the **Add** to **Homescreen** menu.

4. Select a category and then the item you want to add to the Home Screen.

removing things from your Home Screen

- 1. Tap Home Key to return to the Home Screen.
- Tap and hold the item you want to delete until the icon appears on the screen.
- 3. Drag the item to iii.



status symbols: icons explained

Your Monte Carlo will tell you exactly what's going on by showing you simple icons. Here's what they mean...

† +	GPRS connected	žd	No signal
₩	GPRS in use	ш	Signal strength
th E	EDGE connected	×	Phone speaker off
¥	EDGE in use	.×	Phone microphone off
## ##	3G connected	=	No SIM installed
#	3G in use		GPS on
3G+	HSDPA connected	4	USB connected
3G+	HSDPA in use	9	Recording phone call
×	Battery flat		microSD card removed
	Battery very low	*	Preparing microSD card

	Battery low	\$	Connected to a Wi-Fi network
	Battery partially drained	Ü	Alarm set
	Battery full	(?	Wired microphone headset
5 5	Battery charging	*	Bluetooth on
Ð	Syncing	6	Speaker on
W	Vibrate mode	<u></u>	Problem with SMS/MMS delivery
*	Airplane mode	talk	New instant message
>	New mail	1	Upcoming event
Ü	New SMS/MMS/ voicemail	•	Music is playing
C)	New wap push message	<u>+</u>	Downloading data
M	New Gmail message	•	application installed successfully

×	Missed call	<u>†</u>	Sending data
C	Call in progress	3	USB tethering is on
G	Call on hold	(}-	Portable Wi-Fi hotspot is on
<i>C</i>	Call forwarding	(F)	New Wi-Fi network detected
(More (not displayed) notifications	Δ	Error or warning

using the notification panel

From the Notification Panel, you can see your calendar events, new messages, and current settings – such as call forwarding or call status. From here you can also open messages, reminders, etc. And this is how you do it...

Flick the status bar downwards.



TOUCHPOINT: You can also open the Notification Panel from the Home Screen by tapping **Menu Key > Notifications**.

applications and settings - what does what?

Your Monte Carlo has lots of functions. Tap to see the following. Note they may not be identical to your phone.

Applications	Benefit	
Alarm	Set alarms.	
App Shop Easily find, download and buy applications, gamestones to use on your phone from Orange App Sho		
Backup	Backup your contacts from your phone and SIM card.	
Calculator	Do basic calculation.	
Calendar	Schedule appointments and events.	
Call log	Check information of calls made, received, and missed.	
Camcorder Shoot video clips.		
Camera	Take some great pictures.	
Contacts	Keep contact details of friends and colleagues.	
Crazy Penguin Catapult OD	Play the game on your phone.	

Applications	Benefit	
Dialer	Dial a number.	
Docs To Go	View your documents.	
Downloads	Access your downloaded files.	
Email	Send and receive Emails on your phone.	
Filer	Manage files on your microSD card.	
FMRadio	Search, listen to and save radio channels.	
Gallery	Manage multimedia files.	
Games	Find, download, or buy games from Orange App Shop.	
Gestures Open applications by drawing designated gestures of Homescreen.		
Gmail Access your Gmail account and check email on you phone.		
Google Search	Search for information on the Internet, on your phone, or on the Android Market.	
Internet	Browse the Internet.	

Applications	Benefit	
Latitude	See your friends' locations and share yours with them via Google Maps Latitude.	
Mail	Use the mail function offered by Orange.	
Maps	Track your current location, view real-time traffic, and receive detailed directions to your destination.	
Maps	Always find your way with Orange.	
Market	Access useful applications and fun games to download.	
Media Share	Use your phone as a server and share your photos, music, and videos on the phone with other networked DLNA-certified devices.	
Messages	Open the Messages screen, where you can send and receive SMS and MMS messages.	
Messenger	Send instant messages to friends and contacts.	
Music	Browse your audio files and listen to them in Music player.	
Navigation	Find your way with Google Maps Navigation.	
News & Weather	Check out the latest news and weather forecast.	
Note pad	Create text notes.	

Applications	Benefit	
Orange Plus	Only appears on the screen if your SIM provides this function. Please contact Orange for more information.	
Orange Wednesdays	Get 2 for 1 cinema ticket vouchers, 2 for 1 pizzas at Pizza Express, plus free movie trailers, cinema locations, the latest film reviews and all other info you need to for watching a movie.	
Photo	Upload your photos to Orange's online album, where you can view, share and print them.	
Places	Find restaurants, ATMs, and other businesses or attractions near you.	
Ringtones	Find, download, or buy ringtones from Orange App Shop.	
Roller Rev 99 OD	Play the game on your phone.	
Settings	Adjust phone settings.	
Signal Boost	Boost your mobile signal indoors.	
Sound Recorder	Capture audio clips.	
Stopwatch	Measure exactly how long it (whatever 'it' may happen to be) takes to do	

Applications	Benefit	
Task Manager Manage all the programs running on your phone.		
Tetris	Play the game on your phone.	
The Sims 3	Play the game on your phone.	
TrafficTV	Check real time traffic condition, estimated traffic delays, speed limits, CCTV images, and more.	
Videos	Browse and watch video files.	
Voice Search Use your voice to search, control, and communicate		
Weather Get weather reports from Orange.		
Your Orange Self service and support in the palm of your hand.		
YouTube	ube Watch YouTube videos.	

check your settings

To change or view your phone's settings, tap Home Key > \blacksquare > Settings. Or From the Home Screen tap Menu Key > Settings.

Wireless & networks	Configure and manage wireless connections, such as Wi-Fi, Bluetooth®, mobile networks, mobile data connection sharing, and Virtual Private Networks. You can also select Airplane mode from here.
Call settings	Set up fixed dialling numbers, voicemail, speed dial, call barring, call forwarding, call waiting, caller ID, and Internet call settings.
Sound	Set sound settings, such as ringtones and notifications.
Display	Set display settings, such as screen brightness.
Location & security	Create your screen locks, set the SIM card lock, change password visibility, or manage the phone's administrators and credential storage. You can also select the sources to use when determining locations from My Location.
Applications Manage your installed and running apps as well as installation of new ones, view storage and battery us set options for application development.	
Accounts & sync	Manage your accounts and configure synchronisation settings.

Privacy	Configure privacy settings, such as back up and restore, and personal data.		
Storage	Check available memory on the external card and the internal phone storage.		
Language & keyboard	Set the system language and region, plus text input options.		
Voice input & output	Set up voice recognition and text-to-speech options.		
Accessibility	Choose accessibility options after you have installed accessibility-related applications.		
Date & time	Set the date, time, time zone, and date/time format.		
About phone	View phone status, battery use, and legal information. You can also check for system updates.		

open recently used applications

 Hold Home Key from any screen until the following recently used applications screen appears.



2. Tap the application you want to open.

how to make calls

There are many ways to make a call with your Monte Carlo. And they're all easy to do...

calling from the dialler

- 1. Tap -> Dialer from the Home Screen.
- 2. Enter the phone number or the contact name you want to call.

If you make a mistake, tap to erase a wrong entry, or hold this key to clear all digits. Your phone automatically lists the matching contacts. You can tap to hide the keypad and to see if there are more matching numbers or contacts.

3. Tap Call

TOUCHPOINT: To make international calls, hold to enter the "+".

calling from your contacts

- Slide your finger to scroll the contacts list and tap the contact you want to call.
 You can search for a contact by tapping at the bottom of the contact list.
- 3. Tap 🥜.

calling from your call history

- Tap Home Key > Call log.
 TOUCHPOINT: You can also open call history by tapping the Call log tab from the Contacts Screen.
- 2. Tap
 real next to the number you want to call.

calling from a text

If a text message contains a phone number that you want to call, you can make the call while viewing the text message.

- Tap Home Key > Messages and tap the conversation and then the message that contains the phone number you need.
- 2. Tap the number.
- 3. Select the number and tap

using speed dial

Press and hold 1 \sim 9 key from the dialer to call the corresponding speed dial number.

The number key 1 is reserved to speed dial your voicemail.

Assigning a speed dial key:

- Tap Menu Key > Settings > Call settings > Speed dial from the Home Screen.
- 2. Tap a speed dial key.
- 3. Enter a phone number or tap 🚨 to select one from your contacts.
- 4. Tap **OK**.

how to receive calls

When there's an incoming call, your phone will display all information it has on the caller on its screen. There are different ways to respond to incoming calls – depending on who's calling and what you're doing at the time. Here are your options...

answering a call

Drag 🕜 to the right to answer the call.



rejecting a call

Drag 👨 to the left to reject the call.

muting a call

During a call, you can mute your microphone so that the person you are speaking to cannot hear you, but you can still hear them:

Tap **Mute** to turn your microphone off. The mute icon $\Psi_{\mathbf{x}}$ will appear on the screen. To turn your microphone back on, tap **Mute** again.

putting a call on hold

During a call, you can put it on hold by tapping Menu Key > Hold. The ficon will appear on the screen.

TOUCHPOINT: If you accept an incoming call while you're on another call, the first call automatically goes on hold. Just tap **Menu Key > Swap calls** to switch between the two callers.

turning the speakerphone on/off

Tap **Speaker** during a call to turn the speakerphone on. This icon \mathscr{F} will appear in the status bar. Tap **Speaker** again to turn it off.

ending a call

Just tap **to finish a call.**

adjusting your call settings

From the Home Screen, you can open the call settings menu by going from **Menu Key > Settings > Call settings.** This is what the settings do...

Fixed dialling numbers	Restrict outgoing calls to a fixed set of numbers. To do this you must contact Orange to get your SIM's PIN2 code.			
Voicemail service	Select a voicemail service provider.			
Voicemail settings	Specify a voicem	Specify a voicemail number.		
Speed dial	Set speed dialing keys and numbers.			
Call barring settings	Forbid certain types of calls.			
Call forwarding	Forward your incoming calls to a different number. And choose when to forward: always forward; forward when busy; forward when unanswered, or forward when unreachable.			
Additional settings	Caller ID	Choose whether people you call can see your number.		
	Call waiting	See new incoming calls while you're on another call.		
Accounts	Set up Internet calling (SIP) accounts.			
Use Internet calling	Choose when to use the Internet calling function.			

making and using contacts

You can add contacts on your phone and synchronize them with the contacts in your Google account or other accounts <u>that</u> support contact syncing.

To go your contacts, tap Home Key > \bigoplus > Contacts.

From there, you can tap the tabs on the top to quickly switch to dialer, call log, favorite contacts, or contact groups.

importing and exporting contacts

You can import/export contacts from/to your SIM card (or microSD card). First, let's do it for the SIM...

- 1. Tap Menu Key > Import/Export from the Contacts Screen.
- Choose to import or export contacts. Your Monte Carlo will automatically read the contacts.
- Select the contacts you want to import/export. To select all contacts, tap Menu Key > Select all.
- 4. Tap **OK**.

And this is how you import/export contacts from/to a microSD card...

- 1. Tap Menu Key > Import/Export from the Contacts Screen.
- 2. Choose to import or export contacts.
 - For contacts import, you should have vCard files saved in the microSD card. If there's more than one vCard file, you need to select the vCard file and tap OK.
 - For contacts export, the phone will prompt you with the name of the vCard file. Tap OK to create the file in the microSD card.

Sharing Contacts Information

- Tap Menu Key > Import/Export > Share visible contacts from the Contacts Screen. Your phone will export all information of the contacts in the Contact Screen to a temporary vCard file.
- Choose how you want to send the vCard file. You can either send it via Bluetooth to another device, or as an attachment in a mail.

creating a contact

- 1. Tap 🏖 from the Contacts Screen.
- 2. Tap Contact type to choose where you want to save the new contact.

- 3. Enter the contact name, phone number, and other information.
- 4. Tap **Done** to save the contact.

adding a contact to favorites

- Tap and hold from the Contacts Screen the contact you want to add to Favorites.
- 2. Tap Add to favorites from the pop-up menu.

TOUCHPOINT: You can also tap a contact and then tap next to the contact's name to add it to Favorites.

searching for a contact

- 1. Tap at the bottom of the Contacts Screen.
- 2. Input the contact name you want to search for.

The contacts matched will be listed.

creating a new group

- 1. Tap the Groups tab from the Contacts Screen.
- 2. Tap the 🎎 icon at the bottom of the screen.

- 3. Enter the group name and tap **Done**.
- 4. Tap the new group and tap 🚨 to add group members.
- 5. Tick the check boxes next to the contacts you want. Then tap OK.

To send messages to the group members, you can tap and select message recipients from the listed group members.

entering text

Two fingers, five fingers or even 10 fingers – everyone has a different way (and ability) when it comes to typing. The Monte Carlo recognises that fact by offering a choice of keyboards. You choose what suits...

TOUCHPOINT: The keyboard automatically appears on the screen when you enter a field that needs text. You can hide it by holding **Menu Key** or pressing **Back Key**.

android keyboard

The Android Keyboard provides a layout similar to a desktop computer keyboard. To make it even more like a normal keyboard, turn the phone sideways and the screen will change from portrait to landscape.

To use the landscape keyboard, just tick the **Auto-rotate screen** check box in **Settings > Display**. (The landscape QWERTY keyboard is not supported in all applications.)



- Tap the alphabetic keys to enter letters. Tap and hold the keys to enter associated accented letters or numbers. For example, to enter E, tap and hold and the available accented letters and number 3 appear. Then slide to choose E
- Tap to use uppercase or lowercase. This key also changes to indicate the
 current case you are using: for lowercase, for uppercase, and when locked in uppercase.
- Tap ¹²² to select numbers and symbols. You can then tap ¹²³ to find more.
 Also, often used symbols are displayed on top of the keyboard. Flick left or right to find the one you need and tap to enter.

- Tap to enter a smiley face; hold the key and swipe to choose more emoticons.
- Tap of to change input method or set up Android keyboard.
- Tap 1 to use Google's networked voice input.

XT9 text input

XT9 Text Input supports tracing gesture where you move your finger from letter to letter without lifting the finger until you reach the end of the word.

XT9 offers three keyboard layouts, Keyboard, Reduced keyboard, and Phone keypad.

Keyboard



Move your finger from letter to letter to trace a word without lifting the finger until you reach the end of the word.

The trace feature is also available in the Reduced keyboard layout and Phone keypad layout.



Reduced keyboard



Phone keypad



Using the toolbar



NOTE: The *B* icon is available when more than one language is activated. You can select input languages by tapping Menu Key > Settings > Language & keyboard > XT9 Text Input > Languages and settings from Home Screen.

Tips for using XT9 Text Input:

- Ignore double letters XT9 Text Input will figure those out for you automatically.
- Lift your finger at the end of the word. A space is added automatically when you begin to trace the next word.

choosing touch input settings

Choose the touch input settings by tapping Menu Key > Settings > Language & keyboard from the Home Screen.

In the **Keyboard settings** section, you can choose the settings for android keyboard and XT9 Text Input.

sending and receiving messages

Your SMS (text message) and MMS (multimedia messaging service) files are located in **Messages**.

To access your message files, tap Home Key > H > Messages.

From Messages, you can receive and send a text or MMS.

When you receive a new message, you can open it from the Notifications Panel, or from the Messages Screen. Simply tap on the new message to read it.

Your phone will tell you when message(s) arrive by showing this icon in the status bar

sending a text

- 1. Tap Home Key > Home Sages.
- 2. Tap New message.
- Tap the To field and enter the recipient's number. You can also enter the contact name. As you type, matching contacts will appear. Tap a suggested contact to add as a recipient.
- 4. Tap Type to compose and type your message.
- 5. Tap **Send** to send your text.

sending an MMS

- 1. Tap Home Key > Home Sages.
- 2. Tap New message.
- Tap To field and enter the recipient's number. You can also enter the contact name. As you type, matching contacts will appear. Tap a suggested contact to add as a recipient.
- 4. Tap Menu Key > Add subject to enter the subject of your MMS.
- 5. If needed, tap Type to compose and type your message.
- 6. Tap Menu Key > Attach if you want to add an attachment to your MMS...

Pictures: Select a picture to add to your MMS.

Capture picture: Take a photo to attach to your MMS.

Videos: Select a video clip to attach to your MMS.

Capture video: Shoot a video clip and attach to your MMS.

Audio: Select an audio file to attach to your MMS.

Record audio: Record an audio file to attach to your MMS.

Slideshow: Edit a slideshow to attach to your MMS.

7. When you've finished, tap Send.

TOUCHPOINT: Add an attachment to text message and it will be converted into an MMS without you having to do a thing. Likewise if you remove all attachments and the subject from an MMS, it'll automatically become a text.

managing messages and their 'threads'

Text and MMS messages sent to and received from a contact (or a number) are grouped into a message thread in your Messages Screen. That way you can see the history of the 'conversation' you've had with someone – like a chat program. These message threads are arranged in chronological order, with the latest one on top.

message settings

To configure your message settings, tap Menu Key > Settings in the Messages Screen.

storage settings:

- Delete old messages: select to delete old messages when your storage limits are reached.
- Text message limit: set the maximum number of text messages allowed in a single thread.

 Multimedia message limit: set the maximum number of multimedia messages allowed in a single thread.

text message (SMS) settings:

- Delivery reports: request a delivery report for every text message you send.
- Manage SIM card messages: manage the messages saved to your SIM.
- SMS validity: set the validity time limit for outgoing text messages.
- SMS priority: set the priority of outgoing messages.
- Service Center: Enables you to view and edit the service centre number.

Multimedia message (MMS) settings:

- Delivery reports: request a delivery report for every MMS message you send.
- Read reports: request a read report for each MMS message you send.
- Auto-retrieve: automatically retrieve MMS messages.
- Roaming auto-retrieve: automatically retrieve MMS messages when you're roaming.
- MMS validity: set the validity time limit for outgoing multimedia messages.
- MMS creation mode: select MMS creation restrictions. An MMS created under restricted mode is more likely to be displayed properly on other devices than those created under free mode.

notification settings:

- Notifications: show message notifications in the status bar.
- Select ringtone: choose a ringtone for your incoming messages.
- Vibrate: make your phone vibrate when a new message arrives.

Signature settings:

- Edit signature: Edit your signature, which can be added automatically to outgoing messages.
- Add signature: Add the signature to all outgoing messages.

NOTE: Tap Menu Key > Restore default settings in the message Settings Screen to change all the message settings back to the original.

emailing

Go to the Email Screen to set up your email account and exchange emails:

Tap Home Key > 🖽 > Email.

creating an email account

 Enter your email address and password, and then tap Next when you enter the Email Screen for the first time.

NOTE: Your Monte Carlo knows the client settings for lots of Email service providers. If the Email service you use is from those providers, the phone will automatically check the incoming/outgoing settings and proceed to step 4 after you enter your Email address and password.

Select the type of email account, edit the incoming server settings, and then tap Next or Next [Check].

Press Next [Check], and your phone will connect to the Internet and verify the settings before proceeding to the next step.

Problems? If you get a message saying setup couldn't be finished, you'll need to correct/check your settings. If there's still a problem, you may need to contact Orange and/or you email service provider for help.

- Edit the outgoing server settings and tap Next or Next [Check].
 After you press Next [Check], your phone will check the outgoing server settings.
- Set the Email checking frequency, download options, account name and other settings. Tap **Done** when you finish.

Your phone will show the inbox of the Email account and start to download Email messages.

TOUCHPOINT: To add more Email accounts, open Email to get the Inbox screen. Then tap Menu Key > More > Accounts > Menu Key > Add account.

receiving emails

Press Menu Key > Refresh to download recent Emails. You can select Load more messages at the bottom of the Email list to download earlier messages.

writing and sending emails

After creating your email account, you're ready to write and send emails...

- 1. From the Inbox Screen tap Menu Key > Compose.
- 2. Tap To and enter the recipient's email address.

When you enter the address, any matching addresses saved in your Contacts will be displayed. You can choose a recipient from the list.

You can also tap 🗂 to select the recipient from Contacts.

- Enter the subject and the content of your Email. If necessary, change the email priority.
- 4. Tap Menu Key > Add attachment to add files to the Email.
- 5. Tap Send.

TOUCHPOINT: Want to send an email to more than one person? Simply tap Menu Key > Add Cc/Bcc and input their email addresses.

replying to and forwarding emails

- 1. From Email Screen open the email you want to reply to/forward.
- 2. Tap Reply or Menu Key > Reply/ Forward.
 - You can also tap Reply all or Menu Key > Reply all if you want to include everybody who got the original email. If forwarding, enter the email address(es) your message has to go to.
- 3. Type your email.
- 4. Tap Send.

choosing your email settings

Tap the account you want to set from the Accounts Screen and tap Menu Key > More > Account settings. You can get the settings for the Email account. You can also tap Menu Key > More > System setting to set up storage, exchange and other settings.

getting connected to the Internet

The Monte Carlo's impressive networking capabilities will get you onto the Internet or a corporate network (intranet) with ease.

You can use default connection settings to connect to the web via your mobile network (GPRS/EDGE/3G), or Wi-Fi.

To get connected via GPRS/EDGE/3G you need an Orange data plan. Also if the GPRS/EDGE/3G settings are not pre-configured on your phone, please contact Orange. Changing the settings without talking to your service provider could stop your phone from working.

adding a new GPRS/EDGE/3G connection

Before you begin, get the following information from Orange:

- · Access Point Name (APN).
- Your user name and password if needed.
- Server IP and the port number if the network uses a proxy server.
- 2. Tap Menu Key > New APN.

- 3. Tap Name to enter your APN name (it can be whatever you fancy).
- 4. Tap APN to enter the APN you want to add.
- Tap Proxy and Port to enter the Server IP and port if the network uses a proxy server.
- Tap and enter Username and Password. (If there's no user name or password, leave them blank.)
- 7. If needed, tap and enter APN type.
- 8. Tap Menu Key > Save to complete.

TOUCHPOINT: To set the APN to default settings, tap Menu Key > Reset to default.

turning on Wi-Fi

Your Wi-Fi provides wireless Internet access over distances of up to 300 feet (100 metres).

- 1. Tap Home Key > H > Settings > Wireless & networks.
- 2. Tick the Wi-Fi box to turn it on.

adding a Wi-Fi network

- Tap Home Key > Settings > Wireless & networks > Wi-Fi settings.
 The Wi-Fi network names and security settings (open or secured) that your phone has detected are shown in Wi-Fi networks.
- 2. Tap a network to connect to it.

If you attempt to connect to a secured network, you'll need to give a wireless password to get access.

checking the Wi-Fi network status

You can check the Wi-Fi network by looking at the licon in the status bar.

Or tap Home Key > Settings > Wireless & networks > Wi-Fi settings. Next, tap the wireless network that the phone is currently connected to. You can check the network status from the pop-up window.



using the phone as a modem

You can access the Internet on your PC via your phone as a modem. Note the function will bring data charges from your mobile service provider. Please contact Orange for detail.

enabling the phone as a modem TOUCHPOINT.

- Make sure that USB storage is turned off before enabling the modern function.
 If the USB storage is already turned on, flick down the notification panel and tap Turn off USB storage > Turn off USB storage.
- The PC accesses the Internet via the phone's mobile network. Therefore, set up the GPRS/EDGE/3G connection correctly before you try to use the phone as a modern.
- 1. When you connect your phone to your PC with the provided USB cable for the first time, a window will pop up and prompt you to install the driver.
- 2. Double click the executable file (.exe) in the window and follow the prompt to finish the driver installation.

NOTE: If the window doesn't pop up automatically for some reason, please open the new CD-ROM drive on your PC manually and find the executable file to run it.

- Tap on the phone Home Key > Menu Key > Settings > Wireless & networks > Tethering & portable hotspot and tick the USB tethering check box. A new network connection will be created on your PC.
- Go to Control Panel > Network on your PC to enable the new network connection.

Now you can launch the Internet browser on your PC and start surfing.

disabling the modem function

Tap Home Key > Menu Key > Settings > Wireless & networks > Tethering & portable hotspot and clear the USB tethering check box.

You can also just pull out the USB cable.

using the phone as a wi-fi hotspot

You can use the phone as a portable WLAN router, providing Wi-Fi connection for one or multiple PC or other devices. The function need data connection on a mobile network and will bring data charges.

TOUCHPOINT:

 The PC accesses the Internet via the phone's mobile network. Therefore, set up the GPRS/EDGE/3G connection correctly before you try to use the phone as a Wi-Fi hotspot. When the portable Wi-Fi hotspot function is enabled, you cannot access the internet with any application on your phone via its Wi-Fi connection.

enabling the wi-fi hotspot

- Tap Home Key > Menu Key > Settings > Wireless & networks > Tethering & portable hotspot and tick the Portable Wi-Fi hotspot check box.
- 2. Tap Portable Wi-Fi hotspot settings > Configure Wi-Fi hotspot.
- Change the name of the hotspot and its security setting, if necessary.
 The default hotspot is set as an open one. You can tap Open and choose WPA2 PSK to set up a password. The password must have at least 8 characters.
- 4. Tap Save. Now you can find the hotspot on other devices and connect to it.

disabling the wi-fi hotspot

Tap Home Key > Menu Key > Settings > Wireless & networks > Tethering & portable hotspot and clear the Portable Wi-Fi hotspot check box.

browsing the Internet

You can use your phone to get on the www via a GPRS, EDGE, 3G, or Wi-Fi connection.

Tap Home Key > \square > Internet.

There are different ways to open www pages...

- Tap the address bar to enter the website you want to browse. Then tap Go.
- Go to the Bookmarks Screen to choose an item from the Most visited tab/History tab.

browsing options

- Refresh: Menu Key > Refresh.
- Go to the next page: Menu Key > More > Forward.
- Search: Menu Key > More > Find on page and enter the search item.
- Copy: Menu Key > More > Select text and slide your finger on the page to select the text you want to copy. Tap the selected text and your phone automatically copies it to the clipboard.

- Share pages: Menu Key > More > Share page to send a page by mail, Messages, or Bluetooth.
- Download/page info: Menu Key > More > Downloads/Page info.
- Open new browser window: Menu Key > New window. Then tap the address bar to enter the website you want to browse.
- Switch browser windows: If you have more than one browser windows opened, you can switch between these windows by tapping Menu Key > Windows. Then tap the page you want to browse. You can also tap to close a window.

browser settings

You can set the browser text size, homepage etc. by tapping Menu Key > More > Settings from a browser window.

Page content settings

- Text size
- Default zoom
- Open pages in overview
- Text encoding
- Block pop-up windows

- Load images.
- Auto-fit pages
- Landscape-only display
- Enable JavaScript
- Enable plug-ins
- · Open in background
- Set homepage

Privacy settings

- Clear cache: delete all cached page contents.
- Clear history: clear the browser navigation history.
- Accept cookies: allow websites to use cookies.
- Clear all cookie data: clear the browser cookies deleting all history data.
- Remember form data: remember the data you type in forms for later use.
- Clear form data: clear all the saved form data.
- Enable location: allow sites to request access to your location.
- Clear location access: clear location access for all websites.

Security settings

• Remember passwords: save usernames and passwords for web sites.

- Clear passwords: clear saved passwords.
- Show security warnings: warn if there's a problem with a site's security.

Advanced settings

- Set search engine: set the search service you use when entering key words in the address bar.
- Website settings: view advanced settings for individual websites. (Only available for some websites.)
- Reset to default: clear all browser data and reset all settings to default.

opening links in web pages

When you're on a web page with a link to another page, either tap the link to open the page, or hold on the link to open the shortcut menu, giving you these options:

- Open
- Open in new window
- Bookmark link
- Save link
- Share link (by mail, Messages, or Bluetooth.)
- Copy link URL

using bookmarks

To bookmark a web page, open it and tap \blacksquare or Menu Key > Bookmarks. Then tap Add/Add bookmark. Give the bookmark a name and select OK.

TOUCHPOINT: To change how you view bookmarks on your phone screen, tap Menu Key > List view/Thumbnail view.

edit a bookmark

Open a browser window. Tap **Menu Key > Bookmarks**. Select the bookmark you want to edit – holding on it until the shortcut menu pops up and select **Edit bookmark**. Edit the name or location, and then tap **OK** to save.

delete a bookmark

Open a browser window. Tap **Menu Key > Bookmarks**. Choose the bookmark you want to get rid of by holding on it until the shortcut menu pops up. Then select **Delete bookmark** and tap **OK** to confirm.

going wireless with Bluetooth®

Bluetooth® gives you short-range wireless communication. Phones or other devices with Bluetooth can exchange information at a maximum range of about 10 metres. They must wirelessly 'see' each other before this can be done – which is why guides like this talk about making your phone 'visible'.

turning Bluetooth on/off

TOUCHPOINT: The default setting for Bluetooth is off, but you can change that. Turn Bluetooth on, and then turn off your phone. When you power up your phone again, Bluetooth will turn on automatically.

making your phone visible

In order to work with other phones or devices that have Bluetooth, you need to make your phone visible to them. Here's how...

- 2. Select the Bluetooth tick box if it isn't already ticked.
- 3. Tick the **Discoverable** box to make your device visible for 2 minutes.

...and to make your phone 'invisible' simply remove the tick from the **Discoverable** box by selecting it again.

change your phone's name

When your phone is visible to other Bluetooth devices it will be seen by its name, and you can make that anything you want – like 'Ben's Monte Carlo'.

- Tap Home Key > Settings > Wireless & networks > Bluetooth settings.
- 2. Select the Bluetooth box if it is not already ticked.
- 3. Tap Device name.
- 4. Enter the name and tap OK.

hook up with another Bluetooth device

Pairing your phone with another phone or device that has Bluetooth, means they can exchange information from then on without being visible to each other. However, they must, of course, both have Bluetooth turned on to do this. So this is how you pair up...

- Tap Home Key > Settings > Wireless & networks > Bluetooth settings.
- Tap Scan for devices. Your Monte Carlo will show all visible Bluetooth devices (in range) in its Bluetooth devices.
- 3. Select the device you want to pair with.
- 4. If required, enter your PIN and tap OK.

If a PIN is required, the same PIN should be entered on the other device.

making the most of multimedia

Taking pictures, making and watching videos, recording memos and playing your favourite tunes, or maybe just listening to the radio while looking at your holiday snaps... Whatever you fancy doing, the Monte Carlo is a little multimedia marvel. Here's how to make the very most of it.

taking pictures with your camera

Your phone has a 5 megapixel camera with a LED flash. Open it by tapping **Home Key** > **H** > **Camera**.

Aim the camera at the subject and then tap to take a shot. To view it, just tap the picture in the right corner of the screen. Or select **Menu Key > Gallery** to view all your pictures.

adjusting camera settings

From the viewfinder screen tap to set up focus mode, exposure, picture size/quality, colour effect, ISO, anti-banding, saturation, contrast, sharpness, and camera reset.

Tap or to choose whether to save photo's geographic location.

Tap _____ to change white balance.

Tap \P or \P to turn on or off flash.

Tap 1x to zoom in or out.

TOUCHPOINT: To change quickly from camera to camcorder or vice versa, use the switch of considering icon. Use the bar to adjust the brightness.

shooting video with your camcorder

adjusting your video settings

From the viewfinder screen, tap of to adjust colour effect, video quality, video/audio encoder, video duration, and camera reset.

Tap to change white balance setting.

Tap High/Low/MMS/YouTube/

■ to change video quality, video/audio encoder, and video duration together.

listening to your FM radio

The FM Radio on your phone lets you search for, listen to and save radio channels. And when you get a call, the radio will automatically switch off for the duration of the call.

To tune in, plug your headset into your phone. Tap **Home Key** > \square > **FMRadio**. This \square icon will pop up in the status bar.

Tap or to scan for available FM channels. If you need to fine tune the radio's reception, tap **Menu Key > Adjust**. Select to make the frequency go up or down by +/- 0.1 MHz.

Once you're happy that you've got the best reception possible, hold the frequency shown until a red box appears on the screen, and then drag it into the box to save – as shown in the following diagram.

IMPORTANT: The quality of your radio's reception depends on the coverage of the radio station where you are. The wired headset that comes with the Monte Carlo works as an antenna, so always connect the headset when using the FM Radio.



- Press Volume Keys to adjust the volume.
- Tap Menu Key > Sleep to set the FM radio sleep timer.
- Tap 😃 to switch off the radio.

playing your music

You can play digital audio files from your phone's memory card in Music.

That means you need to copy the audio files you want to play to your memory card first. Once that's done...

- 1. Tap Home Key > H > Music to open the Music Screen.
- 2. Select Artists/Albums/Songs/Playlists to see the songs you want to play.
- 3. Tap a song from the list to start playing.
- 4. Adjust the Volume Keys up or down.



creating playlists

Playlists help you organise your music files:

- 1. Open Music and select a music file you want to add to a new playlist.
- 2. Tap and hold on the file until a shortcut menu pops up.
- 3. Tap Add to playlist.
- 4. Tap New.
- 5. Type the playlist name and tap Save.

managing playlists

- 1. From the Music Screen tap Playlists to see them all.
- 2. Hold on the playlist you want to play or edit until a shortcut menu pops up.
- 3. Tap Play, Delete or Rename.

adding a song to a playlist

- 1. Open the folder where the song is.
- 2. Hold on the song until a shortcut menu pops up.
- 3. Select Add to playlist.
- 4. Select a playlist.

setting a song as ringtone

- 1. Open the folder where the song is.
- 2. Hold on the song until a shortcut menu pops up.
- 3. Select Use as phone ringtone.

TOUCHPOINT: Listening to song that you'd like as a ringtone? Just tap **Menu Key** > **Use as ringtone**. Job done.


playing your videos

Choose a video file and the video player will open. Tap on the screen and the control bar will appear as below. So now you can play, pause, fast forward, use Dolby sound, etc.



opening your gallery

Gallery helps you view pictures and play videos. You can also do some basic editing of your pictures – such as setting them as wallpaper or contact icons, and sharing with friends.

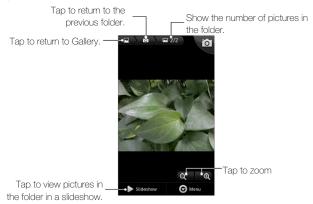

making memorable memos

With Sound Recorder you can record voice memos – or, if you're feeling creative, make your own ringtones... as long as you've put a memory card in your Monte Carlo.

- 1. Tap Home Key > H > Sound Recorder.
- 2. Make sure your mouth is near the phone's microphone.
- 3. Tap to start recording... and say something. Or get someone or something else to make some sounds worth recording.
- 4. Tap to stop recording.
- 5. Tap to play back the voice recording.
- Tap OK to save the voice recording, or tap Discard if it's not up to your high standards and you want to try again.

TOUCHPOINT: Where are your recordings? You'll find them by going to Home Key > Home Sey > Music > Playlists > My recordings. And if you'd like to use a recording as a ringtone, hold the recording and when the shortcut menu pops up, select Use as phone ringtone.

using your Google™ applications

Signing in to your Google Account lets you synchronise Gmail, Picasa web album, Calendar, and Contacts between your phone and the web. And if you don't have an account, you can easily create one...

- 1. Tap a Google application that need a Google account, such as Market.
- 2. Read the instructions and select Next.
- If you've got a Google account, tap Sign in. Enter your user name and password. Then tap Sign in. (Or tap Create if you don't have a Google account.)

Gmail

Gmail is a web-based email service that's configured when you sign in to your Google account. Depending on your synchronisation settings, the Gmail on your phone is automatically synchronised with your Gmail account on the web.

This is how you create and send an email:

- 1. Open Gmail by tapping Home Key > H > Gmail.
- 2. Press Menu Key. Then select Compose.
- 3. Enter the email address of the person you're contacting in the 'To' field.

If you're sending the email to several people, separate the email addresses with a comma. You can add as many recipients as you want.

- 4. Enter the email subject, and then write your email.
- 5. ... All ready to go? Then press Menu Key and tap Send.

Using Google Calendar

Places

Google Places helps you find all kinds of businesses near you.

- 2. Tap Home Key > H > Places. Wait while you are being located. Your location, when found, is shown at the bottom of the screen.
- Select a business category and the information of that type of business near you will be displayed.

You can also use the **Find places** search box on the top to find the business you need.

NOTE: Tap Add to add new business categories.

4. Tap a result you are interested in and check out the details and reviews about that place. You can also see the place on Google Maps, find out how to get there, or give that business a call.

Latitude

Google's Latitude service is a social tool for sharing your location information with selected friends.

Tap Home Key > H > Latitude to enable Latitude service.

Each time you launch Maps application, your location will be determined using GPS or the phone network, and your Latitude status will be updated. You can tap Menu Key > Latitude in Maps or Home Key > Latitude to see your status as well as that of your selected friends.

In Latitude, tap **Menu Key** to refresh friends status, see them on Maps, add new friends, show/hide stale friends, or change Latitude settings.

You can also turn off Latitude service by tapping Sign out of Latitude in Latitude settings.

sorting out your phone settings

setting time and date

- 1. Tap Home Key > Menu Key > Settings > Date & time.
- 2. Clear the Automatic tick box if you want to set the time and date by yourself.
- 3. Tap Set date. Adjust the date, and tap Set to save it.
- 4. Tap **Select time zone** and tap where you are in the world.
- 5. Tap Set time. Adjust the time, and tap Set to save it.
 - Tap the tick box behind Use 24-hour format if you want to change the time format.
- 7. Tap Select date format to select the one you prefer.

changing display settings

By tapping **Home Key > Menu Key > Settings > Display**, you can adjust the display settings as you like:

- Brightness: adjust brightness of the screen.
- Auto-rotate screen: rotate the screen display as you rotate the phone.

- Animation: choose window animation.
- Screen timeout: set the delay for the screen to automatically turn off.

 
sound settings

By tapping **Home Key > Menu Key > Settings > Sound**, you can adjust the sound settings, such as ringtones and alerts...

- Silent mode: tick the check box to mute all sounds except media and alarms.
- Silence Ringer When Face Down: once you enable this function, you can
 mute the incoming call ringtone by flipping the phone over.
- Vibrate: select the condition for vibration.
- Enable Dolby Mobile: tick the check box to enable Dolby sound effect for playing audio and video.
- Volume: tap to adjust volume levels for ringtone, media, alarm, and notification.
- Phone ringtone: select the default ringtone for incoming calls.
- Notification ringtone: select the default ringtone for notifications.
- Audible touch tones: tick the check box and the phone will play tones when
 you tap the dial pad.

- Audible selection: tick the check box and the phone will play a sound when
 you touch the screen to make a selection.
- Screen lock sounds: tick the check box and the phone will play a sound when you lock or unlock the screen.
- Haptic feedback: tick the check box and the phone will vibrate when you
 press soft keys or on certain user interface interactions.

TOUCHPOINT: To quickly switch to silent mode, press **Volume Key** - or, if the screen is locked, drag to the left.



language settings

You can change the language of your phone's operating system in two simple steps...

- Tap Home Key > Menu Key > Settings > Language & keyboard > Select language.
- 2. Select a language and region from the list given.

mobile network services

Both GSM and WCDMA are supported by your phone. You can configure the network settings according to your phone service.

getting data services while abroad

- Tap Home Key > Menu Key > Settings > Wireless & networks > Mobile networks.
- 2. Tick the Data roaming box.

IMPORTANT: Data roaming may incur significant roaming charges.

disabling data services

- 1. Tap Home Key > Menu Key > Settings > Wireless & networks.
- 2. Clear the Data enabled check box.

switching network modes

- Tap Home Key > Menu Key > Settings > Wireless & networks > Mobile networks > Network Mode.
- 2. Select one of the following: GSM/WCDMA auto, WCDMA only, or GSM only.

enabling always-on data services

- Tap Home Key > Menu Key > Settings > Wireless & networks > Mobile networks.
- Tick the Enable always-on mobile data box to allow applications to update data automatically.

IMPORTANT: When you enable this option, more data traffic will be generated for automatic updates of applications data. And your phone will consume more power.

switching networks

- Tap Home Key > Menu Key > Settings > Wireless & networks > Mobile Networks > Network operators. The phone automatically searches for all available networks.
- 2. Tap a network to register manually, or tap Select automatically.

setting Access Point Names

To connect to the Internet you can use the default Access Point Names (APN). And if you want to add a new APN, please contact Orange to find out more.

 Tap Home Key > Menu Key > Settings > Wireless & networks > Mobile networks > Access Point Names.

- 2. Tap Menu Key > New APN.
- 3. Set the necessary parameters. (See how to add a GPRS/EDGE/3G connection in *getting connected to the Internet* in this guide.)
- 4. Tap Menu Key > Save.

security settings

You'd be wise to think about protecting your phone and SIM from unauthorised use. It's not only sensible, it's really rather clever too. This is how to work...

protecting your phone with a screen unlock pattern creating your screen unlock pattern

- Tap Home Key > Menu Key > Settings > Location & security > Set up screen lock > Pattern.
- 2. Read the instructions and tap Next.
- 3. Watch the example pattern and tap Next.
- 4. With a finger, draw your own pattern and tap Continue.
- 5. Draw the pattern again and tap Confirm.
- 6. Press the Power Key to lock the screen.

TOUCHPOINT: Clear the **Use visible pattern** box if you want to hide the pattern as you draw it on the screen.

unlocking the screen with your pattern

- 1. Press the Power Key.
- 2. Draw the pattern you set to unlock the screen.

If you make a mistake, your phone will ask you to try again.

cannot recall your screen unlock pattern?

You have up to five attempts to unlock your phone. If you still cannot recall the screen unlock pattern, you can tap **Forgotten pattern?** and enter your Google account user name and password to reset the screen unlock pattern.

IMPORTANT: You must sign in or create a Google account on your phone before using the above method to reset the pattern.

protecting your phone with a PIN or password creating a PIN or password

- Tap Home Key > Menu Key > Settings > Location & security > Set up screen lock.
- 2. Tap PIN or Password.

- 3. Enter the numeric PIN or any password you like, and tap Continue.
- 4. Enter it again and tap **OK** to confirm.

unlocking the screen with your PIN or password

- 1. Press Power Key to wake up the phone.
- 2. Drag the 🙃 icon to the right.
- 3. Enter the PIN or password you set.
- 4. Tap **OK**.

disabling screen unlock security

If you have created an unlock pattern, PIN or password, you can disable it.

- Tap Home Key > Menu Key > Settings > Location & security > Change screen lock.
- 2. Draw the screen unlock pattern or enter your PIN/ password you have created.
- 3. Tap None.

protecting your SIM with a PIN

Every SIM card comes with a PIN. Your SIM is unlocked when you first get it from Orange, but it's best to lock your SIM as soon as you can:

- Tap Home Key > Menu Key > Settings > Location & security > Set up SIM card lock.
- 2. Select the Lock SIM card check box.
- 3. Enter the PIN you've been given and tap OK.

changing your SIM PIN

You can change the PIN you've been given to one easier for you to remember and harder for others to guess:

- Tap Home Key > Menu Key > Settings > Location & security > Set up SIM card lock.
- 2. Tap Change SIM PIN.
- 3. Enter the old PIN and tap OK.
- 4. Enter your new PIN and tap OK.
- 5. Enter the new PIN again and tap OK.

TOUCHPOINT: Clear the **Visible passwords** box if you want to hide any PIN or password as you enter it on the screen.

restoring a locked SIM card

Put all your confidential passwords in a safe place for future use. If you enter the wrong SIM PIN more times than allowed, your SIM card will be locked and you

cannot access the mobile phone network. Contact your operator for a PIN Unlock Key (PUK) to restore the SIM card.

setting up credential storage

This lets you select applications to access secure certificates and other credentials.

enabling secure credentials

- 1. Tap Home Key > Menu Key > Settings > Location & security.
- 2. Tap **Set password** and follow the instructions.
- 3. Tick the Use secure credentials box.

TOUCHPOINT: You can also install encrypted certificates from your microSD card by tapping **Install from SD card**.

deleting secure credentials

- 1. Tap Home Key > Menu Key > Settings > Location & security.
- 2. Tap Clear storage to clear credentials.

managing your device memory

Tap Home Key > Menu Key > Settings > Storage. You can view the space information of the microSD card as well as the phone storage.

- Unmount SD card: You can unmount the card safely without switching the phone off.
- Erase SD card: Erase all data on the memory card.

privacy: reset to factory settings

Tap Home Key > Menu Key > Settings > Privacy > Factory data reset > Reset phone > Erase everything.

WARNING: All your personal information and downloaded applications on your phone will be erased after the resetting.

managing applications and their settings

Tap Home Key > Menu Key > Settings > Applications.

- Manage applications: Manage or remove installed applications.
- Running services: Check currently running services and stop them if needed.
- Storage use: View storage used by applications.
- Battery use: See what has been using the battery.
- Development: Set options for application development.

Tick the **Unknown sources** check box if you want to installed applications from

sources other than the Android Market. Note that you may risk your phone and personal data by installing such applications.

installing an application

You can install an application from the Android Market (Home Key > Home Key > Market) by selecting the item you want to download and tapping Install.

You can also install a non-Marketing application if you have allowed the installation of it. Make sure that you select an application developed for your device and processor type before installing it.

- Copy the application file to the microSD memory card and install the card on your phone.
- 2. Tap Home Key $> \square$ > Filer, and open the folder where the application file is.
- Tap the file to start installation.
- Read the installation instructions that come with the application and follow it to complete the setup.

managing other settings...

search settings

You can manage search settings and search history by opening the Google Search application and tapping Menu Key > Search settings.

- Google search: adjust Google search settings.
- Searchable items: choose what to search on the phone.

You can also clear shortcuts to recently chosen search suggestions.

voice interaction

You can set the text-to-speech and voice recognition options by tapping **Home Key > Menu Key > Settings > Voice input & output**.

NOTE: You need to download voice data in order to use the text-to-speech function. Just tap **Install voice data** in **Text-to-speech settings**.

other applications...

alarms

- 1. Tap Home Key > H > Alarm.
- Tap the default alarm set to configure it. Or, to create a new alarm, tap Menu Key > Add alarm.
- 3. Tick the Turn on alarm box and set up Name, Time, Repeat, Snooze, Duration, Vibrate, Ringtone, Volume, Volume crescendo, and Delay.

TOUCHPOINT: You can also tap **Quick Snooze** to set up one-time alarm that will ring within 60 minutes.

Docs To Go

A handy application suite that'll open Word, Excel, Powerpoint, or PDF files. Read the on-screen instructions for detailed information.

task manager

Go to Task Manager to view or stop applications.

note pad

Note pad is for your memos. Tap Menu Key to add or delete them, or to export the text to a txt file in the microSD memory card. Hold an existing note to edit, delete, share or export, or to change its title.

calculator

For day-to-day sums...

TOUCHPOINT: Got some seriously fiddly formulae to sort out? Tap **Menu Key > Advanced panel** to use scientific calculation.

Orange Plus

Orange Plus will only appear on the screen if your SIM provides this function. To use SIM services, insert your SIM in the phone first.

Tap Home Key >

→ Orange Plus.

stopwatch

- 1. Tap Home Key > H > Stopwatch.
- 2. Tap Start to start timing, Pause to pause time, and Resume to continue.
- 3. Reset will take the stopwatch back to 00:00.0

specifications

Dimensions		Approx. 126 mm × 67 mm ×11.3mm
Weight		Approx. 140g (with battery)
Bearer		GSM/WCDMA support
Main display dimension & resolution		4.3 inches 800*480
	Sensor type	CMOS
Back Camera	Still image capture resolution	5M Pixels with flash
Removable memory card		Support microSD card
Maximum capacity of memory card		32 GB
	Capacity	1400 mAh
Battery	Standby time	Approx. 200 hours (subject to network status)
	Voice talk time	Approx. 240 min (subject to network status)
WAP browser version		WAP2.0

 
Declaration of RoHS Compliance

To minimize the environmental impacts and take more responsibilities to the earth we live on, this document shall serve as a formal declaration that the Monte Carlo manufactured by ZTE CORPORATION is in compliance with the Directive 2002/95/EC of the European Parliament - RoHS (Restriction of Hazardous Substances) with respect to the following substances:

- 1. Lead (Pb)
- 2. Mercury (Hg)
- 3. Cadmium (Cd)
- 4. Hexavalent Chromium (Cr (VI))
- 5. Polybrominated biphenyls (PBBs)
- 6. Polybrominated diphenyl ethers (PBDEs)

The Monte Carlo manufactured by ZTE CORPORATION, meets the requirements of EU 2002/95/EC.

Disposal of Your Old Appliance



- When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive 2002/96/EC.
- All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.

For this product's Recycling Manual based on WEEE directive, please send an e-mail to weee@zte.com.cn, or visit the website below to download the document:

http://ensupport.zte.com.cn

Limited warranty statement

Article 1

The guarantee for the Orange device (continued as: Device) amounts to 12 (twelve) months from the date the Device was bought.

Six (6) months for the following consumable parts and accessories batteries, chargers, desk stands, headsets, cables and covers.

The manufacturer guarantees that the Device will properly function with proper usage and maintenance according to the instructions of the manufacturer. The guarantee is applied for all Device faults which arise because of errors in the material and/or the manufacturing of the Device. The guarantee can be used against presentation of a verified guarantee certificate and invoice. The guarantee does not affect other rights belonging to the buyer on other legal remedies. The guarantee is valid in the United Kingdom.

Article 2

The guarantee does not cover: faults occurring because of unauthorized modifications of the software, mechanical damages, improper handling, and other actions (lightning, fire, unsuitable voltage and polarities, traffic accidents, humidity, water and alike), to the batteries and consumable material including *:

- a) Damages caused by using the Device outside the instructions of the manufacturer and other documentation which is enclosed with the Device as well as damages caused by using with other products of another non-approved manufacturer;
- Damages caused by accidents, improper and wrong usage, floods, fire, earthquakes and superficial damages which include but are not limited to scratches, dents, broken plastic and alike;
- c) Damages caused by servicing (including upgrading and extension) by an unauthorized person as well as a fault of the Device or any part of it if they are altered because of the change of the functionality or other properties without prior written authorization of the manufacturer;
- d) Consumable parts other than in the case of damage brought on because of faults in the material or manufacturing;
- e) Impossibility of partial and/or complete usage of the Device because of unauthorized modification of the software.

Article 3

Orange is obliged during the guarantee, in a reasonable time period, to remove all reported faults and defects of the Device covered with this guarantee certificate which have come to be with the proper and regular use of the Device, to repair the Device in an authorized service or a replacement of the faulty Device with the same

but properly working Device if a repair is not possible.

Part(s) repaired or replacement product during the Warranty Period will be warranted for the remainder of the original Warranty Period or for sixty (60) days from the date of repair or replacement, whichever is longer.

Article 4

The guarantee stops being valid if:

- the information from the invoice and/or the guarantee are erased or altered;
- the information on the Device (type, and serial number of the manufacturer) are erased or altered;
- it is established that the Device was opened by an unauthorized person.

Note: customers can report faults and establish the guarantee with the salesman or authorized services

- * Concrete cases of faults or damages which are not covered by the guarantee include:
- Damages caused by intentional separation, opening or dissembling the enclosure:
- Damages or faults with the operation caused by the removal and insertion of exterior and interior parts of the Device;
- Damages caused by holes in the enclosure;

- Cracked glass or LCD because of outside factors;
- Damages or faults caused by an outside force;
- Damages or faults caused by liquids;
- Damages or faults caused by liquid or dry chemical substances (such as gasoline, acids, corrosive material), dust, dirt and other foreign objects;
- Damages or faults caused by outside heat or fire (damage by interior heat is covered if it did not occur through an outside reason);
- Superficial damages occurring through external reasons, including dents, shabbiness, scratches on the enclosure, discoloration, cracks, peeling or metal or plastic parts of the enclosure.

** The customer is advised to regularly make copies of his information and other contents on the Device and to erase the same from the memory of the Device before handing the Device over to the service. In case the customer does not do this, Orange is not responsible for the information in the memory in the Device to the customer or a third party.

Cleaning and Maintenance

- Please maintain your mobile phone with good care since it is delicately designed and manufactured. The following advice might help you extend the life of your mobile phone.
- Clean your mobile phone, battery and charger with a soft dry cloth.
- Do not clean your mobile phone with the liquor such as alcohol, dilution agent or benzene.
- Clean the socket from time to time because a dusty socket might cause disconnection, power failure, or even charging failure.
- Do not press keys with needles, pen points or other sharp objects to avoid damage or misoperation.
- Keep tiny metal objects such as thumb pins away from the phone receiver.
 The phone speaker is magnetic and thus magnetizes those metal objects, which may hurt people or damage the phone.
- Keep your mobile phone dry. Rain, moisture or any kind of liquid containing minerals might corrupt the circuit.
- Don't touch the mobile phone with wet hands because this might cause an electric shock, which could cause an injury or damage the phone.

- Don't use and put your mobile phone in a dusty or dirty environment because this might damage the phone components.
- Don't keep your mobile phone near high-temperature because it might shorten the life of electronic devices, damage the battery, twist or melt some plastic parts.
- Don't keep your mobile phone in a place where the temperature is too low, otherwise the water vapor would form inside the phone when the temperature rises up to normal degree, which would damage PCB of the phone.
- Don't put your mobile phone in or on heating devices (microwave oven, toaster or radiator) because overheating might result in an explosion.
- The colour of the waterproof label in the phone will be changed if the phone or battery gets wet. In this case, the warranty provisions will become void even if the warranty period doesn't expire.

Please send your mobile phone to the nearest service center for inspection if there is anything wrong with your mobile phone, battery, charger or accessories. The service center staff will be happy to help.

EC DECLARATION OF CONFORMITY

It is hereby declared that following designated product:

Product Type: WCDMA/GSM (GPRS) Dual-Mode Digital Mobile Phone

Model No: Monte Carlo

Complies with the essential protection requirements of the Radio and Telecommunication Terminal Equipment Directive (EC Directive 1999/5/EC) and the Electromagnetic Compatibility Directive (2004/108/EC)

This declaration applies to all specimens manufactured identical to the samples submitted for testing/evaluation.

Assessment of compliance of the product with the requirements relating to the Radio and Telecommunication Terminal Equipment Directive (EC Directive 1999/5/EC) was performed by American TCB (Notified Body No.1588), based on the following standards:

	Safety	EN 60950-1:2006/A11:2009	
Ī		EN 301 489-1 V1.8.1; EN 301 489-7 V1.3.1;	
	EMC	EN 301 489-17 V2.1.1; EN 301 489-24 V1.5.1;	
		EN 55013:2001+A2:2006; EN 55020:2007;	

Radio	EN 301 511 V9.0.2; EN 301 908-1 V3.2.1; EN 301 908-2 V3.2.1; EN 300 328 V1.7.1; EN 300 487 A1:1997
Health	EN 50360:2001; EN 62209-1:2006; EN 62209-2:2010; EN 50332-1:2000; EN 50332-2:2003

This declaration is the responsibility of the manufacturer:

ZTE Corporation

ZTE Plaza, Keji Road South, Hi-Tech, Industrial Park, Nanshan District, Shenzhen, Guangdong, 518057, P.R.China

Authorised person signing for the company:

Xu Feng Quality Director Of ZTE Corporation

Name in block letters & position in the company

Shenzhen, 22nd June 2011

Place & date

纸牌.

Legally valid signature

C € 1588 ①