



GSMArt Classic LTE

User Manual



Copyright

All mobile products by GIGA-BYTE COMMUNICATIONS INC. mentioned in this document, including the device, accessories, software, text, music, and pictures, are owned by, or authorized by original manufacturers to GIGA-BYTE COMMUNICATIONS INC. Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of GIGA-BYTE COMMUNICATIONS INC. is prohibited.

GIGA-BYTE COMMUNICATIONS INC.

General Information

This section contains important information on safe and efficient operation. Please read this information before using the device. Ignorance of the following notices may lead to violations of the law.

- Before using the device, please make sure you have fully charged the battery.
- Do NOT remove the battery from the device during charging.
- Before inserting SIM card into the device, make sure that the device is switched off.
- Keep the battery in low battery status for long time might cause battery over-discharged or even reduce battery life. To maintain battery in good lifecycle please recharges it once in low battery.
- Please fully charge the battery if you are going to leave the phone without use for long time to prevent battery goes over-discharged.
- Do NOT attempt to disassemble the device on your own. This should be done by an authorized person.
- Use the device in accordance to instructions when in public facilities.
- In some countries, it is a violation against the law to record phone conversations. Always ask permission of the other party when you are going to record a conversation.
- To protect your ears, turn down the volume before you use stereo headsets or other audio devices.
- To avoid damaging the touch screen and the device, do NOT apply excessive pressure on them, and remove the device from your pants' pocket before you sit down. It is also recommended that you only use the stylus or your finger to interact with the touch screen. It is not covered by the warranty that you crack the touch screen because of the improper usage.
- When you use the device for a long time, such as talking on the phone, browsing online, or charging the battery, the device may become warm. In most cases, this condition is normal.
- Do NOT push unauthorized objects into slots and openings in your device.
- The device should be placed away from heat sources such as stoves, radiators, heat registers, or other products that produce heat.
- Condensation may form on or within your device, when you move your device between environments with very different temperature and/or humidity ranges. To avoid damaging your device, make the moisture to evaporate before you use the device.
- To avoid damaging your device, do NOT put your device on an unstable table, stand, bracket, or other places.
- Before you clean your device, unplug it, please. Use a damp cloth for cleaning, but do NOT use water, liquid cleaners, or aerosol cleaners to clean the touch screen.

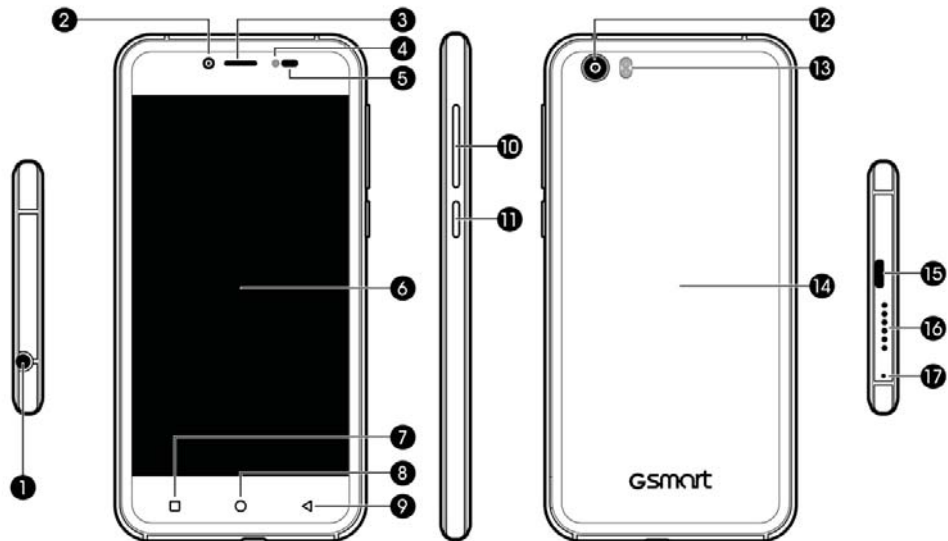 


Table of Contents

Copyright	1
General Information	2
1. Getting Started	4
1.1 Your Phone	4
1.2 Install or uninstall the SIM Card, Battery, and Memory Card	4
1.3 Charging Battery	6
1.4 Turn Phone On or Off	6
2. Basic	7
2.1 The Home Screen	7
2.2 Contacts	9
2.3 Phone Lock/Unlock	9
2.4 Personalization	10
2.5 Date and Time	10
3. Pre-Installed Programs Introduction	11
4. Phone Calls & Messages	12
4.1 Voice & Video Calls	12
4.2 Create / send text message	13
4.3 Multimedia Message	14
5. Wi-Fi & Bluetooth	14
5.1 Wi-Fi	14
5.2 Bluetooth	14
6. Camera	15
7. Manage Phone	16
7.1 Protect Phone	16
7.2 Backup or Reset Phone	16
8. Specifications	17

1. Getting Started


1.1 Your Phone



No	Items	No	Items
1	Earphone Jack	10	Volume Key
2	Front Camera	11	Power Key
3	Receiver	12	Camera
4	Flash	13	Flash
5	Proximity Sensor/ Light Sensor	14	Battery Cover
6	Display & Touch Screen	15	Micro USB Port
7	Recents	16	Speaker
8	Home	17	Microphone
9	Back		

1.2 Install / uninstall SIM Card, Battery, and Memory Card

 Install SIM card

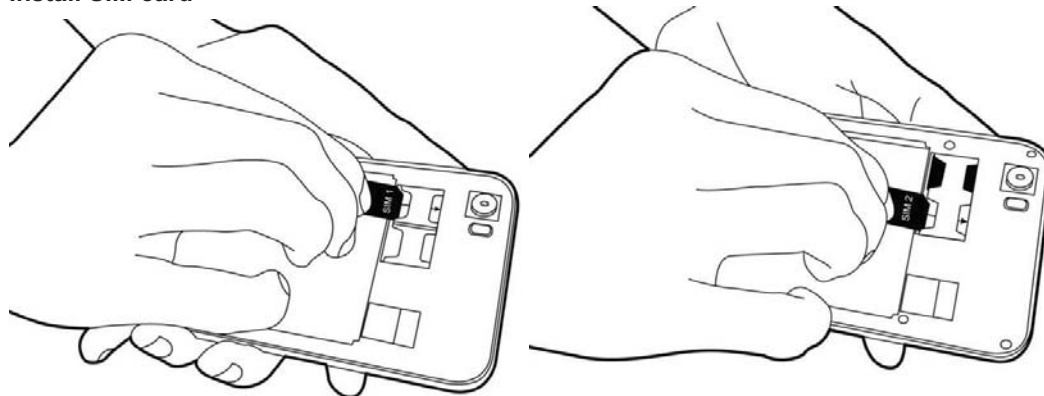

Install the SIM1 card

Install the SIM2 card

Remove SIM card

Turn off phone → slide SIM card out.

NOTE:

4G Data Service (if the SIM card supports)

- 4G data service is switchable between SIM1 and SIM2.
- One SIM card:

The inserted SIM slot will be assigned to 4G by default.

In SIM1	4G in SIM1
In SIM2	4G in SIM2

- Two SIM cards:

4G in SIM1 by default and switchable to SIM2.

	SIM1	SIM2
Factory default	4G & 3G	2G
User switchable	2G	4G & 3G

Tap  → SIM cards → Cellular data to select a SIM for data

 
- Data on/off switch: tap  → Data usage → cellular data

Battery

Phone comes with a battery. Battery life may vary depending on availability of local networks and individual usage.

Install battery

Put battery contacts connected to the connectors in battery slot.

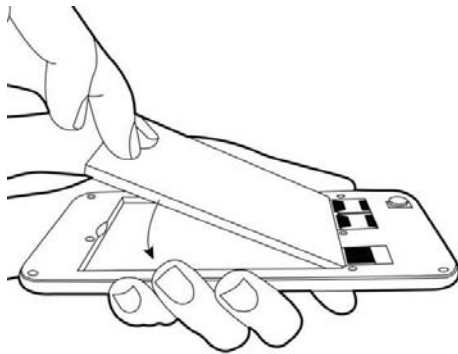

Remove battery

Use fingertip to lift battery and remove it.

 
Replace back cover

- (1) Insert cover into slot from the bottom.
- (2) Press all around back cover fully until hearing clicks.

Memory card

Micro SD card might be required to store photos, music, videos and other data if internal Storage is full.

Install memory card

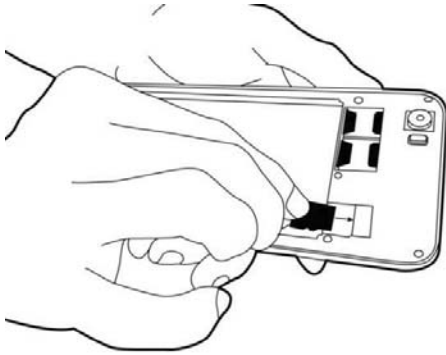

To remove the memory card

- (1) For safe removal, tap  → Storage & USB → tap  Unmount SD card
- (2) Push memory card to eject it from slot.

To set default storage

Tap  → Storage & USB → Default write disk to set default storage.

1.3 Charging Battery

Battery has been partially charged at factory, you may need to recharge it before you can switch on phone for the first time.

- (1) Connect USB cable to AC adapter → connect to device via USB cable.
- (2) Plug AC adapter to socket → start charging.
- (3) For safety, only use original charger that comes with your device. Any possible damage caused by using non-original charger or any other equipment will not be under GIGABYTE Communication Inc.'s liability.



NOTE:

CHARGE PHONE IMMEDIATELY IF BATTERY IS LOW. CHARGE FOR AT LEAST 10 MINUTES TO REACTIVATE BATTERY IF IT IS OVERDISCHARGED.

For safety, don't remove battery from phone while AC adapter is connected or while it is being charged.

1.4 Turn Phone on / off

Turn phone on

Press and hold power button until phone shown GSmart logo.

Turn phone off

- (1) Press and hold power button for few seconds.
- (2) A pop-up window appears → tap "Power off".

Set scheduled power on

- (1) Tap  → Set scheduled power on.
- (2) Tap one scheduled to set up the Time and Repeat → tap "DONE".

2. Basic

2.1 Home Screen

 
Default Home Screen:



Self-defined Home Screen: Add your favorite APP shortcuts and widgets.



Default items function

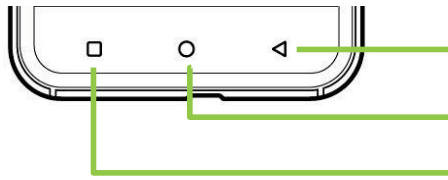

Items	Function
Back	Back to the previous page.
Home	Go to Home Screen. Long press to go to Google search.
Recents	Show recents. Long press to go to Menu.

Status Icons

Types	Icons	Descriptions
Phone call		Call in progress.
		Call on hold.
		Call muted.
		Speaker on.
Volume		Vibration mode.
		Wired headset connected.
Battery		Battery full.
		Battery low.
		Battery in charging.
Network and Connection		Signal strength indicator. Left: SIM1 Right: SIM2
		4G\ HSPA \3G \ EDGE \ GPRS is in progress. 4G:LTE H+: HSPA+ H: HSPA 3G: WCDMA E: EDGE G: GPRS
		Wi-Fi connected.
		Wi-Fi data in progress.
		Wi-Fi network detected.
		Airplane mode.
		Portable Wi-Fi hotspot activated.
		USB Tethering activated.
		Both USB tethering and Wi-Fi hotspot activated.
		Bluetooth on.
Notification		Unread text message.
		Unread e-mail.
		Unread Gmail.

Notification		Alarm.
		Event notification.
		Missed call.
		General notification.
		FM radio activated.
		Playing music.
		App downloading.
		App download/updated completed.

2.2 Contacts

Add a Contact

- (1) Tap  →  add a new contact.
- (2) Choose either of Google Account /SIM1/SIM2/Phone to store a new contact.
- (3) New contact screen appears.
- (4) Fill in contact information →  save.

NOTE:

Contact portrait is not editable to contacts stored in SIM cards.

Search for Contacts

Tap  to search.

2.3 Phone Lock/Unlock

Sleep mode

Press power key to turn display on or off.

Unlock phone

Drag  icon on screen → slide up to unlock.



2.4 Personalization

Wallpaper

Long press Home screen or tap  → Display → Wallpaper → get into settings.

(1) Tap  → select pictures.



(2) Tap pictures → preview, tap  confirm.



2.5 Date and Time

Set up date and time

(1) Tap Time Widget on Home screen.

(2) Tap .

(3) Tap  (lower-right) → to start settings.

Alarms

(1) Tap Time Widget on Home screen.

(2) Tap 

(3) Tap 



Calendar

Add new event

(1) Tap  → tap  (upper-right) → New event.

(2) Fill in event information.

3. Pre-Installed Programs Introduction

Icons	Programs	Description	Icons	Programs	Description
	Browser	Web/Internet browser.		Battery Doctor	Power management.
	Calendar	Schedule management.		Calculator	Calculation
	Chrome	Google browser service.		Camera	Capture images/videos.
	Clock	Arrange alarm clocks.		Clean Master	System optimizer.
	Contacts	Contacts folder.		CM Security	Antivirus app.
	Google Drive™	Google drive.		Downloads	View downloaded files.
	Emergency alerts	Information of emergency and alerts.		Email	E-mail app.
	FM Radio	FM radio app.		File Manager	Manage all files.
	Gallery	Photos / videos folder.		G-Connect	System update information.
	Google	Google app.		Gmail	Google e-mail service.
	Hangouts	Messenger.		Google+	Google social app.

Icons	Programs	Description	Icons	Programs	Description
	Messaging	SMS/MMS messenger.		Google Maps™	Map service.
	Phone	Phone dialer.		Music	Music player.
	Play Books	e-Bookstore.		Photos	Google gallery.
	Play Movies & TV	Video player.		Play Games	Game center.
	Play Newsstand	News services.		Play Music	Music player.
	Settings	Phone settings..		Play Store	App store.
	Sound Recorder	Record voice notes.		SIM Toolkit	SIM related apps.
	Voice Search	Searching by voice.		Videos	Videos folder.
	YouTube	Video service.		WPS Office	Office Software.

4. Phone Calls & Messages

4.1 Voice and Video Calls

Make a call from Phone screen

- (1) Tap  →  → Go into Phone screen.
- (2) Input phone numbers.
- (3) Tap  to call.

NOTE:

Tap  → delete. Tap and hold  → erase entire numbers.

Make a call from Contacts

 
- (1) Tap .
- (2) Tap a contact to call.

Make emergency calls


Dial 112 for emergency call

Answer a call

- Tap and hold  → slide to  to answer call.
→ slide to  to dismiss call.
→ slide to  to dismiss call and send message.

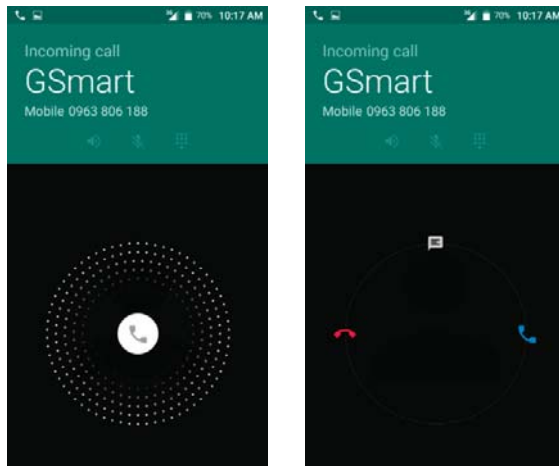

 - Tap  → answer call.
- Tap  → dismiss call.

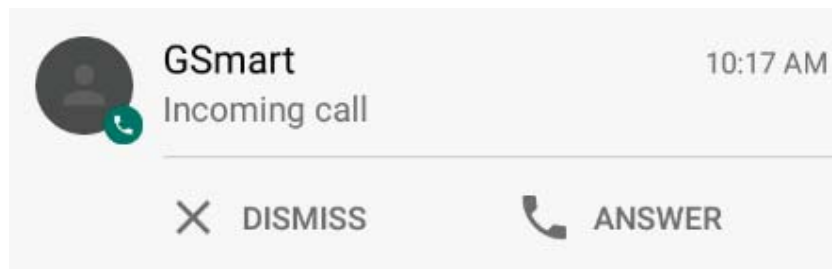

End a call

Tap  → end call.

Make a video call

- (1) Tap .
- (2) Tap .
- (3) Tap "NEW VIDEO CALL" .

4.2 Create / send text message

 
From Message screen

- (1) Tap .
- (2) Tap  to create new message.

From Contact screen

- (1) Tap . Choose contact.
- (2) Tap .

Google keyboard

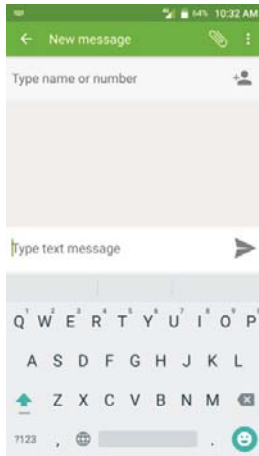

Icons	Function
	Capital letter mode.
	Symbols and numerical keyboard.
	Emoji.
	Input method switch.
	Delete.

Voice typing

Tap and hold → Google voice typing → tap to speak.

4.3 Multimedia Message

To send MMS from Message screen

- (1) Tap → tap → create new message.
- (2) Tap → attach pictures, videos, record audio, contact, calendar, or slide show. Message converts to MMS message automatically.

5. Wi-Fi & Bluetooth

5.1 Wi-Fi

- (1) Tap → to Wi-Fi main screen.
- (2) Switch to turn "Wi-Fi" on or off.

Connect to Wi-Fi network

- (1) Choose a Wi-Fi network to connect.
- (2) Enter password if it is encrypted.

 
5.2 Bluetooth

Turn Bluetooth on / off

Tap → to Bluetooth main screen.

6. Camera

Camera Function

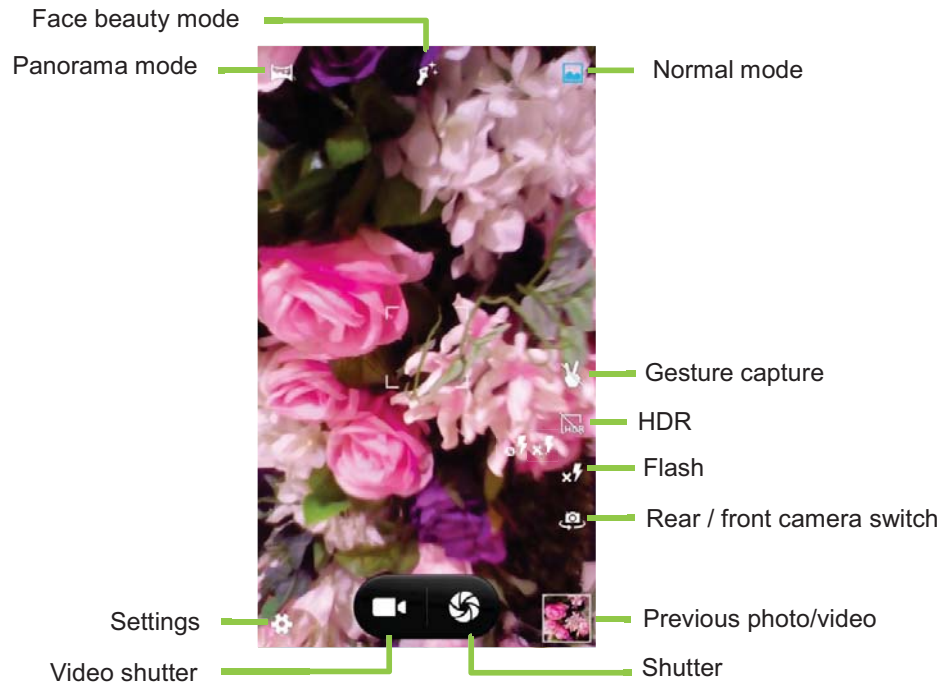

Taking photo

On the camera main screen:

- Tap  → take pictures.
- Tap **Volume Key** to take a picture.

Recording video

- (1) Tap  →  start recording.
- (2) Tap  → pause; tap  → continue recording.
- (3) Tap  again → stop recording and saved file.
- (4) During recording, tap  → take pictures.

 


7. Manage Phone

7.1 Protect Phone

Screen lock

There are five screen lock types can protect your phone.

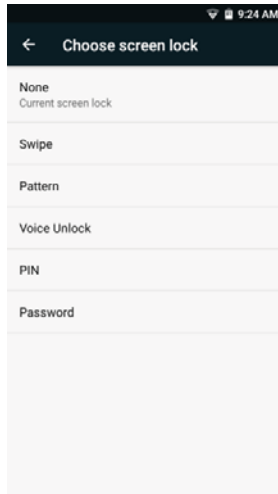

- (1) Tap  → Security → Screen lock → Choose one screen lock type.
- (2) Get into main setting screen and follow the instructions to set up.

Note:

Secure data by screen lock, required different screen unlock types every time after phone is turned on or waked up from sleep mode every time (screen is off).

Disable screen lock security

Tap  → Security → Screen lock → tap "None" disable it.

Enable the PIN of the SIM card

When PIN is enabled, required to enter PIN before using phone.

- (1) Tap  → Security → Set up SIM card lock.
- (2) Tap "SIM1" or "SIM2". (If SIM2 inserted).
- (3) Check "Lock SIM card". Input PIN → tap "OK".

7.2 Backup or Reset Phone

- (1) Tap  → Backup & reset.
- (2) Tap Factory data reset → Reset phone → Erase everything → reset phone.

NOTE:

Before resetting device, please remember to back up all data and information.

8.Specifications

System Information	
Platform	Android™ 6.0 Marshmallow
Processor	1GHz Quad Core
Memory	ROM 16GB/ RAM 2GB
Display	
Size	5"
Resolutions	1280 x 720pixels
Size	
Dimensions	146 x 72 x 7.5 mm (L x W x H)
Weight	150 grams with battery
Power	
Battery	Li-polymer battery pack 2200mAh
Power Adapter AC input	100-240V, 50/60Hz, 0.2A max.
DC output	5V, 1A
Standby time	Up to 550 hours (It may vary depending on networks and the individual usage.)
Talk time	Up to 12 hours (It may vary depending on networks and the individual usage.)
Radio Band & Standard	
LTE	800/ 1800/ 2600MHz (B3/ 7/ 20)
GSM/GPRS/EDGE	850/ 900/ 1800/ 1900 MHz
WCDMA/HSDPA	900 / 2100 MHz
Connectivity	
GPS	GPS, AGPS
Wi-Fi	WLAN 802.11 b/g/n
Bluetooth	Bluetooth 4.0 (BLE)
USB	Micro USB
Audio Jack	3.5 mm stereo audio jack
Digital Camera	
Rear Camera	8MP Color Camera with AF and Video Recording
Front Camera	5MP
External Memory	
Memory Card	Micro SD supports up to 32GB
Temperature	
Operating	0°C to 40°C
SIM Card Slot	
Dual SIM card slot.	

1. Specifications and accessories may differ subject to different SKUs or/and regions. The specification is subject to change without prior notice.
2. Mobile data interruption, unexpected error in CPU and high power consumption could be caused by in-app AD in Android phone. We suggest you try to remove



those apps with AD which had been installed in your device for preventing any abnormal situation happens and saving more power as well.

3. **Memory comprises of approximately 2 GB firmware, plus 11 GB of “Phone storage” for downloaded applications and their data, music, pictures, videos and documents.**

If this document is modified, please download the latest version on GSmart official website. www.gigabytecm.com

Android, Google, Google Play, the Google Play logo and other marks are trademarks of Google Inc.

Android 6.0, Marshmallow Introduction

Table of Contents

Chapter 1 Phone Functions & Input	2
1.1 Phone Calls	2
1.2 Video Calls	3
1.3 Using On-Screen Keyboard	3
Chapter 2 Email & Messages	4
2.1 Creating and sending a text message	4
2.2 E-mail Accounts	5
Chapter 3 Using the Internet	8
3.1 Connecting to the Internet	8
3.2 Bluetooth modes	8
Chapter 4 Multimedia Applications	10
4.1 Viewing Photos and Videos	10
4.2 Music	10
Chapter 5 Programs	13
5.1 Browser	13
5.2 Calculator	13
5.3 Calendar	13
5.4 Sound Recorder	14
5.5 Gmail	14
5.6 Maps	14
5.7 Clock	15
5.8 Play store	15
5.9 YouTube	15
5.10 Google search	15
5.11 Downloads	15
5.12 File Manager	16
5.13 FM Radio	16
5.14 Google+	16
5.15 Connecting your phone to a computer	17
5.16 Screenshots	17
Chapter 6 Managing Your Phone	18
6.1 Managing Basic Settings	18
6.2 Managing Your SIM Cards	19
6.3 Managing Your Apps	19
6.4 Protecting Your Accounts	19
6.5 Protecting Your Phone	20
6.6 Resetting Your Phone	21

1. Phone Functions & Input

Phone Functions

Tap .

1.1 Phone Calls

To make a call from the Phone screen

1. Go to the Phone screen.
2. Use the keypad to input phone number.
3. Tap .

NOTE:

Tap  to delete a number. Tap and hold  to erase entire numbers.

To make international calls

1. Go to the Phone screen.
2. Tap and hold 0 until the "+" is displayed which is international prefix code.
3. Enter the country code, area code, and phone number.
4. Then tap SIM1 or SIM2 to make the international call.

To accept or reject an incoming call

- To accept a call, slide to  on the screen.
- To reject a call, slide to  on the screen.

Quick response an incoming call

When there is an incoming call, you can quick response with message by sliding to  on the screen.

To put a call on hold

If you are having a call conversation, you can tap  to put the call on hold.

To switch between calls

If you are having a call conversation, and there is another incoming call, slide to  to put the first call on hold and answer the second call. Tap  to switch between calls.

To manage other voice call features

When you are having a call conversation

- Tap  to activate speakerphone, or tap  again to cancel it.
- Tap  to mute microphone, or tap  again to un-mute it.

Ending a call

Tap  End icon to end a call.

1.2 Video Calls

To make a video call from Hangouts

1. Tap .
2. Tap  > New video call.
3. Type name, phone or email. Then tap the contact.
4. Tap  to make the video call.

1.3 Using On-Screen Keyboard

On-screen keyboard appears in portrait mode when an application requires text input, such as messaging and writing e-mails. The keyboard input method is activated by the default settings.

Using on-screen keyboard

- Use the keys on the on-screen keyboard.
- Tap the keys to enter the characters.

Setting the Input Method from Settings Screen

1. Tap  > Language & input.
2. Select an input method you want to use.

Personal Dictionary

1. Tap  > Language & input > Personal dictionary.
2. Choose "For all languages" or Others.
3. Tap  to add the self-defined words in the personal dictionary for English or all languages. When you compose, you can use them. Tap the self-defined word in the personal dictionary to edit it or tap  to delete it.

Using Google Keyboard

- To toggle between upper and lower case letter display, tap .
- To display the numerical and symbols keyboard, tap .

Google Keyboard Settings

1. Tap  > Language & input
2. On Keyboard & input methods Screen, Tap Android Keyboard to do the preference settings ◦

2. Email & Messages

2.1 Creating and sending a message

Create and send messages

1. Text messages could be included text and emotional icons.
2. Multimedia messages/ MMS contain letters, an image, an audio, or a video file.
3. Support to send voice messages and attach files with ringtone and audio.

NOTE:

1. If you insert both of SIM1 and SIM2, the messages service will be set as default.
2. Tap  > SIM cards > SMS Messages to change the default setting.

From Message screen

1. Tap .
2. Tap  to create a new message.
3. Type the recipient's phone number or tap  to add from your contacts.
4. Type your message and tap  to send your message.

NOTE:

If you exit Messaging before sending, unsent message will be saved as a draft automatically.

From Contacts screen

1. Tap .
2. Tap a contact to display the contact information.
3. Tap  to send the message.
4. Compose your message and tap  to send your message.

From Phone screen

1. Tap .
2. Tap  tab to view all call history.
3. Tap a call contact from the call log.
4. Tap  to send the message.
5. Compose your message and tap  to send your message.

Receive and Manage messages

When you send and receive messages from a contact, these messages are grouped as a message thread. A message thread looks like an exchanged conversation.

To reply to a text message

1. Tap .
2. Tap a message you want to reply.
3. Type your message and tap  to send your message.

To forward a text message

 
1. Tap .
2. Tap a message to view the whole thread.
3. Tap and hold a message to show Message option list.
4. Tap "Forward".
5. Tap  to select recipient.
6. Tap  to send your message.

To delete all messages

1. Tap .
2. Tap  > Delete all threads.
3. Tap "Delete" to delete all messages in this message box.

To create a voice message

1. Tap .
2. Tap  to create a new message.
3. Tap  > .
4. Add "Ringtone" or "Audio" on the Message screen
5. Tap "Play" to listen to your recording again, Tap "Replace" to be replaced another attachment, or tap "Remove" to delete.
6. Type your message and tap  to send your message.

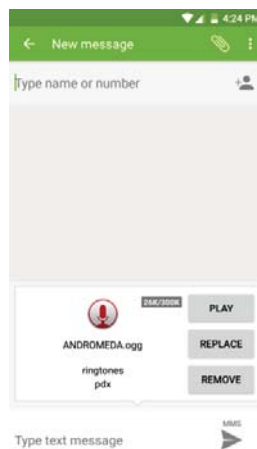

2.2 Email Accounts

All your received email messages are delivered to your phone.

Set up an Internet Email account

1. Tap .
2. Enter your e-mail address and Password. Tap "Next".
3. Select the e-mail account of types.
4. The phone will retrieve the e-mail settings automatically.

- If the e-mail settings are pre-configured, the e-mail setup wizard displays a successful message.
 - If the e-mail settings are not found, manual setup is in process automatically. You can follow the instructions to complete the settings.
5. Enter Account name and then, tap “Next” to finish the settings.

NOTE:

The Account name is the name shown on the Email screen.

To add the second Email account

1. Tap .
2. Tap  > Settings > Add an account.
3. Please follow the “Account setup” steps to finish the settings

To delete an Email account

1. Tap .
2. Tap  > Settings.
3. Tap one of your accounts (If you have two more email accounts).
4. Tap  > Accounts > Email .
5. Tap the account you want to delete >  > Remove account.

Composing and sending an Email

1. Tap .
2. Tap  > select an account.
3. Tap  to compose a new email.
4. Enter the recipient's email address.
5. Enter the Subject and compose your email.
6. Tap  to send your email.

Sending an E-mail from Contacts screen

1. Tap .
2. Tap a contact you want to email to.
3. Tap the contact's Email address. Tap “Email” in the submenu.
4. Enter the Subject and compose your email.
5. Tap  to send your email.

Adding attachments to an Email message

Before sending your message, tap  > Attach file, and then, choose an attachment you want to attach.

To reply or forward an Email

1. Open an e-mail.
2. Refer the following instructions:
 - **Reply:** Tap  to reply the email.

- **Reply all:** Tap  > to reply all recipients and sender.
 - **Forward:** Tap  > to forward the e-mail to other people.
3. Enter the recipient and compose your e-mail.
 4. Tap  to send your email.

To delete an Email

1. Tap .
2. In your mail Inbox, select the email you would like to delete.
3. Tap  to delete the email.

3. Using the Internet

3.1 Connecting to the Internet

Your phone connects to the Internet via:

- Wi-Fi
- GPRS/ EDGE/ 3G/ 3.5G/ HSPA+/4G

NOTE:

If you connect to the Internet, you may be charged. If you want to stop the connection, you need to tap  > Data usage to unmark data enabled.

Tethering & portable hotspot

1. Share your phone's mobile data connection via USB, Bluetooth, or as a portable Wi-Fi hotspot.
2. Tap  > More > Tethering & portable hotspot.
3. You can turn on/off USB tethering, Portable Wi-Fi hotspot, Bluetooth tethering and configure the Wi-Fi hotspot settings.

VPN settings

1. Tap  > More > VPN.
2. Tap  to edit VPN network.
3. You must set lock screen pattern, PIN or password before using credential storage. Please tap "OK" go to Unlock selection, then choose which way you want to lock the screen.
4. After you set it up. It will go back to VPN screen.
5. After filling in all necessary information, tap "Save" to finish the settings.

To start a data connection

If you set up multiple data connections, select the connection you want to use.

1. Tap  > SIM cards > Cellular data.
2. Choose a SIM card you want to enable data access over Mobile network.

Enabling data roaming

Please set up your data connection first, and then follow the steps as below:

1. Tap  > Data usage >  > Cellular networks.
2. Tap or slide Data roaming to turn it on .

3.2 Bluetooth modes

Bluetooth on your phone operates in three different modes:

- **On:** Bluetooth is turned on. Your phone detects other Bluetooth devices, but your phone is not visible to others.
- **Discoverable:** Bluetooth is turned on, but your phone is not visible to other Bluetooth devices.
- **Off:** Bluetooth is turned off.

To turn on/off Bluetooth

1. Tap  > Bluetooth.
2. Switch or tap to turn it on.
3. Tap the device's name to make your device visible to others.

Connecting to Bluetooth Devices

A connection to a Bluetooth device is called a partnership. You need to pair and create a partnership with a Bluetooth device to exchange information.

1. Tap  > Bluetooth.
2. Detected Bluetooth devices are displayed on the screen .Tap one device to connect.
3. Start to pair, enter the password, and then tap “OK” to finish pairing.

NOTE:

1. **The password enter on your phone must be the same one be entered on the device which you want to pair with. The password is required at the first time, once a partnership has been created, the password will no longer require again.**
2. **If you want to view the received files, you can tap  > Show received files.**

4. Multimedia Applications

4.1 Viewing Photos and Videos

To view photos in the album

1. Tap .
2. Tap one of picture folders to view the images in thumbnails.
3. Tap an image to view.
4. Slide the screen from left side to right side or from right side to left side to view all the photos in this album.

To play slideshow

1. While viewing an image, tap  > Slideshow.
2. Tap screen to stop the slide show.

To set the image as Wallpaper

1. While viewing the image, tap  > Set picture as > Wallpaper.
2. Drag your finger to select the crop area.
3. Tap  to set the image as the wallpaper.

To save an image as Contact photo

1. While viewing the image, tap  > Set picture as > Contact photo.
2. Choose a contact to add image.
3. Drag your finger to select the crop area.
4. Tap “SAVE” to save the image as the contact photo.

To edit an image

While viewing the image, to edit an image:

- To crop, tap  > Crop. Drag your finger to select the area you want to keep. Tap “SAVE” to save the image.
- To add effects, tap  > Edit. Using effects on the bottom to apply to the image. Tap “SAVE” to save the image.

To view file properties

1. While viewing the image, tap  > Details.
2. The file information is displayed. Tap “Close” to return to the image.

 
Play video from the video file

 
1. Tap  > select a video file you want.
2. Tap  or  to play or stop it.

4.2 Music

To play music

1. Tap .
2. Tap Songs, and all songs on the phone will be displayed.
3. Tap to select a song, and then it will play automatically.

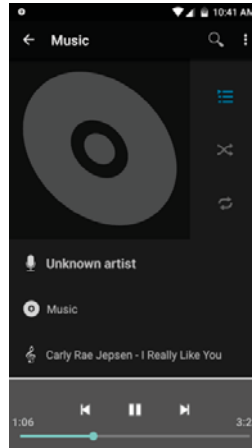

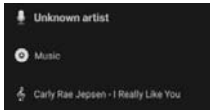Icon	Function
	Album art picture or animation
	The area of audio information
	Slide to go forward or backward
	To play the song
	To pause the song
	Previous song
	Next song
	Tap to go to playlists
	To start or close shuffle function
	To repeat the current song/ all songs

Changing Playback options

While playing music, tap  button on the up right of screen.

- Tap “Party shuffle” to play all songs in shuffle order.
- Tap “Add to playlist” to add the song.
- Tap “Use as ringtone” to set up your personal ringtone.
- Tap “Delete” to delete the song which is playing.
- Tap “Library” to see all playlists.

To edit music

You could set up effects, tap  > Sound effects.

1. Drag or tap Equalizer to turn it on.
2. Tap arrow to show different effect list

3. Tap to select an effect you want. Items will be adjusted automatically.
4. Tap arrow to show different preset reverb list.
5. Tap to select an effect you want.

Creating a new playlist

Add songs to a specific playlist or create a playlist.

1. Tap .
2. In Songs tab, long press a song you want to add, then tap “Add to playlist” in the pop-up submenu.
3. Tap “New” to create a new playlist. The song will be added to the new playlist automatically.
4. You may check this new playlist in Playlists tab.

To remove a music file from the playlist

1. Tap .
2. In Songs tab, tap and hold the song you want to delete. Then, tap “Delete” in the pop-up submenu.
3. Tap “OK”, and then, the song will be deleted from the list.

5. Programs

5.1 Browser

Open the Browser to view web pages.

1. Tap .
2. An address bar appears at the upper side of screen, and you can type the URL there.
3. You can open several web pages at the same time.
 - Tap  to view all of web pages that are opening.
 - Tap  to open a new web page.
 - Tap  to close a web page.
 - Tap  to view Bookmarks, History and Saved pages.

To set the Home page

1. While viewing a web page, tap and hold Recents > Setting > General > Set homepage.
2. Tap "Other" to enter the URL of the page that you want to set as your home page.
3. Tap "OK" to save your settings.

To add the Bookmarks

1. While viewing a web page, tap and hold Recents > Save to bookmarks.
2. Edit the bookmark label and other information if needed.
3. Tap "Add to" to save the bookmark to Home screen, Bookmarks, or Other Folder.
4. Tap "OK" to save your settings.

Managing Bookmarks

On a web page, tap  > Bookmarks / History. You can view

5.2 Calculator

With Calculator, you can perform basic arithmetic functions on your phone.

1. Tap .
2. In Calculator screen, Slide the screen from right side to left side or from left side to right side to select the advanced panel.

5.3 Calendar

Calendar helps you schedule and sound alarms for appointments, meetings, and events.

2. Tap .
3. If you do not log in your Google Account, tap  > Settings > ADD ACCOUNT to enter your email or create a new account. Please follow the on-screen instruction to log in.
4. Tap Calendar arrow > Day, Week, Month, or Agenda to change the displays of your events.

To view an event

1. Tap .
2. Tap Calendar arrow > Agenda to display the events.

To add and schedule an event

1. Tap .
2. Tap  > New event.
3. Enter the details of the event.
4. When finished, tap "DONE" to return to the calendar.

NOTE:

The added and scheduled events will be showed in the status bar.

5.4 Sound Recorder

1. Tap .
2. On the recorder screen, tap  to record. Tap  to end recording. Then Tap  to play.
3. Tap "Discard" to delete an audio file. Tap "Save" to store an audio file.

To play an audio file

1. Tap  > Playlists > My recordings.
2. Tap an audio file to play.

5.5 Gmail

Gmail is Google's web-based email service. Gmail can be configured when you set up your phone for the first time. Depending on your settings of the synchronization, Gmail on your phone may be synchronized with your Gmail account on the web automatically.

1. Tap .
2. If you do not log in your Google Account, tap  to add an email address. Please follow the on-screen instruction to log in.
3. Once logged in, you can begin reading and sending emails from your Gmail account.

To remove Gmail account

1. Tap  > Accounts > the preferred Gmail account.
2. Tap  > Remove account.

5.6 Maps

Mapping service help you search for the places you want.

To open Maps

1. Tap .

Icons	Function
	Display your current location
	Select different layers, such as Traffic, Satellite, Transit Lines, etc.
	Type in a keyword and search for a place you want
	Input the start point and end point to get the direction
	Find places, such as restaurants, cafes, bars, attractions, etc.

2. Tap  to set more options as below:
 - To view about, terms, and privacy: Tap  > Settings > About, terms & privacy.
 - To show extra functions on map: Tap  > Settings.

NOTE:

If you connect to the Internet and turn on the GPS, you may be charged.

5.7 Clock

1. Tap  .
2. Tap  to set alarms. Tap  to use Timer function. Tap  to use Stopwatch function. Tap  to back to Clock function.
3. Tap  to select the time in different cities. Tap  > Settings > adjust Clock / Alarms settings.

5.8 Play store

Google Play store allows you to find and download applications and fun games to your phone.

1. Tap  .
2. If you do not log in your Google Account, type your email to enter, or create a new account immediately. Please follow the on-screen instruction to log in.
3. Once logged in, you can search and download programs from the market. Slide the screen to switch the pages of Google Play store.
4. You can also tap  > Tap "My apps & games" to view the programs you have downloaded.

5.9 YouTube

YouTube is an online video streaming service that allows you to view, search, and upload videos.

To Play YouTube

1. Tap  .
2. Videos are grouped into categories. Tap a category to watch the available videos.
3. Tap a video to play.

To upload your video

1. Tap  .
2. Tap  > Sign in. Then select one of your accounts to sign in.
3. Tap  then Tap a video to upload.

5.10 Search

Search for the information in the Internet and on the phone. Tap  . You can also see the Google search bar on the Home screen.

5.11 Downloads

Files and other items you downloaded in Email or Browser are stored. You can view, reopen or delete what you've downloaded.

1. Tap .
2. Tap  to choose "By name" or "By date modified" or "By size". Or tap  > Grid view.

5.12 File Manager

File manager helps you manage the files in your phone and in your SD card.

1. Tap .
2. Tap the folder you want to browse it.

5.13 FM Radio

Tap .

Please plug in your earphone before listening.



Icons	Function
	Open the channel list
	Close FM Radio
	More functions
	Add to favorites
	Previous radio frequency/ Next radio frequency
	Previous channel/ Next channel
	Choose Earphone or Speaker

5.14 Google+

You can check your friends' updates, post updates of your own and chat with your friends in Google+.

1. Tap .
2. If you do not log in your Google Account, type your email to enter, or create a new account

right away. Please follow the on-screen instruction to log in.

5.15 Connecting your phone to a computer

1. Use USB cable connect phone with computer.
2. Slide down Status Bar and tap “USB for charging” on your device. Please choose one of modes to connect with your computer.

5.16 Screenshots

1. Please press the and hold “Volume Down Key” and “Power Key” at the same time to capture any screen from the device.
2. Slide down Status Bar then you can share or delete immediately. Or tap  > view screenshots.

6. Managing Your Phone

6.1 Managing Basic Settings

Date and Time

You can set up the date and the time on your phone.

To set up the date and time

1. Tap  > Date & time.
2. If you turn on “Automatic data & time”, the system will get the information of the current date and time automatically from network or GPS. You can set up the date and the time manually also.
3. If you check “Automatic time zone”, the system will get the information of time zone automatically. You can tap “Select time zone” to select a time zone from the list also.
4. Tap “Set date”. Please adjust the month, the day, and the year. Tap “OK” to save the settings.
5. Tap “Set Time”. Please adjust the hour and the minute. You can switch AM/PM. Tap “OK” to save the settings.
6. Check “Use 24-hour format” if you want.

Setting Alarms

You can set up many alarms on your phone.

To set the alarm

1. Tap .
2. Tap  to set up a new alarm.
3. Tap  to adjust the hour and the minute. You can switch AM/PM. Tap “OK” to save the settings.
4. Tap “Repeat” to select a day to sound the alarm.
5. Tap “CESIUM” to set up the preferred ringtone as the alarm sounds. Tap “OK” to save the settings.
6. Check “Vibrate” to enable/disable the vibration as the alarm sounds.
7. Tap “Label” to enter the description for the alarm.

To turn off the backlight when the phone is idle

1. Tap  > Display > Sleep.
2. Select from the list of screen timeout. Your setting is saved automatically.

To adjust the brightness

1. Tap  > Display > Brightness level.
2. Drag the slider of brightness to adjust the brightness.
3. Or select “Adaptive brightness” to let device adjust brightness by itself.

To change the screen orientation

1. Tap  > Accessibility.
2. Check “Auto-rotate screen” to adjust the screen automatically.

To display the screen never sleep while charging

1. Tap  > About phone.
2. Tap five times on "Build number".
3. "Developer options" will be show up.
4. Select "Stay awake" to display the screen never sleep while charging.

To edit UI Tuner

1. Slide down Status Bar and slide down again shows Quick Setting. Or two-finger slide down from the home screen will take you straight there.
2. Long pressing  and release until setting icon rotate in high speed. System UI Tuner will appear in the bottom of Settings menu.
3. System UI Tuner > Quick Settings > you can add or remove to rearrange it.
4. Status Bar > tap or slide to decide which icons will be displayed on the status bar.

6.2 Managing your SIM cards

Setting the default SIM for Calls / SMS messages

If you insert SIM1 and SIM2 at the same time, please follow the step as below:

1. Tap  > SIM cards.
2. Tap "Cellular data" / "Calls" / "SMS messages" to show option list.
3. Select one of SIM cards, or "Always ask".

6.3 Managing your apps

Search apps

1. Press and hold  can reach app search bar directly.
2. Type the app name which you want to search.

Setting default apps

We can exchange default apps of Browser, Phone or SMS apps whenever necessary.

1. Tap  > Apps >  > Default Apps.
2. Choose Browser / Phone / SMS app to set up.

Setting app permissions

We decide all permissions of each app ,such as contacts, camera, microphone, location, etc.

1. Tap  > Apps > tap one app you are going to set up > Permissions.
2. Tap or slide to turn on / off the permissions.

Setting app links

When we open a link on smart phone, determine which the app can support.

1. Tap  > Apps > tap one app you are going to set up > Open by default.
2. Tap "Supported links" > check which link does app support.
3. Tap "Open supported links" > choose open in app or not.

6.4 Managing your accounts

Adding one or more Google Accounts

1. Tap  > ACCOUNTS.
2. Tap "ADD ACCOUNT".
3. Tap "Google".
4. Type your email to enter, or create a new account immediately. Please follow the

on-screen instruction to log in.

Syncing all your accounts automatically

1. Tap  > ACCOUNTS.
2. Tap the account you want to sync.
3. Tap  > Sync now.

Removing your account

1. Tap  > ACCOUNTS.
2. Tap the account you want to remove.
3. Tap  > Remove account.

NOTE:

1. **Let Google apps access your location, please tap  > Personal > Google > Location > ON.**
2. **To allow location access by non- Google apps, please go to  > Personal > Location.**

6.5 Protecting Your Phone

You can protect your phone from unauthorized users by requiring the PIN or entering a password.

Set up Password Protection

1. Tap  > Security > Screen lock > Password.
2. Enter your password, and then, tap “Continue”. Confirm your password, then, tap “OK”.
3. If you want to disable screen lock security, please tap  > Security > Screen lock.
Confirm your password, and then tap “Continue”. Tap “None” to disable it.

Set up unlock pattern

You can further secure your data by locking the screen and requiring a screen unlock pattern every time after your phone is turned on or it wakes up from the sleep mode every time (screen is off).

1. Tap  > Security > Screen lock > Pattern.
2. Draw the unlock pattern by connecting at least four dots. Then tap “CONTINUE”.
3. Draw the unlock pattern again, and then, tap “CONFIRM”.
4. If you want to disable the function, please tap  > Security > Screen lock. Confirm the saved pattern, and then, tap “None” to disable it.

Set up Voice Unlock

There are two kinds of Voice Unlock.

- Purely unlock command.
 1. Tap  > Security > Screen lock > Voice Unlock

2. Tap Unlock command > RECORD, follow the instruction to complete.

- We can directly launch Phone / Messaging / Camera after unlock a voice lock.

1. Tap  > Security > Screen lock > Voice Unlock.
2. Choose Wake up command 1 / 2 / 3 > Choose the function you want to launch after unlock > CONTINUE.
3. Tap RECORD, follow the instruction to complete setting > OK.

6.6 Resetting Your Phone

With Clean Boot, you can reset your phone to its factory defaults. When you reset your phone, the data stored in your phone may be erased.

1. Tap  > Backup & reset.
2. Tap Factory data reset > Reset phone > Erase everything to reset the phone.

NOTE:

Before reset your device, please remember to back up all your data and information.

Check IMEI on the phone

You may check IMEI on the phone, please choose the below instructions:

- Input *#06# · IMEI will automatically appear on the screen.
- Or tap  > About phone > Status > IMEI information.

Functions and applications may vary by model.

Please visit www.gigabyte.com and download the latest version if any.