



USER GUIDE

spectrum™ by LG

USER GUIDE

P/N: MF167227501 (1.1) MM

 This booklet is made from 60% post-consumer recycled paper. Printed in Mexico.  FSC



spectrum™ by LG

GUÍA DEL USUARIO

spectrum™ by LG



*Copyright©2012 LG Electronics, Inc. **All rights reserved.**
LG and the LG logo are registered trademarks of LG Group
and its related entities. Spectrum™ is a trademark of LG
Electronics, Inc. All other trademarks are the property of
their respective owners.*

When using this product, the safety precautions below must be taken to avoid possible legal liabilities and damages.

Retain and follow all product safety and operating instructions. Observe all warnings in the product operating instructions. To reduce the risk of bodily injury, electric shock, fire, and damage to the equipment, observe the following precautions.

ELECTRICAL SAFETY

This product is intended for use when supplied with power from the designated battery or power supply unit. Other usage may be dangerous and will invalidate any approval given to this product.

SAFETY PRECAUTIONS FOR PROPER GROUNDING INSTALLATION

CAUTION: Connecting to improperly grounded equipment can result in an electric shock to your device. This product is equipped with a USB cable for connecting to a desktop or notebook computer. Be sure your computer is properly grounded (earthed) before connecting this product to the computer. The power supply cord of a desktop or notebook computer has an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet which is properly installed and grounded in accordance with all local codes and ordinances.

SAFETY PRECAUTIONS FOR POWER SUPPLY UNIT

Use the correct external power source

A product should be operated only from the type of power source indicated on the electrical ratings label. If you are not sure of the type of power source required, consult your authorized service provider or local power company. For a product that operates from battery power or other sources, refer to the operating instructions that are included with the product.

Handle battery packs carefully

This product contains a Li-ion battery. There is a risk of fire and burns if the battery pack is handled improperly. Do not attempt to open or service the battery pack. Do not disassemble, crush, puncture, short external contacts or circuits, dispose of in fire or water, or expose a battery pack to temperatures higher than 60°C (140°F).

WARNING: *Danger of explosion if battery is incorrectly replaced. To reduce risk of fire or burns, do not disassemble, crush, puncture, short external contacts, expose to temperature above 60°C (140°F), or dispose of in fire or water. Replace only with specified batteries. Recycle or dispose of used batteries according to the local regulations or reference guide supplied with your product.*

Take extra precautions

- Keep the battery or device dry and away from water or any liquid as it may cause a short circuit.
- Keep metal objects away so they don't come in contact with the battery or its connectors as it may lead to short circuit during operation.
- The phone should be only connected to products that bear the USB-IF logo or have completed the USB-IF compliance program.
- Do not use a battery that appears damaged, deformed, or discolored, or one that has any rust on its casing, overheats, or emits a foul odor.
- Always keep the battery out of the reach of babies and small children, to avoid swallowing of the battery. Consult a doctor immediately if the battery is swallowed.
- Only use the battery with a charging system that has been qualified with the system per this standard, IEEE-Std-1725-200x. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage or other hazard.
- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725-200x. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.

- Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- If the battery leaks:

Do not allow the leaking fluid to come in contact with skin or clothing. If contact occurs, flush the affected area immediately with clean water and seek medical advice.

Do not allow the leaking fluid to come in contact with eyes. If contact occurs, DO NOT rub; rinse with clean water immediately and seek medical advice.

Take extra precautions to keep a leaking battery away from fire as there is a danger of ignition or explosion.

SAFETY PRECAUTIONS FOR DIRECT SUNLIGHT

Keep this product away from excessive moisture and extreme temperatures. Do not leave the product or its battery inside a vehicle or in places where the temperature may exceed 140°F (60°C), such as on a car dashboard, window sill, or behind glass that is exposed to direct sunlight or strong ultraviolet light for extended periods of time. This may damage the product, overheat the battery, or pose a risk to the vehicle.

PREVENTION OF HEARING LOSS

CAUTION: *Permanent hearing loss may occur if earphones or headphones are used at high volume for prolonged periods of time.*

SAFETY IN AIRCRAFT

Due to the possible interference caused by this product to an aircraft's navigation system and its communications network, using this device's phone function on board an airplane is against the law in most countries. If you want to use this device when its use is restricted on board an aircraft, remember to switch to Airplane Mode which turns off RF functions that could cause interference.

ENVIRONMENT RESTRICTIONS

Do not use this product in gas stations, fuel depots, chemical plants or where blasting operations are in progress, or in potentially explosive atmospheres such as fueling areas, fuel storehouses, below deck on boats, chemical plants, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Please be aware that sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

EXPLOSIVE ATMOSPHERES

When in any area with a potentially explosive atmosphere or where flammable materials exist, the product should be turned off and the user should obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Users are advised not to use the equipment at refueling points such as service or gas stations, and are reminded of the need to observe restrictions on the use of radio equipment in fuel depots, chemical plants, or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. These include fueling areas, below deck on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

ROAD SAFETY

Vehicle drivers in motion are not permitted to use communication services with handheld devices, except in the case of emergency. In some countries, using hands-free devices as an alternative is allowed.

SAFETY PRECAUTIONS FOR RF EXPOSURE

- Avoid using your phone near metal structures (for example, the steel frame of a building).
- Avoid using your phone near strong electromagnetic sources, such as microwave ovens, sound speakers, TV and radio.
- Use only original manufacturer-approved accessories, or accessories that do not contain any metal.
- Use of non-original manufacturer-approved accessories may violate your local RF exposure guidelines and should be avoided.

INTERFERENCE WITH MEDICAL EQUIPMENT FUNCTIONS

This product may cause medical equipment to malfunction. The use of this device is prohibited in most hospitals and medical clinics.

If you use any personal medical device(s), consult the manufacturer of your device(s) to determine if the device(s) are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

HEARING AIDS

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider, or call the customer service line to discuss alternatives.

NON-IONIZING RADIATION

Your device has an internal antenna. This product should be operated in its normal-use position to ensure the radiative performance and safety from interference. As with other mobile radio transmitting equipment, users are advised that for satisfactory operation of the equipment and for personal safety, it is recommended that no part of the human body be allowed to come too close to the antenna during operation of the equipment. Use only the supplied integral antenna. Use of unauthorized or modified antennas may impair call quality and damage the phone, causing loss of performance and SAR levels exceeding the recommended limits as well as result in non-compliance with local regulatory requirements in your country. To assure optimal phone performance and ensure human exposure to RF energy is within the guidelines set forth in the relevant standards, always use your device only in its normal-use position. Contact with the antenna area may impair call quality and cause your device to operate at a higher power level than needed. Avoiding contact with the antenna area when the phone is IN USE optimizes the antenna performance and the battery life.

HAC

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

Important Customer Information.....	1
Table of Contents	7
Technical Details.....	10
The Basics.....	15
Phone Overview	15
Installing the Battery and microSD Card.....	18
Charging the Phone.....	20
Optimizing Battery Life	21
Turning the Phone On and Off.....	23
Getting answers about how to use phone	25
Phone's Status Icons	27
Getting to Know the Home Screen	29
Touchscreen.....	31
Applications: How to View, Open and Switch.....	34
Working with Menus	37
Managing Notifications	38
Searching Your Phone and the Web.....	39
Locking the Screen	40
Customizing the Home Screen	43
Connecting Quickly With Your Contacts.....	45
Connecting to Networks and Devices	46
Connecting to Wi-Fi Networks	46
microSD Card	52
Calls	54
Placing and Ending Calls	54
Answering or Rejecting Calls.....	55
Working with the Call Log.....	57
Calling Your Contacts	58
Voice Dialer.....	59
Options During a Call.....	59
Managing Multiple Calls.....	61
Listening to Your Voicemail	62

Web.....	63
Browser	63
Maps.....	69
Checking the Weather	71
Changing Weather Settings.....	72
Backup Assistant Plus	73
Communication	75
Contacts.....	75
Email.....	83
Visual Voice Mail	85
Gmail	86
Messaging.....	91
Talk	99
Voice Dialer.....	102
Entertainment.....	103
Camera.....	103
Video Camera.....	107
Gallery	109
Smart Movie HD.....	113
Play Store.....	114
Music.....	117
SmartShare.....	122
Video Player.....	124
YouTube™	126
Voice Recorder	128
Tools.....	129
Calendar.....	129
Calculator.....	134
Alarm/Clock.....	135
Polaris Office.....	137
Settings	138

Safety.....	152
TIA Safety Information.....	152
Safety Information.....	156
Caution:	
Avoid potential hearing loss.....	159
FDA Consumer Update.....	162
10 Driver Safety Tips.....	169
Consumer Information on SAR.....	171
FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices.....	173
Specifications	175
FAQ	176
LIMITED WARRANTY STATEMENT	183
Index	186

Technical Details

CDMA Standard	Designator	Description
Basic Air Interface	TIA/EIA-95A TSB-74 ANSI J-STD-008 TIA/EIA-IS2000	CDMA Dual-Mode Air Interface 14.4kbps Radio Link Protocol and Inter-band Operations IS-95 Adapted for PCS Frequency Band CDMA2000 1xRTT Air Interface
Network	TIA/EIA/IS-634 TIA/EIA/IS-651 TIA/EIA/IS-41-C TIA/EIA/IS-124	MAS-BS PCSC-RS Intersystem Operations Non-Signaling Data Communications
Service	TIA/EIA/IS-96-B TIA/EIA/IS-637 TIA/EIA/IS-657 IS-801 TIA/EIA/IS-707-A	Speech CODEC Short Message Service Packet Data Position Determination Service (gpsOne) High Speed Packet Data
1x EV-DO Related Interface	TIA/EIA/IS-856 TIA/EIA/IS-878 TIA/EIA/IS-866 TIA/EIA/IS-890	CDMA2000 High Rate Packet Data Air Interface 1x EV-DO Inter-Operability Specification for HRPD Access Network Interfaces Recommended Minimum Performance Standards for HRPD High Rate Packet Data Access Terminal Test Application Specification (TAS) for High Rate Packet Data Air Interface

LTE Standard	Designator	Description
Basic Air Interface	TS 36.101 TS 36.104	Evolved Universal Terrestrial Radio Access (E-UTRA); User Equipment (UE) radio transmission and reception Evolved Universal Terrestrial Radio Access (E-UTRA); Base Station (BS) radio transmission and reception
Conformance Test	TS 36.521-1 TS 36.521-2 TS 36.521-3	Evolved Universal Terrestrial Radio Access (E-UTRA); User Equipment (UE) conformance specification; Radio transmission and reception; Part 1: Conformance testing Evolved Universal Terrestrial Radio Access (E-UTRA); User Equipment (UE) conformance specification; Radio transmission and reception; Part 2: Implementation Conformance Statement (ICS) Evolved Universal Terrestrial Radio Access (E-UTRA); User Equipment (UE) conformance specification; Radio transmission and reception; Part 3: Radio Resource Management (RRM) conformance testing

FCC RF Exposure Information

WARNING! Read this information before operating the phone.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to Radio Frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and those international standards.

Bodily Contact During Operation

This device was tested for typical use with the back of the phone kept 0.39 inches (1.0 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.39 inches (1.0 cm) must be maintained between the user's body and the back of the phone, including the antenna. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Avoid the use of accessories that cannot maintain 0.39 inches (1.0 cm) distance between the user's body and the back of the phone and have not been tested for compliance with FCC RF exposure limits.

Vehicle-Mounted External Antenna

(Optional, if available.)

To satisfy FCC RF exposure requirements, keep 8 inches (20 cm) between the user / bystander and vehicle-mounted external antenna. For more information about RF exposure, visit the FCC website at www.fcc.gov.

FCC Notice and Cautions

This device and its accessories comply with part 15 of FCC rules.

Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that causes undesired operation.

Any changes or modifications not expressly approved in this user guide could void your warranty for this equipment. Use only the supplied antenna. Use of unauthorized antennas (or modifications to the antenna) could impair call quality, damage the phone, void your warranty and/or violate FCC regulations.

Don't use the phone with a damaged antenna. A damaged antenna could cause a minor skin burn. Contact your local dealer for a replacement antenna.

Part 15.19 statement

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions:

- (1) This device & its accessories may not cause harmful interference.
- (2) This device & its accessories must accept any interference received, including interference that may cause undesired operation

Part 15.21 statement

Changes or modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If you experience interference with reception (e.g., television), determine if this equipment is causing the harmful interference by turning the equipment off and then back on to see if the interference is affected. If necessary, try correcting the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The phone operates on Verizon's 4G network, based on Long Term Evolution (LTE) technology and Mobile Broadband 4G networks in the United States*.

Now you can connect easily at high speeds to the Internet, your corporate Intranet, and your email while you're away from the office.

* Service not available everywhere. Visit website (verizonwireless.com/4G) for a complete list of available areas.



* Information subject to change.

Phone Overview

Front View



NOTES · All screen shots in this guide are simulated. Actual displays may vary.

- Tap the **Apps Key**  then tap **Guided Tours**  to access the brief & full device guides, video tutorials, and icon glossary. You can get information in detail right from your phone.

- 1. Earpiece** Lets you hear callers and automated prompts.
- 2. Quick Keys**
 - **Phone Key** Opens the **Phone** application for access to the dialpad, Call log, Contacts list, and Groups.
 - **Contacts Key** Opens the **Contacts** application.
 - **Messaging Key** Opens the **Messaging** application.
 - **Apps Key** Opens the **Apps screen**, where you can view all of your installed applications.
- 3. Menu Key** Opens an Options menu with options that affect the current screen or application. Tap and hold to access the Quick Search box.
- 4. Home Key** Returns to the Home screen. If you're already viewing one of the Home screen extension canvases, it navigates you to the central Home screen canvas. Tap and hold to view the most recently used applications.

5. **Microphone** Transmits your voice to the other caller and for voice-activated functions.
6. **Back Key** Returns to the previous screen. Also closes pop-up display items, such as menus, dialog boxes, and the on-screen keyboard.
7. **Touchscreen** Displays all of the information needed to operate your phone, such as applications, call status, date, time, signal status, and battery strength.
8. **Front Camera Lens** Use for taking pictures and recording videos of yourself. You can also use this for video chatting. Keep it clean for optimal performance.
9. **Proximity Sensor** Senses proximity towards other objects (such as your head) so that tap commands are not accidentally activated during a call.
NOTES
 - Do not block the sensor or near the sensor to avoid problems with the tap operations.
 - The use of a film cover produced by manufacturers other than LG can cause a disturbance in tap operations, the display, etc.
10. **Power/Lock Key** Locks the screen with a single press. Press and hold to open the phone Options menu for the following options: Power off, Power off and restart, and Airplane mode. You can also change the ringer type from this menu.

Rear View



11. **Rear Camera Lens** Use for taking pictures and recording videos. Keep it clean for optimal performance.
12. **Back Cover** Encloses the battery compartment.
13. **Speaker** Sound comes from the rear speaker instead of the earpiece (e.g., the speakerphone function, music player function, etc.).

Side Views and Top View



14. **USB/Charger Port** Allows you to connect the phone charger, USB Cable, or other compatible accessories.
15. **3.5mm Headset Jack** Allows you to plug in an optional headset for convenient, hands-free conversations. You can also plug in headphones to listen to music.
16. **Volume Keys** Allow you to adjust the ringer, media volumes, or the in-call volume during a call.

Installing the Battery and microSD Card

NOTE It is important to fully charge the battery before initial use of the phone.

Installing the battery

The phone comes with a rechargeable battery. Keep the battery charged while not in use in order to maximize talk, use, and standby time. The battery charge level is shown at the top right corner of the screen.



1 Use the fingertip cutout at the bottom of the phone to remove the back cover.



2 Align the battery contacts with the terminals in the battery compartment and push the battery down until it clicks in place.



3 Place the battery cover over the battery compartment, then press it downward until it clicks into place.

Removing the battery

1. Turn the phone off and use the fingertip cutout at the bottom of the phone to remove the battery cover.



2. Use the fingertip cutout at the bottom left corner of the battery compartment to lift the battery out.



Inserting a microSD card

Turn the power off. Remove the battery cover and the battery (as demonstrated in the previous instructions).



Locate the microSD card slot (microSD is inscribed near the slot opening). Position the microSD card with the logo facing up and slide it into place until it is fully inserted and locked in place.

NOTE The microSD card can be easily damaged by improper operation. Please be careful when inserting, removing or handling it.



To remove the microSD card

Turn the power off. Remove the battery cover and take the battery out. Locate the microSD card slot. Gently pull the microSD card out to remove it.




To unmount the microSD card

It is important to unmount the card to avoid damage to the card or data saved on the card.

1. From the Home screen, tap the **Apps Key** .
2. Tap **Settings**  > **Storage**.
3. Tap **Unmount SD card** > **OK**.

Memory encryption

- ▶ You can encrypt all data in phone and the SD card.
- ▶ Data cannot be encrypted when the battery level is less than 80%.
- ▶ While encrypting, you cannot access other functions.
- ▶ Do not unplug your charger while encrypting.
- ▶ Do not connect the USB Cable while encoding.
- ▶ Do not take out the SD card while encoding.
- ▶ Do not take out the battery while encoding.
- ▶ Do not press the **Power/Lock Key**  while encoding.
- ▶ While encrypting phone, your phone will reboot several times.
- ▶ After encrypting the SD card and performing a Factory reset, you cannot access encrypted data in the SD card.
- ▶ After encrypting Phone or the SD card, you cannot use 'None', 'Slide', 'Face Unlock', 'Pattern' in 'Select screen lock' menu.

Installing the 4G SIM card

Turn the power off. Remove the battery cover and the battery (as demonstrated in the previous instructions). Locate the 4G SIM card slot (a SIM card graphic is inscribed near the slot opening). Position the 4G SIM card with the Verizon logo facing up and slide it into place until it is fully inserted and locked in place.



Removing the 4G SIM card

Turn the power off. Remove the battery cover and take the battery out. Locate the 4G SIM card slot. Gently slide the 4G SIM card out to remove it.

 


Charging the Phone

Your phone comes with a Wall/USB Charger and a USB Cable which connect together to charge your phone. To charge your phone:

NOTICE Please use only an approved charging accessory to charge your LG phone. Improper handling of the USB/Charger Port, as well as the use of an incompatible charger, may cause damage to your phone and void the warranty.

1. Connect the USB Cable into the Wall/USB Charger. When connecting, as shown below, the LG logo on the USB Cable should face toward you.



2. Plug the USB Cable (as shown below) into the phone's USB/Charger Port.

NOTE Make sure the 'B' side is facing toward you when inserting the USB Cable into the phone.



Charging with USB

You can use your computer to charge your phone. To be able to charge with the USB cable, you need to have the necessary USB drivers installed on your PC first. Connect one end of the USB cable to the charger port on your phone and connect the other end to a USB port on your PC. It is best to use the rear USB port when connecting to a desktop PC. The USB hub should be powered by an external power source.

NOTE When the battery becomes fully discharged and you connect the phone to a charger, the keypad LED lights at the bottom of the phone will flash. Once the battery is charged enough to turn on the phone, a battery animation will appear on the screen and the keypad LED lights will stop flashing.



Optimizing Battery Life

You can extend your battery's life between charges by turning off features that run in the background. You can also monitor how applications and system resources consume battery power.

Tips to extend the life of your battery

- ▶ Turn off radio communications that you aren't using. If you aren't using Wi-Fi, Bluetooth, or GPS, use the Settings menu to turn them off (Note that the GPS receiver is only turned on when you're using an application that makes use of it).
- ▶ Turn down screen brightness and set a shorter screen timeout.
- ▶ Turn off automatic syncing for Gmail, Calendar, Contacts, and other applications if you don't need it.
- ▶ Use the Power saver feature in the Settings menu or the Power Control widget to control data activity, syncing activity, Wi-Fi connection, Bluetooth connection, GPS connection, and power used for the device such as screen.



To check the battery charge level

- ▶ From the Home screen, tap the **Apps Key**  > **Settings**  > **Power saver**.

The battery status (Charging or Discharging) and level (as a percentage of fully charged) will be displayed at the bottom of the menu.

To monitor and control what uses the battery


The Battery use screen allows you to see which applications are consuming the most battery power. Information on this screen allows you to identify downloaded applications you may want to turn off when not being used, so you can get the most out of your battery power.

- ▶ From the Home screen, tap the **Apps Key**  > **Settings**  > **Power saver** > **Battery use**. This screen displays battery usage times. It lists all of the applications or services using battery power from the greatest amount of energy used to the least amount.
- ▶ Tap an application or service in the Battery use screen to see the details about its power consumption, including either how long since last connected to a power source or how long you were last running on battery power. Different applications or services offer different kinds of information, and they may even include options to modify the settings so you can reduce power consumption by that application.

Setup Wizard

The first time you turn on your phone, the Setup Wizard guides you through signing in to your Google Account. If you don't have one, don't worry, the Setup Wizard will help you create one.

NOTE This phone supports several applications and services. It is recommended that you purchase a data plan that meets your needs. Contact your service provider for details.


1. Press and hold the **Power/Lock Key**  on the top edge of your phone to turn it on.
2. Select a language and tap **Next**.
3. Follow the Setup Wizard to configure your phone accounts and settings, including creating or logging in to your Gmail Account.




NOTE If you have an existing Google Account, your contacts from that account are synced to your phone.

Turning the Phone On and Off

Turning the phone on


- ▶ Press and hold the **Power/Lock Key**  for a couple of seconds until the screen turns on.

Turning the phone off

1. Press and hold the **Power/Lock Key**  until the Phone options menu appears.
2. Tap **Power off** in the pop-up menu.
3. Tap **OK** to confirm that you want to turn off the phone.

To unlock the phone

If you don't use the phone for a while, the screen and backlight will shut off to conserve battery power. To unlock the phone:

1. Press the **Power/Lock Key** . Your Lock Screen will appear.
2. Tap the screen and when the circle appears, slide in any direction to unlock it. The last screen you were working on opens.

- NOTE**
- This is the default Lock Screen. If you've set up an Unlock Pattern, use your fingertip to draw the pattern.
 - Different clock themes can be applied to the lock screen.



About Lock Screen Improvement

Notification Viewing from Lock Screen

Save tedious swiping time when unlocking the screen to check Notification alerts.

From the lock screen simply slide the Notification Bar down to see the latest notifications, all in one step.

Customizable Lock Screen • LG EXCLUSIVE




Hot keys are customizable with any app on the device and can unlock directly to it.

Face Unlock


Using front facing camera, consumers can now use their actual faces (yes, it's not a picture, but their actual mug) to unlock the device with the facial recognition technology that comes with ICS.

To turn the phone sounds off

If you're in a place where your phone sounds may disturb others, you can quickly silence your phone from the Home screen.

1. Press the **Power/Lock Key** , then unlock the screen.
2. Press and hold the **Power/Lock Key** , then tap **Silent mode** .

OR

Press the down **Volume Key**  on the side of the phone until all sounds are turned off.

Setting Up Your Device

Follow the onscreen instructions to quickly set up your phone and email accounts. For more information visit verizonwireless.com/smartphones. Click **Support** tab, under **Get Help with Your**, click **Device**, then **Select Another Device** for your device support.

To set up your device, follow the steps below:



1. Select your language and tap **Next**.
2. Select whether to **Skip** or **Start** the Backup Assistant Plus application.
3. Select the email accounts you want to set up.
4. Select **Sign in** to sign into your Google Account or **Get an account** to create one. With a Google Account, Google applications are automatically synced between your phone and computer regardless of where you make an update.
5. Read the Privacy caution and tap **Next**. Then set your Location settings (**VZW Location Services/ Standalone GPS Services/ Google Location Services**). Then tap **Next**.

NOTE After successfully setting up your device, you can choose to view options that teach you about your new phone including **Watch & Learn / My Verizon Mobile video / Guided Tours**. These options can be viewed later by accessing the Apps screen.

7. Tap **Finish** to start using the phone.

For more information on how to set up your email, visit **smartphones.verizonwireless.com/**. Click on the **Smartphone Support** tab and select your phone.

Getting answers about how to use phone

From the Home screen, tap the Apps Key  > **Guided Tours**  to get information about using phone, including the user guide and video tutorials.

Setting up your Google Account

Your Gmail, Google Contacts, and Google Calendar events will all be loaded to your phone automatically after setting up your Google Account.

1. At the setup screen, tap **Existing** or **New**.
2. Enter your username and password or any other necessary information (if creating an account).

NOTE Tap the **Back Key**  to close the keyboard.

3. Tap **Sign in**.

Record your Google account information. Please keep this document in a safe place.

Username: _____@gmail.com

Password: _____

Your Google Account

You must sign into a Google Account to use Gmail, Google Talk, Google Calendar, and other Google Apps; to download applications from Play Store; to back up your settings to Google servers; and to take advantage of other Google services on your phone.


IMPORTANT

- If you want to restore your settings to this phone, from another phone that was running Android release 2.0 or later, you must sign into your Google Account now, during setup. If you wait until after setup is complete, your settings are not restored.
- If you don't have a Google Account, you're prompted to create one.
- If you have an enterprise account through your company or other organization, your IT department may have special instructions on how to sign into that account.
- When you sign in, your contacts, Gmail messages, Calendar events, and other information from these applications and services on the web are synchronized with your phone.
- If you don't sign into a Google Account during setup, you are prompted to sign in or to create a Google Account the first time you start an application that requires one, such as Gmail or Play Store.
- When you sign in, you're prompted to enter your username and password using the on-screen keyboard.

Phone's Status Icons


 




The Status Bar appears at the top of every screen. It displays icons indicating that you've received notifications (on the left) and icons indicating the phone's status (on the right), along with the current time.



If you have more notifications than can fit in the Status Bar, a plus icon  prompts you to open the Notifications panel to view them all.

The following icons indicate the status of your phone.








 

 

Call icons

	Mute microphone during a call		Missed call
	In call		In call using Bluetooth device
	Speaker on		Privacy call

Calendar & Alarm icons

	Alarm set		Calendar event
---	-----------	---	----------------













 







 
Email and Messaging icons

	New email received		Failed to send Email
	New message received		High priority message received
	Failed to send message		New voicemail received
	New visual voicemail received		Visual voicemail playing
	Google Talk message received		Gmail received
	Select input method		






 



Sound icons

	Music playing		Silent mode
	Vibrate mode		Phone jack connected










 




Network icons

	4G network connected		4G network in use
	Downloading data through 4G network		Uploading data through 4G network
	3G network connected		3G network in use
	Downloading data through 3G network		Uploading data through 3G network
	Downloading data		Uploading data
	Acquiring GPS data		GPS on
	No service		Weak network signal
	Strong network signal		Connected to network extender service
	Airplane mode		Roaming
	Location service on		Location service off
	Download complete		

Connectivity icons

	Weak Wi-Fi signal		Strong Wi-Fi signal
	USB debugging connected		USB connected
	Bluetooth on		Bluetooth device connected
	USB tethering on		Mobile Hotspot on
	Wi-Fi direct on		

System icons

	SmartShare on		More indicator
	System error		SD card inserted
	Preparing SD card		SD card error
	No SIM card		Unknown SIM card
	Sync in process		Sync error
	Battery empty		Battery full
	Battery charging		Battery status unknown

Getting to Know the Home Screen

The Home screen is your starting point to access all of the features on your phone. It displays application shortcuts, icons, widgets, and other features.

Status Bar

Shows device status information, including the time, signal strength, battery status, and notification icons.

Application Icon


Tap an icon (application, folder, etc.) to open the application and use it.

Quick Keys

Provide easy, one-touch access to the phone functions used most often.



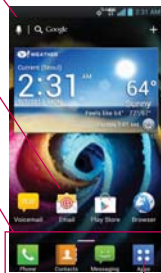

Apps Key

Tap to open the Apps screen to view all of your installed applications.



Quick Keys

The Quick Keys are located at the bottom of the Home screen.

- : Opens the **Phone** application which displays the dialpad so you can dial an unsaved number. It also provides additional tabs to access the Call logs, Contacts, and Favorites.
- : Opens the **Contacts** application and displays your Contacts list. You can also access the dialer, Call logs, and Favorites by tapping the tabs across the top of the screen.
- : Opens the **Messaging** application so you can send and receive text and multimedia messages.
- : Opens the **Apps** screen which displays phone options and applications.

New features for Homescreen

- ▶ Items (including Quick Keys bar) on the Home screen can be temporarily hidden to highlight the wallpaper. Pinch out to clean the screen and pinch in to restore.
- ▶ Clean view can be used to check the background picture without any icons and widgets.

- ▶ Shortcut can be changed to Widgets on the Home screen.
 - Touch and hold the shortcut and release to be able to drag the shortcut's corners.
 - Drag the corner to change it to a widget
 - Widget size can be also customized

To return to the Home screen

- ▶ Tap the **Home Key**  at any time, from any application.

To view other Home screen canvases

- ▶ Slide your finger left or right across the Home screen. The Home screen spans seven screen widths, allowing more space for icons, widgets, shortcuts, and other items.



Home Screen Canvas Indicator

The bar near the bottom of the screen indicates which Home screen canvas you are viewing.

- TIP** Pinch in on the Home screen to display the mini canvas view, then tap the Home screen canvas you want to view. Tap and hold the Home screen to move it. Drag the screen to the Remove icon to delete.



Tap here to set the default Home screen.

Home Screen Folders Creation + Icon Edit Mode

Customizable Folder Creation • LG EXCLUSIVE

The ability to create folders by dragging and dropping icons on each other is a great feature for consumers who like organization. You can now have folders specifically designated for work items, your children's games, icons that help with family or home organization, and even one just for games, etc. This new organization also allows for more applications to be placed on the main Home screen or Applications screen, yet provides easy viewing without distraction.

Icon Editing and Customizing • LG EXCLUSIVE (SPECTRUM ONLY)

Users can now edit the icons on the Quick Keys Bar, Home screen or Applications screen, by creating their own icons with the camera or gallery images. This gives consumers the ability to replace the generic icons and have images of loved ones—or with any other image they capture. With customization, it's easy to access what is most important, like a special contact or a frequently used app.

Clean View • LG EXCLUSIVE

Wallpapers can now be seen without intrusion, simply by using the “pinch” technique that will temporarily hide the icons on the Home screen. This is a great upgrade because users can now really show off the picture of their loved ones or the awesome concert they saved as wallpaper.

Touchscreen

Your touchscreen provides an excellent way to interact with and use your Android phone. With the tap of your finger, you can download and use available applications, make menu selections, and access data saved to your phone.

The following terms are used for describing the different available actions using the touchscreen:

Touch or tap A single finger tap selects an item. For example, tap an icon

(e.g., application or menu item), tap words (e.g., menu selection or to answer onscreen question), or tap letters and numbers to type.

Tap and hold Tap and hold an item on the screen by tapping it and not lifting your finger until an action occurs. For example, to open a Context menu for customizing the Home screen, tap an empty area on the Home screen until the Context menu appears.


Drag Tap and hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position. You can drag items on the Home screen to reposition them and drag the Status Bar downward to open the Notifications Panel.

Swipe or slide To Move your finger quickly across the surface of the screen, without pausing when you first tap it (so you don't drag an item instead). For example, you can drag or slide the screen up or down to scroll a list, or browse through the different Home screens by swiping from left to right (and vice versa).

Double-tap Double-tap to zoom a web page or a map. For example, quickly double-tap a section of a web page to zoom that section to fit the width of the screen. You can also double-tap to control the zoom in Maps and in other applications.

Pinch-to-Zoom Use your index finger and thumb in a pinch or spread motion to zoom in or out when using the browser, a map, or pictures. This motion can also be used to expand or compress the Applications screen items. It also changes the Home screen to mini canvas view.

Rotate the screen From many applications, the orientation of the screen rotates with the phone as you turn it from upright to sideways and back again.

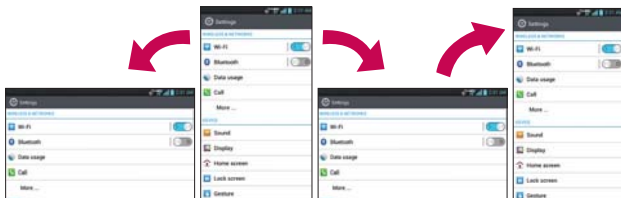


Rotate the phone sideways for landscape orientation.

Rotate the phone upright for portrait orientation.

Text Input Methods



On-screen Keyboard

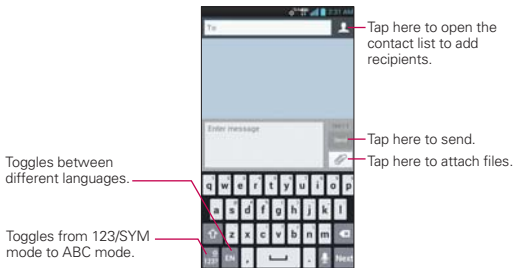
You can easily enter text using the on-screen keyboard. The on-screen keyboard displays automatically on the screen when you need to enter text. To manually display the keyboard, simply tap a text field where you want to enter text.



Typing tips	
Enter other characters	Tap the Numbers Key or the Letters Key to exit from the symbols keyboard.
Enter one capital letter	Tap the Shift Key .
Enter all capital letters	Tap the Shift Key twice. Tap again to revert to lowercase.
Highlight text	Double-tap a word to highlight it. To highlight a range of text, double-tap the screen, then drag the blue highlight markers to highlight the text you want.
Cut or copy selected text	Highlight the desired text and tap Cut or Copy .
Paste cut or copied text	Tap and hold the desired location where you want to paste the text, then tap Paste .
Delete a character	Tap the Delete Key .
Language toggle	Tap and hold the Language Key to display the available languages.

Text input settings


To change your text entry settings and see the dictionary of terms you've used, from the Home screen, tap the Apps Key  > Settings  > Language & input.

- To change the default language, tap **Language** or tap **Personal dictionary** >  to add a word.

Applications: How to View, Open and Switch



All of the applications on your phone, including any applications that you downloaded and installed from Play Store or other sources, are grouped together on the Apps screen, which you access from your Home screen. If you have more applications than can fit on the Apps screen, you can slide the screen left or right to view more.



- NOTES**
- You can touch the Menu Key  then **Show more icons** to get better viewing experience for those who want to have denser view of apps.
 - Folders can be created in menu as well as on the Home screen for organizing purpose. Create folders after pressing **Edit** button on top right and drag and drop item over another one.

Opening and Closing the Apps screen

Opening the Apps screen

With your phone, it's easy to access the Apps screen no matter what feature you're currently using. Simply tap the **Home Key** , then tap the **Apps Key** .

Closing the Apps screen

To manually close the Apps screen, tap the **Home Key** .



NOTE The Apps screen closes automatically when you tap an icon to open its application. Dragging an icon onto your Home screen also closes the Apps screen automatically.

Customizing the Apps screen



The phone includes a wide variety of applications and you can download even more applications to your device. You can customize these items on the Applications screen for faster access (less scrolling) to the applications you use most often.

The application items on the Applications screen are listed alphabetically within each application category, but you can customize the screen to optimize how you use it. For example, you can move application icons to more convenient positions and even add folders to organize your files.

Moving application positions

1. From the Home screen, tap the **Apps Key**  and then  at the top right corner of the screen.
2. Tap and hold the application icon and drag it to the position you want, then lift your finger. Application icons to the right of the position shift accordingly.

Adding a folder

1. From the Home screen, tap the **Apps Key**  and then  at the top right corner of the screen.
2. Tap and hold an application icon to unlock it from its position.
3. Drag the icon and overlap it over another to create a folder.

NOTE You may also use this function on any Home screen panel.

Opening and Switching Applications


Multi-tasking is easy with Android™ because open applications keep running even when you open another application. There's no need to quit an application before opening another. You can use and switch among several open applications. Android manages each application, stopping and starting them as needed, to ensure that idle applications don't consume resources unnecessarily.

Opening an application


- ▶ Open an application simply by tapping its icon on the screen.

TIP You can customize your Home screen with the application icons you use most often. Applications are located on the Apps screen, but you can copy any application icon to your Home screen for faster access. No matter where the icon is, on the Apps screen or your Home screen, just tap it to open and use it.



Opening multiple applications

1. Tap an application icon to open it.
2. Tap the Home Key .

NOTE If the application icon you want is on your Home screen, simply tap the icon to open and use it.

3. From the Home screen, tap the Apps Key .
4. Tap the icon for the other application you want to open.

Switching between multiple applications

1. Tap and hold the Home Key . A screen with the icons and a preview of applications that you've used recently will appear.
2. Tap the application icon you want to open or tap the Back Key  to return to the current screen.



If you flick the application icon to the right or left, the icon would disappear from the recent app list.

Tap an icon to open an application you've used recently.

Adding application icons to the Home screen

Customize your Home screen with the applications you use most often.

1. Open the Apps screen.
2. Tap and hold the application icon you want to add to your Home screen. Your Apps screen will close so that you can place the icon on the Home screen.
3. Lift your finger to place it or drag the icon to where you want it on the screen, then lift your finger.

Moving applications to other Home screens



You can place application icons on any of the Home screen canvases.

- ▶ Simply drag the icon to the left or right edge of the screen to advance to the other screen canvases before lifting your finger.
- ▶ Tap and hold the icon to move, then tip the device in the direction of the canvas you want. The icon “slides” off the screen and onto the new canvas. The **Relocate home screen items** option must be enabled under the Gesture settings.

Working with Menus

There are two kinds of Android menus: Options menus and Context menus.

Options menus


Options menus contain tools that apply to the activities of the current screen or application, not to any specific item on the screen. To open the available Options menu, tap the **Menu Key** . Not all applications have Options menus; if you tap the **Menu Key**  on a screen that has no Options menu, nothing will happen.

Context menus

Context menus contain options that apply to a specific item on the screen. To open a Context menu, tap and hold an item on the screen. Not all items have Context menus. If you tap and hold an item that has no Context menu, nothing will happen.



When you tap and hold certain items on a screen, a Context menu opens.

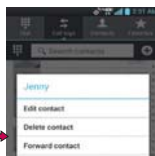


Managing Notifications

Notification icons report the arrival of new messages, calendar events, alarms, as well as ongoing events, such as when you are on a call. When you receive a notification, the notification icon will be displayed in the Status Bar. You can open the Notifications panel to view a list of all recent notifications. Depending on your settings, you may hear a notification sound and/or the phone may vibrate.

To open the Notifications panel

- ▶ Tap and drag the Status Bar to the bottom of the screen.

NOTE The Status Bar is sensitive to the drag motion so just beginning the downward drag will open the Notifications panel.

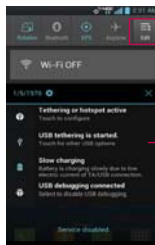

Tap to edit which icons are displayed on the Notifications panel. You can add up to eight icons.

Tap a notification to open it.

To respond to a notification

1. Open the Notifications panel. Your current notifications are listed in the panel, each with a brief description.
2. Tap a notification to view it.
The Notifications panel will close and the application that corresponds to your response will open. For example, new voicemail notifications dial

your voicemail box, and Gmail notifications open the Gmail application so you can read your new messages.


To clear all notifications

1. Open the Notifications panel.

2. Tap .

All event-based notifications will be cleared; ongoing notifications will remain in the list.

To close the Notifications panel

Tap and drag the tab at the bottom of the Notifications panel to the top of the screen or just tap the **Back Key** .

The panel will also close when you tap a notification.

NOTE The tab at the bottom of the Notifications panel is sensitive to the drag motion so just beginning the upward drag will close the panel.

Selectively Clear Notifications by Swiping



After receiving several download, app upgrade, notification texts, and emails, the Notification Bar can get really full. There are times when users want to keep some of the notifications in the bar while dismissing others, just like a “to do” list. Previously this wasn’t possible. Users had to clear all of the notifications at once. Now they just swipe the one they want to get rid of. It’s that easy, and efficient.


Searching Your Phone and the Web

You can search for information on your phone and on the web using the search application. Some applications, such as **Gmail**, **Contacts**, and **Browser** have the ability to search contents within those specific applications.

You can conduct the search by typing in the search terms or saying what you’re looking for. Typing can be useful because the search application can provide suggestions so you don’t necessarily have to type out your full request.

Phone and Web search using text entry

1. Tap and hold the **Menu Key** . When you tap and hold the **Menu Key**  on the Home screen or in the other applications that support this, the Quick Search Box will open automatically.

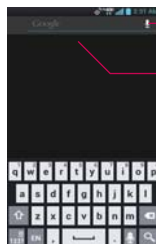
**Voice Search**

Tap to search by voice.


Search results

Provides a one-touch shortcut to matching search items and past searches.

2. Enter the text you're searching for in the Quick Search Box.

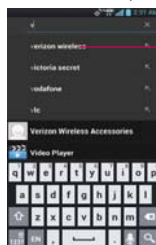

As you type, search results from your phone, previous search terms, and web search suggestions appear. Tap an item to activate that search result.



You can use the Search preferences to configure some aspects of web search (for example, whether it makes suggestions below the Quick Search Box as you type), and what phone features you want to include in searches. To access these settings, open the application and tap the **Menu Key**  > **Settings**.

3. Tap  from the keyboard .

Locking the Screen

Your phone automatically uses a default Lock Screen to simply prevent unintentional function activation. You can choose to secure your phone so that only you can unlock it to make calls, access your data, buy applications, and so on. For added security to guard against unauthorized use, you can set a Pattern, PIN, or Password that will need to be entered after you slide the screen up to unlock.

Setting a Swipe, Face Unlock, Pattern, PIN, or Password for the First Time

1. From the Home screen, tap the Apps Key  > Settings  > Lock screen.
2. Tap **Select screen lock**.
3. Tap **Swipe, Face Unlock, Pattern, PIN, or Password**.

Swipe: Allows you to swipe in any direction to unlock the screen. This is the default screen lock.

Face Unlock: Unlocks the screen through facial recognition. Read the information on the screen and tap **Set it up** > **Continue**. To set up Face Unlock, place your face in the outline on the screen. Your face will automatically be captured. Tap **Continue**. Then choose **Pattern** or **PIN** to set another form of security when Face Unlock can't see you.

NOTE Please keep in mind that Face Unlock is less secure than a pattern, PIN, or password, someone who looks similar to you could unlock your phone, and the data used to identify your face is kept private on the phone.

Pattern: The first time you set an unlock pattern, you will see a tutorial with instructions on how to create it. Read the tutorial and tap **Next**. Draw your pattern (connect at least 4 dots) and tap **Continue**. Then redraw your pattern and tap **Confirm**.



PIN: Enter a PIN (at least 4 digits) and tap **Continue**. Reenter your PIN and tap **OK** to confirm it.

Password: Enter a password (at least 4 characters) and tap **Continue**. Reenter your password and tap **OK** to confirm it.

From then on, any time you wish to turn the phone on or unlock the screen, you will need to draw your unlock pattern or enter your PIN or password to unlock the screen.



4. Set a backup PIN in case you forget the current unlock configuration.

Changing Your Unlock Pattern

1. From the Home screen, tap the Apps Key  > Settings  > Lock screen.
2. Tap **Select screen lock**.
3. Draw your current unlock pattern.
4. Tap **Pattern** to change it.

5. You're prompted to draw and redraw your new pattern.
6. Set a backup PIN in case you forget the current unlock configuration.

Using a PIN or Password to Lock the Screen

1. From the Home screen, tap the Apps Key  > Settings  > Lock screen.
2. Tap **Select screen lock**.
3. Tap **PIN** to lock the screen with a number sequence or tap **Password** for an alphanumeric lock sequence.
4. You're prompted to enter and reenter the lock sequence.
5. Set a backup PIN in case you forget the current unlock configuration.


From then on, you will need to enter the sequence and tap **OK** to unlock the screen.


- NOTES**
- You have 5 opportunities to enter your unlock pattern, PIN or password. If you used all the opportunities, you can try again after 30 seconds.
 - When you can't recall your unlock pattern:
 - If you've created a Google Account on the phone, tap **Forgot pattern?**. Then you are required to sign in with your Google Account or enter the backup PIN (if configured) to unlock your phone.
 - If you haven't created a Google Account phone or set a backup PIN on the phone, you need to perform a factory reset (**Caution:** If you perform a factory reset, all user applications and user data will be deleted. Please remember to back up any important data before performing a factory reset).
 - If you forgot the unlock pattern, you can unlock using the Backup Pin.
1. Turn the power off.
 2. Tap and hold the following keys at the same time for 8 seconds: **Power/Lock Key** + the down **Volume Key**.
 3. Press the **Power/Lock Key** when you see the message "Permanently Erase User Data & Reset Settings?", press the Power key to confirm, or tap any other key to cancel.
 4. When you press the **Power/Lock Key** to confirm, another message stating "Are you sure you want to continue with erase?" will appear. Press the **Power/Lock Key** to confirm or press the Volume Keys to cancel.
 5. After pressing the **Power/Lock Key**, your phone will be restored to the factory settings.

Customizing the Home Screen

You can personalize your Home screen by adding application icons, shortcuts, widgets, and other items to any Home screen canvas. You can also change the wallpaper.

To add an item to the Home screen

1. From the Home screen, tap **Add**  at the top right corner of the screen. Or just tap and hold an empty spot on the Home screen canvas.
2. In the menu that opens, tap the type of item to add.

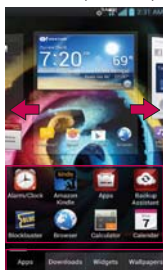

Slide the screen right or left to view different home screen canvases.

Tap and hold an icon and drag it to the desired screen.

Tap to access the tab.

3. You can add the following types of items to the Home screen:



- **Apps:** Displays all installed applications.
- **Downloads:** Displays all downloaded applications.
- **Widgets:** Displays all installed widgets.
- **Wallpapers:** Allows you to change the Charging and Home screen wallpapers to preloaded images or pictures from your Gallery.

To move an item on the Home screen

1. Tap and hold the item.
2. Drag the item to a new location on the screen. Pause at the left or right edge of the screen to drag the item onto the next available Home screen canvas.
3. When the item is where you want it, lift your finger.

NOTE If the tilt gesture is enabled in the Gesture settings, simply tilt the device in the direction you want to move the item to slide it to the next canvas.

To remove an item from the Home screen


1. Tap and hold the desired item.
2. Drag the item to the trash can icon .
3. Lift your finger when the icon changes to .

To change the Home screen wallpaper

From the Home screen, tap the **Menu Key**  > **Home screen settings** > **Wallpaper**. Choose from **Charging wallpapers**, **Gallery**, **Live wallpapers**, or **Wallpapers** to select the desired wallpaper.

The Home screen settings menu also allows you to personalize various other Home screen options, which include **Animation**, **Screen swipe effect**, **Scroll wallpaper**, **Scroll screens circularly**, and **Theme**.

To use the Maps as Live Wallpaper

1. From the Home screen, tap the **Menu Key** .
2. Tap **Home screen settings** > **Wallpaper** > **Live wallpapers** > **Maps**.
3. Tap **Settings** to personalize the Maps live wallpaper or **Set wallpaper** to set it as your background.


When you set **Maps** as **Live wallpapers**, you can try gestures below.

- ▶ To Expand : Double tap with one finger.
- ▶ To Reduce : Tap once with two fingers.
- ▶ To View the Map with No Icons: Pinch out on the Home screen, as if zooming in.
- ▶ To View the Map with Icons: Pinch in on the Home screen, as if zooming out.

Connecting Quickly With Your Contacts

As you build up your list of contacts on your phone, you can use Quick Contact for Android to quickly chat, email, text message, place a call, or locate your contacts. Quick Contact for Android is a special set of icons that you can use to quickly and easily connect to a contact.

- ▶ Open your Contacts list and tap the contact's picture.

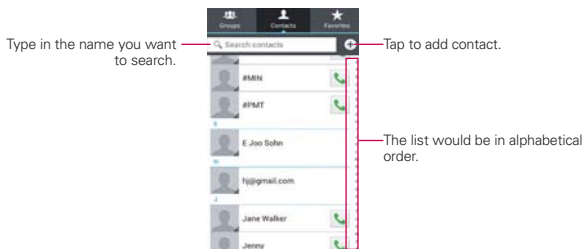

- ▶ Taping the contact's picture opens a Quick Contact pop-up displayed directly above the contact's name. This pop-up displays icons for all of the ways you can communicate with that contact. The available icons depend on the information you have saved for that contact.



- ▶ Tap a Quick Contact icon to communicate with the contact. Depending on the icon you've tapped, a different application will open.

TIP Adding a shortcut for a contact to your Home screen allows you to open Quick Contact for that contact without opening the **Contacts** application.

 
Connecting to Wi-Fi Networks


Wi-Fi is a wireless networking technology that can provide Internet access at distances of up to 100 meters, depending on the Wi-Fi router and your surroundings.

To use Wi-Fi on your phone, you must connect to a wireless access point, or “hotspot.” Some access points are open and you can simply connect to them. Others are hidden or implement other security features, so you must configure your phone so it can connect to them.



Turn off Wi-Fi when you’re not using it, to extend the life of your battery.

The following Status Bar icons indicate your Wi-Fi status.



When you connect to a Wi-Fi network, the phone obtains a network address and other information it needs from the network, using the DHCP protocol. To configure the phone with a static IP address and other advanced settings, from the Wi-Fi settings screen tap the **Menu Key**  > **Advanced**.

To turn Wi-Fi on and connect to a Wi-Fi network

1. From the Home screen, tap the **Apps Key**  > **Settings**  > **Wi-Fi**.
2. If the Wi-Fi switch on the right is not blue, tap or scroll the switch to the right to turn it on and scan for available Wi-Fi networks.
3. Tap a network to connect to it.
 - If the network is open, you will be prompted to confirm that you want to connect to that network by tapping **Connect**.
 - If the network is secured, you will be prompted to enter a password (Ask your network administrator for details).
 - When you’re connected to a network, you can tap the network name in the Wi-Fi screen for details about the speed, security address, and related settings.

To display a pop-up when new networks are detected

If **Notify Me** is selected and Wi-Fi is on, your device will display a pop-up whenever you launch apps and new networks are detected.

When Wi-Fi is off and the user launches apps, your device will turn on Wi-Fi and will display a pop-up whenever new networks are detected.

When **Notify Me** is unchecked, your device will not show the above pop-ups.

To automatically connect to known Wi-Fi networks when Wi-Fi is off

Auto connect : Allows you to automatically connect to known Wi-Fi networks when Wi-Fi is off and launching applications.

To add a Wi-Fi network

You can add a Wi-Fi network so the phone will remember it, along with any security credentials, and connect to it automatically when it is in range. You can also add a Wi-Fi network manually if it does not broadcast its name (SSID) or if you want to add a Wi-Fi network when you are out of its range. To add a secured network, you need to contact the network's administrator to obtain the password or other required security credentials.

1. Turn on Wi-Fi, if it's not already on.
2. From the Wi-Fi settings screen, tap **ADD NETWORK**.
3. Enter the **Network SSID** (name) of the network.
If the network is secured, tap **Security** and tap the type of security deployed on the network.
4. Enter the required passwords and security credentials.
5. Tap **Save**.

The phone will connect to the wireless network. Any credentials that you entered are saved, so you're connected automatically the next time you come within range of this network.

To forget a Wi-Fi network

You can make the phone forget about the details of a Wi-Fi network that you added. For example, if you don't want the phone to connect to it automatically or if it's a network that you no longer use.

1. Turn on Wi-Fi, if it's not already on.
2. In the Wi-Fi settings screen, tap and hold the name of the network that you want to forget.
3. Tap **Forget network**.


USB Autorun

USB Autorun is a feature that allows your phone to connect to a PC using a USB Cable and set it up on that PC without a physical CD-ROM.

- ▶ Automatically installs the LG USB Modem driver.
- ▶ Allows the phone to be used as Mass storage when a microSD card is present in the phone. It allows transfer of unprotected content from the phone to the PC and vice versa.

NOTE User content such as photos, videos, and voice recordings can be stored on a removable microSD card that is inserted in your phone.

To select USB mode for Autorun

1. From the Home screen, tap the Apps Key  > **Settings** > **Connectivity** > **USB connection type**.
2. Tap one of the following options:
 - ▶ Tap **Charge only** to use only the charging function and not the USB function.
 - ▶ Tap **Mass storage** to connect as mass storage and allow the transfer of user content.
 - ▶ Tap **Media sync (MTP)** to transfer files or synchronize with Windows Media Player.
 - ▶ Tap **Internet connection** to use the ethernet or modem functions and not the default USB function.

- ▶ Tap **Camera (PTP)** to connect with the camera and transfer photos (transfer files when MTP is not supported).

- NOTES**
- USB Autorun only works with Windows® XP, Windows® Vista, and Windows® 7 operating systems.
 - Log on to the PC as Administrator. Non-Administrator accounts have insufficient privilege to install the USB Modem driver and don't run the Autorun feature.
 - Do not unplug the USB Cable during Autorun.
 - If Autorun doesn't function properly, unplug and plug the USB Cable to set Mass storage mode.


Autorun automatically installs the USB device driver for every USB mode.

Internet connection mode

Autorun may automatically use Internet connection mode in certain circumstances.

- ▶ Autorun automatically switches to Internet connection mode if the connection fails while syncing or connecting.

You can share your phone's internet connection with your PC using a USB cable. After connecting with a USB cable, set the USB connection mode to **Internet connection**. Then select between **Ethernet** and **Modem**.

- ▶ **Ethernet:** This mode changes the phone to USB tethering mode from the PC. From the Home screen, tap the **Apps Key**  > **Settings** > **More...** (under WIRELESS & NETWORKS) > **USB tethering** > **Mobile Broadband Connect** to enable USB tethering mode.

NOTE This mode can only be used if you are subscribed to a data tethering plan with your wireless service provider.

- ▶ **Modem:** This mode changes the phone to Modem mode from the PC.

Ask for USB connection


You can choose to be asked to confirm the USB connection when connecting to a computer.

When **Ask on connection** is checkmarked, the USB selection window is displayed.

Autorun is not available when:

- ▶ Phone is booting (powering up).
- ▶ PC operating system is not set to Autorun (automatic execute command).

To change the setting while Autorun is running:

You can change the settings while Autorun is running. From the Home screen, tap the Apps Key  > **Settings** > **Connectivity** > **USB connection type** > **Mass storage**.

NOTE Be sure to checkmark the box **Ask on connection** if you want to be asked to confirm the USB connection mode when the phone is connected to a computer.

Using the Status Bar to change the settings

The Status Bar shows the current USB connection mode so you can easily open the Status Bar and change the settings as needed.

When connected via USB, the current USB connection mode also appears on the Notifications panel. Tap the connection setting to display a screen where you can change the USB connection mode.

NOTE If the **Ask on connection** checkbox is marked, the screen is only provided during USB connection, but is not provided in the notification area.

Step 1. Connecting the phone to a PC

- ▶ Connect your phone to your PC with a compatible USB Cable (supplied). LG Autorun starts automatically.
- ▶ Click 'I accept the terms in the agreement' and 'Yes'.

 


NOTES · Autorun is only supported for Windows® XP, Windows® Vista, and Windows® 7.

- The USB Autorun feature works only under an Administrator account. The installer has insufficient privileges under a Non-Administrator account. Log on as Administrator. The device is switched back to the **Media sync(MTP) mode** within 30 seconds.




Step 2. Downloading the LG USB Modem Driver.



- NOTES**
- If a previous version of the LG USB Modem driver is installed in the computer, it will automatically be updated to the recent version.
 - If a recent version of the LG USB Modem driver is installed in the computer, LG Autorun skips 'Step 2.'

 Step 3. Installing the LG USB Modem Driver.



Step 4. Installing the Utility Application.





microSD Card

Unmounting and removing the microSD Card

To safely remove the microSD card from your device, you must first unmount it before removing it from the phone.

WARNING!



On the Android 4.0 OS, you can download applications from Play Store and can store them on the microSD card as well as on the device. Therefore, skipping the unmount procedure can cause a serious error between the microSD card and the device. In the worst case, the microSD card can become corrupted or damaged.

1. From the Home screen, tap the Apps Key  > Settings  > Storage > **Unmount SD card** > OK. Now you can safely remove the microSD card.
2. Remove the back cover.
3. Locate the microSD card slot and carefully slide the microSD card out of the slot.

NOTE You can easily damage the microSD card and its adapter by improper operation. Please be careful when inserting, removing, or handling them.



microSD Card Settings

Viewing Memory in the microSD Card

1. From the Home screen, tap the Apps Key  > Settings  > Storage.
2. Review the available information.
 - The storage capacity page is divided into two sections: SD card and Internal storage.

Formatting the microSD Card

Formatting a microSD card permanently removes all files stored on the card.

1. From the Home screen, tap the Apps Key  > Settings  > Storage.
2. Tap **Unmount SD card** > OK to release the microSD card from device use. The icon appears within the Notifications panel to indicate an unmounted microSD card.
3. Once released, tap **Erase SD card** > **Erase SD card** > **Erase everything**.
 - Once completely formatted, the card is automatically re-mounted (reconnected for use by the device).

NOTE The formatting procedure erases all the data on the microSD card, after which the files CANNOT be retrieved. To prevent the loss of important data, please check the contents before you format the card.

Connecting Your Device to Your Computer

Before using your device's Mass storage capabilities, you need to prepare your device's data services to synchronize with your desktop or laptop computer. Once you have connected the device to the computer, you can transfer your data to or from the device memory.

To connect your device to a computer via USB:

1. Use the USB cable that came with your phone to connect the phone to a USB port on your computer.
2. Open the Notifications panel and tap the USB icon.
3. Tap the connection mode you want to use to connect to the PC. Choose from the following options: **Charge only**, **Mass storage**, **Media sync (MTP)**, **Internet connection**, or **Camera (PTP)**.

Device memory

The phone has removable memory in the form of a 16GB microSD card. If you remove the microSD card, user content such as photos and videos cannot be saved.

Using Media Sync(MTP) / Camera(PTP) mode

When you connect the phone and PC using a USB Cable and set your device's USB connection mode to media sync or camera mode, you will see two disks on the PC. You can copy files to/from the removable microSD card.

Placing and Ending Calls

You place calls using the **Phone** application. Calls can be manually dialed using the **Dial** tab. You can also dial from your phone's memory using the **Call logs** tab, the **Contacts** tab, or the **Favorites** tab.

To open the Phone application

- ▶ From the Home screen, tap the **Phone Key**  in the Quick Keys bar.


To place a call by dialing




1. Open the **Phone** application.







To dial an international number, tap and hold the 0 key to enter the plus (+) symbol. Then, enter the international prefix for the country; followed by the full phone number.

Tap to send a text or multimedia message to the number you entered.

Tap the **Call Key**  to dial the number that you entered.


2. Tap the keys on the dialpad to manually enter a phone number.
 - If you enter a wrong number, tap the **Delete Key**  to erase digits one by one.
 - To erase the entire number, tap and hold the **Delete Key** .
 - To dial an international number, tap and hold the **0 +** key to enter the plus (+) symbol. Then, enter the international prefix for the country; followed by the full phone number.
3. Tap the **Call Key**  to dial the number that you entered.



- You can use other phone features while the call is underway. If you open another application, the Call icon  appears in the Status Bar for the duration of the call.
- Press the **Volume Keys** to adjust the call volume.
- Use the on-screen buttons to enter additional numbers, place the call on hold and take an incoming call, add another call, use the speakerphone, end the call, and other options.

NOTE If you opened other applications while on a call, you'll need to return to the Call screen to end the call. You can tap the **Home Key** , then the **Phone Key**  (in the Quick Keys bar) or drag the Notifications panel down and tap . You can also tap the Contact's name or number at the top right corner of the Home screen.

Airplane mode

Some locations may require you to turn off your phone's wireless connections by placing your phone in Airplane mode.




1. Press and hold the **Power/Lock Key** .
2. Tap **Airplane mode**.

NOTE The Wireless & networks setting also has a checkbox to enable or disable Airplane mode. You can also open the Notifications panel and tap . The icon will turn blue  when the function is activated.

Answering or Rejecting Calls


When you receive a phone call, the Incoming call screen opens with the caller ID and any additional information about the caller that you have saved in the Contacts list. All incoming calls are recorded in the Call log.

To answer a call

- ▶ If the screen is unlocked, simply tap the **Answer Key** .
- ▶ If the screen is locked, swipe the **Answer** icon  in any direction.
- ▶ If you were already on a call, tap the **Answer Key**  to place the first call placed on hold while you answer the new call.


NOTE To silence the incoming call ringer, press the **Volume Keys**.

Unlocked Screen

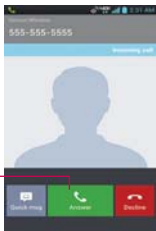



Tap the **Answer Key** to answer the call.

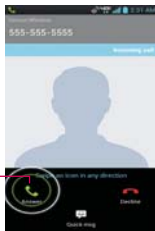Locked Screen




Swipe the **Answer icon** in any direction to answer the call.

To decline a call and divert it to voicemail

- ▶ If the screen is unlocked, simply tap the **Ignore Key** .
- ▶ If the screen is locked, swipe the **Ignore icon**  in any direction.
- ▶ The caller is sent directly to your voicemail box to leave a message.

Unlocked Screen

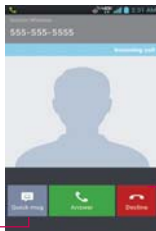

Tap the **Quick msg Key** to send a quick message to the caller and forward them to your voicemail.

Tap the **Decline Key** to decline the call and send the caller directly to your voicemail box to leave a message.



Locked Screen



Slide the **Decline icon** in any direction to decline the call and send the caller to voicemail.

NOTE To silence the ringer, press the **Volume Keys**.

To decline a call and send a text message


 
1. When you receive an incoming call and the screen is unlocked, tap the **Quick msg Key** . If the screen is locked, swipe the **Quick msg icon**  in any direction.
2. Tap the text message you want to send in place of answering the call.

NOTE This feature can only be used to send a message to another mobile phone. It is not applicable to incoming landline calls.

Working with the Call Log

The Call log is a list of all of the calls you've dialed, received, or missed. It offers a convenient way to redial a number, return a call, or add a number to your Contacts.

To open the Call log


- ▶ From the Home screen, tap the **Phone Key**  (in the Quick Keys bar) and then the **Call logs** tab  at the top of the screen.


Calls are listed in the **Call logs** tab. The most recent calls are located at the top of the list. Scroll down to see older entries.

This tab allows you to dial a phone number manually. You can also call voicemail using this keypad.

This tab displays the history of all your calls.




This tab displays your Contacts list. Tap the **Menu Key**  for more options.

This tab displays your favorite contacts and frequently dialed numbers. Tap the **Menu Key**  for more options.

To dial a number in the Call log

- ▶ From the Call log, tap the **Call Key**  to the right of the call entry.

To add an entry's number to your Contacts

1. Tap and hold the call entry.
2. Tap **Edit number before call** in the Context menu. When the screen turns to the dial screen, you can edit the number before adding it to your contacts.
3. Tap the **Menu Key**  from the dial screen then tap **Add to Contacts** and choose an existing contact to add the new number to or tap **Create new contact** to create a new contact entry.


Calling Your Contacts

Instead of manually dialing phone numbers using the dialpad, you can use your Contacts list to dial quickly and easily.


You can also quickly call a contact using Quick Contact.

If you have contacts on the web, they're synchronized with your phone when you first synchronize to your Google™ Account.

To call a contact

1. From the Home screen, tap the **Contacts Key**  in the Quick Keys bar.
2. Tap the contact you want to call.
3. Tap the contact's phone number you want to call.

To call a favorite contact

1. From the Home screen, tap the **Contacts Key**  in the Quick Keys bar.
2. Tap **Favorites** tab and then tap the contact you want to call.
3. Tap the contact's phone number you want to call.

Voice Dialer

You can use the **Voice Dialer** application to place a phone call by speaking the name of a contact or a phone number.

To place a call by speaking

1. From the Home screen, tap the Apps Key  > Voice Dialer .

If you have a Bluetooth headset that supports “voice-recognition” or “voice dialing” you may be able to open Voice Dialer by pressing your headset’s main button or in some other way, and dial by voice using your headset. For details, see the documentation that came with your headset.

2. Say “**Call**” followed by the name of the contact or say “**Dial**” followed by a phone number.

Options During a Call



Tap to turn the speakerphone on or off. The Speaker Key lights up to indicate that the speakerphone is on.

WARNING!

To avoid damage to your hearing, do not hold the phone against your ear when the speakerphone is turned on.

Tap to mute the microphone during a call. The Mute Key lights up to indicate that the microphone is muted.

Tap to switch between a Bluetooth headset and the phone.

To mute the microphone during a call

- ▶ Tap the **Mute Key** .

The **Mute Key** lights up to indicate that the microphone is muted.

The Mute icon  will appear in the Status Bar to remind you that the microphone is turned off.


When viewing the in-call screen, you can unmute the microphone by tapping the **Mute Key** again.

The microphone is unmuted automatically when the call ends.

To turn the speakerphone on or off

- ▶ Tap the **Speaker Key** .

The **Speaker Key** lights up to indicate that the speakerphone is on.

The Speaker icon  will appear in the Status Bar and the sound from your call is played through the phone's speaker on the back of the device.

When viewing the in-call screen, you can turn the speakerphone off by tapping the **Speaker Key** again.

The speaker is turned off automatically when the call ends.


WARNING!

To avoid damage to your hearing, do not hold the phone against your ear when the speakerphone is turned on.

To switch between a Bluetooth headset and the phone

When a Bluetooth headset is paired and connected to your phone, you can conduct calls on the headset for hands-free conversations. During a call, you can opt to use the Bluetooth headset or just the phone.

When using the Bluetooth headset during a call, the Ongoing Call notification icon is blue in the Status Bar (the icon is green when using the phone).

- ▶ Tap the **Bluetooth Key**  to switch the call from the headset to the phone, or vice versa.

Managing Multiple Calls

Contact your wireless service provider to learn whether they support conference calls and how many participants you can include.




To switch between current calls


- ▶ Tap the **Swap Key** .

The current call will be placed on hold and you will be connected with the other call.

To set up a conference call


Contact your wireless service provider to learn whether they support conference calls and how many participants you can include.

1. Place a call to the first participant.
2. When you're connected, tap **Add call** .
3. Tap the keys on the dialpad to manually enter a phone number, then tap the **Call Key** .
4. After you're connected, tap the **Merge call Key** . The participant is added to the conference call.

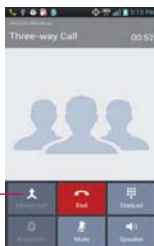

Tap here to merge call.

Listening to Your Voicemail

When you have a new voicemail message, the **Voicemail notification** icon  appears in the Status Bar. If you have not set up your voicemail number, or if you need to change it, you can do that in the Call settings.



To listen to your Voicemail

- ▶ Open the Notifications panel and tap **New voicemail**.




OR

Tap the **Voicemail** icon  on the Home screen.




OR

- ▶ From the Home screen, tap the **Phone Key**  in the Quick Keys bar, then tap the **Visual Voicemail Key** . Typically, your carrier's voicemail system guides you through the process of listening to and managing your voicemail. The first time you call your voicemail, it also guides you through the process of recording greetings, setting a password, etc.

To set up your Voicemail

1. Tap the **Phone Key**  in the Quick Keys bar on the Home screen or the Apps screen.
2. Tap the **Visual Voicemail Key**  to dial your voice mailbox.
3. If you hear a system greeting, tap  to interrupt it, if applicable.
4. Follow the setup tutorial.
5. Select a password.
6. Record a voice signature and greetings.

To access your voice mail from your wireless device

1. Tap the **Phone Key**  in the Quick Keys bar on the Home screen or the Apps screen.
2. Tap the **Visual Voicemail Key**  to dial your voice mailbox. If you hear a system greeting or your own greeting, tap the  immediately to interrupt the system greeting and follow the prompts.
3. Follow the prompts to enter your password and retrieve your messages.

Browser





The **Browser** application allows you to access the internet from your Verizon Wireless device. Access and selections within this feature are dependent upon your service provider. For specific information on Browser access through your phone, contact your service provider.

Internet

Learn to access and bookmark your favorite web pages.


- NOTES**
- You may incur additional charges for accessing the web and downloading media. For details, contact your service provider.
 - Available icons may vary depending on your region.

Browse web pages

1. From the Home screen, tap the **Apps Key**  > **Browser**  or tap the **Browser** icon  directly from Home screen. To access a specific web page, enter the web address (URL) of the web page, and tap **Go**  on the keyboard.
2. Navigate web pages using the following:




URL Field


Tap here to enter a web address for the web page you want to access.


















Drag the tab at the top of the toolbar to display it. You can also tap the **Menu Key**  > **Settings** > **General** and uncheck the **Toolbar** option so that it is not displayed at the bottom of the screen.






Toolbar

3. While browsing the web page, use the following options using the toolbar:
 - ▶ To go to the previous page, tap **Back**  in the toolbar or tap the **Back Key** .
 - ▶ To go to a next page in history, tap **Forward** .
 - ▶ To zoom in or out, double-tap the screen. You can also use the

pinch to zoom method. Place your two fingers on the screen and slowly pinch or spread them apart. You can also tap and hold **Zoom**  and tilt the phone up to zoom in or down to zoom out.

- ▶ To open a new window, tap **New tab**  in the toolbar.
- ▶ To view the list of bookmarks, tap **Bookmarks**  in the toolbar. You can also add, edit, or delete a bookmark from this menu.
- ▶ To reload the current web page, tap the **Menu Key**  > **Refresh**.
- ▶ To stop loading a web page, tap the **Stop** icon  in the URL field. The Stop icon only appears while a web page is loading. You can also tap the **Menu Key**  > **Stop**.
- ▶ To bookmark the current web page, tap the **Menu Key**  > **Save to bookmarks**.
- ▶ To open the home page, tap the **Menu Key**  > **Go to Homepage**.
- ▶ To send the web address (URL) of the web page to others, tap the **Menu Key**  > **Share page**.
- ▶ To search for text on the web page, tap the **Menu Key**  > **Find on page**.
- ▶ To change the current mobile page to a desktop page, tap the **Menu Key**  and check the **Request desktop site** option.
- ▶ To access the current web page later, you can save in the device storage by tapping the **Menu Key**  and then **Save for offline reading** to access when offline. You can check the saved web pages by tapping  from the toolbar and then the **Saved pages** tab.
- ▶ To adjust the brightness from the Browser, tap the **Menu Key**  > **Brightness**.
- ▶ To view your downloads, tap the **Menu Key**  > **Downloads**.
- ▶ To customize the Browser settings, tap the **Menu Key**  > **Settings**.
- ▶ To close the browser module, tap the **Menu Key**  > **Exit**. If you exit the Browser using this method, you will be connected to the home page the next time the Browser is opened.
- ▶ To view the currently active windows, tap **Tabs**  next to the URL

field. You can scroll up and down to view the open tabs. To close the tab, tap  or swipe the window to the right or left. The tab will disappear, indicating it has been closed.


- ▶ To open new incognito tab, tap the **Tabs**  > **Menu Key**  > **New incognito tab**.
- ▶ To copy text from a web page, tap and hold the desired text. The selected text will be highlighted and a pop-up appears with the following options: **Select all**, **Copy**, **Share**, **Find**, and **Web Search**. If you want to adjust the range of the highlighted text, drag the cursor from each edge of the text.
- ▶ To view the web page details, tap the icon to the left of URL field.

NOTE When you are in a secure page, tap **View certificate** on the Page info. screen to see the certificate for the current page.





Bookmark your favorite web pages

If you know the web address of the web page, you can manually add a bookmark. To add a bookmark:


1. Tap the **Menu Key**  > **Save to bookmarks**.
2. You can edit the Label and Address (URL). You can also select what location to place your bookmark.
3. Tap **OK** to save the bookmark.

From the bookmarks list, tap and hold a bookmark and use the following options:

- ▶ To open the web page in the current window, tap **Open**.
- ▶ To open the web page in a new window, tap **Open in new tab**.
- ▶ To edit the bookmark details, tap **Edit bookmark**.
- ▶ To add the bookmark as a shortcut to one of the Home screen canvases, tap **Add shortcut to home**.
- ▶ To send the web address (URL) of the web page to others, tap **Share link**.
- ▶ To copy the web address (URL) of the web page, tap **Copy link URL**.
- ▶ To delete the bookmark, tap **Delete bookmark**.
- ▶ To use the web page as your Browser homepage, tap **Set as homepage**.
- ▶ To delete multiple bookmarks at once, tap the **Menu Key**  > **Delete**. You can individually choose the bookmarks you want to delete or tap **Select all** to select all of the available bookmarks. Then tap **Delete** > **OK**.
- ▶ To move a bookmark list, tap the **Menu Key**  > **Move**. You can individually choose the bookmarks you want to move or tap **Select all** to select all of the available bookmarks. Then tap **Move** and select the folder you want to move it to.
- ▶ To view the recently visited web pages, tap the **History** tab, which will display your history in chronological order. You can also access the most visited web pages.
- ▶ To view the saved pages, tap the **Saved pages** tab.

Changing Browser settings

You can configure a number of Browser settings, including how you view and use pages as well as allowing you to manage your privacy.

- ▶ To open the Browser settings screen, tap the **Menu Key**  from the Browser and tap **Settings**.

General

Set homepage: Allows you to set the homepage to the following options: **Current page**, **Blank page**, **Default page**, **Most visited sites**, **Other**.

Toolbar: Allows you to display the toolbar at the bottom of the screen.

AUTO-FILL

Form auto-fill: Fill out web forms with a single tap.

Auto-fill text: Set up text to auto-fill in web forms.

Privacy & Security

Clear cache: Allows you to clear locally cached content and databases.

Clear history: Allows you to clear the navigation history.

Show security warnings: Checkmark to show a warning if there is a problem with a site's security.

COOKIES

Accept cookies: Checkmark to allow sites to save and read cookie data.

Clear all cookie data: Allows you to clear all Browser cookie data.

FORM DATA

Remember form data: Checkmark to allow the Browser to remember data you type in forms for later use.

Clear form data: Allows you to clear all saved form data.

LOCATION

Enable location: Checkmark to allow sites to request access to your location.

Clear location access: Allows you to clear location access for all websites.

PASSWORDS

Remember passwords: Checkmark to allow the Browser to save usernames and passwords for websites.

Clear passwords: Allows you to clear all saved passwords.

Accessibility

Force enable zoom: Override a website's request to control zoom behavior.

TEXT SIZE

Preview: Allows you to preview the text size.

Text scaling: Adjust the text scaling by scrolling the button.

Zoom on double-tap: Adjust the zoom scale by scrolling the button.

Minimum font size: Adjust the minimum font size by scrolling the button.

INVERTED SCREEN RENDERING

Preview: Allows you to preview the inverted screen rendering.

Inverted rendering: Checkmark for inverted rendering. Black becomes white and vice versa.

Contrast: Allows you to adjust the contrast level. This option is only available when the Inverted rendering option is selected.

Advanced

Set search engine: Tap to set the default search engine.

Open in background: Checkmark to open new tabs behind the current tab.

Enable javascript: Checkmark to enable javascript.

Enable plug-ins: Allows you to enable plug-ins.

Website settings: Allows you to manage advanced settings for individual websites.

PAGE CONTENT

Default zoom: Select the default zoom.

Open pages in overview: Checkmark to show overview of newly-opened pages.

Auto-fit pages: Checkmark to format webpages to fit the screen.

Block pop-ups: Checkmark for block pop-ups.

Text encoding: Tap to set text encoding.

RESET DEFAULTS

Reset to defaults: Restore defaults settings.

Bandwidth management

Search result preloading Allow browser to preload high confidence search results in the background.

Load images Display images on Web pages.

Labs

Quick controls Slide finger from left or right edge to open quick controls and hide URL bar and Toolbar.

Fullscreen Use fullscreen mode to hide the Status Bar.

Maps

Tap here to access **Map, Places, Navigation, Join Latitude, Location history and My Places.**



Tap here to access **Directions.**




Tap here to access **Places.**

Tap here to access **Search.**

Tap here to access **Layers.**

To search for a location

NOTE A pop-up appears upon initial use. Read the information and tap **OK** to continue.




1. From the Home Screen, tap the **Apps Key**  > **Maps** .
2. Tap the search icon  at the bottom of the screen.
3. In the search box, enter the place you're looking for. You can enter an address, a city, or a type of business or establishment. For example, "theater in New York".

4. Tap the **Search Key**  on the keyboard.

Red markers indicate search matches on the map.







You can tap a marker to open a balloon that contains a label. Tap the balloon to open a screen with more information about the location, as well as options for obtaining directions.

To get directions

1. From the Home Screen, tap the **Apps Key**  > **Maps** .
2. Tap .

3. Enter a starting point in the first text box and your destination in the second text box. You can also select an address from your Contacts, Point on map, or My Places.




NOTE When you search for a location in the **Maps** application, the Directions function automatically enters your current location as the starting point and the last red marker you tapped as the destination.

4. Tap the **Car** icon  for driving directions, the **Transit** icon  for transit directions, the **Cycling** icon  for cycling directions, or the **Walking** icon  for walking directions.
5. Tap **GET DIRECTIONS..**
6. Your route is displayed on a map.
 - ▶ Tap a white marker on the map to see direction change indicators.
 - ▶ Tap the arrow icon  to display each direction instruction sequentially in a bubble at each juncture. You can tap the arrow icon  to step backward through the direction instructions.
 - ▶ To view the directions in text format, tap **DIRECTIONS LIST**.
 - ▶ Tap the **MAP VIEW** to return to map view.

NOTE To reverse directions, tap the **Menu Key**  > **Reverse Start & End**.

Switching between common features

The **Maps** application has a toolbar at the top of the screen for easy access to many common features used when searching for the places you want to go.


- ▶ Tap the **Maps** icon  in the top left corner of the screen to access Map, Places, Navigation, Latitude, Location history and My Places.
- ▶ Tap the **Layers** icon  at the bottom of the screen to access Traffic, Satellite, Terrain, Transit Lines, Latitude, My Maps, Bicycling, Wikipedia and your search history.
- ▶ Tap the **My Location** icon  at the top right corner of the screen to display your current location on the map.


Checking the Weather

The **Weather** application provides weather forecasts. You can place a Weather widget on your Home screen for a summary of your local weather. Access the **Weather** application for more detailed weather information.


To get details about the weather

Tap the Weather widget on the Home screen to open the **Weather** application to view summarized and detailed weather information.

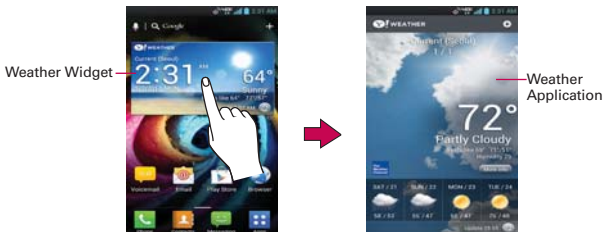

- ▶ Swipe right or left to scroll through the weather information for each of the cities in your list.
- ▶ Tap the **Refresh** Icon  in the lower left corner of the Weather application screen to update the current weather of the city displayed.

To update or add city

The City list screen allows you to manage a list of cities that you want to monitor. Tap **Add**  at the top right corner of the **Weather** application screen.

- ▶ Tap **Current location** at the top of the screen to update your current location.
- ▶ Type in the city, state or ZIP code to search the name.



Changing Weather Settings

You can configure a number of settings for the **Weather** application.

The location and related settings also affect the display of the Weather widget.

- ▶ To open the Weather settings screen, tap the **Menu Key**  > **Settings**.

LIST SETTINGS

Edit city list: You can add, edit, or remove a city from your list.



DATA AND SYNCHRONIZATION

Update data: Allows the device to update data automatically when the widget is set on the Home screen.

Refresh interval Allows you to set how often to update (Every 1 hour, Every 3 hours, Every 6 hours, Every 12 hours, Daily) the weather. More frequent updates trade the convenience of current information for increased data use and decreased battery life between charges.

GENERAL SETTINGS



Temperature unit Allows you to set it to display degrees in Fahrenheit or Celsius.

NOTE Google Location Services must be checked to update the current weather. From the Home screen tap the Apps Key  > Settings  > Location services > Google location services

Backup Assistant Plus

How to Access and Register Backup Assistant Plus

If you didn't set up Backup Assistant Plus when you turned on your phone for the first time, you can enable it in the Settings application.



1. From the Home screen, tap the Apps Key  > Backup Assistant Plus .
2. Read the information provided on the screen and tap **Start**.
3. Enter your PIN code and confirm it, then tap **Next**.
4. The Registration complete screen appears and your first back-up process begins. Tap **Done**.

Using Backup Assistant Plus


Backup Assistant and Media Manager are now Backup Assistant Plus.

Protect your contacts and access your media when you need it on the go or at home. Go to verizonwireless.com/baplus.


Changing the backup schedule

1. From the Home screen, tap the Apps Key  > Backup Assistant Plus .
2. Tap **Daily backup schedule** and tap the timeframe you want. For example, **Every late night (12am-6am)**.


 
Settings screen

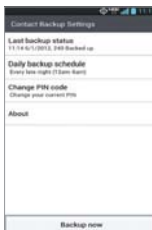

Backup time screen

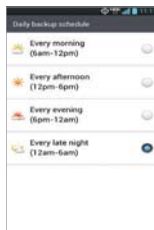

Change your PIN code

1. From the Home screen, tap the Apps Key  > Backup Assistant Plus .
2. Tap **Change PIN code** on the Backup Assistant Plus settings screen.
3. Enter your current PIN and tap **Next**.
4. Enter your new PIN. Then reenter it for confirmation and tap **Next**.

Contacts

The **Contacts** application allows you to store names, phone numbers and other information in your phone's memory.

Using Your Contacts

Use the **Contacts** application to add, view, and communicate with your friends and acquaintances.

To open your Contacts application

- ▶ From the Home screen, tap the Apps Key  > **Contacts** .

OR

- ▶ From the Home screen, tap the **Contacts Key**  in the Quick Keys bar.

All of your contacts are displayed alphabetically in a list. If you have a new phone and haven't added any contacts yet, the **Contacts** application will display hints on how to start adding contacts to your phone.

To open a list of your favorite contacts





- ▶ Open your **Contacts** application and tap the **Favorites** tab at the top of the screen.
Favorites lists the contacts you've added to the list, followed by a list of your most frequently called contacts.



To view details about a contact

1. Open your **Contacts** application.
2. Tap the contact whose details you want to view.



3. The **Contact Info** screen is displayed. Tap an icon to call, message, or open other applications.

- ▶ The **Dial icon**  places a call to the number.
- ▶ The **Message icon**  starts a message.
- ▶ The **Mail icon**  starts an email.
- ▶ The **Chat icon**  starts a chat.




Tap the **Menu Key**  for the following menu options: **Delete**, **Share**, **Join**, **Import**, **Export** and **Add to home screen**. Tap  to edit the contact.


Adding Contacts

You can add contacts on your phone and synchronize them with the contacts in your Google™ Account, Microsoft Exchange account, or other accounts that support syncing contacts.

Since your contacts can come from a variety of sources, the **Contacts** application attempts to join new information with existing similar contact entries, to create a single entry. You can also manage that process manually by joining or splitting entries.

To add a new contact

1. Open the Dial pad and enter the number you want to add.
2. Tap the **Menu Key**  > **Add to Contacts**.
3. Tap **Create new contact** .
4. Enter the contact's name.
5. Tap a category of contact information, such as phone number or email address, to enter that kind of information about your contact.
6. Tap a category's **Add icon**  to add more than one entry for that category. For example, in the phone number category, enter a work number and add a home number. Tap the label button to the right of the entry item information to open a drop-down menu of preset labels. For example, **Mobile** or **Work** for a phone number.


7. Tap the **Picture frame** icon  to select a picture to display next to the name in your list of contacts and in other applications.
8. When you're finished, tap **Save**.

Importing, Exporting, and Sharing Contacts

If you have contacts stored in vCard format on a microSD card you can import them into your **Contacts** application on your phone. You can also export contacts in vCard format onto a microSD card. Exporting your contacts to a microSD card allows you to back them up to a computer or other device. It also allows you to send the contact via email.


To import contacts from your microSD card

You can copy contacts, in vCard format, onto your microSD card then import them into your phone.

1. Insert the memory card (that contains the vCard files) into your phone.
2. Open the **Contacts** application.
3. Tap the **Menu Key**  > **Import/Export**.
4. Tap **Import from SD card**.
5. If you have more than one account on your phone, tap the account into which you want to import the contacts.
6. Tap the contacts you want to import to the microSD card. Then tap **Import**.


To export contacts to your microSD card

You can export all of the contacts on your phone to your microSD card, as vCard files. You can then copy this file to a computer or another device that is compatible with this format, such as an address book application.

1. Open the **Contacts** application.
2. Tap the **Menu Key**  > **Import/Export**.
3. Tap **Export to SD card**.
4. Tap the contacts you want to export to the microSD card. To export all of the contacts, tap **Select all** in the top left corner of the screen.
5. Then tap **Export** and **OK**.

To share a contact

You can share a contact with someone by sending it to them as a vCard file.

1. Open the **Contacts** application.
2. Tap the contact you want to share to view the contact details.
3. Tap the **Menu Key**  > **Share**.
4. Choose the method for sending.
5. Enter the necessary information and share it.

Adding a Contact to Your Favorites

The **Favorites** tab contains a short list of the contacts you communicate with most often.

To add a contact to your favorites list

1. Open the **Contacts** application.
2. Tap a contact to view its details.
3. Tap the star to the right of the contact's name.
When the contact is added to your Favorites list, the star will be yellow-colored.

To remove a contact from your favorites list

1. Open the **Contacts** application.
2. Tap the **contact** to view its details.

TIP If you have a long list of contacts, it may be faster to tap **Favorites**, then tap the contact entry to view its details.

3. Tap the yellow star to the right of the contact's name.
The grey-colored star indicates that the contact was removed from your Favorites list.

Communicating with Your Contacts


From the **Groups**, **Contacts**, or **Favorites** tabs, you can quickly call or send a text (SMS) or multimedia (MMS) message to a contact's default phone number. You can also open a list of all of the ways you can communicate with that contact.

This section describes ways to initiate communication when viewing your list of contacts. The **Contacts** application shares your contacts with many other applications, such as Gmail™ and Messaging.

To connect using Quick Contact for Android™

1. Tap a contact's picture to open Quick Contact for Android.

Tap a contact's picture.

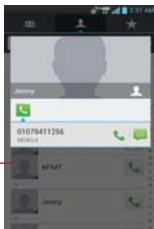

2. Tap the icon corresponding to the type of communication you want to start.


The communication icons displayed depend on the types of information you saved in the contact information.


To communicate with a contact

1. Open the **Contacts** application.
2. Tap the contact with whom you want to communicate.
3. In the contact's details screen, tap the way to start communicating with the contact.
 - ▶ The **Dial icon** 📞 places a call to the number.
 - ▶ The **Message icon** 💬 starts a message.
 - ▶ The **Mail icon** ✉️ starts an email.
 - ▶ The **Chat icon** 💬 starts a chat.


NOTE Anytime you see the **Dial icon** 📞 next to a number, such as in your Favorites or Call log, just tap it to call that number.

To call a contact's default number

1. Open the **Contacts** application.
2. Tap  to the right of the contact's name to dial the number.

TIP If the contact has multiple numbers, tap the contact entry to view all of the available numbers. The tap .


To send a text or multimedia message to a contact's default number

1. Open the **Contacts** application.
2. Tap the contact you want to message.
3. Tap  next to the number you want to send a message to.

Selecting Which Contacts are Displayed

You can hide contacts that don't have phone numbers. You can also configure which groups of contacts you want to display in the Contacts list.


To change which groups are displayed

1. Open the **Contacts** application.
2. Tap the **Menu Key**  > **Display options**.
3. Tap the storage location of the contacts you want to display.
4. Tap **Customize** to choose which contacts from all of your accounts to display.

Joining Contacts

When you add an account or add contacts in other ways, such as by exchanging emails, the **Contacts** application attempts to avoid duplication by joining contact information automatically. You can also join contacts manually.

To join contacts


1. Open the **Contacts** application.
2. Tap the contact entry to which you want to add information. The contact name for this entry will remain unchanged after you join with another contact.
3. Tap the **Menu Key**  > **Join**.
4. Tap the contact whose information you want to join with the first contact. The information from the two contacts will be merged and displayed under the name from the first contact.
5. The contact information is saved automatically and will be displayed in one contact entry.

Separating Contact Information

Each contact entry on your phone may contain 'joined' information from a variety of sources.

If contact information from different sources was joined in error, you can separate the information back into individual contact entries on your phone.

To separate contact information






1. Open the **Contacts** application.
2. Tap the contact entry whose information you want to separate.
3. Tap the **Menu Key**  > **Separate**.
4. Tap **OK** to confirm you want to separate the entries. The contact information will be separated into individual contact entries in the Contacts list.

Email

Opening Email and the Accounts Screen

You can use the **Email** application to read email from services other than Gmail™. The **Email** application supports the following account types: Microsoft Exchange, Windows Live Hotmail, Yahoo! Mail, Gmail, AOL Mail, Verizon and other accounts.


To open the Email application

- ▶ From the Home screen, tap the Apps Key  > **Email**  or tap the **Email** icon  directly from the Home screen.
- ▶ Touch  to compose the new message.
- ▶ Touch  to add favorite messages from the inbox.

The first time you open the **Email** application, a setup wizard opens to help you add an email account. After the initial setup, Email displays the contents of your Inbox. Then tap the desired email message.

The Accounts screen

The Accounts screen lists all your accounts.

- ▶ Open the **Email** application. If you're not on the Account screen, tap the **Menu Key**  > **Accounts**.

Each folder and account on the Accounts screen displays the number of unread messages.

You can tap an account to view its Inbox.


The account from which you send email by default is indicated with a checkmark.

Reading Your Messages

You can read messages from the Inbox, or from other folders within each individual account.

To read a message

From the Accounts screen, simply tap any account to display that account's folders and contents.

You can also go to the folder list of the account by tapping the **Menu Key**  > **Folders** from the Inbox. Then tap the desired email message.

NOTE When new email arrives, a notification appears in the Status Bar. Drag the Notifications panel downward and tap the email notification.

Responding to a Message

There are many options how you can respond to a received email message. You can reply to it, forward it, or even just delete it.

To reply to or forward a message

- ▶ While reading a message, tap  (available at the bottom of the screen) and tap **Reply** or **Forward**.


To mark a message as unread

You can set a message to appear as though it has not been read – for example, to remind yourself to read it again later.

- ▶ From the Inbox, tap and hold the desired message, then tap **Mark as unread** in the Context menu that opens.

To delete a message

There are a few easy ways to delete a message.

- ▶ While reading a message, tap  at the bottom of the screen.
- ▶ From the Inbox, tap the checkbox next to one or more messages, then tap **Delete** at the bottom of the screen.
- ▶ From the Inbox, tap and hold the desired message, then tap **Delete**.



For many types of accounts, deleted messages are moved to a Trash folder, so you can retrieve them in case they were deleted by mistake.


Visual Voice Mail


The **Visual Voice Mail** application allows the management of voicemail directly from the device rather than accessing voicemail via traditional methods.

Visual Voice Mail displays a list of your messages and allows you to choose which message(s) to listen to or delete, without having to dial into your mailbox and listen to voice instructions or prior messages.


To able to use Visual Voice Mail

1. From the Home screen, tap the **Apps Key**  > **Voicemail** .
2. The first time you access it, you will have to subscribe to Visual Voice Mail to use it.
3. After subscription, you are required to enter the password. You are only allowed to change the password by calling voicemail (dial *86).
4. After entering the password, you are allowed to see voicemail entries in your Inbox.

While viewing the voicemail list, you can select an entry (see step 5). For additional options, tap the **Menu Key**  > **New, Delete, Save as, Set as Heard, Sort by, Saved messages, Refresh, Settings, Search, and Logout**.

5. Tap a voicemail entry to listen to it. Then you can tap **Call back, Save, Erase, or Speaker**. To forward or reply to a message, tap the **Menu Key**  > **Forward or Reply**.
6. If you decide to reply with a voicemail or forward it, record a message. The buttons at the bottom of the screen allow you to record, stop, re-record, or cancel the message.

NOTE To send a voice message to a number in your Contacts list, use the **To:** field to search for it.



If you'd like to cancel your Visual Voicemail Subscription, tap the **Menu Key**  > **Settings > Cancel VVM service**.

Gmail

Opening Gmail and Your Inbox

When you open the **Gmail** application, the most recent conversations are displayed in your Inbox.

To open the Gmail application

From the Home screen, tap the **Apps Key**  > **Gmail** .

All of your conversations are displayed in your Inbox unless you delete, archive, or filter them.

The current Google Account is displayed at the top of the Inbox. If you have more than one account, you can switch accounts to view the messages in each Inbox.



Conversations with new messages are displayed with bold subject lines. To read a message in a conversation, tap its subject line text.

 indicates that this message was sent directly to you.

 indicates that you were CC'd on this message.


No indicator indicates that this message was sent to a group that includes you.


To open your Inbox when Gmail is running

If you are viewing a message or another label, tap the **Back Key**  until you return to your Inbox or tap  at the top left corner of the screen.

To switch accounts and labels

Gmail displays conversations and messages from one Google Account at a time. If you have more than one account, you can open the Accounts screen to view how many unread messages you have in each account and to switch accounts. You can also view messages from different labels.

1. From your Gmail Inbox, tap  next to the name of the current account at the top of the screen.

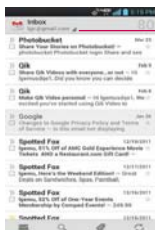

Tap here to switch accounts and labels.

2. Tap the account or label that contains the email you want to read.

Reading Your Messages

While viewing a list of conversations in your Inbox or in any list of labeled conversations, you can open a conversation to read its messages.

To read a message

- ▶ Tap a conversation that contains the message you want to read.

The conversation opens to the first new (unread) message, or to the first starred message, if you've previously starred a message in the conversation.




Tap here to Reply all or Forward.

The Google Talk online status will appear next to the name of the sender of each message if the sender has a Google Account. Tap the contact's picture to open Quick Contact.

While reading messages in a conversation, you can use the buttons at



the bottom of the screen to archive the entire conversation or delete it. After you delete a conversation, you can tap **Undo** at the bottom of the screen to undo the last action and restore the message to its previous location.


You can also swipe the screen left or right to read the next, oldest, unread message in a conversation in your Inbox (or the conversation list you're working in).

Tap  on the message header to access options for replying or forwarding the message.

To reread a message

When you open a conversation, messages that you've already read are minimized into a tab that indicates the number of hidden messages.




1. From the Home screen, tap the Apps Key  > **Gmail** . Then tap the conversation you want to view or the tab indicating minimized messages.
2. Tap the contact name to open that message.

While reading a message you can tap  to return a read message to the unread state. For example, to remind yourself to read it again later.


Composing and Sending a Message



You can compose and send a message to people or groups with Gmail addresses or other email addresses.


To compose and send a message

1. From the Home screen, tap the Apps Key  > **Gmail**  > .
2. Enter a recipient's address.

As you enter text, matching addresses are offered from your Contacts list. You can tap a suggested address or continue entering text to enter a new one.

3. Tap the **Menu Key**  > **Add Cc/Bcc** to copy (normal or blind status) recipients, if necessary.
4. Enter a subject for the message in the Subject field.

5. Continue into the next field to enter your email message.
6. Tap the **Menu Key**  > **Attach file** to add an attachment to the email.
7. Tap **Send**  to send your message.



To erase the message, tap the **Menu Key**  > **Discard** (including any saved drafts).

If you aren't connected to a network, for example, if you're working in Airplane mode, the messages that you send are stored on your phone with the Outbox label until you connect to a network again.

Replying to or Forwarding a Message

You can continue an email conversation by replying to a message or by forwarding it.

To reply to or forward a message

1. Tap  on the message header to reply to the sender or tap  to select from **Reply all** or **Forward**.


Replying to or forwarding messages without changing the subject adds your reply to the current conversation.

Changing the subject starts a new conversation.

The message will open in a new screen where you can add or remove addresses, edit the subject, and add or remove text or attachments.


 

You can add one or more people to an ongoing conversation by replying to all and then adding the new person's address(es) to the reply.

Note that the conversation text and previous messages are also included in your reply (or forward).

2. Tap **Send**  to send your message.

Changing Gmail Settings

You can change a number of settings for Gmail. Each Google Account has its own settings, so your changes affect only the current account. Notification volumes and some synchronization settings can also be changed in the **Settings** application.

- ▶ From the Home screen, tap the Apps Key  > Gmail  > Menu Key  > **Settings**. Then tap the desired account.

General settings

Confirm before deleting: Displays a dialog box asking you to confirm whenever you want to delete a message.

Confirm before archiving: Displays a dialog box asking you to confirm whenever you want to archive a message.

Confirm before sending: Displays a dialog box asking you to confirm whenever you want to send a message.

Reply all: Checkmark this settings to make 'Reply all' the default action for responding to messages.

Auto-advance: Allows you to choose which screen to display after you delete or archive a conversation.

Message text size: Allows you to choose the size of the text in a message for easier viewing.

Hide checkboxes: Allows you to hide checkboxes to select multiple message. Now you will have to tap and hold to select.

Message actions: Always shows message actions at the top of the screen.

Clear search history: Removes all the searches you've performed.

Hide pictures in messages: Pictures will not be displayed automatically until you allow them.

Individual account settings

Priority Inbox: Checkmark to make Priority Inbox your default inbox for this account.

Email notifications: Shows a notification when email arrives.

Ringtone & vibrate: Allows you to select a ringtone and vibrate type for incoming messages.

Signature: Allows you to append a signature to the messages you send.

DATA USAGE

Gmail sync is ON: Change sync settings or remove this account.

Days of mail to sync: Allows you to set how many days of mail to sync.

Manage labels: Allows you to choose which labels are synced and trigger notifications.


Download attachments: Allows you to auto-download attachments to recent messages via Wi-Fi.



Messaging

Opening the Messaging Application

To open Messaging

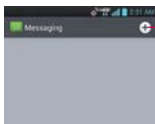- ▶ From the Home screen, tap the **Messaging Key**  on the Quick Keys bar.




- ▶ Tap **New message**  in the top right corner to start a new text or multimedia message.
- ▶ Tap an existing message thread to open it.
- ▶ Touch  in the message screen to make a call.

To delete a message thread from the Messaging window


1. Tap and hold the message thread.
2. Tap **Delete thread** in the Context menu that opens.
3. Tap **Delete** to confirm you want to delete the message thread.

To send a text message

1. On the Messaging screen, tap **New message** .
2. Enter a mobile phone number in the **To** field.

As you enter the mobile phone number, matching contacts appear. You can tap a suggested recipient or continue entering the phone number.

3. Tap the text field to start entering your message.

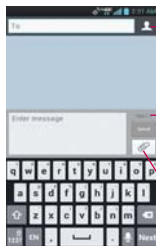


Tap here for the contact list.

The character counter displays the number of characters entered and amount remaining.


Tap here to attach the files.



A counter is displayed next to the text field to tell you how many characters are left and the number of pages.

If you tap the **Back Key**  while composing a message, it's saved as a draft in your **Messaging** application. Tap the message to resume composing it.


4. Tap **Send** to send the message.
Your message is displayed and responses appear in the same window, creating a message thread with that contact.

To create and send a multimedia message

1. On the Messaging screen, tap **New message** .
2. Enter a mobile phone number or email address in the **To** field. As you type, matching contacts appear. You can tap a suggested contact or continue typing.


3. Tap the text field to start entering your message.
4. Tap the **Menu Key**  > **Add subject** to add a message subject.
5. Tap  to open a menu where you can choose the type of media file to attach to the message.
 - ▶ If you tap **Picture**, you're prompted to select a picture from your Gallery.
 - ▶ If you tap **Capture picture**, the **Camera** application opens so you can take a picture and attach it.
 - ▶ If you tap **Video**, you're prompted to select a video from your Gallery.
 - ▶ If you tap **Capture video**, the **Camcorder** application opens so you can record a video and attach it.
 - ▶ If you tap **Audio**, you're prompted to select an audio file from your microSD card.
 - ▶ If you tap **Record voice**, the voice recording function opens and allows you to record an audio message and attach it.
 - ▶ If you tap **Location**, you will be prompted to enter your current location, a place of interest, an address, a contacts address, or a location from geotagged media.
 - ▶ If you tap **Slideshow**, a menu opens and allows you to assemble photos, audios, videos, texts into a slideshow (up to 10 slides) to attach to the message. Use the buttons in the slide screen to preview the message, replace or add a picture, or remove a slide. Tap Done when you finish editing the slideshow.
 - ▶ If you tap **Contact (vCard)**, you're prompted to select the contact(s) you want to send as vCard file(s).
6. Tap **Send MMS** to send the message.

To attach the location in messages


1. On the Messaging screen, tap **New message**  and enter the recipient.
2. Tap **Attach** .

3. Tap **Location** and select the desired location.
4. When the location is displayed on a map, tap **Attach**.
5. Tap **Send MMS**.

To send the group message.

1. On the Messaging screen, tap **New message**  and enter a recipient.
 2. When more than one recipient is added, you will be asked to choose between **Group Conversation** and **Individual Message**.
- > **Group Conversation(Reply All)**: Like email, all recipients with compatible phones can see everyone on the "To" list, and reply to everyone. Group conversations are sent as multimedia messages.
- > **Individual Messages**: Like an email "Bcc" list, recipients can't see anyone on the list, and can reply only to you.

To respond to messages you receive

If you're working in a message window, messages that you receive from that contact are displayed. Otherwise, you receive a new message notification and a new message icon  appears in the Status Bar. When you tap the new message notification, the Message screen opens where you can reply to the message. The new message pop-up also appears on the screen, where you can quickly reply to the message, call the person, or delete the message.

If **Auto-retrieve** is unchecked, you must tap **Download** to view the message.


If the message contains a media file, tap the **Play** button to view, watch, or listen to it. Tap and hold the media file to open a Context menu with additional options.

To view details about a message

1. Tap and hold a message in a message window.
2. Tap **View message details** in the menu that opens.

Changing Messaging Settings

You can change a number of Messaging settings.

- To change Messaging settings, open the **Messaging** application, tap the **Menu Key**  > **Settings**.

STORAGE SETTINGS

Delete old messages: Checkmark this setting to allow the phone to delete older messages in a thread when the **Text message limit** or **Multimedia message limit** is reached. Uncheckmark this setting to keep all messages.

Text message limit: Tap to set the number of text messages to save per thread.

Multimedia message limit: Tap to set the number of multimedia messages to save per thread.

Signature: Opens a dialog box to enter a signature to automatically send with your messages. Checkmark appears after a signature is entered.

Callback number: Opens a dialog box to view or edit the callback number sent with your messages. Checkmark appears after dialog box is closed.

TEXT MESSAGE (SMS) SETTINGS

Delivery reports: Checkmark this setting to allow your phone to receive delivery reports for the messages you send.

Manage SIM card messages: Allows you to manage messages stored on your SIM card.

Set priority: Opens a dialog box that allows you to set the default priority for your text messages.

MULTIMEDIA MESSAGE (MMS) SETTINGS

Delivery reports: Checkmark this setting to allow your phone to receive delivery reports for the messages you send.

Auto-retrieve: Uncheckmark this setting to download only the heading of multimedia messages, allowing you to manually download the whole message when you're ready. This is useful for controlling how much data you download.

Roaming auto-retrieve: Allows you to automatically retrieve messages while roaming.

Set priority: Opens a dialog box that allows you to set the default priority for your multimedia messages.

GROUP CONVERSATION SETTINGS

Group Conversation: Allows message recipients to see who received the message and reply to them.

Help: Displays the Group Conversation Help screen.

NOTIFICATION SETTINGS

Notifications: Checkmark this setting to allow your phone to receive a notification in the Status Bar whenever you receive a new message.

Notification sound: Opens a dialog box where you can select the ringtone to sound when you receive new message notifications.

Vibrate: Opens a dialog box to set the phone vibration setting when you receive a new message notification.

New message popup: A popup will be shown when the messages are received.

CMAS SETTINGS

Settings for the Commercial Mobile Alert System.

Presidential alert : This setting allows presidential alerts to be always presented.

Extreme alert: Checkmark this setting to allow Extreme alerts to be always presented.

Severe alert: Checkmark this setting to allow Severe alerts to be always presented.


AMBER alert: Checkmark this setting to allow AMBER alerts to be always presented.

Alert reminder: Allows you to choose the reminder time for your alerts.

How to select the type of keyboard you want


1. Tap and drag the Status Bar.
2. Tap **Select input method**.
3. Choose between **Google voice typing**, **LG Keyboard** and **Swype**.

You will now be able to enter text using the new keyboard.

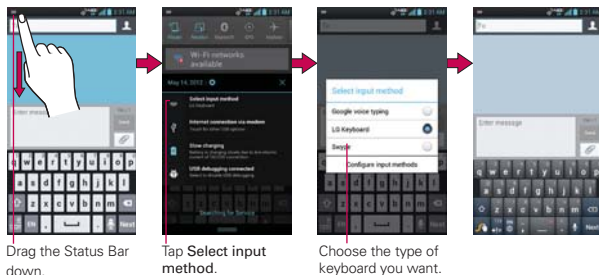

To change the LG keyboard layout

1. Tap and hold . Then tap **Input language & keyboard layout**.
2. Tap and select the keyboard layout between **QWERTY keyboard**, **Phone keyboard**, **Handwriting**, and **Shape writer**.

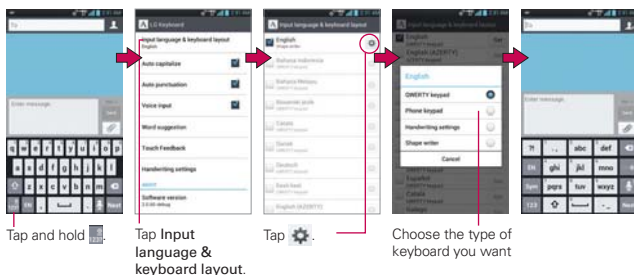

Using the Swype Keyboard



The Swype™ keyboard uses error correcting algorithms and also includes a predictive text system.

Swype Text Entry Tips

You can access Swype Tips and watch a tutorial on using Swype. You can also use the following Swype text entry tips.

- ▶ Put your finger on the first letter of the word and draw a path from letter to letter, lifting your finger up after the final letter.



- ▶ Create a squiggle (like an S shape) to create a double letter (such as pp in apple).
- ▶ Tap and hold a key to enter the alternate letter or symbol located at the top right corner of the key.
- ▶ Move your finger over the apostrophe to enter contractions.
- ▶ Double-touch on the word you want to change or correct a misspelled word.
- ▶ Tap the **Delete Key**  to erase one character. Tap and hold the **Delete Key**  to erase an entire word.

Talk

To open Google Talk and sign in

- ▶ From the Home screen, tap the **Apps Key**  > **Talk** .

When you first open Google Talk, your Accounts list will be displayed. This list includes all of the Google Accounts you've added on your device. Tap the account you want to use.



Tap here to add account.

To sign out of Google Talk

You can sign out of Google Talk. For example, if you want to limit Google Talk conversations to your computer. Also, signing out can extend your battery life.



Tap here to search.




Tap here to add friend.

- ▶ From your Friends list, tap the **Menu Key**  > **Sign out**.

You will no longer receive chat notifications or see others' Google Talk status in other applications, such as Gmail™.

Chatting with Friends

To chat with a friend

1. From the Home screen, tap the Apps Key  > Talk .
2. Tap the friend you want to chat with.
3. Enter your message then tap **Send** .

More Options

From the Friends list, tap the **Menu Key**  for the following options: **Display options**, **End all chats**, **Sign out**, **Settings**, **Help** and **Send feed back**.

To accept an invitation to chat


When a friend sends you a Google Talk message, you will receive a notification. The friend's name in the Friends list turns white and displays the message.

- ▶ Tap the name of the person in your Friends list.

OR

- ▶ Open the Notifications panel then tap the chat notification.
A chat window will open where you can exchange messages with your friend.

More Options

While you are chatting, tap the **Menu Key**  for the following options: **End chat**, **Go off the record**, **Friend info**, **Add to chat**, **Clear chat history**, **Settings**, **Help** and **Send feedback**.

Changing and Monitoring Online Status



Tap the green field that displays your account name at the top of the screen to change and monitor your online status.

Status Icons

Icons in Google Talk, Gmail, and other applications indicate the Google Talk status for you and your friends.

	Available: Signed into Google Talk and available to chat
	Away: Signed into Google Talk but not active
	Busy: Signed into Google Talk but too busy to chat
	Signed out of Google Talk
	Invisible: Signed into Google Talk but appear signed out to others

Changing Google Talk Settings



To change the Google talk settings, tap the **Menu Key** from the Friends list. Then tap the desired account and make your changes.





Voice Dialer

Call a Contact by Voice Dialing

You can call numbers directly by saying the contact's name or number.

1. From the Home screen, tap the Apps Key  > Voice Dialer .
2. Say "Call" or "Dial" then a name or a phone number.
Or, you can say "Redial" to redial the last number dialed.
3. If a list of results is displayed, tap the one you want to use.

Open an Application using Voice Dialer

1. From the Home screen, tap the Apps Key  > Voice Dialer .
2. Say "Open" and then an application name.
3. If a list of results is displayed, tap the one you want to use.

The device opens the corresponding application.

Powerful Voice Input Engine

Voice to text has always been a cool feature. Now it is even better because users can dictate an entire message instead of just a few words at a time.

While they are talking, the words appear a split second later on the screen, so they can actually see if it is dictating the right words.

Camera

To open the **Camera** application, from the Home screen, tap the Apps Key

 > Camera .

Getting to know the viewfinder

Brightness – Defines and controls of the amount of light entering the lens. Slide the brightness indicator along the bar, toward “-” for a lower brightness image, or toward “+” for a higher brightness image.

Zoom – Zoom in or zoom out. The **Volume Keys** will also adjust the zoom.

Swap Camera – Allows you to swap between the back camera and the front-facing camera.



Mode Switch – Allows you to switch between Camera mode and Video mode.

Capture – Tap to take a photo.

Gallery – Accesses your saved photos from within Camera mode. Simply tap this icon and your Gallery will appear on the screen.





Settings – Opens the Camera settings menu. See “Photo options”.










Flash – Allows you to set the Flash Auto, Off, or On.

NOTE The default resolution is **8M (3264X2448)**.

Photo options

You can make adjustments to optimize your shot. The following options are available:

- **Focus** : Allows you to change the Focus mode to Auto and Face tracking.
- **Image size** : Allows you to change the image size to 8M (3264X2448), W6M (3264X1836), 5M (2560X1920), 3M (2048X1536), W3M (2304X1296), 1M (1280X960), W1M (1536X864).
- **Scene mode** : Adjusts for better image capture in different environments. Choose from Normal, Portrait, Landscape, Sports, Sunset, and Night.
- **ISO** : Controls the camera's sensitivity to light. Choose from Auto, 400, 200, 100.

- **White balance** : Improves color qualities under different lighting conditions. Choose from Auto, Incandescent, Sunny, Fluorescent, and Cloudy.
- **Color effect** : Applies artistic effects to pictures. Choose from None, Mono, Sepia, or Negative.
- **Timer** : Allows you to set a delay timer for the camera. This is ideal if you want to be in the picture. Choose from Off, 3 sec, 5 sec, or 10 sec.
- **Shot mode** : Allows you to set the Shot for the picture. Choose from the following options:
 - ▶ Normal - Set as normal shot mode.
 - ▶ Panorama - Continuous photos are assembled into one single panoramic image. Press the shutter to start and slowly turn the camera across from one end to the other.
 - ▶ Continuous shot - When shot mode is set to continuous shot, the camera takes several images continuously in one time.
- **Shutter sound** : Allows you to select the Shutter sound for the Camera. Choose from Tone 1, Tone 2, Tone 3, Tone 4, or Off.
- **Tag location** : Allows you to add location information to the picture. Choose from Off or On.
- **Auto review** : Allows you to briefly view the picture after taking it. Choose from Off, On, 2 sec, or 5 sec.
- **Reset** : Allows you to reset the settings you have set.
- **Help** : Displays information about the camera settings.

TIP You can close all the setting icons to give a clearer viewfinder screen. Just tap the center of the viewfinder once. To recall the options, tap the screen again.


Using the focus mode

You can select from the following focus options:

Auto: Sets the camera to focus automatically.

Face tracking: Sets the camera to detect and focus on human faces automatically.

Taking a quick photo










1. Open the **Camera** application.
2. Holding the phone horizontally, point the lens toward the subject you want to photograph.
3. Tap the subject on the screen and a focus box will appear in the viewfinder.
4. When the focus box turns green, the camera has focused on your subject.
5. Tap the **Capture** button  to take the picture.

Once you've taken the photo

If **Auto review** is set to On, your captured photo will appear on the screen until you tap an option or icon to proceed.

NOTE Simply tap the screen to redisplay photo options if they recede from the screen.

The following options are available after taking a photo:

Share Tap to share your photo using **Backup Assistant Plus Plus** , **Bluetooth** , **Email** , **Gmail** , **Google+** , **Messaging** , **Picasa** , **Richnote** , **Social+**  or any other application you've downloaded that supports this feature.

Set as Tap to use the image as a **Contact photo**, **Lockscreen Wallpaper**, or **Wallpaper**.

 Tap to delete the image, then tap **OK** to confirm.

 Tap to take another photo immediately. Your current photo will be saved to your Gallery.



Tap to delete the image, then tap **OK** to confirm.

Tap to take another photo immediately. Your current photo will be saved to your Gallery.

Tap to view the Gallery of your saved photos.

Viewing your saved photos

1. You can access your saved photos from Camera mode. Just tap the **Gallery** thumbnail at the bottom right corner of the screen.

TIP Slide your finger left or right to view other photos or videos.

While viewing a photo, tap the screen to access the following options:

 Tap to share using SmartShare after turning on Wi-Fi.

 Tap to take a photo or record a video.



 Tap to share the photo with others.

 Tap to delete the photo.

Menu Key  Tap to open an Options menu that includes the following additional options.

- ▶ **Set image as:** Tap to set the photo as the icon identifying a contact or set it as your phone's lockscreen or Home screen wallpaper.
- ▶ **Move:** Tap to move the picture to another album or folder.
- ▶ **Rename:** Tap to rename the photo for easy identification.
- ▶ **Rotate left:** Tap to rotate the photo counter-clockwise.
- ▶ **Rotate right:** Tap to rotate the photo clockwise.
- ▶ **Crop:** Tap to open a cropping box tool that allows you to manually crop the photo. Use your finger to move or resize the cropping box to encompass only the part of the photo you want to see, then tap **OK**.
- ▶ **Edit:** Tap to edit the photo you have taken.
- ▶ **Slide Show:** Tap to see your photos played in a slideshow.
- ▶ **Details:** Tap to display information about the photo (e.g., file type, file size, etc.).
- ▶ **Add location:** Tap to add location information to the photo.

Video Camera

To open the **Video Camera** application, from the Home screen, tap the **Apps Key**  > **Camera** . Tap the **Mode Switch** to change to Video mode.

Getting to know the viewfinder

Brightness – Defines and controls of the amount of light entering the lens. Slide the brightness indicator along the bar, toward “-” for a lower brightness video, or toward “+” for a higher brightness video.

Zoom – Zoom in or zoom out. The **Volume Keys** will also set the zoom.

Swap Video Camera – Allows you to swap between the back camera and the front-facing camera.



Mode Switch – Allows you to switch between Camera mode and Video mode.







Record – Tap to start recording video.



Gallery – Accesses your saved photos and videos from Video camera mode.

Settings – Opens the video settings options.






Flash – Allows you to set the flash mode.

Video options

- **Video size** : Allows you to select the video size for the video. Choose from Full HD (1920x1080), HD (1280x720), TV (720x480), VGA (640x480), MMS (QVGA-320x240), MMS (QCIF-176x144)
- **White balance** : Improves color qualities under different lighting conditions. Choose from Auto, Incandescent, Sunny, Florescent, Cloudy.
- **Color effect** : Applies artistic effects to videos. Choose from None, Mono, Sepia, Negative.
- **Tag location** : Allows you to add location information to the video. Choose from Off or On.
- **Audio recording** : Allows you to select if you want to record audio for the video. Choose from Off or On.
- **Auto review** : Allows you to briefly view the video after taking it. Choose from Off, On, 2 sec, or 5 sec.

- **Reset** : Allows you to reset the settings you have set.
- **Help** : Displays information about the camera settings.

Recording a quick video

1. Open the **Camera** application.
2. Tap the **Mode Switch** icon  to change to Video mode. The Camera mode icon changes to  and the Capture button changes to .
3. The Video camera's viewfinder will appear on the screen.
4. Hold the phone horizontally and point the lens toward the subject of the video.
5. Tap the **Capture** button  once to start recording.
6. The record dot at the bottom of the viewfinder turns red and the video length timer begins counting.
7. Tap the **Stop** button  on the screen to stop recording.







After recording a video



If **Auto review** is set to On, a still image representing your video will appear on the screen until you tap an option or icon to proceed.

NOTE Simply tap the screen to redisplay video options if they recede from the screen.

The following options are available:

Play: Tap to play the video you just recorded.

Share: Tap to share your video using **Backup Assistant Plus Plus** , **Bluetooth** , **Email** , **Gmail** , **Messaging**  or **YouTube**  any other application you've downloaded that supports this feature.

-  Tap to delete the video you just made, and confirm by tapping **OK**. The viewfinder will reappear.
-  Tap to shoot another video right away. Your current video will be saved in your Gallery.

Watching your saved videos


1. In the viewfinder, tap the **Gallery** thumbnail at the bottom right corner of the screen.
2. Your Gallery will appear on the screen.
3. Tap a video to play it automatically.

Your Photos and Videos

Adjusting the volume when viewing a video

To adjust the volume of a video while it is playing, use the **Volume Keys** on the left side of the phone.

Setting a photo as wallpaper



1. Tap the photo you want to set as wallpaper to open it.
2. Tap **Menu Key**  > **Set image as** > **Wallpaper**.
3. Crop the photo, if necessary, then tap **OK**.

Gallery

Opening Gallery and Viewing Your Albums

Open the **Gallery** application to view albums of your pictures and videos.

To open Gallery and view your albums



- ▶ From the Home screen, tap the **Apps Key**  > **Gallery** .

OR

- ▶ Open Gallery from the **Camera** application by tapping the thumbnail image at the bottom right corner of the screen.



The **Gallery** application presents the pictures and videos saved in your phone (external memory), including those you've taken with the **Camera** application and those you downloaded from the web or other locations.

- ▶ Tap an album to open it and view its contents.

- ▶ Tap a picture or video in an album to view it.
- ▶ Return to the main Gallery screen at any time by tapping  at the top left of the screen.
- ▶ Tap the **Menu Key**  to access **Settings** and **Delete**.

Working with Albums




Albums are groups of images and videos in folders on your microSD card, Backup Assistant Plus album and in Picasa web albums.

- ▶ Tap **Albums**  to sort out the file by **Albums**, **locations** or **dates**.
- ▶ Tap the **Menu Key**  to access **Setting** and **Delete**. In **Settings**, you can access the **Accounts & sync** menu and decide if you want to synchronize your Backup Assistant Plus and Picasa web albums via Wi-Fi only.

Working with Pictures

Use the **Gallery** application to view pictures that you've taken with the **Camera** application, downloaded, copied onto your microSD card or that are stored in Picasa web albums.

To view and browse pictures

1. From the Home screen, tap the **Apps Key**  > **Gallery**  and tap a picture or video.
2. Tap the **Menu Key**  to access **Set image as**, **Move**, **Rename**, **Rotate left**, **Rotate right**, **Crop**, **Edit**, **Slideshow**, **Details**, or **Add location**.

Tap here to go to camera mode.

Tap here to share.

Tap here to delete.



To edit pictures

Tap here to go to previous step.

Tap here to go to next step.

Tap here to save.



Tap here to access the editing tools.


Working with Videos

Use the **Gallery** application to play videos that you've taken with the **Camera** application and to share them with friends.

To play videos

- ▶ Open a Gallery album then tap a video.

The video plays in the orientation you recorded it in.

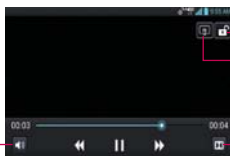

Tap here to adjust the volume.

Tap here to lock the screen.




Tap here to access SmartShare.

Tap here to access Dolby mobile. You need to insert an ear jack to access.




- ▶ Tap the screen while the video is playing to view the playback controls.

To share a video

You can share your videos in a variety of ways, including sending it by email or multimedia message (MMS), or via Smart Share or a Bluetooth device. You even have the option to share your videos publicly by uploading it to the YouTube™ website.



1. From the Home screen, tap the Apps Key  > Gallery , then tap an album.
2. While viewing an album, tap  and select the videos you want to share.
3. Tap **Share** and select the application you would like to use to share the selected videos.
4. Enter the necessary information and share it.


To delete a video



1. From the Home screen, tap the Apps Key  > Gallery , then tap an album.
2. While viewing an album, tap .
3. Select the videos you want to delete and tap **Delete** > **OK**.

Smart Movie HD

You can make your own movie using your images/video and music.

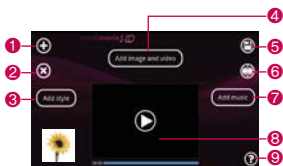1. From the Home screen, tap the Apps Key  > Smart Movie HD .
2. Select the desired options to create a movie.






- 1 **Add Media:** Allows you to add images and/or video to your movie.
 - 2 **Delete Media:** Allows you to remove the selected images and videos.
 - 3 **Add Style:** Allows you to select the desired movie style.
 - 4 **Added Media:** Allows you to select images and/or video for your movie. Tap **Done**  to exit.
 - 5 **Save:** Allows you to save the movie file.
 - 6 **Edit:** Allows you to edit the movie file.
 - 7 **Add music:** Allows you to set the background music.
 - 8 **Preview:** Allows you to preview your movie before saving it.
 - 9 **Help:** Provides you the information on how to use the Smart Movie HD.
3. After personalizing your movie, tap  to save your movie.

Play Store


Opening Play Store and Finding Applications

Open the **Play Store** application to browse and search for free and paid applications.

To open the Play Store application

- ▶ From the Home screen, tap the Apps Key  > **Play Store**  or tap the **Play Store** icon  from the Home screen.

When you open **Play Store** application for the first time, you must read and accept the terms of service to continue.

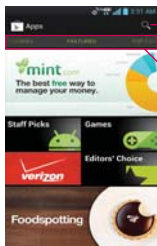


Tap here to search for the apps or tap and hold the **Menu Key** .

Scroll to the left and right to view and explore sub-categories.

NOTE Play Store screen shots and options may vary depending on the version installed in your device. Your Play Store application will update automatically when available.

To get help with Play Store

Play Store Help web pages are available from all Play Store screens.

- ▶ Tap the **Menu Key**  > **Help**.

The **Browser** application opens to the Play Store Help page, with links to many help topics.

To open a screen with details about an application

- ▶ At any time while browsing through Play Store, tap an application to open its details screen.

The Application details screens include a description, ratings, comments, and related information about the application. From this screen, you can download, install, uninstall, rate the application, and more.

To return to the Play Store home page

You can return directly to the Play Store home page from most other screens in Play Store.

- ▶ Tap the **Play Store** icon  at the top left corner of the screen.

Downloading and Installing Applications

When you find an application you want, you can install it on your phone.

To download and install an application

NOTE Before you can download a paid application, you must set up a billing arrangement.

1. Find an application you want and open its details screen.

In the application's details screen, you can read more about the application, including its cost, overall rating, and comments by users. Scroll down to the Developer Info section to view more applications by this developer, visit the developer's website, or send the developer an email message.



This button indicates the price (for paid apps) or you can tap it to directly download free apps.

2. Tap **Download** or **Install** (for free applications) or the **Price** button (for paid applications).

WARNING!

Read this screen carefully. Be especially cautious with applications that have access to many functions or to a significant amount of your data. Once you accept on this screen, you are responsible for the results of using this item on your phone.

3. If you agree to the application's access requirements, tap **Accept & download** (for free applications) or **Accept & buy** (for paid applications).

- ▶ If you selected a paid application, you're redirected to the Google™ Checkout screen to pay for the application before it's downloaded to your phone.
- ▶ If you selected a free application (or after tapping **Accept & buy** in Google Checkout), you receive a series of notifications as the application is downloaded and then installed on your phone.

When the application is installed, you can tap the notification to open the application or open it by tapping its icon in the Apps screen.

You have 15 minutes to try out an application and, if you decide you don't want it, to uninstall it for a refund.

If you have another Android™ phone, you can download a paid application to that phone using the same Play Store account, at no additional charge.

To create a Google Checkout account

You must have a Google Checkout account associated with your Google Account to purchase items from Play Store.

- ▶ On your computer, go to <http://checkout.google.com> to establish a Google Checkout account.

OR

- ▶ The first time you use your phone to buy an item from Play Store, you're prompted to enter your billing information to set up a Google Checkout account.

WARNING! After you've used Google Checkout once to purchase an application from Play Store, the phone remembers your password, so you don't need to enter it the next time. For this reason, you should secure your phone to prevent others from using it without your permission.

Music

Transferring Music Files to Your Phone

The **Music Player** application plays audio files that are stored on your phone's microSD card. Copy audio files from your computer onto the microSD card before you open the **Music Player** application.

NOTE The LG USB driver needs to be installed on your PC before connecting your phone to transfer music.

To copy music files onto the phone's microSD card

1. Connect the phone to your computer with a USB Cable. If the default connection mode is not set to Mass Storage, open the Notifications panel, tap the USB icon and then **Mass Storage**. Your computer will prompt you with different actions to take. Choose to open the folder to view files.
 - ▶ Use the computer to organize your audio files then create a music folder at the top level of the microSD card.
2. Use the computer to copy music and other audio files into the folder that you created on the microSD card.
 - ▶ You can use subfolders on the microSD card to organize your music files or you can simply copy the audio files to the top level of the microSD card.
3. Open the Notifications panel, tap the USB icon and then **Charge Only**. Then disconnect the USB Cable from the phone.

Opening Music and Working with Your Library


After you've copied some music onto your microSD card you can open the **Music Player** application and view your library of music files, sorted in one of five ways.


To open Music and view your music library

- ▶ From the Home screen, tap the Apps Key  > **Music Player** .

The **Music Player** application searches the microSD card for music files you copied to your card, then builds a catalog of your music based on the information contained in each music file. This can take from a few seconds to several minutes, depending on how many files you have copied onto the microSD card.

When the catalog is complete, the Music library screen opens with tabs that you can tap to view your music library organized by Artists, Albums, Songs, Playlists, Folders.

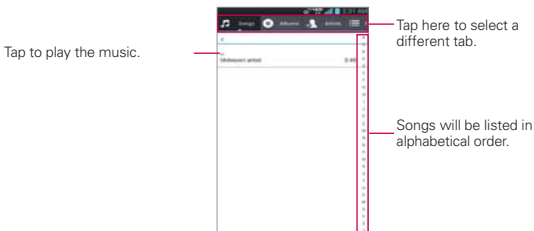

Tap the **Menu Key**  to access **Search**, **Play**, **Play all**, **Add to playlist**, **Party shuffle**, **Delete** and **Settings**.


Playing Music

You can listen to music using the phone's built-in speaker, through a wired headset, or through a wireless Bluetooth stereo headset that supports the A2DP profile.


To play music

- ▶ Tap a song in your library to listen to it.

OR

- ▶ While viewing a list of tracks in an album, tap the **Menu Key**  > **Play all**.

The Playback screen opens and the song you tapped or the first song in the album or other playlist starts to play. Your music continues to play even when you switch applications or receive a phone call. The tracks in the current playlist play in order until it reaches the end, then stops. If you choose a repeat option, playback only stops when you stop it.

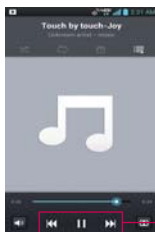










Tap here to restart, play or skip.

You can return to the Playback screen from most other screens in the **Music Player** application by tapping the currently playing song at the bottom of the screen.

You can return to the Playback screen from any other application by opening the Notifications panel and tapping the ongoing music notification.

To control playback

The Playback screen contains several icons that you can tap to control the playback of songs, albums, and playlists:

	Tap to pause playback.
	Tap to resume playback.
	Tap to skip to the next track in the album, playlist, or shuffle.
	Tap to restart the current track or skip to the previous track in the album, playlist, or shuffle.
	Tap to open the current playlist.
	Tap to play the current playlist in shuffle mode (tracks are played in random order).
	Tap to set repeat mode to repeating all songs, repeat current song, or repeat off.
	Tap to set the Dolby Mobile setting, which enhances your music listening.
	Tap here to get lyrics.

To control playback volume

In addition to the techniques for setting media volume, you can control the volume of music in the **Music Player** application.

- ▶ Press the phone's up/down **Volume Keys**.
A panel opens to show the current media volume.
Some headsets include their own volume controls or ways to pause and resume playback or to skip tracks.


To customize settings in the Playback or a Library screen

Tap the Menu Key  > **Settings**.

- ▶ **Show notification:** Shows the controller on the Notification Bar.
- ▶ **Sleep timer:** Turns off the player automatically. Tap the following options to apply sleep timer: **Off**, **After 10 minutes**, **After 20 minutes**, **After 30 minutes**, **After 1 hour**, **After 2 hours**
- ▶ **Dolby Mobile:** Applies the following sound effect (Dolby) options: **Off**, **Neutral**, **Expansive**, **Bass Boost**, **Treble Boost**, **Vocal Boost**

Landscape view

When holding the phone in landscape orientation, the **Music Player** application screen changes to fit the screen as shown below:

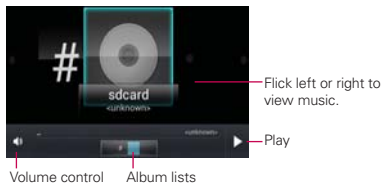

To use a song as a ringtone

You can use a song as your phone ringtone in place of one of the ringtones that come with the phone.

- ▶ Tap and hold a song in a Library list. In the Context menu that opens, tap **Set as ringtone**.


OR

- ▶ On the Playback screen, tap the **Menu Key**  > **Set as ringtone**.

Working with Playlists

You can create playlists to organize your music files into sets of songs, which you can play in the order you set or in a shuffle.


To create a playlist

1. From the Music Player Library, tap the **Playlists** tab.
2. Tap the **Menu Key**  > **New playlist**.
3. Enter a name for the playlist and tap **OK**. The new playlist is added to the Playlist tab

To add a song to a playlist

1. While viewing a list of tracks in the Library, tap and hold a song to display a Context menu.
2. Tap **Add to playlist**.

3. Tap the name of the playlist to add the song to.

You can also add the song that is playing in the Playback screen to a playlist by tapping the **Menu Key**  > **Add to playlist**.

To remove a song from a playlist

1. Open a playlist.
2. Tap and hold the song you want to remove then tap **Remove from playlist**.




To delete or rename a playlist

1. Open the Playlist library.
2. Tap and hold the playlist to display the Context menu then tap **Delete** or **Rename**.

SmartShare

SmartShare uses DLNA (Digital Living Network Alliance) technology to share digital content through a wireless network. Both devices must be DLNA certified to support this feature.





To turn SmartShare on and allow sharing contents

1. From the Home screen, tap the **Apps Key**  > **SmartShare** .
2. Tap the **Menu Key**  > **Settings**.
3. Tap **Discoverable** to allow your device to be detected by other devices.
 - ▶ Tap **Always accept request** if you would like to automatically accept sharing requests from other devices.
 - ▶ Tap **Receive files** if you would like to allow the other devices to upload media files to my phone.
4. Under the My shared contents section, tap to checkmark the types of content you would like to share. Choose from **Pictures**, **Videos**, and **Music**.
5. SmartShare is now activated and ready to share contents.

To control your renderer devices




Let your renderer device (e.g., TV) play multimedia contents from your remote content library (e.g., PC).

NOTE Make sure that the DLNA functionality of your devices is properly configured (e.g., TV and PC).

1. From the Home screen, tap the Apps Key  > SmartShare .
2. Tap  and select the device from the renderer device list.
3. Tap  and select the device of the remote content library.
4. You can browse the content library.
5. Tap and hold a content thumbnail and tap **Play**.

To share contents from your phone to your renderer device (e.g. TV)

NOTE Make sure that your renderer device is properly configured.

1. While watching your pictures or videos using the Gallery application, tap tab  /  /  on the Title area.
2. Select the device from renderer lists to play the files.

NOTE Follow the similar steps to use the Video Player to share contents

 : Need to be connected network.




 : Select the device on network.

 : Currently, the content is being shared through SmartShare.

NOTICE Check that your device is connected with your home network using Wi-Fi connection to use this application. Some DLNA enabled devices (e.g. TV) support only the DMP feature of DLNA and will not appear in the renderer device list. Your device might not be able to play some contents.




NOTE The accessory to connect DLNA is a separate purchase.

To download contents from the remote content library

1. From the Home screen, tap the Apps Key  > SmartShare .
 2. Tap  and select the device of the remote content library.
- NOTICE** A few types of contents are not supported.
3. You can browse the content library.
 4. Tap and hold a content thumbnail and then tap **Download**.

To upload contents from the remote content library

NOTE Make sure that the microSD card is correctly mounted and the **Receive files** option in the Settings menu is checked.

1. From the Home screen, tap the Apps Key  > SmartShare .
2. Tap  and select **My phone**.
3. You can browse the local content library.
4. Tap and hold a content thumbnail and then tap **Upload**.
5. Select the device of the remote content library to be uploaded.



NOTICE Some DLNA enabled devices do not support the DMS upload functionality and will not upload files. A few types of contents are not supported.

Video Player

You can play a wide variety of videos using the Video Player. The Video Player supports the following file formats: 3gp/3g2, mp4/m4v, avi, wmv, mov, mkv, flv, asf, divx (Codec: MPEG4, H.263, Sorenson H.263, H.264, VC-1, DivX/XviD).









- Supported file formats are dependent on the software version of the phone.

To open the Video Player application

1. From the Home screen, tap the Apps Key  > Video Player .
2. Tap the video you want to play.



Playback controls

Tap the screen to display the playback controls. The following options allow you to control the video playback:

	Pause playback.
	Play a video file.
	Tap and hold to fast-forward playback.
	Tap to start playing the video from the beginning. Tap and hold to rewind playback.
	Tap to activate or deactivate the Dolby Mobile setting, which enhances your music listening.
	Tap to display a slider bar to increase or decrease the media volume.
	Tap to share via SmartShare.
	Tap to lock the screen with a still image of the video.

Video Player list options

The following options are available from the Video Player list screen:


- ▶  Tap to delete videos. You can manually select individual videos to delete or tap **Select all** to delete all of the available videos. Then tap **Delete > OK**.
- ▶  Tap to view the DivX[®] registration code to play DivX[®] protected videos.


YouTube™

Opening YouTube and Watching Videos

You can browse, search for, view, upload, and rank YouTube videos on your phone with the **YouTube** application.

To open the YouTube application

- ▶ From the Home screen, tap the Apps Key  > YouTube .

Tap a video to watch it or the **Menu Key**  to take other actions on the video.






To watch and interact with YouTube videos

- ▶ Tap a video to play it.



- ▶ Tap the screen to view the Playback controls. You can pause and play the video or drag the slider to the point in the video you want to watch.
- ▶ Tap the **Back Key**  to stop playback and return to the videos list.
For details about these features, visit the YouTube website.




To search for videos

1. At the top of the main YouTube screen, tap .
2. Enter the text to search for or tap the **Microphone icon**  to search by voice.
3. Tap a suggestion below the search box or tap the **Search icon** .
4. Scroll through the search results and tap a video to watch it.

To share your videos on YouTube

You can record and share a video using the **YouTube** application. First, you must create a YouTube account and sign into it on your phone.





You can also share the videos you record with the **Camera** application by uploading them to YouTube.

1. Tap  at the top right of main YouTube screen.
2. If you want to set any configurations manually, tap the screen to open the video camera settings.
3. Point the lens to frame the scene where you want to start.
4. Tap  to start recording.
5. Tap  to stop recording.
6. Tap **OK**. The YouTube Upload details screen is displayed.
7. Enter a title, description, and tags for your video.
8. If you want to share the video with everyone, tap the **Privacy** field and then tap **Public**. If not, tap **Unlisted** or **Private**.
9. Tap **Upload**.




Voice Recorder

The **Voice Recorder** application records audible files for you to use in a variety of ways. Use them simply to remind you about something you don't want to forget (like a grocery list) or record sound effects that you can attach to a message or set as a ringtone for calls.




Record a Voice Memo

1. From the Home screen, tap the Apps Key  > Voice Recorder .
2. Tap  to start recording.
3. Speak into the microphone.
4. When you're finished, tap .

The recording is automatically saved to your recordings list.







- ▶ Tap  to listen to your recording.
- ▶ Tap  to record a new voice memo.
- ▶ Tap  to view your list of recordings.

Play a Voice Memo

1. From the Home screen, tap the Apps Key  > Voice Recorder .
2. Tap .
3. Tap the voice memo you want to play.

NOTE You can send the voice memo to others by tapping and holding a voice memo and tapping **Share**.

Managing your Voice Memos

1. From the Home screen, tap the Apps Key  > Voice Recorder .
2. Tap .
3. Tap  to record a new memo, tap  to share the memo and tap  to delete the memo from the list.

Calendar

Viewing Your Calendar and Events

Open the **Calendar** application to view events you've created or that others have invited you to.

When you first set up your phone, you configured it to use an existing Google Account or you created a new account. The first time you open the **Calendar** application on your phone, it displays any existing calendar events from your Google Account on the web.


To open the Calendar application

- ▶ From the Home screen, tap the Apps Key  > **Calendar** .

Events from each account you've added to your phone and configured to synchronize calendars is displayed in Calendar.

Events from each calendar account are displayed in a different color.

To change your calendar view

- ▶ Tap  at the top left corner of the screen to select **Day**, **Week**, **Month** or **Agenda** view.

Each view displays the events in your calendar for the period of time specified.

- ▶ To view more information about an event in Day, or Week view, Agenda tap the event.
- ▶ To view the events of a day in Month view, tap a day. The event will be displayed below the calendar. Tap the event to view its details.

Working in Day View

Day view displays a chart of the events of one day, in a table of one-hour rows. The current time will be highlighted. All-day and multi-day events are displayed at the top. Part of the title of each event is displayed in the row that corresponds to when it occurs.

To switch to Day view

- ▶ Tap  at the top left corner of the screen to select **Day**.

Tab here to switch to Day, Week, Month or Agenda View.



Tap here to create a new event.

To learn more about events in Day view

- ▶ Tap an event to view its details.
- ▶ Tap an event to view, edit, or delete the event. Also allows you to create another new event in the same time slot for juggling multiple events.

To add an event in Day view

- ▶ Tap and hold an empty spot or an event in the day to open an options menu then tap **New event** to create a new event at that time.

OR

- ▶ Tap  at the top right corner of the screen.

Working in Week View

Week view displays a chart of the events of one week. All-day and multi-day events are displayed at the top.

To switch to Week view

- ▶ Tap  at the top left corner of the screen to select **Week**.

Tap here to switch to Day, Week, or Agenda View.



Tap here to create a new event.

To learn more about events in Week view

- ▶ Tap an event to view its details.
- ▶ Tap an event to view, edit, or delete the event. Also allows you to create another new event in the same time slot for juggling multiple events.

To add an event in Week view

- ▶ Tap and hold an empty spot or an event in the week to open a Context menu then tap **New event** to create a new event at that time.


OR

- ▶ Tap  at the top right corner of the screen.

Working in Month View

Month view displays a chart of the events of the month. Segments of each day with scheduled events are green in the day's vertical bar.

To switch to Month view

- ▶ Tap  at the top left corner of the screen to select **Month**.

Tap here to switch to Day, Week, or Agenda view.



Tap here to create a new event.

Drag the handler to change the portion. Users are allowed to see the monthly view with agenda for the day all together. All the necessary information can be viewed without switching screens.

To view more information about events in Month view

- ▶ Tap a day to display the events below the calendar. You can then tap the event to view more information about it.


Working in Agenda View

Agenda view is a list of your events in chronological order. All-day and multi-day events are listed at the start of each day.

To switch to Agenda view

- ▶ Tap  at the top left corner of the screen to select **Agenda**.

Tap here to switch to Day, Week, or Month View.

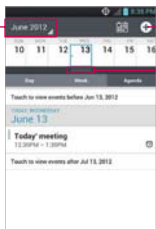

Tap here to create a new event.

Drag the handler to change the view. Users are allowed to see the monthly view with agenda for the day all together. All the necessary information can be viewed without switching screens.

To learn more about events in Agenda view

- ▶ Tap an event.

A screen with details about the event opens.


Viewing Event Details

You can view more information about an event in a number of ways, depending on the current view.

To view information about an event

- ▶ In Agenda, Day, or Week view, tap an event to view its details.
- ▶ In Month view, tap a day to display the events below the calendar. Then tap an event to view its details.

Tap here to go back to calendar view.

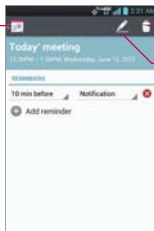

Tap here to delete the event.

Tap here to edit the event.

- ▶ Tap **Add reminder** to add another reminder.
- ▶ If you have permission to change events, you can tap to edit the event, tap to delete the event, or the **Menu Key** > **Share** to share it.

Setting an Event Reminder

You can set one or more reminders for an event, whether or not you created the event or have permission to edit its other details.

To set an event reminder

1. Tap an event to view its details.

- If no reminder is set, tap **Add reminder** to automatically add a reminder for 10 minutes before the event.

If a reminder is already set, tap **Add reminder** to set more reminders for the event.

- In the dialog box that opens, tap the length of time before the event that you want to be reminded of it.

When the time comes, you receive a notification about the event.

You can use Google Calendar on the web to configure additional reminder settings.

To delete an event reminder

- Tap an event to view its details.
- Tap next to the reminder field.

Calculator

Allows you to perform simple mathematical calculations.

To open and use the Calculator

- From the Home screen, tap the Apps Key > Calculator .






Basic Panel



Advanced Panel

- Enter numbers and arithmetic operators on the Basic panel.
- Swipe the Basic panel to the left to open the Advanced panel.

- ▶ Tap and hold the Calculator's display to open a Context menu where you can copy what you've entered and access other tools.
- ▶ Tap  to delete the last number or operator you entered. Tap and hold  to delete all of the entered information.
- ▶ Tap  to view your calculator history. You can tap an entry to calculate it again or edit it.

Alarm/Clock

You use the **Alarm/Clock** application to access the Alarms, Timer, World clock and Stopwatch functions.


To open the Alarm/Clock application

- ▶ From the Home screen, tap the Apps Key  > Alarm/Clock .

Setting Alarms

You can set an alarm by modifying an existing alarm or by adding a new one.

 
To set an alarm

1. Open the **Alarm/Clock** application and tap  or tap an existing alarm to modify it.

Select from Alarm/
Timer/ World clock
or Stopwatch tab.

Tap here to edit
existing alarm.

Tap here to add a
new alarm.



Scroll the button to
the right to activate
the alarm.



After editing, tap
Save.

2. Tap the time to set the alarm time.

- Enter the alarm time manually by scrolling the hour (or minutes) field.
 - Scroll to **AM** or **PM** to set for morning or afternoon.
3. Tap the day(s) when you want the alarm to sound in the **Repeat** field. If you don't tap the Repeat setting, the alarm sounds only the one day you set it.
 4. Tap **Snooze duration** to open a dialog box to set the amount of time to wait before sounding the alarm again if it is not dismissed.
 5. Tap **Vibration** to checkmark the setting and have the phone vibrate, in addition to playing the ringtone.
 6. Tap **Alarm sound** to select a ringtone for the alarm, then tap **OK**. The ringtone plays briefly when you select it.
 7. Tap **Puzzle lock** to checkmark the setting, which requires you to wake up enough to solve a simple puzzle to dismiss the alarm.
 8. Tap **Memo** to enter a name for the alarm.
 9. When you're finished, tap **Save**.


Setting the Timer

The **Timer** feature can be used to alert you with an audible signal when a set amount of time has passed.

1. Open the **Alarm/Clock** application and tap the **Timer** tab.
2. Set the time by scrolling Hour, Minute or Second on the time wheel.
3. Tap **Vibration** to checkmark the setting and have the phone vibrate when the set time expires.
4. Tap **Alert sound** to select an alert tone for the timer, then tap **OK**.
5. Tap **Start** to begin the time countdown.
6. Once the alarm sounds, tap **Stop** to stop the alarm.

Setting the World Clock

This feature allows you to set up a list of cities to easily check current times in other time zones with a quick glance.

1. Open the **Alarm/Clock** application and tap the **World Clock** tab.
2. Tap  and search through the available cities for the one you want.

Using the Stopwatch

This feature allows you to use your phone as a Stopwatch.

1. Open the **Alarm/Clock** application and tap the **Stopwatch** tab.
2. Tap **Start** to start timing and tap **Stop** to stop the time.
You can use the Lap function by tapping **Lap** to record lap times.
3. Tap **Reset** to reset the Stopwatch or **Resume** to resume it.

Polaris Office

Polaris Office 3.0 is a professional Mobile Office Solution which enables users to conveniently view or edit various types of office documents including Word, Excel, and PowerPoint file extensions anywhere, anytime, using their mobile device.

To access this application, from the Home screen, tap the Apps Key  > **Polaris Office** .

Managing Files

Polaris Office 3.0 provides mobile users with the convenience of managing files including copying, moving, and deleting files and folders right on the device.

Viewing Files

Mobile users now have the convenience of being able to view a wide variety of file types including Microsoft Office documents, Adobe PDF and images right on their mobile device. When viewing these documents using Polaris Office 3.0, the objects and layout remain unchanged from their original documents.

Editing Microsoft Office Files

Mobile users also have the convenience of being able to create, edit, and save Word, Excel and PowerPoint documents on their mobile device. Saved Documents generated or modified using Polaris Office 3.0, are not distorted from the originals.


Settings

The **Settings** application contains most of the tools for customizing and configuring your phone. All of the settings in the **Settings** application are described in this section. For settings specific to the **Browser** application, see the Browser section.

To open the Settings application

- ▶ From the Home screen, tap the **Menu Key**  > **Settings**.

OR

- ▶ From the Home screen, tap the **Apps Key**  > **Settings** .

WIRELESS & NETWORKS

The Wireless & networks settings allow you to configure and manage wireless radio communications. These settings include Airplane mode.

Wi-Fi: Drag the round button to the right to turn on Wi-Fi functionality to connect to available Wi-Fi networks.

Notify Me: You will be notified when Wi-Fi is available when you launch apps.

Auto connect: When launching applications, connect to known Wi-Fi networks when Wi-Fi is off.

SCAN: Touch to search for available Wi-Fi networks.

ADD NETWORK: Allows you to add a network by entering all of the credentials manually.

Bluetooth: Drag the round button to the right to turn on Bluetooth functionality to connect to Bluetooth devices.

VS920 4G: Tap to rename the device.

Make phone visible: Enable to find my device from other Bluetooth devices.

Device type to be searched: Allows you to select what type of devices will be displayed when searching.

Search for devices: Allows you to search for nearby Bluetooth devices.

Data usage

Mobile data: Slide the button to the right to enable mobile data.

Set mobile data limit: Allows you to set a limit to data use.

Data usage cycle: Allows you to set a time frame for the data usage information displayed in this menu.

Data usage graph: Drag the blue tab to set a date to display data usage. Drag the orange tab to set the data usage warning to display at the desired amount.

Data usage apps: Tap the apps at the bottom of the screen to view more data usage information.

Call

Use Call settings to configure phone call settings.

VOICEMAIL

Voicemail service: Allows you to select your carrier's voicemail service or another service, such as Google Voice™.

Voicemail settings: Allows you configure the settings for your voicemail service.

OTHER CALL SETTINGS

Call forwarding: Allows you to enable and disable call forwarding and enter the phone number you want to forward calls to.

Quick message: Checkmark to enable or disable the Quick text messages used when you want to ignore a call and send the caller a specified text message response instead.

Quick message settings: Allows you to edit, add, and delete the Quick text messages used in place of answering a call.

Show dialpad: Allows you to select which type of calls will automatically display the dialpad.

Auto retry: Opens a dialog box to enable or disable Auto Retry mode. You can configure the phone to automatically redial a number after a certain amount of time.

TTY mode: Opens a dialog box to set TTY mode to communicate with other TTY devices.

DTMF tones: Opens a dialog box to set the length of DTMF tones.

Assisted dialing: Allows you to configure the Assisted dialing options when you are traveling outside your home country.

Voice privacy: Checkmark enables enhanced privacy mode.

Auto answer: Checkmark enables Auto Answer with Handsfree.

More...

Airplane mode: Disable all wireless connections.

Wi-Fi Direct: Set up peer-to-peer connectivity.

USB tethering: Share your phone's mobile data connection via USB.

VPN: Set up and manage Virtual Private Networks(VPNs).

Mobile networks: Set options for roaming, networks, APNs.

Data enabled: Enable data access over Mobile network.

Global data roaming access: Set up data services while roaming.

Network type and strength: Tap to see the current network type and the signal strength.

Access Point Names: Set the Access Point Names.

Sound

Silent mode

Off: Turns off Silent mode. The ringer will be activated.

Vibrate: Allows you to turn on Vibrate mode. Your device will vibrate when you receive incoming calls and notifications.

On: Allows you to silence all sounds.

Volumes: Set the volumes for **Phone ringtone**, **Notification sound**, **Touch feedback & system**, **Music**, **video**, **games and other media**, and **Alarms**.

RINGTONE & NOTIFICATIONS

Phone ringtone: Select the ringtone for incoming calls.

Notification ringtone: Select the ringtone for incoming notifications.

Ringtone with vibration: Checkmark for Vibration feedback for calls and notifications.

Quiet time: Slide the button to set times to turn off all sounds except alarm and media.

Touch FEEDBACK & SYSTEM

Dial pad touch tones: Checkmark to turn on the Dial pad touch tones.

Touch sounds: Checkmark to turn on the Tap sounds.

Screen lock sound: Checkmark to turn on the screen lock sound.

Sound when roaming: Checkmark to allow Enhanced Roaming Indication.

Emergency tone: Checkmark to allow Emergency tones.

Vibrate on touch: Checkmark to turn on vibrate on touch.

Display

Use the Display settings to configure brightness and other screen settings.

Brightness: Opens a dialog box for adjusting the brightness of the screen. For the best battery performance, use the dimmest comfortable brightness.

Auto-rotate screen: Allows the screen to be rotated according to the phone orientation.

Screen timeout: Screen turns off automatically. You can set the duration for screen timeout.

Font Type: Select the font type.

Font Size: Select the font size from Small, Normal, Large, and Extra large.

Aspect ratio correction: Change the resolution size of downloaded applications to fit the screen size.

Pouch clock screen: Select the Pouch clock screen.

Front key light: Configure the front key light.

SENSOR

Motion sensor calibration: Improve the accuracy of the tilt and speed of the sensor.

Home screen

Animation: Set whether you want to enjoy animated transitions for all supported effects (including when navigating from screen to screen) or to use the phone without any optional animation effects (this setting does not control animation in all applications).

Screen swipe effect: Allows you to select the type of effect to display when you swipe from one Home screen canvas to the next.

Wallpaper : Allows you to set the wallpaper.

Scroll wallpaper: Checkmark to allow the wallpaper to scroll with the screen instead of having it as a static image.

Scroll screens circularly: Checkmark to show the first screen after the last screen when scrolling.

Theme: Select the theme for the device.

Lock screen

Select screen lock : Allows you to select a screen lock to help secure your device.

None: No lock screen.

Swipe: Swipe to unlock screen.

Face Unlock: Unlock through facial recognition.

Pattern: Draw pattern to unlock screen.

Pin: Enter a numeric PIN to unlock screen.

Password: Enter a password to unlock screen.

Wallpaper: Select the wallpaper to display for your lock screen.

Clocks & shortcuts: Customize clocks and shortcuts on the lock screen.

Owner info: Display the owner info on the lock screen.

Gesture

Help: Tap to get information on using the Gesture function of your device.

Relocate home screen items: Press and hold an item and tilt the device to move to other home screens.

Tilt sensitivity: Test and adjust sensitivity of tilt sensor for home screen and applications.

Mute incoming calls: Flip the device to mute the incoming call.

Snooze alarm: Flip the device to snooze or stop the alarm.

Pause video: Flip the device to pause the video.

Previous/next item in gallery: Tap on left or right side of the device to move to other items.

Move text cursor: Tap on any side of the device to move the cursor while typing.

Storage

Use the Storage settings to monitor the used and available space on your phone and on your microSD card and to manage your microSD card.

INTERNAL STORAGE

Total space: Lists the total amount of space on your phone's internal storage space. It is divided by the type of files stored.

SD CARD

Total space: Lists the total amount of space on any microSD card installed in your phone. It is divided by the type of files stored.

Unmount SD card: Unmounts the microSD card from your phone so that you can format the card or safely remove.

Erase SD card: Permanently erases everything on the microSD card and prepares it for use with your phone. You must unmount the microSD card before you can format it.

Power Saver

Turn Power Saver on: Select the battery level at which you want to turn on the Power Saver.

Power saver Tips: Tap to access some tips for Power Saver.

POWER SAVING ITEMS: Select which features to turn off when the battery is low.

Auto-sync: Turn off Auto-sync.

Wi-Fi: Turn off Wi-Fi if data is not in use.

Bluetooth: Turn off Bluetooth if not connected.

Vibrate on touch: Turn off touch feedback.

Brightness: Adjust the brightness.

Screen timeout: Adjust screen timeout of screen.

Front key light: Adjust Front key light timeout

BATTERY INFORMATION

Battery percentage: Display battery percentage on the Status Bar.

Battery use: View which components and application use the most battery.

Apps

You use the Apps settings menu to view details about the applications installed on your phone, manage their data, force them to stop, and to set whether you want to permit installation of applications that you obtain from websites and email. Tap the Downloaded, On SD card, Running or All tabs to view information about your installed apps.

Accounts & sync

Use the Accounts & sync settings menu to add, remove, and manage your Google™ and other supported accounts. You also use these settings to control how and whether all applications send, receive, and sync data on their own schedules and whether all applications can synchronize user data automatically.

Gmail™, Calendar, and other applications may also have their own settings to control how they synchronize data; see the sections on those applications for details.

Slide the button at the top right corner of the screen towards the right to allow automatic synchronization for all of your accounts.

Tap **ADD ACCOUNT** to add new account.

Location services

Use the Location services settings to set your preferences for using and sharing your location when you search for information and use location-based applications, such as Maps.

E911: E911 Location cannot be turned off on any mobile phone. Intended for personal safety in urgent situations, this setting cannot be altered by the user.

Verizon Location Services: Checkmark to enable Verizon Wireless and third party authenticated and validated location services to access certain location information available through this and/or the network.

Standalone GPS Services: Checkmark to enable your phone's standalone global positioning system (GPS) satellite receiver to pinpoint your location to within an accuracy as close as several meters ("street level"). Actual GPS accuracy depends on a clear view of the sky and other factors.

Google's location services: Checkmark to use information from Wi-Fi and mobile networks to determine your approximate location, used while searching in Google Maps and other applications. When you checkmark this option, you're asked whether you consent to sharing your location anonymously with Google's location service.

Location & Google search: Let Google use your location to improve search results and other services.

Security

Use the Security settings to configure how to help secure your phone and its data.

ENCRYPTION

Encrypt device: Opens a screen that encrypts data on the device for security. You will be required to enter a PIN or password to decrypt your phone each time you power it on.

Enable storage encryption: Opens a screen that enable/disable storage encryption and synchronize with previous encrypted data. You will be required to enter a PIN or password to decrypt your storage each time you insert a microSD card.

SIM CARD LOCK

Set up SIM card lock: Opens a screen to set if you want to require a PIN to use or, if set, allows you to change the PIN.

PASSWORDS

Password typing visible: Checkmark to briefly show each character of passwords as you enter them so that you can see what you enter.

DEVICE ADMINISTRATION

Device administrators: Add or remove device administrators.

Unknown sources: Allow installation of non-Market application.

CREDENTIAL STORAGE

Trusted credentials: Checkmark to allow applications to access your phone's encrypted store of secure certificates and related passwords and other credentials. You use credential storage to establish some kinds of VPN and Wi-Fi connections. If you have not set a password for the secure credential storage, this setting is dimmed.

Install from storage: Tap to install a secure certificate from a microSD card.

Clear credentials: Deletes all secure certificates and related credentials and erases the secure storage's own password, after prompting you to confirm that you want to do this.

Language & input


Use the Language & input settings to select the language for the text on your phone and for configuring the on-screen keyboard, including words that you've added to its dictionary.


Language: Opens a dialog box to choose a language to use on your phone.


Personal dictionary: Allows you to view, edit, and add words to your personal dictionary.

KEYBOARD & INPUT METHODS

Default Allows you to change the default keyboard.

Google voice typing: Checkmark to select Google voice typing. Tap  to configure this feature.

LG Keyboard: Checkmark to select the LG Keyboard. Tap  to configure the LG Keyboard settings.

Swype: Checkmark to select the Swype keyboard. Tap  to configure the Swype settings.

Select Input Method: Allows you to switch between keyboards.

How to Swype: Opens a dialog box to access the user manual for Swype.

Personal dictionary: Allows you to manage your personal Swype dictionary.

Preferences: View and modify Swype options.

Language Options: Activate and set languages.

SPEECH

Voice Search: Tap for Voice Search setting.

Text-to-speech output: Tap to set preferred engine or general settings for text-to-speech output.

Backup & reset

BACKUP & RESTORE

Back up my data: Back up app data, Wi-Fi passwords, and other settings to Google servers.

Back up account: Displays the accounts that are currently being backed up.

Automatic restore: When reinstalling an app, restore backed up settings and data.

PERSONAL DATA

Factory data reset: Erases all data on phone.

Date & time

Use the Date & time settings menu to set your preferences for how dates are displayed.

Automatic date & time: Use network-provided values for the date and time.

Automatic time zone: Use the network-provided time zone.

Set date: If you do not use the Automatic setting, you can set your own date.

Set time: If you do not use the Automatic setting, you can set your own time.

Select time zone: If you do not use the Automatic setting, you can set your own time zone

Use 24-hour format: Checkmark to display the time using 24-hour time format — for example, 13:00 rather than 1:00 pm.

Select date format: Opens a dialog box to select the format for displaying dates.

Accessibility

You use the Accessibility settings menu to configure any accessibility plug-ins you have installed on your phone.

SERVICES

TalkBack: When this function is on, your device provides spoken feedback to help blind and low-vision users.

SYSTEM

Large Text: Checkmark to set the system to large text.

Auto-rotate screen: Checkmark to allow the screen to automatically rotate when you hold your phone in a horizontal position.

Touch & hold delay: Allows you to set the time length for touch and hold.

Install web scripts: Allows you to install scripts from Google that allows web content to be more accessible.

Connectivity

USB CONNECTION

USB connection type: Opens a dialog box to choose the default connection mode when connecting your phone to a PC via USB. Choose from Charge only, Mass storage, Media sync (MTP), Internet connection, or Camera (PTP).

Ask on connection: Checkmark to ask for the type of connection when connecting your device to the PC.

Help: Tap to get information on the different types of USB connections.

AUTO LAUNCH

Car Home: Tap to automatically start Car Home when the phone is mounted on the car cradle.

Pouch mode: Tap to automatically start Pouch mode when the phone is put into the pouch.

Auto-launch apps: Allows you to select which apps (missed call, messages, voice messages, etc.) will be displayed as notifications when the phone is pulled out from the pouch.

Developer options

USB debugging: Checkmark to turn on debug mode when the USB is connected.

Development device ID: Displays the development device ID.

Stay awake: If activated, the screen will never sleep while charging.

Allow mock locations: Checkmark to allow mock locations.

Desktop backup password: Allows you to set a desktop backup password.

USER INTERFACE

Enable strict mode: Checkmark to flash the screen when apps operate for a long time operations on main thread.

Show touch data: Checkmark to make touch data visible on the screen.

Show touches: Checkmark to show visual feedback when the screen is touched.

Show screen updates: Checkmark to flash areas of the screen when they update.

Show CPU usage: Checkmark to display a screen overlay showing current CPU usage.

Force GPU rendering: Checkmark to use 2D hardware acceleration in applications.

Window animation scale: Select to set the window animation scale.

Transition animation scale: Select to set the transition animation scale.

APPS

Don't keep activities: Checkmark to destroy every activity as soon as the user exits apps.

Background process limit: Set the preferred Background process limit.

Show all ANRs: Checkmark to show App Not Responding dialog for background apps.

About phone

About phone includes information about your phone.

Software update: Allows you to check for Android system software updates.

Network: Displays current network information including your network carrier, network type and strength, service state, mobile network state, and IMS registration status.

Phone identity: Displays the phone's identity information including model number, phone number, PRL version, ERI version, IMEI, ICC ID, lifetime call counter, and warranty date code.

Battery: Provides information on the battery status, battery level, and information on the components and applications using the most battery.

Hardware information: Displays the Wi-Fi MAC address and Bluetooth address.

Software information: Displays the software information, including Android version, Baseband version, Kernel version, Build version, and SW version.

Legal information: Allows you to view legal information about the software included with your phone.

TIA Safety Information

The following is the complete TIA Safety Information for wireless handheld phones.

Exposure to Radio Frequency Signal

Your wireless handheld portable phone is a low power radio transmitter and receiver. When ON, it receives and sends out Radio Frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones.

Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) *

NCRP Report 86 (1986)

ICNIRP (1996)

* American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing Radiation Protection

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of your phone complies with the FCC guidelines (and those standards).

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

Phone Operation

NORMAL POSITION: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

Tips on Efficient Operation

For your phone to operate most efficiently:

Don't tap the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Driving

Check the laws and regulations on the use of wireless phones in the areas where you drive and always obey them. Also, if using your phone while driving, please observe the following:

- Give full attention to driving – driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call if driving conditions or the law require it.

Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6) inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should ALWAYS keep the phone more than six (6) inches from their pacemaker when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference;
- Should turn the phone OFF immediately if there is any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives).

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Health Care Facilities

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may use equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Turn your phone OFF in any facility where posted notices so require.

Aircraft

FCC regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “Turn off two-way radio”. Obey all signs and instructions.

Potentially Explosive Atmosphere

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always marked clearly. Potential areas may include: fueling areas (such as gasoline stations); below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

For Vehicles Equipped with an Air Bag

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user guide in an accessible place at all times after reading it.

Violation of the instructions may cause minor or serious damage to the product.

- Do not disassemble or open crush, bend or deform, puncture or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Only use the battery for the system for which it is specified.
- Only use the battery with a charging system that has been qualified with the system per this standard. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725-200x. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.
- Promptly dispose of used batteries in accordance with local regulations.
- Battery usage by children should be supervised.
- Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Improper battery use may result in a fire, explosion or other hazard.
- For those host devices that utilize a USB port as a charging source, check the host device's user manual for the USB-IF logo or some other means to ensure that it has completed the USB-IF compliance program.
- Do not use your device for long periods of time while a part of your body is making direct contact with it. The temperature of the product may increase during normal operation and this may result in harming or

burning your skin.

- Your phone is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your phone during or immediately after operation.

Charger and Adapter Safety

- The charger and adapter are intended for indoor use only.
- Insert the battery pack charger vertically into the wall power socket.
- Only use the approved battery charger. Otherwise, you may cause serious damage to your phone.
- Use the correct adapter for your phone when using the battery pack charger abroad.

Battery Information and Care

- Please dispose of your battery properly or take it to your local wireless carrier for recycling.
- The battery doesn't need to be empty before recharging.
- Use only LG-approved chargers specific to your phone model since they are designed to maximize battery life.
- Do not disassemble or short-circuit the battery.
- Keep the battery's metal contacts clean.
- Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before replacement.
- Recharge the battery after long periods of non-use to maximize battery life.
- Battery life will vary due to usage patterns and environmental conditions.
- Use of extended backlighting, Browser, and data connectivity kits affect battery life and talk/standby times.
- The self-protection function of the battery cuts the power of the phone when its operation is in an abnormal state. In this case, remove the battery from the phone, reinstall it, and turn the phone on.

Explosion, Shock, and Fire Hazards

- Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it's dirty.
- When using the power plug, ensure that it's firmly connected. If not, it may cause excessive heat or fire.
- If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.
- Don't short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.

General Notice

- Using a damaged battery or placing a battery in your mouth may cause serious injury.
- Do not place items containing magnetic components such as a credit card, phone card, bank book, or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.
- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Center to replace the damaged antenna.
- Do not immerse your phone in water. If this happens, turn it off

immediately and remove the battery. If the phone does not work, take it to an LG Authorized Service Center.

- Do not paint your phone.
- The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone numbers. (Ringtones, text messages, voice messages, pictures, and videos could also be deleted.) The manufacturer is not liable for damage due to the loss of data.
- When you use the phone in public places, set the ringtone to vibration so you don't disturb others.
- Do not turn your phone on or off when putting it to your ear.
- Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not tap the antenna unnecessarily.

Caution:

Avoid potential hearing loss.

Prolonged exposure to loud sounds (including music) is the most common cause of preventable hearing loss. Some scientific research suggests that using portable audio devices, such as portable music players and cellular telephones, at high volume settings for long durations may lead to permanent noise induced hearing loss. This includes the use of headphones (including headsets, earbuds and Bluetooth® or other wireless devices). Exposure to very loud sound has also been associated in some studies with tinnitus (a ringing in the ear), hypersensitivity to sound and distorted hearing. Individual susceptibility to noise-induced hearing loss and other potential hearing problems varies.

The amount of sound produced by a portable audio device varies depending on the nature of the sound, the device, the device settings and the headphones. You should follow some commonsense recommendations when using any portable audio device:

- Set the volume in a quiet environment and select the lowest volume at which you can hear adequately.
- When using headphones, turn the volume down if you cannot hear the people speaking near you or if the person sitting next to you can hear what you are listening to.
- Do not turn the volume up to block out noisy surroundings. If you choose to listen to your portable device in a noisy environment, use noise-cancelling headphones to block out background environmental noise.
- Limit the amount of time you listen. As the volume increases, less time is required before your hearing could be affected.
- Avoid using headphones after exposure to extremely loud noises, such as rock concerts, that might cause temporary hearing loss. Temporary hearing loss might cause unsafe volumes to sound normal.
- Do not listen at any volume that causes you discomfort. If you experience ringing in your ears, hear muffled speech or experience any temporary hearing difficulty after listening to your portable audio device, discontinue use and consult your doctor.

You can obtain additional information on this subject from the following sources:

American Academy of Audiology

11730 Plaza American Drive, Suite 300

Reston, VA 20190

Voice: (800) 222-2336

Email: info@audiology.org

Internet: www.audiology.org

National Institute on Deafness and Other Communication Disorders

National Institutes of Health

31 Center Drive, MSC 2320

Bethesda, MD USA 20892-2320

Voice: (301) 496-7243

Email: nidcdinfo@nih.gov

Internet: <http://www.nidcd.nih.gov/health/hearing>

National Institute for Occupational Safety and Health

Hubert H. Humphrey Bldg.

200 Independence Ave., SW

Washington, DC 20201

Voice: 1-800-35-NIOSH (1-800-356-4674)

Internet:

<http://www.cdc.gov/niosh/topics/noise/default.html>

FDA Consumer Update



The U.S. Food and Drug Administration's Center for Devices and Radiological Health Consumer Update on Mobile Phones:

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of Radio Frequency (RF) energy in the microwave range while being used. They also emit very low levels of RF when in standby mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2. What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit Radio Frequency (RF) energy at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so that the hazard no longer exists.

Although the existing scientific data does not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;

- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. The FCC relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

3. What kinds of phones are the subject of this update?

The term “wireless phone” refers here to handheld wireless phones with built-in antennas, often called “cell”, “mobile”, or “PCS” phones. These types of wireless phones can expose the user to measurable Radio Frequency (RF) energy because of the short distance between the phone and the user’s head.

These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of Radio Frequency (RF) energy exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we do not know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect, if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to Radio Frequency (RF) energy.

The FDA has been a leading participant in the World Health Organization International Electro Magnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The project has also helped develop a series of public information documents on EMF issues.

The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research And Development Agreement (CRADA) to do research on wireless phone safety. The FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through

contracts with independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much Radio Frequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit Radio Frequency (RF) energy exposures. The FCC established these guidelines in consultation with the FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless phones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/cgb/cellular.html>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

8. What has the FDA done to measure the Radio Frequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the Radio Frequency (RF) energy exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques", sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head.

Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to Radio Frequency energy from my wireless phone?

If there is a risk from these products - and at this point we do not know that there is - it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to Radio Frequency (RF) energy. Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna. Again, the scientific data does not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to Radio Frequency (RF) energy, the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence

exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radio Frequency (RF) energy from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method to measure Electro Magnetic Interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI.

The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a “compatible” phone and a “compatible” hearing aid at the same time. This standard was approved by the IEEE in 2000.

The FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

12. Where can I find additional information?

For additional information, please refer to the following resources:

FDA web page on wireless phones (<http://www.fda.gov>), under “C” in the subject index, select Cell Phones > Research.

Federal Communications Commission (FCC) RF Safety Program (<http://www.fcc.gov/oet/rfsafety/>)

International Commission on Nonionizing Radiation Protection (<http://www.icnirp.de>)

World Health Organization (WHO) International EMF Project (<http://www.who.int/emf>)

Health Protection Agency (<http://www.hpa.org.uk/>)

10 Driver Safety Tips

Your wireless phone gives you the powerful ability to communicate by voice almost anywhere, anytime. An important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When operating a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.
2. When available, use a hands-free device. A number of hands-free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.
3. Make sure you place your wireless phone within easy reach and where you can reach it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.
4. Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.

5. Don't take notes or look up phone numbers while driving. If you are reading an address book or business card, or writing a "to-do" list while driving a car, you are not watching where you are going. It is common sense. Do not get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light, or otherwise stationary. But if you need to dial while driving, follow this simple tip - dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix; they are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations – with your phone at your side, help is only three numbers away. Dial 911 or other local emergency number in the case of fire, traffic accident, road hazard, or medical emergency. Remember, it's a free call on your wireless phone!
9. Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a "Good Samaritan" in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special wireless non-emergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But you can still use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

The above tips are meant as general guidelines. Before deciding to use your mobile device while operating a vehicle, it is recommended that you consult your applicable jurisdiction's local laws or other regulations regarding such use. Such laws or other regulations may prohibit or otherwise restrict the manner in which a driver may use his or her phone while operating a vehicle.

Consumer Information on SAR

(Specific Absorption Rate)

This model phone meets the Government's requirements for exposure to radio waves. Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These FCC exposure limits are derived from the recommendations of two expert organizations, the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines.

The highest SAR value for this model phone when tested for use at the ear is 0.86 W/kg and when worn on the body, as described in this user's manual, is 1.11 W/kg. While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/ea/fccid/> after searching on FCC ID.

To find information that pertains to a particular model phone, this site uses the phone FCC ID number which is usually printed somewhere on the case of the phone. Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.ctia.org/>

*In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless phones be compatible with hearing-aids. The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities.

While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users to find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and wireless phone rating values are then added together. A sum of 5 is considered acceptable for normal use. A sum of 6 is considered for best use.



In the example to the left, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This should provide the hearing aid user with “normal usage” while using their

hearing aid with the particular wireless phone. “Normal usage” in this context is defined as a signal quality that’s acceptable for normal operation.

The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules. The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

When you’re talking on a cell phone, it’s recommended that you turn the BT (Bluetooth) mode off for HAC.

According to HAC policy(KDB 285076), we state this handset has not been rated for hearing aid compatibility with respect to the Wi-Fi capability.

For information about hearing aids and digital wireless phones

Wireless Phones and Hearing Aid Accessibility

<http://www.accesswireless.org/Home.aspx>

FCC Hearing Aid Compatibility and Volume Control

http://www.fcc.gov/cgb/consumerfacts/hac_wireless.html



ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

DivX Certified® to play DivX® video up to HD 720p, including premium content.


DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.




Dolby Mobile License notice










Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



Please check to see if any problems you have encountered with your phone are described in this section before taking the phone in for service or calling a service representative.


Category	Sub-Category	Question	Answer
BT	Bluetooth Devices	What are the functions available via Bluetooth?	Connecting to Stereo/Mono Headset, Car Kit, FTP server is possible. When it's connected to another phone via Bluetooth, you can receive Contacts data.
BT	Bluetooth Headset	If my Bluetooth headset is connected, can I listen to my music through my 3.5mm wired headphones?	When a Bluetooth headset is connected, all system sounds are played over the headset. As a result, you will not be able to listen to music through your wired headphones.
Data	Contacts Backup	How can I back up Contacts?	The Contacts data can be synchronized between your phone and Gmail™.
Data	Synchronization	Is it possible to set up one-way-sync with Gmail?	Only two-way synchronization is available.
Data	Synchronization	Is it possible to synchronize all the Email folders?	The Inbox is automatically synchronized. You can view other folders by tapping the Menu Key  and selecting Folders .
Data	Synchronization	Is it possible to transfer Contacts data from a feature phone to an Android™ phone?	Yes, if your contacts can be extracted into a .CSV file. How to transfer: 1. Create ".CSV" file with the contacts on your current phone. 2. Log into Gmail with your PC. 3. Click Contacts . 4. Click Import . 5. Attach the ".CSV" file. 6. Your contacts will then be synchronized between your Android phone and Gmail.
Google™ Service	Gmail Log-In	Should I have to log into Gmail whenever I want to access Gmail?	Once you log into Gmail, you don't need to log in Gmail again.
Google Service	Google Account	Is it possible to filter emails?	No, email filtering is not supported via the phone.
Phone Function	YouTube™	Is it possible to play YouTube videos?	Yes, YouTube videos are supported but may have to be viewed through the YouTube application (and not the Browser).



 

 
Category	Sub-Category	Question	Answer
Phone Function	Email	What happens when I execute another application while writing an email?	Your email will automatically be saved as a draft.
Phone Function	Ringtone	Is there a file size limitation for when I want to use an .MP3 file as a ringtone?	There is no file size limitation.
Phone Function	Message Time	My phone does not display the time of receipt for messages older than 24 hours. How can I change this?	No settings can be changed but follow the steps below to view the times. 1. Open the conversation that contains the desired message. 2. Tap and hold the message. 3. Tap View message details .
Phone Function	microSD Card	Is it possible to save applications to the microSD card?	Some applications can be saved to the microSD card. 1. From the Home screen, tap the Menu Key  > Settings > Apps . 2. Tap an application and then tap Move to SD card .
Phone Function	microSD Card	What is the maximum supported size for a memory card?	32GB memory cards are compatible.
Phone Function	Navigation	Is it possible to install another navigation application on my phone?	Any application that is available on Play Store and is compatible with the hardware can be installed and used.
Phone Function	Synchronization	Is it possible to synchronize my contacts from all my email accounts?	Only Gmail and MS Exchange server (Company Email Server) contacts can be synchronized.
Phone Function	Wait and Pause	Is it possible to save a contact with Wait and Pause in the numbers?	If you transferred a contact with the Wait & Pause functions saved into the number, those functions will not be recognized. You will need to re-save each number. How to re-save numbers with Wait and Pause: 1. From the Home screen, tap the Phone Key  (in the Quick Keys bar). 2. Dial the number, then tap the Menu Key  . 3. Tap Add 2-sec pause or Add wait . 4. Enter the remaining number(s) and continue saving the number as necessary.

Category	Sub-Category	Question	Answer
Phone Function	Security	What are the phone's security functions?	You are able to set the phone to require the entry of an unlock sequence (facial unlock, pattern, PIN, or password) before the phone can be accessed or used.
Phone Function	Unlock Pattern	What should I do if I forget my Unlock Pattern?	After attempting the Unlock Pattern 5 times, you can tap the Forget Pattern? option and use your Google Account information to unlock your phone. In addition, if you forgot the unlock pattern, you can unlock with Backup Pin.
Phone Function	Unlock Pattern	What should I do if I forgot the Unlock Pattern and I didn't create a Google Account on the phone?	<p>Without entering the Unlock Pattern, you will not be able to access your phone.</p> <p>Caution: If you perform a factory reset, all user applications and user data will be deleted. Please remember to back up any important data before performing a factory reset.</p> <p>How to perform a factory reset:</p> <ol style="list-style-type: none"> 1. Turn the power off. 2. Tap and hold the following keys at the same time for 12 seconds: Power/Lock Key  + the down Volume Key. 3. Release the keys when you see the screen message "Permanently Erase User Data & Reset Settings?", press the Power key to confirm and any other key to cancel. 4. Press the Power/Lock Key  to confirm (or press the Volume Keys to cancel). When you press the Power/Lock Key  to confirm, a pop-up appears asking "Are you sure you want to continue with erase?". 5. Press the Power/Lock Key  and your phone will be restored to the factory settings. To cancel, press the Volume Keys.

Category	Sub-Category	Question	Answer
Phone Function	Unlock Pattern	How do I create the Unlock Pattern?	<ol style="list-style-type: none"> 1. From the Home screen, tap the Menu Key . 2. Tap Settings > Lock screen. 3. Tap Select screen lock. 4. Tap Pattern. The first time you do this, a short tutorial about creating an unlock pattern appears. 5. Set up by drawing your pattern once > Continue, draw again > Confirm.
Phone Function	Speed Dial	Is Speed Dialing supported?	<p>Yes. You can set Speed Dials as well as save a contact directly on your Home screen.</p> <p>To set a Speed Dial:</p> <ol style="list-style-type: none"> 1. Open the Contacts application. 2. Tap the Menu Key  > Speed dials. 3. Tap the empty speed dial location and select the desired contact and phone number. <p>To set a Direct Dial shortcut to your Home screen:</p> <ol style="list-style-type: none"> 1. Tap and hold an empty area on your Home screen. 2. Tap Widgets > Direct dial. 3. Select a contact from your Contacts List.
Phone Function	Memory	Is it possible to save a picture to the internal memory while taking a picture?	<p>Pictures, along with Music and Video files, cannot be saved to the internal memory. They are saved to your microSD card.</p>
Phone Function	Memory	Will I know when my memory is full?	<p>Yes, you will receive a notification.</p>
Phone Function	Language Support	Is it possible to change the language?	<p>The phone has multi-lingual capabilities.</p> <p>To change the language:</p> <ol style="list-style-type: none"> 1. From the Home screen, tap the Menu Key  > Settings. 2. Tap Language & input > Language. 3. Tap the desired language.

Category	Sub-Category	Question	Answer
Phone Function	Language Support	Which languages are supported when using Play Store?	The Play Store application supports English and Spanish. Third party applications may not support all languages.
Phone Function	VPN	How do I set up a VPN?	VPN access configuration is different according to each company. To configure VPN access from your phone, you must obtain the details from your company's network administrator.
Phone Function	Screen time out	My screen turns off after only 15 seconds. How can I change the amount of time for the backlight to turn off?	<ol style="list-style-type: none"> 1. From the Home screen, tap the Menu Key . 2. Tap Settings > Display > Screen timeout. 3. Tap the preferred screen backlight timeout time.
Phone Function	Wi-Fi & 4G	When Wi-Fi and 4G are both available, which service will my phone use?	<p>When using data, your phone may default to the Wi-Fi connection (if Wi-Fi connectivity on your phone is set to On). However, there will be no notification when your phone switches from one to the other.</p> <p>To know which data connection is being used, use the 4G or Wi-Fi icon at the top of your screen.</p>
Phone Function	Home screen	Is it possible to remove an application from the Home screen?	Yes. Just tap and hold the icon until the trash can icon appears at the top-center of the screen. Then, without lifting your finger, drag the icon to the trash can.
Phone Function	Application	I downloaded an application and it causes a lot of errors. How do I remove it?	<ol style="list-style-type: none"> 1. From the Home screen, tap the Menu Key . 2. Tap Settings > Apps. 3. Tap the application and then tap Uninstall.

Category	Sub-Category	Question	Answer
Phone Function	Camera	My phone's camera does not take pictures and says "No SD Card or SD card is not ready!". Why doesn't it work?	<p>A microSD card must be inserted in order to use the phone's camera.</p> <p>Verify that the microSD card is mounted on the device.</p> <p>Tap the Menu Key  > Settings > Storage > Mount SD card</p>
Phone Function	Alarm	Can I use music files for my alarm?	<p>Yes. After saving a music file as a ringtone, you can use it for your alarm.</p> <ul style="list-style-type: none"> • Tap and hold a song in a library list. In the Context menu that opens, tap Set as ringtone.
Phone Function	Alarm	Will my alarm be audible or will it go off if the phone is turned off?	No, this is not supported.
Phone Function	Alarm	If my Ringer Volume is set to Off or Vibrate , will I hear my alarm?	Your alarm is programmed to be audible even in these scenarios.
Phone Spec	Battery Time	What is the maximum amount of time my phone's battery will last before I need to recharge it?	<p>Talk time : Approx. 455 mins</p> <p>Standby : Approx. 20 days</p>
Phone Spec	Band	Which wireless bands are supported by the phone?	Your phone is able to operate on the 800Mhz and 1900MHz bands.

Category	Sub-Category	Question	Answer
Recovery Solution	Factory Reset	How do I perform a factory reset?	<ol style="list-style-type: none"> 1. From the Home screen, tap the Menu Key . 2. Tap Settings > Backup & reset > Factory data reset. <p>NOTE Tap the checkbox to also erase all contents from your microSD card when the phone is reset.</p> <ol style="list-style-type: none"> 3. Read the warning and tap Reset phone. 4. Tap Erase everything. <p>Attention: If a factory reset is performed, all installed application and user data will be erased. Please remember to back up any important data before performing a factory reset.</p>
Recovery Solution	Factory Reset	How can I perform a factory reset if I can't access the phone's setting menu?	<p>How to perform a factory reset:</p> <ol style="list-style-type: none"> 1. Turn the power off. 2. Tap and hold the following keys at the same time for 12 seconds: Power/Lock Key  + the down Volume Key. 3. Release the keys when you see the screen message "Permanently Erase User Data & Reset Settings?", press the Power key to confirm and any other key to cancel. 4. Press the Power/Lock Key  to confirm (or press the Volume Keys to cancel). When you press the Power/Lock Key  to confirm, a pop-up appears asking "Are you sure you want to continue with erase?". 5. Press the Power/Lock Key  and your phone will be restored to the factory settings. To cancel, press the Volume Keys. <p>Attention: If a factory reset is performed, all installed applications and user data will be erased. Please remember to back up any important data before performing a factory reset.</p>

1. WHAT THIS WARRANTY COVERS:

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the product extends for TWELVE (12) MONTHS beginning on the date of purchase of the product with valid proof of purchase, or absent valid proof of purchase, FIFTEEN (15) MONTHS from date of manufacture as determined by the unit's manufacture date code.
- (2) The limited warranty extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser/end user.
- (3) This warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S., including Alaska, Hawaii, U.S. Territories and Canada.
- (4) The external housing and cosmetic parts shall be free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
- (5) Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
- (6) The customer shall bear the cost of shipping the product to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.
- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.

- (4) That the Customer Service Department at LG was not notified by consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.
- (5) Products which have had the serial number removed or made illegible.
- (6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of marketability or fitness for a particular use.
- (7) Damage resulting from use of non LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).

3. WHAT LG WILL DO:

LG will, at its sole option, either repair, replace or refund the purchase price of any unit that does not conform to this limited warranty. LG may choose at its option to use functionally equivalent re-conditioned, refurbished or new units or parts or any units. In addition, LG will not re-install or back-up any data, applications or software that you have added to your phone. It is therefore recommended that you back-up any such data or information prior to sending the unit to LG to avoid the permanent loss of such information.

4. STATE LAW RIGHTS:

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusive limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

5. HOW TO GET WARRANTY SERVICE:

If you experience any problems with either the Bluetooth headset or the mobile handset, in each case as may be covered by this limited warranty, you need only return the affected device. For example, if a problem exists with the Bluetooth headset, please **DO NOT** return your mobile handset with the headset. Likewise, if a problem exists with the mobile handset, please **DO NOT** return the Bluetooth Headset with the handset.

To obtain warranty service, please call or fax to the following telephone numbers from anywhere in the continental United States:

Tel. 1-800-793-8896 or Fax. 1-800-448-4026

Or visit <http://us.lgservice.com>. Correspondence may also be mailed to:

LG Electronics Service- Mobile Handsets, P.O. Box 240007, Huntsville, AL 35824

DO NOT RETURN YOUR PRODUCT TO THE ABOVE ADDRESS.

Please call or write for the location of the LG authorized service center nearest you and for the procedures for obtaining warranty claims.

Numbers

10 Driver Safety Tips 169

A

Accessibility 68

Adding a Contact to Your Favorites 78

Adding application icons to the Home screen 37

Adding Contacts 76

Advanced settings 68

Alarm/Clock 135

and Sharing Contacts 77

Answering or Rejecting Calls 55

Applications 34

Avoid potential hearing loss 159

B

Backup Assistant 73

Bandwidth management 69

Bookmark your favorite web pages 65

Browser 63

Browse web pages 63

C

Calculator 134

Calendar 129

Calendar & Alarm icons 27

Call a Contact by Voice Dialing 102

Call icons 27

Calling Your Contacts 58

Camera 103

Changing and Monitoring Online Status 101

Changing Browser settings 66

Changing Gmail Settings 90

Changing Google Talk Settings 101

Changing Messaging Settings 95

Changing Weather Settings 72

Changing Your Unlock Pattern 41

Charging the Phone 20

Charging with USB 21

Chatting with Friends 100

Checking the Weather 71

Composing and Sending a Message 88

Connecting Quickly With Your Contacts 45

Connecting to Wi-Fi Networks 46

Connecting Your Device to Your Computer 53

Connectivity icons 28

Consumer Information on SAR 171

Contacts 75

Context menus 37

Customizing the Apps screen 35

Customizing the Home Screen 43

D

Device memory 53

E

Email 83

Email and Messaging icons 27

Exporting 77

F

FAQ 176

FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices 173

FDA Consumer Update 162

Formatting the microSD Card 52

Front View 15

G

Gallery 109

Getting answers about how to use phone 25

Getting to Know the Home Screen 29

Gmail 86

Google Account 25

H

Home Screen Folders
Creation + Icon Edit Mode 31

I

Important Customer Information 1
Importing 77
Index 186
Installing the Battery and microSD Card 18
Internet 63
Internet connection mode 49

J

Joining Contacts 81

K**L**

Labs 69
LIMITED WARRANTY STATEMENT 183
Listening to Your Voicemail 62
Locking the Screen 40
Lock Screen Improvement 23

M

Managing Multiple Calls 61
Managing Notifications 38
Maps 69
Market 114
Messaging 91
microSD Card 52
Music 117

N

Network icons 28

O

Open an Application using Voice Dialer 102
Opening and Closing the Apps screen 35
Opening and Switching Applications 36
Opening Email and the Accounts Screen 83
Opening Gallery and Viewing Your Albums 109
Opening Gmail and Your Inbox 86
Opening Music and Working with Your Library 118
Opening the Messaging Application 91
Optimizing Battery Life 21
Options During a Call 59
Options menus 37
or Password for the First Time 41

P

Phone Overview 15
Phone's Status Icons 27
PIN 41
Placing and Ending Calls 54
Playing Music 119
Play Store 114
Polaris Office 137

Powerful Voice Input Engine 102

Privacy settings 67

Q**R**

Reading Your Messages 83, 87
Rear View 16
Replying to or Forwarding a Message 89
Responding to a Message 84

S

Safety 152
Safety Information 156
Searching Your Phone and the Web 39
Selecting Which Contacts are Displayed 81
Separating Contact Information 82
Setting Alarms 135
Setting an Event Reminder 133
Setting an Unlock Pattern 41
Settings 138
Setting the Timer 136
Setting the World Clock 136
Setting Up Your Device 24
Side Views and Top View 17
Smart Movie HD 113

SmartShare 122
Sound icons 27
Specifications 175
System icons 28

T

Table of Contents 7
Talk 99
Technical Details 10
Text Input Methods 33
The Basics 15
TIA Safety Information 152
To turn the phone sounds off 24
Touchscreen 31
To unlock the phone 23
Transferring Music Files to Your Phone 117
Turning the phone off 23
Turning the phone on 23
Turning the Phone On and Off 23

U

USB Autorun 48
Using a PIN or Password to Lock the Screen 42
Using the Status Bar to change the settings 50
Using the Stopwatch 137
Using the Swype Keyboard 98

V

Video Camera 107
Video player 124
Viewing Event Details 133
Viewing Memory in the microSD Card 52
Visual Voice Mail 85
Voice Dialer 59, 102
Voice Recorder 128

W

Working in Agenda View 129, 132
Working in Day View 129
Working in Month View 132
Working in Week View 131
Working with Albums 110
Working with Menus 37
Working with Pictures 110
Working with Playlists 121
Working with the Call Log 57
Working with Videos 111

Y

Your Photos and Videos 109
YouTube™ 126
