
Prestigio PSP5530 DUO

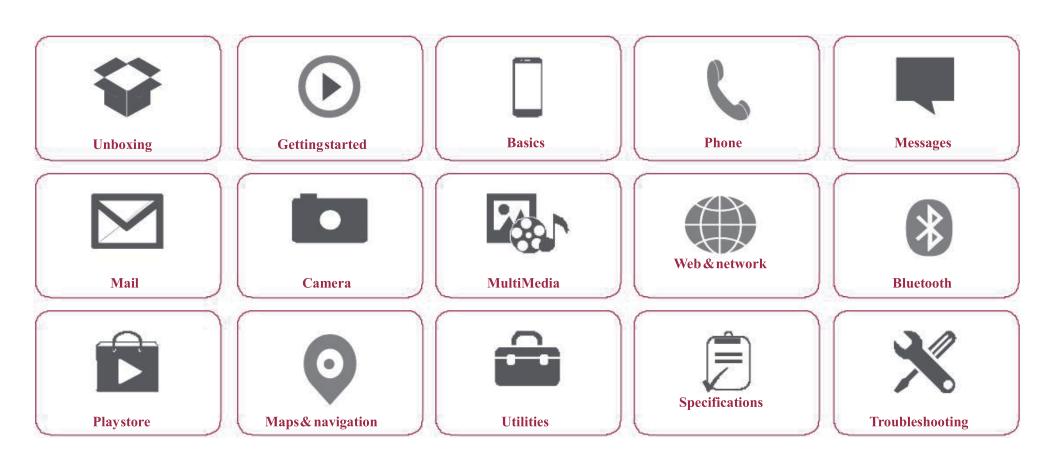

 $You may find \ detailed \ warranty information at: \\ www.prestigio.com/support/warranty-terms.$

 ${\small @\, Copyright\, 2014 Prestigio.\, All rights reserved.}$

Prestigio Unboxing



Inside your package Your phone at a glance **Buttons**



Menu






Troubleshooting






Inside your package

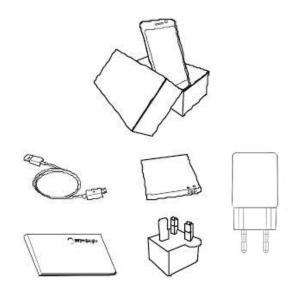

- Prestigio
 - MultiPhone
- **USB** cable
- Battery
- Adapter
- Travel adapter (for UK only)

- Quick start guide
- Legal& safety notices
- Warrantycard

Your phone at a glance

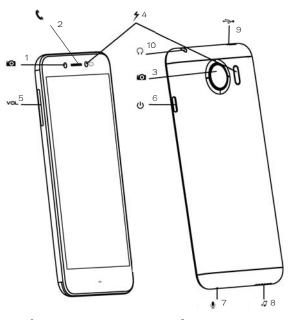

- 1. Front camera
- 2. Earpiece
- 3. Rearcamera
- Flash
- 5. Volume button
- **6.** Powerbutton
- 7. Speaker
- 8. Microphone
- 9. MicroUSB port
- 10. Earphonejack



Inside your package Your phone at a glance Buttons

Buttons

The back, start and search keys help you navigate your phone.

- Tap to openalist of options available on the current screen. To open the list of recent apps, tap and hold .
- Tap to return to the home screen.
- Tap toreturntotheprevious screen.



Do not cover the antenna area with your hands or other objects. This may cause connectivity problems or drain the battery.



Pleasereadthe "Legal and safety notices" in your package before use.













Prestigio Getting started



Installation

Power on your phone Home screens List menu


Congratulations on your purchase and welcome to Prestigio. To get the most from your product and enjoyall that Prestigio has to offer, please visit: www.prestigio.com/catalogue/MultiPhones

For more details about your product, please visit: www.prestigio.com/support


Installation

Follow the steps below to prepare your phone for using. Remember to turn off your mobile phone before removing the rear panel.


Remove the rearpanel.

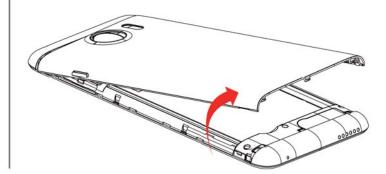

Take out the battery.

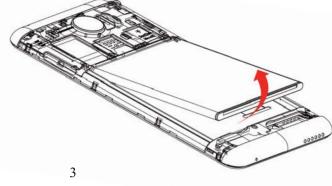

Insert the SIM card. Insert the SIM card.

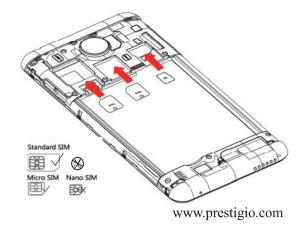





Troubleshooting







Installation
Power onyour phone
Home screens
List menu






Troubleshooting




Next



Insertamemory card.
Insertamemory card.

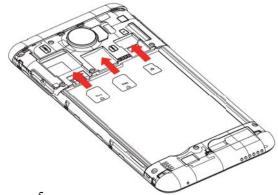

5 Insert the battery into the battery compartment.

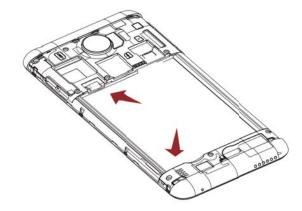

6 Puttherearpanelback.



- The use of incompatible SIM cards, manually cut SIM cards, or SIM card adapters may damage the cards or the device, and it may corrupt the data stored on the cards.
- Scratching or bending of the SIM cards may result in the loss of contacts and information, so be careful when handling, inserting, or removing the cards.



Frequent writing and erasing of data shortens the lifespan of memory cards.



Installation Power on your phone Home screens List menu





Troubleshooting




Dual SIM standby



The device supports two SIM cards for voice calls and data connection. During avoice call or data transfer via one SIM card, the other SIM card becomes inactive(not registered with your mobile network operator). This means that you cannot receive incoming calls or use data connection via the inactive SIM card. When the call or data transfer ends, both SIM cards will become active and show on the list of registered networks.


Power on your phone

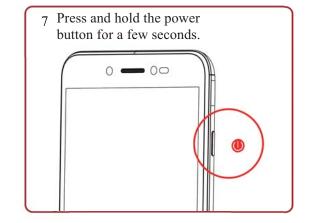

When turning on the device for the first time, follow the on-screen instructions to set up your device.



Toturnoffyourphone, press and hold the power key, and and then tap Power off on the pop-up screen.

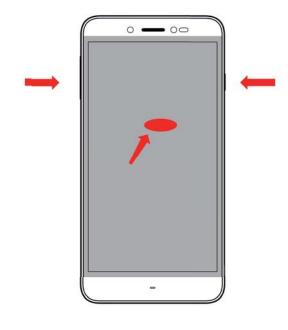



Installation **Power on your phone** Home screens List menu

Menu



Troubleshooting





Home screens

Yourhome screen is the starting point to access all of your phone's features. The home screen can have multiple panels. To viewother panels, swipe left orright.

Tap toreturn to the home screen. Yourphone's home screen consists of the following:



Personalise your wallpaper

Pick your favourite photo as your Home wallpaper. Choose from the available wallpapers, or use any photo you have taken with the camera.

- 1. On the home screen, tap > Wallpaper
- 2. Selectan image and tap Setwallpaper.

Add an appicon to home screen

- 1. On the home screen, tap (b) to open the list menu.
- 2. Tapandholdan application icon.
- 3. Dragit into a panel preview.

Remove an item on home screen

- 1. Tapandholdan item toremove.
- 2. Dragtheitem to the Remove option.
- 3. When the **Remove** option turns red, release the item.



Installation **Power on your phone** Home screens List menu






Troubleshooting





List menu

All your apps' icons can be found on the list menu. On the home screen, tap to open the list menu. Tap — or to return to the home screen. Your phone's list menu consists of the following:

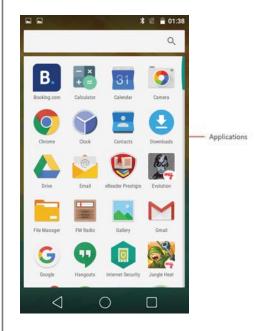

Prestigio Basics



Finger tips

Charge the battery

Connect toyour PC

Rotate the screen

Lockandunlockthe screen

Use the notifications panel

Enter text

System update

Status icons





Back


Troubleshooting






Finger tips

Only use your fingers to use the touch screen.

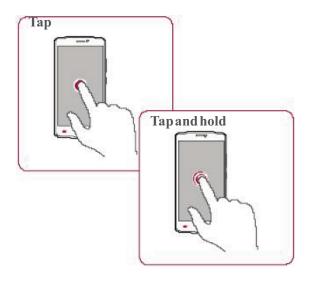

- To open an application, to select amenuitem, topress an on-screen button, or to enter a character using the on-screenkeyboard, tap it withafinger.
- Tapandholdan item for more than 2 seconds to access available options.

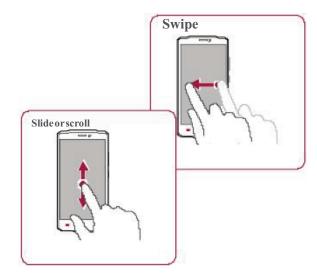

- Quickly swipe your finger vertically or horizontally across the screen to go to other homepages, scrollthrough documents, and more.
- Slide your finger vertically across the screen to open drop-down menu. Drag up or down to scroll.



Finger tips

 $Charge \, the \, battery$

Connect toyour PC

Rotate the screen


Lockandunlockthe screen

Use the notifications panel


Enter text

System update

Status icons

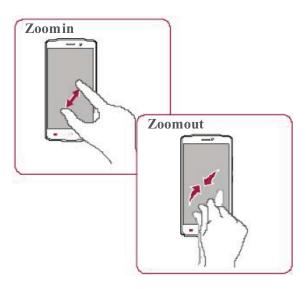

- Spreadtwo fingers apart on a webpage, map, or image to zoom in a part.
- Pinchtwo fingers together on a web page, map, or image to zoom out a part.

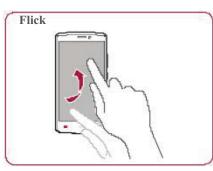

 Flick left orright on the home screen or the applications screen to see another panel. Flick up or down to scroll through a web page or a list, such as contacts.



Menu

Troubleshooting



Back

Next



Finger tips

 $Charge \, the \, battery$

Connect to your PC

Rotate the screen

Lockandunlockthe screen

Use the notifications panel

Enter text

System update

Status icons



Menu

Troubleshooting





Nex



Charge the battery

A new battery is partially charged. The battery icon at the upper-right corners hows the level of charging status.



- 1. Plugthesmall end of the charger into the micro USB port of the device, and plugthe large end of the charger into an electric socket.
- 2. Afterbeing fully charged, disconnect the device from the charger. First unplug the charger from the device, and then unplug it from the electric socket.



Always useauthenticaccessories to optimise your battery performance.

Non-authenticaccessories (eg. chargers) candamage your battery and even your phone.

Optimise your batteryperformance Here are sometips to help you optimise your batteryperformance.

- Always ensure that your phone profile is appropriately set to meet your actual usage.
- If you are not using Bluetooth, Wi-Fi, GPS or other applications, turn them off.
- Adjust the intensity of your display screen's backlight to low or medium level and for the shortest duration.
- Avoid using orplacing yourphone near magnetic objects (eg. aradio ortelevision) or on metal surfaces, which will impact the network connection and ultimately drain power from your battery.



Finger tips

Charge the battery

Connect to your PC

Rotate the screen

Lockandunlockthe screen

Use the notifications panel

Enter text

System update

Status icons



Menu

Trouble shooting






Next



Connect to your PC

You may need to connect your phone to a PC in order to complete activation. Your phone's micro USB portallows you to exchange media and other files with a PC.

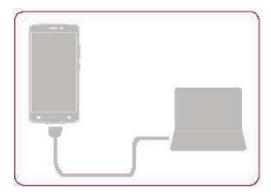

Loadfiles from your PC


- 1. Connect your phone to the PC with the included USB cable.
- 2. Open the notifications panel, and then tap

 Connected as a media device > Media device

 (MTP).
- 3. Transfer files between your phone and the PC.

Rotate the screen

For many screens, you can automatically change the screen orientation from portrait to landscape by turning your phone sideways. When entering text, you can turn your phone sideways to bring up a bigger keyboard.

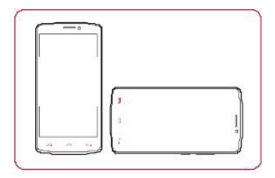



To prevent the display from rotating automatically, open the notifications panel and deselect **Autorotation**.



- Some applications do not allow screen rotation.
- Some applications display a different screen depending on the orientation.



Finger tips

Charge the battery

Connect toyour PC

Rotate the screen

Lockandunlockthe screen

Use the notifications panel

 
Enter text

System update

Status icons



Menu






Back



Lock and unlock the screen

When not in use, lock your phone to prevent unwanted operations and save the battery power.

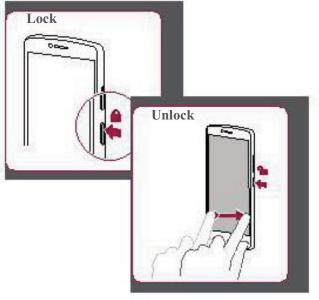

Autolock

You can set a time span for the screen to be locked automatically.

1. On the list menu, tap Sleep.



Settings>Display>

2. Selectyour desired time span.

Setscreen lock pattern

Protectyourpersonal information and prevent others from using your phone without your permission by setting a screen lock pattern, PIN, or password.

On the list menu, tap Screen lock.



Settings>Security>



When your phone is locked, Your phone canstill:

- Receive calls, text messages, and other updates.
- Play music.
- Adjust the volume.



Finger tips

Charge the battery

Connect to your PC

Rotate the screen

Lockandunlockthe screen

Use the notifications panel

Enter text

System update

Status icons



Menu

Troubleshooting






Next



Use the notifications panel

Slide down from the top of the screen to open thenotifications panel. When you get a new notification, you can open it to see what event or new info you have received. You can also quickly access settings from it. It allows you to easily turn airplane mode, Wi-Fi, and Bluetooth on and off. It also provides a shortcut to set the brightness and orientation of your screen.

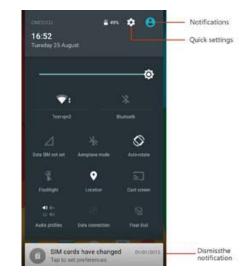

Entertext

Usetheon-screen keyboard to entertext, such as contact information, mail, and web addresses.

Use the keyboard



- 1. Characterkeys
- 2. Shiftkey
- **3.** Numbers and symbols key
- **4.** Entertext by voice
- **5.** Spacekey
- **6.** Enterkey
- 7. Backspacekey



Finger tips Charge the battery Connect to your PC Rotate the screen Lockandunlockthe screen Use the notifications panel **Enter text System update Status icons**



Menu

Troubleshooting







Enter text by voice

Youalsocan enterthetext by activating the voice input featureand then speak into the microphone. Yourphone displays what you peak. Voicetyping: tap . onthe screen.

Copyand paste text

- Tapaword, dragthecircles before and after the word to highlight the section you want to copy, and tap.
- Topastethetext, tap and hold at the point where you want to paste the text. Tap Paste.

System update

Yourphone can check and notify you if there is a new upgrade available. You can also manually check if there is an available update. You can set this option in Settings>About phone>updates.



Do not press any keys while the device is upgrading.

Statusicons

The icons in the status barat the top of the screen give information about your phone:

	3Gnetworkconnected
Vibrationmode activated	Wi-Fi connected
Airplane mode activated	Roaming (outside of
Batterypower level	Bluetoothisactivated
Calls in progress	Connected to PC
ă	microphone connected
	connected
GPRS networkconnected	NoSIMcarddetected
EDGE network connected	Alarmisset
HSPA network connected	

Prestigio Phone



Calls

Contacts

Contact groups

Learn to use calling functions, such as making and answering calls, using options available during a call or customising and using call-related features.

Calls

Make and end a call

1. On the home screen or list menu, tap

Phone.

- 2. Tap III to open the dial pad. .
- 3. Enterthephone number, and then tap.
- 4. Tap toend a call.

Answer a call

When you receive a phone call from a contact, the incoming call screen appears. To pick up the phone, Slide (to.

Silence an incoming call

When a call comes in, press the power button or volume button to mute the ringing sound without rejectingthecall

Set up a conference call

If network is available, you can make the first call or accepta call. Then simply dial each subsequent call to add it to the conference.

- 1. Duringacall, tap 👤 to make a call to another person.
- 2. The second number is dialled, and the first call is put on hold at this time.
- 3. Tap I to add the contact to a conference call.



Makesure your SIM card is enabled with conference calling service. Contact your mobile operator for details.



Menu

Troubleshooting







Calls
Contacts
Contactgroups



Menu



Troubleshooting



Next



Make an emergency call

In some regions, you can make emergency calls even if you do not have a SIM card installed or your SIM card has been blocked.

- 1. On the homescreen, tap Phone.
- 2. Tap : to open the dial pad.
- **3.** Dial the emergency number for your location, and then tap ...



If you are out of base station coverage, you will not be able to make an emergency call.



In Europe, the standard emergency number is 112; in the UK, it is 999.

Contacts

Contacts are stored in one of the two available phone books: SIM phone book (located on your SIM card) or the Smart phone book (located on your phone).

• To view your contacts, tap **People** on the home screen or list menu.

Search for a contact

- 1. Scroll up or down the contact list.
- **2.** Tap and enter the first few letters of the name in the search bar.
- 3. Select the contact from the option list.

Adda new contact

Methodone:

- **1.** On the home screen or list menu, tap **Phone**.
- 2. Tap toopen the dialpad.
- 3. Enteranumber, tap . Add to contacts.
- **4.** Add details as desired.
- **5.** Tap **Done** to finish and save.

Methodtwo:

- 1. Goto **People**to view the contact list.
- 2. Tap 👤 to add a new contact.



Calls
Contacts

Contact groups



Menu







Nex



Import/Export contacts

- 1. Go to People to view the contact list.
- 2. Tap : >Import/export.
- 3. Select the contacts storage.
- 4. Followtheprompts to finish.

Delete contacts

- 1. Go to People to view the contact list.
- 2. Tap >Delete contact.
- 3. Choosethe contacts you wish to remove.
- 4. TapOK to delete the contacts.

Contact groups

You can group your contacts as different groups. For different groups, you can use different identifications, and send messages to a group.

Add contacts to a group

- 1. Go to People to view the contact list.
- 2. Tap 🌉 to view contact groups.
- 3. Tap net to add contacts to a group.
- **4.** Enteryour group's name, and tap **2.** to add contacts.

Prestigio Messages



Send a message

Checkyour message Reply to a message Forward or delete a message Delete a conversation

Troubleshooting








Messages let you exchange text messages with other SMS and MMS devices via your cellular connection. Your sent and received messages are neatly grouped into conversations, by contact name orphone number.

Send a message

On the home screen or list menu, tap **Messaging**. Andthentap to startcomposing a new message.

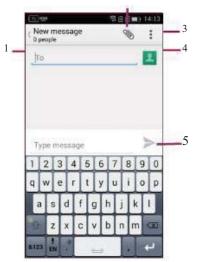

- 1. Enteraphone number
- 2. Add picture/video/audio/slideshow
- **3.** More options
- 4. Add are cipient from your contacts list
- 5. Sendthe message



There is a limit on the number ofcharacters for a single text message (displayed above the send button). If you exceed the limit, your text message will be delivered as one but will be billed as morethan one message.



Send a message

Checkyour message Reply to a message Forward or delete a message **Delete a conversation**



Troubleshooting







Checkyour message

Depending on your notification settings, your phone plays a sound, vibrates, or displays the message briefly in the status barwhen you receive anew message.

On the home screen or list menu, tap Messaging. To check a message, tapa conversation.

Reply to a message

- 1. On the messages screen, tap the conversation containing the message.
- 2. Inthetext box, enteryour message.
- 3. Tap > to send the message.

Forward or delete a message

- 1. On the messages screen, tap the conversation containing the message.
- 2. Tap and hold amessage.
- 3. Inthe pop-up window, select Forward or Delete.

Delete a conversation

- 1. On the home screen or list menu, tap $Messaging {\it todisplay} the {\it messages screen}.$
- 2. Tap and hold a contact or phone number.
- 3. Tap at the bottom of the screen.

Prestigio Mail



Set up an email account

Send a mail

View your mails Reply to a mail

Delete mails

messages. Learn to send or view email messages via yourpersonal or company email account.

Set up an email account

Use this application to send or view email

- 1. On the homescreen or list menu, tap Email and do one of the following:
- If this is your first time adding an email account in Mail, move to the next step.
- If you have already added an email account, then tap $\frac{1}{2}$ > Settings > add account.
- 2. Enterthe email address and password for your email account.



When you finish setting up the email account, the email messages will download to your device.

Delete an email account

- 1. Go to Settings > Accounts.
- 2. Tap the email account your want to delete.
- 3. Tap > Remove account.

Send a mail

Onthehomescreen or list menu, tap Email.

And then tap

 


tostart composing a new mail.



- 1. Enterarecipient
- 2. Enterthe mail subject
- **3.** More options
- 4. Sendthe mail











Set up an email account

Send a mail View your mails Reply to a mail **Delete mails**

Troubleshooting





Viewyour mails

- 1. On the email inbox, tap C to check whether thereis a new mail.
- **2.** Tapthedesired mail toread it.
- Use or to view the previous or next mail.

Search for a mail

- 1. Tap to display the search bar.
- 2. Choose a search option in the drop-down list.
- 3. Enterthe first few letters of the mail sender or subject in the search bar.
- 4. Select the mail from the list.

Reply to a mail

- 1. On the email inbox, tap the email message.
- 2. Tap , and then compose your mail.
- 3. Tap be to send the mail.

Delete mails

• Tapthemail you wish to delete, and then tap

Prestigio Camera



Yourcameraatagalance Take a photo Record a video Photo and video settigns With your phone, you can take both photos and videos as desired. In addition to a rear camera, there is a camera on the front for video calls and self-portraits.

- Tousethecamera, on the homescreen or list menu, tap Camera.

Your camera at a galance



- 1. Phone/video settings
- Capturephoto
- Video recording
- Imagepreview
- 5. Flash settings
- Switchbetween front/rear camera



Troubleshooting





Back





Take a photo

- 1. Turn on the camera.
- **2.** Change the camera setting if necessary.
- 3. Point the camera at what you want to capture.
- 4. Tap to capture the photo.

Take a photo of yourself

- 1. Turn on the camera.
- 2. On the screen, tap 🙉
- 3. Tap to capture the photo.

Take a panoramic photo

You can capture anything wide or tall objects in a singlephoto with your phone.

 
- 1. Turn on the camera.
- 2. Scroll downthe capture modes, and then tap
- 3. When you are ready to take the first shot, tap
- 4. A directional arrow appears. Panyour phone as smoothlyas youcan.
- 5. The camera will stitch the shots into a single photo.



Your camera at a galance Take a photo Record a video $Photo \, and \, video \, settigns \,$



Back





Recordavideo

- 1. Turnonthecamera.
- When you are ready to start recording, tap
- 3. To stop recording, tap.



Photo and video settigns

Before you take a photo or recorda video, customise your photo/video settings.

Generalsettings	
GPSlocationinfo	Attacha GPS location tag to the photo.
Exposure	This determines how much light the camera's sensor receives.
Scenemode	Select your desiredscene mode.
Whitebalance	Select anappropriate white balance, so images have a true-to-life colour range.
Anti-flicker	Select a bandto avoid the impacts on photos caused by flickers from lighting sources.
Restoredefaults	Restore to default settings.
Photosettings	
Zeroshutter	The ZSD(zeroshutterdelay) functionhelps
delay	youcapture photos immediately.
Facedetection	Set the ideal exposure and clarity of faces.
Selftimer	Selectatime span for shutter delay to take a self-portrait.

Picture size	Select from various standard sizes for your picture.
Preview size	Set the preview screenratio before you take a photo.
ISO	AnISOvalue indicates the light sensitivity of your camera's imaging sensor. Higher values are for fast-moving or poorly-lit objects.
Videosettings	
EIS	The EIS (Electronic Image Stabilization) function helps reduce blurring associated with the motion of a camera during exposure
Timelapse interval	Set the time lapse interval to adjust the speed of your video output.
Videoquality	Set the quality level for videosas this setting will affect your file size.

Prestigio MultiMedia



Gallery

Video player Musicplayer FM radio Yourphone provides several multimedia for your entertainment. You can view your photo gallery, enjoy music, and watch videos.

Gallery

View your photos

1. On the home screen or list menu, tap

Gallery.

- 2. Browse an album or a group of photos.
- 3. Tapaphoto to viewit full-screen.

Zoom in and out

 $Spread two fingers a parton any place to zoom in. \\ Pinch to zoom out, or double-tap to return.$

Edityour photos

When viewing a photo, use the keys on the screen to edit the photos.



- 1. Edit the photo
- **2.** More options
- 3. Share your photo



Troubleshooting



Next





Gallery Video player Musicplayer FM radio





Menu



Troubleshooting



Video player

You can use the vide oplayer on your phone to watch vide os.

Watch a video

- 1. On the homescreen or list menu, tap **Videos**.
- 2. Select the video that you want to watch.
- **3.** Tap the on-screen keys to control the video playback.
- 4. Pressthe volume button to adjust the sound.
- 5. Tap to select more options.

Music player

You can listen to your favourite music with the music player. The music app is a central hub for your favourite music whether it is stored in your phone or streamed through a music service.

Listen to music

- 1. On the home screen or list menu, tap

 Music.
- **2.** Tap a song from the list, or tap \(\) to find your desired song.
- **3.** Tap the on-screen keys to control the music playback.
- **4.** Press the volume button to adjust the sound.
- **5.** Tap to select more options.



Video player Musicplayer FM radio

Menu



Troubleshooting



Nex



FM radio

You can listentoradio programs with your phone.



You must connect a headset before using the FM radio on your phone.

Listento a radio station

- 1. On the some screen or list menu, tap FM Radio.
- 2. Tap > Search. It will start scanning automatically and save the available channels.
- 3. Usetheon-screen keystocontrol playback:
- 4. Press the volume button to adjust the sound.
- 5. Tap to select more options.

Prestigio Web&network



Connect to the Internet Web browse

You can connect your phone to the Internet and browseawebpage.

Connect to the Internet

Yourphone connects to the Internet whenever necessary, using a Wi-Fi connection (if available) or your mobile operator's data connection.

Data connection

You can use your mobile operator's data connection.

Turn on data connection

- 1. Go to Settings>More...> Mobile networks >Data connection.
- 2. Tapto turn on or off data connection.



Some apps and services may transfer data over your mobile operator's cellular network, which may result in additional fees. Contact your mobile operator for details.

Turn on data roaming

Connect to your mobile operator's partner networks and access data services when you are out ofyour mobile operator's coverage area.

- 1. Goto Settings>Datausage.
- 2. Tap > Dataroaming to turn it on or off.



Using data services while roaming may be costly. Check with your mobile operator for data roaming rates before you use data roaming.

Use your phone as a wireless router

Share your dataconnection with other devices by turning your phone into a wireless router.

- 1. Goto Settings>More...> Tethering& portablehotspot.
- 2. Taptoturnonportable Wi-Fi hotspot.



The other device uses data from your dataplan, which may result in data traffic costs. For info on availability and costs, contact your network service provider.







Troubleshooting







Connect to the Internet

Web browse







Troubleshooting







Wi-Fi

Connect the deviceto a Wi-Fi network to use the Internet or share media files with other devices.

Connect to a wireless network

- 1. Goto Settings>Wi-Fi.
- Make sure **Wi-Fi** is switched to **On**.
- 3. The Wi-Fi section will show the list of networks detected.
- 4. Tapthedesired Wi-Fi network youwantto connect to.
- If you selected a secured network, you will be $asked \, to \, enter the \, network \, key \, or \, password.$

Web browse

You can use your phone to browse websites. Before browsing a website, please confirm that you have turn on data connection or Wi-Fi.

Browse a webpage

- 1. On the home screen or list menu, tap Browser.
- 2. Enteryoursearchkeywords or a web page address.



- 1. The previous web page
- 2. The next webpage
- 3. Webpagepreview
- 4. View Bookmarks, History and Savedpages.



Connect to the Internet

Web browse

Webpage preview



- 1. View Bookmarks
- Openanewpage
- 3. Closethewebpage



Menu

Troubleshooting



Back



Prestigio Bluetooth



Pair with a Bluetooth device Receive datavia Bluetooth Send data via Bluetooth

Yourphone can connect to a compatible Bluetooth device for exchanging data. Bluetooth creates a direct wireless connection between two devices overshort distances.

Pair with a Bluetooth device

- 1. Go to Settings>Bluetooth.
- 2. Makesure Bluetooth is switched to On.
- Alist of available Bluetooth devices will appear.
- Tap the device you wish to connect with.
- The pairing is made if your pairing request is accepted by the other device.

Receive data via Bluetooth

- 1. Makesure **Bluetooth** is switched to **On**.
- 2. Tapyourphone model to make it visible to all nearby Bluetooth devices.
- 3. Accept the request and pair with the other Bluetoothdevice(s).
- 4. Slide to open notifications panel, tap Accept.

Send data via Bluetooth

- 1. Select the file you want to share.
- Tap < to send the file via Bluetooth.
- 3. Select a device to start sending the file.



The files received via Bluetoothare stored in the Bluetooth folder.





Troubleshooting



Back





Prestigio Play store



Search and install an app Uninstall an app Use the Google Play Store to purchase and download applications and games that are able to runon your phone. Choose from a wide variety of free and paid apps ranging from productivity apps, entertainment, to games.



- AGoogle Wallet[™] payment service is required to purchase a paid app. You will be asked to confirm the method of payment when you purchase an app.
- The availability of Store and the selection of items available for download depend on your region.

Search and install an app

- 1. On the list menu, tap Play store.
- 2. Browseapplications by category, or tap to search with a keyword.
- 3. Select an application to view information.
- 4. Todownload it, tap Install.
- If there is a charge for the application, tap the price, and follow the prompts to complete the purchase.



enu Troubleshooting



Back







Usea Wi-Fi connection to download large files.

Uninstall an app

- 1. On the list menu, tap Playstore.
- **2.** Tap **■ I S MyApps**.
- 3. Selectan app you want to uninstall.
- 4. Tap Uninstall.

Prestigio Maps & navigation



Use Google maps Find a location Search for a place **Get directions Maps settings**

Use this application to pinpoint the location of your phone, search forplaces, or get directions.

Use Google maps

GoogleMaps lets you track your current location and receive detailed directions to your destination. It also provides a search tool where you can locate places of interest or an address on a map, or view locations at street level.

Onthehomescreen or list menu, tap Maps.





- 1. findanaddress orplace
- 2. Map settings
- **3.** Get directions
- 4. Show your location

Find a location

Turnon or off location service

Inorder to find your location on your phone, you need to enable location service.

- 1. Goto Settings > Location.
- 2. Switch Location to On.

Findyour location

On the Maps screen, tap to find your location on the map.



If you are in an area where there are a lot of surrounding buildings, Locations may have ahard time pinpointing your location.



Use Google maps Find a location Search for a place **Get directions Maps settings**

Menu

Troubleshooting





Back



Search for a place

You can search for a name of an establishment, street, orcity. Suggested matches will be shown while you type.

- 1. On the Maps screen, tap .
- 2. Entertheplaceyou want to search for.
- 3. Select the desired place in the result list.

Get directions

Get detailed directions to where you want to go.

- 1. On the Maps screen, tap Y to get directions.
- Enteryourstart point and endpoint.
- Select the desired place in the result list.
- 4. Choose how you want to get to your destination.
- 5. The map opens showing the route to your destination.

Maps settings

You can set up the Google Maps, tap >Settings while viewing the maps.

Prestigio Utilities



Google search Alarm Calendar





Troubleshooting



Next



Google search

Use this application to search not only the Internet, but also apps and contents on your phone.

• On the homescreen or list menu, tap **Google**.

Search on the web or your phone

- 1. Tap the search field, and then enterakeyword.
- **2.** Select one of the suggested keywords that appear.

Searchwithyourvoice

Use Google Voice Search to find information on the web just by speaking to your phone.

- 1. On the homescreen or list menu, tap **Voice** search.
- If the Google search bar is available on the Homescreen, you can also tap.
- **2.** Speak a keyword or phrase when **Speak now** appears on the screen.
- **3.** Select one of the suggested keywords that appear.
- **4.** Ifwhat youaresearching for is inthelist, taptheitem to open it in its compatible app. Otherwise, tap **Retry** to search again.

Alarm

You can set up one or more alarms.

Set an alarm

- 1. On the homescreen or list menu, tap Clock.
- 1. On the clock screen, tap
- 2. Tap **1** toaddanewalarm.
- 3. Set the alarm time, and then tap **Done**.
- **4.** If you want the alarm for multiple days, tap **Repeat**.

Turnoffanalarm

 Select the alarm, and drag the check button to Off.

Stop an alarm

When the alarm sounds,

- Slideto 🔆 : thealarmstops.
- Slideto Z^Z: the alarm will sound again after a specific length of time.

Delete an alarm

Tap the alarm, and then tap.



Google search

Alarm

Calendar

Menu











Calendar

You can create events and make plans on your calendar.

Create an event

- 1. On the home screen or list menu, tap Calendar.
- 2. Select adate, and then tap > New event.
- 3. Edit reminder settings.
- **4.** Tap**Done** to save the event.

Manage your events

 
Editanevent

You can only edit events you have created.

- 1. While viewing your calendar, tap the event your want to edit.
- 2. Tap Andthen make changes to the event.
- 3. TapDone.

Deletean event

Select the event your want to delete, and then tap 🏗







Quad Core 1.3GHz



UMTS:900/2100MHz GSM:850/900/1800 /1900MHz



RAM 1GB+8GB eMMC



Wi-Fi(802.11b/g/n),3G, Bluetooth4.0 A2DP



 $And roid ^{\text{\tiny TM}} 6.0 (Marshmallow \textcircled{\$})$



GPS,A-GPS



MicroSDHC/SDXC≤32GB



2600mAh



5.3"HD IPS 720x1280 IPS display



145.9*73.2*8.3(H*W*D)



8MP+13MP



156g

Prestigio Troubleshooting







Troubleshooting







The phone does not switch on

Remove/reinstall the battery. Then charge the phone until the battery icon stops scrolling. Unplug the charger and try to switch the phone on.

The displayshows IMSI failure This problem is related to your subscription. Contact your operator.

The network symbol is not displayed

The network connection is lost. Either you are in a radio shadow (in a tunnel or between tall buildings) or you are outside the network coverage area. Try from another place, try to reconnect to the network (especially when abroad), or contact your network operator for assistance/information.

The touchscreen responds slowly or improperly If your device has a touch screen and the touch screen is not responding properly, trythe following:

- Remove any protective covers from the touch screen. Protective covers may prevent the device from recognizing your inputs and are not recommended for touch screen devices.
- Ensure that your hands are clean and dry when tappingthe touch screen.
- Restartyour device to clear any temporary

- softwarebugs.
- Ensure that your device software is upgraded to the latest version.
- If the touch screen is scratched or damaged, take it to your local dealer.

Your battery seems to over heat

You might be using a charger that was not intended for use with your phone. Make sure you always use the authentic accessory shipped with your phone.

You cannot send text messages

Some networks do not allow message exchanges withothernetworks. First check that you have entered the number of your SMS centre, or contact your operator for detailed information on this subject.

You feel that you have missed some calls Check your call divert options.

The display shows SIM failure

Checkthat the SIM card has been inserted correctly. If the problem persists, your SIM card may be damaged. Contact your operator.







Troubleshooting



Next



You rphone is not charging

If the battery is completely flat, it might take several minutes of precharge (up to 5 minutes in some cases) before the charging icon is displayed on the screen.

The picture captured with the phone camera is not clear

Make sure that the cameralens on both sides is clean.

Your device freezes or has fatalerrors

If your device freezes or hangs, you may need to close programs or reset the device to regain functionality. If your device is frozen and unresponsive, remove the battery and try to switch the phone on. The device reboots automatically. If this does not solve the problem, perform a factory datareset. On the list menu, tap Settings>Backup & reset>Factory datareset.

Others cannot hear you speaking on a call

- Ensure that you are not covering the built-in microphone.
- Ensure that the microphone is close to your mouth.
- If using a headset, ensure that it is properly

connected.

Another Bluetooth device is not located

- Ensure that the Bluetooth wireless feature is activated on your device.
- Ensure that the Bluetooth wireless feature is activated on the deviceyou wish to connect to, if necessary.
- Ensure that your device and the other Bluetooth device are within the maximum Bluetooth range (10 m).