



# **ZTE Blade A430**

## **User Manual**

# About This Manual

Thank you for choosing this ZTE mobile device. In order to keep your device in its best condition, please read this manual and keep it for future reference.

## Copyright

**Copyright © 2015 ZTE CORPORATION**

**All rights reserved.**

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

## Notice

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice. This manual has been designed with the utmost care to ensure the accuracy of its content. However, all statements, information and recommendations contained therein do not constitute a warranty of any kind, either expressed or implied. Please refer to chapter [For Your Safety](#) to be sure to use your phone properly and safely.

We offer self-service for our smart terminal device users. Please visit the ZTE official website (at [www.ztedevice.com](http://www.ztedevice.com)) for more information on self-service and supported product models. Information on the website takes precedence.

## Disclaimer

ZTE Corporation expressly disclaims any liability for faults and damages caused by unauthorized modifications of the software. Images and screenshots used in this manual may differ from the actual product. Content in this manual may differ from the actual product or software.

## Trademarks

ZTE and the ZTE logos are trademarks of the ZTE Corporation. Google and Android are trademarks of Google, Inc.

The *Bluetooth*<sup>®</sup> trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such trademarks by ZTE Corporation is under license.

microSDHC logo  is a trademark of the SD-3C, LLC.

Other trademarks and trade names are the property of their respective owners.

**Version No.:** R1.0

**Edition Time :** 2015.01.19

# Contents

<b>User Manual.....</b>	<b>1</b>
<b>About This Manual.....</b>	<b>2</b>
<b>Getting Started .....</b>	<b>10</b>
Getting to Know Your Phone .....	10
Knowing the Keys .....	12
Installing the micro-SIM Card .....	12
Installing the microSDHC™ Card .....	13
Charging the Battery .....	14
Extending the Battery Life .....	16
Powering On/Off .....	16
Setting Up for the First Time .....	17
Locking/Unlocking the Screen and Keys .....	17
Using the Touch Screen .....	18
Getting to Know the Home Screen .....	19
<b>Personalizing.....</b>	<b>21</b>
Changing the System Language .....	21
Setting the Date and Time.....	21
Changing Ringtone and Notification Sound .....	21
Adjusting Volumes .....	22
Switching to Silent Mode.....	22
Applying New Wallpapers .....	23

Changing Screen Brightness .....	23
Protecting Your Phone With a Screen Lock .....	24
Protecting Your Phone With Encryption .....	25
<b>Knowing the Basics.....</b>	<b>27</b>
Monitoring the Phone Status .....	27
Managing Notifications .....	28
Managing Shortcuts and Widgets .....	31
Organizing With Folders .....	32
Rearranging the Primary Shortcuts.....	32
Entering Text.....	33
Editing Text .....	42
Opening and Switching Apps.....	44
<b>Connecting to Networks and Devices.....</b>	<b>45</b>
Connecting to Mobile Networks .....	45
Connecting to Wi-Fi® .....	46
Connecting to Bluetooth® Devices .....	50
Connecting to Your Computer via USB .....	52
Sharing Your Mobile Data Connection .....	54
Connecting to Virtual Private Networks.....	57
<b>Phone Calls .....</b>	<b>59</b>
Placing and Ending Calls .....	59
Answering or Rejecting Calls.....	60
Working With the Call Log .....	60
Checking Voicemail.....	62
Using Options During a Call .....	63

Managing Multi-party Calls.....	63
Adjusting Your Call Settings .....	64
<b>People .....</b>	<b>67</b>
Checking Contact Details.....	67
Adding a New Contact .....	67
Setting Up Your Own Profile.....	68
Working With Favourite Contacts .....	68
Working With Groups.....	69
Searching for a Contact .....	70
Editing Contacts.....	71
<b>Accounts.....</b>	<b>72</b>
Adding or Removing Accounts .....	72
Configuring Account Sync.....	72
<b>Email .....</b>	<b>73</b>
Setting Up the First Email Account.....	74
Checking Your Emails .....	74
Responding to an Email.....	74
Writing and Sending an Email .....	75
Adding and Editing Email Accounts.....	76
Changing General Email Settings .....	77
<b>Gmail™ .....</b>	<b>78</b>
Opening Your Gmail Inbox .....	78
Switching Accounts.....	78
Writing and Sending a Message.....	79
Replying to or Forwarding a Message .....	79

Working With Received Attachments .....	80
Working With Labels .....	80
Changing Gmail Settings.....	81
<b>Messaging .....</b>	<b>82</b>
Opening the Messaging Screen .....	82
Sending a Message .....	82
Replying to a Message.....	83
Changing Message Settings.....	84
<b>Calendar .....</b>	<b>84</b>
Viewing Your Calendars and Events .....	84
Creating an Event .....	85
Editing or Deleting an Event .....	86
Changing Calendar Settings.....	86
<b>Google+™ .....</b>	<b>87</b>
Getting Started With Google+ .....	87
Signing out of Google+.....	88
<b>Browser .....</b>	<b>89</b>
Opening the Browser .....	89
Changing Browser Settings .....	90
<b>Google Search .....</b>	<b>90</b>
Searching With Text .....	90
Searching by Speaking.....	90
Changing Search Settings.....	91
<b>Camera .....</b>	<b>92</b>

 
Taking Pictures with Your Camera.....	92
Shooting Video with Your Camcorder .....	92
<b>Gallery.....</b>	<b>93</b>
Opening Gallery.....	93
Working With Albums.....	93
Working With Pictures.....	94
<b>Music.....</b>	<b>95</b>
Copying Music Files to Your Phone.....	95
Viewing Your Music Library .....	96
<b>FM Radio.....</b>	<b>96</b>
Scanning and Saving Channels .....	97
Listening to FM Radio .....	97
Adding a Radio Station to Favorites .....	97
<b>Sound Recorder .....</b>	<b>98</b>
Recording a Voice Memo .....	98
<b>More Apps.....</b>	<b>98</b>
Backup & Restore.....	98
Calculator .....	99
Chrome™ .....	99
Clock .....	99
Downloads.....	100
File Manager .....	101
System Updates .....	101
<b>Settings.....</b>	<b>102</b>

 


Wireless and Networks.....	102
Device .....	103
Personal .....	105
Accounts .....	108
System.....	108
<b>Upgrading the Phone Software .....</b>	<b>110</b>
<b>Troubleshooting.....</b>	<b>111</b>
<b>For Your Safety .....</b>	<b>116</b>
General Safety .....	116
Distraction.....	117
Product Handling .....	118
Electrical Safety .....	122
Radio Frequency Interference .....	123
Explosive Environments .....	124

# Getting Started

## Getting to Know Your Phone

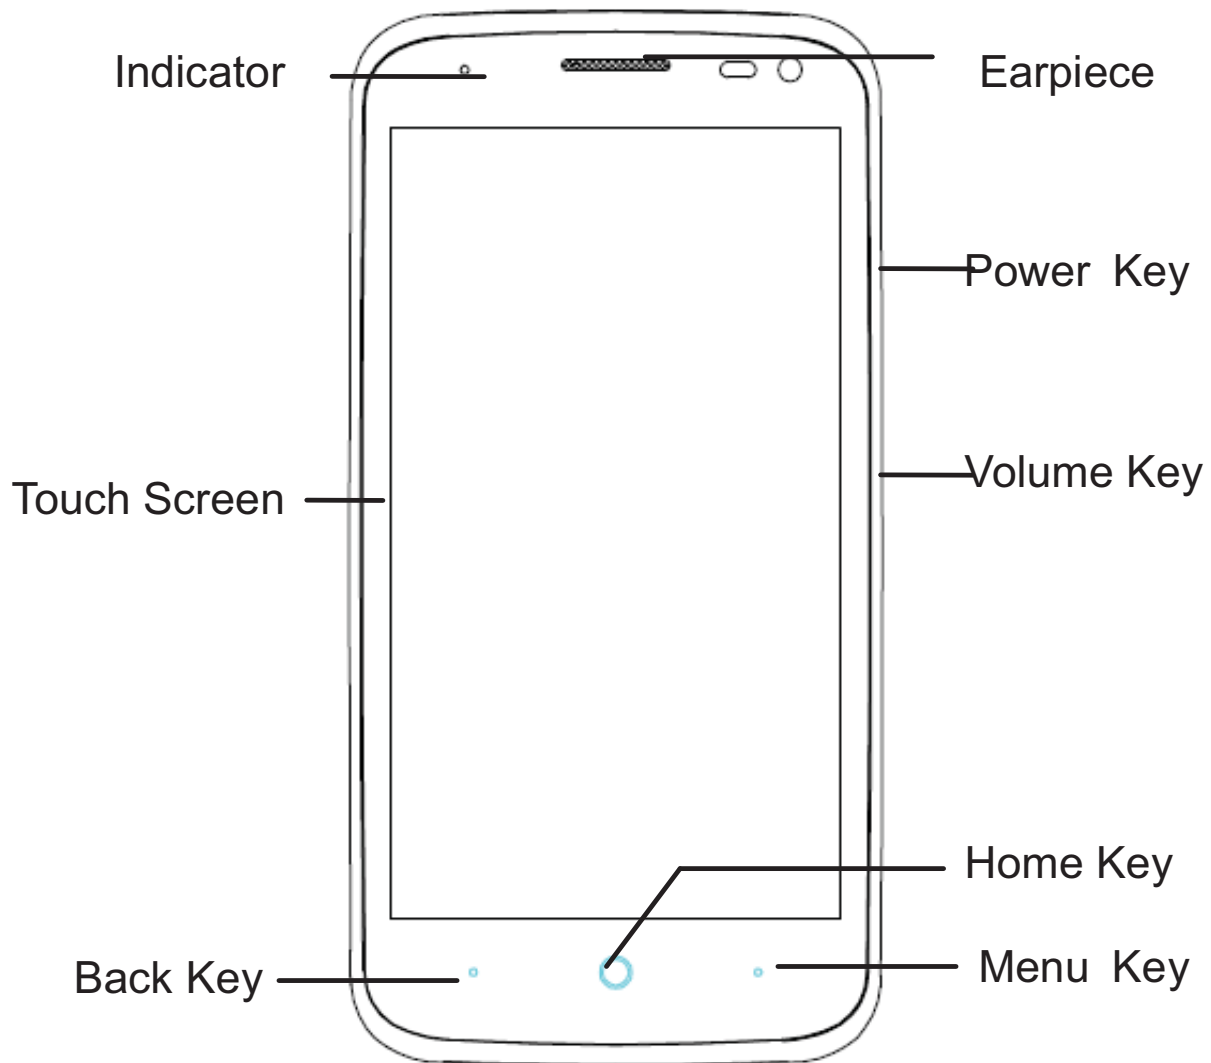

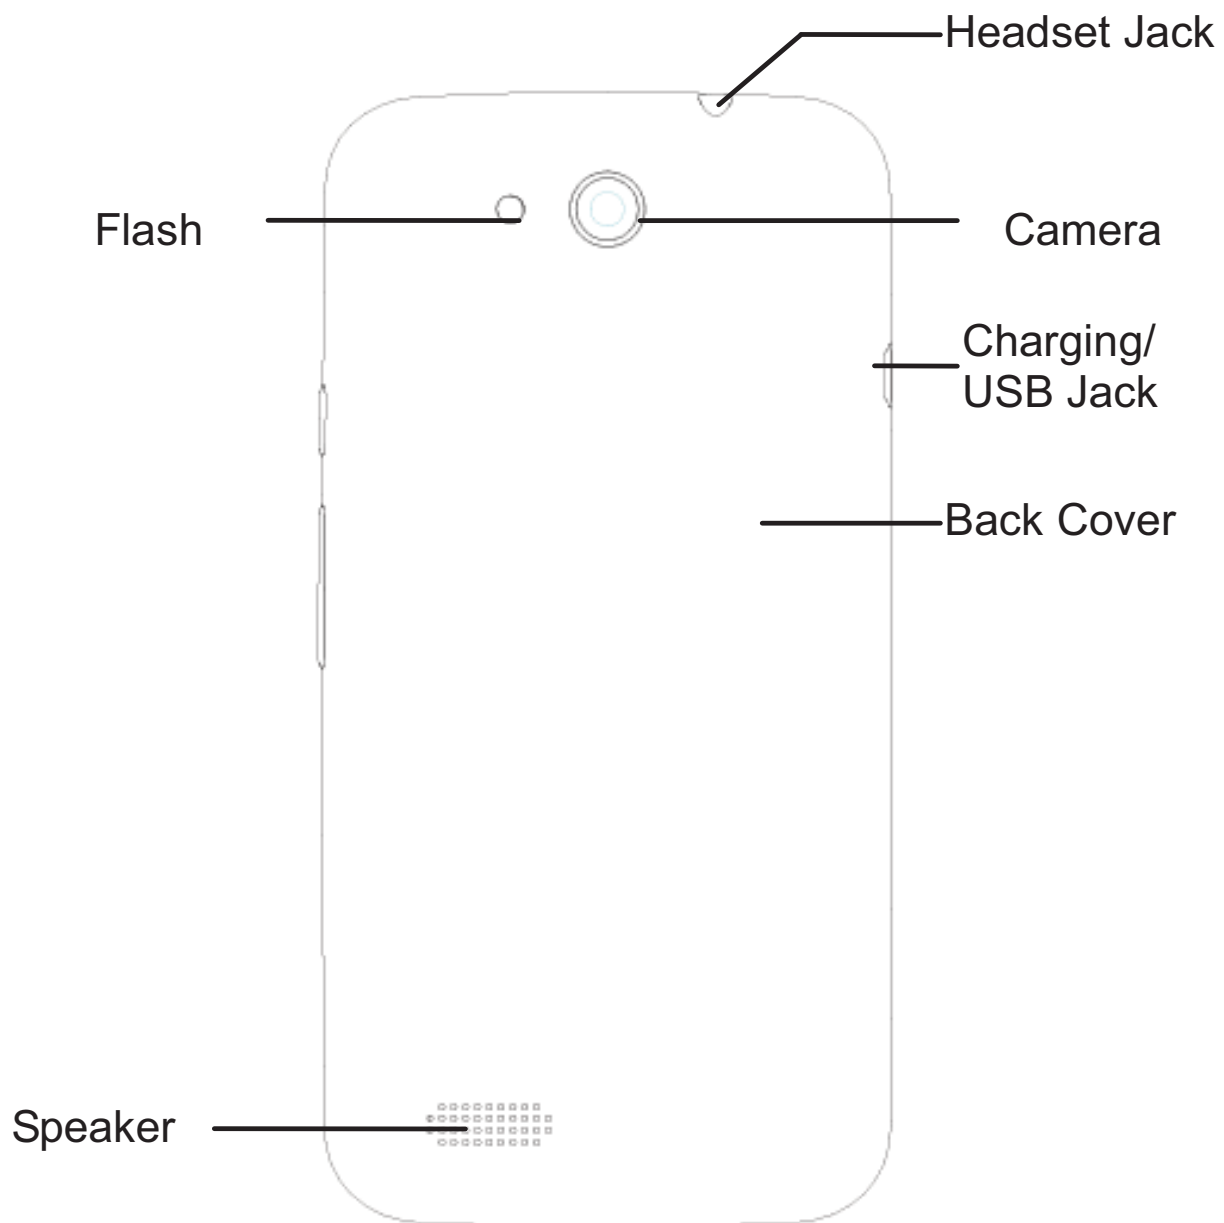


## Knowing the Keys

Key	Function
Power Key	<ul style="list-style-type: none"><li>• Press and hold to turn on or off aeroplane mode, enable silent mode, vibration mode or sound, or to power off.</li><li>• Press to switch your phone to sleep mode or wake it up.</li></ul>
Volume Key	Press or hold to turn the volume up or down.

## Installing the micro-SIM Card


Switch off your phone before installing or replacing the micro-SIM card.

 1. Insert your fingernail into the slot at the bottom left of the back cover and lift it up gently.

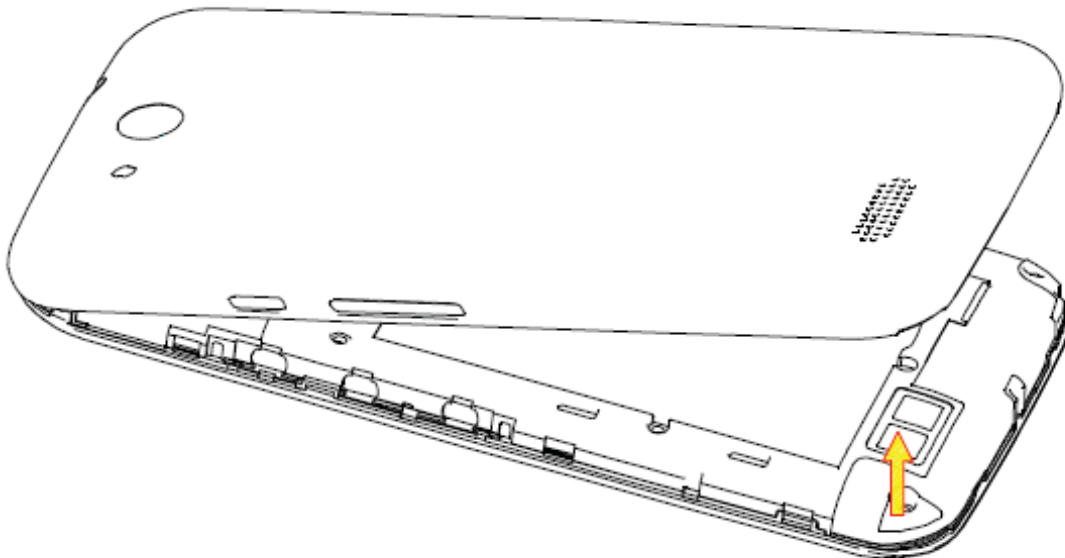

2. Hold the micro-SIM card with the cut corner oriented as shown and slip it into the card holder until you hear a click.

 **CAUTION:** To avoid damage to the phone, please do not use other kinds of SIM cards, and do not use a non-standard micro-SIM card cut from a SIM card. You can get the standard micro-SIM card from your service provider.

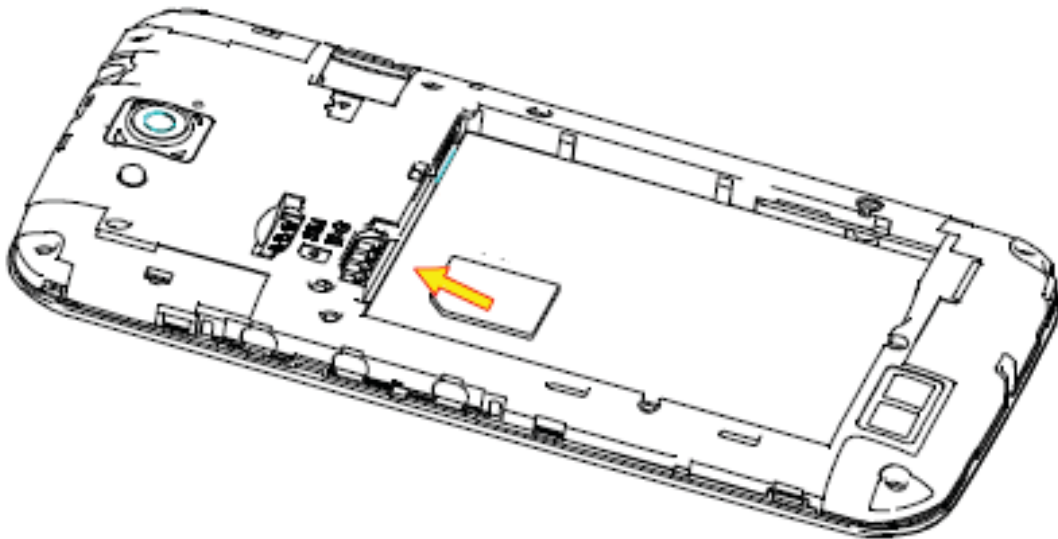


3. Align the back cover with the back of the phone and press the cover back into place. Make sure all the tabs are secure and there are no gaps around the cover.

## Installing the microSDHC™ Card

 The microSDHC card can be installed and removed while the phone is turned on. [Unmount the microSDHC card](#) before removing it.

1. Remove the back cover.
2. Hold your microSDHC card with the metal contacts facing down and slide it in.

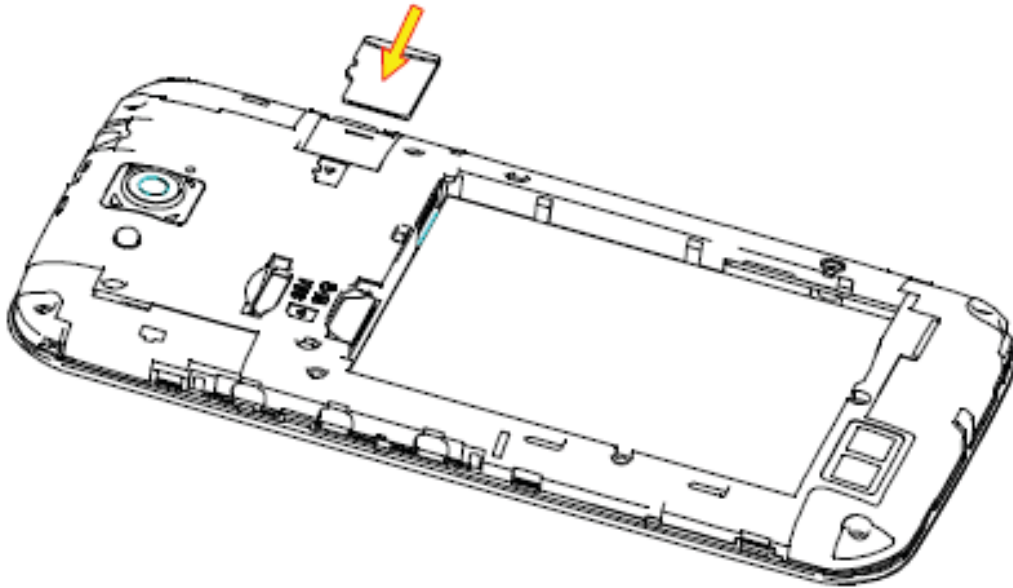

**NOTE:** Some applications may require a microSDHC card to work normally or may store certain data on it. Therefore, it is recommended that you keep a microSDHC card installed and not remove or replace it randomly.

3. Replace the back cover.

## Charging the Battery

Your phone's battery should have enough power for the phone to turn on, find a signal, and make a few calls. You should fully charge the battery as soon as possible.

 
If the battery is low, there will be a pop-up message on the screen. As you charge your phone, the screen will tell you the exact battery level each time you wake up your phone.


**WARNING!** Use only ZTE-approved chargers and cables. The use of unapproved accessories could damage your phone or

cause the battery to explode.

**CAUTION:** Do not change the built-in rechargeable battery in your phone by yourself. The battery can only be changed by ZTE or ZTE authorised service provider.

1. Connect the adapter to the charging jack. Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the charging jack.

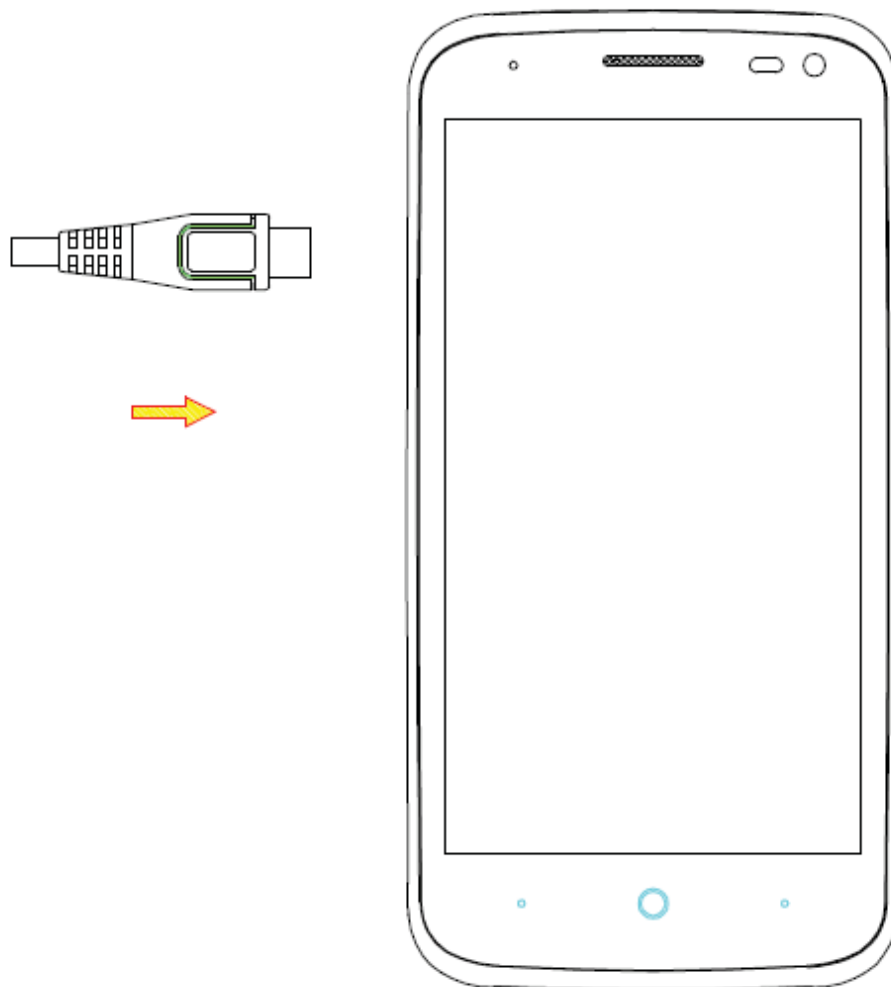

2. Connect the charger to a standard AC power outlet. If the phone is on, you'll see a charging icon, such as  , appear

on the status bar.

3. Disconnect the charger when the battery is fully charged.

**NOTE:** If the battery is extremely low, you may be unable to power on the phone even when it is being charged. In this case, try again after charging the phone for at least 10 minutes.

Contact customer service if you still cannot power on the phone after prolonged charging.

## Extending the Battery Life

Active applications, screen brightness levels, Wi-Fi usage and GPS functionality and other certain features can all drain your battery. You can follow the helpful tips below to conserve your battery power:

- Reduce the screen backlight time.
- Lower the screen brightness.
- Turn auto-sync, portable hotspot, Wi-Fi, and Bluetooth off when not in use.
- Disable the GPS function when not in use. Most applications using this function will periodically query the GPS satellites for your current location; each query drains your battery.


## Powering On/Off

- Press and hold the **Power Key** to turn on your phone.
- To turn it off, press and hold the **Power Key** to open the options menu. Touch **Power off** and then touch **OK**.



## Setting Up for the First Time

When you first power on your phone after you purchase it or reset it to factory settings (see [Backup & reset](#)), you need to do some settings before using it.

Flick the language field to select the language and touch . Then follow the prompts to set up Wi-Fi, Google Account, Google location and other options.

## Locking/Unlocking the Screen and Keys

Your phone allows you to quickly lock the screen and keys (put the phone into sleep mode) when not in use and to turn the screen back on and unlock it when you need it.

### To lock the screen and keys:

To quickly turn the screen off and lock the keys, press the **Power Key**.

**NOTE:** To save battery power, the phone automatically turns off the screen after a certain period of time when you leave it idle. You will still be able to receive messages and calls while the phone screen is off.

### To unlock the screen and keys:

1. Press the **Power Key** to turn the screen on.

2. Touch and hold any blank area of the screen.

**NOTE:** If you have set an unlock pattern, PIN or password for your phone (see [Protecting Your Phone With a Screen Lock](#)), you'll need to draw the pattern or enter the PIN/password to unlock your screen.

## Using the Touch Screen

Your phone's touch screen lets you control actions through a variety of touch gestures.

- Touch

When you want to type using the onscreen keyboard, select onscreen items such as application and settings icons, or press onscreen buttons, simply touch them with your finger.

- Touch and Hold

To open the available options for an item (for example, a message or link in a Web page), touch and hold the item.

- Swipe or Slide

To swipe or slide means to quickly drag your finger vertically or horizontally across the screen.

- Drag

To drag, press and hold your finger with some pressure before you start to move your finger. While dragging, do not release your finger until you have reached the target position.

- Pinch

 
In some apps (such as Maps, Browser, and Gallery), you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).

- Rotate the screen

For most screens, you can automatically change the screen orientation from portrait to landscape by turning the phone sideways.

## Getting to Know the Home Screen

The home screen is the starting point for your phone's applications, functions, and menus. You can customize your home screen by adding application icons, shortcuts, folders, widgets, and more. Your home screen extends beyond the initial screen. Swipe the screen left or right to display additional screens.

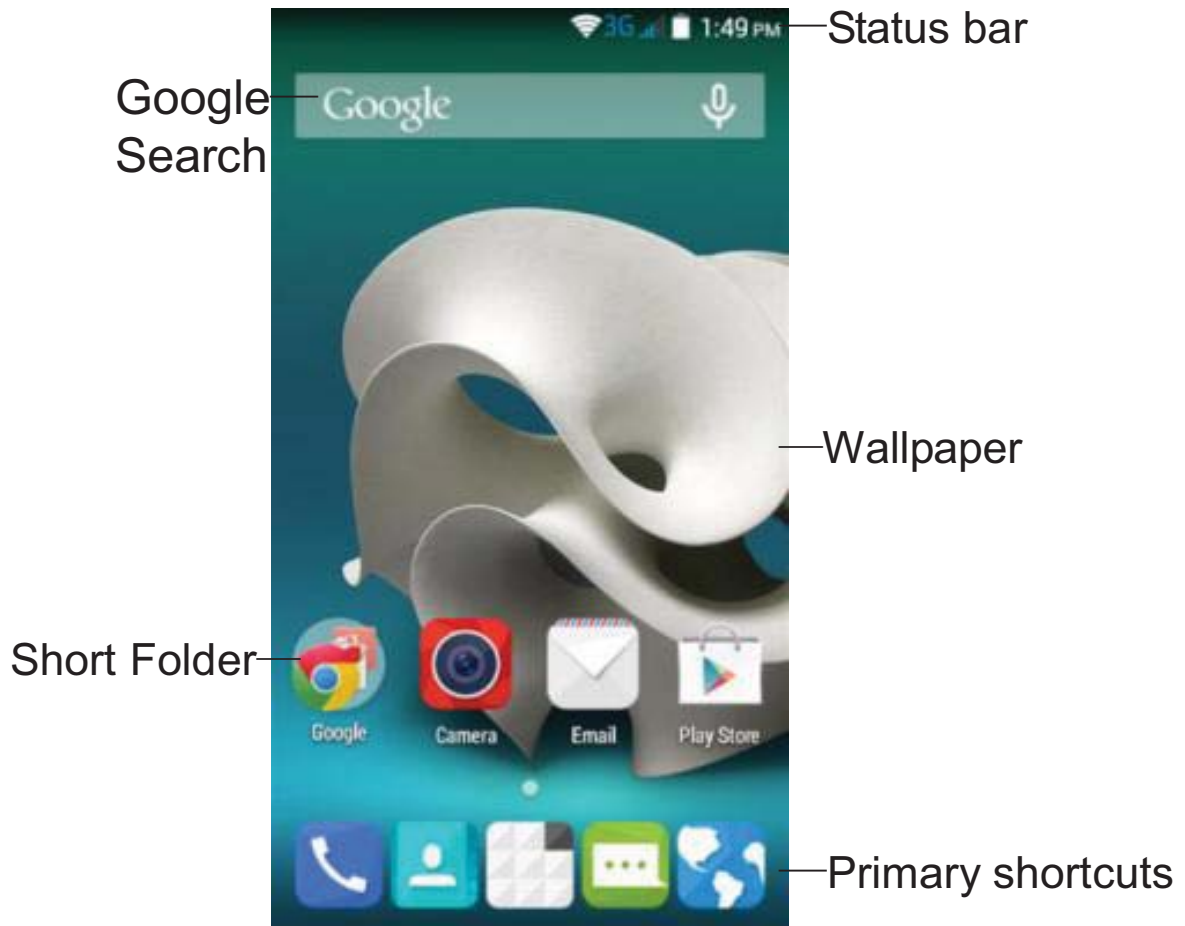

- Touch **Home Key** to return to the home screen; touch and hold **Home Key** to use Google search.
- Touch **Back Key** to go back to the previous screen.
- Touch and hold **Menu Key** to see recently used applications.


## Extended Home Screens

Your home screen extends beyond the initial screen, providing more space to add icons, widgets, and more. Simply swipe left or right on the screen to see the extended home screens.


Touch and hold an empty area of the home screen to adjust the order of the screens.

# Personalizing

## Changing the System Language



1. Touch **Home Key** >  > **Settings** > **Language & input** > **Language**.
2. Select the language you need.

## Setting the Date and Time

1. Touch **Home Key** >  > **Settings** > **Date & time**.
2. Uncheck **Automatic date & time** and **Automatic time zone** if you want to set the date, time and time zone by yourself.
3. Set the date, time, time zone, and date/time format.

## Changing Ringtone and Notification Sound

You can customize the default ringtone for incoming calls and the default notification sound.



1. Touch **Home Key** >  > **Settings** > **Audio profiles** > .
2. Touch **Phone ringtone** or **Default notification sound**.
3. Scroll through the ringtone list and select the ringtone you

want to use.

4. Touch **OK**.

**TIP:** See chapter [\*Set a Ringtone for a Contact\*](#) for how to assign a special ringtone to an individual contact.





## Adjusting Volumes


1. Touch **Home Key** >  > **Settings** > **Audio profiles** >  > **Volumes**.
2. Drag the sliders to adjust the volume for each type of audio.
3. Touch **OK** to save.

**TIP:** You can adjust the media volume when a media application is in use by pressing the **Volume Key**. If no media application is active, press the **Volume Key** to adjust ringtone volume (or the earpiece volume during a call).

## Switching to Silent Mode

You can set the phone to silent mode by using one of the following methods.

- Press and hold the **Power Key** and then touch  to enable silent mode, touch  to enable silent mode with vibration, or touch  to disable silent mode.
- Keep pressing the lower end of the **Volume Key** when no media application is active. When the  icon appears on the status bar, the phone is set to silent mode with vibration.


When the  icon appears on the status bar, the phone is in silent mode.


## Applying New Wallpapers

You can set the wallpaper for the home screen.

1. Press **Home Key** to return to the Home Screen.
2. Tap **Menu Key** and select **WALLPAPERS**.
3. Choose the image or animation you want to use as the wallpaper. Some cropping may be needed for Gallery images.
4. Tap **Set wallpaper**.


## Changing Screen Brightness

1. Touch **Home Key** >  > **Settings** > **Display** > **Brightness**.
2. Touch **AUTO** to turn on or off automatic brightness adjustment. You can also drag the slider to turn off auto-adjustment and change the screen brightness manually.

**TIP:** You can turn on or off automatic adjustment without going to the Settings menu. Just swipe down the status bar at the top of the screen, touch  and touch the **BRIGHTNESS** button. See [Use Quick Settings](#) for more information.

# Protecting Your Phone With a Screen Lock

You can protect your phone by creating a screen lock. When enabled, you need to touch and hold the screen, draw a pattern, or enter a numeric PIN or a password to unlock the screen and keys.

1. Touch **Home Key** >  > **Settings** > **Security**.
2. Touch **Screen lock**.
3. Touch **None**, **Long Press**, **Face Unlock**, **Voice Unlock**, **Pattern**, **PIN** or **Password**.
  - ▶ Touch **None** to disable the screen lock feature.
  - ▶ Touch **Long Press** to enable screen lock and allow unlocking with a 'touch and hold' gesture. You can unlock the screen by touching and holding a blank area of the lock screen.
  - ▶ Touch **Face Unlock** to set the facelock, hold the phone at eye level, then show your face in the prompt box, if prompted "Face captured" then choose "Continue".
  - ▶ Touch **Voice Unlock** to record voice command.
  - ▶ Touch **Pattern** to create a pattern you must draw to unlock the screen.
  - ▶ Touch **PIN** or **Password** to set a numeric PIN or a password that you must enter to unlock your screen.

**IMPORTANT:** If you forget the pattern you set, try five times and



touch **FORGOT PATTERN** to sign in to the Google Account you have added on the phone and reset the screen lock. You need an active Internet connection. You can also upgrade the phone software. See [Upgrading the Phone Software](#).

## Protecting Your Phone With Encryption

You can encrypt all the data on your phone: Google Accounts, application data, music and other media, downloaded information, and so on. If you do, you must enter a numeric PIN or a password each time you power on your phone.


**WARNING!** Encryption is irreversible. The only way to revert to an unencrypted phone is to perform a factory data reset which erases all your data.

Encryption provides additional protection in case your phone is stolen and may be required or recommended in some organizations. Consult your system administrator before turning it on. In many cases the PIN or password you set for encryption is controlled by the system administrator.

Before turning on encryption, prepare as follows:

- Set a lock screen PIN or password.
- Charge the battery.
- Keep the phone connected to the charger.
- Schedule an hour or more for the encryption process. You must not interrupt it or you will lose some or all of your data.

When you're ready to turn on encryption:

1. Touch **Home Key** >  > **Settings** > **Security** > **Encrypt phone**.
2. Read the information about encryption carefully.

The **Encrypt phone** button is dimmed if your battery is not charged or your phone is not plugged in.

If you change your mind about encrypting your phone, touch **Back Key**.

**WARNING!** If you interrupt the encryption process, you will lose data.

3. Touch **Encrypt phone**.
4. Enter your lock screen PIN or password and touch **Next**.
5. Touch **Encrypt phone** again.

The encryption process starts and displays its progress.

Encryption can take an hour or more, during which time your phone may restart several times.

















When encryption is completed, you're prompted to enter your PIN or password.

Subsequently you must enter your PIN or password each time you power on your phone in order to decrypt it.

# Knowing the Basics

## Monitoring the Phone Status















The status bar at the top of the home screen provides phone and service status icons on the right side. Below are some of the icons you may see.

G	GPRS connected		No signal
E	EDGE connected		Signal strength
3G	3G connected		No micro-SIM card installed
H	HSPA connected		Alarm set
4G	4G connected		Ringer off
	Battery dead		Vibrate mode
	Battery low		Bluetooth on
	Battery partially drained		Connected to a Wi-Fi network
	Battery full		Wired headset connected
 / 	Battery charging		Flight mode

# Managing Notifications

## Notification Icons

The status bar at the top of the home screen provides notification icons on the left. Below are some of the icons you may see.

	New SMS/MMS		microSDHC card removed
	New email		Upcoming event
	Problem with SMS/MMS delivery		New Wi-Fi network detected
	Missed call		Downloading data
	New Gmail message		Sending data
	USB connected		USB tethering on
	GPS on		Portable Wi-Fi hotspot or Wi-Fi direct on

## Open/Close the Notification Panel


Notifications report the arrival of new messages, calendar events, and alarms, as well as ongoing events, such as when you've configured your phone as a Wi-Fi hotspot. You can open the notification panel to view the details of notifications.

- To open the notification panel, swipe your finger down from the top of the screen.
- To close the notification panel, swipe your finger up from the

bottom of the screen or touch **Back Key**.

## Respond to or Remove a Notification


In the notification panel, you can respond to a notification or remove the notifications. The notification panel also supports expandable notifications that let you perform additional actions right from the notification itself.

- To respond to a notification, just touch it.
- Slide down with one finger to expand certain notifications. You can also swipe two fingers vertically or pinch-zoom to expand or collapse certain notifications.
- To remove a notification, swipe it left or right.
- To remove all notifications, touch  at the top.
- Touch and hold a notification and then touch **App info** to identify the application that created it. To turn off notifications from that application if needed, uncheck **Show notifications** in the App info screen.

**NOTE:** If you turn off notifications for an app, you may miss its important alerts and updates. The notifications of some apps cannot be turned off.

## Use Quick Settings

The Quick Settings in the notification panel make it convenient to view or change the most common settings for your phone.

Open the notification panel and touch  to find the following Quick Settings.

- **OWNER:** Touch the contact icon to open your profile in the People app. See [Setting Up Your Own Profile](#).
- **BATTERY:** Display the current battery status. Touch to open the Battery menu in Settings.
- **SETTINGS:** Touch to open the Settings menu. See [Settings](#) for more information.
- **WI-FI:** Touch to turn on or off the Wi-Fi feature.
- **BLUETOOTH:** Touch to turn on or off Bluetooth.
- **LOCATION:** Touch to turn on or off location services.
- **AIRPLANE MODE:** Touch to turn on or off the aeroplane mode.
- **DATA CONNECTION :** Touch to turn on or off data access over mobile networks.
- **DATA USAGE:** Touch to view usage.
- **AUDIO PROFILES:** Touch to choose audio profiles.
- **BRIGHTNESS:** Touch to turn on or off automatic adjustment of the screen brightness.
- **AUTO ROTATION:** Touch to turn on or off Auto-rotate screen.
- **CAST SCREEN:** Touch to project the phone interface onto the wifi display device.
- **Alarm Clock:** If set the alarm clock, touch to enter the clock.

 
# Managing Shortcuts and Widgets

## Add Shortcuts and Widgets

1. Touch **Home Key > Menu Key**.
2. If you want to add a widget, touch **WIDGETS**.
3. Touch and hold a widget thumbnail or an app icon and drag it to the home screen.

## Move Shortcuts or Widgets

4. Touch and hold a widget or shortcut on the home screen.
5. Drag it to the place you need.

**NOTE:** Drag the shortcut or the widget to  at the top to remove it.

## Adjust Widget Size

1. Touch and hold a widget on the home screen and then release it.
2. An outline appears around the widget. Drag the outline to resize the widget.

**NOTE:** Not all widgets can be resized.

## Organizing With Folders

You can create folders on the home screen and add several shortcuts to a folder.

### Rename a Folder

1. Touch a folder to open it.
2. Touch the folder name field and enter a new name.

### Add Shortcuts to a Folder

1. Touch and hold a shortcut and then drag it onto a folder icon.
2. Release the shortcut and it will be added into the folder.

### Remove Shortcuts From a Folder

1. Touch a folder to open it.
2. Touch and hold the shortcut you want to remove and then drag it to the home screen.
3. Release the shortcut and it will be removed from the folder.

## Rearranging the Primary Shortcuts

The home screen includes a customizable primary shortcuts area at the bottom visible from all home screens. You can keep at most four items in the primary shortcuts area. Drag shortcuts or folders in or out of the area to rearrange the area.



 


## Entering Text

You can enter text using the onscreen keyboard. Some apps open it automatically. In others, you open it by touching where you want to type. You can also enter text by speaking with the Google voice typing feature.

You can close the keyboard by touching .

 
## Change Input Methods








 
 

1. When you use the onscreen keyboard to enter text, the icon  appears on the status bar.
2. Open the notification panel and touch **Choose input method**.
3. Select an input method you need.

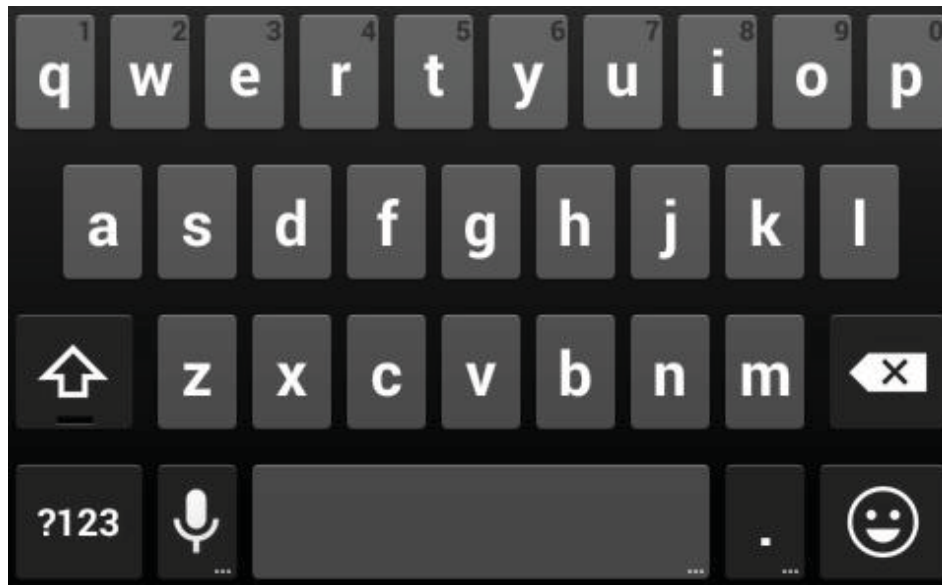

## Android Keyboard

The Android Keyboard provides a layout similar to a desktop computer keyboard. Turn the phone sideways and the keyboard


will change from portrait to landscape. The landscape keyboard is not supported in all applications.



- Touch the alphabetic keys to enter letters. Touch and hold some specific keys to enter associated accented letters or numbers. For example, to enter è, touch and hold  and the available accented letters and number 3 appear. Then slide to choose è.
- Touch  to use uppercase. Double-tap  to lock uppercase. This key also changes to indicate the current case you are using:  for lowercase,  for uppercase, and  when locked in uppercase.
- Touch  to delete the text before the cursor.
- Touch  to select numbers and symbols. You can then touch  to find more.
- Touch  to enter miniature icons, such as expressions, horoscopes, and animals.

 
- Touch  to use Google voice typing.
- Touch and hold  to change the input languages or set up the Android keyboard.

## TouchPal Keyboard







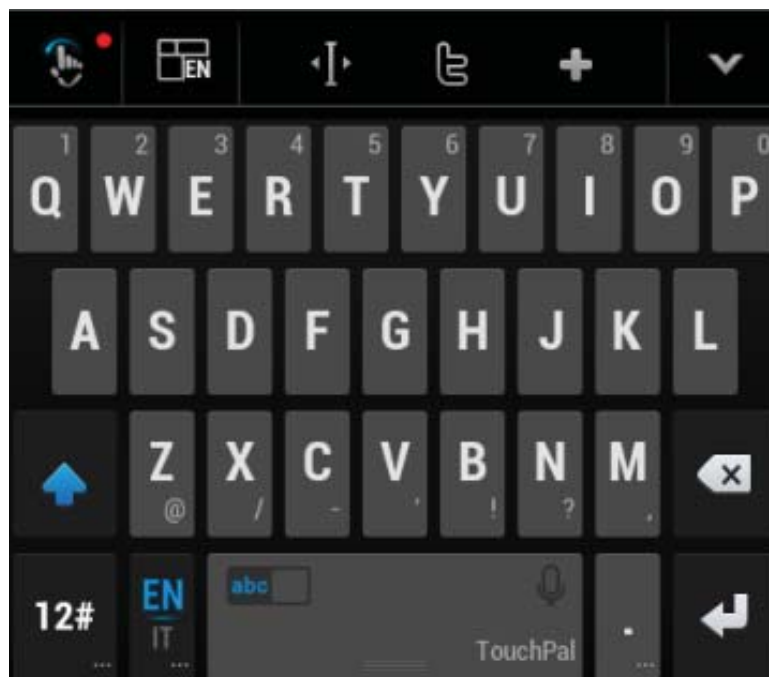







TouchPal Keyboard offers three layouts: **T26**, **T12** and **T+**. You can touch  to select a layout or an input language.

You can also use TouchPal Curve™ to speed up text input by replacing the key tapping operation with a tracing gesture where you move your finger from letter to letter without lifting the finger until you reach the end of the word.

### The T26 Layout



The T26 layout offers an input experience similar to a computer keyboard.

- The alphabetic keys: Touch the keys to enter letters. Touch a key and slide down to enter the number or symbol on the key. You can also touch and hold a key and slide to choose more characters.
- The capital key: Touch  to use uppercase or lowercase. This key also changes to indicate the current case you are using:  for lowercase,  for uppercase, and  when locked in uppercase.
- Word prediction: Slide left or right on the space key to turn on or off prediction, as indicated by  and .
- Languages: Touch  or  to select input language.
- Pre-defined texts: Touch  to enter digits, symbols, emoticons and other pre-defined texts. You can touch **1/3**, **2/3**, or **3/3** to turn pages, or touch  to go back to the alphabetic keys.
- The delete key: Touch  to delete text before the cursor. You can also touch the key and slide left to delete an entire word.
- Edit text: Touch  to open text editing options. You can move the cursor, select, cut, copy, paste, or delete text.
- More options: Touch  to access the quick settings of TouchPal keyboard, change keyboard skin, or check messages from TouchPal.
- Close the keyboard: Touch . You can touch the text field again to show the keyboard.

## The T12 Layout

 
The layout is similar to a phone pad in T12 mode.



Touch an alphabetic key repeatedly until the desired letter appears. You can also touch and hold the key and slide left or right to choose the letter or number you need.

If word prediction is enabled (  ), just touch the keys once and choose the right word.


## The T+ Layout

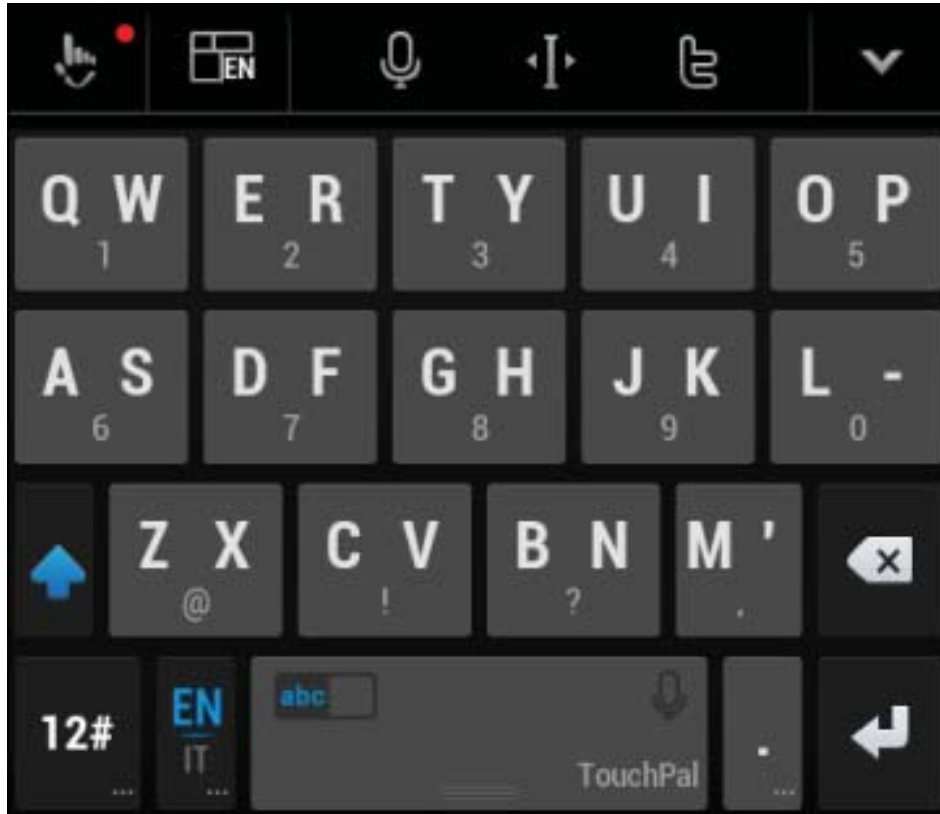

Touch to enter the left letter on the key; Double-tap or flick right to enter the right letter/symbol on the key. You can also touch and hold a key and slide left or right to choose more letters and symbols.


If word prediction is enabled (  ), just touch the keys and choose the right word.

### To enable and use TouchPal Curve:

 1. In the TouchPal keyboard screen, touch  and check **TouchPal Curve®**.
2. If prompted, touch **OK** to switch to the T26 layout.
3. Move your finger from letter to letter on the keyboard to trace a word without lifting the finger until you reach the end of the

word.

**NOTE:** TouchPal Curve is only available in the **T26** layout.

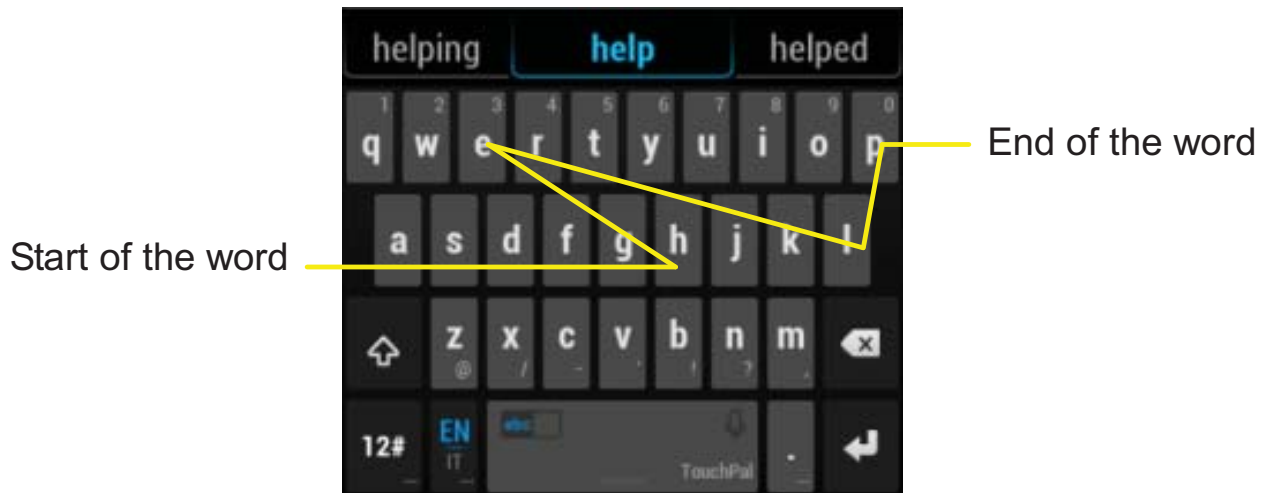








Tips for using TouchPal Curve:

- Touch when you want to. If you want to enter a single letter, go ahead and touch.
- Lift your finger at the end of the word. A space is added automatically when you begin to trace the next word.


## SwiftKey Keyboard

 SwiftKey Is the default input method.



- Touch the alphabetic keys to enter letters.
- Touch  to use uppercase. This key also changes to indicate the current case you are using:  for lowercase,  for uppercase.
- Touch  to delete the text before the cursor.
- Touch  to select numbers and symbols. You can then touch  to find more.
- Touch  to enter miniature icons, such as expressions, and animals.




- Touch and hold  to use Google voice typing.
- Touch and hold  will appear , you can slide to choose one.

## Google Voice Typing

Google Voice typing uses the Google voice recognition service to convert speech to text. You must have a data connection on a mobile or Wi-Fi network to use it.

1. Flick down the status bar when entering text and touch **Choose input method**, and then select **Google voice typing**.

Or touch  to access the voice typing feature when you are using the Android Keyboard.

2. When you see the microphone image, speak what you want to type.
3. You can continue entering text to keep it or to delete it.

**TIP:** Say "comma," "period," "question mark," "exclamation mark," or "exclamation point" to enter punctuation.




## Input Settings

 
Choose input settings by touching **Home Key** >  > **Settings** > **Language & input**.

In the **KEYBOARD & INPUT METHODS** section, you can set the


default input method and choose the settings for input methods.

## Editing Text

- **Move the insertion point:** Touch where you want to type. The cursor blinks in the new position, and a tab appears below it. Drag the tab to move the cursor.
- **Select text:** Touch and hold or double-tap within the text. The nearest word highlights, with a tab at each end of the selection. Drag the tabs to change the selection.
- **Cut or copy:** Select the text you want to manipulate. Then touch the Cut  or Copy  button to cut or copy the text to the clipboard.
- **Replace text with the clipboard text:** Select the text you want to replace. Then touch  or **PASTE**.

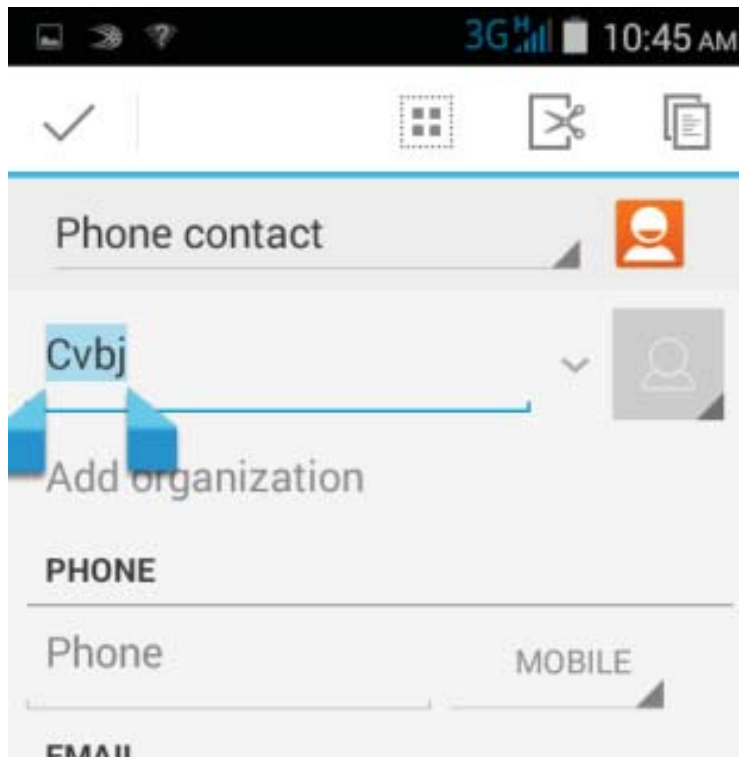

 
- **Insert text from the clipboard:** Move cursor to the insertion point and then touch and hold the tab below the cursor. Release the finger and touch **PASTE**.

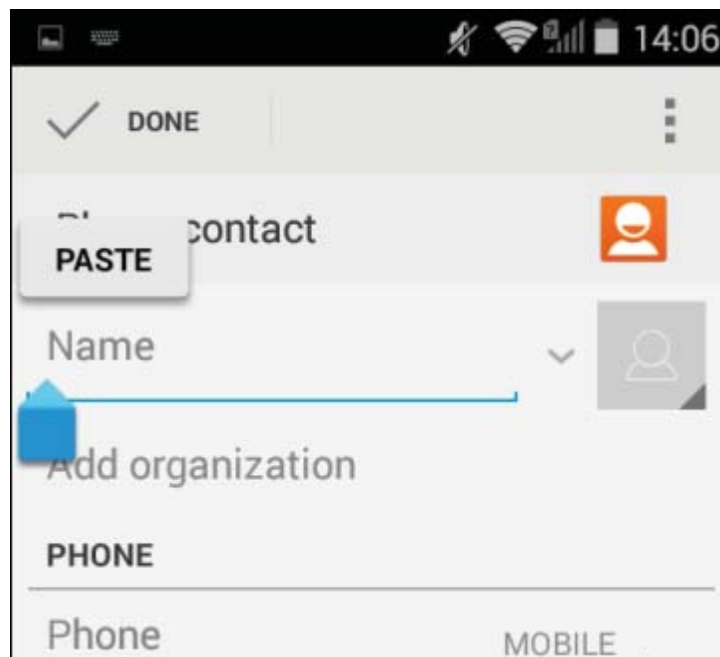

# Opening and Switching Apps

## Open an App

1. Touch **Home Key** > .
2. Slide left or right on the screen and touch an app to open it.

## Switch Between Recently Opened Apps

1. Touch and hold **Menu Key**.

A list of the names and thumbnails of apps you've used recently opens. If you've been using more apps recently than can fit on the screen, you can scroll the list up and down.


2. Touch a thumbnail to open that app.

**NOTE:** You can swipe a thumbnail sideways to remove it from the list.

# Connecting to Networks and Devices

## Connecting to Mobile Networks


### Select Network Operator

1. Touch **Home Key** >  > **Settings** > **More...** > **Mobile networks** > **Network operators**.
2. Touch **Select manually** to search for all available networks.
3. Touch a network in the network list to register manually.

You can also touch **Choose automatically** to select preferred network automatically.

### Control Mobile Data Use

**To enable or disable data access:**


1. Touch **Home Key** >  > **Settings** > **More...** > **Mobile networks**.
2. Check **Data connection** to enable data access over the mobile network. Clear the check box to disable data access.

**To get data services when roaming:**

1. Touch **Home Key** >  > **Settings** > **More...** > **Mobile networks**.
2. Check **Data roaming**.




**IMPORTANT:** Data roaming may incur significant roaming charges.


## Select Preferred Network Mode

1. Touch **Home Key** >  > **Settings** > **More...** > **Mobile networks** > **Preferred network type**.
2. Touch the network mode you would prefer the phone to connect with.

## Set Access Point Names

To connect to the Internet you can use the default Access Point Names (APN). And if you want to add a new APN, please contact the service provider to get the necessary information.

1. Touch **Home Key** >  > **Settings** > **More...** > **Mobile networks** > **Access Point Names**.
2. Touch  > **New APN**.
3. Touch each item to enter the information you get from your service provider.
4. Touch  > **Save** to complete.


**TIP:** To set the APN to default settings, touch  > **Reset to default**.

## Connecting to Wi-Fi®

Wi-Fi is a wireless networking technology that can provide Internet access at distances of up to 100 meters, depending on



the Wi-Fi router and your surroundings.

## Turn Wi-Fi On and Connect to a Wi-Fi Network

1. Touch **Home Key** >  > **Settings** > **Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **ON** position to turn on Wi-Fi.
3. Touch a network name to connect to it.
4. If the network is secured, enter the password and touch **Connect**.

**NOTE:** Your phone automatically connects to previously used Wi-Fi networks when they are in range.

## Get Notified of Open Networks

 
1. Touch **Home Key** >  > **Settings** > **Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **ON** position.
3. Touch  > **Advanced**.
4. Check **Network notification**.

When Wi-Fi is on, you receive notifications in the Status bar when your phone detects an open Wi-Fi network. Uncheck the option to turn off notifications.

## Add a Wi-Fi Network


You can add a Wi-Fi network if the network does not broadcast its name (SSID) or add a Wi-Fi network when you are out of range.

To connect to a secured network, you first need to get the security details from the network's administrator.

1. Touch **Home Key** >  > **Settings** > **Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **ON** position.
3. Touch **+**.
4. Enter the network SSID (name). If necessary, enter security or other network configuration details.
5. Touch **Save**.

## Forget a Wi-Fi Network

You can make your phone forget about the details of a Wi-Fi network that you added - for example, if you don't want the phone to connect to it automatically or if it is a network that you no longer use.

1. Touch **Home Key** >  > **Settings** > **Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **ON** position.
3. Touch the Wi-Fi network name and then touch **Forget**.



## Connect to a WPS Network

WPS (Wi-Fi Protected Setup) is a feature that makes it easy to add your phone to access points which support WPS.



You can use one of the following two methods to connect your phone to a wireless network using WPS.

### Method one: WPS button



1. Touch **Home Key** >  > **Settings** > **Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **ON** position.
3. Touch .
4. Press the WPS button on the access point and the access point will recognize your phone and add it to the network.



### **Method two: PIN number**

1. Touch **Home Key** >  > **Settings** > **Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **ON** position.
3. Touch  > **WPS Pin Entry**.
4. The WPS Pin number displays on the screen. Enter the Pin number into the access point's setup page.

After entering the Pin number, your phone automatically finds the access point and configures the connection.

**NOTE:** For detailed information about the WPS feature of the access point, please refer to its user documents.

## **Adjust Advanced Wi-Fi Settings**


1. Touch **Home Key** >  > **Settings** > **Wi-Fi**.
2. Touch  > **Advanced** to adjust the following settings.
  - ▶ **Network notification:** Get notifications in the status bar when Wi-Fi is on and an open network is available.
  - ▶ **Keep Wi-Fi on during sleep:** Set whether to keep Wi-Fi on in sleep mode.

- ▶ **Scanning always available:** Allow Google location services and other apps to scan for networks even when Wi-Fi is turned off.
- ▶ **Avoid poor connections:** Only use Wi-Fi network when the Internet connection is good.
- ▶ **Install certificates:** Install certificates needed for connecting to certain Wi-Fi networks.
- ▶ **Wi-Fi optimization:** Minimize battery usage when Wi-Fi is on.
- ▶ **MAC address:** Check the MAC address.
- ▶ **IPv6 address:** Check the phone's IPv6 address.
- ▶ **IPv4 address:** Check the phone's IPv4 address.

## Connecting to Bluetooth® Devices



Bluetooth® is a short-range wireless communication technology. Phones or other devices with Bluetooth capabilities can exchange information wirelessly within a distance of about 10 meters. The Bluetooth devices must be paired before the communication is performed.

### Turn Bluetooth On/Off


1. Touch **Home Key** >  > **Settings** > **Bluetooth**.
2. Slide the **Bluetooth** switch to the **ON** or **OFF** position.

When Bluetooth is on, the  icon will appear in the status bar.

## Change the Device Name

1. Touch **Home Key** >  > **Settings** > **Bluetooth**.
2. Slide the **Bluetooth** switch to the **ON** position if Bluetooth is off.
3. Touch  > **Rename phone**.
4. Edit the name and touch **OK**.

## Pair With Another Bluetooth Device

1. Touch **Home Key** >  > **Settings** > **Bluetooth**.
2. Slide the **Bluetooth** switch to the **ON** position if Bluetooth is off.

Your phone automatically scans for and displays the IDs of all available Bluetooth devices in range. You could touch **SEARCH FOR DEVICES** if you want to scan again.

3. Touch the device you want to pair with.
4. Confirm that the Bluetooth passkeys are the same between the two devices and touch **Pair**. Alternately, enter a Bluetooth passkey and touch **Pair**.

Pairing is successfully completed when the other device accepts the connection or the same passkey is entered.

**NOTE:** The Bluetooth passkey may be fixed for certain devices such as headsets and handsfree car kits. You can try entering 0000 or 1234 (the most common passkeys) or refer to the documents for that device.

## Send Data via Bluetooth

1. Open the appropriate application and select the file or item you want to share.
2. Select the option for sharing via Bluetooth. The method may vary by application and data type.
3. Touch a Bluetooth device the phone has paired with or wait for it to search for new devices and touch one of them.

## Receive Data via Bluetooth

1. Turn Bluetooth on before trying to receive data via Bluetooth.

**NOTE:** If the phone has not been paired with the sending device, you may need to check your phone's device name in the **Bluetooth** menu in **Settings** to keep the phone detectable through Bluetooth.

2. When a pop-up box appears, indicating an incoming file via Bluetooth, touch **Accept** to start receiving the data.

Depending on your storage setting and whether a microSDHC card is installed, received files are stored automatically in a dedicated folder (*Bluetooth*, for instance) in the phone storage or microSDHC directory. You can access them with the **File Manager** app. Received contacts (vCard files) are automatically imported to your contact list.


## Connecting to Your Computer via USB

You can connect your phone to a computer with a USB cable and

transfer music, pictures, and other files in both directions. Your phone stores these files in internal storage or on a removable microSDHC card.

If you are using USB tethering, you must turn that off before you can use USB to transfer files between your phone and computer.

## Connect Your Phone to a Computer via USB

1. Connect your phone to the PC with a USB cable.
2. Open the Notification panel and touch  (**Connected as...**).
3. Choose one of the following options:
  - ▶ **USB storage:** Lets you transfer files between your computer and your Android device.
  - ▶ **Charge only:** Charge your phone via USB.
  - ▶ **Media device (MTP):** Transfer media files on Windows<sup>®</sup> or Mac<sup>®</sup>.
  - ▶ **Camera (PTP):** Transfer photos using camera software.

## Connect With Windows Media<sup>®</sup> Player

You can sync music on your phone and the computer installed with Windows Media Player.

1. Connect the phone with your computer via USB and choose **Media device (MTP)**.
2. Open Windows Media Player and synchronize music files.

## Disconnect Your Phone From the Computer

To disconnect the phone from the computer, simply unplug the USB cable when you're finished.

## Remove the microSDHC Card From Your Phone

If you need to remove the microSDHC card while the phone is on, you should unmount it first.

1. Touch **Home Key** >  > **Settings** > **Storage**.
2. Scroll down and touch **Unmount SD card** > **OK**.
3. When the **Unmount SD card** menu changes to **Mount SD card** you can now safely remove the microSD card from the phone.

## Sharing Your Mobile Data Connection


You can share your phone's data capabilities through tethering or by activating the mobile hotspot feature to create a portable Wi-Fi hotspot.

### Share Your Mobile Data Connection via USB

You can access the Internet on your computer via the USB tethering feature of your phone. The feature needs data connection on a mobile network and may result in data charges.

**NOTE:** If your phone has a microSDHC card or USB storage, you


can't mount it on your computer while USB tethered.

1. Connect your phone to your computer with a USB cable.
2. Touch **Home Key** >  > **Settings** > **More...** > **Tethering & portable hotspot**.
3. Check **USB tethering**. A new network connection will be created on your computer.

**NOTE:** To stop sharing your data connection, uncheck **USB tethering** or disconnect the USB cable.

## Share Your Mobile Data Connection via Bluetooth

If your computer can obtain an Internet connection via Bluetooth, you can configure your phone to share its mobile data connection with your computer.


1. Pair your phone with your computer via Bluetooth.
2. Configure your computer to obtain its network connection via Bluetooth. For more information, please see your computer's documentation.
3. Touch **Home Key** >  > **Settings** > **More...** > **Tethering & portable hotspot**.
4. Check **Bluetooth tethering**. Your computer is now sharing your phone's data connection.

**NOTE:** To stop sharing your data connection, uncheck **Bluetooth tethering**.

# Share Your Mobile Data Connection as a Wi-Fi Hotspot

You can share your phone's data connection with other devices by turning your phone into a portable Wi-Fi hotspot. The feature needs data connection on a mobile network and may result in data charges.

**NOTE:** When the portable Wi-Fi hotspot feature is enabled, you cannot use your phone's applications to access the Internet via its Wi-Fi connection. You still remain connected to the Internet via your mobile data network.

1. Touch **Home Key** >  > **Settings** > **More...** > **Tethering & portable hotspot** > **Wi-Fi hotspot**.
2. Slide the switch to turn on Wi-Fi hotspot.  
After a moment, the phone starts broadcasting its Wi-Fi network name (SSID).
3. On another device, locate your phone via Wi-Fi and connect with it to start using the phone's mobile data.

**NOTE:** To stop sharing your data connection, turn off **Wi-Fi hotspot**.

## Rename or Secure Your Wi-Fi Hotspot

You can change the name of your phone's Wi-Fi network (SSID) and secure your portable Wi-Fi hotspot.

1. Touch **Home Key** >  > **Settings** > **More...** > **Tethering & portable hotspot** > **Wi-Fi hotspot**.




2. Touch **Set up Wi-Fi hotspot**. Set your name and security options as follows:
  - ▶ **Network SSID**: Enter or edit a network SSID (name) that other devices see when scanning for Wi-Fi networks.
  - ▶ **Security**: Choose a security option: **None** (not recommended), **WPA2 PSK** (other users can access your mobile hotspot only if they enter the correct password). When you select **WPA2 PSK**, touch the **Password** field to edit the security password.
3. Touch **Save** to save your settings.

## Connecting to Virtual Private Networks

Virtual private networks (VPNs) allow you to connect to the resources inside a secured local network. VPNs are commonly deployed by corporations, schools, and other institutions to let people access local network resources when not on campus, or when connected to a wireless network.


Depending on the type of VPN you are using, you may be required to enter your login credentials or install security certificates before you can connect to your VPN. You can get this information from your network administrator.

## Add a VPN

1. Touch **Home Key** >  > **Settings** > **More...** > **VPN**.
2. Touch **+** and fill in the information provided by your network administrator.
3. Touch **Save**.


The VPN is added to the list on the VPN screen.

## Connect to a VPN

1. Touch **Home Key** >  > **Settings** > **More...** > **VPN**.
2. Touch the VPN that you want to connect to.
3. When prompted, enter any requested credentials, and then touch **Connect**.

When you are connected, the VPN connected icon appears in the Status bar.

## Modify a VPN





1. Touch **Home Key** >  > **Settings** > **More...** > **VPN**.
2. Touch and hold the VPN that you want to modify.
3. Touch **Edit profile** and edit the VPN settings you want.
4. Touch **Save**.

# Phone Calls

You can place calls from the Phone app, the People app, or other apps or widgets that display contact information. Wherever you see a phone number, you can usually touch it to dial.

## Placing and Ending Calls

### Place a Call by Dialing

1. Touch **Home Key** >  > .
2. In the **Phone** tab , enter the phone number with the on-screen keypad. Touch  to delete incorrect digits.

**NOTE:** As you enter digits, your phone searches for contacts that match. If you see the number you want to dial, just touch it.

3. Touch  below the keypad to place the call.

**TIP:** To make an international call, touch and hold the 0 key to enter the plus (+) symbol. Next, enter the country code, followed by the city/area code and then the phone number.



### End a Call

During a call, touch  on the screen.

# Answering or Rejecting Calls



When you receive a phone call, the Incoming Call screen opens, displaying the Caller ID or the information about the caller that you've entered in People. You can answer or reject the call, or reject it with a text message.

## Answer a Call



When you receive a phone call, drag  over  to answer the call.

**NOTE:** To silence the ringer before answering the call, press either end of the **Volume Key**.

## Reject a Call

When you receive a phone call, drag  over  to reject the call.

You can also drag  over  to reject the call and send a preset text message to the caller.

**TIP:** To edit the text response, touch **Home Key** >  > **Phone** >  > **Settings** > **Other Settings** > **Quick responses**.


## Working With the Call Log

The Call log is a list of all the calls you've placed, received, or missed. It provides a convenient way to redial a number, return a

call, or add a number to your Contacts.



To open the call log, touch the **Call log** tab  in the Phone app.

## Place a Call From the Call Log


1. Open the call log.
2. Touch a number to call back, or touch  beside it for more information about the call.





**NOTE:** You can **Show missed only** / **Show All only** to switch to each call log type you want to view.

## Add a Call Log Number as a Contact

1. Open the call log.
2. Touch  to view more call information.
3. Touch .
4. To add the number to an existing contact, touch a contact in the list. To add a new contact, touch **CREATE NEW CONTACT**.





## Take Other Actions on a Call Log Entry


1. Open the call log.
2. Touch  to view more call information. While viewing the call details, you can:

- ▶ Touch the number to call it.
- ▶ Touch  > **Edit number before call** to edit the number in the dialer before calling it.
- ▶ Touch  to send a message.
- ▶ If the number belongs to a contact you have, touch  to view contact details.
- ▶ Touch  to delete the call log.

## Checking Voicemail








If you have set the phone to divert calls to voicemail, callers can leave voicemail messages when they cannot reach you. Here's how to check the messages they left.

1. Touch **Home Key** >  > 
2. Touch and hold   in the dialler. If prompted, enter your voicemail password.
3. Follow the voice prompts to listen to and manage your voicemail messages.

**NOTE:** To set your voicemail service, touch  > **Settings** > **Voice Call** > **Voicemail** in the dialler and touch the voicemail settings you want to change. For detailed information, please contact the service provider.

## Using Options During a Call

During a call, you will see a number of onscreen options. Touch an option to select it.

- Touch  /  to turn on or off the speaker.
- Touch  to mute or unmute your microphone.
- Touch  to make another call separately from the first call, which is put on hold.
- Touch  to switch to the keypad when you need to enter a code (for example, the PIN for your voicemail or bank account) during the call.
- Touch  to put the call on hold.
- Touch  to end the current call.

**WARNING!** Because of higher volume levels, do not place the phone near your ear during speakerphone use.

## Managing Multi-party Calls



When the call waiting and three-way call features are available, you can switch between two calls or set up a conference call.

**NOTE:** The call waiting and three-way call features need network support and may result in additional charges. Please contact your service provider for more information.

## Switch Between Current Calls



When you're on a call and another call comes in, your phone screen informs you and displays the caller ID.

**To respond to an incoming call while you're on a call:**



Drag  over  to answer the call. (This puts the first caller on hold and answers the second call.)

## Adjusting Your Call Settings

### Select Default Ringtone and Vibration

1. Touch **Home Key** >  > **Settings** > **Audio profiles** > .
2. Touch **Phone ringtone** to select the default ringtone for incoming calls or check **Vibrate** to enable vibration when the phone is ringing.



### Set Voicemail

1. Touch **Home Key** >  > **Phone** >  > **Settings** > **Voice Call** > **Voicemail**.
2. Set the following options.
  - ▶ Touch **Service** to select voicemail service provider. Your carrier is the default.
  - ▶ Touch **Setup** > **Voicemail number** to edit the voicemail





number.

## Edit Quick Response to Rejected Callers

1. Touch **Home Key** >  > **Phone** >  > **Settings** > **Other Settings** > **Quick responses**.
2. Touch the text message to edit it.
3. Touch **OK** to save the new message.

## Use Fixed Dialing Numbers

Fixed Dialing Numbers (FDN) allows you to restrict outgoing calls to a limited set of phone numbers.



1. Touch **Home Key** >  > **Phone** >  > **Settings** > **Other Settings** > **Fixed Dialing Numbers**.
2. The following options are available:
  - ▶ **Enable FDN:** Input the PIN2 code to enable the FDN feature.
  - ▶ **Change PIN2:** Change the PIN2 code for FDN access.
  - ▶ **FDN list:** Manage the FDN list.

**NOTE:** The PIN2 code is provided by your carrier. Entering an incorrect PIN2 code more times than allowed can get your micro-SIM card locked. Contact the service provider for assistance.

## Bar Certain Calls



Call barring feature allows you to forbid certain types of calls from

your phone.



1. Touch **Home Key** >  > **Phone** >  > **Settings** > **Voice Call** > **Call Barring**.
2. Set the restriction of specific types of calls from your phone.

## Forward Incoming Calls

Call forwarding feature allows you to forward your incoming calls to another phone number.

1. Touch **Home Key** >  > **Phone** >  > **Settings** > **Voice Call** > **Call forwarding**.
2. Touch an available option ( **Always forward**, **Forward when busy**, **Forward when unanswered**, or **Forward when unreachable**) to enable it.




## Other Options

1. Touch **Home Key** >  > **Phone** >  > **Settings** > **Voice Call** > **Additional settings**.
2. Touch **Caller ID** to choose whether your number is displayed when someone receives your outgoing call. Or check **Call waiting** to get notified of incoming calls during a call.



**NOTE:** Please contact the service provider to check whether the caller ID and call waiting features are available.

# People

You can put contacts on your phone and synchronize them with the contacts in your Google account or other accounts that support contact syncing.




To see your contacts, touch **Home Key** >  > **Contacts**. From there, you can touch the tabs on the top of the screen to quickly switch to contact groups  or favourite contacts .

## Checking Contact Details

1. Touch **Home Key** >  > **Contacts** and touch the all contacts tab  to access your contact list.
2. Scroll through the list to view all your contacts.
3. Touch a contact to view its details.

**TIP:** If you have a lot of contacts stored, you'll see a slider on the right side of the screen. To go directly to a letter, touch and hold the slider and drag it to a letter.

## Adding a New Contact



1. Touch **Home Key** >  > **Contacts** and touch the all contacts tab .
2. Touch  to add a new contact.
3. Touch the account field near the top of the screen to choose


where to save the contact. If a sync account is selected, the contacts will be synced automatically with your account online.

4. Enter the contact name, phone numbers, email addresses, and other information.
5. Touch **DONE** to save the contact.

## Setting Up Your Own Profile

You can create your own name card in your phone.

1. Touch **Home Key** >  > **Contacts** and touch the all contacts tab .
2. Touch **Set up my profile**.

If a profile has already been set up, touch the listing under **ME** and then touch  > **Edit**.

3. Edit your profile information and touch **DONE**.

## Working With Favourite Contacts


In the favourite contacts  tab, you can find your favourite contacts and frequently contacted contacts.

### Add a Contact to Favourites




You can add the contacts you use frequently to Favourites so that you can find them quickly.

1. Touch **Home Key** >  > **Contacts** and touch the all

contacts tab .



2. Touch a contact and then touch  next to the contact name.

## Remove a Contact From Favourites




1. Touch **Home Key** >  > **Contacts** and touch the favourite contacts tab .
2. Touch a favourite contact and then touch  next to the contact name.


## Working With Groups

### View Your Contact Groups




1. Touch **Home Key** >  > **Contacts** and touch the contact groups tab .
2. Scroll through the list to view the preset groups and any groups you have created.
3. Touch a group to view its members.

### Set Up a New Group




1. Touch **Home Key** >  > **Contacts** and touch the contact groups tab .
2. Touch  to create a new group.
3. Touch to choose an account for the new group.

4. Enter a group name.
5. Touch  and select the contacts you wish to be the group members.
6. Touch **OK**.
7. Touch **DONE**.

## Delete a Group

1. Touch **Home Key** >  > **Contacts** and touch the contact groups tab .
2. Touch a group and then touch  > **Delete**.
3. Touch **OK** to disband the group. The contacts in the group will not be deleted.

## Edit a Group

1. Touch **Home Key** >  > **Contacts** and touch the contact groups tab .
2. Touch a group and then touch .
3. Touch **Edit** to edit the group name, add more members.



## Searching for a Contact

1. Touch **Home Key** >  > **Contacts**.
2. Touch  at the bottom of the screen.

3. Input the contact name or any information the contact has to search for it. The contacts matched will be listed.




## Editing Contacts

### Edit Contact Details

1. Touch **Home Key** >  > **Contacts**.
2. Touch a contact you need to edit and then touch  > **Edit**.
3. Edit the contact and touch **DONE**.

### Join Contacts

As your phone synchronizes with multiple online accounts, you may see duplicate entries for the same contact. You can merge all the separate information of a contact into one entry in the Contacts list.

1. Touch **Home Key** >  > **Contacts**.
2. Touch a contact entry to display the contact's details.
3. Touch  > **Edit** >  > **Join**.
4. Touch the contact whose information you want to join with the first entry, then touch **DONE**.

The information from the second contact is added to the first, and the second contact is no longer displayed in the Contacts list.


You can repeat these steps to join another contact to the main contact.

# Accounts

## Adding or Removing Accounts

You can add multiple Google Accounts and Microsoft Exchange ActiveSync® accounts. You may also add other kinds of accounts depending on the apps installed on your phone.



### Add an Account

1. From the home screen, touch  > **Settings** > **Add account**.
2. Touch the type of account you want to add.
3. Follow the onscreen steps to enter the information about the account. Most accounts require a username and password, but the details may vary. You may also need to obtain some information from IT support or your system administrator.

When the account is successfully added, it is displayed in the **ACCOUNTS** section in the **Settings** menu..

## Configuring Account Sync



### Configure Auto Sync Setting

1. From the home screen, touch  > **Settings** > **Data usage**.
2. Touch  and check or uncheck **Auto-sync data**.




- ▶ When automatic sync is turned on, changes you make to information on your phone or on the web are automatically synced with each other.
- ▶ When auto sync is turned off, you need to sync manually to collect emails, updates, or other recent information.

## Sync Manually

1. From the home screen, touch  > **Settings**.
2. In the **ACCOUNTS** section, touch the account category and then the account you want to sync.
3. Touch  > **Sync now**.

## Change an Account's Sync Settings

1. From the home screen, touch  > **Settings**.
2. In the **ACCOUNTS** section, touch the account category and then the account. The Sync screen appears, showing a list of information the account can sync.
3. When auto-sync is enabled, check or uncheck items as you need. Checked types of information on the phone and the web will be kept in auto-sync.

## Email

Touch  in the home screen and select **Email**. Use it to

receive and send emails from your webmail or other accounts, using POP3 or IMAP, or access your Exchange ActiveSync account for your corporate email needs.


## Setting Up the First Email Account

1. When you open **Email** for the first time, enter your email address and password.
2. Touch **Next** to let the phone retrieve the network parameters automatically.  
**NOTE:** You can also enter these details manually by touching **Manual setup** or when automatic setup fails.
3. Follow the on-screen instructions to finish the setup.

Your phone will show the inbox of the email account and start to download email messages.

## Checking Your Emails




Your phone can automatically check for new emails at the interval you set when setting up the account.

You can also check new emails manually by touching  **>Refresh** in any of the email account's boxes.

## Responding to an Email



You can reply to or forward a message that you receive. You can also delete messages and manage them in other ways.

## Reply to or Forward an Email

1. Open the email you want to reply to or forward from Inbox.
2. Do the following as you need.
  - ▶ To reply to the sender, touch .
  - ▶ To reply to the sender and all recipients of the original email, touch .
3. Edit your message and touch .

## Delete an Email

You can delete an email from its folder. You can also delete a batch of emails.



- While reading a message, touch .
- While in a message list (for instance, the inbox), touch the checkboxes in front of the messages and then touch .

## Writing and Sending an Email

1. Open your email Inbox and touch  > **Compose**.

**NOTE:** If you have more than one email account added on the phone, touch the sender line to select the account you want to use for sending the message.


2. Enter a contact name or email address in the 'To' field. Separate each recipient with a comma. Enter the email subject and compose the email text.

3. Touch  > **Attach file** to add audio files, images, videos and other types of files as attachments.
4. Touch  at the top of the screen to send the message.

## Adding and Editing Email Accounts


### Add an Email Account

After setting up your first email account (see [Setting Up the First Email Account](#)), you can add more email accounts and manage them separately.

1. Open **Email** to get the Inbox screen.
2. Touch  > **Settings** and touch **ADD ACCOUNT** at the top right of the screen.
3. Follow the prompts to set up the account as you did with the first one.

### Edit an Email Account


You can change a number of settings for an account, including how often you check for email, how you're notified of new mails, your email signature, and details about the servers the account uses to send and receive mails.

1. Open **Email** to get the Inbox screen.
2. Touch  > **Settings** and touch the account whose settings you want to change.
3. Make the changes you want and touch **Back Key** when

you're finished.

## Changing General Email Settings

General settings apply to all email accounts you add.


1. Open **Email** to get the Inbox screen.
2. Touch  > **Settings** > **General Settings**.
3. Make the changes and touch **Back Key** when you finish.

# Gmail™


After you sign in to your Google Account on the phone, you can send and retrieve Gmail messages with the **Gmail** app.

**NOTE:** This feature may not be available in certain regions or with certain service providers.

## Opening Your Gmail Inbox

Touch  in the home screen and select **Gmail**. The Inbox screen appears.

If you haven't signed in, you will be prompted to do so or create a new account.

Touch  > **Refresh** to refresh your Inbox and download new messages. To search for Gmail messages, touch **Search** and enter the words to search for.






## Switching Accounts

Gmail displays conversations, messages, and settings from one Google Account at a time. If you have signed in to more than one Google Account on your phone, you can switch accounts and view information in each account.





1. From your Inbox, touch the current account at the top of the screen.

2. From the menu that appears, touch the account you want to see. The account's Inbox will open.

## Writing and Sending a Message


1. Open your Gmail Inbox and switch to the account you want to use for sending the message.
2. Touch  or  > **Search** >  > **Compose**.
3. Enter a contact name or email address in the 'To' field. Separate each recipient with a comma.
4. Enter the email subject and compose the email text.
5. To add an attachment, touch  > **Attach file**.
6. Touch  at the top of the screen to send the message.

## Replying to or Forwarding a Message

1. Open the Gmail message you want to reply to or forward to another person.
2. Do the following as you need.
  - ▶ To reply to the sender, touch .
  - ▶ To reply to the sender and all recipients of the original message, touch  > **Reply all**.
  - ▶ To forward the message, touch  > **Forward**.
3. Edit your message and touch the send icon .

## Working With Received Attachments

When a message has an attachment, Gmail displays information about it in the **ATTACHMENTS** section of the email.

 
Depending on the attachment type, the applications installed on your phone as well as your settings, you may touch the attachments to preview the attachment. If you want to save the attachment , touch  > **Save/Save all**.

## Working With Labels


Message labels include both labels you create and default labels such as **Sent**, **Starred**, and **Outbox**. You can organize your emails by labelling them or adding stars to them. Labels also help you sort your messages, similar to folders.

### To label or change labels:


1. Open the **Gmail** app and touch in the message list the sender images at the left side of the messages you want to label.

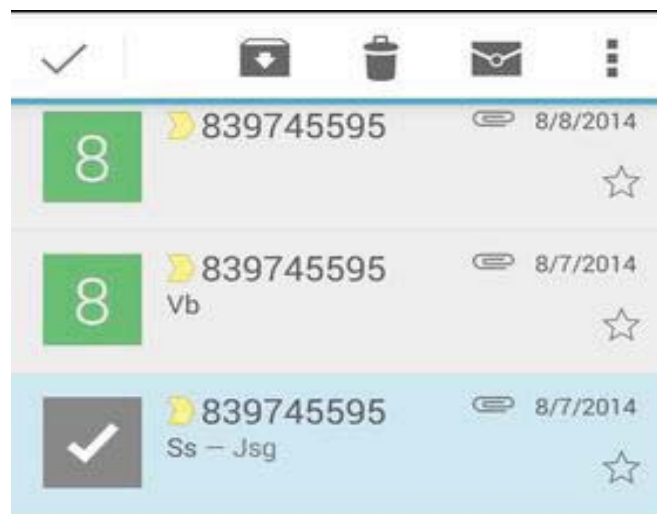



2. At the top of the screen, touch  > **Change labels**.
3. Check or uncheck labels in the new dialog box and touch **OK**.


#### **To add stars to messages:**

1. Open the **Gmail** app and touch in the message list the sender images in front of the messages you want to star.
2. At the top of the screen, touch  > **Add star**.

#### **To view messages by label:**

1. Open the **Gmail** app and touch the current account at the top of the screen without checking any message.
2. Touch a label below **ALL LABELS** to view messages with that label.

## **Changing Gmail Settings**

Touch  > **SETTINGS** in any Gmail screen to change **General settings**, which apply to all Gmail accounts, or other settings that only apply to specific accounts.



# Messaging

You can use Messaging to exchange text messages (SMS) and multimedia messages (MMS).



## Opening the Messaging Screen




Touch  in the home screen and select **Messaging**.

The **Messaging** screen opens where you can create a new message, search for messages, or open an ongoing message thread.

- Touch  to write a new text or multimedia message.
- Touch  to search for a message using keywords.
- Touch an existing message thread to open the conversation you've had with a certain number.

## Sending a Message

1. On the **Messaging** screen, touch  at the bottom.
2. Add recipients by one of the following ways.
  - ▶ Touch the **Type name or number** field and manually enter the recipient's number or the contact name. If the phone presents a few suggestions, touch the one you want to add.
  - ▶ Select recipients from your contacts by touching .



3. Touch the **Type text message** field and enter the content of your message.
4. If you want to send a multimedia message, touch  > **Add subject** to add a message subject or touch the paper clip icon  to attach pictures, videos, audio, or slideshow.
5. Touch .

**NOTE:** You can also include email addresses as recipients for multimedia messages.

**NOTE:** Do not add a message subject or any attachment if you want to send a text message. Otherwise you may be charged for a multimedia message.

## Replying to a Message

Messages you receive are appended to existing threads for the same number. If the new message comes from a new number, a new thread is created.


1. On the **Messaging** screen, touch the thread that has the message you want to reply to.
2. Type your reply in the text box at the bottom. You can touch the attach icon  if you want to reply with an MMS.
3. Touch .

# Changing Message Settings

The phone's message settings are pre-configured for you to use immediately. To change them, tap **Menu Key > Settings** from the Messaging Screen.

## Calendar

Calendar on the phone works with the web-based Google Calendar™ service for creating and managing events, meetings, and appointments. It also works with the Microsoft Exchange ActiveSync calendar once you sign into your Exchange account on the phone.

To open Calendar, touch  in the home screen and select **Calendar**.

## Viewing Your Calendars and Events

### Select Visible Calendars

1. Open the **Calendar** app.
2. Touch **Menu > Calendars to display**.
3. In the new screen, touch the calendars to check the calendars you want to see or uncheck the calendars you'd like to hide.

Events from hidden calendars are not shown in the Calendar app.

## Change Calendar Views

You can view your calendars in different forms. The app offers four views: Month, Week, Day, and Agenda.

To change calendar views, touch the view you want at the bottom of the screen.

You can also change to Day view from Month view by touching any day in the monthly calendar.

- In Month view, swipe vertically to see previous months and future months.
- In Week or Day view, swipe horizontally to see previous weeks/days and future weeks/days.
- When you are viewing earlier or later days, weeks, or months, touch **Today** at the top to quickly switch to today.

## View Event Details

In Agenda, Day, or Week view, touch an event to view its details.

In Month view, touch a day to switch to Day view. Then touch an event to view its details.

## Creating an Event


1. In any Calendar view, touch **Menu >New event**.

You can also touch a spot in Day or Week view twice to add an event to that time spot.

2. If you have more than one calendar account, touch the current account above the **Event name** field to choose one.
3. Enter the event details and touch **DONE**.

## Editing or Deleting an Event

1. Find the event you want to edit or delete.
2. Open its details screen (see [View Event Details](#) in this chapter).
3. Do one of the following as you need.

To...	do...
Edit the event,	touch <b>Menu &gt;Edit</b> at the bottom of the screen. Touch <b>DONE</b> to save your changes.
Delete the event,	touch <b>Menu &gt;Delete</b> at the bottom of the screen and then touch <b>OK</b> .
Share the event,	touch  and choose how to share.


## Changing Calendar Settings

To change Calendar settings, open a Calendar view (Day, Week, Month, or Agenda) and touch **Menu > Settings**.

You can change General settings, which apply to all accounts, or other settings that only apply to specific accounts.


# Google+™

Google+ is a social networking service offered by Google. The Google+ application on your phone enables you to manage your data, chat with online contacts, organize them in different circles, and share your selected information.

Touch  in the home screen and select **Google+**. The first time you open the Google+ app, select the photo & video backup and contact sync options.

**NOTE:** For detailed guide for Google+, open Google+ and touch  > **Help** to view the online instructions.

## Getting Started With Google+

Open the **Google+** app and touch  at the top left to use the following features:




- **ABOUT:**
  1. **Story:** a brief description of you.
  2. **People:** Find people to add to your Google+ circles, create new circles, view and organize people into circles based on your relationships. You can also follow content posted by people you find interesting.
  3. **Work:** To see what do you do.
  4. **Education:** To see your educational experience.

5. **Current Location:** See your friends' locations on the map and configure your location sharing settings.
6. **Places:** See your address.
7. **Basic Information:** See your basic information.
8. **Contact Information:** See your contact information.
- **POSTS:** See posts people have shared with you, a circle you are in, or everyone.
- **Photos:** View photos you uploaded, photos of you, photos from your posts and more.

Touch the headshot image next to your account name to view and edit your basic information, view your posts and photos.

## Signing out of Google+

If you are already signed in to the app, you can sign out by following these steps.


1. Touch  in the home screen and select **Google+**.
2. Touch  > **Settings** > **Current Account** >  > **Sign out**.



# Browser

Use **Browser** to view web pages and search for information.

## Opening the Browser

Touch  in the home screen and select **Browser** to start this function. The last web page you were viewing is displayed. If you have not used **Browser** recently, your home page opens.

Browser also opens when you touch a web link - for example, in an email or a text message.

To open a web page or search the web:

1. Open the **Browser** app.
2. Touch the address box at the top of the web page. If the address box isn't visible, scroll to the top of the page to show it.
3. Enter the address (URL) of a web page. Or, enter terms you want to search for.
4. Touch a URL or search suggestion or touch **Go** on the keyboard to open the web page or search results.

**TIP:** Touch **X** at the bottom of the screen if you want to stop opening the page.

# Changing Browser Settings

You can configure a number of Browser settings to customize the way you browse the web, including several that you can use to control your privacy.


To open the Browser settings screen, touch **Menu Key > Settings**.

## Google Search

You can search for information on the web or on your phone using Google Search or perform certain tasks by speaking.

## Searching With Text



You can search for information on the Internet or on the phone (such as apps and contacts) by entering text.

1. Touch  in the home screen and select **Google**.
2. Enter the terms you want to search for in the search box and touch the search key on the keyboard, or touch a search suggestion that appears below the search box.

## Searching by Speaking

You can also search the web or perform certain tasks by

speaking.

1. Touch **Home Key** >  > **Google**.
2. Touch the microphone icon to the right of the search box.  
**NOTE:** You can also touch **Home Key** >  > **Voice Search**.
3. Speak the terms you want to search for or the question you want to ask. When you're finished speaking, your speech is analyzed and the search is initiated.

## Changing Search Settings

Open the **Google** app and touch **Menu Key** > **Settings** to set phone search options, voice recognition and output settings, and to change privacy settings for your account.

# Camera

You can take photos and record videos. Photos and videos are stored to the phone's memory card or to the phone's internal storage. You can copy them to your computer or access them in the **Gallery** app.

## Taking Pictures with Your Camera


Your phone has camera function. Open it by pressing **Home**



**Key** >  > **Camera**.

Tap  to take a shot. To view it, just tap the picture in the right corner of the screen.

**NOTE:** Before taking a picture, click the corresponding icon on camera screen to complete the camera-related settings.


## Shooting Video with Your Camcorder

Open the camcorder by pressing **Home Key** > tap  > **Camera** > tap .

Then tap  to start shooting, and tap  to stop. Select the picture in the right corner of the screen to view the video you've just shot.

# Gallery

## Opening Gallery

Touch  in the home screen and select **Gallery** to view albums of your pictures and videos.


## Working With Albums

When you open Gallery, all pictures and videos on your phone are displayed in a number of albums.


### To view album contents:

Touch an album to view the pictures and videos it contains.

### To share albums, pictures, or videos:

 
1. Touch and hold an item in the Albums view to select an album or after you open an album to select a picture or a video.
2. Touch more items that you want to share.
3. Touch  and select how you want to share the items.


### To delete albums:

1. Touch and hold an album until it is selected.
2. Touch more albums that you want to delete.
3. Touch  > **Delete** > **OK**.

## Working With Pictures


Touch a picture in an album to view the picture in full screen. Double-touch the picture, or pinch two fingers together or spread them apart to zoom out or in. Slide left or right to view other pictures in the album.

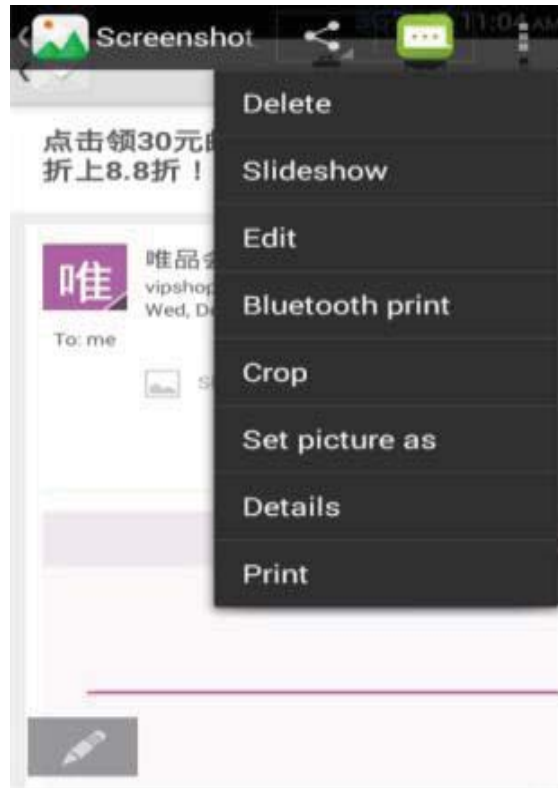

- Touch the Gallery icon in the upper left corner to return to the album.
- Touch  > **Slideshow** to browse the album contents in a slideshow.

**NOTE:** All options may not be available for certain albums or pictures.

# Music

Touch  in the home screen and select **Music** to play audio files stored on your phone. **Music** supports a wide variety of audio formats, so it can play music you purchase from online stores, music you copy from your CD collection, and so on.

## Copying Music Files to Your Phone

Before using Music, you need to copy or download audio files to your phone.

### Copy From a Computer

1. Connect your phone and the computer with a USB cable.
2. Touch **Media device (MTP)** to browse the files in the phone storage and on the microSDHC card.
3. Copy the music file from the PC and paste it to the phone storage or microSDHC card.

### Download From the Internet

You can download music files when browsing web pages. See [\*Downloading Files\*](#).

### Receive via Bluetooth


You can receive music files from other devices via Bluetooth.

See [\*Receive Data via Bluetooth\*](#).

## Receive via Wi-Fi

You can receive music files from other devices via Wi-Fi. See [\*Receive Data via Wi-Fi\*](#).

## Viewing Your Music Library

Touch  in the home screen and select **Music** and your music library is displayed. All your audio files are catalogued according to the information stored in the files.


Touch a card at the top of the screen to view your music library organized by **Artists**, **Albums**, **Songs**, **Playlists**.

## FM Radio


With the FM radio, you can search for radio channels, listen to them, and save them on your phone. Note that the quality of the radio broadcast depends on the coverage of the radio station in your area. The wired headset that comes with your phone works as an antenna, so always connect the headset when using the radio. When you receive an incoming call while listening to the radio, the radio will be turned off.




## Scanning and Saving Channels


1. Plug in a wired headset and open **FM Radio**.
2. Touch  > **Search**. All previously saved channels will be removed.

## Listening to FM Radio

3. Plug a wired headset into your phone.
4. Touch  in the Home Screen and select **FM Radio**.
5. Touch one of the favorite channels at the bottom.

**TIP:** Touch the  > **Speaker** to listen to the radio programs through the phone speaker.

## Adding a Radio Station to Favorites

1. Touch  in the Home Screen and select **FM Radio**.
2. Touch the red line to adjust the frequency.





3. Touch .

The new channel is added to the favorite channels, which are sorted in numeral order.

# Sound Recorder


**Sound Recorder** enables you to record voice memos and listen to them whenever you like.

## Recording a Voice Memo

1. Press **Home Key** >  > **Sound Recorder**.
2. Tap  to start recording.
3. Tap  to stop recording.
4. Tap  to play back the voice recording.
5. Save the voice recording after stop, or tap **Discard** to delete the recording..
- 6.

## More Apps


### Backup & Restore

Touch  in the home screen and select **Backup & Restore**. You can back up your user data, such as contacts, messages and gaming progress as well as installed applications to the

memory card regularly. If the data get lost, restore it from the memory card.


## Calculator

You can use the phone directly perform simple mathematical calculations.


1. Press **Home Key** > Tap  > **Calculator**.
2. Click the button corresponding with the calculator display, perform basic arithmetic.

**TIPS:** Tap **Menu Key** > **Advanced panel** to use scientific calculation.


## Chrome™

Touch  in the home screen and select **Chrome** to browse the Internet. Chrome on your phone can sync bookmarks, browsing history, and opened tabs from your Google Account, so that you can maintain the same experience across your phone, your PC, your tablet and other devices.

## Clock

Touch  in the home screen and select **Clock** to use a series of timing tools.

## Set a New Alarm

1. Touch the **Alarm** tab in the **Clock** app.
2. Touch an existing alarm to configure it, or touch  at the bottom of the screen to create a new alarm.
3. Set up the alarm options, such as time, repeat, and alarm sound.
4. Touch **Done** to save and exit.


## Use the Stopwatch and Countdown

Touch the **Stopwatch** or **Countdown** tab in the **Clock** app to use the stopwatch or the countdown timer.

Stopwatch allows you to record lap times, while Countdown allows you to set a time and count down to zero.

## Downloads


The **Downloads** app keeps a record of the files you have downloaded using apps such as **Browser** and **Email**.


Touch  in the home screen and select **Downloads** to check the record.

- Touch a file to open it with the appropriate applications.
- Touch and hold a file, or check the box in front of it, to delete or share it.


## File Manager

Quickly access all of your images, videos, audio clips, and other types of files on your phone and on the memory card.


Touch  in the home screen and select **File Manager**. You can touch **Phone storage** or **SD CARD** to browse folders and files on the phone storage or the microSDHC card.

- Touch folders and files to access stored items.
- Touch and hold an item to access option icons such as Copy, Move, Share, or Delete.
- To copy or move an item, navigate to a new location and touch **PASTE**.
- Touch  to create a new folder in the current directory.

## System Updates

Touch  in the home screen and select **System updates**. You can check your system's software status, check for updates, or change update settings.

# Settings

Touch  in the home screen and select **Settings**. The **Settings** app contains most of the tools for customizing and configuring your device.

## Wireless and Networks

### Wi-Fi

Turn Wi-Fi on or off and configure your Wi-Fi connections. See [Connecting to Wi-Fi](#) and [Using Wi-Fi Direct](#).

### Bluetooth


Turn Bluetooth on or off and configure your Bluetooth connections. See [Connecting to Bluetooth Devices](#).

### Data Usage

Touch the **ON/OFF** switch to turn on or off mobile data.

You can check how much data has been used during the time cycle you set, set a mobile data limit and warning, see what apps have been using mobile data, or restrict background data for individual apps.

**NOTE:** The data usage is measured by your phone. Your carrier's data usage accounting may differ.

Touch  > **Mobile hotspots** to select Wi-Fi networks that are mobile hotspots. Data usage on recognized mobile hotspots will be restricted to avoid high mobile data bills.

## Tethering & Portable Hotspot

Share your phone's mobile data connection with PCs or other devices via USB, Bluetooth or Wi-Fi. See [Sharing Your Mobile Data Connection](#).

## VPN

Set up and connect to virtual private networks. See [Connecting to Virtual Private Networks](#).

## Mobile Networks

Control mobile data use, select mobile network and set access point names. See [Connecting to Mobile Networks](#).

## Device

### Audio profiles

Adjust volumes (see [Adjusting Volumes](#)), set up ringtone and notification sound (see [Changing Ringtone and Notification Sound](#)), and select system sounds.

## Display

- **Wallpaper:** Select a background image for the home screen.
- **Brightness:** Set the brightness of the display.
- **Auto-rotate screen:** Check this option to let the phone automatically change the orientation of some onscreen content based on the position of the phone.
- **Sleep:** Set the length of time of inactivity before the screen turns off.
- **Daydream:** Manage the Daydream function. When Daydream is enabled, photos or animations will be displayed as a screensaver.
- **Font size:** Set the font size of the text on the screen.

## Storage

Check memory information for your memory card and internal storage.

- Touch **Unmount SD card** to unmount the memory card from your phone so that you can safely remove the card while the phone is on.
- Touch **Erase SD card** to delete all data on the microSDHC card.

## Battery

Check how much power remains for the battery and what has



been using the battery.

You can touch an app to adjust its settings in order to save battery life.

## Apps

See apps installed on your phone and manage them.

Touch an app in the **DOWNLOADED**, **RUNNING**, or **ALL** tab to see its information. You can stop the app, uninstall the app, or clear data and cache.

**NOTE:** Not all applications can be uninstalled.

## Personal

### Location

Activate location services to determine your location. See [\*Activating Location Services\*](#).

### Security

- **Screen lock:** Disable the screen lock or enable it with Long Press, Pattern, PIN, or Password. See [\*Protecting Your Phone With a Screen Lock\*](#).
- **Automatically lock:** Set the time needed for the lock protection to be activated after the screen turns off.
- **Power button instantly locks:** Activate the screen lock as soon as you press the **Power Key**.

- **Owner info:** Set the text that you may display on the lock screen.
- **Encrypt phone:** Encrypt your data on the phone to protect your privacy. See [\*Protecting Your Phone With Encryption\*](#).
- **Set up SIM card lock:**
  - ▶ **Lock SIM card:** Activate or deactivate the PIN lock to require PIN before accessing the micro-SIM card.
  - ▶ **Change SIM PIN:** Change the PIN used to access the micro-SIM card.
- **Make passwords visible:** Display passwords as you enter them.
- **Device administrators:** View or deactivate apps you have authorized to be device administrators.
- **Unknown sources:** Check this option to permit installation of apps from sources other than the Play Store.
- **Verify apps:** Disallow or display warnings before you install applications that may cause harm.
- **Trusted credentials:** Display trusted CA certificates.
- **Install from phone storage:** Install certificates from the memory card.
- **Clear credentials:** Delete all certificates.

## Language & Input

- **Language:** Select a language and region for your system.

- **Spell checker:** Check the spelling of text you enter or set the spell checker options.
- **Personal dictionary:** Add new words to the phone's dictionary or remove words from the dictionary. The words you add are used for spelling check and word suggestion.
- **KEYBOARD & INPUT METHODS:** Configure text input settings. See [\*Input Settings\*](#).
- **Voice Search:**
  - ▶ **Language:** Select the language you use when entering text by speaking or searching by speaking.
  - ▶ **Speech output:** Set when to use speech output.
  - ▶ **Offline speech recognition:** Select one or more additional language packages so you can use speech recognition when you do not have a network connection.
  - ▶ **Block offensive words:** Check to hide offensive words the phone has transcribed.
  - ▶ **Bluetooth headset:** Listen for your voice input through a Bluetooth headset when it is connected to your phone.
- **Text-to-speech output:**
  - ▶ **PREFERRED ENGINE:** Select the speech synthesis engine you want to use or change its settings.
  - ▶ **Speech rate:** Select how quickly you want the synthesizer to speak.
  - ▶ **Listen to an example:** Play a brief sample of the speech synthesizer, using your current settings.

## Backup & Reset

- **Back up my data:** Back up app data, Wi-Fi passwords, and other settings to Google servers after you sign in to your Google Account.
- **Backup account:** Select the Google Account that your data is backed up to.
- **Automatic restore:** Restore previously backed up settings and data when you reinstall an app.
- **Factory data reset:** Reset your phone to factory default settings. All your personal data from the phone's internal storage will be erased. You can also erase the data on the microSDHC card or the internal SD card during the process.

## Accounts

Manage your accounts and synchronization settings. Touch **Add account** to sign in to or create accounts on your phone.

Touch an account type to see that type of accounts you have added and adjust the account settings.

## System

### Date & Time

Set date, time, time zone, and how date and time are displayed. You can also use network-provided data.

## Accessibility

Configure accessibility plug-ins on your phone, such as using **TalkBack** for low-vision users.

## Printing

Configure cloud printing service options, manage print jobs and more.

## Developer Options

**Developer options** contains settings that are useful when developing Android applications. The menu is hidden until you touch **Build number** in the **About phone** menu 5 times.

**WARNING:** The developer option settings are intended for development use only. They can cause your phone and applications on it to break or misbehave.

## About Phone

View phone status and legal information. You can also upgrade your phone system.

# Upgrading the Phone Software

There are several ways to upgrade your phone software:

1. Use the online upgrade tool for mobile terminal products.
2. Use the one-press upgrade package offered by your mobile service provider.
3. Use the upgrade package on your microSDHC card.

**NOTE:** Visit the ZTE official handset service support website (<http://www.ztedevice.com/support>) and click your country or region to learn more about the above upgrade methods, as well as which phones and methods are supported.

# Troubleshooting

If you encounter problems while using the phone, or if it performs abnormally, you can refer to the chart below. If your particular problem cannot be resolved using the information in the chart, contact the dealer where you purchased the phone.

Problem	Possible causes	Possible solution
Poor reception	The network signal is too weak at your current location, for example, in a basement or near a tall building, because wireless transmissions can not effectively reach it.	Move to a location where the network signal can be properly received.
	The network is busy at the current time (for example, during peak times, there may be too much network traffic to handle additional calls).	Avoid using the phone at such times, or try again after waiting a short time.
	You are too far away from a base station for your service provider.	You can request a service area map from your service provider.

<b>Problem</b>	<b>Possible causes</b>	<b>Possible solution</b>
Echo or noise	Poor network link quality on the part of your service provider.	End the call and dial again. You may be switched to a better-quality network link or phone line.
	Poor local telephone line quality.	End the call and dial again. You may be switched to a better-quality network link or phone line.
Unable to select certain features	Your service provider does not support these features, or you have not applied for services that provide these features.	Contact your service provider.
Battery not charging	The battery or battery charger is damaged.	Contact the dealer.
	The phone's temperature is below 0°C or higher than 45 °C.	Adjust the battery charging environment to avoid extremes of temperature.
	Poor contact between the battery and charger.	Check all connectors to make sure all connections have been properly made.















<b>Problem</b>	<b>Possible causes</b>	<b>Possible solution</b>
Shortened standby time	The standby time is related to your service provider system configuration. The same phone used with different service providers' systems will not provide exactly the same length of standby time.	If you are located in an area where signalling is weak, temporarily power off the phone.
	The battery is depleted. In high temperature environments, battery life will be shortened.	Use a new battery.
	If you are not able to connect to the network, the phone will continue to send out signals as it attempts to locate a base station. Doing so consumes battery power and will consequently shorten standby time.	Change your location to one where the network is accessible, or temporarily turn off your phone.
Cannot turn your phone on	Battery power has been depleted.	Recharge the phone's battery.
micro-SIM card error	micro-SIM card malfunction or damage.	Take the micro-SIM card to your service provider for testing.







<b>Problem</b>	<b>Possible causes</b>	<b>Possible solution</b>
	micro-SIM card inserted improperly.	Insert the micro-SIM card properly.
	Debris on the micro-SIM card contacts.	Use a soft, dry cloth to clean the micro-SIM card contacts.
Unable to connect to the network	micro-SIM card invalid.	Contact your service provider.
	You are not within the network's service area.	Check the service area with your service provider.
	Poor signal.	Move to an open space, or if you are inside a building, move closer to a window.
You cannot make outgoing calls.	You have activated the Fixed dialling numbers feature.	Go to Phone > settings > other Settings > Fixed Dialing Numbers and disable it.
PIN Code blocked	You have entered an incorrect PIN code three consecutive times.	Contact your service provider. If the service provider provides the micro-SIM card's PUK code, use the PUK code to unlock the micro-SIM card.

<b>Problem</b>	<b>Possible causes</b>	<b>Possible solution</b>
Unable to enter information into the phonebook	The phonebook's memory is already full.	Delete unnecessary data from the contacts.
Phone crashes, reboots, freeze, or cannot be powered on	Some third-party software is not compatible with your phone.	Reset the phone to factory status.
		Enter safety mode and uninstall the software that may cause the problem.
		Upgrade the phone software.

# For Your Safety

## General Safety

	Don't make or receive handheld calls while driving. Never text while driving.		Don't use at gas stations.
	Keep your phone at least 15 mm away from your ear or body while making calls.		Your phone may produce a bright or flashing light.
	Small parts may cause choking.		Don't dispose of your phone in fire.
	Your phone can produce a loud sound.		To prevent possible hearing damage, do not listen at high volume levels for long periods.
	Avoid contact with anything magnetic.		Avoid extreme temperatures.
	Keep away from pacemakers and other electronic medical devices.		Avoid contact with liquids. Keep your phone dry.

	Turn off when asked to in hospitals and medical facilities.		Don't take your phone apart.
	Turn off when told to in aircrafts and airports.		Only use approved accessories.
	Turn off when near explosive materials or liquids.		Don't rely on your phone for emergency communications.

## Distraction

### Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands free kit) can cause distraction and lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

### Operating Machinery

Full attention must be given to operating machinery in order to reduce the risk of an accident.

# Product Handling

## General Statement on Handling and Use

You alone are responsible for how you use your phone and any consequences of its use.

You must always turn off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

- Always treat your phone and its accessories with care and keep it in a clean and dust-free place.
- Keep the screen and camera lens clean. Unclean screen or camera lens may slow down the phone's reaction to your operations or lower image quality.
- Clean the device and its accessories with a soft material such as cleaning cloth for eyeglass lenses. Do not use alcohol or other corrosive substances for cleaning or allow them to get inside.
- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture or high humidity.
- Do not drop, throw or try to bend your phone or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories.

Only authorized personnel can do so.

- Do not expose or use your phone or its accessories in a environment with or that can reach extreme temperatures, minimum - [5] and maximum + [50] degrees Celsius.
- Do not place your phone inside or near heating equipments or high pressure containers, such as water heaters, microwave ovens, or hot cooking utensils. Otherwise, your phone may be damaged.
- Please check local regulations for disposal of electronic products.
- Do not carry your phone in your back pocket as it could break when you sit down.

## **Small Children**

Do not leave your phone and its accessories within the reach of small children or allow them to play with it.

They could hurt themselves or others, or could accidentally damage the phone.

Your phone contains small parts with sharp edges that may cause an injury or may become detached and create a choking hazard.

## **Demagnetization**

To avoid the risk of demagnetization, do not allow electronic devices or magnetic media to be close to your phone for a long

time.

## **Electrostatic Discharge (ESD)**

Do not touch the micro-SIM card's metal connectors.

## **Antenna**

Do not touch the antenna unnecessarily.

## **Normal Use Position**

When placing or receiving a phone call, hold your phone to your ear, with the bottom towards your mouth.

## **Air Bags**

Do not place a phone in the area over an air bag or in the air bag deployment area as an airbag inflates with great force and serious injury could result.

Store the phone safely before driving your vehicle.

## **Seizures/Blackouts**

The phone can produce a bright or flashing light. A small percentage of people may be susceptible to blackouts or seizures (even if they have never had one before) when exposed to flashing lights or light patterns such as when playing games or watching video. If you have experienced seizures or blackouts or have a family history of such occurrences, please consult a physician.



## **Repetitive Strain Injuries**

To minimize the risk of Repetitive Strain Injury (RSI) when texting or playing games with your phone:

- Do not grip the phone too tightly.
- Press the buttons lightly.
- Use the special features which are designed to minimize the times of pressing buttons, such as Message Templates and Predictive Text.
- Take many breaks to stretch and relax.

## **Emergency Calls**

This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

## **Loud Noise**

This phone is capable of producing loud noises, which may damage your hearing. Turn down the volume before using headphones, Bluetooth stereo headsets or other audio devices.

## **Phone Heating**

Your phone may become warm during charging and during normal use.

# Electrical Safety

## Accessories

Use only approved accessories.

Do not connect with incompatible products or accessories.

Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit in the battery terminals.

Never puncture the surface of the battery with sharp objects.

## Connection to a Car

Seek professional advice when connecting a phone interface to the vehicle electrical system.

## Faulty and Damaged Products

Do not attempt to disassemble the phone or its accessories.

Only qualified personnel can service or repair the phone or its accessories.

If your phone (or its accessories) has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service center.

# Radio Frequency Interference

## General Statement on Interference

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

### Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

### Hearing Aids

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby.

The level of interference will depend on the type of hearing device and the distance from the interference source. Increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

### Medical Devices

Please consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the

operation of your medical device.

## **Hospitals**

Turn off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

## **Aircraft**

Turn off your wireless device whenever you are instructed to do so by airport or airline staff.

Consult the airline staff about the use of wireless devices onboard the aircraft. If your device offers a 'flight mode', this must be enabled prior to boarding an aircraft.

## **Interference in Cars**

Please note that because of possible interference with electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a hands-free kit with an external antenna is included in the installation.

## **Explosive Environments**

### **Gas Stations and Explosive Atmospheres**

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment.

Areas with potentially explosive atmospheres include fueling areas, below decks on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

## **Blasting Caps and Areas**

Power off your mobile phone or wireless device when in a blasting area or in areas posted power off “two-way radios” or “electronic devices” to avoid interfering with blasting operations.