htc

User guide ____



HTC Desire 10 pro

Features you'll enjoy	
What's special with Camera	9
The best from HTC and Google Photos	10
What's different with the onscreen keyboard	10
Sound	11
Truly personal	12
Boost+	13
Android 6.0 Marshmallow	13
Software and app updates	14
Unboxing	
HTC Desire 10 pro overview	15
Slots with card trays	16
nano SIM/UIM card	17
Storage card	19
Charging the battery	22
Switching the power on or off	22
Choosing which nano SIM/UIM card to connect to the 4G LTE network	23
Managing your nano SIM/UIM cards with Dual network manager	23
Phone setup and transfer	
Setting up HTC Desire 10 pro for the first time	24
Restoring from your previous HTC phone	24
Transferring content from an Android phone	25
Ways of transferring content from an iPhone	26
Transferring iPhone content through iCloud	26
Other ways of getting contacts and other content	26
Transferring photos, videos, and music between your phone and computer	27
Using Quick Settings	28
Getting to know your settings	28
Lock screen	29
Fingerprint scanner	30
Updating your phone's software	31
Getting apps from Google Play	33
Downloading apps from the web	34
Uninstalling an app	34
Your first week with your new phone	
HTC Sense Home	35
Sleep mode	35
Unlocking the screen	36
Motion gestures	36
Touch gestures	37
Opening an app	41

Sharing content	41
Switching between recently opened apps	41
Refreshing content	42
Capturing your phone's screen	42
Travel mode	
	42
What is the HTC Sense Home widget?	43
Notifications	45
Motion Launch	47
Working with text	49
Getting help and troubleshooting	53
Personalizing	
Ringtones, notification sounds, and alarms	54
What is HTC Themes?	54
Choosing a Home screen layout	57
Setting your Home wallpaper	57
Multiple wallpapers	58
Time-based wallpaper	58
Lock screen wallpaper	59
Adding or removing a widget panel	59
Arranging widget panels	59
Changing your main Home screen	60
Stickers, widgets and shortcuts	60
Arranging apps	63
Taking photos and videos	
Taking photos and videos	
Taking photos and videos Camera screen	
Camera screen	65
Camera screen Choosing a capture mode	65 66
Camera screen Choosing a capture mode Taking a photo	65 66 67
Camera screen Choosing a capture mode Taking a photo Tips for capturing better photos	65 66 67 68
Camera screen Choosing a capture mode Taking a photo Tips for capturing better photos Recording video	65 66 67 68 69
Camera screen Choosing a capture mode Taking a photo Tips for capturing better photos Recording video Selfies	65 66 67 68 69 70
Camera screen Choosing a capture mode Taking a photo Tips for capturing better photos Recording video Selfies Quickly adjusting the exposure of your photos	65 66 67 68 69 70 71
Camera screen Choosing a capture mode Taking a photo Tips for capturing better photos Recording video Selfies Quickly adjusting the exposure of your photos Taking continuous camera shots	65 66 67 68 69 70 71
Camera screen Choosing a capture mode Taking a photo Tips for capturing better photos Recording video Selfies Quickly adjusting the exposure of your photos Taking continuous camera shots Using HDR	65 66 67 68 69 70 71 72
Camera screen Choosing a capture mode Taking a photo Tips for capturing better photos Recording video Selfies Quickly adjusting the exposure of your photos Taking continuous camera shots Using HDR Taking a panoramic selfie	65 66 67 68 69 70 71 72 72
Camera screen Choosing a capture mode Taking a photo Tips for capturing better photos Recording video Selfies Quickly adjusting the exposure of your photos Taking continuous camera shots Using HDR Taking a panoramic selfie Taking a super wide-angle panoramic selfie	65 66 67 68 69 70 71 72 72 72
Camera screen Choosing a capture mode Taking a photo Tips for capturing better photos Recording video Selfies Quickly adjusting the exposure of your photos Taking continuous camera shots Using HDR Taking a panoramic selfie Taking a panoramic photo	65 66 67 68 69 70 71 72 72 72 74
Camera screen Choosing a capture mode Taking a photo Tips for capturing better photos Recording video Selfies Quickly adjusting the exposure of your photos Taking continuous camera shots Using HDR Taking a panoramic selfie Taking a super wide-angle panoramic selfie Taking a panoramic photo Using Zoe camera	65 66 67 68 69 70 71 72 72 72 74 75
Camera screen Choosing a capture mode Taking a photo Tips for capturing better photos Recording video Selfies Quickly adjusting the exposure of your photos Taking continuous camera shots Using HDR Taking a panoramic selfie Taking a super wide-angle panoramic selfie Taking a panoramic photo Using Zoe camera Recording a Hyperlapse video	65 66 67 68 69 70 71 72 72 72 74 75 75
Camera screen Choosing a capture mode Taking a photo Tips for capturing better photos Recording video Selfies Quickly adjusting the exposure of your photos Taking continuous camera shots Using HDR Taking a panoramic selfie Taking a super wide-angle panoramic selfie Taking a panoramic photo Using Zoe camera Recording a Hyperlapse video Choosing a scene	65 66 67 68 69 70 71 72 72 72 74 75 75 75
Camera screen Choosing a capture mode Taking a photo Tips for capturing better photos Recording video Selfies Quickly adjusting the exposure of your photos Taking continuous camera shots Using HDR Taking a panoramic selfie Taking a super wide-angle panoramic selfie Taking a panoramic photo Using Zoe camera Recording a Hyperlapse video Choosing a scene Manually adjusting camera settings	65 66 67 68 69 70 71 72 72 72 74 75 75 75 76
Camera screen Choosing a capture mode Taking a photo Tips for capturing better photos Recording video Selfies Quickly adjusting the exposure of your photos Taking continuous camera shots Using HDR Taking a panoramic selfie Taking a panoramic selfie Taking a panoramic photo Using Zoe camera Recording a Hyperlapse video Choosing a scene Manually adjusting camera settings Taking a RAW photo	65 66 67 68 69 70 71 72 72 74 75 75 75 76 76
Camera screen Choosing a capture mode Taking a photo Tips for capturing better photos Recording video Selfies Quickly adjusting the exposure of your photos Taking continuous camera shots Using HDR Taking a panoramic selfie Taking a super wide-angle panoramic selfie Taking a panoramic photo Using Zoe camera Recording a Hyperlapse video Choosing a scene Manually adjusting camera settings Taking a RAW photo How does the Camera app capture RAW photos?	65 66 67 68 69 70 71 72 72 72 74 75 75 75 76
Camera screen Choosing a capture mode Taking a photo Tips for capturing better photos Recording video Selfies Quickly adjusting the exposure of your photos Taking continuous camera shots Using HDR Taking a panoramic selfie Taking a panoramic selfie Taking a panoramic photo Using Zoe camera Recording a Hyperlapse video Choosing a scene Manually adjusting camera settings Taking a RAW photo	65 66 67 68 69 70 71 72 72 74 75 75 75 76 76 77
Camera screen Choosing a capture mode Taking a photo Tips for capturing better photos Recording video Selfies Quickly adjusting the exposure of your photos Taking continuous camera shots Using HDR Taking a panoramic selfie Taking a panoramic selfie Taking a panoramic photo Using Zoe camera Recording a Hyperlapse video Choosing a scene Manually adjusting camera settings Taking a RAW photo How does the Camera app capture RAW photos?	65 66 67 68 69 70 71 72 72 74 75 75 75 76 76 77
Camera screen Choosing a capture mode Taking a photo Tips for capturing better photos Recording video Selfies Quickly adjusting the exposure of your photos Taking continuous camera shots Using HDR Taking a panoramic selfie Taking a panoramic selfie Taking a panoramic photo Using Zoe camera Recording a Hyperlapse video Choosing a scene Manually adjusting camera settings Taking a RAW photo How does the Camera app capture RAW photos?	65 66 67 68 69 70 71 72 72 72 74 75 75 75 76 76 77
Camera screen Choosing a capture mode Taking a photo Tips for capturing better photos Recording video Selfies Quickly adjusting the exposure of your photos Taking continuous camera shots Using HDR Taking a panoramic selfie Taking a super wide-angle panoramic selfie Taking a panoramic photo Using Zoe camera Recording a Hyperlapse video Choosing a scene Manually adjusting camera settings Taking a RAW photo How does the Camera app capture RAW photos? Google Photos What you can do on Google Photos	65 66 67 68 69 70 71 72 72 74 75 75 75 76 76 77
Camera screen Choosing a capture mode Taking a photo Tips for capturing better photos Recording video Selfies Quickly adjusting the exposure of your photos Taking continuous camera shots Using HDR Taking a panoramic selfie Taking a super wide-angle panoramic selfie Taking a panoramic photo Using Zoe camera Recording a Hyperlapse video Choosing a scene Manually adjusting camera settings Taking a RAW photo How does the Camera app capture RAW photos? Google Photos What you can do on Google Photos Viewing photos and videos	65 66 67 68 69 70 71 72 72 74 75 75 75 76 76 76 77
Camera screen Choosing a capture mode Taking a photo Tips for capturing better photos Recording video Selfies Quickly adjusting the exposure of your photos Taking continuous camera shots Using HDR Taking a panoramic selfie Taking a panoramic selfie Taking a panoramic photo Using Zoe camera Recording a Hyperlapse video Choosing a scene Manually adjusting camera settings Taking a RAW photo How does the Camera app capture RAW photos? Google Photos What you can do on Google Photos Viewing photos and videos Editing your photos	65 66 67 68 69 70 71 72 72 74 75 75 75 76 76 77 77

Power and storage management	
Tips for extending battery life	81
Using power saver mode	83
Extreme power saving mode	83
Displaying the battery percentage	83
Checking battery usage	83
Checking battery history	84
Battery optimization for apps	84
Freeing up storage space	85
Types of storage	85
Should I use the storage card as removable or internal storage?	86
Setting up your storage card as internal storage	87
Moving apps and data between the phone storage and storage card	87
Moving an app to the storage card	88
Copying files between the phone storage and storage card	88
Copying files between HTC Desire 10 pro and your computer	89
Unmounting the storage card	90
Boost+	90
Sync, backup, and reset	
Adding your social networks, email accounts, and more	94
Syncing your accounts	94
Removing an account	95
Ways of backing up files, data, and settings	95
Using Android Backup Service	96
Backing up contacts and messages	97
HTC Sync Manager	99
Restarting HTC Desire 10 pro (Soft reset)	101
Resetting network settings	101
Resetting HTC Desire 10 pro (Hard reset)	101
HTC BlinkFeed	
What is HTC BlinkFeed?	103
Turning HTC BlinkFeed on or off	104
Restaurant recommendations	104
Ways of adding content on HTC BlinkFeed	105
Customizing the Highlights feed	106
Playing videos on HTC BlinkFeed	106
Posting to your social networks Removing content from HTC BlinkFeed	107 107
nemoving content from 1110 binkr-eed	107
Phone calls	
Placing and receiving calls	108
Emergency call	110
What can I do during a call?	110
Setting up a conference call (GSM)	111
Setting up a three-way call (CDMA)	112
Call History	112
Switching between silent, vibrate, and normal modes	113
Home dialing	113

Messages	
Sending a text message (SMS)	114
Sending a multimedia message (MMS)	114
Sending a group message	115
Resuming a draft message	115
Replying to a message	116
Forwarding a message	116
Moving messages to the secure box	116
Blocking unwanted messages	117
Copying a text message to the nano SIM/UIM card	117
Deleting messages and conversations	118
People	
Your contacts list	119
Setting up your profile	120
Adding a new contact	120
Editing a contact's information	121
Getting in touch with a contact	121
Importing or copying contacts	122
Merging contact information	123
Sending contact information	123
Contact groups	124
Private contacts	125
Email	
Checking your mail	126
Sending an email message	127
Reading and replying to an email message	127
Managing email messages	128
Searching email messages	128
Working with Exchange ActiveSync email	129
Adding an email account	130
What is Smart Sync?	130
Other apps	
Using the Clock	131
Checking Weather	132
Recording voice clips	132
Listening to FM Radio	132
Internet connections	
	104
Turning the data connection on or off Managing your data usage	134 134
Managing your data usage Wi-Fi connection	134
Connecting to VPN	136
Using HTC Desire 10 pro as a Wi-Fi hotspot	137
Sharing your phone's Internet connection by USB tethering	139

Wireless sharing	
Connecting to wireless speakers or TV	140
Turning Bluetooth on or off	143
Connecting a Bluetooth headset	143
Unpairing from a Bluetooth device	144
Receiving files using Bluetooth	144
Settings and security	
HTC BoomSound profile	146
Turning location services on or off	146
Do not disturb mode	146
Touch sounds and vibration	148
Setting when to turn off the screen	149
Changing the display language	149
Airplane mode	149
Screen brightness	149
Automatic screen rotation	150
Installing a digital certificate	150
App settings	151
Assigning a PIN to a nano SIM/UIM card	152
Accessibility	152
Trademarks and copyrights	
Index	

About this guide

In this user guide, we use the following symbols to indicate useful and important information:



This is a note. A note often gives additional information, such as what happens when you choose to do or not to do a certain action. A note also provides information that may only be applicable to some situations.



This is a tip. A tip gives you an alternative way to do a particular step or procedure, or lets you know of an option that you may find helpful.



This indicates important information that you need in order to accomplish a certain task or to get a feature to work properly.



This provides safety precaution information, that is, information that you need to be careful about to prevent potential problems.

Some apps may not be available in all regions or with your mobile operator.

Important note on recoverable data

Files and other data that have been deleted, cleared, removed, or erased from your device may still be recoverable by third-party data recovery software. Even a factory reset may not permanently erase all data from your mobile device, including personal information.


Features you'll enjoy

What's special with Camera

Enjoy taking great camera shots on HTC Desire 10 pro. The Camera app has a simple interface, neatly organized to make it faster for you to switch modes and change your settings.

Lean and clean camera interface

The camera interface groups related capture modes together—such as photo capture modes—so that you can quickly find the mode you want, and puts modes and their settings side by side for easy access.

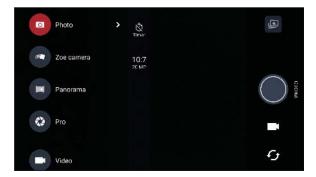

Without having to open the slideout menu, you can easily switch back to Photo or Video mode from other modes by tapping or below the shutter button. You can also just tap 5 to quickly switch between the front and main camera.

See Taking photos and videos on page 65.

Two ways to adjust exposure



Tap the screen, and then drag your finger up or down to manually adjust the exposure. Or turn on the **Touch autoexposure** option in the camera settings so you can simply tap the screen to automatically set the exposure.

See Quickly adjusting the exposure of your photos on page 71.

Selfies

- Live Makeup Before taking your selfie, use Live Makeup to smoothen your skin. See
 Applying skin touch-ups with Live Makeup on page 70.
- Instant selfie shots Flash a smile, and the camera instantly captures your smiling face. Or, just say "Cheese!" See Taking selfies automatically on page 70 and Taking selfies with voice commands on page 70.
- Enjoy taking wide-angle selfies with family or friends and with a panoramic scenery behind you. See Taking a panoramic selfie on page 72.

Pro level capabilities

Pro mode gives you professional level control over your photography. Capture RAW photos and take full control over your camera settings. See Taking a RAW photo on page 77 and Manually adjusting camera settings on page 76.

The camera captures RAW photos in DNG format. The RAW file provides more image information for post processing in the Google Photos $^{\text{TM}}$ app or a graphics program on your computer.

Hyperlapse

Hyperlapse lets you speed up the action up to 12 times, and select sections of the video to change its speed. See Recording a Hyperlapse video on page 75.

The best from HTC and Google Photos


To give you the best experience from HTC and Google® apps yet still provide optimal storage out of the box, HTC is starting to minimize preloading duplicate apps. By focusing on the best, HTC Desire 10 pro gives you an even better imaging experience through the HTC Camera app and Google Photos.

With Google Photos, manage your photos and videos, back them up to your cloud storage, and enjoy all of its cool features. For details, see What you can do on Google Photos on page 78.

What's different with the onscreen keyboard

HTC is using TouchPal as the onscreen keyboard for HTC Desire 10 pro due to its popularity and extensive features.

Here are some of the features you'll enjoy with the TouchPal keyboard:

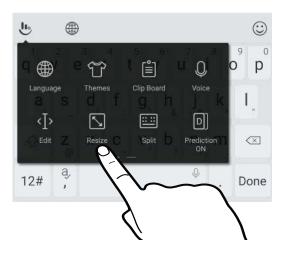

- Download keyboard themes to personalize the keyboard background.
- Choose from a variety of emoji art to add fun to your messages and social updates.
- Back up and sync your personal dictionaries as well as input patterns and data to TouchPal Cloud.
- Keyboard is resizable. You can also reposition the keyboard.
- When you're typing in landscape, you can split the keyboard so it's easier and faster for you to type with just your thumbs.



To learn the basics of using the keyboard, see Entering text on page 50.

Sound

Plug in headphones and discover audio bliss on HTC Desire 10 pro. Easily connect wireless speakers to your phone.

HTC BoomSound

Hear what you've been missing. HTC BoomSound $^{\text{TM}}$ gives you a rich, authentic sound experience, whether you're listening to music, watching a video, or playing a game. See HTC BoomSound profile on page 146.

HTC Connect

Simply swipe up the screen with three fingers to stream music or video from HTC Desire 10 pro to your speakers or TV. Control the volume and playback with your phone! You can even enjoy your favorite music on multiple speakers. See What is HTC Connect? on page 140.

Truly personal

Designed with you in mind, HTC Desire 10 pro is filled with innovations that help it to adapt to your life.

Themes

Make HTC Desire 10 pro more personal by customizing how it looks with your own photos and then mix and match with different sets of icons, sounds, color schemes, and more.



More wallpaper types, such as Multiple wallpapers and Apps screen wallpapers, are also in store! See What is HTC Themes? on page 54 for more details.

Freestyle home screen

If you want to take designing your Home screen to the next level, try the Freestyle home screen layout for zero-grid limitations and fun stickers to replace your app icons.




The HTC Sense Home widget



The HTC Sense[™] Home widget adapts to your needs at home, at work, and on the go. See What is the HTC Sense Home widget? on page 43.

HTC BlinkFeed

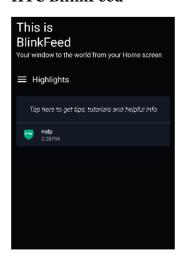

Get your favorite topics, news, social media, and more conveniently delivered to one place on your phone. Even get suggestions for places to eat! You can also play embedded videos right on HTC BlinkFeed™. See What is HTC BlinkFeed? on page 103.

Boost+

Use the Boost+ app to help you optimize your phone's performance by allocating resources, removing junk files, stopping irregular app activities, and uninstalling the apps you don't use.

You can also set this app to help extend battery life while you're playing your favorite game on HTC Desire 10 pro.

See About Boost+ on page 90.

Android 6.0 Marshmallow

Android[™] 6.0 Marshmallow brings new features that make your mobile life more convenient.

Manage phone memory

Use Memory in **Settings** to monitor the average memory use and performance of HTC Desire 10 pro. You can also use this setting to check which apps use the most memory.

Major change to how you use storage cards

If you have an existing storage card with media and other files, use it as removable storage so you can insert the card and access your files on any Android phone.

If you have a brand new storage card, you can use the card to expand the internal storage. See Should I use the storage card as removable or internal storage? on page 86 and Setting up your storage card as internal storage on page 87.

Network settings reset

Quickly reset all network settings when HTC Desire 10 pro has a hard time connecting to the mobile data or Wi-Fi[®] network or Bluetooth[®] device. See Resetting network settings on page 101.

Google settings

Easily manage settings for Google apps and features on HTC Desire 10 pro. Tap **Google** in Settings and change your preferences.

Smarter app linking

Android 6.0 Marshmallow automatically opens the correct app for links that you tap in a text or email message or website. With smarter app linking, there's no more guessing which app can handle the links you tap.

In Settings, you can change the default apps to link to. For details, see Setting default apps on page 151 and Setting up app links on page 151.

App permissions

To help protect your phone and privacy, Android 6.0 Marshmallow has improved the way apps are given access to certain data or features, such as contacts or the microphone. For details, see Controlling app permissions on page 151.

Software and app updates

On HTC Desire 10 pro, get software updates for the latest performance enhancements, bug fixes, and security improvements as soon as they're available.

Also download and install the latest updates of HTC and other apps from Google $Play^{TM}$ to enjoy the new and improved features. Some HTC apps that are not preloaded in certain phones can also be downloaded from Google Play.



The information in this guide may not be most up-to-date if there are more recent software or app updates available.


Unboxing

HTC Desire 10 pro overview

After taking HTC Desire 10 pro out of the box, familiarize yourself first with the location of the card slots and the different button controls.



Dual SIM card support varies by phone model, region, and country.

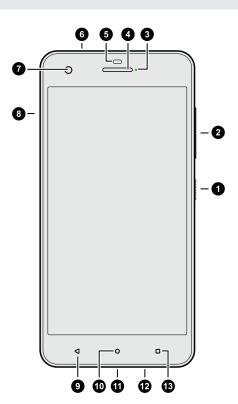

- 1. POWER
- 2. VOLUME buttons
- 3. Notification LED
- Earpiece
- Proximity sensor
- 3.5mm headset jack
- Front camera
- Card slots and eject hole
- 9. BACK
- **10.** HOME
- 11. USB connector
- 12. Speaker
- 13. RECENT APPS




Wou need a 4G/LTE™ plan to use your operator's 4G/LTE network for voice calls and data services. Check with your operator for details.



- If you want to use a case or screen protector, don't cover and block the proximity sensor.
 Purchase a case or screen protector designed for HTC Desire 10 pro.
- Avoid liquid or dust from entering the microphone hole to prevent damage to the microphone.
- Avoid connecting third-party headsets or accessories with metallic charms that dangle near the headset jack. Using these may affect signal reception.
- Don't disassemble any part of the phone. Don't try to open the phone or remove the battery by force. This may damage the phone or its electronics and will invalidate the warranty.


Back panel

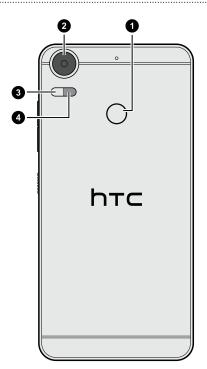

- 1. Fingerprint scanner
- 2. Main camera
- 3. Flash
- 4. Laser autofocus sensor

Slots with card trays

 
When inserting the eject tool into the tray eject hole to remove the card tray, make sure not to press on the tray to avoid damaging the eject mechanism inside the slot.



Also, if you want to use a protective case, make sure to buy a case that's designed for HTC Desire 10 pro and that doesn't block the tray.


nano SIM/UIM card

On HTC Desire 10 pro, use a standard nano SIM/UIM card. Inserting a modified card that is thicker than the standard nano SIM/UIM card may cause the card to not fit properly or damage the card slot.

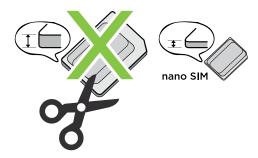

Inserting the nano SIM/UIM card


- 1. Hold the phone face up.
- **2.** Insert the tip of the tray eject tool that came with your phone—or a small bent paperclip—into the tray eject hole.

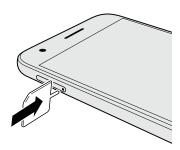

3. Push the tip all the way into the hole until the tray ejects, and then pull the tray out.


4. Do the following to place your nano SIM/UIM card into the tray:

With the gold contacts facing down, place your nano SIM/UIM cards into the SIM 1 and SIM 2 holders of the tray. Make sure to align the cutoff corners to the notches on the holders.

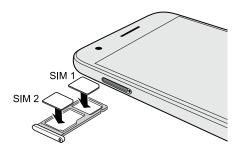



- By default, SIM 1 will connect to the 4G LTE/3G network, and SIM 2 will connect to 3G/2G. To
 find out how to set the preferred card for connecting to 4G LTE, see Managing your
 nano SIM/UIM cards with Dual network manager on page 23.
- SIM 2 and SD are labeled on the same holder in the tray. Either place your second nano SIM/UIM card or a microSD[™] card into this holder. Both cards can't be inserted at the same time.
- 5. When reinserting the tray, make sure it is facing up so that your cards don't fall out. Slide the tray all the way into the slot.

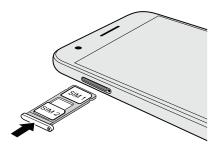


6. Press on the cover that's attached to the tray to close it tightly.

Removing the nano SIM/UIM card



Make sure to switch off HTC Desire 10 pro before removing the card.

- 1. Hold the phone face up.
- 2. Insert the tip of the tray eject tool or a small bent paperclip into the tray eject hole.

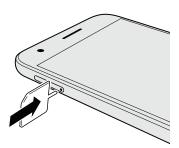

- 3. Push the tip all the way into the hole until the card tray ejects.
- 4. Pull the tray out, and then remove the nano SIM/UIM card.
- 5. To reinsert the tray, center it first in the slot, and then slide it all the way in.
- **6.** Press on the cover that's attached to the tray to close it tightly.

Storage card


Use a storage card to store your photos, videos, and music. When you need to free up phone storage space, you can also move certain apps to the storage card, if the apps support this feature.



The storage card is optional and sold separately.


Inserting the microSD card


- 1. Hold the phone face up.
- **2.** Insert the tip of the tray eject tool that came with your phone—or a small bent paperclip—into the tray eject hole.

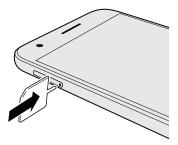


3. Push the tip all the way into the hole until the tray ejects, and then pull the tray out.

  SIM 2 and SD are labeled on the same holder in the tray. Remove your second nano SIM/UIM card when you want to use your microSD card. Both cards can't be inserted at the same time.






4. Place your microSD card—gold contacts facing down and narrow side facing in—into the SD holder of the tray.

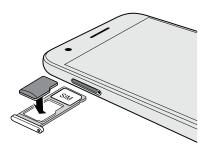

5. When reinserting the tray, make sure it is facing up so that the nano SIM/UIM and microSD cards don't fall out. Gently slide the tray all the way into the slot.

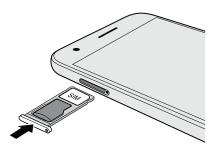

6. Press on the cover that's attached to the tray to close it tightly.

If it's the first time you insert a microSD card, you'll be prompted to set it up.

Unmounting the storage card

When you need to remove the storage card while HTC Desire 10 pro is on, unmount the storage card first to prevent corrupting or damaging the files in the storage card.



If your storage card is used as internal storage and there are apps that were moved to the card, you will not be able to open these apps after unmounting the card.


- 1. From the Home screen, tap > Settings > Storage.
- **2.** Do one of the following:
 - If your storage card appears under Removable storage, tap ❖ > Eject next to the card name.
 - If your storage card appears under Internal storage, tap the card name, and then tap Eject.

Removing the microSD card



Make sure to unmount your microSD card before removing it. See Unmounting the storage card on page 21.

- 1. Hold the phone face up.
- 2. Insert the tip of the tray eject tool that came with your phone—or a small bent paperclip—into the tray eject hole.

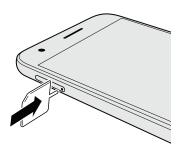

- 3. Push the tip all the way into the hole until the tray ejects.
- **4.** Pull the tray out, and remove the microSD card.


After removing the microSD card, make sure that you insert the empty tray back into the slot.

Charging the battery

Before you turn on and start using HTC Desire 10 pro, it is recommended that you charge the battery.



- If the battery has been discharged for several days, you may need to charge HTC Desire 10 pro for several minutes before powering it on.
- Use only the adapter and the USB cable that came with HTC Desire 10 pro to charge the battery. When the battery power is too low, make sure to use the power adapter to charge, not the USB cable connection with your computer.
- 1. Insert the small end of the USB cable into the USB connector.

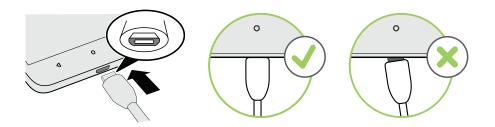

- 2. Insert the other end of the USB cable into the power adapter.
- 3. Plug in the power adapter to an electrical outlet to start charging the battery.



- As a safety precaution, the battery may stop charging to avoid overheating.
- Avoid charging the battery in hot environments.
- When you're using the web browser and charging the battery, HTC Desire 10 pro may become warmer. This is normal.
- To conserve energy, unplug the power adapter from the electrical outlet after you finish charging.

Switching the power on or off

Switching the power on

Press the POWER button until HTC Desire 10 pro vibrates.



When you turn on HTC Desire 10 pro for the first time, you'll need to set it up.

Switching the power off

- 1. If the display is off, press the POWER button to turn it back on.
- 2. Press and hold the POWER button for a few seconds.
- 3. Tap Power off on the options menu.

Choosing which nano SIM/UIM card to connect to the 4G LTE network

When you have two nano SIM/UIM cards inserted on your phone, only one card can connect to the faster 4G LTE network. The other card will connect to the 3G/2G network.

You can set which card you want to connect to the 4G LTE network.

- 1. From the Home screen, tap ::: > Settings > Dual network manager.
- 2. Tap Preferred data network.
- 3. Choose the card you want to connect to the 4G LTE network.

Managing your nano SIM/UIM cards with Dual network manager

From the Home screen, tap ::: > Settings > Dual network manager. You can turn either slot on or off, change the slot names, and more.

Phone setup and transfer

Setting up HTC Desire 10 pro for the first time

When you switch on HTC Desire 10 pro for the first time—or after you've done a factory reset—you'll be asked to set it up.



You can enable TalkBack to navigate by voice feedback before selecting the language. Press and hold two fingers on the screen until you hear a message saying that accessibility mode is enabled.

Walk through the on-device setup to choose your Internet connection, sign in to your Google Account, set up device protection for HTC Desire 10 pro, and more.

Use Android Backup Service if you've used it to back up your old phone before. On the screen that asks you which device to restore from, tap the name of your old phone model. Tap \checkmark to choose the type of items you want to restore, and then tap **Restore** to proceed.

Otherwise, tap Don't restore.



Some features that need to connect to the Internet such as location-based services and auto-sync of your online accounts may incur extra data fees. To avoid incurring data fees, disable these features under Settings. For more information on location services, see Turning location services on or off on page 146.

Restoring from your previous HTC phone

If you were using HTC Backup on your previous HTC phone, you need to download and use the HTC Restore app on HTC Desire 10 pro to restore your backup.



Depending on the amount of content, restoring a backup to HTC Desire 10 pro through your data connection may incur additional data costs and take a long time. Using a Wi-Fi connection is recommended.

- 1. After you've finished setting up HTC Desire 10 pro, slide the Notifications panel open, and then tap the **Transfer or restore your content** notification.
- 2. Tap Restore from HTC backup.

If the HTC Restore app is not installed on the phone, you'll be prompted to download and install HTC Restore.

- 3. Tap Restore from HTC backup.
- 4. Sign in with the account you used to back up your old phone.

- 5. Choose the backup to restore to HTC Desire 10 pro.
- **6.** If prompted, choose whether to use a mobile data or Wi-Fi connection for restoring your backup.
- 7. Follow the onscreen instructions to restore your backup.
- **8.** Slide open the Notifications panel to check if there's any notification to finish restoring your backup.

Free apps from Google Play will be restored in the background, and you can track the progress via a notification in the status bar. To restore paid apps, you need to download and install them from Google Play.

Your apps will appear on the Apps screen as they are installed. The Apps and Home screen shortcuts will be reorganized as in your backup after all of your apps have been installed. You can continue using HTC Desire 10 pro while apps are being restored.

Transferring content from an Android phone

On your old Android phone, download the HTC Transfer Tool and use it to transfer your content to HTC Desire $10 \, \mathrm{pro}$.

The types of locally stored content on your old phone that the HTC Transfer Tool can transfer include contacts, messages, music, photos, videos, and some settings. More types of data such as call histories, email accounts, and some HTC app settings can be transferred from HTC phones that have HTC Sense 5.5 or higher.



You need Android version 2.2 or later to use the HTC Transfer Tool on your old phone.

- 1. From the Home screen, tap ::: > Settings > Get content from another phone.
- 2. Choose whether to transfer from an HTC Android phone or other Android phone.
- 3. On the Get content from another phone screen, tap Next.
- **4.** Follow the steps shown on HTC Desire 10 pro to download the HTC Transfer Tool from Google Play to your old phone, install it, and open the tool.
- 5. When you see a PIN on your old phone, make sure the same PIN also appears on HTC Desire 10 pro before you continue.
 - If the PIN code doesn't appear, tap **Retry** on your old phone. If it still won't appear, this may mean that your old phone is unable to connect to HTC Desire 10 pro. When this happens, try another transfer method.
- **6.** Tap **Confirm** on your old phone.
- 7. On your old phone, choose the types of content you want to transfer, tap **Transfer**, and then tap **Yes**.
- **8.** Wait for the transfer to finish.
- 9. Tap **Done** on both phones.

Ways of transferring content from an iPhone

If you have an iPhone, there are easy ways to transfer your contacts, messages, and other content to HTC Desire 10 pro.

- Back up and restore iPhone content through iCloud. To find out how, see Transferring iPhone content through iCloud on page 26.
- Back up iPhone content using iTunes on your computer, and then use HTC Sync Manager to transfer the content to HTC Desire 10 pro. For details, see Transferring iPhone content to your HTC phone on page 100.

Transferring iPhone content through iCloud

If you have an iCloud account, sync iPhone content to your iCloud storage, and then transfer content such as contacts or photos to HTC Desire 10 pro.

- 1. From the Home screen, tap ::: > Settings > Get content from another phone.
- 2. Tap iPhone > Import from iCloud backup.
- 3. Follow the steps shown onscreen to back up your iPhone content to your iCloud storage.
- 4. Enter your iCloud email address and password, and then tap Sign in.
- 5. Choose the iPhone backup that you want to transfer to HTC Desire 10 pro, and then tap Next.
- **6.** Choose the types of content you want to transfer, and then tap **Import**.
- 7. Wait for the transfer to finish, and then tap **Done**.



Only some contact details can be transferred, such as the contact name, photo, postal address, email address, birthdate, anniversary date, and notes.

Other ways of getting contacts and other content

There are different ways you can individually add contacts and other content to HTC Desire 10 pro.

Source of content	How to transfer
Sync with your computer	Use HTC Sync Manager to sync contacts, documents, playlists, and more between HTC Desire 10 pro and your computer running a Windows $^{\circ}$ or OS X operating system.
	You can also use it to transfer your iTunes backup that contains contacts, messages, and other content from an iPhone from your computer to HTC Desire 10 pro.
Google Account	Google contacts are imported to HTC Desire 10 pro after you sign in to your Google Account. You can also create more Google contacts right from HTC Desire 10 pro.

Source of content	How to transfer
Social network accounts	Log in to your favorite social networks to sync contact information from them.
Microsoft® Exchange ActiveSync®	HTC Desire 10 pro syncs your work contacts from the Microsoft Exchange ActiveSync Server in your workplace.
Outlook.com account	Sync personal contacts from your Microsoft Outlook.com account.
Phone contacts	You can create contacts locally on HTC Desire 10 pro, if you don't prefer to store them on your online accounts.
nano SIM/UIM card	Copy all your nano SIM/UIM contacts to HTC Desire 10 pro.

Transferring photos, videos, and music between your phone and computer

Here are ways you can transfer your media from or to your computer.

- Connect HTC Desire 10 pro to your computer. Your computer will recognize it just like any
 removable USB drive, and you can copy your media between them. See Copying files between
 HTC Desire 10 pro and your computer on page 89.
- Download and use the HTC Sync Manager software on your computer. You can set it up to automatically get music, photos, and videos off HTC Desire 10 pro to your computer. You can also sync playlists from your computer to the phone.
 - If you have an iPhone, you can also connect it and transfer camera roll photos to your computer using HTC Sync Manager. Then reconnect HTC Desire 10 pro and copy them over. See About HTC Sync Manager on page 99.
- Use cloud storage services to put your media in one place so you can manage them anywhere
 —on your computer, HTC Desire 10 pro, and other mobile devices.

Using Quick Settings

In the Quick Settings panel, easily turn settings such as Wi-Fi and Bluetooth on or off.

- 1. Do any of the following:
 - With two fingers, swipe down from the status bar.

 


- Swipe down twice from the status bar.
- 2. To turn a setting on or off, just tap its tile.
- 3. If there are available options for a setting, tap ▼ to choose from the options.

Getting to know your settings

Want to change the ringtone, set up a Wi-Fi connection, or add your accounts? Do this and more in Settings.

- 1. Open Settings from the Apps screen, Notifications panel, or Quick Settings panel.
 - From the Home screen, tap to switch to the Apps screen, and then tap Settings.
 - Swipe down from the top of the screen to open the Notifications panel, and then tap .



- 2. Here are some of the basic settings you can change:
 - Tap the **On/Off** switch next to an item such as Wi-Fi to turn it on or off. Tap the item itself to configure its settings.
 - Tap Sound & notification to set a ringtone, choose a sound profile, and configure notification settings.
 - Tap Personalize to change the wallpaper, add apps and widgets to the Home screen, and more.
 - Tap Accounts & sync to add and sign in to your different accounts, such as email, social networks, and more.
 - Tap **Security** to help secure HTC Desire 10 pro, for example with a screen lock.



Tap **Q** in Settings to quickly find options and settings.

Lock screen

Setting a screen lock

Help protect your personal information and help prevent others from using HTC Desire 10 pro without your permission.

Choose to set a screen lock pattern, numeric PIN, or other means of locking your phone. You'll be asked to unlock the screen every time HTC Desire 10 pro is turned on or when it's idle for a certain period of time.

- 1. From the Home screen, tap ::: > Settings > Security.
- 2. Tap Screen lock.
- 3. Select a screen lock option and set up the screen lock.
- 4. Tap Automatically lock phone, then specify the idle time before the screen is locked.



You can also clear **Make pattern visible** or **Make passwords visible** if you don't want your screen lock to display as you enter it onscreen.

Setting up Smart Lock

Set up your phone to detect your face or another trusted device before you can unlock the screen.

- 1. From the Home screen, tap ::: > Settings > Security.
- 2. Tap Screen lock, and then select and set up a screen lock.

This will be your backup screen lock method.

- 3. On the Security screen, tap Smart Lock.
- 4. Confirm your screen lock.
- 5. Choose what you want your phone to detect before it unlocks.
- **6.** Follow the onscreen instructions, and then press \triangleleft to return to the Security screen.
- 7. Tap Automatically lock phone, and then specify the idle time before the screen is locked.

To help make Smart Lock more reliable and more secure, you can train HTC Desire 10 pro to recognize your face in different situations, such as when you're wearing glasses or sporting a beard.

Tap **Smart Lock**, confirm your screen lock, then tap **Trusted face** > **Improve face matching**. Follow the onscreen instructions.

Turning lock screen notifications on or off

You can choose to turn lock screen notifications on or off.

- 1. From the Home screen, tap ::: > Settings > Sound & notification.
- 2. Tap When device is locked > Don't show notifications at all.



If you change your mind later, you can tap **Show all notification content** to turn lock screen notifications on.

Interacting with lock screen notifications

Besides seeing notifications on the lock screen, you can also interact with them.

- Tap twice on a notification to go directly to the related app.
- Swipe left or right on the notification to remove it.
- Press and hold a notification to see more related information.
- Tap (i) to prioritize notifications from the related app.

Changing lock screen shortcuts

To change apps (or other shortcuts) on the lock screen, change the ones on the launch bar. To find out how, see Launch bar on page 60.

Turning the lock screen off

Rather not have to unlock your phone every time you wake it up? You can turn the lock screen off in Settings.

- 1. From the Home screen, tap ::: > Settings > Security.
- 2. Tap Screen lock > None.

To turn the lock screen on again, in Security settings, tap Screen lock > Swipe.

Fingerprint scanner

You can quickly wake up and unlock the HTC Desire 10 pro using your fingerprint. You can add up to 5 fingerprints.

When setting up and using the fingerprint scanner, follow these tips:

- Make sure your finger and the fingerprint scanner are dry and clean.
- Use the entire pad of your finger, including the sides and tip.
- When recording your fingerprint, touch the scanner until it vibrates.
- The fingerprint scanner has 360° readability—you can touch a recorded finger at any angle to the scanner to turn on the screen or unlock the HTC Desire 10 pro.



You may not be able to set the fingerprint scanner to unlock HTC Desire 10 pro, if you've signed in to an Exchange ActiveSync account that requires you to set a different screen lock option (such as password). Check with your Exchange Server administrator if your Exchange ActiveSync account supports the fingerprint scanner.

Adding a fingerprint the first time

- 1. From the Home screen, tap :::, and then tap Settings > Fingerprint scanner.
- 2. Tap Add fingerprint.

If you haven't already set up a lock screen pattern, PIN, or password, you'll be asked to set one up. See Setting a screen lock on page 29.

- 3. Tap Start.
- **4.** Choose which finger or thumb to use, touch the scanner until it vibrates, then lift your finger or thumb.
- **5.** Repeatedly touch the scanner until the fingerprint has been successfully recorded. You'll get the best results if you hold your finger in the same direction when touching the scanner.
- **6.** After you've successfully recorded your fingerprint, tap **Done**.

You can now use your fingerprint to wake up and unlock your HTC Desire 10 pro.

You'll need to input your backup lock screen pattern, PIN, or password if the scanner doesn't identify your fingerprint after five attempts. You'll only have 10 additional attempts before your data is deleted from the HTC Desire 10 pro.

Adding, removing, or editing fingerprints

- 1. From the Home screen, tap :::, and then tap Settings > Fingerprint scanner.
- 2. Enter your pattern, PIN, or password.
- 3. Do any of the following:
 - Tap **Add fingerprint** to add another fingerprint.
 - Tap a recorded fingerprint to rename or delete it.
 - Tap **Reset fingerprint scanner** to delete all recorded fingerprints.
 - Select **Wake up screen** if you want to be able to tap the fingerprint scanner to wake up and unlock the screen.

Updating your phone's software

HTC Desire 10 pro can check and notify you if there's a new update available.

Updates for some HTC apps and features, such as HTC Sense Home, may be downloaded and installed from Google Play. See Installing app updates from Google Play on page 32 for details.

Checking your system software version

Before installing a system software update, you can check first what Android version you have on your phone.

- 1. From the Home screen, tap ::: > Settings > About.
- 2. Tap Software information.

Enabling automatic updates

You can choose to automatically download and install software updates for HTC or mobile operator apps.

- 1. From the Home screen, tap ..., and then find and tap Settings.
- 2. Tap About > Software updates.

- 3. To save on data usage, you can choose to update through Wi-Fi only.
- 4. Choose whether to auto-download system updates, app updates, or both.

App updates are installed automatically. You'll still need to confirm when to install system software updates.

Installing a software update

When HTC Desire 10 pro is connected to the Internet and there's a new software update available, the update notification icon 🗓 appears in the status bar.

- 1. Slide the Notifications panel open, and then tap the system update notification.
- 2. If you don't want to download the update using your data connection, select **Update over** Wi-Fi only.
- 3. Tap Download.
- 4. When download is complete, select Install now, and then tap OK.

After updating, HTC Desire 10 pro will restart.

Installing an application update

When Internet connection is on and there's an available update for your HTC or mobile operator apps, the update notification icon **4** appears in the status bar.

- $\textbf{1.} \quad \textbf{Slide the Notifications panel open, and then tap the update notification.}$
 - The Updates screen opens with the list of application updates to be installed.
- **2.** Tap an item to view its details, and then tap \triangleleft .
- **3.** When you're done reviewing the updates, tap **Install**. You'll be asked to restart HTC Desire 10 pro if needed.

Installing app updates from Google Play

Some HTC apps and third-party apps get updated with improvements and bug fixes through Google Play. You can manually update apps or set your phone to automatically download and install app updates when available.

- 1. From the Home screen, tap ..., and then find and tap Play Store.
- 2. Tap \equiv to open the slideout menu.
- 3. Tap My apps & games.

You'll see a list of apps installed on your phone.

- 4. Under Updates, tap an app.
- 5. Tap Update.
- **6.** If prompted, tap **Accept**.



In Play Store, tap **\equiv** > **Settings** > **Auto-update apps** to choose how you want Google Play to update your apps.

Checking for updates manually



Turn on mobile data or connect HTC Desire 10 pro to a Wi-Fi network before you check for updates.

- 1. From the Home screen, tap :::, and then find and tap Settings.
- 2. Tap About > Software updates. HTC Desire 10 pro checks if updates are available.

Getting apps from Google Play

Google Play is the place to go to find new apps for HTC Desire 10 pro. Choose from a wide variety of free and paid apps ranging from productivity apps, entertainment, to games.



- You need a Google Wallet[™] account to buy paid apps or to make in-app purchases. If you already
 have a Google Account, just add Google Wallet by signing in with your existing username and
 password at wallet.google.com.
- The name of the Play Store app may differ depending on your region.
- The ability to purchase apps varies by region.

Finding and installing an app

When you install apps and use them on HTC Desire 10 pro, they may require access to your personal information or access to certain functions or settings. Download and install only apps that you trust.



Be cautious when downloading apps that have access to functions or a significant amount of your data on HTC Desire 10 pro. You're responsible for the results of using downloaded apps.

- 1. From the Home screen, tap :::, and then find and tap Play Store.
- 2. Browse or search for an app.
- 3. When you find the app that you like, tap it and read its description and user reviews.
- **4.** To download or purchase the app, tap **Install** (for free apps) or the price button (for paid apps).
- 5. Tap Accept.



Apps sometimes get updated with improvements or bug fixes. To automatically download updates, after installing the app, tap * > Auto-update.

To open the app, go to the Apps screen and tap the app.

Restoring apps from Google Play

Upgraded to a new phone, replaced a lost one, or performed a factory reset? Restore apps that you previously downloaded.

- 1. From the Home screen, tap :::, and then find and tap Play Store.
- 2. Tap \equiv to open the slideout menu.
- 3. Tap My apps & games, swipe to the All tab, and then tap the app you want to restore.
- 4. Install the app.

For more details, refer to the Google Play help.

Downloading apps from the web

You can download apps directly from websites.



Apps downloaded from websites can be from unknown sources. To help protect HTC Desire 10 pro and your personal data, we strongly recommend that you only download from websites you trust.

- 1. Open the browser, and then go to the website where you can download the app you want.
- 2. If prompted, change the security settings to allow installation from "Unknown sources".
- **3.** Follow the website's download instructions for the app.
- 4. After installing the app, make sure to go back to **Settings** > **Security** and clear the **Unknown** sources option.

Uninstalling an app

If you no longer need an app that you've downloaded and installed, you can uninstall it.



Most of the preloaded apps cannot be uninstalled.

From the Apps screen, press and hold the app you want to remove, and then drag it to Uninstall.



If you purchased an app in Play Store, you can uninstall it for a refund within a limited time. To know more about the refund policy for paid apps, refer to the Google Play help.

Your first week with your new phone

HTC Sense Home

After you've turned on and set up HTC Desire 10 pro for the first time, you'll see the Home screen.

- Swipe right and you'll find HTC BlinkFeed. You can customize HTC BlinkFeed to show posts
 from your social networks, headlines from your favorite news media, and more. For details,
 see What is HTC BlinkFeed? on page 103.
- Swipe left and you'll discover space for adding your favorite widgets, apps, and more so they're just a tap away. You can also add panels. For details, see Adding or removing a widget panel on page 59.
- You can change the apps on the launch bar at the bottom of the Home screen. See Launch bar on page 60.



While you're in another screen or app, press \mathbf{O} to return to the last Home screen you visited.

Sleep mode

Sleep mode saves battery power by putting HTC Desire 10 pro into a low power state while the display is off. It also stops accidental button presses when HTC Desire 10 pro is in your bag.

Switching to Sleep mode

To turn off the display and switch to Sleep mode, briefly press the POWER button. You can also double-tap the lock screen.

HTC Desire 10 pro also automatically goes into Sleep mode when it's left idle for a while. You can change the time before HTC Desire 10 pro sleeps by setting the screen timeout. For details, see Setting when to turn off the screen on page 149.

Waking up from Sleep mode

- Press the POWER button.
- Use Motion Launch[™] to wake up and unlock your phone directly to an app or screen. See Motion Launch on page 47.

Unlocking the screen

- Press and hold the fingerprint sensor.
- Swipe up to unlock the screen.

If you've set up a screen lock, you'll be asked to provide your credentials before HTC Desire 10 pro unlocks.




If you've set an event reminder or an alarm, you can snooze or dismiss the event or alarm right from the lock screen. Just drag \bigcirc or \times up.

Motion gestures

Use motion gestures to mute HTC Desire 10 pro, lower the ring volume, and more.

Flip to mute



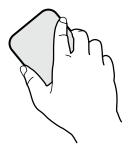

If your phone is facing up when a call comes in, turn the phone over to mute it.

If you go to Settings and then tap **Sound & notification** > **Flip to mute**, you can set your phone to:

Mute once	Mute only once after flipping the phone. While the phone is still facing down, it will ring again when there are other incoming calls.
Mute always	After flipping the phone to mute a call, keep it always muted while it's still facing down when there are other incoming calls.

Pick up to lower volume





In a business meeting or restaurant, pick HTC Desire 10 pro up when a call comes in to lower the ring volume automatically.

You can turn this feature on or off. Go to Settings, tap Sound & notification, and then select or clear Quiet ring on pickup.

Increase ring volume automatically while phone is in your pocket or bag



Pocket mode makes HTC Desire 10 pro recognize when your phone is in your bag or pocket and raise the ring volume so that you can hear it in noisy environments.

You can turn this feature on or off. Go to Settings, tap **Sound & notification**, and then select or clear **Pocket mode**.

Rotate HTC Desire 10 pro for a better view




For many screens, you can automatically change the screen orientation from portrait to landscape by turning HTC Desire 10 pro sideways.

When entering text, you can turn HTC Desire 10 pro sideways to bring up a bigger keyboard.

Touch gestures

Use touch gestures to get around the Home screen, open apps, scroll through lists, and more.

Тар

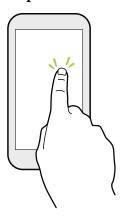


Tap the screen with your finger when you want to select onscreen items such as application and settings icons, or press onscreen buttons.

Press and hold



To open the available options for an item (for example, a contact or link in a webpage), just press and hold the item.

Swipe or slide

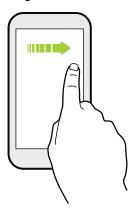

Quickly swipe your finger horizontally across the screen to go to other Home screen panels. Swipe vertically to scroll through a list, document, and more.

Drag




Press and hold your finger with some pressure before you start to drag. While dragging, don't release your finger until you have reached the target position.

Flick



Flicking the screen is similar to swiping, except that you need to swipe your finger in light, quicker strokes, such as when moving right and left on the Home screen, or flicking through a contacts or message list.

Press and flick

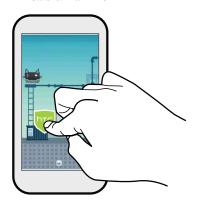

On the Home screen, you can easily move a widget or icon from one screen to another.

Press and hold the widget or icon with one finger, and flick the screen to the new location with another finger.

Slide with two fingers

 


In some apps, slide two fingers apart to zoom in when viewing a picture or text.



Slide two fingers together to zoom out of the picture or text.

Two-finger swipe



Swipe down from the status bar using two fingers to access Quick Settings.

Three-finger swipe



- Swipe up the screen with three fingers and HTC Connect[™] streams music or video from HTC Desire 10 pro to your speakers or TV respectively. You can also share streaming media from apps such as YouTube[®].
- Swipe down to disconnect from your speakers or TV.



Media gesture is turned on in Settings by default, which makes the three-finger gesture work for sharing media.

Opening an app

- Tap an app on the launch bar at the bottom of the Home screen.
- Tap ::: to go to the Apps screen, and then tap the app you want to use.
- On the Apps screen, tap Q, and then enter the name of the app you're looking for.

Opening an app or folder from the lock screen

On the lock screen, drag an app or folder icon up to unlock the screen and directly go to the app or folder.



The shortcuts on the lock screen are the same ones on your Home screen's launch bar. To change the lock screen shortcuts, replace the apps or folders on the launch bar.

If you've set up another security layer like a screen lock pattern or PIN, you'll be asked to provide your credentials first before HTC Desire 10 pro opens the app or folder.

Sharing content


Have something to share, such as a photo or video?

- In an app, just tap the share icon: ****** or **<**.
- If you don't see the icon, tap : > Share.

Switching between recently opened apps

When you're multitasking and using different apps on HTC Desire 10 pro, you can easily switch between the apps you've recently opened.

Press \square to see recently-opened apps.

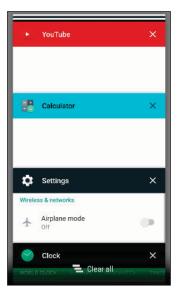

- To switch back to an app, flip through the cards to find the app and tap it.
- To remove an app from the list, drag it left or right.
- To remove all of the apps at once, tap = .

Refreshing content

In some apps, you can easily refresh content that's synced or downloaded from the Web with a simple finger gesture.

- 1. While viewing content such as weather or Mail inbox, scroll to the top of the screen.
- 2. Pull down with your finger, and then release to refresh.

Capturing your phone's screen

Want to show off your high game score or write a blog post about HTC Desire 10 pro features? It's easy to take a picture of the screen to share.

- 1. Press and hold POWER and VOLUME DOWN at the same time.
- 2. Open the Notifications panel and tap < under the Screenshot captured notification.

 If you don't see <, slide two fingers apart on the screenshot notification.

Travel mode

Do you often travel across time zones? Turn on Travel mode in Settings to see a dual clock on the Home screen and lock screen that shows both your home and current time zones.



- Make sure you turn on location services in your phone settings.
- Set your home time zone first in the Clock app.
- 1. From the Home screen, tap ::: > Settings > Date & time.
- 2. Tap the Travel mode On/Off switch to turn travel mode on or off.

You'll see a dual clock of your home and current locations once your phone detects a different time zone from the home time zone you've set.

What is the HTC Sense Home widget?

 
Get quick access to apps, shortcuts and folders you use most frequently based on where you are. With the HTC Sense Home widget, HTC Desire 10 pro continually adapts to how you use it. For example, apps you use most frequently for work, will show up when you're at your office. The HTC Sense Home widget changes depending on whether you're at home, work, or somewhere else.

Setting up the HTC Sense Home widget


Setting up the HTC Sense Home widget is quick and easy.



- If you don't see the HTC Sense Home widget, add it to your Home screen. See Adding Home screen widgets on page 61.
- Make sure you turn on location services in your phone settings. See Turning location services on or off on page 146.
- 1. On the setup screen of the HTC Sense Home widget, tap Tap to personalize > Let's explore.



 2. Tap where you are to finish setting up the widget.



- 3. On the widget, tap \checkmark > Personalize HTC Sense Home.
- **4.** Select all the options on the screen, and then press \triangleleft .

Setting your home and work locations

You can change the address for your home and work locations if you ever move to a new home or change your job.

- 1. On the Home screen, swipe right or left until you see the HTC Sense Home widget.
- 2. Tap \checkmark > \vdots > Set locations.
- 3. Tap the address area to search for the address you want to set.
- **4.** When you've found the address on the map, tap **Done**.

Manually switching locations

The HTC Sense Home widget automatically changes locations based on where you are. You can also manually change the location in the HTC Sense Home widget.

For the HTC Sense Home widget to change locations automatically, you need to make sure that location services is turned on. See Turning location services on or off on page 146.

- 1. On your Home screen, slide right or left until you see the HTC Sense Home widget.
- 2. Tap \checkmark , and then tap the location you want.



Pinning and unpinning apps

Pinning apps, shortcuts, or folders to the HTC Sense Home widget ensures they stay on the widget.

Items in the HTC Sense Home widget will have one of two states: pinned or unpinned. Unpinned items will be automatically changed to more frequently used items.

- 1. On the Home screen, swipe right or left until you see the HTC Sense Home widget.
- **2.** Do one of the following:
 - To pin an item, press and hold it until you see ...
 - To unpin an item, press and hold it until the unpinning progress bar has completed.

Adding apps to the HTC Sense Home widget

Add your favorite apps, shortcuts, or folders to the HTC Sense Home widget.

- 1. From the Home screen, tap
- 2. Press and hold the app, shortcut, or folder you want to add to the widget.
- 3. Drag the item to where you want in the HTC Sense Home widget.

The app, shortcut or folder will be added to the HTC Sense Home widget and pinned in place.

Turning the Suggestions folder on and off

The Suggestions folder is a smart folder in the HTC Sense Home widget that dynamically change contents depending on your usage. You can turn the Suggestions folder off if you don't want it to appear in the widget.


- 1. On the Home screen, swipe right or left until you see the HTC Sense Home widget.
- 2. Tap \checkmark , and then tap \Rightarrow Show/hide smart folders.

- 3. Select or clear Show Suggestions folder.
- **4.** Tap **OK**.

Notifications

Notification LED

The notification LED shows a:

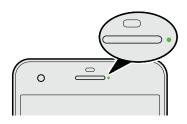

- Solid green light when HTC Desire 10 pro is connected to the power adapter or a computer and the battery is fully charged.
- Flashing green light when you have a pending notification.
- Solid orange light when the battery is being charged.
- Flashing orange light when the battery level reaches very low.

Choosing when to flash the notification LED

You can change when to flash and which apps will flash the LED when there are new notifications.

- 1. From the Home screen, tap ... > Settings > Sound & notification.
- 2. Under Notifications, tap **Flash LED for notifications**. Choose whether to always flash the LED or flash it only when the screen is off.
- **3.** Tap **Manage LED notifications**. Choose which app notifications you want the LED to flash for.



In other apps, check their settings to find out if they have an option for flashing the LED.


Notifications panel

Notification icons inform you of new messages, calendar events, alarms, and activities in progress such as files downloading.



When you see notification icons, open the Notifications panel to check out details of the notifications that you've received.

To open the Notifications panel, slide down from the top of the screen.

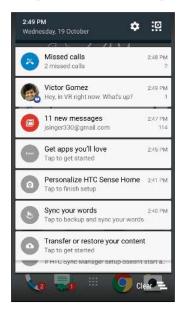

- Some notifications allow you to take immediate action. For example, tap a missed call notification to return the call or reply with a text message.
- Tap the notification icon on the left to open the corresponding app.
- To dismiss just one notification in the list, drag it left or right. To dismiss all non-persistent notifications, tap = .

If you have several notifications, scroll through the list screen to see them all.



You can change what app notifications you want to receive. See Managing app notifications on page 46.

Managing app notifications

You can set the priority, sensitivity, and more.

- 1. From the Home screen, tap ::: > Settings > Sound & notification.
- 2. Tap Manage app notifications, and then tap the app to set.

 You can also press and hold a notification in the notifications panel, and then tap (i).
- 3. Tap the On/Off switch next to option you want to toggle.

Settings for app notifications are applied to notifications in the Notifications panel and the lock screen.

Motion Launch

Motion Launch is a combination of a motion gesture followed by a finger gesture. Using a combination of simple gestures, you can wake up to your Home screen, HTC BlinkFeed, and more.

See the following:

- Waking up to the lock screen on page 47
- Waking up and unlocking on page 47
- Waking up to the Home widget panel on page 48
- Waking up to HTC BlinkFeed on page 48
- Launching the camera on page 49

Turning Motion Launch gestures on or off

- 1. From the Home screen, tap ::: > Settings > Display & gestures or Display, gestures & buttons.
- 2. Tap Motion Launch gestures.
- 3. Select the Motion Launch gestures you want.


Waking up to the lock screen

Go from sleep mode to the lock screen without pressing the POWER button.



If you've set up a screen lock with credentials, you'll be asked to provide your credentials first before HTC Desire 10 pro unlocks.

- 1. Lift the phone in portrait orientation.
- 2. Immediately double-tap the screen.

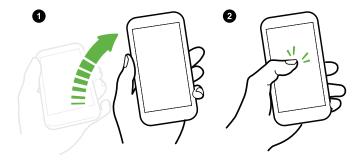


Waking up and unlocking

Go from sleep mode and unlock HTC Desire 10 pro to the last screen you were using without pressing the POWER button.



If you've set up a screen lock with credentials, you'll be asked to provide your credentials first before HTC Desire 10 pro unlocks.

- 1. Lift the phone in portrait orientation.
- 2. Immediately swipe up from the bottom half of the screen.

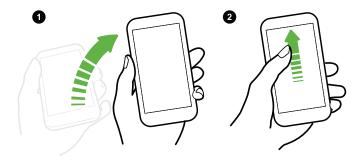


Waking up to the Home widget panel

Go from sleep mode to the Home widget panel without pressing the POWER button.



If you've set up a screen lock with credentials, you'll be asked to provide your credentials first before HTC Desire 10 pro unlocks.

- 1. Lift the phone in portrait orientation.
- 2. Immediately swipe left from the right side of the screen.

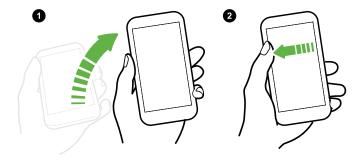


Waking up to HTC BlinkFeed

Go from sleep mode to HTC BlinkFeed without pressing the POWER button.



If you've set up a screen lock with credentials, you'll be asked to provide your credentials first before HTC Desire 10 pro unlocks.

- 1. Lift the phone in portrait orientation.
- 2. Immediately swipe right from the left side of the screen.

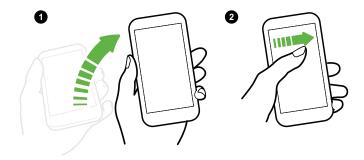

Launching the camera

Go from sleep mode to the Camera app without pressing the POWER button.

- 1. Lift the phone in portrait orientation.
- 2. Immediately swipe down twice on the screen.





If you've set up a screen lock with credentials, you'll be asked to provide your credentials when you exit the Camera app.

Working with text

Selecting, copying, and pasting text

- 1. Press and hold on a word.
- 2. Drag the start and end anchors to highlight the text you want to select.
- 3. Tap or Copy.
- **4.** In a text entry field (for example, while composing an email), press and hold at the point where you want to paste the text.
- 5. Tap 🗂 or Paste.

Sharing text

- 1. After you have selected the text, tap < or \$\formall \text{ or Share.}
- 2. Choose where to share the selected text.

Entering text

The keyboard becomes available when you tap a text field in an app.

- Tap the keys on the onscreen keyboard to enter letters and numbers, as well as punctuation marks and symbols.
- Tap � to enter an uppercase letter. Tap twice to turn on caps lock.
- Press and hold keys with gray characters at the top or bottom to enter numbers, symbols, or accented letters. Some keys have multiple characters or accents associated with them.
- Tap 12# to show number and symbol keys. Tap abc to return to the main keyboard.
- Tap ② to choose from a wide selection of emojis.
- Tap **b** to check out more features, options, and settings. You can resize the keyboard space, change the layout and design, download dictionaries, and more.
- Press **1** to close the onscreen keyboard.

How can I type faster?

The onscreen keyboard of your phone is highly customizable. You can modify its settings and options to enhance your typing experience.


Here are some tips that you could try:

• Switch to landscape mode. With two fingers, swipe down from the status bar and check if Auto rotate is turned on. Open the app you need, and then tap a text field to show the keyboard. Turn your phone sideways to bring up a bigger keyboard.

You can then tap **b** > **Split**.



• Resize or reposition the keyboard.

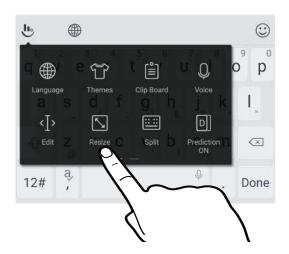

Open the app you need, and then tap a text field to show the keyboard. Tap , and then tap Resize. Drag any of the border arrows to resize your keyboard.

To move the keyboard up, drag the center button up.



- Show the numeric keys on the top row of the keyboard. Open the Settings app, and then tap Language & keyboard > Touchpal - HTC Sense Version > General settings. Select Number Row.
- Turn on Contextual prediction.Go to Settings > Language & keyboard > TouchPal HTC Sense Version > Smart input, and then make sure that Contextual prediction is selected. This option enables next word prediction and will also allow the keyboard to learn from the usual word patterns you type for better word suggestions.

Entering text by speaking

- 1. Tap an area where you want to enter text.
- **2.** On the onscreen keyboard, press and hold \mathbf{Q} .
- **3.** When you see the microphone button and the words "Speak now", say the words you want to enter.
- 4. Enter punctuation marks by saying the name. For example, say "comma".

Enabling smart keyboard options

Turn on the keyboard's advanced features to help you type faster, such as contextual prediction, auto-correction, and more.

- 1. From the Home screen, tap ..., and then find and tap Settings.
- 2. Tap Language & keyboard > TouchPal HTC Sense Version > Smart input.
- 3. Select the options to enable.

Getting help and troubleshooting

Want some quick guidance on your phone?

Check out the friendly walkthroughs and the FAQs in the Help app to learn how to use your phone.

- When you see a Help tile in HTC BlinkFeed, just tap the tile to know more about the tip.
- From the Home screen, tap ..., and then find and tap **Help**.

You can then tap **Search help articles & videos**, and enter what you're looking for. Or you can tap \equiv to browse how-tos, FAQs, and more.



If HTC Help is not preinstalled on your phone, you can download it from Google Play.

Having hardware or connection problems?

Before calling for support, you can first use the Help app to troubleshoot or perform diagnostics on your phone. This helps you in finding the problem cause, and in determining whether you can resolve the problem or you need to call for support.

- 1. From the Home screen, tap ..., and then find and tap Help.
- 2. On the Help screen, tap = and then tap **Troubleshooting** or **Diagnostics tools** to use a troubleshooting wizard to check the basic hardware functions.
- **3.** You can also tap **Software updates** to check for new software updates if available. Software updates may contain bug fixes and feature improvements.

Personalizing

Ringtones, notification sounds, and alarms

- 1. From the Home screen, tap ..., and then find and tap Settings.
- 2. Tap Sound & notification.
- **3.** Tap an item to modify, and then choose different sounds for your ringtone, system notification, and alarm.



Go to the settings of specific apps to choose sounds for new messages, email, and event reminders respectively.

4. Tap Volumes to set the volume levels for each sound type.

To browse for more sounds in Themes, go to **Settings** > **Personalize** > **Edit current theme**, and then tap **Ringtone**, **Notification**, or **Alarm**.

What is HTC Themes?

Themes brings a quick and easy way for you to customize your phone with elements such as wallpapers, sounds, and icons.

You need to log in with your preferred account to download themes, icons, fonts, and more from the Themes store.



Themes is a part of the HTC Sense Home app. To get the latest features of Themes, make sure you've downloaded the newest version of HTC Sense Home.

Downloading themes or individual elements

Find and download themes and elements that make it easy for you to personalize your phone.

- 1. Press and hold on an empty space on your Home screen.
- 2. Tap Theme.
- 3. If it's your first time to use Themes, tap **Get Started**, and then sign in with your preferred account.
- **4.** On the Recommended screen, swipe up and down to see different themes and theme elements, and tap *** next to each category to browse recommended items.

- **5.** Tap a thumbnail to see the details screen.
- 6. Tap Download.



If you don't want to download the theme or any element right away, you can tap **t** to bookmark it first.

To apply the theme after it has finished downloading, tap Apply. If your chosen theme includes sounds, your ringtone, notification sound, and alert sound will also change.

Creating your own theme

You can create and customize your own theme and even share it for others to download.

- 1. Press and hold on an empty space on your Home screen.
- 2. Tap Theme.
- 3. Tap > Change wallpaper to set the main wallpaper for your theme.
- 4. Select an image from your phone or take a photo with Camera.
- 5. Move or enlarge the crop box to the area of the image you want to include.
- 6. Crop and save the image.
- 7. Tap Next.
- 8. Swipe up or down to select a style for your theme.
- 9. Tap Edit to customize the style elements such as colors and icons.
 - Or tap Next if you don't want to customize your theme.
- 10. After you've finished customizing your theme, tap Preview to see what your theme will look like.
- 11. Tap Finish, name your theme, and then tap **OK** to save your theme.

To apply the theme after saving it, make sure you select the Apply this theme now option.

Finding your themes

Themes you've downloaded, bookmarked, or created can be found in your theme collection.

- 1. Press and hold on an empty space on your Home screen.
- 2. Tap Theme.
- 3. Tap \equiv > My themes.

Editing your theme

After creating and applying a theme, you can mix and match parts from other themes such as sounds, icons, wallpapers.



To mix and match themes, you need to first download theme elements from the Themes store.

- 1. Press and hold on an empty space on your Home screen.
- 2. Tap Theme.
- 3. Tap \equiv > Edit current theme.
- **4.** Tap any of the theme elements you want to change. If the theme element list is empty, tap **●** beside the theme element name, and then choose one of the collections to select from.
- **5.** Do one of the following:
 - Tap an item in the theme element list to apply the change directly.
 - Tap Download to get the content if necessary, and then tap Apply to apply the change to your current theme.
- **6.** Press \(\sigma\) until you see the Edit current theme screen. Continue making changes until you're satisfied with the result.
- 7. Tap **Save copy** to save your new theme, or if you're editing a theme that you copied tap **Save** to save the changes.

Deleting a theme

You can delete a theme if you no longer want to keep it on your phone.

- 1. Press and hold on an empty space on your Home screen.
- 2. Tap Theme.
- 3. Tap \equiv > My themes or My designs.
- 4. Find and tap an item to delete.
- **5.** Tap **:** > **Remove**.



If the item is currently applied, it will still be applied to your phone until another theme is applied.


Choosing a Home screen layout

You can choose between two Home screen layouts.

The Classic layout allows you to add traditional app shortcuts and widgets on your Home screen. By design, this layout will follow and fit what you've added on the Home screen according to an invisible grid.



The Freestyle Home screen layout frees you from grid constraints and allows you to place your icons and widgets anywhere you want them on the Home screen. You can use custom stickers as app shortcuts, too!

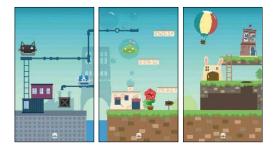

- 1. Press and hold on an empty space on your Home screen.
- 2. Tap Theme.
- 3. Tap \equiv > Classic layout themes or Freestyle layout themes.

Setting your Home wallpaper

Choose from the available wallpapers, or use any photo you've taken with the camera.



You can only change the wallpaper while in Classic home screen layout.

- 1. From the Home screen, tap ::: > Settings > Personalize.
- 2. Tap Change wallpaper.
- 3. Choose from where you want to select a wallpaper.
- 4. Tap Apply or Set wallpaper.

Multiple wallpapers

You can split a panorama photo into three parts so that it extends to three Home screen panels as one photo. Or, you can choose to set three different wallpapers for each widget panel.



- You can only apply Multiple wallpapers while in Classic home screen layout.
- You can only set the Multiple wallpapers for three widget panels. The right-most photo will be used as the wallpaper for any additional panels.
- 1. Press and hold on an empty space on your Home screen.
- 2. Tap Theme.
- 3. Tap \equiv > Edit current theme.
- 4. Tap Home wallpaper.
- 5. Tap **②** > Multiple. You'll then see three page thumbnails.
- 6. Tap Change wallpaper under the first page thumbnail.
- 7. Select from the preset wallpapers or tap 🛂 to choose from your photos.

 If you've selected a panorama photo, you need to crop it starting from the area that will fit the left widget panel of the Home screen.
- 8. Repeat steps 4 and 5 to change the wallpaper for the second and third widget panels.
- **9.** Tap ✓.

Time-based wallpaper

Set your home wallpaper to automatically change during the day and night.



You can only use a Time-based wallpaper while in Classic home screen layout.

- 1. Press and hold on an empty space on your Home screen.
- 2. Tap Theme.
- 3. Tap \equiv > Edit current theme.
- 4. Tap Home wallpaper.
- **5.** Tap **♥** > **Time-based**. You'll then see two page thumbnails.
- **6.** Tap **Change wallpaper** under the Day thumbnail to choose the wallpaper you want to display during the day.
- 7. Select from the preset wallpapers or tap $\ ^{ullet}$ to choose from your photos.

- 8. Tap Change wallpaper under the Night thumbnail to choose the wallpaper you want to display during the night.
- **9.** Tap ✓.

Lock screen wallpaper

Instead of using the home wallpaper, you can set a different wallpaper for your lock screen.

- 1. Press and hold on an empty space on your Home screen.
- 2. Tap Theme.
- 3. Tap \equiv > Edit current theme.
- 4. Tap Lock screen wallpaper.
- **5.** Select from the thumbnails or tap **1** to choose from your photos.
- 6. Tap Apply or Save.

Adding or removing a widget panel



- You won't be able to add a new widget panel if you've already reached the maximum limit.
- HTC BlinkFeed always appears as the first panel (if it's not removed). A widget panel cannot be added before HTC BlinkFeed.
- 1. Press and hold an empty space on a widget panel.
- 2. Tap Edit page.
- 3. To add a new widget panel, swipe left until you see the + icon, and then tap it.
- 4. To remove a widget panel, swipe left or right until you see the panel, and then tap Remove.
- 5. When done, press \triangleleft .

Arranging widget panels



A widget panel cannot be moved and inserted before HTC BlinkFeed.

- 1. On HTC BlinkFeed or any widget panel, slide two fingers together to customize the Home
- 2. Press and hold a widget panel thumbnail, and then drag it left or right to the position that you want.
- 3. When you're done arranging widget panels, press \triangleleft .

Changing your main Home screen

Set HTC BlinkFeed or a widget panel as your main Home screen.

- 1. Press and hold an empty space on a widget panel.
- 2. Tap Edit page.
- 3. Swipe left or right until you see the panel that you want to use as your main Home screen.
- 4. Tap Set as home.
- 5. Press ◀.



Pressing O from an app will first return you to the last panel you were in. Just press O again to go to your main Home screen.


Stickers, widgets and shortcuts

Launch bar

The launch bar gives you one-touch access to commonly used apps and other shortcuts. You can replace the apps on the launch bar with the ones you often use.



- You can only customize the launch bar while in Classic layout.
- If you're using the Freestyle layout, you will only see the launch bar on the lock screen. Icons displayed will be the same ones you have in the Classic layout.
- 1. Press and hold the app you want to replace, and then drag it out to $\hat{\blacksquare}$.

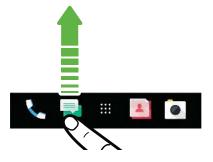

- 2. Tap to go to the Apps screen.
- 3. Press and hold an app, and then drag it to the empty slot on the launch bar.



- You can also group apps on the launch bar into a folder. See Grouping apps on the widget panel and launch bar on page 62.
- The apps or other shortcuts on the lock screen are the same as the ones on the launch bar.

Adding Home screen widgets

Widgets make at-a-glance important information and media content readily available.

- 1. Press and hold an empty space on a widget panel.
- 2. In the pop-menu, tap Add apps and widgets.
- 3. Tap ♥ > Widgets.
- 4. Scroll through the widgets, or tap **Q** to search for a specific widget.
- 5. Press and hold a widget, and then drag it to a widget panel you want to add it to.

Changing the widget settings

You can modify basic settings of some widgets.

- 1. Press and hold a widget on your Home screen, and then drag it to 🌣.
- 2. Customize the widget settings.

Resizing a widget

Some widgets can be resized after you've added them to your Home screen.

- 1. Press and hold a widget on the Home screen, and then release your finger. If a border appears, that means the widget is resizable.
- 2. Drag the sides of the border to enlarge or shrink the widget size.

Adding Home screen shortcuts

Place apps you often use on any widget panel of your Home screen. You can also add shortcuts to frequently used settings, bookmarked webpages, and more.

- 1. Press and hold an empty space on a widget panel.
- 2. In the pop-up menu, tap Add apps and widgets.
- 3. Tap ♥ >Apps or Shortcuts.
- **4.** Scroll through the apps or shortcuts, or tap **Q** to search for one.
- $\textbf{5.} \quad \text{Press and hold an app or shortcut, and then drag it to a widget panel you want to add it to.}$



To add an app from the Apps screen, press and hold the app, and then drag it to a widget panel.

Using stickers as app shortcuts

Replace the usual app shortcuts with stickers to blend with your home wallpaper design. You can link individual stickers to different apps.

- 1. Switch to Freestyle layout.
 - To find out how, see Choosing a Home screen layout on page 57.
- 2. Press and hold on an empty space on your Home screen.

- 3. Tap Add stickers.
- 4. Scroll through the stickers, and then drag a sticker to a widget panel you want to add it to.
- 5. Tap the newly added sticker, and then tap an app to link to the sticker.



If you need to link the sticker to a different app, press and hold it on the widget panel, and then drag it to Relink.

6. To show or hide the name of the app it's linked to, press and hold the sticker on the widget panel, and then drag it to Show label or Hide label.



You can choose to show or hide labels for all stickers on the Home screen. Press and hold an empty space on a widget panel, and then tap Show/hide label.

Grouping apps on the widget panel and launch bar

1. Press and hold an app, and then drag it over to another app to automatically create a folder.





- 2. Tap the folder to open it.
- 3. Tap the folder window's title bar, and then enter a new folder name.
- 4. Add more apps into the folder. Tap +, select your apps, and then tap **Done**.

You can also add shortcuts to settings or information to a folder. Add a shortcut first to a widget panel, and then drag it over to the folder.


Removing items from a folder

- 1. On the launch bar or widget panel, tap a folder to open it.
- 2. Press and hold an app or shortcut in the folder, and then drag it out to \blacksquare .

Moving a Home screen item

You can easily move a widget, icon, or sticker from one widget panel to another.

- 1. Press and hold a Home screen item with one finger.
- 2. With another finger, flick left or right to rotate the screen to another widget panel.

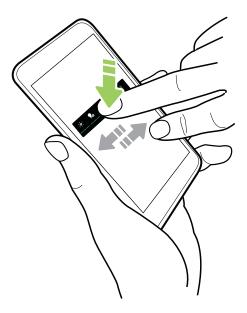

3. Release the item to where you want to move it.

Removing a Home screen item

- 1. Press and hold the widget, icon, or sticker you want to remove, and then drag it to 📋 .
- 2. When the item turns red, lift your finger.

Arranging apps

You can arrange and rearrange the apps on the Apps screen

- 1. From HTC BlinkFeed or any widget panel, tap
- 2. Tap ♥, and then choose how to arrange apps, such as alphabetically.
- 3. Select **Custom** if you want to rearrange or group apps into folders.

Showing or hiding apps in the Apps screen

- 1. On the Apps screen, tap : > Show/hide apps.
- 2. Select the apps you want to hide, or clear their check boxes to unhide them.
- 3. Tap Done.

Grouping apps into a folder

- 1. On the Apps screen, tap **◇** > Custom.
- 2. Tap : > Rearrange apps.
- 3. Press and hold an app, and then drag it over to another app to automatically create a folder.
- 4. To add more apps, drag each app over to the folder.
- 5. To name the folder, open the folder, tap its title bar, and then enter a folder name.
- **6.** When done, tap \checkmark .

Moving apps and folders

- 1. On the Apps screen, tap **◇** > Custom.
- 2. Tap : > Rearrange apps.
- 3. Press and hold an app or folder, and then do one of the following:
 - Drag the app or folder to another position on the same page. Wait until you see the occupying icon move away before releasing your finger.
 - Drag the app or folder to the **>** or **>** arrow to move it to another page.
- **4.** When you're done moving apps and folders, tap \checkmark .

Removing apps from a folder

- 1. On the Apps screen, tap **S** > Custom.
- 2. Tap : > Rearrange apps.
- 3. Tap the folder to open it.
- 4. Press and hold an app, and then drag it out to the Apps screen. Wait until you see the occupying icon move away before releasing your finger.
- 5. When you're done removing apps, tap \checkmark .


Taking photos and videos

Camera screen

Take great photos and videos with the camera.

On the Home screen, tap the camera icon to open the Camera app. You'll see **Photo** mode, which is the default capture mode.



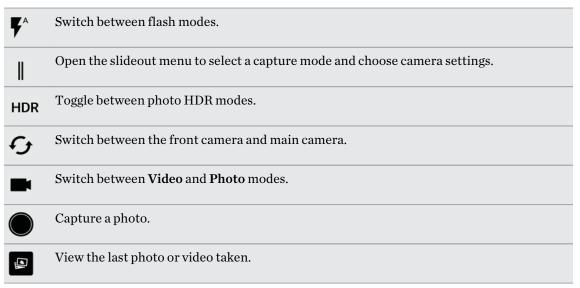

Zooming

Before taking a regular photo or video, slide two fingers apart to zoom in or together to zoom out. You can also freely zoom in or out while recording.

Turning the camera flash on or off

Tap the flash icon to choose a flash setting.

When using \P or \P ^{A}, the camera intelligently sets the best flash brightness for your photo.

In Selfie Photo mode, you can also tap the flash icon to turn the screen flash on or off.

Using the volume buttons for taking photos and videos

In the Camera app, you can set the VOLUME buttons to function as the shutter release or zoom controls.

- 1. On the Home screen, tap the camera icon to open the Camera app.
- 2. Tap

 to open the slideout menu.
- 3. Tap Settings > Volume button options.
- **4.** Choose how you want to use the volume buttons when you're in the Camera app.

Choosing a capture mode


Switch to a capture mode to use for taking photos or videos. The camera on HTC Desire 10 pro separates capture modes into categories so that you can quickly find which mode you want.

1. Tap

to open the slideout menu.

You can also swipe right from the left edge in landscape orientation or swipe down from the top edge in portrait orientation.

2. Scroll through the menu to see the available capture modes.

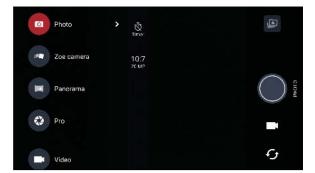

- 3. Tap the capture mode you want to use.
- **4.** To quickly switch between the front and main camera, tap **5** on the Viewfinder screen.
- 5. You can quickly switch back to either Photo or Video mode when you're in other capture modes without opening the slideout menu. Right below the main shutter button, just tap to switch back to Photo mode or to switch back to Video mode.

 to switch back to Video mode.

Capture mode settings

You can change the settings for some of the capture modes such as **Photo** or **Video** mode. To change settings, select a mode and then tap \parallel to view and choose the available settings for the mode.




Mode	Setting	Description
Photo	Ø	Toggle between the time settings to set the self-timer or turn off the self-timer. See Taking photos with the self-timer on page 71 for details.
Selfie Photo		
Pro		
Photo	16:9	Set the photo quality and aspect ratio. See Setting the photo quality and size on page 68 for details.
Selfie Photo		
Pro		
Video	HD	Set the video quality. See Setting the video resolution on page 69 for details.
Selfie Video		
Pro	RAW	Choose RAW or JPG format for photos. See Taking a RAW photo on page 77 for details.
Selfie Photo	Ó*	Turn Live Makeup on and off. See Applying skin touch-ups with Live Makeup on page 70 for details.
Selfie Panorama		

Taking a photo

- 1. On the Home screen, tap the camera icon to open the Camera app.
- **2.** Switch to **Photo** mode, if you're not in this mode. See Choosing a capture mode on page 66 for details.

- 3. Point the camera at what you want to capture. The camera adjusts the focus automatically as you move it. You can also tap the screen to change the focus to a different subject.
- 4. To adjust the exposure, tap the screen, and then drag your finger up and down.

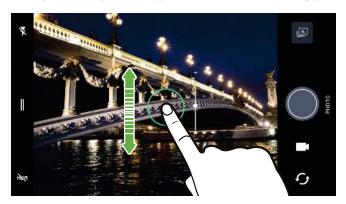

To adjust the exposure to brighten the subject automatically, see Quickly adjusting the exposure of your photos on page 71.

5. When you're ready to take the photo, tap **.**



Turn on **Auto smile capture** in camera settings to set your phone to capture your photo automatically when you smile at the camera.

Setting the photo quality and size

- 1. Switch to Photo or Selfie Photo mode. Or, select Pro mode.
- 2. Tap

 to open the slideout menu.
- **3.** Tap the current setting—for example **16:9** to change the photo quality and size, or aspect ratio.

Tips for capturing better photos

To get better captures with the Camera app, here are some tips on what to do while taking your shots.

Before capturing

- Make sure that the camera and flash lenses are clean and without fingerprints. Use a soft, clean, microfiber cloth to wipe them.
- Hold the phone so that your fingers aren't blocking the camera and flash lenses.

For clear, sharp shots

- Tap the screen to focus and dynamically readjust the image contrast, which is sometimes desirable if you wish to take a macro to get an off-center bokeh effect or take photos while you're moving. Adjust the exposure to brighten the subject or make the subject look darker and richer. For details, see Quickly adjusting the exposure of your photos on page 71.
- If the subject is moving, on the Viewfinder, press and hold the subject to lock the focus.

- If there are parts of the image that are in shadows and others are in highlights, use HDR to capture multiple shots of different exposures and combine them into one shot. Keep HTC Desire 10 pro steady or place it on a level surface when using HDR. See Using HDR on page 72 for details.
- When taking a panoramic photo, consider the whole scene and focus on an object that has a neutral tone to help keep the exposure balanced in the composite image.
- Make sure you're not moving the camera when taking a photo, especially in low light conditions. Hold the phone steady and don't move the camera while taking RAW photos in Pro mode.

Other tips

- In Camera settings, tap Grid to help frame the subject better or improve the composition.
- After capturing, you can enhance the photo in the Google Photos app.

Recording video

- 1. On the Home screen, tap the camera icon to open the Camera app.
- 2. Switch to Video mode. See Choosing a capture mode on page 66 for details.
- **3.** When you're ready to start recording, tap .
- 4. Change focus to a different subject or area by just tapping it on the Viewfinder screen. You can also change the exposure after tapping by dragging up and down on the screen.
- **5.** Tap the flash icon to turn the flash on or off.
- 6. Tap u to pause the recording, and then tap to resume.
- 7. To stop recording, tap **①**.

Setting the video resolution

- 1. Switch to Video mode.
- 2. Tap to open the slideout menu.
- Tap Quality to change the video resolution.

Taking a photo while recording a video—VideoPic

- 1. On the Home screen, tap the camera icon to open the Camera app.
- 2. Switch to Video mode. See Choosing a capture mode on page 66 for details.
- 3. Tap to start recording.
- 4. While recording, tap whenever you want to capture a still shot.
- **5.** Tap **t** to stop recording.

Selfies

Applying skin touch-ups with Live Makeup

Touch up your skin before taking your selfie. Live Makeup smoothens your skin in real time.



Live Makeup is disabled when HDR is on.

- 1. On the Home screen, tap the camera icon to open the Camera app.
- 2. Switch to Selfie Photo mode. See Choosing a capture mode on page 66 for details.
- slideout menu, and then tap 🐧 .
- 4. To change the skin smoothing level, drag the adjustment bar slider.



and then tap of to turn Live Makeup off.

Taking selfies automatically

Keep still to take an auto selfie-or just smile! You just need to turn this feature on in the camera settings.

- 1. On the Home screen, tap the camera icon to open the Camera app.
- 2. Switch to Selfie Photo mode. See Choosing a capture mode on page 66 for details.
- 3. Tap

 to open the slideout menu.
- 4. Tap Settings > Camera options.
- 5. Select the Auto selfie capture option, and then tap outside the slideout menu to close it.
- **6.** Pose and frame yourself on the Viewfinder screen.
- 7. To take your selfie automatically, look at the front camera, and then:
 - Stay still until the white box turns green on the Viewfinder screen.
 - Or smile at the camera. Hold your smile for a few seconds until your shot is taken.

Taking selfies with voice commands

You can easily take photo or video selfies using simple voice commands. You just need to turn this feature on in the camera settings.



This feature may not be available in all languages.

- 1. On the Home screen, tap the camera icon to open the Camera app.
- 2. Switch to Selfie Photo or Selfie Video mode. See Choosing a capture mode on page 66 for details.

- 3. Tap to open the slideout menu.
- 4. Tap Settings > Camera options.
- 5. Select the Voice capture option, and then tap outside the slideout menu to close it.
- **6.** Pose and frame yourself on the Viewfinder screen.
- 7. Look at the front camera, and then:
 - Say Cheese or Capture to take a photo selfie.
 - Say Action or Rolling to record a video selfie.



You can also use voice commands with the main camera. Switch to Photo mode, and then select the Voice capture option in the camera settings.

Taking photos with the self-timer

When you use the self-timer, the Camera app counts down before taking the shot. You can set the countdown time.

- 1. On the Home screen, tap the camera icon to open the Camera app.
- 2. Choose the capture mode you want to use. See Choosing a capture mode on page 66 for details.
- 3. Tap

 to open the slideout menu.
- 4. Tap **Timer** to set the countdown time.
- 5. To start the timer, tap . The camera takes the photo after the countdown.

Flipping the angle of selfies

Do you want the angle of your shots to look exactly the same as how you see yourself on the Viewfinder screen?

- 1. Switch to Selfie mode. To find out how to switch between capture modes, see Choosing a capture mode on page 66.
- **2.** On the Viewfinder screen, tap to show the camera options.
- 3. Tap : > Camera options.
- 4. Select the Save mirror image option.

Quickly adjusting the exposure of your photos

HTC Desire 10 pro features a quick way of adjusting the exposure level or brightness in real time. Turn Touch autoexposure on to automatically adjust the exposure levels when you tap a darker area on the Viewfinder screen.

- 1. On the Home screen, tap the camera icon to open the Camera app.
- 2. Switch to Photo or Panorama mode. See Choosing a capture mode on page 66 for details.
- 3. Tap

 to open the slideout menu.

- 4. Tap Settings.
- 5. Select the **Touch autoexposure** option.
- **6.** Tap on the subject to brighten. To manually adjust the exposure, drag your finger up and down.
- 7. When you're ready to take the photo, tap .

Taking continuous camera shots

Do you want to take photos of moving subjects? Whether it's your kid's football game or a car race, you can capture the action.

- 1. On the Home screen, tap the camera icon to open the Camera app.
- 2. Switch to Photo mode. See Choosing a capture mode on page 66 for details.
- **3.** Press and hold the onscreen shutter button **.** The camera takes consecutive shots of your subject.

Using HDR

When shooting portraits against a bright background, use HDR, short for High Dynamic Range, to capture your subjects clearly. HDR brings out the details of both the highlights and shadows, even in high contrast lighting.



HDR works best when your subject is steady. The camera takes multiple shots at different exposure levels and combines them into one enhanced photo.

- 1. On the Home screen, tap the camera icon to open the Camera app.
- 2. Switch to Photo mode. See Choosing a capture mode on page 66 for details.
- 3. Make sure that HDR is selected. If not, tap HAR to turn HDR on.
- **4.** Tap ...

Taking a panoramic selfie

 
With the Selfie Panorama mode, you can invite more people to take a selfie with you.



Some camera features are not available when you're in Selfie Panorama mode, such as zooming.

- 1. On the Home screen, tap the camera icon to open the Camera app.
- 2. Switch to Selfie Panorama mode. See Choosing a capture mode on page 66 for details.
- 3. Hold the phone at face level and in portrait orientation.


4. When you're ready to take the center shot, tap .





The capture box turns green and you'll hear a shutter sound as the photo is taken.

6. Then, slowly swivel to the opposite side until you see the white capture box move to the other side of the panorama overlay.

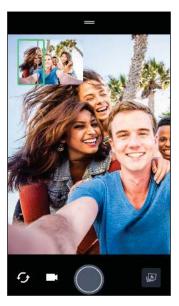

The capture box turns green and you'll hear a shutter sound as the photo is taken.

The camera stitches the frames into a single photo.



For best results, closely follow the straight and linear path of the capture box on the panorama overlay. Try to not tilt the phone up or down or move the capture box away from its path.

Taking a super wide-angle panoramic selfie


If you have more friends or scenery to capture, set the Selfie Panorama mode to Widest to stitch five photos instead of three.



Some camera features are not available when you're in Selfie Panorama mode, such as zooming.

- 1. On the Home screen, tap the camera icon to open the Camera app.
- Switch to Selfie Panorama mode. See Choosing a capture mode on page 66 for details.
- **4.** Tap \square to switch to \square .
- **5.** Hold the phone at face level and in portrait orientation.
- **6.** When you're ready to take the center shot, tap **.**
- 7. While holding your phone steadily, slowly swivel left or right on the phone's axis until you see the white capture box move to the side panel of the panorama overlay.
 - The capture box turns green and you'll hear a shutter sound as the photo is taken. When the second photo is taken, you'll see that the panorama overlay becomes wider.
- 8. Continue to slowly swivel your phone left and right to fill the entire panorama overlay with your photos.

For best results, follow the capture sequence indicated in the illustration below.

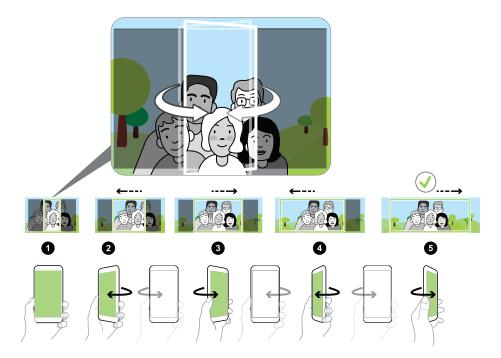

The camera stitches the frames into a single photo.

Taking a panoramic photo

Get a wider shot of landscapes in one sweep.



Some camera features are not available when you're in Sweep panorama mode, such as zooming.

- 1. On the Home screen, tap the camera icon to open the Camera app.
- 2. Switch to Panorama mode. See Choosing a capture mode on page 66 for details.
- **3.** When you're ready to take the shot, tap **①**.
- **4.** Pan left or right in either landscape or portrait view. Hold HTC Desire 10 pro as smoothly as you can to automatically capture frames.

You can also tap
to stop capturing anytime.

The camera stitches the frames into a single photo.

Using Zoe camera

Get more than just a still photo. With Zoe camera, capture living moments as a photo and 3 seconds of HD video.



Some camera features are not available when you're using Zoe camera, such as zooming.

- 1. On the Home screen, tap the camera icon to open the Camera app.
- 2. Switch to **Zoe camera** mode. See Choosing a capture mode on page 66 for details.
- 3. When you're ready to capture, tap ...

 When you see the shutter release icon slowly turn red, continue holding the phone steady as the camera captures the photo and 3-second video.



When taking your shot using the Zoe camera, it's good practice to keep HTC Desire 10 pro steady to capture moving subjects against a static background scene.

Recording a Hyperlapse video

Want to have a fast motion effect in your video? Use Hyperlapse mode to speed videos up to 12 times.

- 1. On the Home screen, tap the camera icon to open the Camera app.
- 2. Switch to Hyperlapse mode. See Choosing a capture mode on page 66 for details.
- 3. When you're ready to start recording, tap •.

- 4. Change focus to a different subject or area by tapping it on the Viewfinder screen.
- 5. Tap the flash icon to turn the flash on or off.
- **6.** To stop recording, tap **①**.

Choosing a scene

Instead of manually adjusting the camera settings, you can select a scene with predefined settings that best matches the environment you're capturing.

- 1. On the Home screen, tap the camera icon to open the Camera app.
- 2. Switch to Pro mode. See Choosing a capture mode on page 66 for details.
- 3. Tap A and then choose a preset scene. Select:
 - **C**★ when capturing nightscape such as a city skyline or street with city lights. Keep the camera steady when taking the shot for best results.
 - **\$\darkapparax** when capturing a fast-moving subject such as your kid playing sports or a moving car
 - when capturing a close-up shot of a subject such as a flower or insect.
- **4.** When you're ready to take the photo, tap **.**

If you need to manually adjust a scene and save it as a new preset, see Manually adjusting camera settings on page 76.

Manually adjusting camera settings

Want to have expert command of your camera settings for different environments or lighting conditions? Use Pro mode to manually adjust the values for settings like white balance, exposure, ISO, and more. You can then save the adjustments for reuse.

- 1. On the Home screen, tap the camera icon to open the Camera app.
- 2. Switch to Pro mode. See Choosing a capture mode on page 66 for details.
- 3. Tap a setting, and then drag its slider to make adjustments.



Tap a setting again to hide the slider.

To use one of your custom settings, tap \triangle or \bigcirc , and then select the custom setting \bigcirc , or \bigcirc) to use.

- 5. To change a setting back to auto, tap **A**.
- **6.** When you're ready to take the photo, tap **.**

Taking a RAW photo

Want to keep more detail in your shots, or fix the lighting in post processing? With Pro mode, you can take photos that will be saved as RAW image files in DNG format, along with a JPG compressed version.



RAW image files take up a lot of storage space. It's recommended to use a storage card as the default storage for photos and videos.

- 1. On the Home screen, tap the camera icon to open the Camera app.
- 2. Switch to Pro mode. See Choosing a capture mode on page 66 for details.
- 3. Tap to open the slideout menu.
- 4. Make sure with is selected. If not, tap to change it.

 Or, tap with to switch to if you only want to save a JPG compressed version.
- 5. Tap .

How does the Camera app capture RAW photos?

The Camera app captures a photo in both the DNG RAW format and JPG format.

Digital Negative (DNG) is an open-standard lossless RAW image format. Since a RAW file is typically 2 to 6 times larger than a JPEG file and is not viewable in most photo viewer apps, a photo is captured in both DNG and JPG formats. When you use the Google Photos app, you'll see a con on a photo to indicate that there is a DNG RAW format version of the file.

RAW photos are not processed when captured to preserve most of the original image data—such as dynamic range—so you can adjust lighting or make professional adjustments using advanced editing tools. After making adjustments, save the RAW photo as a JPG file if you want to print or share it.

Google Photos

What you can do on Google Photos

Here are some of the things you can do when using Google Photos on your phone.

- View, edit, and share the photos and videos you've taken on your phone. You can also access
 the media files previously backed up to your Google Account.
 - If you see riangleq or riangleq on a thumbnail, it means that the media file is only stored on the phone and not yet backed up to your Google Account. Without this icon means that the photo or video is already backed up to your account.
- To select photos and videos, press and hold a thumbnail to select one. Tap a date to select all the media files under it. Or, press and hold a thumbnail as your first selection, and then drag your finger to the last item you want to select.
- Enhance RAW photos taken using the HTC Camera app.
- Add Hyperlapse effect to your videos.



To learn more about Google Photos, tap = > Help. Or, you can visit support.google.com/photos.

Viewing photos and videos



When you open Google Photos for the first time, sign in to your Google Account, if prompted, and choose whether to turn backup and sync on or off.

- 1. From the Home screen, tap \fill , and then find and tap Photos.
 - You'll see your local and synced photos and videos organized by date. If you see \heartsuit or \diamondsuit on a thumbnail, it means that the media file is only stored on the phone and not yet backed up to your account.
- 2. To switch to another view, tap : > Layout, and then choose how you want to view your media files.
- 3. Tap a thumbnail to view it in full screen.
- 4. To view only the photos and videos saved on the phone storage and storage card, tap = to open the slideout menu, and then tap Device folders.

Editing your photos

- 1. From the Home screen, tap :::, and then find and tap Photos.
- 2. Tap a photo thumbnail to view it in full screen.
- 3. Tap , and then do any of the following:
 - Tap 📑 to adjust the brightness, color, and more.
 - Tap to apply a filter to the photo.
 - Tap 🗘 to rotate or crop the photo.
- 4. While you're editing, press and hold the photo to compare your changes to the original.
- 5. After making your adjustment, tap ✓.
- 6. Tap Save.

Enhancing RAW photos

After capturing RAW photos, you can improve its contrast and detail from the Photos app.

- 1. From the Home screen, tap ..., and then find and tap Photos.
- 2. Find and tap the RAW photo you want to enhance.

RAW photos are marked with the icon on the thumbnail.

- 3. Tap
 , and then tap RAW Enhancement.
- **4.** Tap ★ to toggle between before and after photos.
- 5. Tap \checkmark when done.

Trimming a video

- 1. From the Home screen, tap ..., and then find and tap Photos.
- 2. Tap a video thumbnail to view it in full screen.
- 3. Tap \nearrow , and then drag the trim sliders to the part where you want the video to begin and end.
- **4.** Tap ▶ to preview your trimmed video.
- 5. Tap Save.

The trimmed video is saved as a copy. The original video remains unedited.

Editing a Hyperlapse video

If you captured a video in Hyperlapse mode, you can apply varying speeds to different sections of the video.

- 1. From the Home screen, tap ..., and then find and tap Photos.
- Find and tap the Hyperlapse video to view it in full screen.
 Hyperlapse videos are marked with the icon on the thumbnail.
- 3. Tap = .
- 4. Move the left and right sliders to divide your video into sections.



- 5. Tap a section that you want to adjust, and then tap a dot that corresponds to particular playback speed to modify the selected section.
- **6.** Repeat the previous step for the remaining sections.
- **7.** Tap **✓**.

The edited video is saved as a copy. The original video remains unedited.

Adding a Hyperlapse effect on a regular video

- 1. From the Home screen, tap ..., and then find and tap Photos.
- 2. Find and tap the thumbnail of a video to view it in full screen.
- 3. Tap : > Edit in.
- 4. Tap Create a Hyperlapse video.
- 5. Move the left and right sliders to divide your video into sections.
- **6.** Tap a section that you want to adjust, and then tap a dot that corresponds to particular playback speed to modify the selected section.
- 7. Repeat the previous step for the remaining sections.
- **8.** Tap **✓**.

The edited video is saved as a copy. The original video remains unedited.

Power and storage management

Tips for extending battery life

How long the battery can last before it needs recharging depends on how you use HTC Desire 10 pro. Try out some of these tips to help increase battery life.

Use the power management features

- Turn Power saver mode and Extreme power saver mode on in Settings.
- Monitoring your battery usage helps identify what's using the most power so you can choose
 what to do about it. For details, see Checking battery usage on page 83.

Manage your connections

- Turn off wireless connections such as mobile data, Wi-Fi, or Bluetooth when not in use.
- Turn GPS on only when a precise location is needed, such as while using navigation or location-based apps. See Turning location services on or off on page 146.
- Turn on Airplane mode when you don't need any wireless connections and you don't want to receive calls or messages.

Manage your display

Lowering the brightness, letting the display sleep when not in use, and keeping it simple helps save battery power.

- Use automatic brightness (the default), or manually lower the brightness.
- Set the screen timeout to a shorter time.
- Don't use a live wallpaper for your Home screen. Animation effects are nice to show off to other people but they drain your battery.

Changing your wallpaper to a plain, black background can also help a little. The less color is displayed, the less battery is used.

For more details, see Settings and security on page 146 and Personalizing on page 54.

Manage your apps

- Battery optimization helps extend battery standby time. See Battery optimization for apps on page 84.
- Install the latest software and application updates. Updates sometimes include battery performance improvements.
- Uninstall or disable apps that you never use.

Many apps run processes or sync data in the background even when you're not using them. If there are apps that you don't need anymore, uninstall them.

If an app came preloaded and can't be uninstalled, disabling the app can still prevent it from continuously running or syncing data. See Disabling an app on page 152.

Limit background data and sync

Background data and sync can use a lot of battery power if you have many apps syncing data in the background. It's recommended not to let apps sync data too often. Determine which apps can be set with longer sync times, or sync manually.

- In Settings, tap Accounts & sync and check what types of data are being synced in your
 online accounts. When the battery is starting to run low, temporarily disable syncing some
 data.
- If you have many email accounts, consider prolonging the sync time of some accounts.
 In the Mail app, select an account, tap : > Settings > Sync, Send & Receive, and then adjust the settings under Sync schedule.
- When you're not traveling from one place to another, sync weather updates of only your current location, rather than in all of your named cities. Open the Weather app, and then tap to edit and remove unneeded cities.
- Choose widgets wisely.
 - Some widgets constantly sync data. Consider removing the ones that are not important from your Home screen.

Other tips

To squeeze in a little bit more battery power, try these tips:

- Tone down the ringtone and media volume.
- Minimize the use of vibration or sound feedback. In Settings, tap Sound & notification and choose which ones you don't need and can disable.
- Check your apps' settings as you may find more options to optimize the battery.

Using power saver mode

Power saver mode helps to increase battery life. It reduces the usage of phone features that drain the battery such as location services and mobile data.

- 1. From the Home screen, tap ..., and then find and tap Settings.
- 2. Tap Power.
- 3. Tap the Power saver On/Off switch to turn power saver mode on or off.

To set when to automatically switch this mode on, tap **Power saver**, select the **Automatically turn on power saver** option, and then select a battery level.

Extreme power saving mode

In times when you don't need to use much of your phone, turn Extreme power saving mode on to extend battery life longer. In this mode, standby time can last longer than usual, and you can only use the most basic functions such as phone calls, text messaging, and email.

- 1. From the Home screen, tap ..., and then find and tap Settings.
- 2. Tap Power.
- **3.** Tap the Extreme power saving mode **On/Off** switch to turn extreme power saving mode on or off.

If you want to set when to automatically switch this mode on, tap **Extreme power saving** mode, select the **Automatically turn on extreme power saving mode** option, and select a battery level.

Under More information, tap **Learn more** for details on how Extreme power saving mode maximizes battery life.

Displaying the battery percentage

You can check the percentage of remaining battery power right from the status bar.

- 1. From the Home screen, tap ..., and then find and tap Settings.
- 2. Tap Power.
- 3. Select Show battery level.

Checking battery usage

See how the system and apps are using the battery and how much power is being used.

- 1. From the Home screen, tap ..., and then find and tap Settings.
- 2. Tap Power.

- 3. Tap Battery usage, and then tap an item to check how it's using the battery.
- **4.** If you see the Adjust power use section while viewing battery use details, you can tap the option underneath it to adjust settings that affect battery usage.

Another way to check the battery usage per app is to go to **Settings**, and then tap **Apps**. Tap the app you want to check, and then tap **Battery**.



If the **Battery** option on the App info screen is grayed out, it means the app is currently not using the battery.

Checking battery history

Check how long you've been using HTC Desire 10 pro since the last charge. You can also see a chart that shows how long the screen has been on, and how long you've been using connections like the mobile network or Wi-Fi.

- 1. From the Home screen, tap :::, and then find and tap Settings.
- 2. Tap Power.
- 3. Tap **History** to view battery usage over time.

Battery optimization for apps

When you have connections such as Wi-Fi on while the phone is in sleep mode, some apps may still continue to use the battery. Starting from Android 6.0, battery optimization is enabled for all apps by default which helps prolong battery standby time when you're not using the phone.

The phone needs to be sitting idle for an extended period of time before battery optimization takes effect.

Turning battery optimization off in apps

If there are apps that you don't want battery optimization enabled, you can turn the feature off in those apps.

- 1. From the Home screen, tap ..., and then find and tap Settings.
- 2. Tap Power.
- 3. Tap Battery optimization.
- **4.** Tap **Not optimized** > **All apps** to see the complete list of apps.
- To turn off battery optimization in an app, tap the app name, and then tap Don't optimize > Done.

Repeat this process to turn off optimization in other apps.

To filter the list and see which apps have battery optimization disabled, tap **All apps** > **Not optimized**.

Freeing up storage space

As you use HTC Desire 10 pro, you'll accumulate data and fill its storage capacity over time. Here are some tips on how to free up phone storage space.

Manage photos and videos

- After taking continuous camera shots, keep only the best shot. Discard the rest, if you don't need them.
- After editing a photo or trimming a video, the original file is kept. Delete original files or move them elsewhere, such as to your computer.
- If you're only sending videos through MMS, use a lower resolution. Hi-res video takes up more space.
- RAW image files take up a lot of storage space. It's recommended to use a storage card as the
 default storage for photos and videos. If your storage card is running low on space, consider
 moving RAW image files to your computer.

Remove unused themes

Themes can quickly consume up storage space because themes can include images, sounds and icons. Remove themes you're not using. See Deleting a theme on page 56.

Back up data and files

Keep only the most recent data in your apps and files that you often need to use. You can back up your other data and files. For some tips, see Ways of backing up files, data, and settings on page 95.

Remove or disable apps

Uninstall apps that you've downloaded if no longer need them. See Uninstalling an app on page 34. Preinstalled apps can be disabled when you're not using them. See Disabling an app on page 152.

Move apps to the storage card

Third-party apps that you've downloaded and installed can be moved to the storage card if you've set up the card as internal storage. See Moving apps and data between the phone storage and storage card on page 87 and Moving an app to the storage card on page 88.

Types of storage

Starting from Android 6.0, there have been some changes on how and where downloaded apps and their data can be stored.

Phone storage

This is the internal storage which contains the Android system, preinstalled apps, email, text messages, and cached data from the apps. You can also install apps that you've downloaded and capture photos, videos, and screenshots to this storage.

Storage card

Use your storage card as a removable storage to store and access your media and other files on HTC Desire 10 pro or any Android phone, or set it up as an extension of the internal storage. See Should I use the storage card as removable or internal storage? on page 86.

USB storage

You can plug in an external USB storage device such as a USB flash drive or an SD card reader. You need a special cable to connect HTC Desire 10 pro and a USB storage device.

Should I use the storage card as removable or internal storage?

Use your storage card as removable storage when there's already content such as your media and other files so that you don't lose these content. If you have a brand new storage card, choose whether to use it as removable storage or set it up as an extension of the internal storage.

Removable storage

Use a new storage card as removable storage to be able to insert and use the card on HTC Desire 10 pro and other Android phones.

Internal storage

Set up a new storage card as internal storage for more privacy and secure use. This encrypts and formats the storage card to work just like the internal storage.

This also expands the internal storage space since:

- Captured screenshots, camera shots, media, and other files will be stored on the storage card.
- Third-party apps that you installed and their data can be moved between the phone storage and storage card.

After setting up the storage card as internal storage, the card can only be used on HTC Desire 10 pro where it has been formatted.

Setting up your storage card as internal storage

When you insert a storage card that has not been used on HTC Desire 10 pro before, the card will be mounted as removable storage by default.

If the storage card is new or doesn't have content you want to keep, you can format the storage card to use it as internal storage for HTC Desire 10 pro.



- See Should I use the storage card as removable or internal storage? on page 86 to find out the differences between using the storage card as removable storage or internal storage.
- If there are still files on the storage card, back up the files first before you format the card.
- 1. From the Home screen, tap ... > Settings > Storage.
- 2. Under Removable storage, tap 🌣 next to the storage card name.
- 3. Tap Format as internal > Erase & format > Format.
- **4.** Follow the onscreen instructions to move your installed apps and their data from the phone storage to the storage card.



If you no longer want to use your storage card as internal storage, you can reformat the card as removable storage. Before you do so, make sure to move all the apps and data from the card back to the phone storage. See Moving apps and data between the phone storage and storage card on page 87.

Moving apps and data between the phone storage and storage card

If you've set up your storage card as internal storage, you can move third-party apps that you installed and their data such as photos, media, and downloaded files to the storage card to free up phone storage space.

If you no longer want to use your storage card as internal storage, make sure to move all the apps and data from the card back to the phone storage.

- 1. From the Home screen, tap >Settings > Storage.
- 2. Tap the name of your storage card if you're moving app data from the phone storage to the card, or tap **Phone storage** if you're moving data from the storage card back to the phone storage.

- 3. Tap : > Migrate data.
- 4. Tap Move.



- Screenshots will also be migrated.
- When you take new photos or videos, capture new screenshots, or download new files after the migration, they will be saved to the new storage location.

Moving an app to the storage card

When you're running out of phone storage space, you can move your downloaded apps to the storage card if the card has been set up as internal storage.



Preinstalled apps cannot be moved.

- 1. From the Home screen, tap > Settings > Storage.
- 2. Tap Phone storage > Apps.
- 3. Tap the app you want to move.
- 4. Tap Change, and then tap the storage card name.
- 5. Tap Move.



You can also move an app from the storage card back to the phone storage.

Copying files between the phone storage and storage card

Starting from Android 6.0, you can go to Settings to view and manage files on the phone storage and storage card. If you're using your storage card as removable storage, you can copy your files between the phone storage and storage card. You can also copy files to or from an external USB storage device when you have it connected to HTC Desire 10 pro.

- 1. From the Home screen, tap ::: > Settings > Storage.
- Tap Phone storage > Explore, or tap the storage card name.
 Or tap the external USB storage device if you have one connected.
- 3. Open the folder that contains the files you want to copy.

- 4. To select or deselect files:
 - Press and hold a file to select it. To select more files, tap each file.
 - Tap a file to deselect it.
 - To select all files, press and hold a file first, and then tap > Select all.
- **5.** Tap : > Copy to.
- **6.** In the Save to slideout menu, choose the type of storage where to paste to, and then open the destination folder.
- 7. Tap Copy.

Copying files between HTC Desire 10 pro and your computer

You can copy your music, photos, and other files to HTC Desire 10 pro.



- Save and close your files before copying them from your computer to HTC Desire 10 pro, or vice versa.
- If you're using your storage card as internal storage, your computer will only show storage card content.
- 1. Connect HTC Desire 10 pro to the computer using the supplied USB cable.
- 2. On HTC Desire 10 pro, unlock the screen if it's locked.
- **3.** On the pop-up message that asks whether to use USB for file transfers, tap **Yes**.

If you don't see this message, slide the Notifications panel open, tap the **Use USB for** notification, and then tap **File transfers**.

You'll then see options for viewing or importing files on the computer screen.

- **4.** Choose to view files.
- **5.** Copy the files from your computer to HTC Desire 10 pro, or vice versa.
- **6.** After copying the files, disconnect HTC Desire 10 pro from the computer.

Unmounting the storage card

When you need to remove the storage card while HTC Desire 10 pro is on, unmount the storage card first to prevent corrupting or damaging the files in the storage card.



If your storage card is used as internal storage and there are apps that were moved to the card, you will not be able to open these apps after unmounting the card.

- 1. From the Home screen, tap ::: > Settings > Storage.
- **2.** Do one of the following:
 - If your storage card appears under Removable storage, tap >Eject next to the card name.
 - If your storage card appears under Internal storage, tap the card name, and then tap Eject.

Boost+

About Boost+

Here are some of the things you can do when using the Boost+ app.



- Monitor your phone storage space and memory usage.
- Delete cache, app installers, and temporary files on your phone.
- Optimize system resources to extend battery life while you're using apps and playing your favorite games.
- Manage irregular app activities, stop unused apps from running in the background, lock apps with sensitive content, or uninstall apps you don't use.

Turning Smart Boost on or off

The Smart Boost feature allows the Boost+ app to automatically free up memory space on your phone.

- 1. From the Home screen, tap ..., and then find and tap Boost+.
- 2. Tap \$\frac{\pi}{2}\$, and then select or clear the **Smart boost** option.

- 3. When prompted to set up the system permission for Boost+, tap Continue > Boost+
- 4. Tap the Permit usage access On/Off switch.

Adding apps to the Smart Boost exception list

You can choose to set the Boost+ app to skip some apps when it runs its Smart Boost checks.

- 1. From the Home screen, tap ..., and then find and tap Boost+.
- 2. Tap Smart boost.
- 3. Tap : > Manage skipped apps.
- **4.** Tap **+**, and then select the apps to skip.
- 5. Tap Add.

Manually clearing junk files

Regularly remove junk files that clutter your storage space or slow down the phone's performance.

- 1. From the Home screen, tap ..., and then find and tap Boost+.
- 2. Tap Clear junk.

The Boost+ app will show you how much storage space is being used up by different junk files, such as cache files, ad files, temporary files, and app installers.

3. Select or clear the junk file types you want to delete.

You can tap ✓ next to a category to view the files under it.

4. Tap **<** to clear junk files.



In the Boost+ app settings, you can also choose to get notified when your junk files exceed a set limit or when an app is unused over a period of time.

Optimizing apps running in the foreground

When you enable an app in the Optimize foreground apps list, your phone automatically optimizes system resources while you're using it. This helps extend your phone's battery life.



This feature may not be available on all phones.

- 1. From the Home screen, tap ..., and then find and tap Boost+.
- 2. Tap Optimize foreground apps.
- 3. On the Optimize foreground apps screen, tap the On/Off switch next to an app to turn it on.

Managing irregular activities of downloaded apps

The Boost+ app can check for irregular activities from a downloaded app that may affect your phone's performance. When an irregular activity is detected, you can choose to stop the activity. Or, you can also uninstall the downloaded app via the Boost+ app.



You can only uninstall the apps you've downloaded.

- 1. From the Home screen, tap ..., and then find and tap Boost+.
- 2. Tap Manage apps.
- **3.** Do any of the following:
 - To uninstall apps you don't need, select one or more apps under the Apps tab, and then tap
 - Go to the Irregular activities tab to see if there are irregular activities detected. If there's one, tap it and choose an action.

Managing apps running in the background

You can set the Boost+ app to automatically stop unused apps from running in the background. This helps save battery power.

- 1. From the Home screen, tap ..., and then find and tap Boost+.
- 2. Tap Optimize background apps.
- 3. Make sure the Optimize background apps **On/Off** switch is turned on.
 - Boost+ lists down unused apps that are running in the background.
- **4.** Tap an app under Auto stop to choose whether to always stop the app from running, stop when the app isn't running for a certain period of time, or always allow the app to run in the background.

To auto stop an app after a period of inactivity, tap ***** > **Schedule auto stop**, and then choose how long an app is unused before it's automatically stopped.

Creating an unlock pattern for some apps

Add a security pattern to some installed apps that you treat as private. Lock these apps to require an unlock pattern whenever the app is opened, avoiding others to access it without your permission.

- 1. From the Home screen, tap ..., and then find and tap Boost+.
- 2. Tap Lock apps.
- 3. Draw your desired unlock pattern.
- **4.** You can sign in to your Google Account or answer a security question. This will only serve as your authentication method to reset the unlock pattern.

- 5. Tap the On/Off switch next to an app to require an unlock pattern to open it.
- **6.** Press **◁**.



- To change the app unlock pattern, tap **Lock apps**, and then draw your unlock pattern. Tap : > Change pattern.
- To use your fingerprint to unlock apps, tap **Lock apps**. When you're prompted to draw the unlock pattern, tap , and then select the **Use fingerprint to unlock** option.

Sync, backup, and reset

Adding your social networks, email accounts, and more

You can sync contacts, calendars, and other information from your social networks, email accounts, and online services on HTC Desire 10 pro. Depending on the account type, signing in to your online accounts lets you sync updates between HTC Desire 10 pro and the Web.

- 1. From the Home screen, tap ::: > Settings > Accounts & sync.
- 2. Tap +.
- 3. Tap the account type you want to add.
- 4. Follow the onscreen instructions to enter your account information.



- In **Settings** > **Accounts & sync**, tap the Auto sync **On/Off** switch to turn automatic sync of all your accounts.
- You can add several Google Accounts.

Syncing your accounts

- 1. From the Home screen, tap ::: > Settings > Accounts & sync.
- 2. Tap the Auto sync On/Off switch to turn automatic sync of all your accounts on or off.
- 3. To manually sync individual accounts, tap an account type, and then tap : > Sync now on the Account settings screen.



On the Account settings screen, you can also change the sync settings for an account.

Removing an account

Remove accounts from HTC Desire 10 pro if you no longer use them. Removing an account does not remove accounts and information from the online service itself.

- 1. From the Home screen, tap ::: > Settings > Accounts & sync.
- Tap an account type.If you've signed into multiple accounts under an account type, tap the account to remove.
- **3.** Tap **⋮** > **Remove account**.



Some personal data may be retained by the third-party app after you have removed the account from HTC Desire 10 pro.

Ways of backing up files, data, and settings

Worried that you might lose important stuff on HTC Desire 10 pro? Back up HTC Desire 10 pro before you remove content from the storage, do a factory reset, or upgrade to a new phone.

Android Backup Service

Use your Google Account to automatically back up app data and settings including Wi-Fi passwords and files stored by certain apps.

HTC Sync Manager

Use HTC Sync Manager to import music, photos, and videos from HTC Desire 10 pro to your computer. You can also sync locally stored contacts and playlists between HTC Desire 10 pro and your computer.

Likewise, HTC Sync Manager is a good alternative if you don't want to back up your accounts, settings, and other personal content to the cloud. You can use it to create backups of HTC Desire 10 pro on your computer.

Other backup options

If you want, you can separately back up your data or files.

Some apps allow you to back up data to the storage card—if it's used as removable storage—so you can easily restore them after a factory reset. Just make sure not to erase the storage card when you do a factory reset.

In certain apps, you may be able to use the phone storage for backing up and restoring app data. If an app is causing some problem and you need to clear its data to try resolving the problem, back up the app data to the phone storage first.

Messages	Back up your text messages to the storage card or phone storage, or save them as an email attachment.
Contacts	 Save contacts and other personal data to your online accounts so you can just sync them when switching to another phone. If you have locally stored contacts in the People app, export them to the storage card or phone storage.
Files	Connect HTC Desire 10 pro to your computer as a disk drive to manually copy and paste files to your computer.
Other data	Check other apps to see if they support exporting data to the storage card or phone storage.

Using Android Backup Service

Starting from Android 6.0, use the Android Backup Service to back up your HTC phone to Google Drive $^{\text{TM}}$.

This service can back up and restore the following:

Back up What content or settings are backed up App data In HTC apps, app data includes contacts stored on HTC Desire 10 pro, call history, Clock and Weather city list, and email accounts. Data from third-party apps may also be saved in the backup, depending on the app developer settings. Settings These include ringtones, grid size and sort order on the Apps screen, Wi-Fi networks and passwords and some device settings.

When auto backup is enabled, the Android Backup Service periodically backs up your phone to a private folder in Google Drive. Auto backup occurs every 24 hours when the phone is idle, charging, and connected to a Wi-Fi network.

Backup data will not count towards your Google Drive storage quota. Large files or files that app developers have chosen to exclude from the service will not be backed up.



Restoring your wall paper from your old phone may depend on screen resolution compatibility of both your old phone and HTC Desire $10\ \mathrm{pro}.$

Backing up HTC Desire 10 pro

Automatically back up HTC Desire 10 pro to Google Drive so you can restore content such as app data and settings when needed.

- 1. From the Home screen, tap ::: > Settings > Backup & reset.
- 2. Tap Back up my data.

- 3. Tap the On/Off switch to turn it on, and then press \triangleleft .
- 4. Make sure Automatic restore is turned on.

This allows an app's data and settings saved through the Android Backup Service to be restored when you reinstall the app on HTC Desire 10 pro.



To select a backup account other than your primary Google Account, tap **Backup account** and then select another Google Account. You can also tap **Add account** to add a new Google Account for your backup.

Backing up contacts and messages

If you want to separately back up contacts and text messages on HTC Desire 10 pro, here are some tips on how to export or import them.

Backing up your contacts

- 1. From the Home screen, tap ..., and then find and tap People.
- 2. On the People tab, tap : > Manage contacts.
- 3. Tap Import/Export contacts > Export to phone storage or Export to SD card.
- 4. Select an account or type of contacts to export.
- **5.** To help protect your data, tap **Yes**, and then set a password for this backup. Be sure to remember this password. You'll need to enter it again when importing contacts.
 - If you don't need a password, tap No.
- **6.** Tap **OK**.

Restoring contacts

- 1. On the People tab, tap : > Manage contacts.
- 2. Tap Import/Export contacts > Import from phone storage or Import from SD card.
- **3.** If you have more than one account set up, tap the type for the imported contacts.
- **4.** If you have multiple backups available, select the backup you want to import, and then tap **OK**.
- 5. Enter the password you've set for this backup, and then tap **OK**.

Backing up your text messages

Keep important text messages by backing them up so you can restore them to the HTC Messages app, if needed. The Messages app backs up either to the phone storage or to your storage card if you have one inserted.



Text messages in the secure box and blocked messages will not be backed up. To include such messages to your backup, move them first to the general message box.

- 1. From the Home screen, tap ..., and then find and tap Messages.
- 2. Tap : > Back up/Restore SMS > Back up > Back up SMS.
- **3.** To help protect your data, set a password for your backup. Be sure to remember this password. You'll need to enter it again when restoring messages.
 - If you don't need a password, select **Do not password protect this backup**.
- 4. Enter a name for your backup file, and then tap **OK**.

Backing up text messages by email



- You need to set up your email account in the HTC Mail app.
- Text messages in the secure box and blocked messages will not be backed up. To include such messages to your backup, move them first to the general message box.
- 1. From the Home screen, tap :::, and then find and tap Messages.
- 2. Tap : > Back up/Restore SMS.
- 3. Tap Back up > Back up SMS via mail.
- **4.** To help protect your data, set a password for your backup. Be sure to remember this password. You'll need to enter it again when restoring messages.
 - If you don't need a password, select **Do not password protect this backup**.
- 5. Enter your email address.
- 6. Compose your email message, and then send it.

Restoring text messages

- 1. From the Home screen, tap ..., and then find and tap Messages.
- 2. Tap : > Back up/Restore SMS > Restore.
- 3. Choose how you want to restore the messages, and tap Next.
- 4. Tap the backup to import.

- 5. Enter the password you've set for this backup. If you didn't set a password, select **This** backup file is not password protected.
- **6.** Tap **OK**.

To restore text messages that were backed up via email, open the email message with the backup file attachment from the Mail app. Tap the attachment to download it first, and then tap it again to open the backup file to import. Enter the password you've set for this backup or select **This backup file is not password protected**.

HTC Sync Manager

About HTC Sync Manager

HTC Sync Manager supports a computer running a Windows or OS X operating system.

Here's what you can do with HTC Sync Manager.

View and manage media on your computer and phone

- Browse and manage music, photos, and videos that are on your computer and your phone.
- Import iTunes and Windows Media[®] Player playlists from your computer to HTC Sync Manager.
- Create playlists from music on your phone or your computer and then sync these playlists to both devices.
- Play music and videos using the built-in player.

Transfer content

- Transfer iPhone photos, text messages, contacts, and more to your HTC phone.
- Import all music, photos, and videos from your HTC phone to your computer.
- Copy selected music, photos, or videos from your computer to your phone.
- Import documents from your computer to your phone.

Back up and restore

Back up your HTC phone to your computer so you can easily restore your backup to the same phone or to another HTC phone.

Sync data

Sync data between your phone and your computer.

Installing HTC Sync Manager on your computer

You can install HTC Sync Manager on Windows XP or later versions. To install it on a Mac computer, you need OS \times 10.6 or later versions.

- 1. Download the HTC Sync Manager installer from the HTC support site: htc.com/hsm/.
- 2. Launch the installer and follow the onscreen instructions.
- **3.** Connect your phone to your computer using the supplied USB cable. HTC Sync Manager opens.



- If you have problems in installing HTC Sync Manager, close all your running programs and reinstall. If the problem persists, temporarily disable your anti-virus program and try installing again.
- If you disabled your anti-virus program, make sure to turn it back on after installing HTC Sync Manager.

Transferring iPhone content to your HTC phone

With HTC Sync Manager, easily transfer iPhone content such as contacts, messages, wallpaper, camera photos, and more to your HTC phone.



You need to use iTunes 9.0 or later to back up your iPhone content first to your computer.

- 1. Connect your iPhone and your HTC phone to your computer.
- 2. In HTC Sync Manager, click Home > Transfer & Backup.
- 3. Click the **Get Started** button.
- **4.** If you haven't used iTunes to back up your iPhone content to your computer, please do so before proceeding.
- 5. Select your iPhone backup file, and then click **OK**.
- 6. Select the types of content you want to transfer to your HTC phone.
 You can choose whether to replace the content on your HTC phone with the iPhone content.
- 7. Click Start. Wait for HTC Sync Manager to finish transferring content.

Getting help

To find out more about using HTC Sync Manager, download the user guide PDF from the HTC support site (htc.com/hsm/). Or open the Help that comes with the software.



On Windows, click in HTC Sync Manager, and then click Help.

Restarting HTC Desire 10 pro (Soft reset)

If HTC Desire 10 pro is running slower than normal, is unresponsive, or has an app that is not performing properly, try rebooting and see if that helps solve the problem.

- 1. If the display is off, press the POWER button to turn it back on.
- 2. Press and hold the POWER button, and then tap Restart.

HTC Desire 10 pro not responding?

If HTC Desire 10 pro does not respond when you touch the screen or press the buttons, you can still restart it.

Press and hold the POWER and VOLUME DOWN buttons for at least 9 seconds. HTC Desire 10 pro then restarts.

Resetting network settings

Reset the network settings when you're having problems connecting HTC Desire 10 pro to your mobile data or Wi-Fi network and Bluetooth devices.

- 1. From the Home screen, tap ::: > Settings > Backup & reset.
- 2. Tap Network settings reset.
- 3. Tap Reset settings.
- 4. Tap Reset settings.

Resetting HTC Desire 10 pro (Hard reset)

If HTC Desire 10 pro has a persistent problem that cannot be solved, you can perform a factory reset (also called a hard reset or master reset). A factory reset reverts the phone back to its initial state—the state before you turned on the phone for the first time.



Factory reset will remove all data on your phone storage, including apps you've downloaded and installed, your accounts, your files, as well as system and app data and settings. Be sure to back up any data and files you want to keep before you do a factory reset.

- 1. From the Home screen, tap :: > Settings > Backup & reset.
- 2. Tap Factory data reset.

To avoid deleting media and other data from your storage card, make sure you do not select the **Erase SD card** option.

- 3. Tap Reset phone.
- **4.** Tap **OK**.




A factory reset may not permanently erase all data from your phone, including personal information.

HTC BlinkFeed

What is HTC BlinkFeed?

Get the latest news about your interests or status updates from your friends right on HTC BlinkFeed. Set up which social networks, news sources, and more will appear.

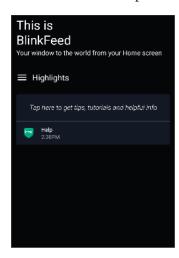

- Swipe up or down to browse stories on HTC BlinkFeed.
- Tap a tile to view the content. If it's a video tile, you can watch the video in full screen, hear the audio, and control the playback.
- While viewing a news article, swipe left or right to see more stories.
- While in HTC BlinkFeed, you can press or to scroll to the top.
- Scroll to the top and pull down on the screen to manually refresh the stream.
- Swipe right on HTC BlinkFeed to open the slideout menu where you can choose the type of feeds or add your custom topics to display.



- You'll see the clock widget on HTC BlinkFeed if you've set HTC BlinkFeed as the main Home screen.
- HTC BlinkFeed is a part of the HTC Sense Home app. To get the latest features of HTC BlinkFeed, make sure you've downloaded the newest version of HTC Sense Home.

Turning HTC BlinkFeed on or off

1. On the Home screen, slide two fingers together.



- **2.** Do one of the following:
 - To turn on HTC BlinkFeed, swipe right on the thumbnails to +, then tap it.



 To turn off HTC BlinkFeed, tap the thumbnail to select it, press and hold the thumbnail and drag it to Remove.

Restaurant recommendations

Can't think of what to eat? Get recommendations for restaurants nearby in HTC BlinkFeed.



Make sure you've added personalized content to HTC BlinkFeed. See Ways of adding content on HTC BlinkFeed on page 105.

- 1. On HTC BlinkFeed, swipe right to open the slideout menu.
- 2. Tap + and make sure **Mealtime recommendations** is selected. If prompted, give HTC Sense Home permission to access your location and personal usage data.

To get restaurant recommendations, you'll need to actively use HTC BlinkFeed daily. Restaurant recommendations will show up as a tile in HTC BlinkFeed and may also show up on your lock screen.

Viewing restaurant recommendations

View photos of the restaurant, get directions to the restaurant, and more.

- 1. When you see a restaurant recommendation tile, tap it to view more information.
- 2. You can do the following:
 - Tap the photo tile or View Photos to browse photos of the restaurant.
 - Tap the map icon or address to see the location and get directions to the restaurant.
 - If you see a phone number, tap the phone number to call the restaurant.
 - If available, tap the dots at the bottom to see more options.

Ways of adding content on HTC BlinkFeed

Personalize HTC BlinkFeed to show articles and status updates from your favorite news sources and apps.

Adding sources to HTC BlinkFeed

Add news sources such as News Republic[™] to select from a wide variety of news services.

- 1. On HTC BlinkFeed, swipe right to open the slideout menu.
- 2. Tap +, and then select the sources you want to add.

Selecting feeds

Discover stories and articles on HTC BlinkFeed.



You need to add a news source before you can select feeds.

- 1. On HTC BlinkFeed, swipe right to open the slideout menu.
- 2. Next to News Republic, tap \checkmark > \bullet .
- **3.** Swipe across the screen to browse the categories.
- 4. Select one or more feeds.

Showing content from your apps and social networks

See your friends' posts in social networks or show content from your HTC apps right on HTC BlinkFeed.



- You need to sign in to your social networks before you can post a status update from HTC BlinkFeed.
- When adding a social network to HTC BlinkFeed, you need to give HTC Sense permission to access it.
- 1. On HTC BlinkFeed, swipe right to open the slideout menu.
- 2. Tap +, and then select the apps and social networks you like.

Searching and adding a topic of interest

Looking for a more specific topic? Search for and select topics of interest to display them on HTC BlinkFeed.

- 1. On HTC BlinkFeed, swipe right to open the slideout menu.
- 2. Next to News Republic, tap \checkmark > \bullet .
- 3. Tap Q, and then tap **Search topics** and enter keywords of what you're looking for.
- 4. Tap a result to add it to My topics in the News Republic app.

Customizing the Highlights feed

The Highlights feed displays a mix of top trending articles and status updates from the feed sources you added. You can set the Highlights feed to only show items from your favorite news sources and apps.

- 1. On HTC BlinkFeed, swipe right to open the slideout menu.
- 2. Tap : > Settings > Choose Highlights topics.
- ${\bf 3.} \quad {\bf Select \ the \ feed \ sources \ you \ want \ to \ appear \ in \ Highlights.}$

Playing videos on HTC BlinkFeed

If you're connected to Wi-Fi and there's a news or social media post that contains a video, the video plays automatically on the tile.

- Tap a video tile to play it in full screen. Tap the title of the video tile to open its article page.
- While the video is playing, tap the screen to see the playback controls.

Posting to your social networks

You can easily post a status update from HTC BlinkFeed.



- You need to sign in to your social networks before you can post a status update from HTC BlinkFeed.
 - When adding a social network to HTC BlinkFeed, you need to give HTC Sense permission to access it
 - 1. On HTC BlinkFeed, swipe right to open the slideout menu.
 - 2. Tap : > Compose, and then choose a social network.
 - 3. Compose your status update and post it on your social network.

Removing content from HTC BlinkFeed

Whether it's a tile or an entire feed, you can remove content you don't want to see on HTC BlinkFeed.

- To remove a tile, press and hold the tile you want to remove, and then tap **Remove**.
- To remove a feed source, in the slideout menu, next to News Republic tap ∨ > . Then tap any tile marked with ∨ to remove it.
- To remove social networks or apps from HTC BlinkFeed, in the slideout menu, tap + . Then uncheck the social networks or apps you want to hide from HTC BlinkFeed.

Phone calls

Placing and receiving calls

Making a call with Smart dial

You can either dial a number directly, or use Smart dial to quickly place a call. Smart dial searches and calls a stored/synced contact or a number from your call history.

- 1. On the Home screen, tap the phone icon to open the **Phone** app.
- **2.** Enter the phone number or first few letters of the contact's name to see the top matching contact.
- 3. If there are a number of matches found (for example, 8 matches), tap the number to see all the matches.
- 4. Tap the contact you want to call.



- To check other phone numbers associated with the contact, tap 👪 beside the contact name.
- If the phone number has an extension, tap after connecting to the main line and then dial the extension number.
- 5. Tap the call button that corresponds to the card you want to use.

Making a call with your voice

Call a contact hands-free using your voice.

- 1. On the Home screen, tap the phone icon to open the **Phone** app.
- **2.** Tap **↓** .
- **3.** Say the name of contact you want to call. For example, say "Call [person's name in phonebook]."
- **4.** Follow screen instructions to make the call.

Dialing an extension number

To skip voice prompts when dialing an extension number, do one of the following:

- After dialing the main number, press and hold * . A comma (,) is added to the number you are dialing. Enter the extension number, and then tap the call button. You will be connected to the mainline and then to the extension number.
- After dialing the main number, press and hold # to add a semicolon (;). Enter the extension number after the semicolon, and then tap the call button. After connecting to the main line, tap **Send** to dial the extension number.

You can save phone numbers with an extension in the People app.

Returning a missed call

You'll see the missed call icon K in the status bar when you miss a call.

- 1. Slide the Notifications panel open to check who the caller is.
- 2. To return the call, tap Call back.

If you have multiple missed calls, tap the missed calls notification to open the Call History tab.

Speed dial

Use Speed dial to call a phone number with a single tap.

- 1. On the Home screen, tap the phone icon to open the **Phone** app.
- 2. Tap : > Speed dial > +. You can also press and hold an unassigned key on the dialpad, and then tap Yes.
- 3. Select a contact from the list.
- **4.** On the Speed dial screen, choose the phone number of the contact to use, and a speed dial key to assign.
- 5. Tap Save.

To use Speed dial, press and hold the speed dial number you want to call. Then tap the call button that corresponds to the card you want to use.

Calling a number in a message, email, or calendar event

When you receive a text message, email, or calendar event that has a phone number in it, you can just tap the number to place a call.

Receiving calls

When you receive a phone call from a contact, the Incoming call screen appears.



HTC Desire 10 pro will automatically adjust the ringtone volume if Quiet ring on pickup and Pocket mode are selected in Settings > Sound & notification.

Answering or rejecting a call

Do one of the following:

- Tap Answer or Decline.
- If you've set up a lock screen, drag \(\sigma \) or \(\sigma \) upwards.

Muting the ringing sound without rejecting the call

Do one of the following:

- Press the VOLUME DOWN or VOLUME UP button.
- Press the POWER button.
- Place HTC Desire 10 pro face down on a level surface.



If Flip to mute option in Sound & notification settings is set to Mute once, HTC Desire 10 pro will still ring when there are subsequent incoming calls.

Emergency call

In some regions, you can make emergency calls from HTC Desire 10 pro even if the nano SIM/UIM card has been blocked or if you don't have one installed.



If you don't have a network signal, you won't be able to make an emergency call.

- 1. On the Home screen, tap the phone icon to open the **Phone** app.
- 2. Dial the emergency number for your locale, and then tap Call.



If you've enabled but forgotten your lock password or lock pattern, you can still make emergency calls by tapping Emergency on the screen.

What can I do during a call?

When a call is in progress, you can turn the speakerphone on, place the call on hold, and more.

Putting a call on hold

To put the call on hold, tap : > Hold or Flash. The status bar then displays the hold call icon ...".

To resume the call, tap : > Unhold or Flash.

Turning the speakerphone on or off during a call

- To decrease potential damage to your hearing, do not hold HTC Desire 10 pro to your ear when the speakerphone is on.
 - On the call screen, tap . The speakerphone icon appears in the status bar.
 - To turn the speakerphone off, tap .

Muting the microphone during a call

On the call screen, tap 💃 to toggle between turning the microphone on or off. When the microphone is turned off, the mute icon $\sqrt{}$ appears in the status bar.

Ending a call

Do one of the following to end the call:

- On the call screen, tap End Call.
- Slide the Notifications panel open, then tap End Call.

Setting up a conference call (GSM)

Conference calling with your friends, family, or co-workers is easy. Make or accept a call, and then simply dial each subsequent call to add it to the conference.



Make sure that you have conference calling service activated. Contact your mobile operator for details.

- 1. Make a call to the first conference call participant.
- 2. When connected, tap : > Add call, and then dial the number of the second participant. The first participant is put on hold.
- 3. When connected to the second participant, tap χ .
- **4.** To add another participant, tap **\cdot**, and then dial the number of the contact.
- 5. When connected, tap \uparrow to add the participant to the conference call. Tap ••• to access options such as ending the call with a participant.
- To end the conference call, tap **End Call**.

Setting up a three-way call (CDMA)

Three-way calling with your friends, family, or co-workers is easy. Make the first call, and then dial another number to add it to the call.



Make sure you have three-way call service enabled by your mobile operator.

- 1. Make a call to the first participant.
- 2. When connected, tap : > Add call, and then dial the number of the second participant. The first participant is put on hold when you dial the second participant.
- 3. When connected to the second participant, tap $\mathbf{\chi}$.

To end the call, tap **End call**.

Call History

Use Call History to check missed calls, your dialed numbers, and received calls.

- 1. On the Home screen, tap the phone icon to open the **Phone** app.
- **2.** Swipe to view the Call History tab.
- **3.** Do one of the following:
 - Tap a name or number in the list to call.
 - Press and hold a name or number in the list to display the options menu.
 - Tap **v** to display just a particular type of call such as missed calls or outgoing calls.

Adding a new phone number to your contacts from Call History

- 1. On the Call History tab, tap + next to the new phone number.
- Choose whether to create a new contact or save the number to an existing contact.

Clearing the Call History list

- 1. On the Call History tab, tap : > Remove call history.
- 2. Select the items you want to delete, or tap : > Select all.
- 3. Tap Delete.

Blocking a caller

When you block a phone number or a contact, all calls from the phone number or contact will be declined automatically.

On the Call History tab, press and hold the contact or phone number you want to block, and then tap Block contact.



You can always remove a caller from your blocked list. On the Call History tab, tap : > Blocked contacts. In the All tab, press and hold a contact, and then tap Unblock contacts.

Switching between silent, vibrate, and normal modes

Do one of the following:

- To change from silent to normal mode, press the VOLUME UP button twice.
- To change from vibrate to normal mode, press the VOLUME UP button.
- Go to Settings, and then tap **Sound & notification > Sound profile**.

Home dialing

When you're on a trip abroad, it's easy to dial friends and family from home.

Your home country code is automatically added when you call your contacts while roaming. But when manually entering a phone number to call, you need to enter a plus (+) sign and country code before the number.



Using a roaming service may incur additional charges. Check with your mobile operator for rates before using a roaming service.

Changing the default country code for Home dialing

- 1. From the Home screen, tap ..., and then tap Settings > Call.
- 2. Tap Home dialing settings.
- 3. Select a country, and then tap OK.

Turning off Home dialing

If you prefer to manually enter complete phone numbers to call while roaming, you can turn off Home dialing.

- 1. From the Home screen, tap ..., and then tap Settings > Call.
- 2. Clear the Home dialing option.

Messages

Sending a text message (SMS)

- 1. From the Home screen, tap ..., and then find and tap Messages.
- 2. Tap +.
- 3. Enter a contact name or mobile number in the **To** field.
- 4. Tap the area that says Add text, and then enter your message.
- 5. Tap \rightarrow , or press \triangleleft to save the message as a draft.



- There is a limit on the number of characters for a single text message (displayed above >). If you exceed the limit, your text message will be delivered as one but will be billed as more than one message.
- · Your text message automatically becomes a multimedia message if you enter an email address as the recipient, attach an item, or compose a very long message.

Sending a multimedia message (MMS)



Before attaching and sending a high-resolution video, compress it first so that the file size doesn't exceed the message size limit.

- 1. From the Home screen, tap ..., and then find and tap Messages.
- 2. Tap +.
- 3. Enter a contact name, mobile number, or email address in the **To** field.
- 4. Tap the area that says **Add text**, and then enter your message.
- **5.** Tap , and then choose an attachment type.
- **6.** Select or browse for the item to attach.
- 7. After adding an attachment, tap *** to see options for replacing, viewing or removing your attachment.
- 8. Tap \rightarrow , or press \triangleleft to save the message as a draft.

Sending a group message

Group messaging makes it easy to send a message to multiple contacts all at once. You can choose to send a group SMS or group MMS.



Group MMS may incur extra data fees.

- 1. From the Home screen, tap ..., and then find and tap Messages.
- 2. Tap +.
- 3. Tap ___, and then select multiple recipients.
- 4. Tap Done.
- **5.** To send a group SMS, tap : , and then select **Send as individual**. Clear this option to send your message as a group MMS.

Group SMS	Your message will be sent to the recipients as a text message and you will be charged by your mobile operator for each message sent. Replies of your recipients are sorted separately.
Group MMS	Similar to a group chat, sending a group MMS lets your recipients join the conversation you've started.
	HTC Desire 10 pro also organizes message replies in a single conversation thread. If this is your first time to send a group MMS, you may need to enter your mobile phone number.

- 6. Tap the area that says Add text, then enter your message.
- 7. Tap .

Resuming a draft message

If you switch to another app or if you receive an incoming call while composing a text message, the message is automatically saved as a draft.

- 1. From the Home screen, tap ..., and then find and tap Messages.
- 2. Tap a draft message, and then edit the message.



To see all draft messages in one place, tap : , and then tap Filter > Drafts.

3. Tap .

Replying to a message

- 1. From the Home screen, tap :::, and then find and tap Messages.
- 2. Tap a contact (or phone number) to display the exchange of messages with that contact.
- 3. Tap the area that says Add text, and then enter your message.
- 4. Tap .

Replying to a contact's other phone number

When a contact has multiple phone numbers stored on HTC Desire 10 pro, you can select which phone number to reply to.

Keep in mind that if you don't select another number, your response will be sent to the phone number that your contact used to send the last message.

- 1. While viewing the exchange of messages with a contact, tap : Recipient phone number and select which phone number you want to reply to.
- 2. Tap the area that says Add text, then enter your reply message.
- 3. Tap .

Forwarding a message

- 1. From the Home screen, tap ..., and then find and tap Messages.
- 2. Tap a contact (or phone number) to view the exchange of messages with that contact.
- 3. Tap a message, and then tap Forward.

Moving messages to the secure box

You can move private messages to the secure box. You will need to enter a password to read these messages.



- The secure box does not encrypt messages.
- Messages stored on a nano SIM/UIM card cannot be moved to the secure box.
- 1. From the Home screen, tap ..., and then find and tap Messages.
- 2. Tap a contact (or phone number) to display the exchange of messages with that contact.

- 3. Tap : > Move to secure box.
- 4. Select the messages, and then tap Move.



To move all the messages from a contact, on the Messages screen, press and hold the contact and tap Move to secure box.

- To read messages in the secure box, on the Messages screen, tap > Secure. If it is your first time to use the secure box, set a password.
- To remove messages or contacts from the secure box, press and hold the contact (or phone number) and tap Move to general box.

Blocking unwanted messages

Declutter your Messages screen by moving spam messages from contacts to the block box. If you have blocked a contact, that contact's text or picture messages will also be in the block box.

- Open the Messages app, press and hold a contact (or phone number) and tap Block contact.
- To block multiple contacts, tap : > Block contacts, select the contacts, and tap Block.

When the contact sends you messages, you will not see them in the Messages screen or receive notifications and calls.

To read messages in the block box, on the Messages screen, tap ♥ > Block.



- To remove messages or contacts from the block box, press and hold the contact (or phone number) and tap Unblock.
- To completely discard future messages from blocked contacts, tap : > Settings > General, and then clear the Save block message option.

Copying a text message to the nano SIM/UIM card

- 1. From the Home screen, tap ..., and then find and tap Messages.
- 2. Tap a contact (or phone number) to display the exchange of messages with that contact.
- 3. Tap the message, and then select the card where you want to copy it. The nano SIM/UIM card icon is displayed.

Deleting messages and conversations

Open the Messages app and do any of the following:

To delete a	Do these steps
Message	Open the conversation thread with a contact, tap the message, and then tap Delete message.
	To delete multiple messages within a conversation, tap : > Delete messages > Delete by selection, and then select the messages to delete.
Conversation	Press and hold a contact (or phone number), and then tap Delete .
	To delete multiple conversations, tap : > Delete threads, and then select the conversations to delete.



In the Messages settings, tap General > Delete old messages to auto delete old messages.

Preventing a message from being deleted

You can lock a message to prevent it from being deleted even if you delete the other messages in the conversation.

- 1. Open the Messages app.
- 2. Tap a contact (or phone number) to display the exchange of messages with that contact.
- 3. Tap the message that you want to lock.
- 4. Tap Lock message on the options menu. You'll then see a lock icon for locked messages.

People

Your contacts list

The People app lists all contacts you've stored on HTC Desire 10 pro and from online accounts you're logged in to. Use the People app to easily manage communications with people that matter to you.

1. From the Home screen, tap ..., and then find and tap People.



- On your contacts list, you can:
 - View your profile and edit your contact information.
 - Create, edit, find, or send contacts.
 - Tap a contact photo to find ways to quickly connect with the contact.
 - See when a contact has sent you new messages.



To sort your contacts by their first or last name, tap : > Settings > Sort contacts by.

Filtering your contacts list

When your contacts list gets long, you can choose which contact accounts to show.

- 1. On the People tab, tap Phonebook.
- 2. Choose the accounts that contain the contacts you want to display.
- 3. Press ◀.

Finding people

Search for contacts stored on HTC Desire 10 pro, your company directory if you have an Exchange ActiveSync account, or social networks you've signed into.

- 1. From the Home screen, tap ..., and then find and tap People.
- 2. On the People tab, you can:
 - Find people in your contacts list. Tap **Q**, and then enter the first few letters of the contact name in the Search people box.
 - Find people on your company directory. Tap Q, enter the first few letters of the contact name in the Search people box, and then tap Search contacts in your Company Directory.



Aside from searching for a contact by name, you can search using a contact's email address or company name. On the People tab, tap : > Settings > Search contacts by, and then choose a search criteria.

Setting up your profile

Store your personal contact information to easily send it to other people.

- 1. From the Home screen, tap ..., and then find and tap People.
- 2. Tap My profile.
- 3. Tap Edit my contact card.
- 4. Enter or edit your name and contact details.
- 5. Tap or the current photo to change your contact photo.
- **6.** Tap **✓**.

Adding a new contact

- 1. From the Home screen, tap , and then find and tap **People**.
- 2. On the People tab, tap +.
- 3. Tap the Name field, and then enter the contact name. Tap 📝 to separately enter the contact's given, middle, or family name and name suffix, such as Jr.
- 4. Select the Contact type. This determines which account the contact will sync with.
- **5.** Enter the contact information in the fields provided.
- **6.** Tap **✓**.

When you tap the added contact in your contacts list, you'll see the contact information and your exchange of messages and calls.

How do I add an extension number to a contact number?

While creating a new contact or editing a contact's details in People, you can add an extension number to their number so you can skip the voice prompts when calling.

- 1. After entering the number of the main line, do one of the following:
 - Tap P to insert a pause before the phone dials the extension number. To insert a longer pause, enter P several times.
 - Tap **W** to be prompted to confirm the extension number.
- 2. Enter the extension number.

Editing a contact's information




Social network contacts cannot be edited.

- 1. From the Home screen, tap ..., and then find and tap People.
- 2. On the People tab, press and hold the contact, and then tap Edit contact.
- 3. Enter the new information.
- **4.** Tap **✓**.

Getting in touch with a contact

- 1. From the Home screen, tap ..., and then find and tap People.
- **2.** Tap a contact's photo (not the name), and then choose how you want to get in touch with that contact.

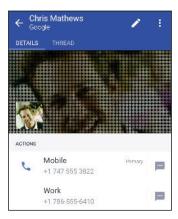



For more ways of getting in touch with your contact, tap an icon below the contact photo.

Importing or copying contacts

Importing contacts from your nano SIM/UIM card

- 1. From the Home screen, tap ..., and then find and tap People.
- On the People tab, tap : > Manage contacts.
- Tap Import/Export contacts and then choose which card to import from.
- 4. If prompted, select which account you'd like to import your contacts to.
- Select the contacts you want to import.
- Tap Save.

Importing a contact from an Exchange ActiveSync account

- 1. On the People tab, tap \mathbf{Q} and enter the contact's name or email address in the search box.
- 2. Tap Search contacts in your Company Directory.
- 3. Tap the name of the contact you want copied to HTC Desire 10 pro.
- **4.** Tap **+** to import the contact.

Copying contacts from one account to another



Contacts from social networks may not be able to be copied.

- 1. On the People tab, tap : > Manage contacts.
- 2. Tap Copy contacts, and then choose a contact type or online account to copy from.
- 3. Select a contact type or account you want to save to.

Merging contact information

Avoid duplicate entries by merging contact information from different sources, such as your social network accounts, into one contact.

Accepting contact link suggestions

When HTC Desire 10 pro finds contacts that can be merged, you'll see a link notification when you open the People app.

- 1. From the Home screen, tap ..., and then find and tap People.
- 2. On the People tab, tap the Contact link suggestion notification when available. You'll see a list of suggested contacts to merge.
- 3. Tap 🖘 next to the contact you want to merge. Otherwise, tap 🐓 to dismiss the link suggestion.



If you don't want to receive contact link suggestions, on the People tab, tap : > Settings. Clear the Suggest contact link option.

Manually merging contact information

- 1. On the People tab, tap the name of the contact (not the icon or photo) you want to link.
- 2. Tap : >Link.
- 3. You can:
 - Under **Suggest links**, link the contact to an account.
 - Under Add contact, tap one of the options to link to another contact.

Breaking the link

- 1. On the People tab, tap the name of the contact (not the icon or photo) whose link you want to break.
- 2. Tap : >Link.
- 3. Under the **Linked contacts** section, tap beside an account to break the link.

Sending contact information

- 1. From the Home screen, tap ..., and then find and tap People.
- 2. On the People tab, do one of the following:

To send	Do this
Someone's contact information	Press and hold the name of the contact (not the icon or photo), and then tap Send contact as vCard .
Your contact information	Press and hold My profile , and then tap Send my profile .

- 3. Choose how you want to send the vCard.
- **4.** Select the type of information you want to send.
- 5. Tap Send.

Sending multiple contact cards

- 1. On the People tab, tap : > Send contacts.
- 2. Select the contacts whose contact information you want to share
- 3. Tap Send.
- 4. Choose how you want to send the contact cards.

Contact groups

Organize your friends, family, and colleagues into groups so you can quickly send a message or email to everyone in the group. We've also set up the Frequent group to automatically add the contacts you dial or get calls from the most.

HTC Desire 10 pro also syncs with groups you've created in your Google Account.

Creating a group

- 1. From the Home screen, tap ..., and then find and tap People.
- 2. On the Groups tab, tap +.
- 3. Enter a name for the group, and then tap : > Add contact to group.
- 4. Select the contacts you want to add, and then tap Save.
- **5.** When your group is complete, tap **Save**.

Sending a message or email to a group



You will be charged for each text message sent. For example, if you send a message to a group of five people, you will be charged for five messages.

- 1. On the Groups tab, tap the group you want to send a message or email to.
- **2.** Go to the Group action tab.
- 3. Choose if you want to send a group message or group email.

Editing a group

- 1. On the Groups tab, press and hold the group, and then tap **Edit group**.
- 2. You can:
 - Change the group name. You can only change the name for groups that you have
 - Add more contacts to the group. Tap : > Add contact to group.
 - Select the contacts you want to remove from the group.
- 3. Tap Save.

Removing contact groups

- 1. On the Groups tab, tap : > Edit groups.
- Select the contact groups you want to remove.
- 3. Tap Save.

Private contacts

If you don't want to show a contact's name and photo on the lock screen when you have an incoming call, add the contact to your private contacts list.

Adding a contact to the private contacts list



Contacts must have a phone number before they can be added to the private contacts list.

- 1. From the Home screen, tap , and then find and tap People.
- On the People tab, press and hold the contact, and then tap **Add to private contacts**.

To view your private contacts list, on the People tab, tap : > Manage contacts > Private contacts.

Organizing your private contacts


- 1. On the People tab, tap : > Manage contacts > Private contacts.
- To add contacts to the private contacts list, tap +, select the contacts you want to add, and then tap Save.
- To remove private contacts from the list, tap : > Remove private contact, select the contacts you want to remove, and then tap Remove.

Email

Checking your mail

The Mail app is where you read, send, and organize email messages from one or more email accounts that you've set up on your phone.

- 1. From the Home screen, tap :::, and then find and tap Mail. The inbox of one of your email accounts appears.
- 2. Do any of the following:
 - Tap an email message to read.
 - To display email messages in another mail folder, tap : > Folder, and then tap the folder you want to view.
 - To switch between email accounts or view email messages from all your accounts, tap

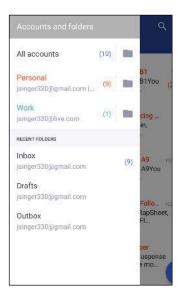

To change an email account's settings, select the account first and then tap : > Settings.

Organizing your inbox

Do you have a big pile of email messages in your inbox? Organize your email messages into tabs and quickly find the messages you want.

- 1. Switch to the email account that you want to use.
- 2. In the inbox, tap : > Edit tabs.
- 3. Select the tabs you want to add to the inbox.

- **4.** To arrange the tabs, drag \equiv , and then move the tab to its new location.
- 5. Tap Done.
- **6.** Swipe to the added tab to check your email messages.

Sending an email message

- 1. From the Home screen, tap ..., and then find and tap Mail.
- 2. Switch to the email account that you want to use.
- 3. Tap +.
- 4. Fill in one or more recipients.



Want to loop in more recipients in a carbon copy (Cc) or blind carbon copy (Bcc) of the email message? Tap > Show Cc/Bcc.

- 5. Enter the subject, and then compose your message.
- **6.** Do any of the following:
 - Add an attachment. Tap \bigcirc and then choose what you want to attach.
 - Set the priority for an important message. Tap > Set priority.
- 7. Tap **>**.



To save the email as draft and send it later, tap : >Save. Or press \circlearrowleft .

Resuming a draft email message

- 1. In an email account inbox, tap : > Folder > Drafts.
- 2. Tap the message.
- 3. When you finish editing the message, tap \triangleright .

Reading and replying to an email message

- 1. From the Home screen, tap ..., and then find and tap Mail.
- 2. Switch to the email account you want to use.
- 3. In the email account inbox, tap the email message or conversation you want to read.



If you want to read a particular message inside an email conversation, tap ' to expand the conversation, and then tap the email message.

4. Tap Reply or Reply All.



Tap for more actions for the email.

Quickly replying to an email message

You can quickly respond to a new email message from the Home screen or lock screen.

- 1. When you receive a new email message notification, slide the Notifications panel down.
- 2. On the email preview, tap Reply all.

If you have several notifications and you don't see the email options, expand the email preview by sliding two fingers apart on the notification.

3. Compose your reply message and tap \triangleright .



Managing email messages

The Mail app provides easy ways to sort, move, or delete your email messages.

Sorting email messages

Customize how you sort your email messages.

In an email account inbox, tap : > Sort, and select from the sorting options.

Moving email messages to another folder

- 1. Switch to the email account you want to use.
- 2. Select the email messages you want to move.



To select all, select one email message first, and then tap : > Select all.

Tap Move to, and then select a folder.

Deleting email messages

- 1. Switch to the email account you want to use.
- 2. Select the email messages you want to delete.



To select all, select one email message first, and then tap > Select all.

Tap Delete.

Searching email messages

- 1. From the Home screen, tap , and then find and tap Mail.
- 2. Tap Q.
- 3. If you want to narrow the scope for your search, tap 🌣 , check the search options, and then tap OK.

- 4. In the search box, enter the words you want to search for.
- **5.** Tap a result to open the email message.

Searching for emails from a contact

Do you remember the sender, but can't find a particular email from him or her?

- 1. Switch to the email account you want to use.
- 2. Press and hold an email message from a contact.
- 3. Tap Show all mail from sender. A list of email messages from that contact appears.

Working with Exchange ActiveSync email

With your Microsoft Exchange ActiveSync account, you can flag important email messages or set your out of the office reply right on your phone.

Flagging an email

- 1. From the Home screen, tap ..., and then find and tap Mail.
- 2. Switch to your Exchange ActiveSync account.
- 3. While viewing the inbox, tap the flag icon that appears beside an email message or conversation.



To flag an email message inside a conversation, tap 🗡 to expand the conversation, and then tap the flag icon of the email message.

Setting your Out of the office status

- 1. Switch to your Exchange ActiveSync account.
- 2. Tap : > Out of the office.
- Tap your current office status, and then select **Out of the office**.
- 4. Set the dates and times.
- **5.** Enter the auto-reply message.
- 6. If you want a different auto-reply message for recipients outside your organization, tap the Send replies to external senders option, and then enter the auto-reply message in the box.
- 7. Tap Save.

Adding an email account

Set up additional email accounts such as another Microsoft Exchange ActiveSync account or an account from a Web-based email service or email provider.



If you're adding a Microsoft Exchange ActiveSync or a POP3/IMAP email account, ask your network administrator or email service provider for additional email settings that you may need.

- 1. From the Home screen, tap ..., and then find and tap Mail.
- 2. Tap >Add account.
- 3. Select an email account type from the list of email providers. Otherwise, tap Other (POP3/ IMAP).
- Enter the email address and password for your email account, and then tap Next.



Some email accounts allow you to set the sync schedule.

Enter a name for your email account, and then tap Finish setup.

What is Smart Sync?

Smart Sync automatically extends the sync time the longer the Mail app is inactive. Set your email account to Smart Sync when you don't need to check new email messages frequently. Smart Sync helps save battery power.

If you want to receive email messages as they arrive, select another Peak time sync and Off-peak sync schedule in the email account's Sync, Send & Receive settings.

Other apps

Using the Clock

Get more from the Clock app than just the regular date and time. Use your phone as a world clock to see the date and time in cities across the globe. You can also set alarms or track your time using the stopwatch or timer.

Setting an alarm

You can set up one or more alarms.

- 1. From the Home screen, tap :::, and then find and tap Clock.
- 2. On the Alarms tab, select the check box of an alarm and then tap that alarm.
- 3. Under Set alarm, use the scroll wheels to set the alarm time.
- 4. If you want the alarm for multiple days, tap Repeat.
- 5. Tap Done.



- To turn off an alarm, clear the check box of that alarm.
- If you need to set more than three alarms, tap +.

Setting the date and time manually

- 1. From the Home screen, tap :::, and then find and tap Clock.
- 2. On the World Clock tab, tap : > Set date & time.
- 3. Clear Automatic date & time and Automatic time zone, and then set the time zone, date, and time as required.



To display military time, choose the Use 24-hour format option.

Checking Weather

Use the Weather app and widget to check the current weather and weather forecasts for the next few days. In addition to your current location, you can view weather forecasts for other cities around the globe.

- 1. From the Home screen, tap ..., and then find and tap Weather. You'll see the weather for different cities, including where you are.
- 2. Tap a city to view weather information.
- 3. Swipe to the Hourly and Forecast tabs to view the forecast in your selected location.
- 4. To check the weather in other cities, tap ♥, and then select the city you want.
- 5. To add more cities, tap + and then enter the location.
- To change the temperature scale, update schedule, and more, tap : >Settings.

Your settings in the Weather app also control the weather information that is shown in the Clock.

Recording voice clips

Use Voice Recorder to capture information during lectures, interviews, or even to create your own audio log.

- 1. From the Home screen, tap :::, and then find and tap Voice Recorder.
- 2. Hold the microphone near the sound source.
- Tap to start recording a voice clip.



Voice Recorder can run in the background while you do other things on HTC Desire 10 pro, except when you open other apps that also use audio functions.

4. Tap **1** to stop recording.

To play back the voice clip, tap.



To see your recorded voice clips, tap ←. Press and hold a voice clip to see options for sharing, setting it as a ringtone, and more.

Listening to FM Radio

Listen to your favorite radio stations using the FM Radio app.



You need to connect a headset first to the audio jack of HTC Desire 10 pro to use FM Radio. FM Radio uses the stereo headset as the FM radio antenna.

- 1. From the Home screen, tap ..., and then find and tap FM Radio.
- 2. If this is your first time to open FM Radio, it will automatically scan for local FM stations. When it finishes scanning, scroll through the list and tap a station you want to listen to.

- 3. While you're listening to an FM station, you can:
 - Tap $\blacktriangleright \blacktriangleright 1$ or $\blacktriangleright 4$ to go to the next or previous station.
 - Drag the slider to tune in to a frequency on the FM band. To fine tune the radio frequency, tap
 → or
 - Tap ♥ to mark a radio station as a favorite. To see your other favorites and preset stations, tap ← .
- 4. To turn off FM Radio, tap

To turn it back on while you're still in the app, tap .

Internet connections

Turning the data connection on or off

Turning your data connection off saves battery life and money on data charges.



You need a 4G/LTE plan to use your operator's 4G/LTE network for voice calls and data services. Check with your operator for details.

- 1. From the Home screen, tap :::, and then find and tap Settings.
- 2. Tap the Mobile data On/Off switch to turn the data connection on and off.



If you don't have the data connection turned on and you're also not connected to a Wi-Fi network, you won't receive automatic updates to your email, social network accounts, and other synced information.

Managing your data usage

If you're on a limited data allowance, it's important to keep track of the activities and apps that usually send and receive data, such as browsing the web, syncing online accounts, and sending email or sharing status updates.

Here are some other examples:

- Streaming web videos and music
- Playing online games
- Downloading apps, maps, and files
- Refreshing apps to update info and feeds
- Uploading and backing up your files to your online storage account
- Using HTC Desire 10 pro as a Wi-Fi hotspot
- Sharing your mobile data connection by USB tethering

To help you save on data usage, connect to a Wi-Fi network whenever possible and set your online accounts and emails to sync less frequently.

Turning data roaming on or off

Connect to your mobile operator's partner networks and access data services when you're out of your mobile operator's coverage area.



Using data services while roaming may be costly. Check with your mobile operator for data roaming rates before you use data roaming.

- 1. From the Home screen, tap :::, and then find and tap Settings.
- 2. Tap Mobile data.
- 3. Select or clear the **Data roaming** option.

Keeping track of your data usage

Monitor your data usage to help prevent going over your monthly data allowance.



Data usage measured by HTC Desire 10 pro may differ from, and be less than, your actual data usage.

- 1. From the Home screen, tap :::, and then find and tap Settings.
- 2. Under Wireless & networks, tap More > Data usage.
- 3. Tap **♥** to select a card slot.
- 4. Select Limit mobile data usage and tap OK to automatically disable your data connection when you reach the set limit.
- 5. Drag the upper LIMIT line to set your monthly data limit.
- 6. Select **Alert me about data usage**, and then drag the lower ALERT line to set an alert before you reach your monthly data limit.
- 7. Tap **Reset data usage**, and then set the day of the month when your usage cycle resets. This date is usually the start of your monthly billing cycle.



If you're connecting HTC Desire 10 pro to another portable Wi-Fi hotspot, tap : > Mobile hotspots to restrict background data from downloading that may incur extra data fees.

Viewing the data usage of apps

- 1. From the Home screen, tap \vdots , and then find and tap **Settings**.
- 2. Under Wireless & networks, tap More > Data usage.
- 3. Tap ♥ to select a card slot.
- 4. Scroll down the screen to see a list of apps and their data usage info.
- 5. Tap an app to see more details.

Wi-Fi connection

To use Wi-Fi, you need access to a wireless access point or "hotspot".



The availability and strength of a Wi-Fi signal varies depending on objects the Wi-Fi signal has to pass through (such as buildings or a wall between rooms).

Turning Wi-Fi on or off

- 1. From the Home screen, tap ..., and then find and tap Settings.
- 2. Tap the Wi-Fi On/Off switch to turn Wi-Fi on or off.
- 3. Tap Wi-Fi to see a list of detected wireless networks.



- To manually scan for Wi-Fi networks, tap : > Scan.
- If the wireless network that you want is not listed, tap : > Add network to manually add it.

Connecting to a Wi-Fi network

1. Turn Wi-Fi on, and check the list of detected Wi-Fi networks.

See Turning Wi-Fi on or off on page 136.

- 2. Tap a Wi-Fi network you want to connect to.
- 3. If you selected a secured network, enter the network key or password.
- **4.** Tap **Connect**. You'll see the Wi-Fi icon $\widehat{\mathbf{i}}$ in the status bar when connected.

Connecting to a Wi-Fi network via WPS

If you're using a Wi-Fi router with Wi-Fi Protected Setup (WPS), you can connect HTC Desire 10 pro easily.

- 1. Turn Wi-Fi on, and check the list of detected Wi-Fi networks.
 - See Turning Wi-Fi on or off on page 136.
- 2. Tap : > WPS Push, and then press the WPS button on your Wi-Fi router.



To use the Wi-Fi Protected Setup (WPS) PIN method, tap : > WPS Pin Entry.

Logging into a public Wi-Fi network automatically (WISPr)

You can set HTC Desire 10 pro to automatically log into a public Wi-Fi network that you regularly use. This saves you the trouble of going through the Wi-Fi provider's web authentication every time you connect to their Wi-Fi network. Just add your login credentials to the WISPr (Wireless Internet Service Provider roaming) settings.



The access point of the Wi-Fi network needs to support the WISPr web portal. Consult the Wi-Fi provider for details.

- 1. From the Home screen, tap ..., and then find and tap Settings.
- 2. If Wi-Fi connection is off, tap the Wi-Fi On/Off switch to turn it on.
- 3. Tap Wi-Fi.
- 4. Tap : >Advanced.
- 5. Under WISPr settings, select **Auto login** and then tap **WISPr account settings** > **Add a new account**.
- 6. Enter the service provider name, your login name (the full domain name), and password.
- 7. Tap : > Save
- 8. Connect to the public Wi-Fi network.



- If you have access to several public Wi-Fi networks, you can add up to five sets of login credentials to the WISPr accounts list.
- In the WISPr accounts list, press and hold an account to remove or edit it.

Connecting to VPN

Add virtual private networks (VPNs) so you can connect and access resources inside a local network, such as your corporate or home network.

Before you can connect HTC Desire 10 pro to your local network, you may be asked to:

- Install security certificates.
- Enter your login credentials.
- Download and install a required VPN app, if you're connecting to a secured enterprise network. Contact your network administrator for details.

Also, HTC Desire 10 pro must first establish a Wi-Fi or data connection before you can start a VPN connection.

Adding a VPN connection



You must first set a lock screen PIN, password, or pattern before you can use credential storage and set up the VPN.

- 1. From the Home screen, tap ..., and then find and tap Settings.
- 2. Under Wireless & networks, tap More.
- 3. Tap VPN> : >Add VPN profile.
- **4.** Enter the VPN settings and set them up according to the security details your network administrator gave you.
- 5. Tap Save.

Connecting to a VPN

- 1. From the Home screen, tap :::, and then find and tap Settings.
- 2. Under Wireless & networks, tap More.
- 3. Tap VPN.
- 4. Tap the VPN that you want to connect to.
- **5.** Enter your log in credentials, and then tap **Connect**. When you're connected, the VPN connected icon appears in the notification area of the status bar.

You can then open the web browser to access resources such as your corporate network intranet.

Disconnecting from a VPN

- In Settings, tap More > VPN. Tap the VPN connection, and then tap Disconnect.
- Slide the Notifications panel open. If you see the VPN notification, tap it, and then tap Disconnect.

Using HTC Desire 10 pro as a Wi-Fi hotspot

Share your data connection with other devices by turning HTC Desire 10 pro into a Wi-Fi hotspot.



- Make sure the data connection is turned on.
- You must have an approved data plan associated with your account from your mobile service provider to use this service. Devices connected to your Wi-Fi hotspot use data from your subscribed data plan.
- 1. From the Home screen, tap ..., and then find and tap Settings.
- 2. Under Wireless & Networks, tap More.

3. Tap Mobile network sharing > Portable Wi-Fi Hotspot.

The first time you turn on the Wi-Fi hotspot, you'll need to set it up.

- 4. Enter a hotspot name or use the default.
- 5. Enter a password or use the default.

The password is the key other people need to enter on their device so they can connect and use HTC Desire 10 pro as a wireless router.

- **6.** To help make your Wi-Fi hotspot more secure, tap : > Advanced. Choose from the available settings, and then press \triangleleft .
- 7. Tap the Portable Wi-Fi Hotspot On/Off switch to turn it on.

HTC Desire 10 pro is ready to be used as a Wi-Fi hotspot when you see 🙆 on the status bar.



To help minimize security risks, use the default security settings and set a strong and unique password.

Sharing your phone's Internet connection by USB tethering

No Internet connection available for your computer? No problem. Use the data connection of HTC Desire 10 pro to connect to the Internet.



- To make sure that the USB drivers for HTC Desire 10 pro are up-to-date, install the latest version of HTC Sync Manager on your computer.
 - You may need to have USB tethering added to your data plan, and it may incur additional cost. Contact your mobile service provider for details.
 - Make sure that mobile data is turned on.
 - 1. Connect HTC Desire 10 pro to your computer using the provided USB cable.
 - 2. From the Home screen, tap ..., and then find and tap Settings.
 - 3. Under Wireless & networks, tap Mobile network sharing > USB connection > USB tethering.

Wireless sharing

Connecting to wireless speakers or TV

What is HTC Connect?

With HTC Connect, wirelessly stream music or video from your phone to your speakers or TV by just swiping up the screen with 3 fingers.

You can stream media to any of the following types of devices:

- AirPlay speakers or Apple TV
- Blackfire® compliant multi-room speakers
- Multi-room speakers that support the Qualcomm[®] AllPlay[™] smart media platform
- DLNA® compatible speakers and TV
- Miracast[™] compatible display devices
- Chromecast[™] compatible display devices.
- Bluetooth speakers
- HTC certified consumer electronic devices or accessories that have the HTC Connect logo:





Some devices may need to be paired before you can share to them.

To see a list of supported devices or accessories, go to https://connect.htc.com/certified-devices.html. For more information about HTC Connect, see https://connect.htc.com/index.html.


Using HTC Connect to share your media

Before you start, make sure you have set up your speakers, TV, or appliance to connect to your Wi-Fi network. Refer to its documentation on how to set it up.

- 1. Open and play any music or other media content that you want to share from your phone.
- 2. Swipe up with three fingers on the screen.



3. Choose the device you want to connect to.

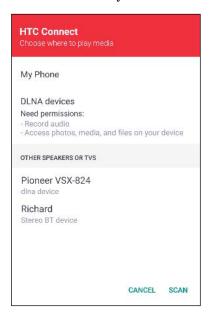

- **4.** Once connected, use your phone to control the volume, pause or resume playback, and more.
- **5.** To stop wireless media sharing and disconnect from the device, swipe down with three fingers on the screen.

Streaming music to AirPlay speakers or Apple TV

Before you start, make sure your device is connected to your Wi-Fi network. Refer to the documentation that comes with your AirPlay speakers or Apple TV for details.

- 1. After connecting your AirPlay speakers or Apple TV to your Wi-Fi network, open a music app on your phone.
- **2.** Swipe up with three fingers on the screen.

Your phone turns Wi-Fi on automatically and scans for media devices on your Wi-Fi network. You'll then see the available devices listed.

- 3. Tap the device you want to connect to.
- **4.** In the music app that you're using, start playing music. You'll then hear the music play from the device you've selected.

Streaming music to Blackfire compliant speakers



Play music simultaneously to multiple Blackfire compliant speakers from your phone.

Before you start, make sure your speakers are connected to your Wi-Fi network. Refer to the documentation that comes with your speakers to set up and connect them to your Wi-Fi network.

- 1. After connecting your speakers to your Wi-Fi network, open a music app on your phone.
- **2.** Swipe up with three fingers on the screen.

Your phone then turns Wi-Fi on automatically and scans for media devices on your Wi-Fi network. You'll see the available speakers listed.

- 3. Tap the speaker you want to connect to.
- **4.** In the music app, start playing music. You'll then hear the music play from the speaker you've selected.
- 5. To switch between speakers or to group them, swipe up the screen again with three fingers.
 - To stream music to another speaker, just tap it.
 - To group speakers so that music plays through them at the same time, tap the **Group** button next to a speaker name, select the other speakers you want to group it with, and then tap **OK**.

Renaming the speakers

You can rename your Blackfire compliant speakers in Settings.

- 1. Make sure the speakers are connected to your Wi-Fi network.
- 2. From the Home screen, tap ::: > Settings > HTC Connect.

Your phone then turns Wi-Fi on automatically and scans for media devices on your Wi-Fi network. You'll then see the available Blackfire speakers listed.

- 3. Tap i next to a speaker name.
- **4.** Enter the new speaker name, and then tap **Done**.

Streaming music to speakers powered by the Qualcomm AllPlay smart media platform

Before you start, make sure your speakers are connected to your Wi-Fi network. Refer to the documentation that comes with your speakers to set up and connect them to your Wi-Fi network.

- 1. After connecting your speakers to your Wi-Fi network, open a music app on your phone.
- **2.** Swipe up with three fingers on the screen.
 - Your phone then turns Wi-Fi on automatically and scans for media devices on your Wi-Fi network. You'll then see the available speakers listed.
- 3. Tap the speaker you want to connect to.
- **4.** In the music app that you're using, start playing music. You'll then hear the music play from the speaker you've selected.
- 5. To switch between speakers or to group them, swipe up the screen again with three fingers.
 - Just tap another speaker to stream music to it.
 - To group speakers so that music plays through them at the same time, tap the **Group** button next to a speaker name, select the other speakers you want to group it with, and then tap **OK**.

Turning Bluetooth on or off

- 1. From the Home screen, tap :::, and then find and tap Settings.
- 2. Tap the Bluetooth On/Off switch to turn the Bluetooth connection on and off.
- **3.** Tap **Bluetooth** to see a list of available devices.



Turn off Bluetooth when not in use to save battery power, or in places where using a wireless device is prohibited, such as on board an aircraft and in hospitals.

Connecting a Bluetooth headset

You can listen to music over a Bluetooth A2DP stereo headset, or have hands-free conversations using a compatible Bluetooth headset.



Before you connect your headset, make it discoverable so HTC Desire 10 pro can find it. Refer to your headset manual for details.

- 1. Turn Bluetooth on and check the list of available devices.
 - See Turning Bluetooth on or off on page 143.
- 2. If you don't see your headset listed, tap Scan for devices to refresh the list.

- 3. Tap the name of your headset in the Available Devices section. HTC Desire 10 pro pairs with the headset and the headset connection status is displayed in the Paired Devices section.
- 4. If prompted to enter a passcode, try 0000 or 1234, or consult the headset documentation to find the passcode.

When the Bluetooth headset is connected, you'll see * in the status bar.

Reconnecting a Bluetooth headset

Normally, you can easily reconnect your headset by switching on Bluetooth on HTC Desire 10 pro, and then turning on the headset.

However, you might have to connect manually if your headset has been used with another Bluetooth device.

1. Turn Bluetooth on and check the list of paired devices.

See Turning Bluetooth on or off on page 143.

- 2. Tap the headset's name in the Paired Devices section.
- 3. If prompted to enter a passcode, try 0000 or 1234, or consult the headset documentation to find the passcode.

If you still cannot reconnect to the headset, follow the instructions in Unpairing from a Bluetooth device on page 144, and then follow the steps under Connecting a Bluetooth headset on page 143.

Unpairing from a Bluetooth device

1. Turn Bluetooth on and check the list of paired devices.

See Turning Bluetooth on or off on page 143.

- 2. In the Paired devices section, tap 🌣 next to the device to unpair.
- 3. Tap Unpair.

Receiving files using Bluetooth

HTC Desire 10 pro lets you receive various files with Bluetooth including photos, contact info, and documents such as PDFs.

Refer to the device's documentation for instructions on sending information over Bluetooth.

- 1. Turn Bluetooth on.
 - See Turning Bluetooth on or off on page 143.
- 2. On the sending device, send one or more files to HTC Desire 10 pro.

3. If asked, accept the pairing request on HTC Desire 10 pro and on the sending device. You may also be prompted to enter the same passcode or confirm the auto-generated passcode on both devices.

You'll then get a Bluetooth authorization request.

- 4. Tap Pair.
- 5. When HTC Desire 10 pro receives a file transfer request notification, slide the Notifications panel down, tap the incoming file notification, and then tap Accept.
- 6. When a file is transferred, a notification is displayed. Slide the Notifications panel down, and then tap the relevant notification.
- 7. Tap the received file to view it.

Settings and security

HTC BoomSound profile

With the HTC BoomSound profile turned on, you'll enjoy enhanced audio quality when you plug in a headset. Listen to stronger bass, clearer vocals, and finer details in songs and videos.

To turn the HTC BoomSound profile on or off, go to **Settings**, and then tap the HTC BoomSound **On/Off** switch.

Turning location services on or off

In order to find your location on HTC Desire 10 pro, you need to enable location sources.

- 1. From the Home screen, tap ... > Settings > Location.
- 2. Tap the On/Off switch to turn location services on and off.
- 3. Under Location sources, select the location mode you want. For example, for a better estimate of your location, choose **High accuracy**. To save battery power, choose **Battery saving**.

Turning off a location source (for example GPS) means no applications on HTC Desire 10 pro will collect your location data through that location source. However, third party applications may collect — and HTC Desire 10 pro may continue to provide — location data through other sources, including through Wi-Fi and signal triangulation.

Do not disturb mode

Use Do not disturb mode to reject calls, and silence audible alerts and notifications, but still keep a data connection available.

1. With two fingers, swipe down from the top of the screen to open Quick Settings.



- 2. Tap 🗞.
- 3. Tap Total silence, Alarms only, or Priority only depending on if you want to allow exceptions. When Priority only is selected, you can receive messages or calls from contacts in your exceptions list.

- 4. Tap Until you turn this off if you want to turn off Do not disturb by yourself or tap + or to set the number of hours before Do not disturb turns off automatically.
- Tap **Done** to activate it.

The Do not disturb icon • will appear in the status bar.



When the screen is on, press VOLUME and then tap End now to turn off Do not disturb mode quickly.



When Do not disturb is on, the notification LED will not flash.

Allowing notifications and contacts to bypass Do not disturb mode

Add important contacts to an exceptions list so you can still receive their calls and messages even when Do not disturb mode is on.

- 1. From the Home screen, tap ::: > Settings > Sound & notification.
- 2. Tap Do Not Disturb > Priority only allows.
- 3. Tap the On/Off switch next to the items you wish to allow.
- 4. Tap Messages from or Calls from to select who can contact you.
- 5. Tap Manage approved contacts, and then tap + to add contacts to your exceptions list. To remove contacts or numbers from the list, tap : > Remove contacts.

Setting a Do not disturb schedule

Schedule Do not disturb to turn on automatically and how long will it last. For example, you can set it to turn on during a weekly meeting.

- 1. From the Home screen, tap ::: > Settings > Sound & notification.
- 2. Tap Do Not Disturb > Schedules.
- 3. Tap + Add rule.
- 4. Enter a name for the rule, and then select whether to base it on time or an event.

Rule	Settings
Time rule	• Set the days.
	 Set the start and end times.
	 Select a Do not disturb level.

Rule	Settings
Event rule	 Select a calendar you want to make the rule for.
	 Set a condition for the type of reply.
	 Select a Do not disturb level.



You can turn a schedule on or off by tapping the **On/Off** switch when viewing the details of the schedule.

Touch sounds and vibration

Some people like the sound or vibration feedback they get when touching the screen, and some don't. You can turn on or off various types of touch sounds and vibration on HTC Desire 10 pro.

- Touch tones when tapping the phone dial pad
- Touch sounds when tapping onscreen items
- Screen lock sounds
- Pull-to-refresh sounds
- Vibration when pressing hardware buttons
- Touch sound and vibration when tapping the keyboard

Turning touch sounds and vibration on and off

- 1. From the Home screen, tap ::: > Settings > Sound & notification.
- 2. Under System, select the option you want to turn on or off.

Turning off keyboard sounds and vibration

- 1. From the Home screen, tap :::, and then find and tap Settings.
- 2. Tap Language & keyboard > TouchPal > General settings.
- 3. On the General settings screen, do one of the following:
 - Tap Keypress sound, clear System Volume, and then drag the slider all the way to the left to turn off keyboard sounds.
 - Tap **Keypress vibration**, clear **System default**, and then drag the slider all the way to the left to turn off keyboard vibration.
- **4.** Tap **OK**.

Setting when to turn off the screen

After a period of inactivity, the screen turns off to conserve battery power. You can set the idle time before the screen turns off.

- 1. From the Home screen, tap ::: > Settings > Display & gestures or Display, gestures & buttons.
- 2. Tap Screen timeout, and then tap the time before the screen turns off.

Changing the display language

Changing the language adjusts the keyboard layout, date and time formatting, and more.

- 1. From the Home screen, tap ::: > Settings > Language & keyboard.
- 2. Tap Language, and then choose the language you want to use.

Airplane mode

When you enable Airplane (Flight) mode, all wireless radios on HTC Desire 10 pro are turned off, including the call function, data services, Bluetooth, and Wi-Fi.

When you disable Airplane mode, the call function is turned back on and the previous state of Bluetooth and Wi-Fi is restored.



- You can manually turn Bluetooth and Wi-Fi back on after enabling Airplane mode.
- If USB tethering is turned on, enabling Airplane mode turns it off. You need to manually turn USB tethering on after you disable Airplane mode.

Do any of the following to turn Airplane mode on or off:

- Press and hold POWER, and then tap Airplane mode.
- With two fingers, swipe down from the status bar to open the Quick Settings panel. Tap the Airplane mode tile to turn airplane mode on or off.

When enabled, the Airplane mode icon ★ is displayed in the status bar.

Screen brightness

- 1. From the Home screen, tap ::: > Settings > Display & gestures or Display, gestures & buttons.
- 2. Tap Brightness level.

- 3. With the Automatic brightness option selected, drag the slider to set the maximum brightness level. This sets a limit on how bright the screen will be when Automatic brightness is selected.
- **4.** To set the brightness manually, clear the **Automatic brightness** option, and then drag the brightness slider to the left to decrease or to the right to increase the screen brightness.

Automatic screen rotation



Automatic rotation is not supported in all applications.

- 1. From the Home screen, tap ::: > Settings > Display & gestures or Display, gestures & buttons.
- 2. Select or clear the **Auto rotate screen** option to turn it on or off.

Installing a digital certificate

Use client and Certificate Authority (CA) digital certificates to enable HTC Desire 10 pro to access VPN or secured Wi-FI networks, and also to provide authentication to online secure servers. You can get a certificate from your system administrator or download it from sites that require authentication.



- You must set a lock screen PIN or password before installing a digital certificate.
- Some apps such as your browser or email client let you install certificates directly in the app. See the app's help for details.
- 1. Save the certificate file in the root folder on HTC Desire 10 pro.
- 2. From the Home screen, tap ::: > Settings > Security.
- **3.** Do one of the following:
 - Tap Install from storage if your storage card is set up as removable storage.
 - Tap Install from phone storage if your storage card is formatted and set as internal storage.
- 4. Browse to the certificate and select it.
- 5. Enter a name for the certificate and select how it will be used.
- **6.** Tap **OK**.

App settings

Controlling app permissions

When you open apps the first time, you'll be prompted to grant them permissions to access certain data or features, such as contacts or the microphone. This gives you more control over which apps have authorized access.

- If you suspect a certain app of being malicious or requesting unnecessary permissions, you should choose **Deny** to protect your phone.
- If you choose **Deny** in a trusted app, you may not be able to use the app or access its full functionality. When this happens, go to Settings to change the app permissions.
- 1. From the Home screen, tap ..., and then find and tap Settings.
- 2. Tap Apps.
- 3. Tap the app you want to configure, and then tap Permissions.
- 4. Choose which permissions you want to turn on.

Setting default apps

In Settings, you can choose default apps for web browsing, text messaging, and more.

- 1. From the Home screen, tap :::, and then find and tap Settings.
- 2. Tap Apps.
- 3. Tap : > Configure apps > Default apps.
- 4. Choose your default assist and voice input, web browser, phone, and text messaging apps.

Setting up app links

If there's more than one app that can be opened when you tap a link—such as a shared social post or media link—you may be prompted to choose the app you want to use. When you're prompted after you've tapped a link, select an app, and then tap **Always** to set that app as the default app to use.

You can also go to Settings to see how app links have been set up for different apps and change them.

- 1. From the Home screen, tap ..., and then find and tap Settings.
- 2. Tap Apps.
- 3. Tap : > Configure apps > App links.
- 4. Tap the app you want to configure, and then tap Open supported links.
- 5. Select Open in this app to always open the app without being prompted when you tap a link. You can also choose whether to always be prompted to choose the app or never use the app for opening links.

Disabling an app

Apps, even if not used often, may be running in the background and downloading data. If an app cannot be uninstalled, you can disable it.

- 1. From the Home screen, tap :::, and then find and tap Settings.
- 2. Tap Apps.
- 3. Tap the app, and then tap **Disable**.

Assigning a PIN to a nano SIM/UIM card

You can help to protect the nano SIM/UIM card by assigning a Personal Identification Number (PIN).



Make sure you have the default PIN provided by your mobile operator before continuing.

- 1. From the Home screen, tap ::: > Settings > Security.
- 2. Select which card you want to assign a new PIN to.
- 3. Choose to lock the card, enter the default PIN of the card, and then tap OK.
- 4. To change the card PIN, tap Change UIM PIN or Change SIM PIN.

Restoring a nano SIM/UIM card that has been locked out

If you enter the wrong PIN more times than the maximum number of attempts allowed, the card will become "PUK-locked."

You need a Pin Unlock Key (PUK) code to restore access to HTC Desire 10 pro. Contact your mobile operator for this code.

- 1. On the Phone dialer screen, enter the PUK code, and then tap Next.
- 2. Enter the new PIN you want to use, and then tap Next.
- 3. Enter the new PIN again, and then tap OK.

Accessibility

Accessibility features

HTC Desire 10 pro comes with features and settings that allow easy access and use of apps and functions.

Improve screen readability

If you have low vision, take advantage of these features to help improve screen readability.

- Increase the font size, use color inversion, or enable high-contrast text using the Accessibility settings. See Accessibility settings on page 153.
- Turn magnification gestures on. See Turning Magnification gestures on or off on page 153.
- Turn on automatic screen rotation. See Automatic screen rotation on page 150.

Get audible feedback when using the phone

Use TalkBack to hear audible feedback on what you do on your phone. See Navigating HTC Desire 10 pro with TalkBack on page 154.

Use your voice

You can use your voice to perform an action on HTC Desire 10 pro.

Enter text with your voice. See Entering text by speaking on page 52.

Use Motion Launch

Motion Launch combines a motion and finger gesture to perform an action such as waking HTC Desire 10 pro from sleep mode or launching the camera. See Motion Launch on page 47.

Open Camera with Motion Launch Snap. See Launching the camera on page 49.

Accessibility settings

Use these settings to turn accessibility functions or services on or off. When you've downloaded and installed an accessibility tool, such as a screen reader that provides voice feedback, you can also control them using these settings.

- 1. From the Home screen, tap >Settings > Accessibility.
- 2. Tap or select the settings you want.

Turning Magnification gestures on or off

If you have low vision or would like to get a closer view of what's on the screen, use finger gestures to magnify portions of your phone's screen.

- 1. From the Home screen, tap >Settings > Accessibility.
- 2. Tap Magnification gestures and read the instructions on how to use it.
- 3. Tap the On/Off switch to turn Magnification gestures on or off.

Navigating HTC Desire 10 pro with TalkBack

Use TalkBack if you need to navigate HTC Desire 10 pro by spoken feedback. When you touch the screen, HTC Desire 10 pro vibrates and gives you an audible response so you know what you are touching.



Not all languages are supported.

Turning TalkBack on

- 1. From the Home screen, tap :: > Settings > Accessibility.
- 2. Tap TalkBack, and then tap the On/Off switch.
- 3. Read the TalkBack disclaimer and then tap OK.

A short tutorial explaining how to use TalkBack will begin playing after you turn on TalkBack.



TalkBack works best if you turn off automatic screen rotation.

Turning Explore by touch on or off

Explore by touch allows HTC Desire 10 pro to respond to shortcut gestures and screen touches with audible feedback. While Explore by touch is enabled when you turn on TalkBack, you can turn it off.

- 1. From the Home screen, tap :: > Settings > Accessibility.
- 2. Tap TalkBack, and then tap : > Settings.
- 3. Under Touch exploration, clear the Explore by touch option.

You will no longer hear audible feedback from HTC Desire 10 pro.

Using TalkBack gestures

When TalkBack is turned on and the Explore by touch setting is selected, the regular touch gestures are replaced by the TalkBack gestures.



Media gestures such as 3-finger swiping may not be available when TalkBack gestures are enabled.

Do one of the following:

То	Do this
Open an item	 Drag your finger on the screen to find and select the item. Double-tap anywhere on the screen to open the item.
Move an item	 Drag your finger on the screen to find the item. Double-tap anywhere on the screen, but don't lift your finger on the second tap. Drag the item to a new spot and then lift your finger.

То	Do this
Scroll through a screen	Use two fingers to swipe up, down, left or right.
Unlock the lock screen	Use two fingers to swipe up from the bottom of the screen.
Open the Notifications panel	Use two fingers to swipe down from the top of the screen.

Assigning TalkBack shortcuts

TalkBack has customizable gestures that can be used to open the Notifications panel, view recent apps, access TalkBack controls, and more.



The steps below are described using the regular gestures. Use the corresponding TalkBack gestures if you already have TalkBack turned on.

- 1. From the Home screen, tap :: > Settings > Accessibility.
- 2. Tap TalkBack, and then tap : > Settings > Manage gestures.
- 3. Tap any of the shortcut gestures, and then select an action.

Using TalkBack context menus

TalkBack has context menus for controlling continuous reading and global TalkBack controls. These menus can be accessed using TalkBack shortcut gestures.

- 1. Turn TalkBack on.
- **2.** Do one of the following:
 - To open the continuous reading menu, use one finger to swipe up and right in one continuous movement.
 - To open the global context menu, use one finger to swipe down and right in one continuous movement.



If you already changed the TalkBack shortcut gestures, check your TalkBack settings for the appropriate gesture.

- 3. Press and hold anywhere on the screen.
- **4.** Drag your finger around the screen to explore the options.



To cancel an action, drag your finger to your starting position.

Changing the TalkBack reading speed



The steps below are described using the regular gestures. Use the corresponding TalkBack gestures if you already have TalkBack turned on.

- 1. From the Home screen, tap :: > Settings > Accessibility.
- $\textbf{2.} \quad \textbf{Tap Text-to-speech output} \,{>}\, \textbf{Speech rate}.$
- 3. Select a speech rate.



You can test the speech rate by tapping Listen to an example.

TalkBack language settings

- 1. From the Home screen, tap ::: > Settings > Accessibility.
- 2. Tap Text-to-speech output > Google Text-to-speech Engine, and do one of the following:

Select a different language	Tap Language.
Install a voice	Tap Install voice data , and then tap the language. Tap <u>▶</u> next to the voice data you want to install. When installation is completed, press ☐ twice and tap Language .

3. Select the language you want to use.



Not all languages are supported.

Trademarks and copyrights

©2016 HTC Corporation. All Rights Reserved.

Dolby Audio manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories.

HTC, the HTC logo, HTC Desire, HTC BlinkFeed, HTC Connect, HTC Sense, VideoPic, and all other HTC product and feature names are trademarks or registered trademarks in the U.S. and/or other countries of HTC Corporation and its affiliates.

Google, Android, Google Chrome, Google Drive, Google Maps, Google Now, Google Play, Google Voice Search, Google Wallet, and YouTube are trademarks of Google Inc.

Microsoft, Windows, ActiveSync, PowerPoint, Outlook.com, and Windows Media are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.

Wi-Fi® and Miracast are registered trademarks of the Wireless Fidelity Alliance, Inc.

LTE is a trademark of European Telecommunications Standards Institute (ETSI).

DLNA is a trademark or registered trademark of Digital Living Network Alliance. All rights reserved. Unauthorized use is strictly prohibited.

Qualcomm is a trademark of Qualcomm Incorporated, registered in the United States, and other countries and used with permission. AllPlay is a trademark of Qualcomm Connected Experiences, Inc., and used with permission.

BLACKFIRE RESEARCH™ is a Registered Trademark (No. 3,898,359) of BLACKFIRE RESEARCH CORP.

AirPlay, Apple TV, iCloud, iPhone, iTunes, Mac, and Mac OS are trademarks of Apple Inc. registered in the U.S. and other countries.

microSD is a trademark of SD-3C LLC.

All other trademarks and service marks mentioned herein, including company names, product names, service names and logos, are the property of their respective owners and their use herein does not indicate an affiliation with, association with, or endorsement of or by HTC Corporation. Not all marks listed necessarily appear in this User Guide.

The HTC Sync Manager software can be used with materials that you own or are lawfully authorized to use and/or duplicate. Unauthorized use and/or duplication of copyrighted material may be a violation of copyright law in the United States and/or other countries/regions. Violation of U.S. and international copyright laws may subject you to significant civil and/or criminal penalties. HTC Corporation shall not be held responsible for any damages or losses (direct or indirect) that you may incur as a result of using this software.

Screen images contained herein are simulated. HTC shall not be liable for technical or editorial errors or omissions contained herein, nor for incidental or consequential damages resulting from

furnishing this material. The information is provided "as is" without warranty of any kind and is subject to change without notice. HTC also reserves the right to revise the content of this document at any time without prior notice.

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording or storing in a retrieval system, or translated into any language in any form without prior written permission of HTC.

Index

- Smart Boost 90

Burst mode 72

Δ	
A	
Accounts	Call history 112
- syncing 94	Camera
Airplane mode 149	- basics 65, 67, 69
Alarms	- capture modes 66
- setting 131	- continuous shooting 72
Apps	- flash 66
- arranging 63	- HDR 72
- grouping into a folder 62, 64	- Hyperlapse 75
- hiding or unhiding 63	- Pro mode 76
- icons on Home screen 61	- RAW photos 77
- installing 34	- recording a video 69
- installing from Google Play 33	- selfie 70, 71
- installing from the web 34	- standby 65
- on Home screen 61	- sweep panorama 75
- restoring 34	- taking a photo 67
- uninstalling 34	- taking photo while recording 69
- updating 32	- using volume buttons as controls 66
Auto Selfie 70	- video resolution 69
	- Zoe camera 75
В	- zooming 65
	Capture modes
Backup	- switching to 66
- about 95	Capture screen 42
- HTC Sync Manager 99	Change phone language 149
- options 95	Clock 131
- restoring backed up apps 34	- alarm 131
Battery	- setting date and time 131
- charging 22	Conference call 111, 112
- checking usage 83	Contacts
- saving battery power 81	- adding 120
BlinkFeed	- contact link suggestions 123
See HTC BlinkFeed	- copying 26, 122
Bluetooth	- editing 121
- connecting a Bluetooth headset 143	- filtering 119
- receiving information 144	- groups 124
Boost+	- importing 26, 122
- about 90	- merging contact information 123
- clearing junk files 91	- sending contact information 123
- Game Battery Booster 91	- transferring 26, 122
G + D + CC	· · · · · · · · · · · · · · · · · · ·

Continuous shooting 72

- using 132

Copy	Folder
- files 89	- grouping apps 62
Copying	- removing items 62, 64
- text 49	FOTA
	See Software update
D	Freestyle layout 57
Data connection	
- data roaming 135	G
- sharing 139	Game Battery Booster 91
- turning on or off 134	Gestures
- usage 134	- motion gestures 36
Data transferiPhone	- touch gestures 37
- from iCloud 26	Google Play
Data transfer	- installing apps 33
- from Android phone 25	- refund 34
- from iPhone 26	GPS (Global Positioning System)
- transferring contacts 26	See Location settings
Display	Group messaging 115
- changing the time before the screen turns	
off 149	Н
- screen brightness 149	11
- screen rotation 150	Hands free 143
- Sleep mode 35	Hard reset
DNG RAW photos 77	See Factory reset
•	HDR 72
E	Headphones
	See Bluetooth
Email	hearing impaired
See Mail	- hearing aids 153
Exchange ActiveSync	- sidetone 153
- flagging an email 129	Home screen
- Out of office 129	- adding or removing widget panel 59
expanded storage 85	- apps 61
	- arranging widget panels 59
F	- changing your main Home screen 60
Face unlock 29	- classic layout 57
Factory reset 101	- feeds 103
Files	- folder 62
- copying 89	- freestyle layout 57
Finger gestures 37	- launch bar 60
Fingerprint	- shortcuts 61
- about 30	- wallpaper 57
- adding, removing, or editing 31	- widget panel 35
Firmware	- widgets 61
See Software update	Hotspot
FM Radio 132	See Wireless router

 $HTC\,BlinkFeed$

- about 103

- deleting items 107	M
- posting to social networks 107	Mail
- selecting feeds 105	- attachments 127
- setting up custom topics 106	- carbon copy, blind copy (cc, bcc) 127
- showing social network and app feeds 106	- deleting 128
- turning on or off 104	- draft 127
HTC Clock 131	- replying 127
- setting an alarm 131	- searching 128
HTC Connect	- sending 127
- about 140	- sorting 128
- streaming music to speakers 142, 143	Mail folders
- streaming music, videos, or photos to media devices 141	- moving email messages 128
HTC Sense version 31	Master reset
	See Factory reset
HTC Sync Manager 99 Hyperlapse 75	Media streaming
nyperiapse 75	See HTC Connect
	Messages
1	- block box 117
Idle screen	- deleting a conversation 118
See Lock screen	- draft message 114, 115
Internet connection	- forwarding 116
- VPN 137	- group SMS 115
- Wi-Fi 136	- locking 118
- wireless router 138	- replying 116
	- secure box 116
K	- sending 114
Karbaard	microSD card 19
Keyboard	MMS
- entering text 50- entering text by speaking 52	See Multimedia message
- speech recognition 52	Multimedia message
- speech recognition 32	- attachment 114
T	- group MMS 115
L	- sending 114
Language	Music
- system language 149	- BoomSound profile 146
Live Makeup 70	- transferring from iPhone 100
Location settings 146	
Lock screen	N
- answering a call 110	Notifications
- dismissing an alarm 36	- panel 46
- locking apps 92	_
- opening an app 41	0
- rejecting a call 110	0
- unlocking 36	Online accounts
Low battery 81	- adding accounts 94
Low storage 85	- removing accounts 95

- syncing manually 94

- what can you sync with 94	See Wireless router	
P	S	
Pair a Bluetooth headset 143	Screen 35, 36, 42, 149, 150	
Phone calls	- adjusting brightness 149	
- blocking a call 113	- capture 42	
- call history 112	- changing the time before the screen turns	
- calling 108	off 149	
- conference call 111, 112	- idle screen 36	
- emergency call 110	- rotation 150	
- extension number 109	- Sleep mode settings 149	
- missed calls 109	Screen lock 29	
- muting the microphone 111	Screen shot	
- putting a call on hold 110	See Capture screen	
- receiving calls 110	SD card 19	
- Smart Dial 108	Security	
- speakerphone 111	- fingerprint 30	
- speed dial 109	- protecting phone with screen lock 29	
Phone information 31	- security certificates 137	
Phone settings	self-timer 71	
See Settings	selfie	
Phone updates 31	- Auto Selfie 70	
Photos	- Live Makeup 70	
- transferring from computer 27	- self-timer 71	
- transferring from iPhone 100	- Voice Selfie 70	
Power	Sense Home	
- charging the battery 22	- adding apps to widget 44	
- checking battery usage 83	- changing addresses 43	
- saving power 81	- manually switching locations 44	
- sleep mode 35	- pinning apps in widget 44	
Print screen	- setting up widget 43	
See Capture screen	- smart folders in widget 44	
PUK (PIN Unblock Key) 152	- unpinning apps in widget 44	
	- widget 43	
	Settings	
X	- About 31	
Quick settings 28	- Accessibility 153	
	11 1 1	
R	Storago 95	
Radio	Setup	
See FM Radio	- contacts from old phone 26	
RAW Camera	- first-time setup 24	
	- photos, music, videos from old phone 27	
RAW photos 77	- restoring backup from cloud storage 24	
Recent apps 41	Sharing	
Recording your voice 132	- text 50	
Reset 101	Shortcuts 41	

Router

Voice Selfie 70 VPN 137, 138

- adding a connection 138
- connecting 138
- disconnecting 138

W

Waking up phone

- through power button 35

Wallpaper

- changing 57

Weather

- checking weather 132

Wi-Fi 136

- connecting via WPS 136
- turning on 136

Widgets

- adding 61
- changing settings 61
- removing 63
- resizing 61

Wireless media sharing

See HTC Connect

Wireless router 138

Z

Zoe camera 75

V

VideoPic 69

Videos

- recording 69
- taking photo while recording 69
- transferring from computer 27

Voice input 52

Voice Recorder 132