

User Manual

alcatel PIXI UNITE™



A466BG
English - CJA28HBALAAA

Table of contents

1	Your mobile	3	7	Getting connected.....	29
1.1	Keys and connectors.....	3	7.1	Connecting to the Internet.....	29
1.2	Getting started	4	7.2	Browser	30
1.3	Home screen	5	7.3	Connecting to Bluetooth devices	34
2	Text input	11	7.4	Connecting to a computer.....	35
2.1	Using Onscreen Keyboard	11	7.5	Connecting to virtual private networks.....	36
2.2	Text editing	11	8	Google Play Store	37
3	Phone call, Call log and Contacts	12	8.1	Locate the item you want to download and install	37
3.1	Call	12	8.2	Download and install	37
3.2	Placing a call	12	8.3	Manage your downloads.....	38
3.3	Answering or rejecting a call.....	12	9	Multimedia applications.....	39
3.4	Call log	15	9.1	Camera.....	39
3.5	Contacts	15	9.2	Gallery	40
3.6	Contacts importing, exporting and sharing	17	9.3	YouTube	42
4	Messaging.....	18	9.4	Music.....	43
4.1	Write message.....	18	10	Google Maps	44
5	Gmail/Email.....	22	10.1	Get My Location.....	44
5.1	Gmail	22	10.2	Search for a location.....	44
5.2	Email	24	10.3	Get driving, public transport or walking directions.....	45
5.3	Hangouts	25	10.4	Save a location	45
6	Calendar & Alarm clock & Calculator.....	26	10.5	Map view.....	45
6.1	Calendar	26	11	Others.....	46
6.2	Clock	27	11.1	File Manager.....	46
6.3	Calculator	28	11.2	Sound Recorder	46
			11.3	Radio	46
			11.4	Other applications	47
			12	Settings	47
			12.1	WIRELESS & NETWORKS.....	47

12.2 DEVICE.....48

12.3 PERSONAL50

12.4 SYSTEM52

13 Making the most of your phone.....55

13.1 FOTA Upgrade55

Safety and use55



www.sar-tick.com

This product meets applicable national SAR limits of 1.6 W/kg. The specific maximum SAR values can be found on page 62 of this user guide.

When carrying the product or using it while worn on your body, either use an approved accessory such as a holster or otherwise maintain a distance of 10 mm from the body to ensure compliance with RF exposure requirements. Note that the product may be transmitting even if you are not making a phone call.



PROTECT YOUR HEARING

 
 
To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.



1

Your mobile

1.1 Keys and connectors

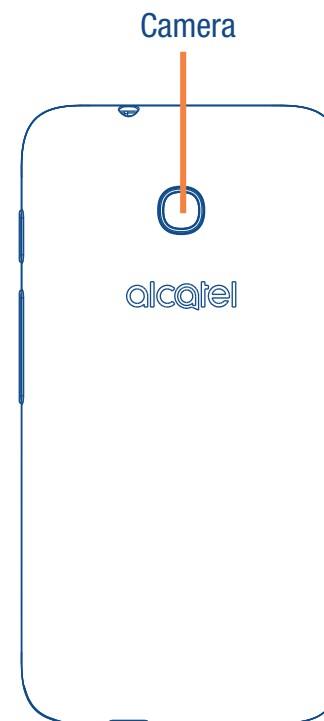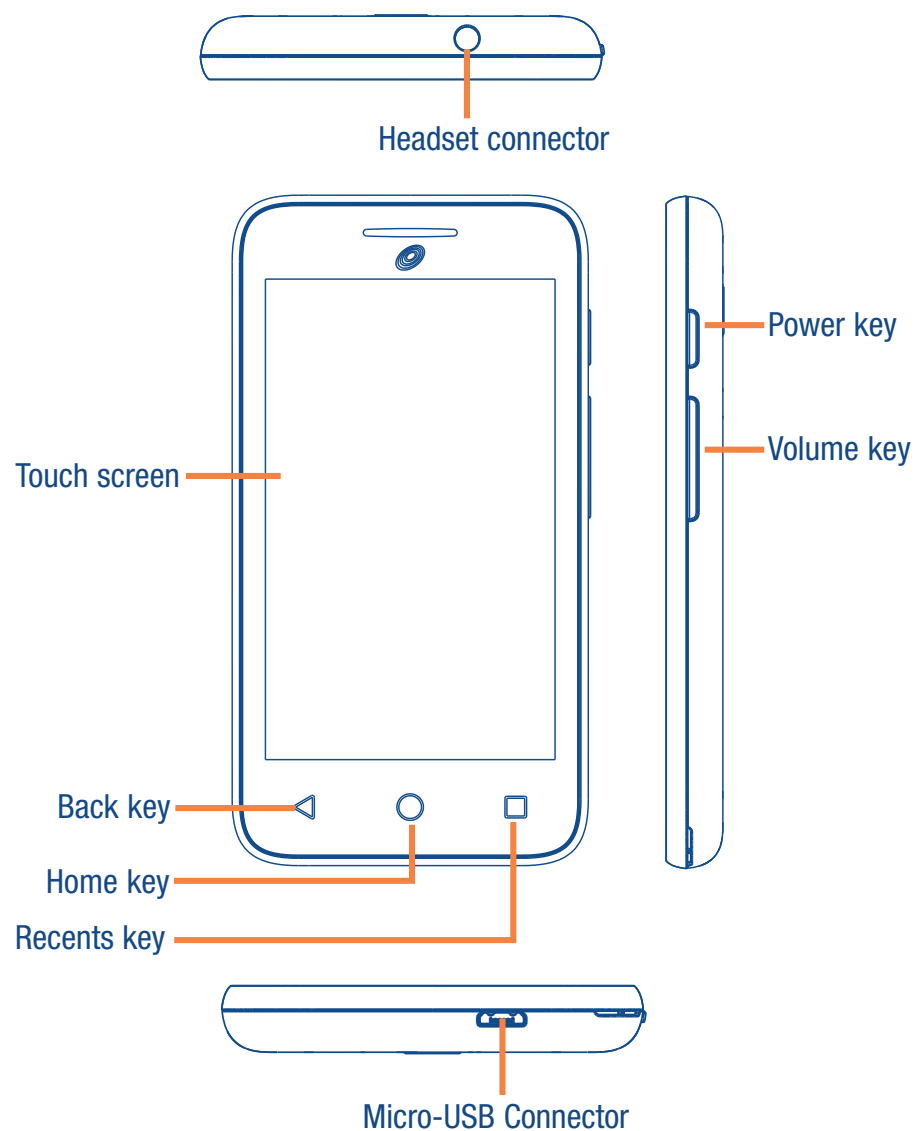

Back key

- Touch to go back to the previous screen, or to close a dialog box, options menu, the notification panel, etc.



Home key

- While on any application or screen, touch to return to the Home screen.



Recents key

- Touch and hold to open a list of thumbnail images of apps you've worked with recently.

Power key

- Press: Lock the screen/Light up the screen.
- Press and hold: Generate a pop up menu providing more options: **Restart, Power off, Airplane mode.**
- Press the **Power** key for more than 15 seconds to restart.
- Press the **Power** key to light up the screen when it dims during a call.
- Press the **Power** key and **Volume up** key to reset if the phone is off.
- Press the **Power** key and **Volume down** key to capture a screenshot while the device is on.

 
Volume Keys

- In call mode, adjusts the earpiece or headset volume.
- In Music/Video/Streaming mode, adjusts the media volume.
- In general mode, adjusts the ringtone volume.
- Mutes the ringtone of an incoming call.


1.2 Getting started

1.2.1 Set-up

Removing and installing the back cover

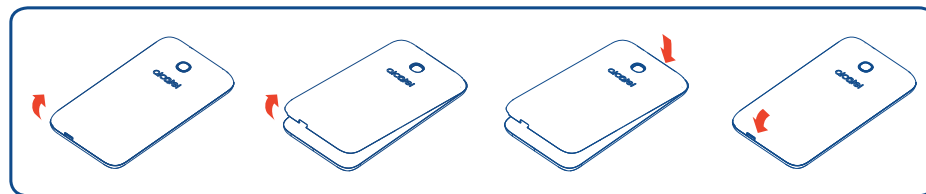

 Installing and removing the micro SD card

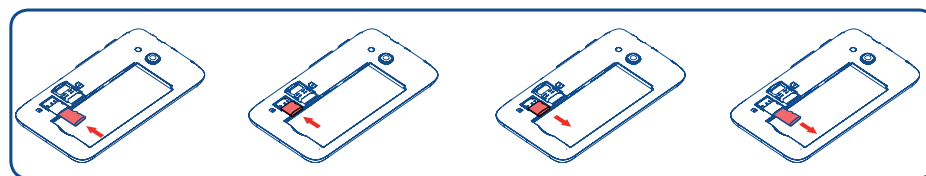


Insert the micro SD card with golden contact facing downwards into the slot. Slide it out to remove the micro SD card.




To avoid data loss and SD card damage, before removing the SD card, please ensure that the SD card is unmounted (**Settings\>Storage\Unmount SD card**).

 Installing and removing the battery

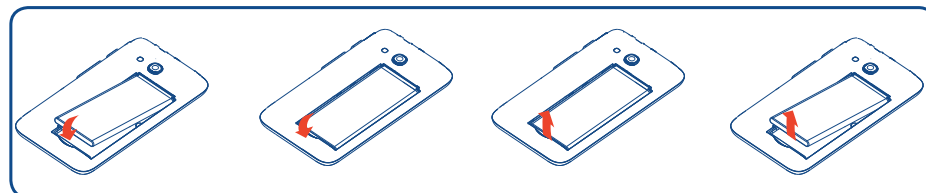

- To install, insert and click the battery into place, then close the phone cover.
- To remove the battery, first power the phone off. Then unclip the cover and remove the battery.

 Charging the battery

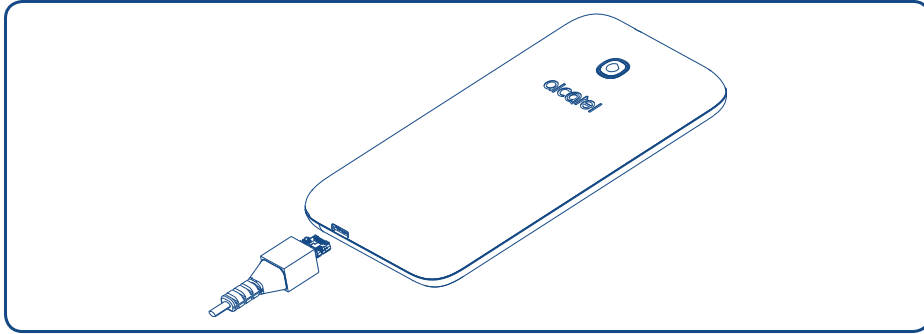

Connect the battery charger to your phone and main socket respectively.



To reduce power consumption and energy waste, once the battery is fully charged, disconnect your charger from the plug; switch off Wi-Fi, GPS, Bluetooth or background-running applications when not in use; reduce the backlight time, etc.

1.2.2 Power on your phone

Hold down the **Power** key until the phone powers on, unlock your phone (Slide, PIN, Password, Pattern or Voice unlock) if necessary and confirm. The Home screen is displayed.

If you do not know your PIN code or have forgotten it, contact your service provider. Do not leave your PIN code with your phone. Store this information in a safe place when not in use.

Set up your phone for the first time

The first time you power on the phone, you should set the following options:

- Select the phone's language, then touch **Get started**.
- Select the input method, then touch ►.
- Set up Wi-Fi and your Mobile data connection, then touch ►.

- **Set up your Google account:** Touch **Set up now** to set up your Google account. If you already have a Google account, touch **Existing**; then enter your Email address and password. If you've forgotten the password, go to <http://www.google.com> to retrieve it. If you don't own a Google account, touch **New** to create one.
- **Set up screen lock** to activate device protection, you can also touch **Cancel** to skip it.
- Finish **Backup & reset** settings, then touch ►.
- Activate **Location**, or skip by touching ►.
- When the **Finished** screen displayed, touch **Enjoy now**.

If you power on your phone with no SIM card inserted, you can connect to a Wi-Fi network to sign into your Google account and to use some features.

1.2.3 Power off your phone

Hold down the **Power** key from the Home screen until the phone options appear, select **Power off**.

1.3 Home screen

You can bring all the items (applications, shortcuts, folders and widgets) you love or use most frequently to your Home screen for quick access. Touch the **Home** key to switch to the Home screen.



Status bar

- Status/Notification indicators
- Touch and drag down to open the notification panel.

Slide left or right to view other panels on the Home screen.

Touch an icon to open an application, folder, etc.

Favorite tray applications

- Touch to enter the application.
- Touch and hold to move applications.

Application tab

- Touch to enter application list.

The Home screen is provided in an extended format to allow more space for adding applications, shortcuts etc. Slide the Home screen horizontally left and right to get a complete view.

1.3.1 Using the touchscreen

Touch



To access an application, touch it with your finger.

Touch and Hold



To enter the available options for an item, touch and hold the item. For example, select a contact in Contacts, touch and hold this contact, an options list will then appear on screen.

Drag



Place your finger on the screen to drag an object to another location.

Slide/Swipe



Slide the screen to scroll up and down the applications, images, web pages... at your convenience.

The device also supports one finger zoom in (Message, Browser, Email and Gallery) by double tapping the screen then slide with one finger to zoom in/out).

Flick



 
Similar to swiping, but flicking makes it move quicker.

Pinch/Spread



Place your fingers of one hand on the screen surface and draw them apart or together to scale an element on the screen.

Rotate



























Automatically change the screen orientation from portrait to landscape by turning the phone sideways.



























1.3.2 Status bar

From the status bar, you can view both phone status and notification information.

Status icons

	GPRS connected		Roaming
	GPRS in use		No signal
	EDGE connected		No SIM card installed
	EDGE in use		Vibrate mode
	Signal strength		Ringer is silenced
	Wi-Fi is on		Phone microphone is mute
	Connected to a Wi-Fi network		Battery is very low
	Bluetooth is on		Battery is low
	Connected to a Bluetooth device		Battery is partially drained
	Airplane mode		Battery is full
	Alarm is set		Battery is charging
	Speakerphone is on		Headset connected


Notification icons

	New Gmail message		Call forwarding is on
	New Email message		Song is playing
	New text or multimedia message		Connected to VPN
	Problem with SMS or MMS delivery		Disconnected from VPN
	New Google Hangouts message		Radio is on
	New voicemail		Uploading data
	Upcoming event		Downloading data
	Screenshot error		Download finished
	Screenshot captured		Select input method
	Preparing SD card		Phone is connected via USB cable
	An open Wi-Fi network is available		System update available
	Carrier data use threshold approaching or exceeded		GPS is on
	Missed call		GPS is off


Touch and drag down the Status bar to open the Notification panel or Quick setting panel. Touch and drag up to close it. When there are notifications, you can touch them to access notifications directly.

Notification panel

 
When there are notifications, touch and drag down the Status bar to open the Notification panel to read the detailed information.

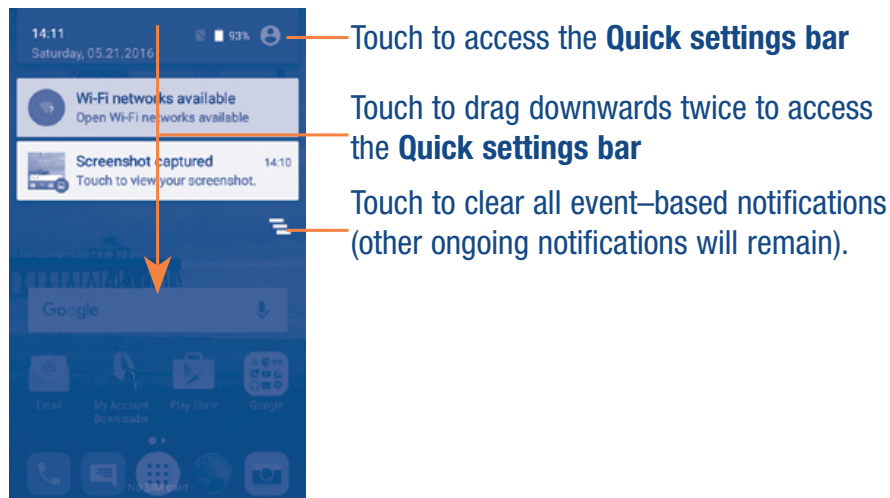

Touch a notification and slide it sideways to delete it.


Touch the icon  to clear all event-based notifications (other ongoing notifications will remain).

 Touch  and then the Settings icon  to access **Settings**.

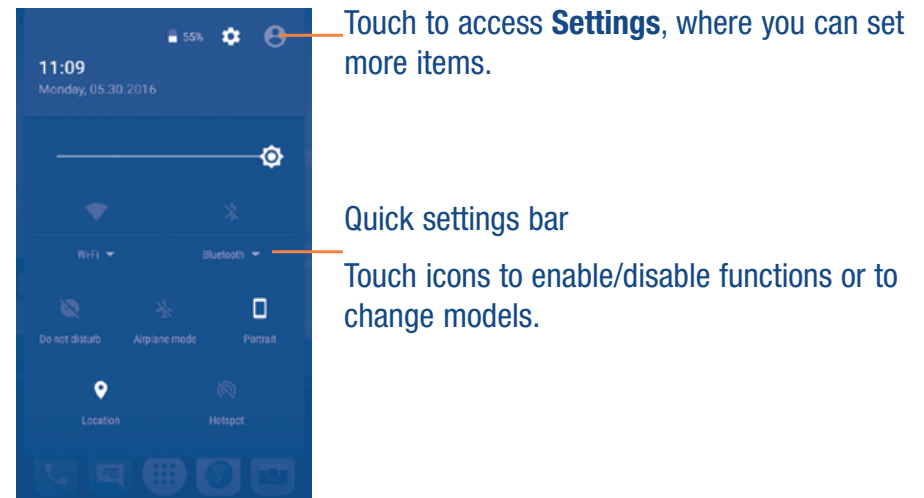

1.3.3 Search bar

 The phone provides a Search function which can be used to locate information within applications, the phone or the web.

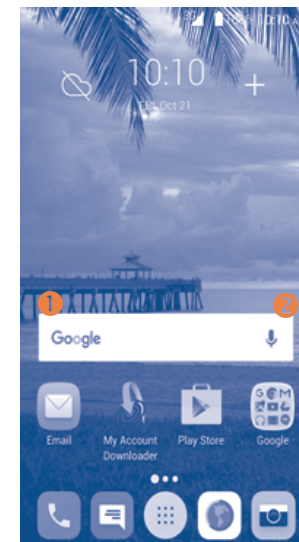


1 Search by text

- Touch the Search bar from the Home screen.
- Type the text/phrase you want to search for.

- Touch the  icon on the keyboard if you want to search on the web.

② Search by voice

- Touch  from the Search bar to display a dialog screen.
- Speak the word/phrase you want to search for. A list of search results will display for you to select from.

1.3.4 Lock/Unlock your screen

To protect your phone and privacy, you can lock the phone screen by creating a variety of patterns, PINs or passwords etc.

To create a screen unlock pattern

- Touch the **Menu** key from the Home screen, then touch **Settings\Lock settings\Screen lock\Pattern**.
- Draw your own pattern.



Draw your unlock pattern

Touch to confirm by drawing pattern again

To create a screen unlock PIN/Password

- Touch the **Menu** key from the Home screen, then touch **Settings\Lock settings\Screen lock\PIN or Password**.
- Set your PIN or password.

To lock phone screen

Press the **Power** key once to lock the screen.

To unlock phone screen

Press the power key once to light up the screen, draw the unlock pattern you have created or enter PIN or password, etc. to unlock the screen.

1.3.5 Personalize your Home screen

Add an app or widget

You can touch and hold a folder, an application or a widget to activate the Move mode, and drag the item to any Home screen as you prefer.

Reposition an app or widget

Touch and hold the item to be repositioned to activate the Move mode, drag the item to the desired position and then release. You can move items both on the Home screen and the favorite tray. Hold the icon on the left or right edge of the screen to drag the item to another Home screen.

Remove

Touch and hold the item to be removed to activate the Move mode, drag the item up to the top of the **Remove** icon, and release after the item turns red.

Create folders

To improve the organization of items (shortcuts or applications) on the Home screen and the favorite tray, you can add them to a folder by stacking one item on top of another. To rename a folder, open it and touch the folder's title bar to input the new name.

Wallpaper customization

Touch and hold the Home screen then touch **WALLPAPERS** to customize wallpaper.

1.3.6 Widgets and recently-used applications

Consult widgets

 
Touch and hold the Home screen to enter applications and widgets list.

Slide left and right to view all applications and widgets. Touch **WIDGETS** to access the category directly.

To return to the Home screen, touch the **Home** key.

Consult recently-used applications

To consult recently-used applications, touch the Recents key from the Home screen. Touch a thumbnail in the window to open the related application.

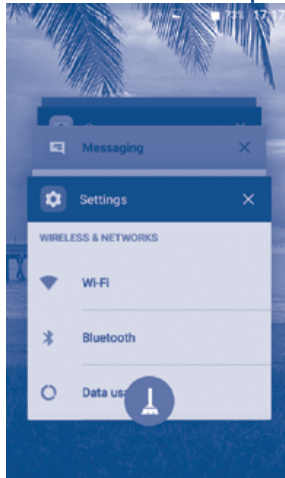

Slide Vertically to view all thumbnails of recently-used applications.

Touch one thumbnail and slide it left or right to delete it.

Touch  at the bottom to activate the system's one key boost which clears memory used by recent applications.

1.3.7 Volume adjustment

Using Volume key

Press the **Volume** key to adjust the volume. To active the vibrate mode, press the **Volume down** key until the phone vibrate. Press the **Volume down** key once more to active the silent mode.

Using Settings Menu

Touch the **Menu** key from the Home screen, then touch **Settings\Sound & notification** you can set the volume of media, Alarm,Ring,Notification etc. to your preference.

 
2 Text input

2.1 Using Onscreen Keyboard

Onscreen keyboard settings

Touch the **Menu** key from the Home screen, select **Settings/Language & input/ Android Keyboard** and a series of settings will become available for your selection.


2.1.1 Android keyboard

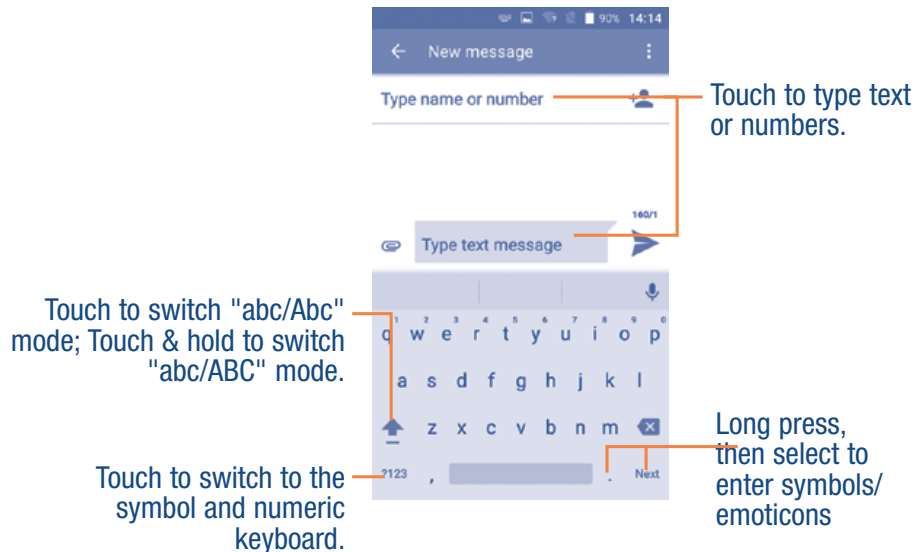

2.2 Text editing


You can edit the text you have entered.

 - Touch and hold within the text you would like to edit.
- Drag the tabs to change the highlighted selection.
- The following options will show: **CUT, COPY, SHARE**.

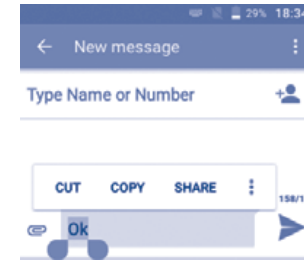

You can also insert new texts as you prefer

 - Touch where you want to type, or touch and hold the blank, the cursor will blink and the tab will show. Drag the tab to move the cursor.
- If you have selected any text, touch the tab to show **SELECT ALL** icon which allows you to complete paste immediately.

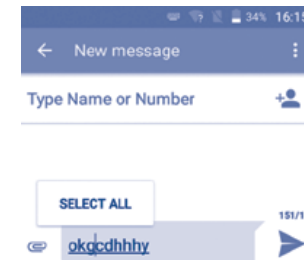

3 Phone call, Call log and Contacts

3.1 Call

 


3.2 Placing a call

You can easily launch a call using **Call**. Touch the Application tab from the Home screen and select **Call**.

Display the suggested number(s).

Touch and hold to access voicemail.

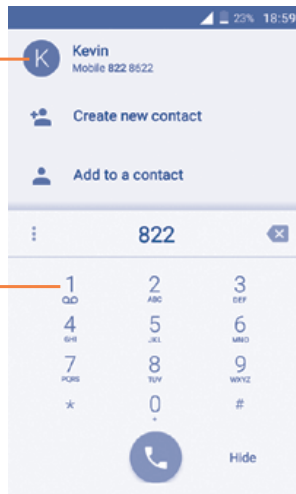

Enter the desired number from the keyboard directly or select a contact from **Contacts** or **Call log** then touch  to place the call.

The number you entered can be saved to **Contacts** by touching **Create new contact** icon .


If you make a mistake, you can delete the incorrect digits by touching .

To hang up a call, touch .

 
International call

To dial an international call, touch and hold **0+** to enter “+”, then enter the international country prefix followed by the full phone number and finally touch .




Emergency call

If your phone has network coverage, dial emergency number and touch  to make an emergency call. This works even without a SIM card and without typing the PIN code.

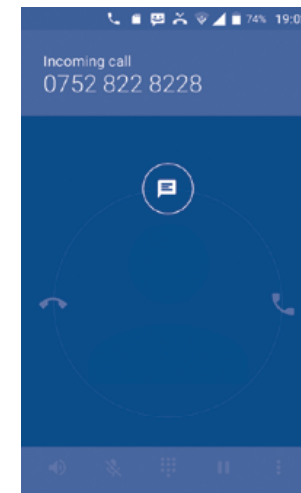3.3 Answering or rejecting a call



When you receive a call:

- Slide the  icon to the right to answer;
- Slide the  icon to the left to reject;
- Slide the  icon upwards to reject the call by sending a preset message.

To mute the ringtone volume of an incoming call, press the **Volume up/down** key.

3.3.1 Calling your voicemail

 
Your voicemail is provided by your network to avoid missing calls. It works like an answering machine that you can consult at any time.

To access your voicemail, touch and hold  on the dial pad.

To set your voicemail number, touch the **Menu** key from the Phone screen, then touch **Settings\Call settings\Voicemail\Setup\Voicemail number**.

3.3.2 During a call

To adjust the volume during a call, press the **Volume up/down** key.

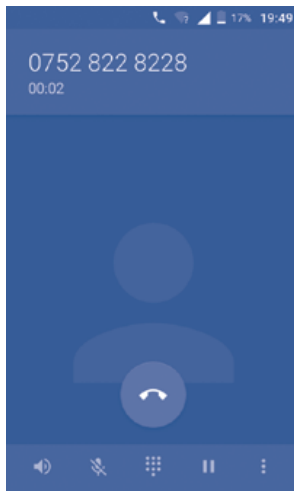

Touch to end the current call.



Touch to display the dial pad.



Touch to activate the speaker during the current call. Touch this icon again to deactivate the speaker.



Touch to mute the current call. Touch this icon again to unmute the call.



Touch to hold the current call. Touch this icon again to retrieve the call.



Touch to add a call.

During a call:

- Press the **Power** key to light up the screen when it dims.



To avoid accidentally pressing the touchscreen during a call, the screen will automatically lock and unlock once the cellphone is placed and removed from your ear.

3.3.3 Managing multiple calls



With this phone you can handle multiple calls at the same time.

Swap calls

When you accept two calls, touch the  icon to switch between two lines. The current call is put on hold and you have joined in the other call.

Conference calls ⁽¹⁾

You can set up a conference call.

- Place a call to the first participant of the conference call.
- Touch the icon .
- Dial to add a call and then touch .
- Touch **Merge calls** to start conference.
- Touch  to end the conference call and disconnect all callers.

3.3.4 Call settings

Touch the **Menu** key from the Phone screen, then touch **Settings\Call settings**, the following options are available:

Voicemail

Touch to access voicemail service and number settings.

- **Service** Opens a dialog box where you can select your provider's voicemail service or another service.
- **Setup** If you are using your provider's voicemail service, this opens a dialog box where you can enter the phone number to use for listening to and managing your voicemail.
- **Sound** Touch to select the notification sound.
- **Vibrate** Mark the check box to enable vibration when there's an incoming voicemail call.

Fixed Dialing Numbers

Fixed Dialing Number (FDN) is a service mode of SIM, where outgoing calls are restricted to a set of phone numbers. These numbers are added to the FDN list. The most common practical application of FDN is for parents to restrict the phone numbers to which their children can dial. For security reasons, you'll be prompted to enable FDN by entering SIM PIN2 which is usually acquired from your service provider or SIM maker.

⁽¹⁾ Depending on your network service provider.

Call forwarding

Select to always forward your calls or when you are busy, unanswered, or unreachable.

Call barring

Touch to pick out calls to be barred, cancel call barring, or change barring password.

Additional settings

Touch to access other voice call settings.

Caller ID: Touch to use default operator settings to display my number in outgoing calls.

Call waiting: Mark the checkbox to notify you of new incoming calls during a call.

Other settings

Display options

Touch to set display options, sort by First name or Last name, and Name format, First name first or Last name first.

Quick responses

Touch to edit quick responses which will be used when you reject a call with messages.

Accessibility

- **TTY mode** Touch to select among TTY Off, TTY Full, TTY HCO, and TTY VCO.
- **Turn over to mute** Mute the incoming calls by turning the phone over.
- **Turn over to reject** Reject incoming calls by turning the phone over.
- **Vibrate reminder** Vibrate when outgoing calls connect successfully.

3.4 Call log

You can access your call log by touching  from the Dial screen. Touch  on the right side of a contact/number to place a call directly.

Touch a contact or number to view information or further operations.

You can view detailed information of a call, launch a new call or send messages to a contact or number, or add numbers to **Contacts**, etc.

To clear the entire call log, touch **Menu key\Call history\Clear call history**.

 
3.5 Contacts

Contacts enables quick and easy access to the people you want to reach.

You can view and create contacts on your phone and synchronize these with your Gmail contacts or other applications on the web or on your phone.

3.5.1 Consult your Contacts

To access this feature, touch  from the Home screen, then select **Contacts**.

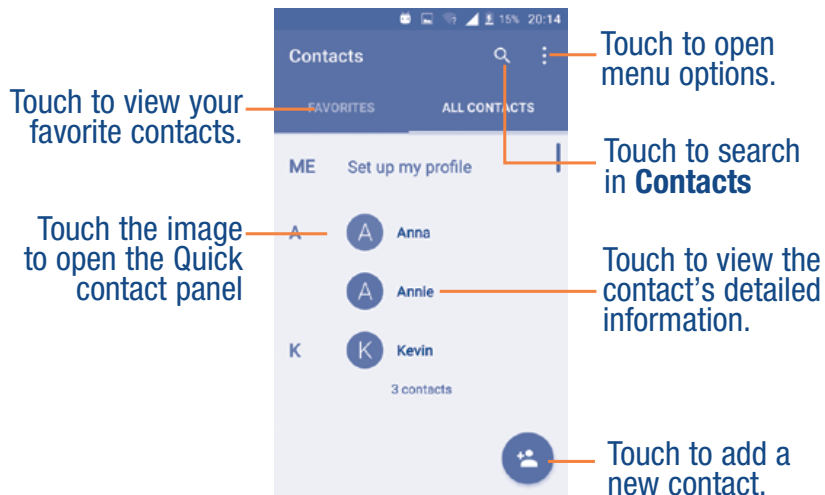

Touch the **Menu** key to display contacts list option menu, following actions are enabled:

- **Contacts to display** Choose contacts to display.
- **Import/export** Import or export contacts between phone, SIM card, and micro SD card, or share contacts.
- **Block contacts list** Select and delete unwanted contacts.
- **Groups** Share your contacts through Bluetooth, Email, etc.
- **Accounts** Manage the synchronization settings for different accounts.
- **Settings** Touch to change the display of the sort list and contact names.

3.5.2 Managing contact groups

 
The contact group helps you to improve the organization of your contacts. You can add, remove and view groups in the **Group** screen.

To create a new group, touch the  icon and then type the group's name and person's name, finally touch **DONE** to confirm.

3.5.3 Adding a contact

Touch the  icon to create a new contact.

You are required to enter the contact's name and other contact information. By scrolling up and down the screen, you can move from one field to another easily.

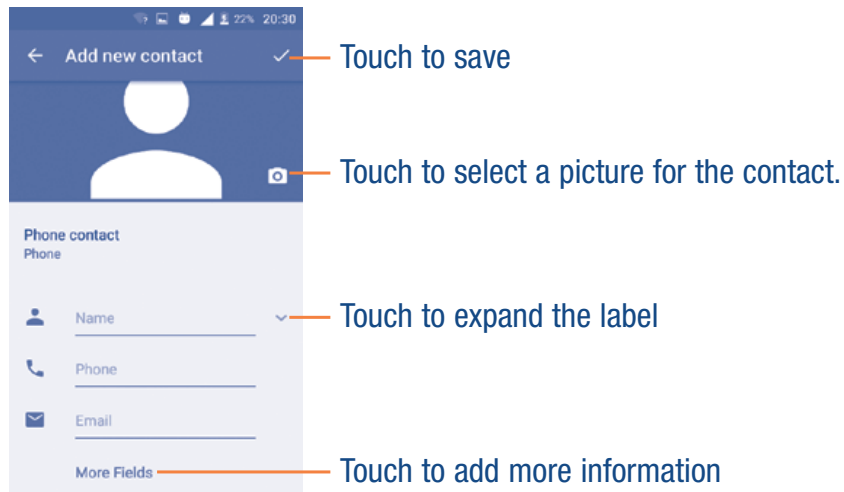



If you want to add more information, touch **More Fields** to add a new category.

When finished, touch  to save.



To exit without saving, you can touch the Home key directly.

Add to/remove from Favorites ⁽¹⁾

To add a contact to favorites, you can touch a contact to view details then touch  to add the contact to favorites (the star will turn white in color).

To remove a contact from favorites, touch the star  on contact details screen.

3.5.4 Editing your contacts

To edit contact information, touch the **Menu** key in the contact details screen, then touch . When finished, touch .

Change a contact's default phone number

The default phone number (the number which has priority when making a call or sending a message) will always be displayed under the contact name.

⁽¹⁾ Only phone and account contacts can be added to Favorites.

To change the default phone number, touch and hold the number you want to set as the default number from the contact's details screen, then select **Set default**.

This choice is only available when the contact has more than one number.

Set ringtone for a contact ⁽²⁾

On the contact's detail screen, touch Edit contact to display options menu, touch More Field to set Ringtones.

Delete a contact

To delete a contact, touch the **Menu** key and **Delete** from the contact list screen. Tick the contact you want to remove and touch **OK** to confirm.




The contact you have deleted will also be removed from other applications on the phone or web the next time you synchronize your phone.


3.5.5 Communicating with your contacts

From the contact list, you can communicate with your contacts by making a call or exchanging messages.

 
To launch a call to a contact, touch the contact to enter the detail screen, then touch the number.

To send a message to a contact, touch the contact to enter the detail screen, then touch the  icon on the right side of the number.

Use Quick contact for Android

Touch a contact's picture to open Quick Contact for Android, then you can touch the number to make a phone call or the  icon to send a message.

⁽²⁾ You can only set a ringtone for established contacts.

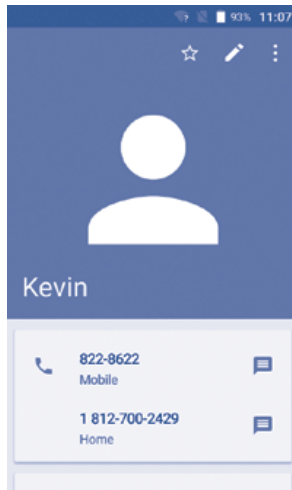

The icons available on Quick Contact panel depend on the information you have for the contact and the applications and accounts on your phone.

3.6 Contacts importing, exporting and sharing

From the Contacts screen, touch the **Menu** key to open the options menu, then touch **Import/Export**.

To import/export a contact to your SIM card, select the contact you want to import/export, then touch **OK** to confirm or **CANCEL** to quit.

You can share a single contact or contacts with others by sending the contact's vCard to them via Bluetooth, Gmail, etc.

Touch the contact you want to share, touch the **Menu** key and **Share** from the contact details screen, then select the application to perform this action.

3.6.1 Displaying contacts

You can configure which group of contacts, for each account, you want to display in the Contacts list. Touch the **Menu** key and touch **Contacts to display** from the contact list screen, then you can choose contacts to display.


Touch the **Menu** key and **Settings**, you can sort list by the First name or Last name as well as view contact names as First/Last name first.

3.6.2 Joining/Separating contacts ⁽¹⁾

To avoid duplication, you can add any new contact information to existing contacts in a single action.

Touch the contact which you want to add information to, touch the **Menu** key and touch , then touch the **Menu** key again and touch **Join**.


At this time, you are required to select the contact whose information you want to join with the first contact. The information from the second contact is added to the first one, and the second contact will no longer be displayed in the Contacts list.

To separate contact information, touch the contact whose information you want to separate, touch the **Menu** key and touch , then touch the **Menu** key again and touch **Separate**, touch **OK** to confirm.

⁽¹⁾ Only applicable for phone contacts.

3.6.3 Accounts

Contacts, data or other information can be synchronized from multiple accounts, depending on the applications installed on your phone.

To add an account, touch  from the Home screen and enter **Settings**, then touch **Accounts\Add account**.

You are required to select the kind of account you are adding, like Google, Corporate, etc.

As with other account set-ups, you need to enter detailed information, like username, password, etc.

You can remove an account to delete it and all associated information from the phone. Open the **Settings** screen, select the account you want to delete, touch **Remove account**, then confirm.

Turn on/off the sync & Auto-sync

Touch an account to enter the account screen, mark/unmark the checkbox(s) to turn on/off the account's auto-sync. When activated, all changes to information on the phone or online will be automatically synchronized to each other.

Sync manually

You can also synchronize an account manually on **Accounts** screen, touch an account in the list, then touch the **Menu** key and select **Sync now**.

4

Messaging.....



You can create, edit and receive SMS and MMS with this phone.

 
To access this feature, touch the Application tab from the Home screen, then select **Messaging**.



To consult messages stored in your SIM card, touch the **Menu** key from the Messaging screen, then touch **Settings\Text message (SMS)\Multimedia message (MMS)**.

4.1 Write message

On the message list screen, touch the new message icon  to write text/multimedia messages.

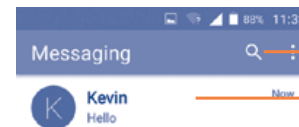



Touch to search in all messages.

- Touch to view the whole message thread.
- Touch & hold to activate delete mode.



Touch to create a new message

Sending a text message

Enter the mobile phone number of the recipient in the **Type name or number** bar or touch  to add recipients; then touch the **Type text message** bar to type the text of the message. When finished, touch  to send the text message.





An SMS of more than 160 characters will be charged as several SMS. Specific letters (accent) will also increase the size of the SMS, this may cause multiple SMS to be sent to your recipient.

Sending a multimedia message

MMS enables you to send video clips, images, photos, animations, slides and sounds to other compatible phones and e-mail addresses.

 
An SMS will be converted to MMS automatically when media files (image, video, audio, slides, etc.) are attached or Subject or email addresses added.

To send a multimedia message, enter the recipient's phone number in the **Type name or number** bar, and touch **Type text message** bar to type the text of the message. Then touch the  icon to attach picture, video, audio and so on.


When finished, touch  to send the multimedia message.

Attach options:


- **Capture picture** Access Camera to capture a new picture for attaching.
- **Capture video** Access Camcorder to record a new video for attaching.
- **Record audio** Enter voice message recorder to record a voice message for attaching.
- **Contact** Enter Contacts to select a contact as attachment.
- **Pictures** Access Gallery application or File manager to select a picture as attachment.
- **Videos** Access Gallery application or File manager to select a video as attachment.
- **Audio** Access to select an audio file as attachment.
- **Slideshow** Enter Edit slide show screen, touch **Add slide** to create a new slide, and touch currently existing slide to edit it (see following picture). Touch the **Menu** key to get more actions, like setting the slide duration, adding music, etc.

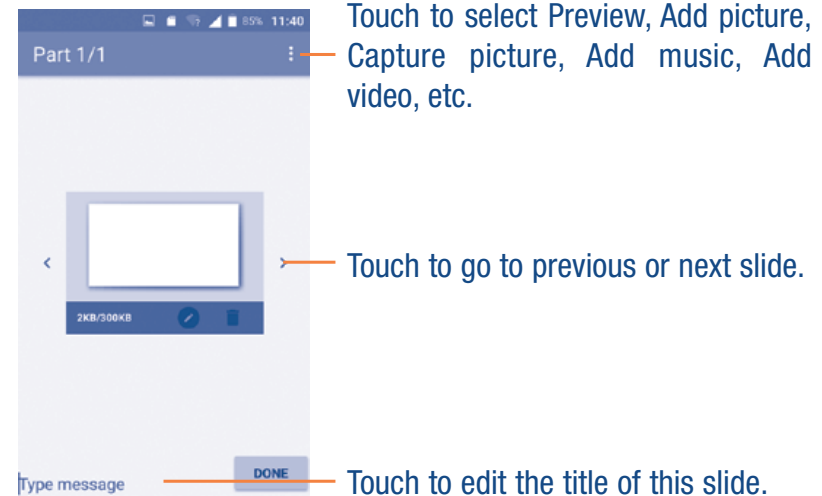

4.1.1 Manage messages

When receiving a message, an icon  will appear on the status bar as notification. Drag down the status bar to open the Notification panel, touch the new message to open and read it. You can also access the Messaging application and touch the message to open.

Messages are displayed in conversational order.

To reply to a message, touch the current message to enter message composing screen, enter the text, then touch .

Touch and hold an SMS in message details screen. The following message options are available for selection:

- **Copy** This option displays when the message is an SMS. Copy the current message content. You can paste it to the enter bar of the new message you are going to compose.
- **Forward** Touch to forward the message to another recipient.
- **Delete message** Delete the current message.
- **Save message to SIM card** Touch to select the message to SIM card.
- **Lock** Touch to lock/unlock the message so it can't/can be deleted if you reach maximum number of stored messages.
- **Select text** Touch to select the message text to copy, cut, add to dictionary, etc.
- **View details** Touch to view details of the message.

4.1.2 Adjust message settings

You can adjust a set of message settings. From the Messaging application screen, touch the **Menu** key and then **Settings**.

SMS enabled

- **Airplane mode** Touch to activate or deactivate the Airplane mode.
- **SMS app** Touch to select your default SMS app, **Messaging** or **Hangouts**.
- **VPN** Touch to set your Virtual private networks.
- **Mobile networks** Touch to activate your **Data connection** and **Data roaming**, select **Access Point Names**, and **Network operators**.

Text messages (SMS)

- **Manage SIM card messages** Touch to manage text messages stored on your SIM card.
- **Edit quick text** Touch to add or edit message templates.
- **SMS service center** Touch to edit your SMS service center number.
- **SMS storage location** Touch to select where your messages to be stored, **Phone** or **SIM card**.
- **Alphabet management** Touch to select **Auto format\Super compact\Precise mode**
- **SMS signature** Touch to edit SMS signature
- **Edit SMS signature** Touch to edit your SMS signature.

Multimedia messages (MMS)

- **Group messaging** Mark the checkbox to send a single message by MMS when there are multiple recipients.
- **Auto-retrieve** Automatically retrieve messages
- **Roaming auto-retrieve** Automatically retrieve messages while roaming
- **Creation mode** Select to change creation mode.
- **Maximum message size** Select to input the maximum message size.

Notifications

- **Notifications** Select to display message notifications in status bar.
- **Mute** Select to mute phone when receiving a new message notification.
- **Sound** Touch to select a ringtone as a new message notification tone.
- **Popup notification** Mark the checkbox to show popup for push notifications.

General

Display and preference

- **Message font size** Touch to select your preferred font size.

Storage settings

- **Delete old messages** Select to delete old messages when the maximum number of stored messages is reached.
- **Text message limit** Displays the number of text messages to be saved per conversation.
- **Multimedia message limit** Displays the number of multimedia messages to be saved per conversation.

Service message setting

- **Enable WAP push** Touch to enable receipt of push message from network.

EMERGENCY ALERTS

- **Wireless emergency alerts** Touch to enter emergency alerts settings, include whether to show alert Tone.

5 Gmail/Email.....

The first time you set up your phone, you can select to use an existing Gmail or to create a new Email account.





5.1 Gmail ⁽¹⁾.....

As Google's web-based email service, Gmail is configured when you first set up your phone. Gmail on your phone can be automatically synchronized with your Gmail account on the web. Unlike other kinds of email account, each message and its replies in Gmail are grouped in your inbox as a single conversation; all emails are organized by labels instead of folders.

To access Gmail

From the Home screen, touch  to enter the applications list, then touch **Gmail**.

To create and send emails

- Touch the  icon from Inbox screen.
- Enter recipient(s)'s email address in **To** field, and if necessary, touch  and then add a copy or a blind copy to the message in **Cc** or **Bcc** field.
- Enter the subject and the content of the message.
- Touch the  icon and select **Attach file** to add an attachment.
- Finally, touch the  icon to send.
- If you do not want to send the mail out right away, you can touch the **Menu** key and **Save draft** or touch **Back** key to save a copy. To view the draft, touch your account name to display all labels, then select **Drafts**.

⁽¹⁾ It may vary depending on the app version of Gmail.

- If you do not want to send or save the mail, you can touch the **Menu** key and then touch **Discard**.



To add a signature to emails, touch the  icon from the inbox screen and then touch **Settings**, choose an account, then touch **Signature**.

To receive and read your emails




When a new email arrives, you will be notified by a ringtone or vibration, and an icon  will appear on Status bar.

Touch and drag down the Status bar to display the Notification panel, touch the new email to view it. Or you can also access the Gmail Inbox label and touch the new mail to read it.

You can search for an email by sender, subject, label, etc.

- Touch the  icon from Inbox screen.
- Enter the keyword you want to search for in the searching box and touch .

To reply or forward emails

- **Reply** When viewing an email, touch  to reply the sender of this mail.
- **Reply all** Touch  and select "**Reply all**" to send message to all people in a mail loop.
- **Forward** Touch  and select "**Forward**" to forward the received mail to other people.
- **Add star** Touch to add star.
- **Print** Touch to save the email as PDF and print it.




Managing Gmails by Labels

To conveniently manage conversations and messages, you can organize them using a Label.

To label a conversation when reading a conversation's messages, touch the  icon and then choose **Change labels**.

To view conversations by labels when viewing your inbox or another conversation list, touch your account name, then touch a label to view a list of conversations with that label.

Touch and hold an email to activate batch mode, and produce the following options:

-  Touch to archive the email message. To display the archived messages, you can touch in Inbox screen then touch All mail.
-  Touch to delete the email message.
-  Touch to mark an email message as read or unread.

Touch  to show the additional options:

- **Move to** Touch to move the mail to other labels.
- **Change labels** Touch to change the label of the email message or conversation.
- **Mark important** To Mark the email as important or not important.
- **Mute** Touch to mute the email.
- **Print** To print the email as PDF.
- **Report spam** To report the email message/conversation as spam.

Gmail settings

To manage Gmail settings, touch the  icon from the inbox screen and then touch **Settings**.

General settings

- **Gmail default action** Touch to set the actions when touch archive and delete.
- **Conversation view** Touch to group emails in the same conversation together for IMAP, POP3, and Exchange accounts.
- **Swipe actions** Mark the checkbox to enable Swipe to archive in conversation list.
- **Sender image** Mark the checkbox to show sender image beside name in conversation list.
- **Reply all** Touch to mark the checkbox to make the default responding to messages.
- **Auto-fit messages** Touch to mark the checkbox to shrink messages to fit the screen and allow zooming.
- **Auto-advance** Touch to select which screen to show after you delete or archive a conversation.
- **Confirm before deleting** Mark the checkbox and you need to confirm before deleting emails.
- **Confirm before archiving** Mark the checkbox and you need to confirm before archiving emails.
- **Confirm before sending** Mark the checkbox and you need to confirm before sending emails.

Touch an account, and follow settings will show:

- **Inbox type** To set this inbox as the default or priority Inbox.
- **Inbox categories** Touch to category the emails to **Primary\Social\Promotions\Updates\Forums**
- **Notifications** Select to activate notification when a new email arrives.
- **Inbox sound & vibrate** Touch to set Ringtone, Vibrate and Notify once.
- **Signature** To add a signature text to the end of each mail you send.
- **Vacation responder** Touch to set the notification when on vacation.
- **Sync Gmail** Mark the checkbox to turn on/off Gmail sync.
- **Days of mail to sync** Touch to set the duration of days for mail sync.
- **Manage labels** Touch to open the Label screen, where you can manage synchronization and notifications.
- **Download attachments** Mark the checkbox to auto download attachments to recent messages via Wi-Fi.
- **Images** Touch to set always show image or ask before showing.

5.2 Email.....



Besides your Gmail account, you can also set up external POP3, IMAP or Exchange email accounts in your phone.

To access this feature, touch the Application tab from the Home screen, then select **Email**.

An email wizard will guide you through the steps to set up an email account.

- Enter the email address and password of the account you want to set up.
- Touch **Next**. If the account you entered is not provided by your service provider in the phone, you will be prompted to go to the email account settings screen to enter settings manually. Alternatively, you can touch **Manual setup** to directly enter the incoming and outgoing settings for the email account you are setting up.
- Finish Account settings of Email checking frequency, notification, synchronizing, etc.
- Enter the account name and display name in outgoing emails.

To add another email account, you can touch the Menu key and Settings. Touch ADD ACCOUNT on the right of the title to create it.

To create and send emails


- Touch the icon and then Compose from the Inbox screen.
- Enter recipient(s) email address(es) in the **To** field.
- If necessary, touch the **Menu** key and touch **Add Cc/Bcc** to add a copy or a blind carbon copy to the message.
- Enter the subject and the content of the message.
- Touch and **Attach file** to add an attachment.
- Finally, touch to send.
- If you do not want to send the mail right away, you can touch the **Menu** key and **Save draft** or touch the **Back** key to save a copy.

5.3 Hangouts ⁽¹⁾





Google's instant messaging service, Hangouts, lets you communicate with your friends whenever they are connected to this service.

To access this feature and sign in, touch the Application tab from the Home screen, then touch **Hangouts**. All friends added by using Hangouts from the web or phone will be displayed in your friends list.


To sign out, touch  from Friends list screen to display options, then touch **Settings\Sign out**.

5.3.1 Chatting with your friends

To start a chat, touch the name of a friend in your Friends list, then type your message and finally touch .


You can invite other friends to join in a group chat by touching  and select **New group** on group chatting screen and then selecting the friend you want to add.




5.3.2 To add a new friend

From Friends list, touch the icon  to add a new friend. Type name, email or number of the friend you want to add, and then touch **New conversation** or **New video call** to start a chat.

A notification with this invitation will be received by the friend. By touching the invitation, the friend can select **Decline** or **Reply** in response.


5.3.3 To manage your friends



Besides adding new friends to your friends list, touch  and selecting **People & options** from your Chatting screen, the following actions will be available:

-  Touch to add the person into a new group Hangout.
-  Touch to open **Help & feedback**.
- **Notifications** Mark the checkbox to be notified of new messages.
- **Block** Touch to block the friend from exchanging messages. If blocked, you will no longer receive direct messages and notifications, but this person will still be present in any group Hangouts you have in common. All blocked friends can be viewed by touching  and **Settings**, then touch **Blocked People**. To unblock a friend, touch **Unblock** besides the name of this friend.

⁽¹⁾ It may vary depending on the app version.

5.3.4 Settings

A series of settings are available for your selection by touching  and **Settings** from Friends list screen.

- **Status** Touch to share your plans, ideas , or your mood. Your status will be visible to everyone you use Hangouts with.
- **Snooze notifications** Touch and select how long you'd like to go without receiving Hangouts notifications. This setting will temporarily disable notifications about new messages and video calls.
- **Contacts** Touch to view or add contacts.
- **Invites** Touch to invite your friend to join in the chat.
- **Archived** Touch to display all archived Hangouts that have been prevented from displaying in the Hangouts list. To unarchive a Hangout, touch and hold it till  appear, touch  and select **Unarchive**.
- **Settings** Touch to open further personal settings for every Hangout you have.
- **Help & feedback** Touch to view Hangouts help through your selected app and send your feedback for Hangouts.

6 Calendar & Alarm clock & Calculator.....

6.1 Calendar.....




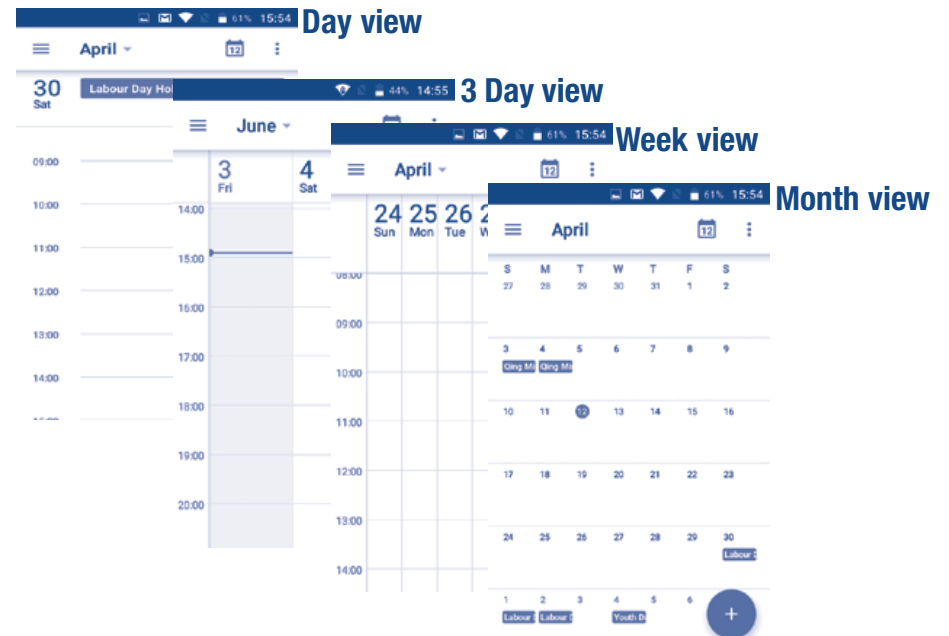 
Use Calendar to keep track of important meetings, appointments, etc.

To access this function, touch  from the Home screen, then touch **Calendar**.

6.1.1 Multimode view

You can display the Calendar in daily, weekly, monthly, or agenda view.


To change your Calendar view, touch the date title to open a drop-down menu of **Day, 3 Day, Week and Month** for your options. Touch the icon  to return to Today's view.



In **Schedule, Day** or **Week** view, touch an event to view its details. Touch a day in **Month** view to open that day's events.

6.1.2 To create new events

You can add new events from any Calendar view.

- Touch  and then **Event** to access new event edit screen.
- Fill in all required information for this new event. If it is a whole-day event, you can select **All day**.
- When finished, touch **SAVE** from the top of the screen.

To quickly create an event from **Day, Week** view screen, touch an empty spot or an event to open the event details screen of the time you have previously selected. Or you can also touch an empty spot till it turns blue, then tap again to enter **New event** editing screen.

Important options by touching the **Menu** key from Calendar main screen:

- **Schedule** To set or review your schedule.
- **Search** To search in the calendar.
- **Events** To set new event.
- **Reminders** To set reminder.
- **Birthdays\ Holidays** To show or hide birthday or holiday.
- **Settings** To set a series of Calendar settings.
- **Help & feedback** To search for help or send feedback.

6.1.3 Event reminder

If a reminder is set for an event, the upcoming event icon  will appear on Status bar as a notification when the reminder time arrives.

Touch and drag down the status bar to open the notification panel, touch event name to view Calendar notification list.

Touch **Snooze** in the notification panel to remove the reminder.

6.2 Clock



Your mobile phone has a built-in clock.

To access this function, touch  from the Home screen, then touch **Clock**.

6.2.1 World clock

To access this function, touch  on the Time screen.

According to the delivery location, the system will set a default clock.

- Touch a city name to choose a time zone from the list.
- Touch the selected city name again to delete the time zone.

6.2.2 Alarm

To set an alarm

From the Time screen, touch  to enter the **Alarm** screen, touch  to set time, When finished, touch OK to confirm. Following options will show:

- **Label** Touch to set a name for the alarm.
- **Repeat** Touch to select days you want alarm to work.
- **Vibrate** Select to activate vibration.
- **Ringtone** Touch to select a ringtone for the alarm.
- **Time** Scroll up or down to select time for your alarm.

Touch a currently existing alarm to enter alarm editing screen.

Touch  to delete the selected alarm.

To adjust alarm settings

Touch the Menu key\Settings from the Alarm screen, the following options can now be adjusted:

- **Silence after** Touch to select silence time after an alarm.
- **Snooze length** Touch to set temporary turn off time of an alarm.
- **Alarm volume** Touch to set the volume of an alarm.
- **Volume buttons** Touch to set side **Volume** key behaviors when alarm sounds: **Snooze\Dismiss\Do nothing**.
- **Start week on** Touch to set an alarm start on Saturday\Sunday\Monday.
- **Turn over to activate** Touch to turn over behavior Snooze or Dismiss.

6.2.3 Timer

From the Time screen, touch  to enter the **Timer** screen.

Touch  to activate the timer.



Touch , the total time and the lap time will not run until touch **Resume**.

Touch  to delete the record.

6.2.4 Countdown

From the Time screen, touch  to enter the **Countdown** screen.

Touch to enter numbers to set countdown time.

 
Touch  to activate Countdown. Or touch  to dismiss the ongoing countdown.

6.3 Calculator.....



With Calculator, you can solve many mathematical problems.

To access this function, touch  from the Home screen, then touch **Calculator**.

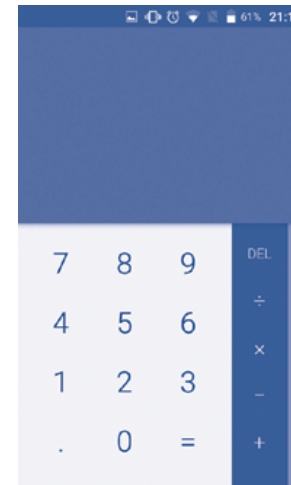

Enter a number and the arithmetic operation to be performed, enter the second number, then touch “=” to display the result. Touch DEL to delete digits one by one, touch and hold DEL to delete all at one time.

7 Getting connected.....

To connect to the internet with this phone, you can use GPRS/EDGE/UMTS networks or Wi-Fi, whichever is more convenient.

7.1 Connecting to the Internet



7.1.1 GPRS/EDGE/UMTS

The first time you turn on your phone with your SIM card inserted, it will automatically configure your network service: GPRS/EDGE/UMTS.

To check the network connection you are using, touch the **Menu** key on the Home screen, then touch **Settings\More\Mobile networks\Access Point Names** or **Network operators**.

To create a new access point

A new GPRS/EDGE/UMTS network connection can be added to your phone with the following steps:

- Touch the **Menu** key from the Home screen.
- Touch **Settings\More\Mobile networks\Access point names**.
- Touch the  icon and then **New APN** to access editing screen.
- Enter required APN information.
- When finished, touch the  icon and then **Save**.

To activate/deactivate Data roaming

When roaming, you can connect/disconnect to a data service.

- Touch the **Menu** key from the Home screen.

- Touch **Settings\More\Mobile networks**.


- Mark/Unmark the checkbox to activate or deactivate data roaming mode.

When data roaming is disabled, you can still perform data exchange with a Wi-Fi connection (refer to “7.1.2 Wi-Fi”).

7.1.2 Wi-Fi

Using Wi-Fi, you can connect to the Internet when your phone is within the the range of a wireless network. Wi-Fi can be used on your phone even without a SIM card inserted.

To turn Wi-Fi on and connect to a wireless network

- Touch the **Menu** key from the Home screen, then touch **Settings** and select **Wi-Fi**.
- Touch the switch  beside Wi-Fi to turn Wi-Fi on or off ⁽¹⁾.
- Touch **Wi-Fi**, the detailed information of detected Wi-Fi networks is displayed in the Wi-Fi networks section.
- Touch a Wi-Fi network to connect. If the network you selected is secured, you are required to enter a password or other credentials (you may contact the network operator for details). When finished, touch **CONNECT**.

To activate notification when a new network is detected

When Wi-Fi is on and the network notification is activated, the Wi-Fi icon will appear on the status bar whenever the phone detects an available wireless network within range. The following steps activate the notification function when Wi-Fi is on:

- Touch the **Menu** key and **Settings** from the Home screen.
- Touch **Wi-Fi**, then touch the **Menu** key and then **Advanced** from Wi-Fi screen.

⁽¹⁾ Wi-Fi is turned on by default when the first time you power on the phone.

- Mark/Unmark the **Network notification** checkbox to activate/deactivate this function.

To add a Wi-Fi network

When Wi-Fi is on, you may add new Wi-Fi networks according to your preference.

- Touch the **Menu** key and **Settings** from the Home screen.
- Touch **Wi-Fi**, and then touch **the Menu key\Add network**.
- Enter the name of the network and any required network information.
- Touch **Save**.

When successfully connected, your phone will be connected automatically the next time you are within the range of this network.

To forget a Wi-Fi network

The following steps prevent automatic connections to networks which you no longer wish to use.

- Turn on Wi-Fi, if it's not already on.
- In the Wi-Fi screen, touch the name of the saved network.
- Touch **FORGET** in the dialog that opens.

7.2 Browser

 


Using the Browser, you can enjoy surfing the Web.

To access this function, touch  from the Home screen, then touch **Browser**.

To go to a web page

On the Browser screen, touch the URL bar at the top, enter the address of the web page, then confirm.

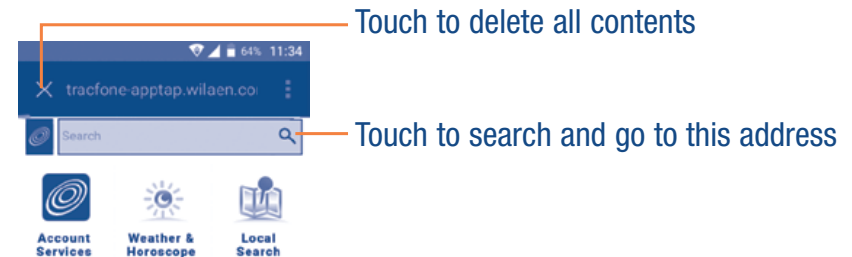

The URL bar will hide after a few seconds. To show the URL bar, you can touch and slide down the screen.

To set home page

- Touch the **Menu** key from the Browser screen to display option menu, touch **Settings\General\Set home page**.
- Choose a page or most visited websites as your home page.
- If you choose **Other**, enter the URL of the website you want to set as your home page, touch **OK** to confirm.

7.2.1 Viewing web pages


When opening a website, you can navigate on web pages by sliding your finger on the screen in any direction to locate the information you want to view.

To zoom in/out of a web page

Pinch/Spread your finger on the screen to zoom out/in of the web page.



To quickly zoom into a section of a web page, tap on the section you want to view. To return to normal zoom level, tap again.

To find text on a web page

- Touch the **Menu** key from web page screen, then touch **Find on page**.
- Enter the text or phrase you want to find.
- The first word with matching characters will be highlighted on the screen, and subsequent matches will be boxed.
- Touch the up or down arrow to switch to the previous or next matching items.
- When finished, you can touch  or the **Back** key to close the search bar.



Further operations for the text on a web page

You can copy, share or search the text from a web page:

- Touch and hold the text to highlight the text.
- Move two tabs to select the text.
- Touch **SELECT ALL** to select all words in this web screen.
- Touch the  icon to share or WEB SEARCH to search on the page or the web.
- When finished, touch  or the **Back** key to deactivate the mode.

To open new window/switch between windows

Multiple windows can be opened at the same time for your convenience.


- Touch  to open all windows' thumbnails.
- Touch  to open a new window.

- To close a window, touch  on the window you want to close or slide it sideways.

Other options:

- **Refresh** To refresh the current page.
- **Stop** To stop opening the current page.
- **Home page** To get back to the home page you set.
- **Save to bookmarks** To add the current website page as bookmark.
- **Close** To close all tabs and exit.
- **Share page** To share the current page with your friends via various ways, like Message, Email, Bluetooth, etc.
- **Find on page** To input contents you want to find on the current page.
- **Request desktop site** To enable/disable computer version websites.
- **Bookmarks/History** To see the bookmarks and browsing history.
- **Settings** To access a series of Browser settings.
- **Version** Touch to view Browser version.



Touch the  icon on the left of the URL, you can view more information about the current page.

7.2.2 Manage links, history, downloads

To manage a link, phone number or address displayed on a web page

- **Link** Touch the link to open the web page.
Touch and hold the link to open options for further operation, like **Open**, **Open in new window**, **Save link**, **Copy link URL**, **Share link as bookmark**, etc.
- **Phone number** Touch to dial, add to contact or copy the phone number.
- **Address** Touch to open Google Maps to locate the address.


To view Browser history

- Touch the **Menu** key from the Browser screen.
- Touch **Bookmarks/History**.
- Touch **History** tab to view browser history.
- Touch **Most visited** to view your most frequently visited pages.

To download a web application/view your downloads

Before downloading a web application, you need to enable your phone to install web applications (Touch the **Menu** key from the Home screen, touch **Settings\Security**, mark the checkbox of **Unknown sources**, finally touch **OK** to confirm).


To download an item, touch the item or the link you want to download.

To cancel a download, touch the downloaded item from the Notification panel, select the item to be canceled, and touch  to confirm.


To view items you have downloaded, touch the Application tab, then touch **DOWNLOADED**.

7.2.3 Manage bookmarks


To bookmark a web page

- Open the web page you want to bookmark.
- Touch the **Menu** key and **Save to bookmarks**, or from the **History** screen, touch the star icon  beside the URL.
- Enter the name and the location if needed and touch **OK** to confirm.

To open a bookmark

- Touch the Menu key and then **Bookmarks/History**, or touch the  icon to enter the **Bookmarks** screen.
- Touch the bookmark you want to open.
- You can also touch and hold to display the options screen, then touch **Open** or **Open in new window**.

To edit a bookmark

- Touch the Menu key and then **Bookmarks/History**, or touch the  icon to enter the **Bookmarks** screen.
- Touch and hold the bookmark you want to edit.
- Touch **Edit bookmark**, and enter your changes.
- When finished, touch **OK** to confirm.

Touch and hold a bookmark in the bookmark list to view these additional options:

- **Add shortcut to Home** To add a bookmark shortcut to the Home screen.
- **Share link** To share the bookmark.
- **Copy link URL** To copy the bookmark link.
- **Delete bookmark** To delete a bookmark.
- **Set as home page** To set this page as the home page.

7.2.4 Settings

A series of settings are available for your adjustment. To access Browser settings, touch the **Menu** key from the Browser screen, and then touch **Settings**.

General

- **Set home page** Touch to set home page.
- **Auto-fill** Fill out web forms with a single touch.

Privacy & security

- **Clear cache** Touch to clear locally cached content and databases.
- **Clear history** Touch to clear the browser history.
- **Show security warnings** Mark to show warning if there is a problem with a site's security.
- **Accept cookies** Mark to allow sites to save and read cookie data.
- **Clear all cookie data** Touch to clear all browser cookies.
- **Remember form data** Mark the checkbox to remember data in forms for later use.
- **Clear form data** Touch to clear all the saved form data.
- **Enable location** Mark to allow sites to request access to your location.
- **Clear location access** Touch to clear location access for all websites.

Accessibility

- **Preview** Provide a preview window for text size adjustment.
- **Text scaling** Slide to change the size of the text display.
- **Zoom on double-tap** Slide to change the magnification level while double-tap the page.
- **Minimum font size** Slide to change the minimum font size.

Advanced

- **Set search engine** Touch to select a search engine.
- **Open in background** Mark to open new windows behind the current one.
- **Enable JavaScript** Mark to enable JavaScript.
- **Allow multi-tabs per app** Mark to allow one app use multiple tabs.
- **Website settings** Touch to view advanced settings for individual websites.
- **Open pages in overview** Mark the checkbox to show overview of newly-opened pages.
- **Auto-fit pages** Mark to format web pages to fit the screen.
- **Block pop-up** Mark the checkbox to prevent pop-up windows.
- **Text encoding** Touch to select the character-encoding standard.
- **Reset to default** Touch to clear all browser data and to reset all settings to default.

Bandwidth management

- **Search result preloading** Touch to enable/disable browser to preload search results in the background.
- **Web page preloading** Touch to enable/disable browser to preload web page in the background.
- **Load images** Mark to display images on web pages.

Labs

- **Quick controls** Mark to enable quick controls.
- **Fullscreen** Mark to use the full screen mode.

7.3 Connecting to Bluetooth devices ⁽¹⁾

Bluetooth is a short-range wireless communication technology that you can use to exchange data, or connect to other Bluetooth devices for various uses.

To access this function, touch the **Menu** key from the Home screen, then touch **Settings\Bluetooth**, your advice and other available ones will show on the screen.

To turn on Bluetooth

- Touch the **Menu** key from the Home screen, then touch **Settings**.
- Touch  to activate/deactivate this function.

To make your phone more recognizable, you can change your phone name which is visible to others.

- Touch the **Menu** key from the Home screen,
- Touch **Settings\Bluetooth**.
- Touch the **Menu** key and **Rename this device**.
- Enter a name, and touch **Rename** to confirm.

To Show received files

- Touch the **Menu** key from the Home screen.
- Touch **Settings\Bluetooth**.
- Touch your device to make it visible or invisible.
- Touch the **Menu** key and **Show received files** to view your transfer history.

⁽¹⁾ You are recommended to use ALCATEL Bluetooth headsets, which have been tested and proved compatible with phone. You can go to www.alcatel-mobile.com for more information about ALCATEL Bluetooth headsets.

To pair/connect your phone with a Bluetooth device

To exchange data with another device, you need to turn Bluetooth on and pair your phone with the Bluetooth device with which you want to exchange data.

- Touch the **Menu** key from the Home screen.
- Touch **Settings\Bluetooth**.
- Touch **Touch On to turn on Bluetooth**.
- Touch a Bluetooth device you want to be paired with in the list.
- A dialog will pop up, touch **Pair** to confirm.
- If the pairing is successful, your phone connects to the device.

To disconnect/unpair from a Bluetooth device

- Touch the device you want to unpair.
- Touch **Unpair** to confirm.

7.4 Connecting to a computer ⁽¹⁾

With the USB cable, you can transfer media files and other files between your micro SD card/internal storage and the computer.

To connect/disconnect your phone to the computer:

To connect:

- Use the USB cable that came with your phone to connect the phone to a USB port on your computer. You will receive a notification that the USB is connected.
- Open the Notification panel and touch **for USB options**.
- Touch **Mount** in the dialog that opens if you want to transfer files.

⁽¹⁾ You can change your default connection mode via **Settings\Storage & USB**. Some operations which are available under mass storage are not usable under MTP and PTP.

To disconnect (for mass storage):

- Open the Notification panel and touch **USB connected**.
- Touch **Turn off** in the dialog that opens to cancel USB mass storage.




Before using MTP, make sure that the driver (Windows Media Player 11 or higher version) has been installed.

To locate the data you have transferred or downloaded in the internal storage, touch **File Manager**. All data you have downloaded is stored in **File Manager**, where you can view media files (videos, photos, music and others), rename files, install applications into your phone, etc.



To safely remove the micro SD card from your phone

The micro SD card can be removed from your phone any time the phone is powered off. To remove the micro SD card while the phone is on, you must unmount the storage card from the phone first, to prevent corrupting or damaging the storage card.

- Touch the **Menu** key from the Home screen,
- Touch **Settings\Storage & USB**.
- Touch **SD card** in Portable storage.
- Touch  to enter **Settings\Eject**.

You can now safely remove the micro SD card from the phone.

To format a micro SD card

- Touch the **Menu** key from the Home screen,
- Touch **Settings\Storage & USB**.
- Touch **SD card** in Portable storage.
- Touch  to enter **Settings\Format**. a popup message appears to warn you that formatting the micro SD card will erase its contents.
- Touch  to confirm.

7.5 Connecting to virtual private networks

Virtual private networks (VPNs) allow you to connect to the resources inside a secured local network from outside that network. VPNs are commonly deployed by corporations, schools, and other institutions so that their users can access local network resources when not inside that network, or when connected to a wireless network.

To add a VPN

- Touch the **Menu** key from the Home screen.
- Touch **Settings\More\VPN** and then touch **+**.
- In the screen that opens, follow the instructions from your network administrator to configure each component of the VPN settings.
- Touch **Save**.

The VPN is added to the list on the VPN settings screen.



Before adding a VPN, you should set a PIN code or password for your phone.

To connect/disconnect to a VPN

To connect to a VPN:

- Touch the **Menu** key from the Home screen.
- Touch **Settings\More\VPN**.
- VPNs you have added are listed; touch the VPN you want to connect with.
- In the dialog that opens, enter any requested credentials and touch **Connect**.

To disconnect:

- Open the Notification panel and touch the resulting notification for the VPN disconnection.

To edit/delete a VPN

To edit a VPN:

- Touch the **Menu** key from the Home screen.
- Touch **Settings\More\VPN**.
- VPNs you have added are listed; touch & hold the VPN you want to edit.
- Touch **Edit profile**.
- After finished, touch **Save**.

To delete:

- Touch and hold the VPN you want to delete, in the dialog that opens, touch **Delete profile**.

8 Google Play Store ⁽¹⁾....



Google Play Store is an online application store, where you can download and install applications and games to your Android Powered Phone.

 
To open Google Play Store:

- Touch the Application tab from the Home screen, then touch **Play Store**.
- For the first time you access Google Play Store, a screen with terms of service pops up for your attention.

Touch  and then select Help to enter Google Play Store help page for more information on this function.

8.1 Locate the item you want to download and install

Google Play Store home page provides several ways to find applications. It showcases applications and games in categorized listings.

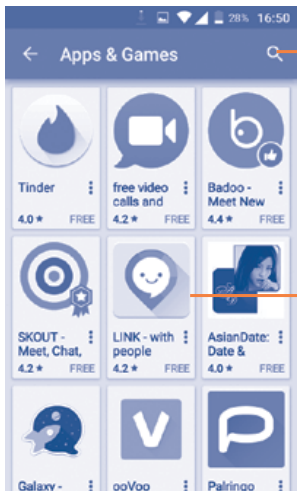


Touch to search in **Play Store**.

Slide up and down to see all categories.

 ⁽¹⁾ Depending on your country and provider.

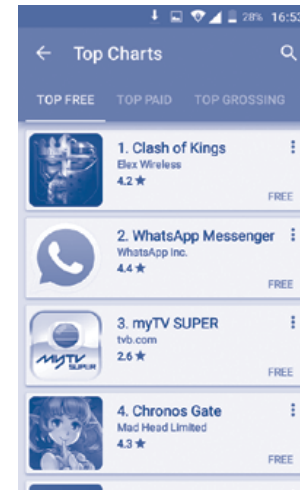

Touch a category on Google Play Store screen to browse its contents. Within each category you can select to view items sorted by Top free, Top grossing, etc.



Touch  to return to the previous screen.

8.2 Download and install


To download & install:

- Navigate to the item you want to download, and select to enter the details screen from which you can read its description, overall rating or comments, view developer's information, etc.
- Touch **INSTALL** to preview the functions and data the application can access on your phone if you install it.
- Touch **ACCEPT** to download.
- The progress of the download will show on the details screen, touch  to stop downloading the item. You can also access this screen through Notification panel.
- After download and installation have finished, you will see a notification icon  on the status bar.



Be especially cautious with applications that have access to many functions or to a significant amount of your data. Once you accept, you are responsible for results of using this item on your phone.

To open the application you have downloaded:

- On Google Play Store screen, touch  and **My Apps**.
- Touch the installed application in the list, then touch **OPEN**.

To buy an application ⁽¹⁾


On Google Play Store, some applications are labeled as free, while some of them are to be paid for before downloading and installing.

- Touch the application you want to buy.
- Touch the price on the upper-right of the screen to preview the functions and data the application can access on your phone if you install it.
- Touch **Continue** to confirm.
- When making your first purchase, you are required to input your credit card information and to log in to Google payment and billing service.
- If your account has multiple credit card accounts, select one to proceed.
- Select the Terms of service link and read the document. When finished, touch the **Back** key.
- Mark the checkbox if you agree with the terms of service.
- Touch **Buy now** at the bottom of the screen.

When finished, Android downloads the application.

To request a refund

If you are not satisfied with the application, you can ask for a refund within 15 minutes of the purchase. Your credit card will not be charged and the application will be removed. If you change your mind, you can install the application again, but you will not be able to request a refund.

- Touch  and **My apps** from Google Play Store screen.
- Touch the application that you want to uninstall and refund.
- Touch **REFUND** to uninstall the application and refund. If the button becomes **UNINSTALL**, your trial period has expired.
- In the survey form, select the answer that best matches your reason, and touch **OK**.


8.3 Manage your downloads

After you downloaded and installed an application, the following further operations are available for your selection.

View

On Google Play Store screen, touch  and **My Apps**.

Uninstall

On Google Play Store screen, touch  and **My Apps**. Touch the application you want to uninstall to enter the details screen, touch **Uninstall**, and finally touch **OK** to confirm.

Refund

On Google Play Store screen, touch  and **My Apps**. Touch the application you want to uninstall for a refund, touch **REFUND**, and finally touch **OK** to confirm.

⁽¹⁾ Google Paid applications may not be available to users in some countries.

Update notification

On Google Play Store screen, touch  and **My Apps**. Touch the **Menu** key and **Settings\Notifications** to enable update notification.

Auto update

Touch the **Menu** key and **Settings\Auto-update apps** to enable this function. To auto update one specific application, mark the checkbox of **Auto-update apps at any time**. **Do not auto-update apps** or **Auto-update apps over Wi-Fi only** from the details screen,

Rate and review

Open the details screen for an application, touch the stars ★ ★ ★ ★ ★ to award and input comments, touch **OK** to confirm.

Flag

You can report an inappropriate application to Google Play Store by flagging it. Open the details screen for the application, scroll to the bottom and touch **Flag as inappropriate**, enter the reason and finally touch **Submit**.

9 Multimedia applications...

 
9.1 Camera



Your mobile phone is fitted with a Camera and a Camcorder for taking photos and shooting videos.

Before using the Camera or Camcorder, please be sure to remove the protective lens cover before use to avoid it affecting your picture quality.



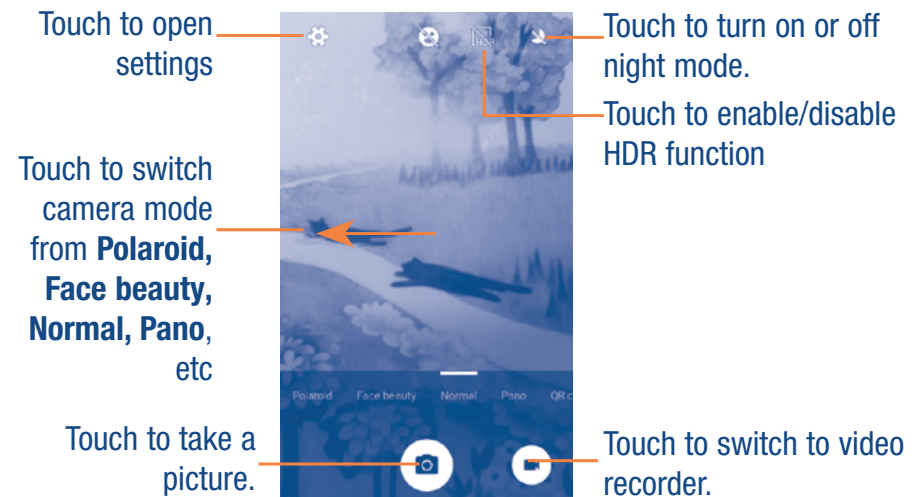

To access this function, touch the Application tab from the Home screen and then touch **Camera**.





To take a picture

The screen acts as the viewfinder. First position the object or landscape in the viewfinder, touch the  icon to take the picture which will be automatically saved.

To shoot a video

Switch Camera mode to Video mode. First position the object or landscape in the viewfinder, and touch the  icon to start recording. Touch the icon  to pause recording, and then the icon  to proceed. Touch the icon  stop recording. The video will be automatically saved.

Further operations when viewing a picture/video you have taken

- Slide left to quick review the pictures or videos you've taken.
- Touch the  icon then Gmail, Bluetooth, Messaging, etc to share.
- Touch the  icon to access **Gallery**.

9.1.1 Settings in framing mode


Before taking a photo/shooting a video, touch the  icon to adjust a number of settings in framing mode.

Photo settings

- **Shutter sound** Touch to turn on/off shutter sound.
- **Zero shutter delay** Touch to turn on/off zero shutter delay.
- **Face detection** Touch to turn on/off face detection.
- **Smile shot** Touch to turn on/off smile shot.
- **Timer** Touch to select pause duration before capturing pictures.
- **Capture number** Touch to select 40 shots or 99 shots.
- **Picture size** Touch to select picture size.
- **Preview size** Touch to select picture size: 1 megapixel, 1.3 megapixels, 2 megapixels. ISO: Touch to select ISO.

Video settings

- **EIS** Touch to turn on/off EIS.
- **Microphone** Touch to turn on/off microphone.
- **Audio mode** Touch to select audio mode.
- **Time lapse interval** Touch to select time lapse interval.
- **Video quality** Touch to set Video quality as Low, Medium, High, Fine.

9.2 Gallery




Gallery acts as a media player for you to view photos and playback videos. In addition, a set of further operations to pictures and videos are available for your choice.

To access this function, touch the Application tab from the Home screen, then touch **Gallery**.



To view a picture/play a video

Pictures and videos are displayed by albums in **Gallery**.

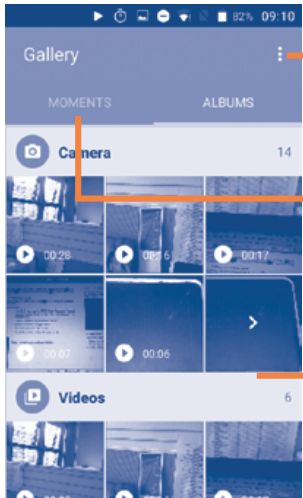 

Touch to Select item, delete the selected pictures and videos, or share to Gmail, Messaging, etc.


Touch to return to gallery's main screen

Slide upward/downward to view more pictures

- Touch an album and all pictures or videos will spread the screen.
- Touch the picture/video directly to view or play it.
- Slide upward/downward to view previous or next pictures/videos.

Working with pictures

You can work with pictures by rotating or cropping them, sharing them with friends, setting them as contact photo or wallpaper, etc.

Locate the picture you want to work on, touch the picture from full-screen picture view. Touch the icon  to share the picture, touch the Menu key above select Delete device copy to delete the picture.

Touch  from full-screen picture view, picture details will be available for your view.



Touch to play the **Slideshow/ Set as/Details/Print**.

Touch to delete the picture.

Touch to share the picture through selected apps.

Touch to edit the picture.

Touch  from full-screen picture view to edit a picture.





Touch to set effect such as Punch, Vintage, B/W, Bleach, Instant, Blue and etc.



Touch to select a frame for the picture.



Touch to crop or rotate the picture.






Touch to polish picture by adjusting its light or colour, adding vignette, and etc.



After activating the crop mode, the cropping square appears in the middle of the picture. Select the portion to crop, touch ✓ to confirm, touch ✕ icon to exit without saving.

Batch operation

Gallery provides a multi-select function, so that you can work with pictures/videos in batches.

Open the main Gallery window or an album, touch  and touch **Select item** to activate batch operation mode (you can also touch and hold one album/picture), then touch albums/pictures you want to work on. Touch  to delete. Touch  to share selected ones.

9.3

YouTube

 


YouTube is an online video-sharing service where the user can share and view videos. It supports a streaming function that allows you to start watching videos almost as soon as they begin downloading from the Internet.

To access this function, touch the Application tab from the Home screen, then touch **YouTube**.




As an online video service, your phone must have a network connection to access YouTube.

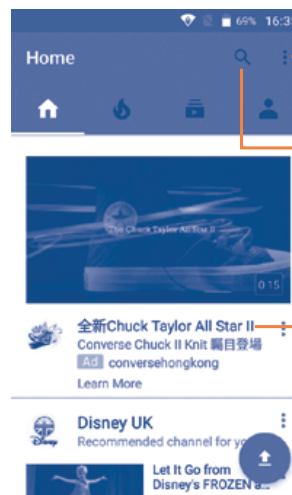

Touch to open further options of Settings, Send feedback, Help, Sign out.

Touch to search for a video.

Touch to play the video and to show more information.

By touching  from YouTube screen, you can set General settings for YouTube. For details about these features, please visit the YouTube website: www.YouTube.com.

9.3.1 Watch videos

Touch a video to play it. In the Playing screen, you can view information and comments of the video, and also reach to more related ones. You can also rate, share, label as Favorite, create a new playlist, etc from this screen.

To exit video playing screen, touch the **Back** key to return to the video list.

9.4 Music.....



Using this menu, you can play music files stored on the micro SD card in your phone. Music files can be downloaded from computer to micro SD card using an USB cable.

To access this function, touch the Application tab from the Home screen, then touch **Play Music**.

Touch key and choose Music Library, you will find five categories in which all songs are classified: **PLAYLISTS, ARTISTS, ALBUMS, SONGS** and **GENRES**, Slide left and right to view all.

9.4.1 Playing music

Touch a song to play it.

Touch to select **Listen now, Music library**

Touch **Shuffle all** to shuffle all songs in the **SONGS** category.



Touch to search music

Touch to pause/resume playback

Settings

- **ACCOUNT** Touch to choose account.

ABOUT PLAY MUSIC

- **Open source licenses** Touch to read licenses came with the app.
- **Version** Check which version of Music you have.



While playing songs with Music, the operation of pause, play or skip is still available even if the screen is locked.

Adjust sound effects

Touch the **Menu** key and **Sound effects** from playing screen to enable and adjust sound effects.

9.4.2 Working with playlists

Playlists allow you to conveniently organize all songs stored in the micro SD card or phone storage.

You can create a new playlist, add a song to the list, and delete or rename a playlist.

To create a playlist

Touch **Recently added** from the Playlists screen, touch the **Menu** key and then select **Save as playlist**, enter the name and finally touch **Save**.

To delete a playlist

Touch and hold a playlist to show the menu, then touch **Delete**.

10 Google Maps ⁽¹⁾



10.1 Get My Location

10.1.1 Choose a data source to decide My Location

Touch the **Menu** key from the Home screen, touch **Settings\Location**.

 
Touch the switch  beside **Location**, and then select a **Mode** to set Wi-Fi or mobile networks as my location data source.

10.1.2 Open Google Maps and view My Location

Touch the Application tab from the Home screen, then touch **Maps**.

Touch  icon on the map to view **My Location**.

The map will then center on a blue dot with a blue circle around. Your actual position is within the blue circle.

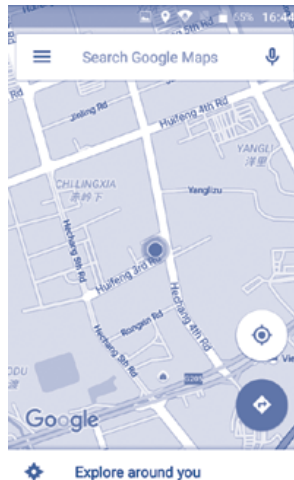

To move the map, drag the map with your finger.

To zoom in and out of a map, pinch or spread your fingers, or you can also zoom in by double-tapping a location on screen.

10.2 Search for a location

In the search box, enter an address, a city or a local business.

Touch the search icon to search, and in a while your search results will appear on the map as red dots. You can touch one to show a label.



 
Touch to show more information

⁽¹⁾ It may vary depending on the app version of Maps.

10.3 Get driving, public transport or walking directions


10.3.1 Get suggested routes for your trip


Touch the **Route** icon  from Maps screen.

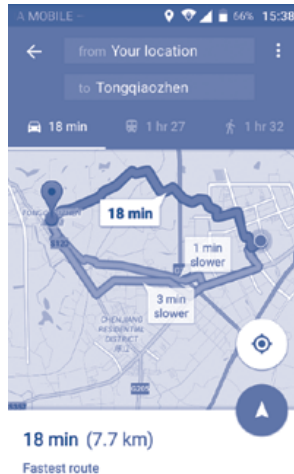


- Touch enter bar to edit your start point by one of the following methods: entering an address or using My Location.
- Do likewise for your end point.

 
To reverse directions, touch the  icon and select **Reverse**.

- Then select a transport mode: driving by car, using public transport, or walking directions.
- A couple of suggested routes will appear in a list. Touch any routes to view their respective detailed directions.
- Touch the  icon for route options to avoid highways and tolls when choosing driving by car or for editing the departure and arrival time when using public transport.


To get reverse directions for a route you've already made, simply touch the  icon and select **Reverse**. No need to enter your start point and end point again.

10.4 Save a location

- Touch & hold a location on a map.
- Touch the information at the bottom then touch the  icon to save the location.

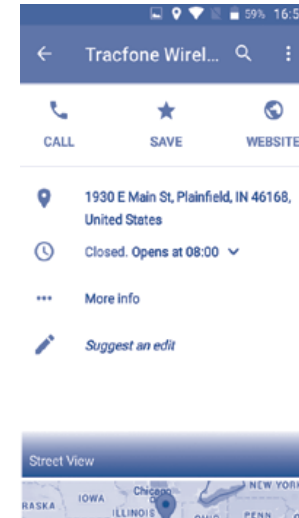

10.5 Map view

Touch the  icon, and then you could switch the map view to **Traffic**, **Public transport**, **Bicycling** or **Satellite** view.

11 Others

11.1 File Manager



To access this function, touch the Application tab from the Home screen, then touch **File Manager**.

File Manager displays all data stored on the phone and the micro SD card, including applications, media files downloaded from Google Play Store, YouTube or other locations; videos, pictures or audios you have captured; other data transferred via Bluetooth, USB cable, etc.

When you download an application from PC to phone/micro SD card, you can locate the application on File Manager, then touch it to install it in your phone.

File Manager allows you to perform and be really efficient with the following common operations: create (sub) folder, open folder/file, view, rename, copy, delete, play, share, etc.

11.2 Sound Recorder



To access this function, touch the Application tab from the Home screen, then touch **Sound Recorder**.

Sound Recorder allows you to record voice/sound for seconds/hours.

11.3 Radio

 


Your phone is equipped with a radio ⁽¹⁾ with RDS ⁽²⁾ functionality. You can use the application as a traditional radio with saved channels or with parallel visual information related to the radio program on the display if you tune to stations that offer Visual Radio service.

To access this function, touch the Application tab from the Home screen, then touch **Radio**.



To use it, you must plug in your headset, which works as an antenna connected with your phone.

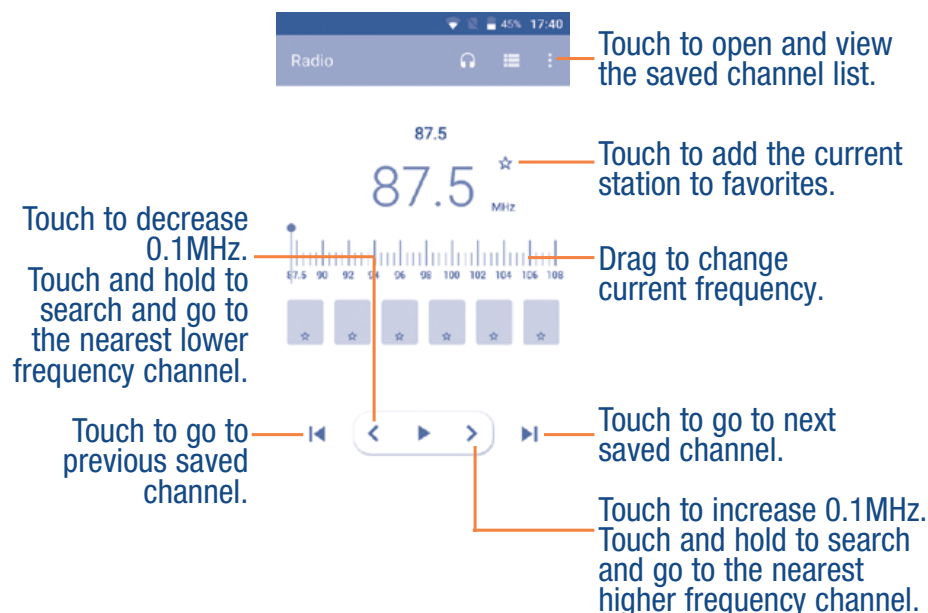

⁽¹⁾ The quality of the radio depends on the coverage of the radio station in that particular area.

⁽²⁾ Depending on your network operator and market.

Available options:

Touch the  icon to access:

- **Save channel** Save the current tuned station to the channels list.
- **Auto search** Search for all available stations automatically.
- **Delete** Delete the channel.
- **Enter frequency** Enter the frequency manually.
- **Station Info** Touch to view station info.
- **Exit** Turn off the radio.

11.4 Other applications ⁽¹⁾

The previous applications in this section are preinstalled on your phone. You can also download thousands of 3rd party applications by going to Google Play Store on your phone.

⁽¹⁾ Application availability depends on country and provider.

12 Settings

To access this function, touch the **Menu** key and then **Settings** from the Home screen.

12.1 WIRELESS & NETWORKS

12.1.1 Wi-Fi

Using Wi-Fi you can now surf the Internet without using your SIM card whenever you are in the range of a wireless network. The only thing you have to do is to enter the **Wi-Fi** screen and configure an access point to connect your phone to the wireless network.

For detailed instructions on using Wi-Fi, please refer to “7.1.2 Wi-Fi”.

12.1.2 Bluetooth

Bluetooth allows your phone to exchange data (videos, images, music, etc.) in a small range with another Bluetooth supported device (phone, computer, printer, headset, car kit, etc.).

For more information on Bluetooth, please refer to “7.3 Connecting to Bluetooth devices”.

12.1.3 Data usage

Touch the **Menu** key you can view settings related to your data usage. Mark the checkbox of set mobile data limit, your mobile data connection will be disabled when the specified limit is reached. You can also choose a data usage cycle to view the statistics and related applications of used data by your phone.



Data usage is measured by your phone, and your provider may count differently. Please consider using a conservative limit.

12.1.4 Airplane mode

Through **More\Airplane mode** to simultaneously disable all wireless connections including Wi-Fi, Bluetooth and more.

You can also open Airplane mode by touching AIRPLANE MODE on Quick setting bar or in phone options when pressing Power key.

12.1.5 SMS app

Touch **More\SMS app** to select between Hangouts or Messaging.

12.1.6 VPN settings

A mobile virtual private network (mobile VPN or mVPN) provides mobile devices with access to network resources and software applications on their home network, when they connect via other wireless or wired networks. Mobile VPNs are used in environments where workers need to keep application sessions open at all times, throughout the working day, as the user connects via various wireless networks, encounters gaps in coverage, or suspend-and-resumes their devices to preserve battery life. A conventional VPN cannot survive such events because the network tunnel is disrupted, causing applications to disconnect, time out, fail, or even the computing device itself to crash.

For more information on VPN, please refer to “7.5 Connecting to virtual private networks”.

12.1.7 Mobile networks

Data roaming

If you don't need to transmit data on other provider's mobile networks, unmark the checkbox of **Data roaming** to avoid incurring significant roaming charges.

- **Preferred:** You can select your preferred Network ID or Network type with this menu.

Access point names

You can select your preferred network with this menu.

Network operators

You can select a network operator manually or automatically.

12.2 DEVICE

12.2.1 Gestures

Touch to set Incoming calls and Alarm gestures.

- **Incoming calls:** Turn over to mute or reject.
- **Alarm:** Turn over to activate.

12.2.2 Display

- **Brightness level:** Touch to adjust the brightness of the screen.
- **Wallpaper:** Touch to set the wallpaper.
- **Auto-rotate screen:** Touch to set whether to rotate the contents of the screen or stay in portrait view.
- **Sleep:** Touch to set screen timeout.
- **Daydream:** Touch to turn on or off daydream and select a mode and time for it.

- **Font size:** Touch to set the font size.

12.2.3 Lock settings

To protect your phone and privacy, you can lock your phone with a variety of patterns , PIN or password, etc.

- **Func:** Touch to enable or disable Func, it displays shortcuts on your lock screen.
- **Screen lock:** Touch to choose screen lock None\Swipe\Pattern\PIN\Password.

12.2.4 Sound & notification

Use the sound & notification settings to configure many aspects of call and notification ringtones, music, and other audio settings.

Sound

- **Media volume:** Slide to adjust the volume of music, video, games, etc.
- **Alarm volume:** Slide to adjust the volume of your alarms.
- **Ring volume:** Slide to adjust the volume of your ringtones and alerts.
- **Notification volume:** Slide to adjust the volume of your notifications.
- **Also vibrate for calls:** Touch to vibrate the phone for incoming calls.
- **Do not disturb:** Touch to select the prioritised apps for notification permission or customise the automatic rules.
- **Phone ringtone:** Touch to set your default incoming call ringtone.
- **Default notification ringtone:** Touch to set your default notification ringtone.
- **Mute power on & off ringtone:** Touch to mute power on & off ringtone.
- **Other sounds:** Touch to set Dial pad tones, Screen locking sounds. Touch sounds and Vibrate on touch.

Notification

- **When device is locked:** Touch to show all notification content.
- **App notifications:** Touch to show all apps and set for your preferences.

Advanced:

- **Notification access:** Touch to view the notification listeners.
- **Do not disturb access:** Touch to view the apps which have requested Do Not Disturb access.

12.2.5 Apps

You use the Apps settings to view details about the applications installed on your phone, to manage their data and force them to stop, and to set whether you want to permit installation of applications that you obtain from web sites and emails.

12.2.6 Storage & USB

Use these settings to monitor the total and available space on your phone and, on your microSD card; to manage your microSD card; and, if necessary, to reset the phone, erasing all of your personal information.

12.2.7 Battery

In battery screen you can view the battery usage data since you last connected the phone to a power source. The screen also shows your battery status and how long it has been used since last charging. Touch one category, then you can learn its specific power consumption.

You can adjust power use via the screen brightness or screen timeout in the Display screen.

12.2.8 Memory

In the Memory screen you can view the total and available memory on your phone, including the average memory used by each application.

12.3 PERSONAL

12.3.1 Location

Touch the switch  to open location services.

Mode

Touch to select a location mode among **High accuracy**, **Battery saving**, and **Device only** to use GPS, Wi-Fi, or mobile networks to determine your approximate location.

RECENT LOCATION REQUESTS

Touch to view detailed information of applications that had recent location requests.

LOCATION SERVICES

Touch to access **Google Location History**.

12.3.2 Security

Encrypt phone

Require a numeric PIN or passwords to decrypt your phone each time you power it on.

Find My Phone

Find My Phone is developed to prevent user data from being leaked and help users to locate and retrieve their devices.

Make passwords visible

Mark the checkbox to show passwords as you type.

Device administrators

Touch to view or deactivate device administrators.

Unknown sources

Mark the checkbox to permit installation of applications that you obtain from websites, emails, or other locations other than Google Play Store.

To protect your phone and personal data, download applications only from trusted sources, such as Google Play Store.

Auto-start management

Touch to allow or deny auto-start of selected applications when system boots up.

App permissions

Turn on the switch to manage app permissions for security and privacy protection.

Storage type

Credential storage is software only.

Trusted credentials

Touch to display trusted CA certificates.

Install from Memory

Touch to install encrypted certificates from the phone storage.

Clear credentials

Touch to remove all certificates.

Advanced

- **Trust agents:** Touch to view or deactivate trust agents.
- **Screen pinning:** Touch to pin or unpin your screen.
- **Apps with usage access:** Touch to set usage access of Apps.

12.3.3 Accounts

Use the settings to add, remove, and manage your Email and other supported accounts. You can also use these settings to control how and whether all applications send, receive, and synchronise data on their own schedules , and whether all applications can synchronise user data automatically.

Add account

Touch to add an account for selected app.

12.3.4 Google

This phone offers you Google account and service setting options.

12.3.5 Language & input

Use the Language & input settings to select the language for the text on your phone and for configuring the onscreen keyboard. You can also configure voice input settings and the pointer speed.

Language

Touch to select the language and the region you want.

Spell checker

Mark the checkbox to enable the system to show suggested words.

Personal dictionary

Touch to open a list of the words you've added to the dictionary. Touch a word to edit or delete it. Touch the add button (+) to add a word.

Current Keyboard

Touch to choose keyboards.

Android keyboard (AOSP)

The Android keyboard settings apply to the onscreen keyboard that is included with your phone. The correction and capitalization features affect only the English version of the keyboard. Available options are as follows:

Languages

Touch to set input language.

Preferences

- **Auto-capitalization** Mark the checkbox to have the onscreen keyboard automatically capitalize the first letter of the first word after a period, the first word in a text field, and each word in name fields.
- **Double-space period** Mark the checkbox to have a period inserted in spacebar.
- **Vibrate on keypress** Mark the checkbox to have the phone vibrate briefly each time you touch a key on the onscreen keyboard.
- **Sound on keypress** Mark the checkbox to play a brief sound each time you touch a key on the onscreen keyboard.
- **Popup on keypress** Mark the checkbox to pop up the key that you touched.
- **Voice input key** Touch to set the Mic button on Main keyboard or symbols keyboard or not display.

Appearance & layouts

- **Theme:** Touch to choose the theme of your phone with **Material light/Material Dark/Holo White/Holo Blue**
- **Custom input styles:** Touch to choose custom input styles.

Text correction

- **Personal dictionary:** Touch to open a list of the words you've added to the dictionary. Touch a word to edit or delete it. Touch the add button (+) to add a word.

- **Add-on dictionaries:** Touch to select language for personal dictionaries.
- **Block offensive words:** Mark the checkbox to hide recognized offensive voice results.
- **Auto correction:** Touch to turn on/off auto correction, or you can also adjust the sensitivity of correction.
- **Show correction suggestions:** Touch to show or not the correction suggestions while typing.
- **Personalized suggestions:** Touch to show or not the improve suggestions that learn from your communications and typed data.
- **Suggested Contact names:** Mark the checkbox to use names from Contacts for suggestions and corrections.
- **Next word suggestions:** Mark the checkbox to use the previous word in making suggestions.

Advanced

Touch to view more advanced settings for android keyboard, such as key popup dismiss delay, keypress vibration duration, keypress sound volume, key long press delay, Emoji for physical keyboard, Show app icon.

Swype

Swype Input lets you enter a word with one continuous motion: just drag your finger over the letters in the word. Touch to configure settings for Swype.

Google voice typing

Touch to configure settings for Google voice typing.

Text-to-speech settings

- **Preferred engine:** Touch to choose a preferred text-to-speech engine, touch the Settings icon to show more choices for each engine.
- **Speech rate:** Touch to open a dialog where you can select how quickly you want the synthesiser to speak.

- **Listen to an example:** Touch to play a brief sample of the speech synthesiser, using your current settings.
- **Default language status:** Touch to show status of default language.

Pointer speed: Touch to open a dialog where you can change the pointer speed, touch OK to confirm.

12.3.6 Backup & reset

Back up my data

Mark the checkbox to back up your phone's settings and other application data to Google servers with your Google account. If you replace your phone, the settings and data you've backed up are restored onto the new phone for the first time you sign in with your Google account. If you mark this option, a wide variety of settings and data are backed up, including your Wi-Fi passwords, bookmarks, a list of the applications you've installed, the words you've added to the dictionary used by the onscreen keyboard, and most of the settings that you configure with the Settings application. If you unmark this option, you stop backing up your settings, and any existing backups are deleted from Google servers.

Backup account

Touch to back up your account.

Automatic restore

Mark the checkbox to restore your backed up settings or other data when you reinstall an application.

Network settings reset

Touch to reset network settings including: Wi-Fi, Cellular data, Bluetooth.

DRM reset

Touch to delete all DRM licenses.

Factory data reset

Erase all of your personal data from internal phone storage, including information about your Google account, any other accounts, your system and application settings, and any downloaded applications. Resetting the phone does not erase any system software updates you've downloaded or any files on your micro SD card, such as music or photos. If you reset the phone in this way, you're prompted to re-enter the same kind of information as when you first started Android.

When you are unable to power on your phone, there is another way to perform a factory data reset by using hardware keys. Press the **Volume up** key and the **Power** key at same time until the screen lights up.

12.4 SYSTEM

12.4.1 Date & time

Use Date & time settings to customize your preferences for how date and time are displayed.

Automatic date & time

Select to **Use network-provided time** or **Use GPS-provided time**, or touch **Off** to close automatic date & time.

Automatic time zone

Mark the checkbox to use network-provided time zone. Or unmark to set all values manually.

Set date

Touch to open a dialog where you can manually set the phone's date.

Set time

Touch to open a dialog where you can manually set the phone's time.

Select time zone

Touch to open a dialog where you can set the phone's time zone.

Use 24-hour format

Mark the checkbox to display the time using 24-hour clock format.

Choose date format

Touch to open a dialog where you can select the format for displaying dates.

Auto update settings

Touch to choose NTP server.

12.4.2 Schedule power on/off

Touch to preset the power on/off time and repeat mode.

12.4.3 Accessibility

You can use the Accessibility settings to configure any accessibility plug-ins you have installed on your phone.

TalkBack

When TalkBack is on, your device provides spoken feedback to help blind and low vision users.

Switch Access

Touch to turn on/off Switch Access which allows you to control your device using configurable key combinations.

Captions

Touch to turn on and set up language, text size and style for captions.

Magnification

Touch to turn on/ off the Magnification gestures.

Large text

Mark the checkbox to enlarge the screen text.

High contrast text

Touch to turn on/off the high contrast of the text.

Power button ends call

Mark the checkbox to end a call by pressing the Power key during the call.

Auto-rotate screen

Touch to switch to activate/deactivate auto-rotate screen.

Speak passwords

Mark the checkbox to speak passwords while typing.

Accessibility shortcut

Touch to turn on/ off the Accessibility shortcut.

Text-to-speech settings

Touch to set **Preferred engine**, **Speech rate** and **Listen to an example**.

Touch & hold delay

Touch to adjust the duration of touch and hold delay. This function enables your phone to differ touch and touch & hold, which may avoid incorrect operations.

Color inversion

Touch to reverse the color of the phone display, This feature is Experimental and may affect performance.

Color correction

Touch to turn on or off the color correction, This feature is experimental and may affect performance. It contains three correction modes.

12.4.4 Printing

Touch to turn on cloud Print.

12.4.5 Regulatory & safety

Touch to view product information.

12.4.6 About phone

This contains information about things ranging from Legal information, Model number, Android version, Baseband version, Kernel version, Build number to those listed below:

System updates

Touch to check for software updates.

Status

This contains the status of the Battery status, Battery level, SIM status, IMEI information, IP address, Wi-Fi MAC address, Bluetooth address, etc.

Legal information

Touch to view legal information.

13 Making the most of your phone

13.1 FOTA Upgrade

Using the FOTA Upgrade tool you can update your phone's software.

To access **System update**, please touch the **Menu** key from the Home screen, then **Settings\About phone\System updates**. Touch **Check for updates**, and the phone will search for the latest software. If you want to update the system, please touch the button **Download**, after it is done please touch **Install** to complete the upgrade. Now your phone will have the latest software version.

You should turn on data connection or connect through Wi-Fi before searching for updates.

Safety and use

Please read before using your phone

THE BATTERY IS NOT FULLY CHARGED WHEN YOU TAKE IT OUT OF THE BOX. DO NOT REMOVE THE BATTERY PACK WHEN THE PHONE IS CHARGING. YOUR WARRANTY IS INVALIDATED IF YOU DISASSEMBLE OR ATTEMPT TO DISASSEMBLE THE DEVICE.

Privacy restrictions

Some countries require full disclosure of recorded telephone conversations, and stipulate that you must inform the person with whom you are speaking that the conversation is being recorded. Always obey the relevant laws and regulations of your country when using the recording feature of your phone.

Disclaimers

ANY WEATHER, STOCK, OR OTHER INFORMATION, DATA, OR DOCUMENTATION ("ACCESSED INFORMATION") ARE PROVIDED "AS IS" AND WITHOUT ANY WARRANTY OR ANY TECHNICAL SUPPORT. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, TCL MOBILE AND ITS AFFILIATES expressly disclaim any and all representations and warranties, arising by law or otherwise, related to the Accessed Information, including without limitation any express or implied representation or warranty of merchantability, fitness for a particular purpose, non-infringement, quality, accuracy, completeness, effectiveness, reliability, or usefulness. Without limiting the foregoing, it is further understood that TCL Mobile and its Affiliates are not responsible for any use of the Accessed Information or the results arising from such use, and that you use such information at your own risk.

Limitation of damages

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL TCL MOBILE OR ITS AFFILIATES BE LIABLE TO YOU, ANY USER, OR THIRD PARTY FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, INCIDENTAL OR PUNITIVE DAMAGES OF ANY KIND, ARISING IN CONTRACT, TORT, OR OTHERWISE, INCLUDING, BUT NOT LIMITED TO, INJURY, LOSS OF REVENUE, LOSS OF GOODWILL, LOSS OF BUSINESS OPPORTUNITY, LOSS OF DATA, AND/OR LOSS OF PROFITS, REGARDLESS OF THE FORESEEABILITY THEREOF OR WHETHER TCL MOBILE OR ITS AFFILIATES HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. AND IN NO EVENT SHALL THE TOTAL LIABILITY OF TCL MOBILE OR ITS AFFILIATES EXCEED THE AMOUNT RECEIVED FROM YOU, REGARDLESS OF THE LEGAL THEORY UNDER WHICH THE CAUSE OF ACTION IS BROUGHT. THE FOREGOING DOES NOT AFFECT ANY STATUTORY RIGHTS WHICH MAY NOT BE DISCLAIMED.

Important health information and safety precautions

When using this product, the safety precautions below must be taken to avoid possible legal liabilities and damages.

Retain and follow all product safety and operating instructions. Observe all warnings in the operating instructions on the product.

To reduce the risk of bodily injury, electric shock, fire, and damage to the equipment, observe the following precautions.



WARNING: This product contains chemicals known to the state of California to cause cancer and birth defects or other reproductive harm.

Electrical safety

This product is intended for use when supplied with power from the designated battery or power supply unit. Other usage may be dangerous and will invalidate any approval given to this product.

Safety precautions for proper grounding installation

CAUTION: Connecting to improperly grounded equipment can result in an electric shock to your device.

This product is equipped with a USB Cable for connecting with desktop or notebook computer. Be sure your computer is properly grounded (earthed) before connecting this product to the computer. The power supply cord of a desktop or notebook computer has an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet which is properly installed and grounded in accordance with all local codes and ordinances.

Safety precautions for power supply unit

■ **Use the correct external power source**

A product should be operated only from the type of power source indicated on the electrical ratings label. If you are not sure of the type of power source required, consult your authorized service provider or local power company. For a product that operates from battery power or other sources, refer to the operating instructions that are included with the product. This product should be operated only with the following designated power supply unit(s).

Travel charger: Input: 100-240 V, 50/60 Hz, 130/150 mA

Output: 5 V, 550mA

■ **Handle battery packs carefully**

This product contains a Lithium-ion polymer or Lithium-ion battery. There is a risk of fire and burns if the battery pack is handled improperly. Do not attempt to open or service the battery pack. Do not disassemble, crush, puncture, short external contacts or circuits, dispose of in fire or water, or expose a battery pack to temperatures higher than 140°F (60°C) .



WARNING: Danger of explosion if battery is incorrectly replaced. To reduce risk of fire or burns, do not disassemble, crush, puncture, short external contacts, expose to temperature above 140°F (60°C), or dispose of in fire or water. Replace only with specified batteries. Recycle or dispose of used batteries according to the local regulations or reference guide supplied with your product.



NOTE: This product should be operated only with the following designated Battery Pack(s).

Battery: Lithium 1500mAh (TLi015M1/ CAB1500046C1)

■ Take extra precautions

- Keep the battery or device dry and away from water or any liquid as it may cause a short circuit.
- Keep metal objects away so they don't come in contact with the battery or its connectors as it may lead to short circuit during operation.
- The phone should only be connected to products that bear the USB-IF logo or have completed the USB-IF compliance program.
- Do not use a battery that appears damaged, deformed, or discolored, or the one that has any rust on its casing, overheats, or emits a foul odor.
- Always keep the battery out of the reach of babies and small children, to avoid swallowing of the battery. Consult the doctor immediately if the battery is swallowed.
- Only use the battery with a charging system that has been qualified with the system per this standard, IEEE-Std-1725-2011. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage or other hazard.
- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725-2011. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.
- Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- If the battery leaks:
 - Do not allow the leaking fluid to come in contact with skin or clothing. If already in contact, flush the affected area immediately with clean water and seek medical advice.

- Do not allow the leaking fluid to come in contact with eyes. If already in contact, DO NOT rub; rinse with clean water immediately and seek medical advice.
- Take extra precautions to keep a leaking battery away from fire as there is a danger of ignition or explosion.

Safety precautions for direct sunlight

Keep this product away from excessive moisture and extreme temperatures. Do not leave the product or its battery inside a vehicle or in places where the temperature may exceed 140°F (60°C), such as on a car dashboard, window sill, or behind a glass that is exposed to direct sunlight or strong ultraviolet light for extended periods of time. This may damage the product, overheat the battery, or pose a risk to the vehicle.

Prevention of hearing loss

CAUTION: Permanent hearing loss may occur if earphones or headphones are used at high volume for prolonged periods of time.

Safety in aircraft

Due to the possible interference caused by this product to an aircraft's navigation system and its communications network, using this device's phone function on board an airplane is against the law in most countries. If you want to use this device when on board an aircraft, remember to turn off your phone by switching to Airplane Mode.

Environment restrictions

Do not use this product in gas stations, fuel depots, chemical plants or where blasting operations are in progress, or in potentially explosive atmospheres such as fuelling areas, fuel storehouses, below deck on boats, chemical plants, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Please be aware that sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Explosive atmospheres

When in any area with a potentially explosive atmosphere or where flammable materials exist, the product should be turned off and the user should obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised not to use the equipment at refueling points such as service or gas stations, and are reminded of the need to observe restrictions on the use of radio equipment in fuel depots, chemical plants, or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. These include fueling areas, below deck on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

Road safety

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands free kit) causes distraction and can lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

Safety precautions for RF exposure

- Avoid using your phone near metal structures (for example, the steel frame of a building).
- Avoid using your phone near strong electromagnetic sources, such as microwave ovens, sound speakers, TV and radio.
- Use only original manufacturer-approved accessories, or accessories that do not contain any metal.
- Use of non-original manufacturer-approved accessories may violate your local RF exposure guidelines and should be avoided.

Interference with medical equipment functions

This product may cause medical equipment to malfunction. The use of this device is forbidden in most hospitals and medical clinics.

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Nonionizing radiation

Your device has an internal antenna. This product should be operated in its normal-use position to ensure the radiative performance and safety of the interference. As with other mobile radio transmitting equipment, users are advised that for satisfactory operation of the equipment and for the safety of personnel, it is recommended that no part of the human body be allowed to come too close to the antenna during operation of the equipment.

Use only the supplied integral antenna. Use of unauthorized or modified antennas may impair call quality and damage the phone, causing loss of performance and SAR levels exceeding the recommended limits as well as result in non-compliance with local regulatory requirements in your country. To assure optimal phone performance and ensure human exposure to RF energy is within the guidelines set forth in the relevant standards, always use your device only in its normal-use position. Contact with the antenna area may impair call quality and cause your device to operate at a higher power level than needed. Avoiding contact with the antenna area when the phone is IN USE optimizes the antenna performance and the battery life.

Electrical safety

■ Accessories

- Use only approved accessories.
- Do not connect with incompatible products or accessories.
- Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit the battery terminals.

■ Connection to a car

- Seek professional advice when connecting a phone interface to the vehicle electrical system.

■ **Faulty and damaged products**

- Do not attempt to disassemble the phone or its accessory.
- Only qualified personnel must service or repair the phone or its accessory.

General precautions

You alone are responsible for how you use your phone and any consequences of its use. You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

■ **Avoid applying excessive pressure to the device**

Do not apply excessive pressure on the screen and the device to prevent damaging them and remove the device from your pants' pocket before sitting down. It is also recommended that you store the device in a protective case and only use the device stylus or your finger when interacting with the touch screen. Cracked display screens due to improper handling are not covered by the warranty.

■ **Device getting warm after prolonged use**

When using your device for prolonged periods of time, such as when you're talking on the phone, charging the battery or browsing the Web, the device may become warm. In most cases, this condition is normal and therefore should not be interpreted as a problem with the device.

■ **Heed service markings**

Except as explained elsewhere in the Operating or Service documentation, do not service any product yourself. Service needed on components inside the device should be done by an authorized service technician or provider.

■ **Protect your phone**

- Always treat your phone and its accessories with care and keep them in a clean and dust-free place.
- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture or high humidity.
- Do not drop, throw or try to bend your phone or its accessories.

- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories, only authorised personnel must do so.
- Do not expose your phone or its accessories to extreme temperatures, maximum 140°F (60°C).
- Please check local regulations for disposal of electronic products.
- Do not carry your phone in your back pocket as it could break when you sit down.

■ **Damage requiring service**

Unplug the product from the electrical outlet and refer servicing to an authorized service technician or provider under the following conditions:

- Liquid has been spilled or an object has fallen into the product.
- The product has been exposed to rain or water.
- The product has been dropped or damaged.
- There are noticeable signs of overheating.
- The product does not operate normally when you follow the operating instructions.

■ **Avoid hot areas**

The product should be placed away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

■ **Avoid wet areas**

Never use the product in a wet location.

■ **Avoid using your device after a dramatic change in temperature**

When you move your device between environments with very different temperature and/or humidity ranges, condensation may form on or within the device. To avoid damaging the device, allow sufficient time for the moisture to evaporate before using the device.

NOTICE: When taking the device from low-temperature conditions into a warmer environment or from high-temperature conditions into a cooler environment, allow the device to acclimate to room temperature before turning on power.

■ **Avoid pushing objects into product**

Never push objects of any kind into cabinet slots or other openings in the product. Slots and openings are provided for ventilation. These openings must not be blocked or covered.

■ **Air bags**

Do not place a phone in the area over an air bag or in the air bag deployment area. Store the phone safely before driving your vehicle.

■ **Mounting accessories**

Do not use the product on an unstable table, cart, stand, tripod, or bracket. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

■ **Avoid unstable mounting**

Do not place the product with an unstable base.

■ **Use product with approved equipment**

This product should be used only with personal computers and options identified as suitable for use with your equipment.

■ **Adjust the volume**

Turn down the volume before using headphones or other audio devices.

■ **Cleaning**

Unplug the product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning, but NEVER use water to clean the LCD screen.

■ **Small children**

Do not leave your phone and its accessories within the reach of small children or allow them to play with it. They could hurt themselves or others, or could accidentally damage the phone. Your phone contains small parts with sharp edges that may cause an injury or which could become detached and create a choking hazard.

■ **Repetitive motion injuries**

To minimise the risk of RSI, when Texting or playing games with your phone:

- Do not grip the phone too tightly
- Press the buttons lightly

- Make use of the special features in the handset which minimize the number of buttons which have to be pressed, such as message templates and predictive text.
- Take lots of breaks to stretch and relax.

■ **Operating machinery**

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

■ **Loud noise**

This phone is capable of producing loud noises which may damage your hearing.

■ **Emergency calls**

This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

Regulatory agency identifications

For regulatory identification purposes, your product is assigned a model number of A466BG.

To ensure continued reliable and safe operation of your device, use only the accessories listed below with your A466BG device.

Operating temperature range: 32°F to 104°F (0°C to 40°C)

NOTE: This product is intended for use with a certified Class Limited Power Source, rated 4.35 Volts DC, maximum 1 Amp power supply unit.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio or television technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Important Note

Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. To maintain compliance with FCC RF exposure compliance requirements, please follow operation instruction as documented in this manual.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter, except the transmitters built-in with the device.

FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01- 09 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless phones be compatible with hearing-aid. The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities. While some wireless phones are used near some hearing devices (hearing aid and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate. The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box. The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not rated. M4 is the better/higher of the two ratings. Your device is rated M3.

 
Please power off the Bluetooth® function while using hearing aid devices with your A466BG.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise.

The hearing aid and wireless phone rating values are then added together. A sum of 5 is considered acceptable for normal use. A sum of 6 is considered for better use. A sum of 8 is considered for best use. In the above example, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This should provide the hearing aid user with “normal usage” while using their hearing aid with the particular wireless phone. “Normal usage” in this context is defined as a signal quality that is acceptable for normal operation.

This methodology applies equally for T ratings. The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules. The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

Disclosure statement for HAC-rated handsets operating over the GSM air interface in the 1900 MHz Band with a user-selectable mode of a special mode necessary to meet the hearing aid compatibility standard for reducing the power under the provisions of Section 20.19

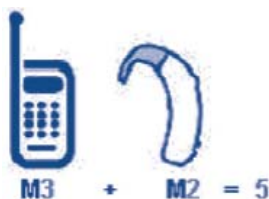

SAR Information

1.04 W/kg @ 1g (HEAD)

1.18 W/kg @ 1g (BODY)

THIS MODEL DEVICE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES. For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines when used with the TCL Mobile Limited. Accessories supplied or designated for this product. Use of other accessories may not ensure compliance with the FCC RF exposure guidelines.

Your wireless mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on the safety standards previously set by both U.S. and international standards bodies:

- American National Standards Institute (ANSI) IEEE. C95.1-1999.
- National Council on Radiation Protection and Measurement (NCRP). Report 86. 1986.
- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1996.
- Ministry of Health (Canada), Safety Code 6. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phone employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg*.

The FCC has granted an Equipment Authorization for this model device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model device is on file with the FCC and can be found under the Display Grant section of <https://fjallfoss.fcc.gov/oetcf/eas/reports/GenericSearch.cfm> after searching on FCC ID: 2ACCJH055 Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web-site as <http://http://www.ctia.org/>.

For information about hearing aids and digital wireless phones

FCC Hearing Aid Compatibility and Volume Control:

<http://www.fcc.gov/cgb/dro/hearing.html>

Gallaudet University, RERC:

<https://fjallfoss.fcc.gov/oetcf/eas/reports/GenericSearch.cfm>

* In the U.S. and Canada, the SAR limit for mobile phone used by the public is 1.6 Watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in usage.

Normal condition only to ensure the radiative performance and safety of the interference. As with other mobile radio transmitting equipment, users are advised that for satisfactory operation of the equipment and for the safety of personnel, it is recommended that no part of the human body be allowed to come too close to the antenna during operation of the equipment.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 1 cm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided.

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

FCC RF Radiation Exposure Statement

- This Transmitter has been demonstrated co-location compliance requirements with Bluetooth® and WLAN. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
- This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

Telecommunications & Internet Association (TIA) safety information

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of 15 cm (6 inches) be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should ALWAYS keep the phone more than 15 cm (6 inches) from their pacemaker when the phone is turned ON.
- Should not carry the phone in a breast pocket.
- Should use the ear opposite the pacemaker to minimize the potential for interference. If you have any reason to suspect that interference is taking place, turn the phone OFF immediately.

Hearing aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider, or call the customer service line to discuss alternatives.

RoHS compliance

This product is in compliance with Directive 2011/65/EU of the European Parliament and of the Council of 7 January 2011, on the restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS) and its amendments.

Electronic Recycling (Within USA Only):

For more information on Electronic Recycling, please:

Visit **Alcatel** Electronic Recycling Program website at <http://www.alcatelonetouch.us/electronic-recycling-program>, or Call **Alcatel** US Customer Support at 1-855-368-0829.