



9023X

Quick Start Guide

Thank you for buying the ALCATEL ONETOUCH Pixi3(8). We hope you will enjoy your high-quality mobile communication experience. For more information about how to use your tablet, please visit www.alcatelonetouch.com to consult the FAQ, perform software upgrades, etc.

ALCATEL
onetouch®

Table of contents

1	Your device	3
1.1	Appearance	3
1.2	Lock/Unlock your screen	5
1.3	Home screen	6
1.4	Apps and widgets	8
1.5	Basic operation	9
2	Settings	12
2.1	System	12
2.2	Personalisation	13
2.3	Accounts	13
2.4	Time & language	14
3	Phone calls	15
3.1	Placing a call	15
3.2	Create a new contact	15
3.3	International call	16
3.4	Emergency call	16
3.5	Answering or rejecting a call	16
4	Text messaging	17
4.1	Writing a message	17
4.2	Sending a text message	17
4.3	Sending a multimedia message	18
4.4	Deleting message threads	18
4.5	Deleting individual message threads	18
	Safety information	19
	General information	27
	Warranty	30



www.sar-tick.com

This device meets applicable national SAR limits of 2.0 W/kg. SAR values can be found on page 25 of this user guide. When carrying the device or using it while worn on your body, either use an approved accessory such as a holster or otherwise maintain a distance of 15 mm from the body to ensure compliance with RF exposure requirements. Note that the product may be transmitting even if you are not using it.



 
To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.



The tablet contains magnets which may interfere with other devices and items (such as credit card, pacemakers, defibrillators, etc.). Please maintain at least 15 cm of separation between your tablet and the devices/items mentioned above.

Your device


I.I Appearance

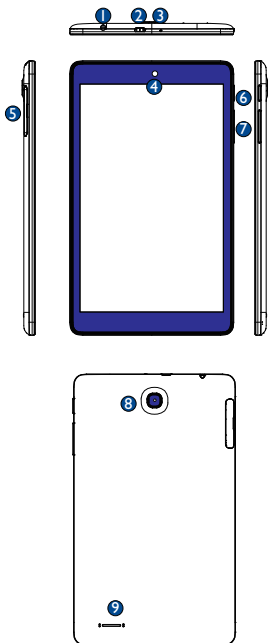

Number	Function
1	Headset connector
2	Micro-USB connector/Battery charge port
3	Microphone
4	Front camera
5	SIM card and MicroSD card slot
6	Power key
7	Volume Up/Down
8	Rear camera
9	Speaker

Inserting the SIM card and microSD card

 Be sure to insert your SIM card and microSD card in the correct direction to avoid damage. Refer to the following instructions.

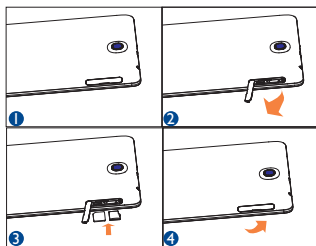

Note

Charge before using for the first time. Normally, pressing and holding the Power key will power on the tablet and the lock screen will be displayed. If the tablet is low on power, a battery icon will appear indicating that you should charge the device before use. Only use the charger recommended by TCL Communication Ltd. and its affiliates.



This tablet can be charged through a USB computer connection.

1.2 Lock/Unlock your screen



 
1.2.1 Unlock the screen

Once your device is powered on, the default lock screen will show.

Press the Power key once to light up the screen, vertically swipe up the screen, enter PIN or password to unlock the screen.

1.3 Home screen

You can bring all the items (applications, shortcuts, folders and widgets) you love or use most frequently to your Home screen for quick access. Touch the Home key to get instant access to the Home screen.

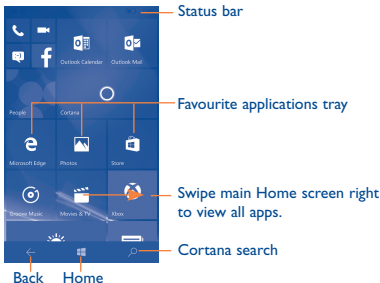

The Home screen is provided in an extended format to allow more space for adding applications, shortcuts, etc. Slide up and down to get a complete view of the Home screen.

Name	Description
Status bar	<ul style="list-style-type: none">• Status/Notification indicators• Touch and drag down to open the notifications panel.
Favourite apps tray	<ul style="list-style-type: none">• Touch to enter the applications.• Long press to move or change applications.
Cortana Search	<ul style="list-style-type: none">• Touch to access the Cortana search screen.
Back	<ul style="list-style-type: none">• Go back to the previous menu or screen.
Home	<ul style="list-style-type: none">• Touch to return to Home screen.

1.3.1 Status bar

The Status bar appears at the top of your Home screen. Icons indicating your tablet's status and new notification alerts appear in the Status bar.



1.3.2 Notifications panel

When there are notifications, touch and drag down the Status bar to open the Notification panel and read the detailed information.



Expand

Touch to expand all Quick settings.

Touch and drag down the Status bar to open the Quick settings panel or Notification panel. Touch and drag up to close it.

1.3.3 Quick settings panel

You can enable or disable functions or change modes by touching the icons on the Quick settings panel.



Collapse

Long press an icon to enter corresponding setting screen.

Touch to collapse Quick settings panel.

1.4 Apps and widgets


1.4.1 All Apps

- Swipe the main Home screen left to view all the applications.
- On the Home screen, drag down to the bottom, then touch **All apps** on the lower right corner to view all the applications.



1.4.2 Add items to the Home screen

From the All application screen, long press the desired item, and then touch **Pin to Start**. It will jump to the Home screen automatically and allows you to drag it to your preferred location.

1.4.3 Remove an app icon on Home screen

Long press the item to activate **Move** mode, Touch  icon to remove it from Home screen.

1.4.4 Get more applications

Touch the **Store** icon  to enter the store screen, type an application's name in the search bar, then touch  to find it.

Note: In this Windows phone, the only way to install an application is to buy or get the free ones from the Store application.

1.4.5 Uninstall apps

Swipe the main Home screen left to enter the all Apps list, long press the application icon you want to uninstall, then touch **Uninstall** to pop up the “Uninstall this App” window, select **yes** to uninstall the app.

1.5 Basic operation

1.5.1 Power on your device

Long press the **Power** key until the tablet powers on. It will take a few seconds before the screen lights up.

1.5.2 Power off your device

- Long press the **Power** key for about 2 seconds until half of the lock screen appears, slide down to power off the device, or slide up to cancel.
- Long press the Power key for about 10 seconds force to power off your device.

1.5.3 Stand-by mode

Press the Power key once to shut down the screen and to enter stand-by mode.

1.5.4 Connecting to a computer via USB

After connecting your device to a computer via USB, you can transfer files between your device and the computer.


Note: Use a USB 2.0 version or higher to connect the devices.

1.5.5 Change your background

You can change your background from the **Settings** > **Personalisation** > **Start** > **Background**, select a folder to browse an image, then touch ✓ to set background.

1.5.6 Wi-Fi


To turn Wi-Fi on and connect to a wireless network:

- Touch the Wi-Fi icon on the Quick settings bar to turn Wi-Fi on/off.
- Select **Settings** > **Network & wireless** > **Wi-Fi**, slide  under the Wi-Fi networking to turn Wi-Fi on/off.
- Select a Wi-Fi network to connect. If the network you selected is secured, you are required to enter a password or other credentials (You may need to contact the network operator for details). When finished, touch **Done**.

Tip: To extend the battery life, turn Wi-Fi off when you're not using it.






1.5.7 Email

You can also set up external POP3, IMAP, EXCHANGE and Microsoft email accounts on your device.

- Touch  on the Home screen, then touch **+ Add account**;
- Select an email account and enter the email address of the account.
- Tap **Sign in** and follow all the instructions to finish the email setup.

To create and send emails

Touch **+** icon after entering the email screen.

- Enter recipient(s) email address(es) in the To field.
- If necessary, touch  **> Show Cc&Bcc** to add a copy or a blind copy of the message.
- Enter the subject and the content of the message.
- Touch  to add an attachment, or touch  **> Insert** to add table, pictures, or link.
- Finally, touch  to send .
- If you do not want to send the email right away, touch , the mail will be saved as a draft in your **Draft** folder.

1.5.8 Cortana

Cortana is your personal digital assistant, which records your plans, interests and reminders on your device. Let her send text messages to your friends, sing a song or tell you a joke.


- Touch the icon  on Home screen, to enter Cortana screen.

Note: Cortana is only available in a specific country / region, and some of the Cortana functions may not be available at anytime, anywhere. If Cortana is not available or has been closed, you can still use the search function.

1.5.9 Surf the web


Use **Microsoft Edge**  to surf the web easily and securely. To access this function, touch  on the Home screen to enter the browser screen.

To go to a web page

On the browser screen, touch the URL box at the bottom, enter the address of the web page, then touch  to confirm.


Note: You can use the **Microsoft Edge** application to open the PDF format files directly without installing a PDF reader application.

1.5.10 Double tap to lock screen

Note: To activate this function, slide the switch  to **on** under “Double-tap the navigation bar to turn off the screen” in **Lock screen** settings menu.

- When this feature is enabled in the **Lock screen** settings, double tap the navigation bar, the tablet screen will lock it.
- When this feature is enabled in the **Lock screen** settings and the tablet is in stand-by mode, press Power key to wake it up.

1.5.11 Set up voicemail

- Long press  to call voicemail.
- Follow the prompts to set up your voicemail account.

2 Settings

2.1 System

2.1.1 Display

Touch **Settings > System > Display**, you can see the items:

- **Brightness level** Adjust your screen to a comfortable brightness.
- **Rotation lock** Turn on/off the function of screen rotation.

2.1.3 Notification & actions

Choose your quick actions and set settings of **notifications** that will show on your device,

2.1.4 Phone

Touch **Settings > System > Phone** to set your voicemail number or phone calls settings.

2.1.5 Messaging

Touch **Settings > System > Messaging** to turn on/off the function that sync messages between devices and set **SMS/MMS** settings.

2.1.6 Battery saver

Touch **Settings > System > Battery saver** to overview the battery level remaining, and set battery saver settings to extend battery life by limiting background activity and push notifications.

2.1.7 Offline maps

Touch **Setting > System> Offline maps** download maps to search for places and get directions even when you're not connected to the internet.

2.1.8 Storage

Touch **Settings > System > Storage** to view the memory usage status, and set the locations that your apps, downloads, music, pictures and videos are saved by default.

2.1.9 About

Touch **Setting > System> About** to get more information about your windows phone, or reset your phone here.

2.2 Personalisation

Touch **Settings > Personalisation** to set some personal settings such as start, colours, sounds and lock screen.

2.2.1 Start

Touch **Settings > Personalisation > Start** to set background and style.

2.2.2 Colours

Touch **Settings > Personalisation > Colours** to set display mode and the colour of navigation bar.

2.2.3 Sounds

Touch **Settings > Personalisation > Sounds** to set Ringtone or the sounds for some operations.

2.2.4 Lock screen

Touch **Settings > Personalisation > Lock screen** to set the settings about lock screen.

2.3 Accounts

Use the settings to add, remove, and manage your Email and other supported accounts. You can also use these settings to control how and whether all applications send, receive, and synchronise data on their own schedules, and whether all applications can synchronise user data automatically.

2.4 Time & language

2.4.1 Date & time

Touch **Settings > Time & language > Date & time**, to set date, time and format.

Note: When the Automatic option is deactivated, you can manually set the date and time.

2.4.2 Language

Touch **Settings > Time & language > Language** to set your system display language.

2.4.3 Region

Touch **Settings > Time & language > Region** to set Country/region and regional format.

2.4.4 Keyboard

Touch **Settings > Time & language > Keyboard** to add keyboards or set more keyboard settings.

2.4.5 Speech

Touch **Settings > Time & language > Speech** to set the speech language, text to speech and etc.

3 Phone calls

3.1 Placing a call

You can place a call using Phone. Touch the Application tab from the Home screen and select .

- Touch to call the previewed number.



- Touch to send message to the previewed number or to call the previewed number.



- Slide to access the History, Speed dial and Dial pad.

- Long press to access voicemail.



- Display the suggested number(s).

- Touch to display/hide the keyboard.

- Enter a desired number on the dial pad, then touch  to place a call.
- Select a contact from **People** or **History** then touch the contact/phone number to place a call.
- To hang up a call, touch  to end the call.


3.2 Create a new contact

From the History list, touch  to enter the "UNKNOWN CONTACT" screen, then touch  >  to save the entered number and create a new contact in the **People** application.

 
3.3 International call

To dial an international call, long press  to enter “+”.





3.4 Emergency call

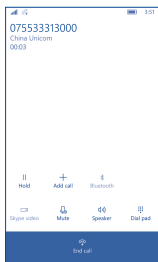If your phone has network coverage, dial emergency number and touch  to make an emergency call. This works even without a SIM card and without typing the PIN code.

3.5 Answering or rejecting a call




When you receive a call, see the options below:

 
- Touch  icon to answer it;
- Touch  icon to ignore it;
- Touch  icon upwards to reject the call by sending a preset message.
- Touch  icon or press the **Volume down** key/**Power** key to mute the ringtone of an incoming call.

4 Text messaging

Use the messaging feature to send and receive text (SMS) and multimedia (MMS) messages.

4.1 Writing a message

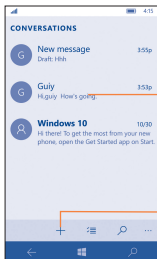


On the message list screen, touch the new message icon  to write text/multimedia messages.



- Touch to view the whole message thread.
- Long press to activate delete mode.

- Touch to create a new message.

4.2 Sending a text message

Enter the mobile phone number of the recipient in the **To** bar or touch  to add recipients and touch the Send message bar to enter the text of the message. Touch the  icon to insert emotions or icons. When finished, touch  to send the text message.



 
An SMS of more than 160 characters will be charged as several SMS. Specific letters (accent) will also increase the size of the SMS. This may cause multiple SMS to be sent to your recipient.

4.3 Sending a multimedia message

MMS enables you to send video clips, images, photos, animations, and sounds to other compatible phones.


An SMS will be converted to MMS automatically when media files (image, video, audio, etc.) are attached.

4.4 Deleting message threads

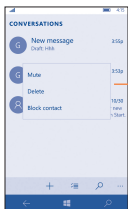

- To delete an entire message thread, long press a message from Messaging screen until it turns to gray, then touch Delete to delete the dialogue.

 4.5 Deleting individual message threads

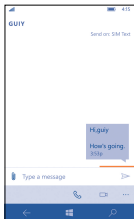

- To delete individual messages in a message thread, open message thread, until the message highlighted, then touch Delete to delete the message.

Safety information

We recommend that you read this chapter carefully before using your device. The manufacturer disclaims any liability for damage, which may result as a consequence of improper use or use contrary to the instructions contained herein.

• TRAFFIC SAFETY

Given that studies show that using a device while driving a vehicle constitutes a real risk, even when the hands-free kit is used (car kit, headset...), drivers are requested to refrain from using their device when the vehicle is not parked.

When driving, do not use your device or headphone to listen to music or to the radio. Using a headphone can be dangerous and forbidden in some areas. When switched on, your device emits electromagnetic waves that can interfere with the vehicle's electronic systems such as ABS anti-lock brakes or airbags. To ensure that there is no problem:

- Do not place your device on top of the dashboard or within an airbag deployment area,
- Check with your car dealer or the car manufacturer to make sure that the dashboard is adequately shielded from device RF energy.

• CONDITIONS OF USE

You are advised to switch off the device from time to time to optimise its performance.

Switch the device off before boarding an aircraft.

Switch the device off when you are in healthcare facilities, except in designated areas. As with many other types of equipment now in regular use, these devices can interfere with other electrical or electronic devices, or equipment using radio frequencies.

Switch the device off when you are near gas or flammable liquids. Strictly obey all signs and instructions posted in a fuel depot, petrol station, or chemical plant, or in any potentially explosive atmosphere.

When the device is switched on, it should be kept at least 15 cm from any medical device such as a pacemaker, a hearing aid or insulin pump, etc. In particular when using the device, you should hold it against the ear on the opposite side to the device, if any.

To avoid hearing impairment, move the device away from your ear while using the "hands-free" mode because the amplified volume might cause hearing damage.

Do not let children use the device and/or play with the device and accessories without supervision.

Please note that your device is a unibody device, the back cover and battery are not removable. Do not attempt to disassemble your device. If you disassemble your device the warranty will not apply. Also disassembling the device may damage the battery, and may cause leakage of substances that could create an allergic reaction.

Always handle your device with care and keep it in a clean and dust-free place.

Do not allow your device to be exposed to adverse weather or environmental conditions (moisture, humidity, rain, infiltration of liquids, dust, sea air, etc.). The manufacturer's recommended operating temperature range is -0°C to $+45^{\circ}\text{C}$.

At over 45°C the legibility of the device's display may be impaired, though this is temporary and not serious.

Do not open, dismantle or attempt to repair your device yourself.

Do not drop, throw or bend your device.

Do not use the device if the glass made screen is damaged, cracked or broken to avoid any injury.

Do not paint it.

Use only battery chargers and accessories which are recommended by TCL Communication Ltd. and its affiliates and are compatible with your device model. TCL Communication Ltd. and its affiliates disclaim any liability for damage caused by the use of other chargers or accessories.

Remember to make back-up copies or keep a written record of all important information stored in your device.

Some people may suffer epileptic seizures or blackouts when exposed to flashing lights, or when playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your device or enabling a flashing-lights feature on your device.

Parents should monitor their children's use of video games or other features that incorporate flashing lights on the device. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a flashing-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after playing, stop the game and see a doctor.

When you play games on your device, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow the instructions to avoid problems such as tendinitis, carpal tunnel syndrome, or other musculoskeletal disorders.

• **PRIVACY**

Please note that you must respect the laws and regulations in force in your jurisdiction or other jurisdiction(s) where you will use your device regarding taking photographs and recording sounds with your device. Pursuant to such laws and regulations, it may be strictly forbidden to take photographs and/or to record the voices of other people or any of their personal attributes, and duplicate or distribute them, as this may be considered to be an invasion of privacy. It is the user's sole responsibility to ensure that prior authorization be obtained, if necessary, in order to record private or confidential conversations or take a photograph of another person; the manufacturer, the seller or vendor of your device (including the operator) disclaim any liability which may result from the improper use of the device.

Please note by using the device some of your personal data may be shared with the main device. It is under your own responsibility to protect your own personal data, not to share with it with any unauthorised devices or third party devices connected to yours. For products with Wi-Fi features, only connect to trusted Wi-Fi networks. Also when using your product as a hotspot (where available), use network security. These precautions will help prevent unauthorised access to your device. Your product can store personal information in various locations including a SIM card, memory card, and built-in memory. Be sure to remove or clear all personal information before you recycle, return, or give away your product. Choose your apps and updates carefully, and install from trusted sources only. Some apps can impact your product's performance and/or have access to private information including account details, call data, location details and network resources.

Note that any data shared with TCL Communication Ltd. is stored in accordance with applicable data protection legislation. For these purposes TCL Communication Ltd. implements and maintains appropriate technical and organisational measures to protect all personal data, for example against unauthorised or unlawful processing and accidental loss or destruction of or damage to such personal data whereby the measures shall provide a level of security that is appropriate having regard to

- (i) the technical possibilities available,
- (ii) the costs for implementing the measures,
- (iii) the risks involved with the processing of the personal data, and
- (iv) the sensitivity of the personal data processed.

You can access, review and edit your personal information at any time by logging into your user account, visiting your user profile or by contacting us directly. Should you require us to edit or delete your personal data, we may ask you to provide us with evidence of your identity before we can act on your request.

• **BATTERY**

Please note your tablet is a unibody device, the back cover and battery are not removable. Observe the following precautions for battery use:

- Do not attempt to open the back cover and replace the inner rechargeable Li-polymer battery. Please contact the dealer to replace it.
- Do not attempt to eject, replace and open battery.
- Do not punctuate the back cover of your device.
- Do not burn or dispose of your device in household rubbish or store it at temperature above 50°C.
- Dispose of used batteries according to the instructions. Risk of explosion if battery replaced by an incorrect type.



This symbol on your device, the battery and the accessories means that these products must be taken to collection points at the end of their life:

- Municipal waste disposal centres with specific bins for these items of equipment.

- Collection bins at points of sale.

They will then be recycled, preventing substances being disposed of in the environment, so that their components can be reused.

In European Union countries:

These collection points are accessible free of charge.

All products with this sign must be brought to these collection points.

In non-European Union jurisdictions:

Items of equipment with this symbol are not to be thrown into ordinary bins if your jurisdiction or your region has suitable recycling and collection facilities; instead they are to be taken to collection points for them to be recycled.

• CHARGERS

Mains powered chargers will operate within the temperature range of: 0°C to 40°C.

The chargers designed for your device meet with the standard for safety of information technology equipment and office equipment use. They are also compliant to the eco design directive 2009/125/EC. Due to different applicable electrical specifications, a charger you purchased in one jurisdiction may not work in another jurisdiction. They should be used for this purpose only.

The charger shall be installed near the equipment and shall be easily accessible.

• RADIO WAVES

THIS DEVICE MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES

Your device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves (radio frequency electromagnetic fields) recommended by international guidelines. The guidelines were developed by an independent scientific organization (ICNIRP) and include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The radio wave exposure guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg.

Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The highest SAR values under the ICNIRP guidelines for this device model are:

Maximum SAR for this model and conditions under which it was recorded:	
9023X (Body-worn)	1.44 W/kg

During use, the actual SAR values for this device are usually well below the values stated above. This is because, for purposes of system efficiency and to minimize interference on the network, the operating power of your device is automatically decreased when full power is not needed. The lower the power output of the device, the lower its SAR value.

Body-worn SAR testing has been carried out at a separation distance of 15 mm. To meet RF exposure guidelines during body-worn operation, the device should be positioned at least this distance away from the body.

If you are not using an approved accessory ensure that whatever product is used is free of any metal and that it positions the device the indicated distance away from the body.

Organizations such as the World Health Organization and the US Food and Drug Administration have suggested that if people are concerned and want to reduce their exposure they could use a hands-free accessory to keep the wireless device away from the head or body during use, or reduce the amount of time spent on the device.

• LICENCES



microSD Logo is a trademark.



The Bluetooth word mark and logos are owned by the Bluetooth SIG,

Inc. and any use of such marks by TCL Communication Ltd. and its affiliates is under license. Other trademarks and trade names are those of their respective owners.

9023X Bluetooth Declaration ID D028639



The Wi-Fi Logo is a certification mark of the Wi-Fi Alliance.

Your device uses non-harmonized frequency and is intended for use in all European countries.

The WLAN can be operated in the EU without restriction indoors, but cannot be operated outdoors in France.

Google, the Google logo, Android, the Android logo, Google Search™, Google Maps™, Gmail™, YouTube, Google Play Store, Google Latitude™ and Hangouts™ are trademarks of Google Inc.

The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License (the text will show when you touch and hold **Google legal** in **Settings > About Tablet > Legal information**) ⁽¹⁾.

⁽¹⁾ It may not be available according to the countries.

General information

- **Internet address:** www.alcatelonetouch.com
- **Hotline Number:** see "TCL Communication Services" leaflet or go to our website.

On our website, you will find our FAQ (Frequently Asked Questions) section. You can also contact us by e-mail to ask any questions you may have.

An electronic version of this user guide is available in English and other languages according to availability on our server:

www.alcatelonetouch.com

Your device is a transceiver that operates on Wi-Fi with 2.4GHz, Bluetooth with 2.4GHz.

This equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC, 2011/65/EU and 2009/125/EC. The entire copy of the Declaration of Conformity for your device can be obtained through our website:
www.alcatelonetouch.com.

C€0560

Company Address:

Room 1910-12A, Tower 3, China HK City, 33 Canton Road,
Tsimshatsui, Kowloon, Hong Kong

Disclaimer

There may be certain differences between the user manual description and the device's operation, depending on the software release of your device or specific operator services.

TCL Communication shall not be held legally responsible for such differences, if any, nor for their potential consequences, which responsibility shall be borne by the operator exclusively.

This device may contain materials, including applications and software in executable or source code form, which is submitted by third parties for inclusion in this device ("Third Party Materials").

All third party materials in this device are provided "as is", without warranty of any kind, whether express or implied, including the implied warranties of merchantability, fitness for a particular purpose or use/third party application, interoperability with other materials or applications of the purchaser and non-infringement of copyright. The purchaser undertakes that TCL Communication has complied with all quality obligations incumbent upon it as a manufacturer of mobile devices and devices in complying with Intellectual Property rights. TCL Communication will at no stage be responsible for the inability or failure of the Third Party Materials to operate on this device or in interaction with any other devices of the purchaser. To the maximum extent permitted by law, TCL Communication disclaims all liability for any claims, demands, suits or actions, and more specifically – but not limited to – tort law actions, under any theory of liability, arising out of the use, by whatever means, or attempts to use, such Third Party Materials. Moreover, the present Third Party Materials, which are provided free of charge by TCL Communication, may be subject to paid updates and upgrades in the future; TCL Communication waives any responsibility regarding such additional costs, which shall be borne exclusively by the purchaser.

The availability of the applications may vary depending on the countries and the operators where the device is used; in no event shall the list of possible applications and software provided with the devices be considered as an undertaking from TCL Communication; it shall remain merely as information for the purchaser. Therefore, TCL Communication shall not be held responsible for the lack of availability of one or more applications wished for by the purchaser, as its availability depends on the country and the operator of the purchaser. TCL Communication reserves the right at any time to add or remove Third Party Materials from its devices without prior notice; in no event shall TCL Communication be held responsible by the purchaser for any consequences that such removal may have on the purchaser regarding the use or attempt to use such applications and Third Party Materials.

Accessory

- Charger, 5.0V/2.0A
- USB cable, 5pins micro-USB

Warranty

Your device is warranted against any defect or malfunctioning which may occur in conditions of normal use during the warranty period of twelve (12) months (1) from the date of purchase as shown on your original invoice.

Batteries (2) and accessories sold with your device are also warranted against any defect which may occur during the first six (6) months (1) from the date of purchase as shown on your original invoice.

In case of any defect of your device which prevents you from normal use thereof, you must immediately inform your vendor and present your device with your proof of purchase.

- (1) The warranty period may vary depending on your country.
- (2) The life of a rechargeable mobile device battery in terms of conversation time standby time, and total service life, will depend on the conditions of use and network configuration. Batteries being considered expendable supplies, the specifications state that you should obtain optimal performance for your device during the first six months after purchase and for approximately 200 more recharges.

If the defect is confirmed, your device or part thereof will be either replaced or repaired, as appropriate. Repaired device and accessories are entitled to a 30 days warranty for the same defect. Repair or replacement may be carried out using reconditioned components offering equivalent functionality.

This warranty covers the cost of parts and labour but excludes any other costs.

This warranty shall not apply to defects to your device and/or accessory due to (without any limitation):

- 1) Non-compliance with the instructions for use or installation, or with technical and safety standards applicable in the geographical area where your device is used;
- 2) Connection to any equipment not supplied or not recommended by TCL Communication Ltd.;

- 3) Modification or repair performed by individuals not authorised by TCL Communication Ltd. or its affiliates or your vendor;
- 4) Modification, adjustment or alteration of software or hardware performed by individuals not authorized by TCL Communication Ltd. ;
- 5) Inclement weather, lightning, fire, humidity, infiltration of liquids or foods, chemical products, download of files, crash, high voltage, corrosion, oxidation...

Your device will not be repaired in case labels or serial numbers (IMEI/SN) have been removed or altered.

There are no express warranties, whether written, oral or implied, other than this printed limited warranty or the mandatory warranty provided by your country or jurisdiction.

In no event shall TCL Communication Ltd. or any of its affiliates be liable for indirect, incidental or consequential damages of any nature whatsoever, including but not limited commercial or financial loss or damage, loss of data or loss of image to the full extent those damages can be disclaimed by law.

Some countries/states do not allow the exclusion or limitation of indirect, incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

ALCATEL is a trademark of Alcatel-Lucent and is used under license by TCL Communication Ltd..

© Copyright 2015 TCL Communication Ltd. All rights reserved

TCL Communication Ltd. reserves the right to alter material or technical specification without prior notice.