

# **R2 LTE**

## **USER MANUAL**

FCC ID: YHLBLUR2


# Table of Contents


Safety Information ..... 5


FCC/SAR Information ..... 7



Introduction/ Navigation Bar..... 10

Notifications Bar.....11

 Call Functions..... 14

 Contacts..... 16

 Messaging ..... 19

 Bluetooth  Wi-Fi..... 21

|  |                     |    |
|--|---------------------|----|
|    | Opera Browser ..... | 24 |
|    | Gmail.....          | 26 |
|    | Play Store .....    | 28 |
|    | Camera .....        | 30 |
|    | Next Radio .....    | 32 |
|    | Sound Recorder..... | 34 |
|   | Google Photos.....  | 36 |
|  | Play Music .....    | 38 |

|  |                      |    |
|--|----------------------|----|
|    | File Manager .....   | 41 |
|    | Calendar.....        | 42 |
|    | Clock .....          | 44 |
|    | Settings.....        | 46 |
|    | USB Storage.....     | 52 |
|   | Troubleshooting..... | 53 |
|  | CE Information ..... | 56 |

# Safety Information

Please carefully read the terms below:

## **Use Safely**

Do not use the phone in situations where it might cause danger.

## **Transportation Safety**

Please observe all transportation laws and regulations.

Please drive with both hands on the wheel.

**PLEASE DRIVE RESPONSIBLY - DO NOT TEXT AND DRIVE**

## **Hospital Safety**

Please follow hospital rules and limitations.

Please turn off your mobile phone when near medical instruments.

## **Airport Safety**

Remember to follow all airport and flight safety regulations.

## **Chemical Warning**

Do not use your mobile phone around fuels or chemicals.

## **Temperature Warning**

Do not subject your phone to extreme temperature conditions.

## **Water Hazard**

Your phone is not waterproof. Keep your phone away from water or liquid to avoid damage

## **Emergency Calls**

Make sure your mobile phone is switched on and in a service area. In home screen, tap the phone key and dial the emergency number.

## **Accessories and Batteries**

Use only Blu authorized batteries and accessories. Avoid using charger around liquids. Unplug if exposed.

## **Information Backup**

Remember to keep a written record of important information.

## **Battery Safety and Precautions**

> For better performance and longer battery life, it is recommended that you charge the battery fully before using the mobile phone for the first time.

> The optimum performance of a new battery is typically achieved after two or three complete charge cycles. **Note:** Keep in mind that continuous overcharging will affect long-term battery life.

- > While charging, keep the mobile phone out the reach of children.
- > Store the battery in a cool and dry place away from direct sunlight and water.
- > Do not expose batteries to extreme temperatures (below -8°C (18°F) or above 43°C (110°F).
- > STOP using battery if it produces odor, cracks, leaks, overheats, distorts or has other type of damage.

The highest SAR value for the model phone as reported to the FCC when tested for use at the ear is 0.87W/kg and when worn on the body, as described in this user guide, is 1.07 W/kg (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements.)

While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of [www.fcc.gov/oet/ea/fccid](http://www.fcc.gov/oet/ea/fccid) after searching on FCC ID: YHLBLUR2

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and positions the handset a minimum of 1.5cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone to your ear, position the handset a minimum of 1.5 cm from your body when the phone is switched on.

## R2 LTE

## ELECTRICAL SPECIFICATIONS / ESPECIFICACIONES ELÉCTRICAS / ESPECIFICAÇÕES ELÉTRICAS / CARACTERISTIQUES ÉLECTRIQUES

| BATTERY   BATERÍA   BATERIA   BATTERIE          |   |  |  |
|---|---|--|--|
| CAPACITY<br>CAPACIDAD<br>CAPACIDADE<br>CAPACITÉ | VOLTAGE<br>VOLTAJE<br>VOLTAGEM<br>TENSION | BATTERY TYPE<br>TIPO DE BATERÍA<br>TIPO DE BATERIA<br>TYPE DE BATTERIE | POWER<br>POTENCIA<br>POTÊNCIA<br>PUISSANCE |
| 3000mAh (min)                                   | 3.8 V                                     | Lithium-Polymer  | 11.4 Wh                                    |

| CHARGER   CARGADOR   CARREGADOR   CHARGEUR |   |   |  |
|--|---|---|--|
|  | VOLTAGE<br>VOLTAJE<br>VOLTAGEM<br>TENSION | CURRENT<br>CORRIENTE<br>CORRENTE<br>COURANT | FREQUENCY<br>FRECUENCIA<br>FREQUÊNCIA<br>FRÉQUENCE |
| INPUT<br>ENTRADA<br>ENTRÉE                 | 100V-240V                                 | 0.3 A                                       | 50Hz/60Hz  |
| OUTPUT<br>SALIDA<br>SAÍDA<br>SORTIE        | 5.0 V                                     | 1.5 A                                       |  |

| TELEPHONE   TELÉFONO   TELEFONE   TÉLÉPHONE            |       |
|--|-------|
| CONSUMPTION<br>ALIMENTACIÓN<br>CONSUMO<br>CONSOMMATION | 3.8 V |



## Hazardous Waste – Battery Disposal

**Warning:** Do not throw away batteries with uncontrolled daily waste.

The marking in this manual indicates that the batteries in this product should not be disposed with household trash at the end of its working life. If the batteries are not disposed of properly, the substances included can cause harm to human health and the environment. Please follow environmental laws and guidelines for proper waste disposal.



## Cleaning and Maintenance

- > Avoid using the handset and accessories in excessively moist areas to avoid malfunction.
- > Use a soft, dry cloth to clean the handset, battery and charger.
- > Do not use alcohol, thinner, benzene or any other solvent to clean the handset.

# Introduction

## Power On and Off

---

**On** - Please ensure the SIM card has been inserted properly into the phone. Long press the Power key to switch the phone on.

**Off** - In standby mode, long press on Power key until an options menu appears. Select Power Off in the menu to power off the phone.

## Navigation Bar

The navigation bar is a dedicated area that displays device navigation buttons. These system buttons allow the user to control the phone seamlessly.



### Back

---

Returns to the previous screen; Closes the keyboard, any open program, or any menu option.



### Home

 
---

The home button pauses any current action and returns to the home screen.

---

### Recent Apps

---

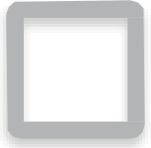

Opens a list of recently opened applications that allows you to switch conveniently between them. This option can also close any open applications by swiping to the side.


---

## Notifications Bar

 The notification bar is located on the top of the screen, which contains useful and important information regarding your phone, and the applications that are installed.



On the notification bar, several icons will appear such as signal bar, time, battery indicator, data indicator, Bluetooth and Wi-Fi. You may slide the notification bar down with your finger to display any pending notifications or actions.

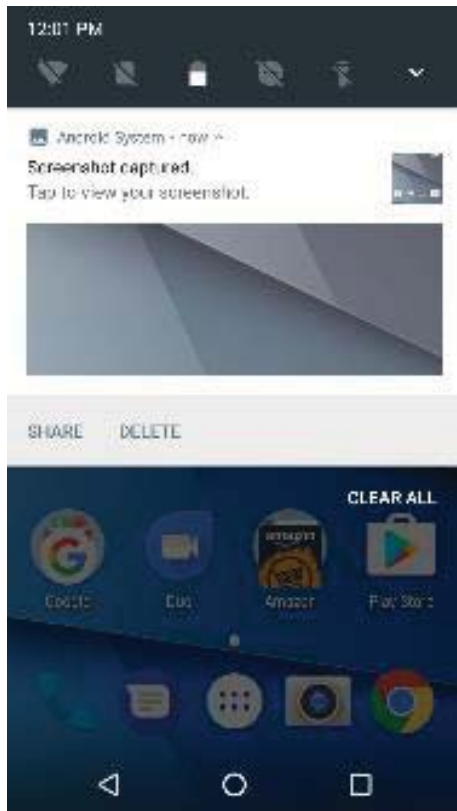


**Quick Settings  
Menu Button**

**Pending  
Notifications and  
Applications**

**Quick  
Notification  
Settings**

 **Clear  
Notification  
Button**

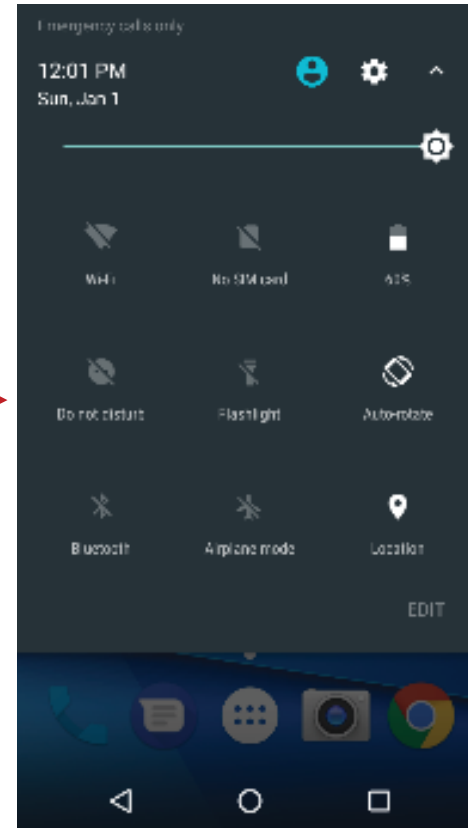

## **Notification Settings**

---

The notification settings panel provides shortcuts to different phone settings for quick access. Click on any of the shortcut notification icons to power on or off.

### **To clear notifications:**

» Drag down the notification bar and click the clear notification icon on the lower right hand part of the notification screen (3 horizontal lines as shown in the figure).

### **To access the quick notification settings menu:**

» Drag down the notification bar completely. Some settings include Wi-Fi, Bluetooth, Location, Airplane mode, and Flashlight.



# Call Functions

At the dialing interface, enter the phone number and then click the dial key.

## **Placing a Call**

---

» Click the Keypad button to open the dial keyboard. At the dial keyboard, enter the phone number you wish to dial.

You may also press and hold the 0 key to add a (+) sign when adding an international dialing prefix.

» Click the dial button to make the call.

If dialing an extension, you may click on the keypad button to open the keypad interface and enter the number of the extension.

» Click the end button to end the call.

## **Call Options**

---

 
 
There are different options that can be used in the call log and dialing interface. You may press the menu key while in the general dialing interface and adjust call settings, enter call history, clear your frequently dialed numbers, and add a new contact.

## **Call Logs**

---

Every telephone number called and received will be saved in the phones call log. All recently called numbers in the call log can be dialed by clicking on the contact tile in the speed dial tab, or by clicking on

the contact and selecting call back in the recent tab. When the number appears on the list, click it to view details. To delete a call from the call history, press the menu key and select delete. You may remove one or multiple calls.

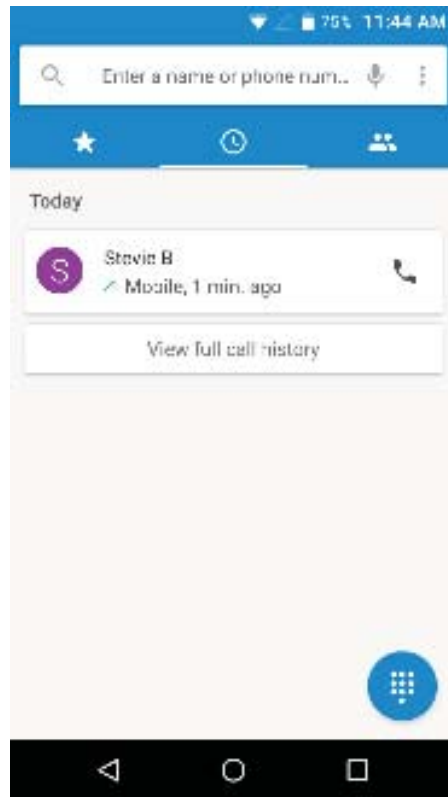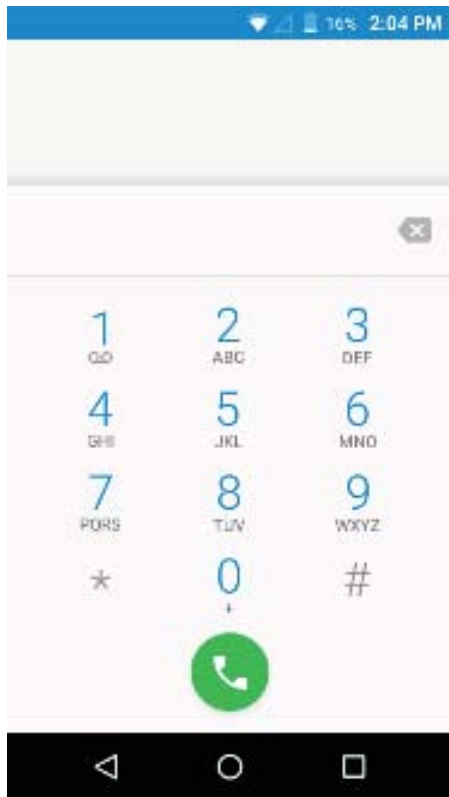

**To maintain organized, the  
call log has Favorites,  
Recent Calls, and Contact  
set up in quick tabs**



# Contacts

## Open Contacts

 
---

To access » Click on the applications menu then on the Contacts icon.

» The default display is the phone contacts and SIM card contacts.

» Contacts are organized alphabetically by default.

Click the menu button to enter the contact search interface or scroll to search a contact. Any numbers or letters associated with any of the contacts saved in the list will be shown in the search results.

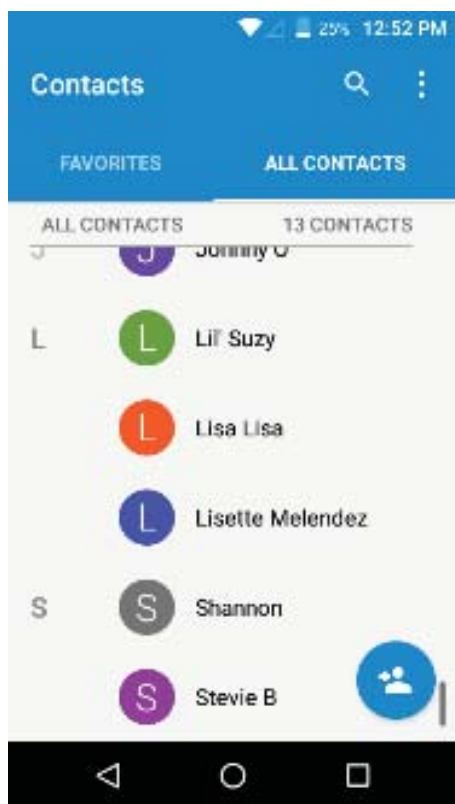

Search

**Note: Saving your contacts to your Google account facilitates both storage and synchronization with multiple entries across different handsets and tablets. When synchronizing your Gmail with a new phone, all your stored Google contacts are automatically synced with the new phone**

 
 
Add Contact



## Add New Contact

---

- » Click the add contact icon to add contact icon in the bottom right.
- » You may save your contacts to either your Google account, phone or SIM card.
- » Enter the contact information that include adding a picture, name, telephone number, group, address, and email among other options.
- » Click to save contact.

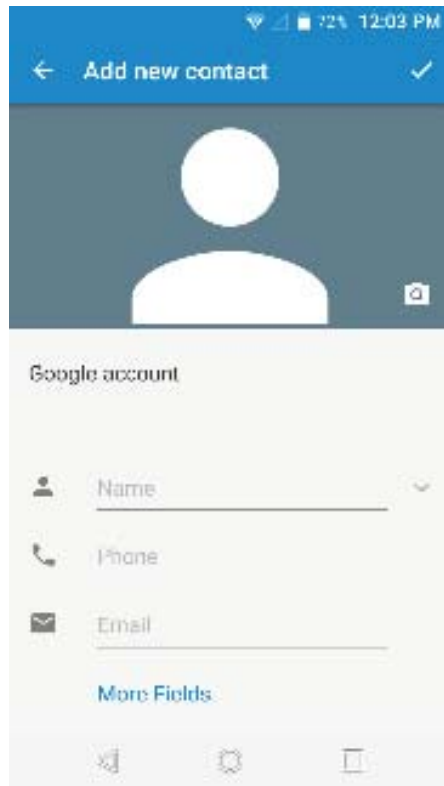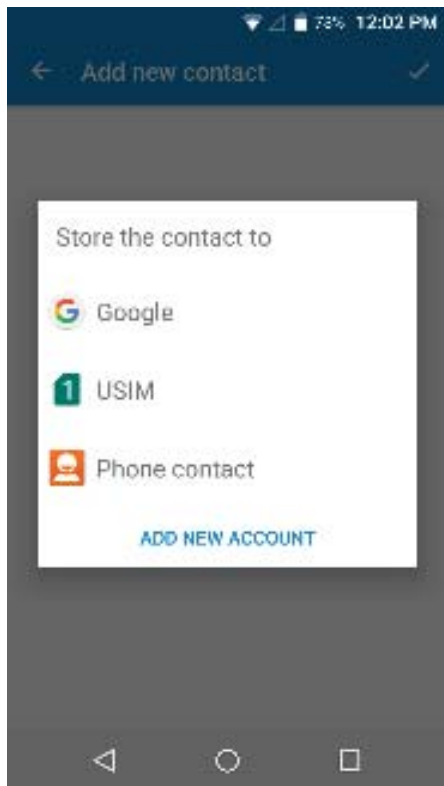


**Contact  
information field**

**Note:** You may add individual contacts to any of the home screens by entering the contacts menu, clicking on the specific contact, pressing menu, and then selecting the 'Place on home screen' option. You can also share contacts via MMS, Gmail, Bluetooth, and other share options within the same settings menu.

## Delete Contact

 ---

- » Click on the Contacts icon to enter the phonebook.
- » Click and hold on the contact that you wish to delete.  
(Once selected, you may also scroll and select other contact(s) you wish to delete)
- » Click on the contacts menu and select Delete.

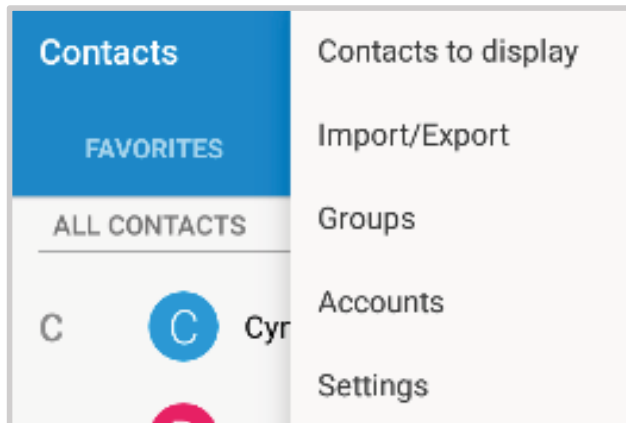

## **Import / Export Contacts**

---

The phone allows you to import and export contacts to synchronize information between different storage types that include the SIM card, Gmail account and your phone.

### **To import or export contacts:**

- » Click the Contacts icon to enter the phonebook.
- » Click the menu button and select Import / Export
- » Select the source you want to copy the contacts. Once selected click next and select the destination where you want the contact to be copied to and then select the desired contacts to be copied.



 
## **Messaging**

You may use this function to exchange text messages and multimedia messages with your family and friends. The messages to and from the same contact or phone number will be saved into a single conversation so you may see the entire message history conveniently.

### **Open Messaging**

---

To access » Click on the Application Menu then on the Messaging icon.

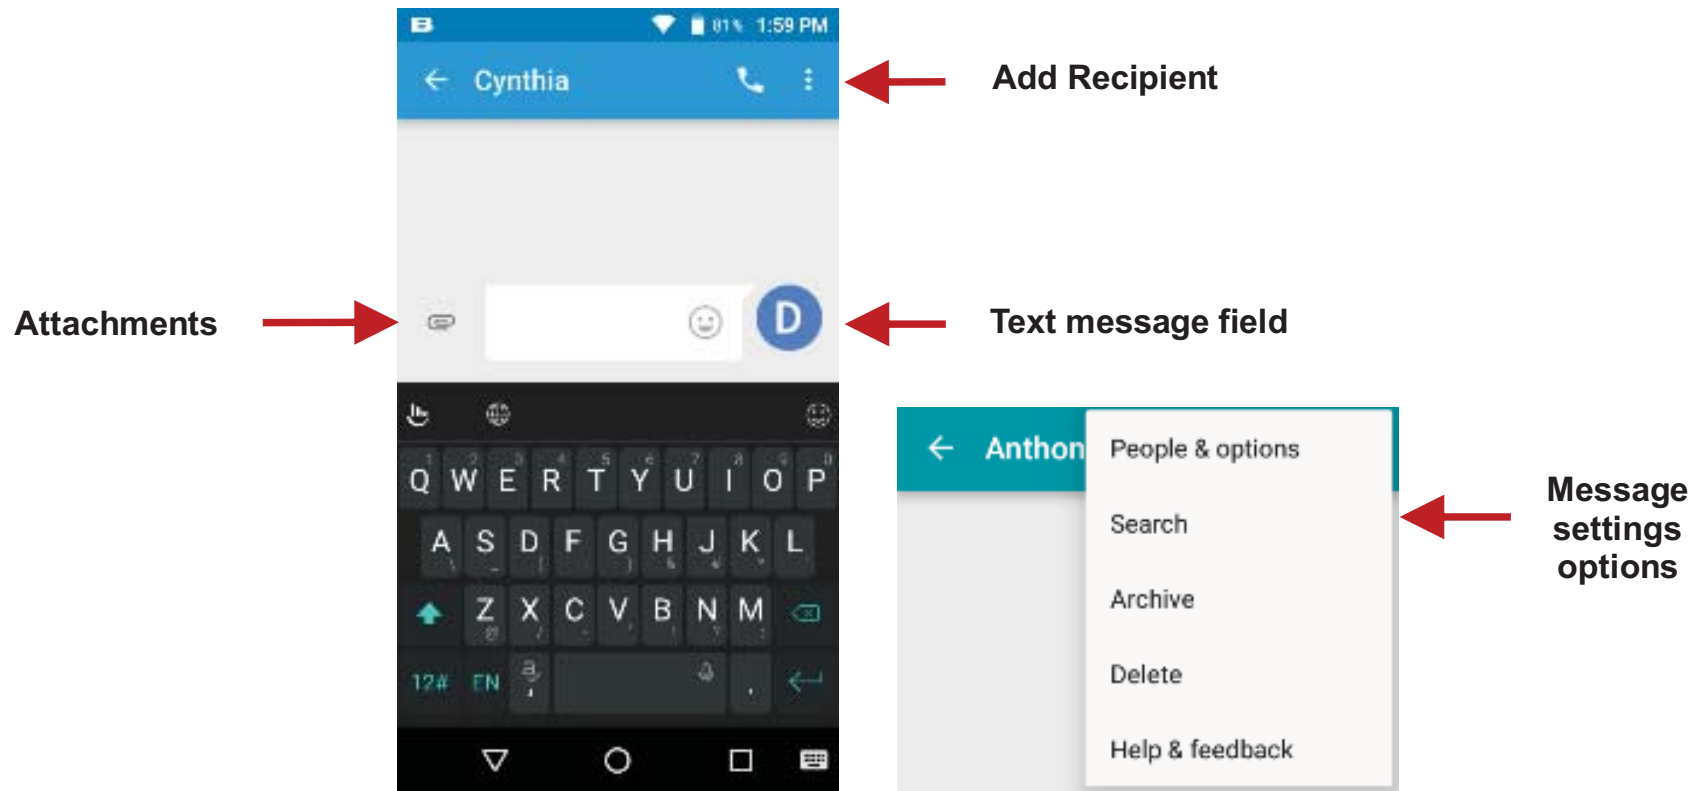

## **Sending an SMS**

### **Application Menu > Messaging > New message**

- » Click the contact icon to enter text message recipient
- » Compose Text Message and click Send.

# Bluetooth & Wi-Fi

Bluetooth is a short-range wireless communications technology that devices can use to exchange information and connect to different types of devices that include headsets and other devices.



 
## **Power on Bluetooth**

---

To access » Click on the **Settings** icon then on **Bluetooth** and select to power on Bluetooth

» The Bluetooth will then start to scan for all devices within its range and will start display all available devices.

» When the scan is complete, all the devices found will display in a list under available devices. Once the device has been identified, click on it to pair.

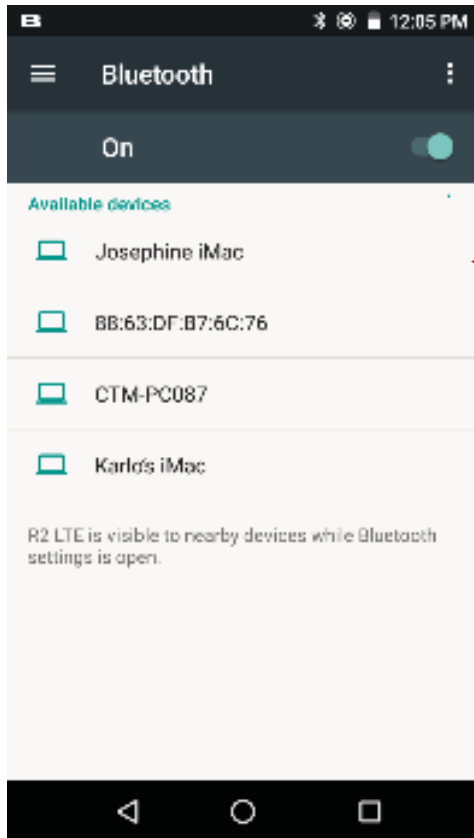

List of available  
Bluetooth devices

Note: The maximum  
detecting time of the  
phone is 2 minutes

## Power on Wi-Fi

---

 
To access » Click on the **Settings** icon then on **Wi-Fi** and select to power on Wi-Fi

» Click on the desired Wi-Fi network to be connected.

**Note:** Unsecured networks can be connected to directly - secured networks require a password or

credentials prior to connection.

To display advanced options, click on the available option tab.

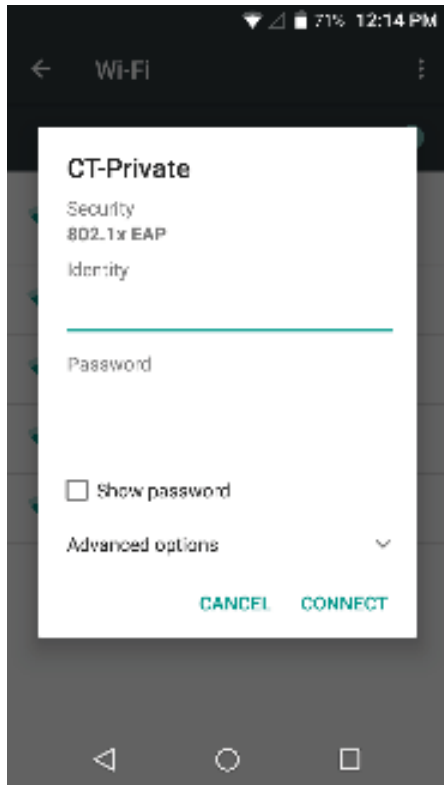

**The network connection screen displays the password field and also displays advanced connection options**

# Opera Browser

Opera is the fast and secure way to navigate with your Android phone.

## **Quick Access Tab**

---

### **History**

Displays your recent browsing history

### **Speed Dial**

Displays your favorite sites, bookmarks, and saved pages as a gallery of images. Add folders or reorganize your Speed Dial with the swipe of a finger

### **Discover**

Get recommendations for top stories, arts, business, entertainment, and other popular categories based on your preferences.

## **Menu Options**

---

### **App Layout**

» This option changes the layout of the browser

### **New Tabs**

» This option adds additional tabs

 
### **Data Savings**



» This option enables/disables data savings mode

## **Clear Browsing Data**

» This option clears any data stored

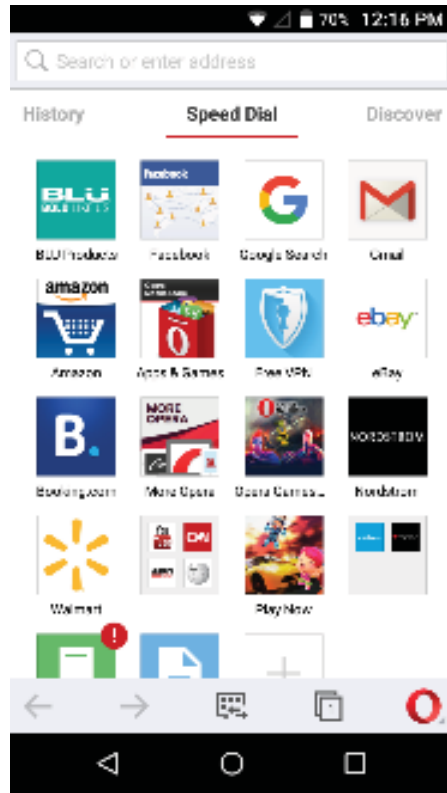

Click menu to access  
the Opera internet  
browser options



Gmail is Google's free email service. To access the Gmail program, click the applications menu and click on the Gmail icon and either sign in with your existing account or follow the instructions to create a new account.

**Note:** In order to keep accounts streamlined with Google services, your Gmail account user name and password will be used for some Google programs that include Google Play Store, Google Drive, Google Photos, Google +, Google Calendar, and Google Wallet.

### **Open Gmail**

 
 
---

To access » Click on the Applications Menu then on the Gmail icon.

### **Sending an Email**

---

- » Click the Compose button to create a new email.
- » Enter the recipient's email address.
- » Enter a subject
- » Compose your message. Click the attachment button to add an attachment.
- » Click the Send button to send the email.

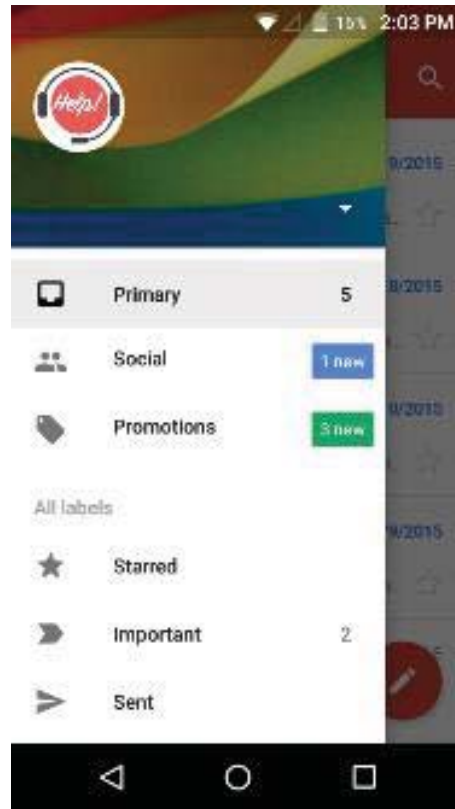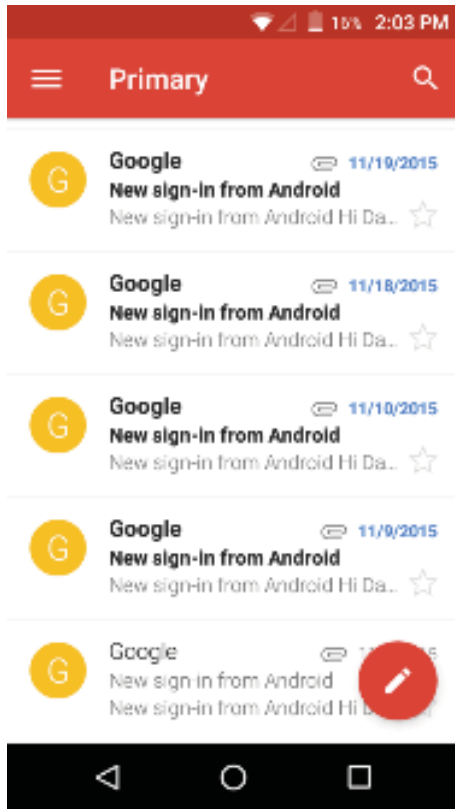

**The Gmail inbox is separated by default in three different categories.**

**These categories include primary inbox, social inbox where all your Facebook, Twitter, and social media emails are separated and your Promotions inbox where all your commercial emails are separated.**

**You may adjust these categories in Gmail settings**



# Play Store

 
Google Play allows you to download music, movies, and games directly to your device.

**Note:** You will need to log in to your Google account when configuring the phone or entering the Play Store for the first time.

## Open the Play Store

---

To access » Click on the Applications Menu then on the Play Store icon

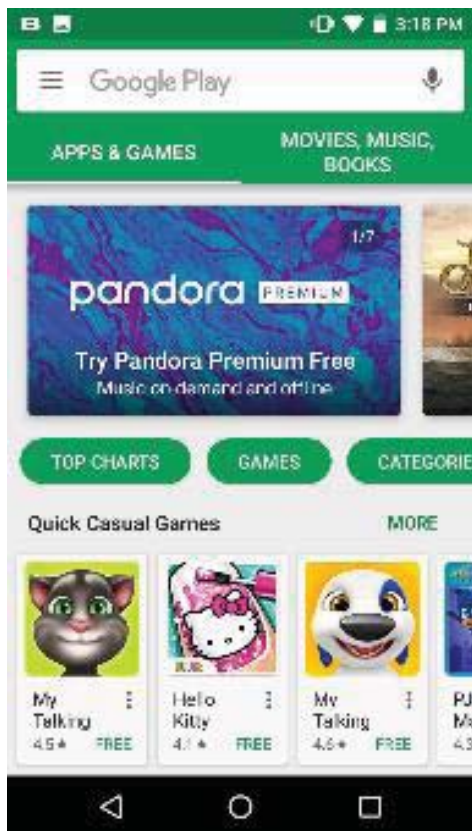


Search and select  
between different Play  
Store categories

## Installing an Application

 ---

- » Browse through the categories available or enter the name on the search text box to find your desired application.
- » Click on the application.
- » Click on **INSTALL** (for free applications) or click on the **PRICE** (for paid applications).
- » Follow the on-screen instructions to complete the installation.

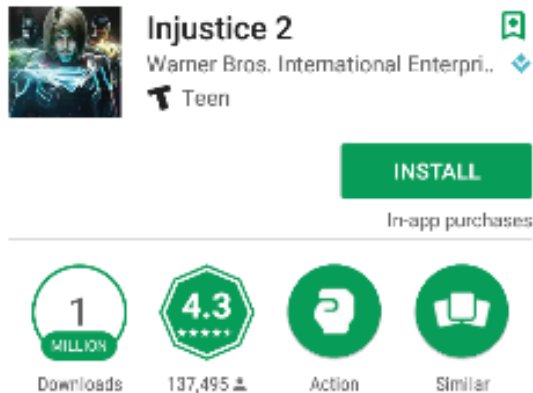

## Android 7.0 OS Application Permissions

---

When you install an app from Google Play on device running 7.0 and up you control which capabilities (such as camera or mic) or information (such as contacts) that specific apps can access - known as permissions. Any native or installed applications will ask for permissions when accessed for first time. You can change permissions that any app can access at any time; however, changing this may cause loss of functionality.



# Camera

**Prior to use:** It is suggested that you insert SD card before using the camera or video camera. All photos or videos taken by the phone should be typically stored in the memory card for storage of large capacity images and videos.

## **Open the Camera**

---

To access » Click the Applications Menu then on the Camera icon

**Note:** You may place a camera shortcut icon on any of the screens

## **Taking a Picture**

---

- » Aim at the object or scene that the picture will be taken.
- » Click the Shutter button on the screen to capture the image.
- » After taking the picture, the file will be saved in the cameras gallery folder.
- » You can view the photos by clicking the preview box button.

## **Recording a Video**

---

- » Aim at the object or scene that the video will be taken.

- » Click the Video button to start recording.
- » Click on the Video button to stop recording.

When in the standard camera mode, you can switch to video to record or click the gallery preview box.





# Next Radio

Next Radio is an Android app that combines local FM radio via your device's built-in tuner with enhanced content via the Internet to show you album art, station logos, and song & program details in an engaging display. If you like a song, you can purchase it instantly as you are listening.

 
## Open the Radio

---


To access » Click the applications menu then on the radio icon.

**Note:** Next Radio uses wired headphones that work as an antenna to receive signal.



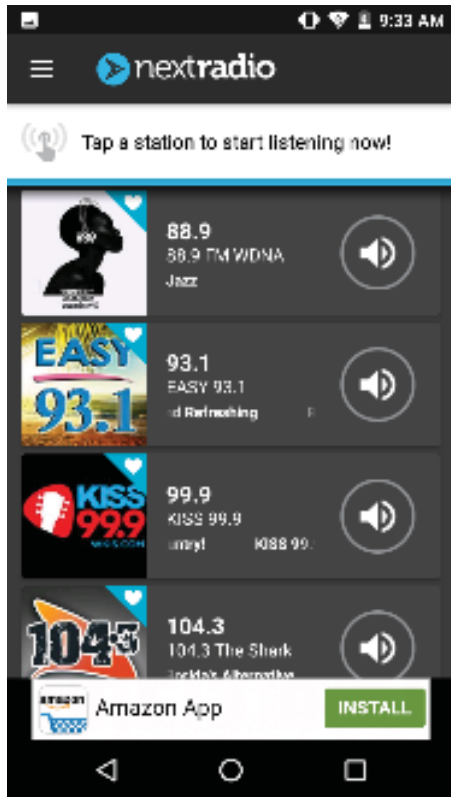

Click to  
Select radio  
Stations

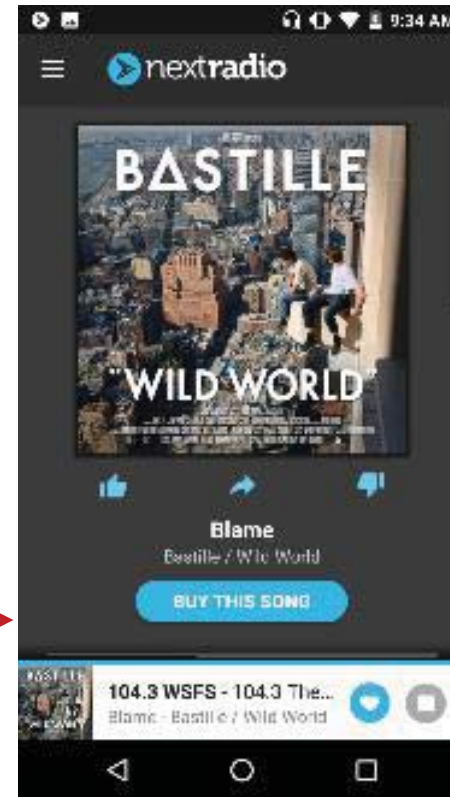 

Click to  
Buy SONG

Click to add  
To favorite  
radio stations

## FM Radio as Background

Click on the Home key to move the FM Radio to the background.

## Favorite Channels

Click to scan FM channels automatically then click to add any of your favorite radio stations.



# Sound Recorder

You may send any recorded audio via the File Manager by selecting any of the default share options that include Bluetooth, MMS, Google Drive and Gmail.

## **Open the Sound Recorder**

 
---

To access » Click on the applications menu then click on the Sound Recorder icon.

## **Record**

---

- » Keep the phone's microphone near the sound source.
- » Click the record button to record the audio and click the stop button to end the recording.

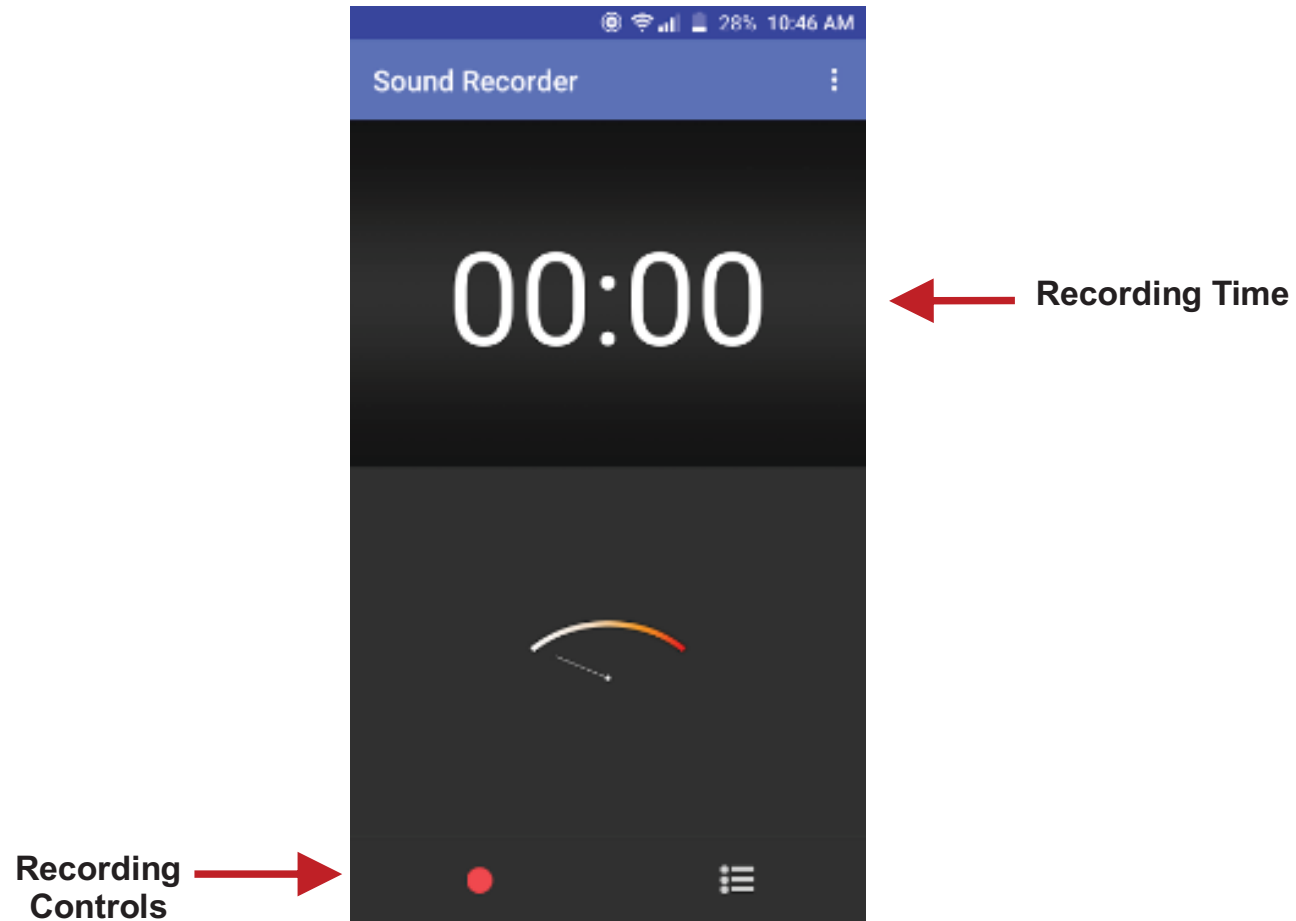

**Note:** It is suggested that you save all your recordings in your SD card for maximum storage capacity. Please ensure the SD card is installed for extended storage space.

# Google Photos

Google photos organizes all your pictures and videos in a single application.

## **Open the Gallery**

 
---

To access » Click on the Applications Menu then on the Photos icon

## **Viewing Pictures and Videos**

---

- » Click on an image to view in full screen. To play a video clip, click the play button.
- » To navigate through the gallery, slide your finger to the left or right.

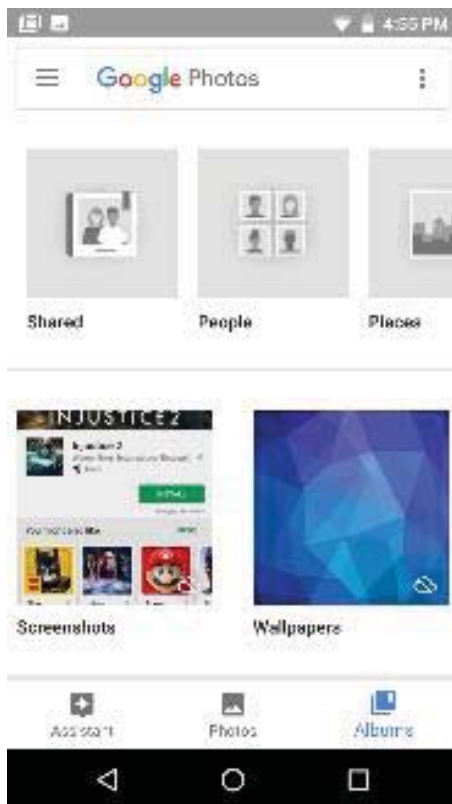

**Pictures and videos are stored in separate albums and can be organized by Date and Location**

## **Share Pictures**

---

Click on the Share button to share the image. You may share pictures by sending them through different types of installed applications. You may also send pictures through the MMS message function by attaching a picture and via Bluetooth.

## **Adjust Image**

---

Click the Edit button to adjust images. You may select from different effects that may include Vintage, Black and White, Instant, Latte, Litho, X-Process, Crop, Rotate, Mirror, Straighten, Vignette, Contrast, Exposure, Auto color, Shadows, and Vibrancy among other options.

## **Crop Pictures**

---

Click the Edit button to Crop the size of the picture. Once the picture appears, pinch your fingers in or out to adjust the size. To keep proportion, hold down any of the four corners of the image and adjust.

 
# Play Music

Play Music is Google's music application that allows you to upload, store, and play your own music. The application also allows you to stream music directly from Google.

## Open the Play Music

---

To access » Click on the applications menu then on the Play Music icon.

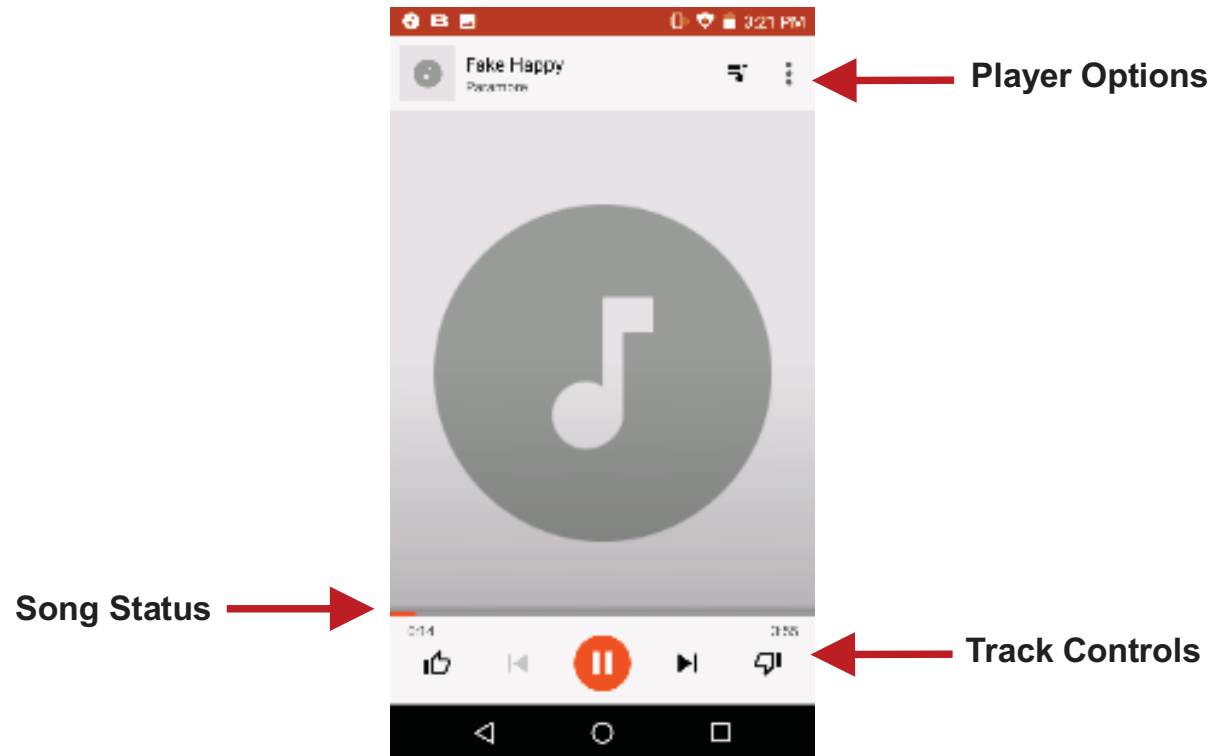

## **Playing a Song**

---

 
- » Click on the Play Music menu button and select **My Library** to open the music library.
- » Select a search category (Genre, Artist, or Song)
- » Click on a folder from the selected category and then click on a song.

## **Search Music**

---

You may choose to search for music from media folder through genre, artist name, album name, song name. Click on the shuffle button to play music randomly.

**You may search  
music from the  
following options:  
Genres, Artists  
Albums, and Songs**

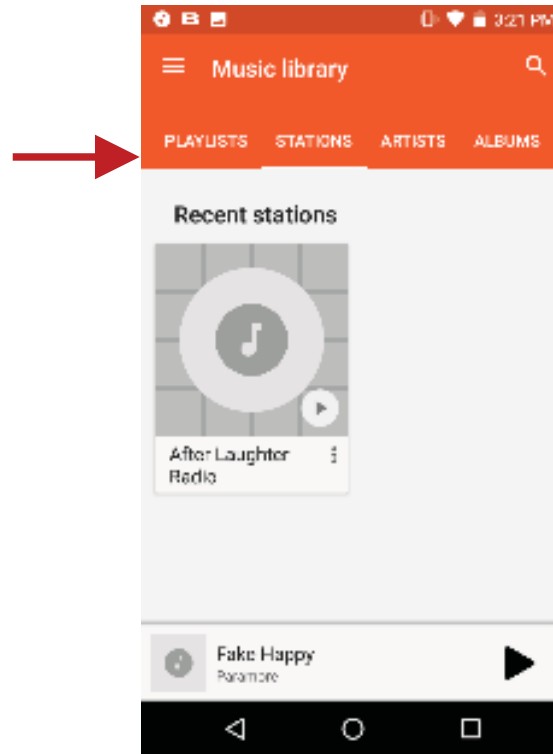

**You may also  
save, play, and  
organize music  
through playlists**

## **Set Music Player in the Background**

Click on the Home key to move the Music Player to the background. You will see an icon on the status bar indicating that the music player is active.





 
# File Manager

The file manager allows you to search and organize your stored phone files conveniently and efficiently through one program.

## **Open the File Manager**

---

To access » Click on the applications menu then click on the File Manager icon.

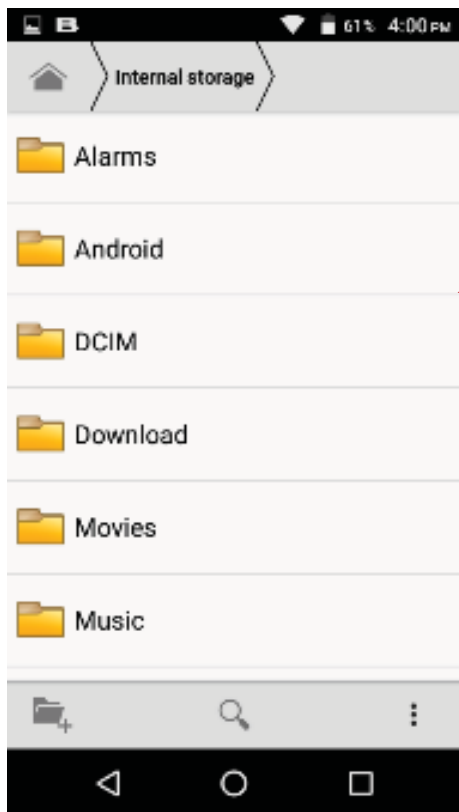

**Scroll and search through  
the File Manager for  
stored phone files.**

**You may also search or  
add new folders from the  
File Manager interface**



# Calendar

The calendar helps keep track of your life's most important moments in one application.

## **Open the Calendar**

---

To access » Click on the Application Menu then on the Calendar icon.

## **Creating an Event**

---

- » Long press on the specific date to add a new event. In the new event window, click Edit.
- » Enter the new event details including name, location, start date and time.
- » Click to save the settings.



**Enter Calendar information that ranges from Name, Location, Date among other options**

A screenshot of the 'New event' form in the Android calendar application. The form has a title bar with a close button and a 'SAVE' button. The fields include: 'Event name' (text input), 'All day' (toggle switch), 'Date and Time' (two separate inputs showing 'Wed, Dec 30, 2015' and '1:00 PM'), 'more options' (text input), 'Add location' (text input with a location pin icon), 'Notification' (dropdown menu showing '10 minutes' and 'Nothashtion'), 'Add a notification' (text input), and 'Invite people' (text input with a people icon).

**Click to add a new event**



# Clock

You can use this feature to set up alarms, view the local time in different cities anywhere in the world, and even run a stopwatch.

## **Open the Alarm Clock**

---

To access » Click on the Application Menu then click on the Clock icon.

## **View the Current Time in Other Cities**

 
 
---

- » Click on the Clock icon.
- » Click on the World Clock button and select the desired cities.

## **Create a New Alarm**

---

- » Click on the Alarm icon tab.
- » Click on the Add Alarm button to add a new alarm.
- » Set the time.

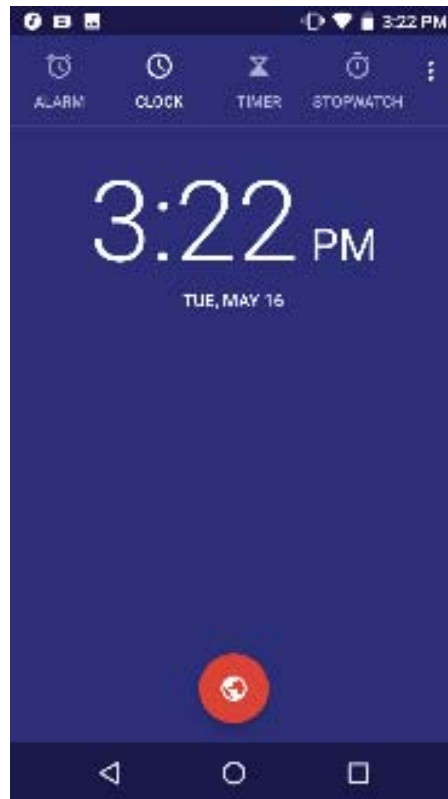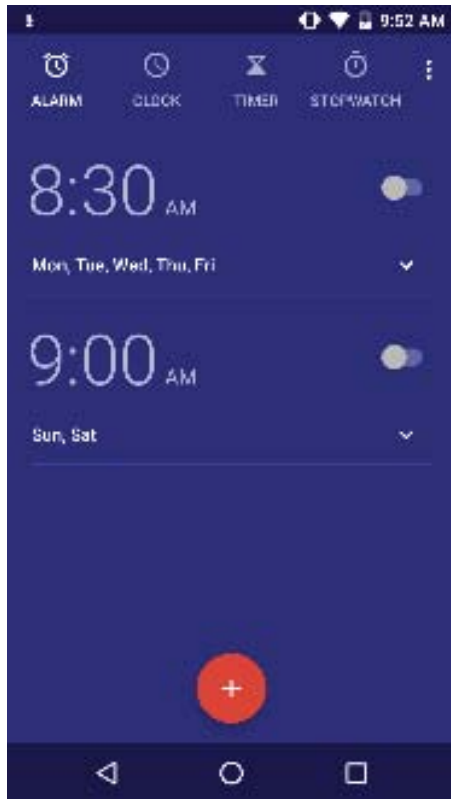

**Click to add, edit or delete alarms**

**Then click on the specific hour and minute to set the alarm.**



# Settings

## Wireless & Networks

---



### Wi-Fi

- **Settings » Wi-Fi** to power on. When on, the Wi-Fi will automatically search for available networks. Any unsecured network can be used directly and any secured network requires a password or credentials prior to connection



### Bluetooth

- Power on Bluetooth. Once on, Bluetooth will automatically scan for any nearby open devices
- Click to connect device



### Data Usage

- Mobile and Wi-Fi Data Usage



### More Wireless & Networks

- Tethering, Portable Hotspot, VPN, APN

- Airplane Mode

**Note:** Airplane mode will turn off all network connections automatically.

---

## Device



### Display

- Brightness, Wallpaper, Sleep, Daydream, Font Size, and Rotation



### Sound & Notification

This option sets the ring tone settings for receiving calls and notifications. Some of the settings include:

- Vibrate, volume, ring tones, ring tones notification, dial touchpad, and haptic feedback and tones



### Apps

- Manage Applications - Manage and delete installed applications
- Running Applications- Press the Stop button to terminate any of the applications from the running apps list and clear any RAM usage.



### Storage & USB

- View phone files and storage information.



## Battery

- General power usage information.



## Memory

- General memory usage information.

**Personal**

---



## Location

- High Accuracy – Use Wi-Fi and Mobile Networks to determine location.
- Battery Saving – Use Mobile Networks to determine location.
- Device Only – Use GPS to determine your location.



## Security

Set up basic screen locks: Use slide, pattern, PIN or password to lock the screen.

- Pattern: The initial set up will include simple unlock instructions and examples. Click to continue the security pattern step. **Note:** You can add additional pattern security at power on.
- PIN: Enter a PIN number to unlock the screen



- Password: Use a password to unlock the screen

**Note:** You may stop this security feature at any time.

### **Set up SIM card PIN lock**

- SIM card PIN (Personal Identification Number) is used to prevent unauthorized use of SIM card.

To change a blocked PIN code, you will need to unlock the SIM lock then go to the Change Password screen. The phone will automatically prompt you enter the old PIN code and ask to enter a new PIN code twice. The phone will then prompt you that the change was successful. If you enter the PIN incorrectly three times, the SIM and PIN codes will be automatically locked. You will need the PUK code to unlock the phone that is available through your service provider. If you enter the PUK code incorrectly 10 times, the SIM card will be permanently locked. Please see your service provider for a new SIM card

- Unknown Sources – Allow installation of apps from unknown sources



### **Accounts**

- Add and manage accounts (IMAP, POP3, Corporate, and application accounts)



### **Amazon**

- Add and manage Amazon accounts



## Google

- Add and manage Google accounts



## Language & Input

- Language – Change the language of the phone
- Personal Dictionary - Add or delete words to the custom dictionary keyboard.
- Spell checker, voice typing, text-to-speech, Google voice typing.



## Backup & Reset

- Backup Data – Will back up all application data, WLAN passwords, and other settings to Google's servers
- Restore to Factory Settings – Restores phone & erases all stored data completely.

---

## System



## Date & Time

- Select Date Format - There are 3 kinds of formats you can choose from: Month-Day-Year, Day-Month-Year and Year-Month-Day.



### **Scheduled power on & off**

- Set the phone to automatically turn on or off at a specific time.



### **Accessibility**

- Power button ends call, auto rotate screen, Talk Back, speak passwords and large text



### **Printing**

- You may print files via Cloud Ready printers  
(Please check Google Cloud Print website for printer compatibility information)



### **Developer Options**

If the phone does not display Developer options, press build number seven (7) times in the about phone tab.

- The developer option gives access to USB Debugging and other developer tools



### **About Device**

 
- Phone information status and firmware updates

# ▶ USB Storage

## Open USB Storage

---

Connect your phone to a computer using a USB cable. Once connected, a connection interface will appear on the notification settings. Click the USB notification bar icon to access the USB computer connection menu and select the desired setting.

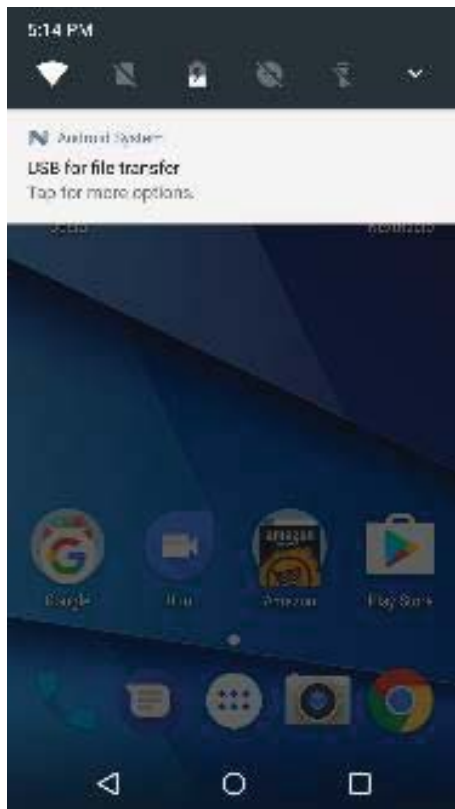

### USB Connection Options:

- **Charging Only:** Charges the device only
- **Media Device (MTP):** Transfer media files
- **Camera (PTP):** Transfer photos
- **USB Storage:** USB Transfer Protocol

# Troubleshooting

Below is a list of common problems that may occur when using your mobile phone. Try these easy troubleshooting steps to resolve any type of issues you may encounter.

## **The phone does not power on**

- Press and hold the power key until the startup sequence appears on the display.
- Check the battery level and ensure there is sufficient charge.

## **The phone does not respond after several minutes**

- Remove and insert the battery – If the phone has an internal battery, please press and hold the power button.

## **The phone powers off by itself**

- Check if the screen lock of the phone is enabled.
- Check if the phone needs to be charged.

## **The battery will not charge**

- Check if the battery is already fully charged.
- Make sure that the battery is inserted correctly.
- Ensure that the battery being used is a BLU approved battery.
- Double check if the charger connector is properly connected to the phone.

**Note:** Connect charger only after the battery has been inserted.

**The standby time is too short**

- Please keep in mind that standby time relates directly to phone usage (Internet, Text, Voice Calls, Maps, etc.).
- Batteries typically have to be replaced after a year of use.

**The phone cannot connect to the network (Voice or Data)**

- Verify if you have active service with your service provider.
- Contact your local network service provider and verify if you are within its network coverage area.

**The phone displays a SIM Error**

- Make sure the SIM is properly inserted and in its intended slot.
- Make sure that the SIM card is not damaged or scratched.

**The PIN code was entered incorrectly three times**

- The SIM card will lock and you will need to enter the PUK code (PIN Unlock Code). Please contact your local service provider to obtain the PUK.

**I cannot make calls**

- Make sure that the number you dialed is correct and the dial key has been pressed.
- Use the full national area code when dialing out of your area or when abroad, use country-specific international access codes.

### **I cannot receive calls**

- Make sure that your phone is connected to a network.

### **The caller ID does not display on incoming calls**

- Contact your local network service provider and verify you have the caller ID feature enabled on your account or verify if the caller may have blocked his number from appearing.

### **The caller cannot leave a voicemail message**

- Contact your local network service provider and verify if the voicemail service is active on your account or check if the network is busy.

### **The phone does not connect to the internet**

- Ensure with your service provider that your account has the appropriate internet/data plan enabled.
- Ensure internet APN settings are configured (Carrier dependent).

### **Text Messages cannot be Sent / Received**

- Ensure text messaging is enabled with your service provider.
- Ensure APN settings are configured (Carrier dependent).

The information provided in this user manual is subject to change without notice and BLU Products reserves the right to modify the manual at any given time. BLU Products has made every effort to ensure that this user manual is accurate and disclaims responsibility and liability for any inaccuracies or omissions.

## **Model No: R2**

### Charge the Mobile phone

Before using the device for the first time, you must charge the battery.

1. You can charge the device with a travel adapter or by connecting the device to a PC with a USB cable.
2. Battery full icon is shown when finished if your device is off.

### Notes:

1. Use only qualified factory supplied chargers and cables. The use of unapproved accessories could damage your phone or cause the battery to explode.
2. You can directly use the Li-Polymer battery in the pack. Please normally use off the battery and fully charge the battery for its perfect performance.



3. If the phone has been shut off for a long time or the battery has been used up, you should charge the phone for 3 to 5 minutes then turn on.
4. Normal charge temperature: -10°C to 40°C.

## Feature

### GSM

#### Frequency Bands:

GSM 900: 880 ~ 915 MHz (TX) 925 ~ 960 MHz (RX)

GSM 1800: 1710 ~ 1785 MHz (TX) 1805 ~ 1880 MHz (RX)

Modulation Mode: GMSK for GSM/GPRS

Antenna Type: PIFA

Antenna Gain: GSM 900: -1dBi GSM 1800:-1dBi

Max power: 31.42dBm

WCDMA

Frequency Bands:

WCDMA2100: 1920 ~ 1980 MHz (TX) 2110 ~ 2170 MHz (Rx)

WCDMA900: 880 ~ 915 MHz (TX) 925 ~ 960 MHz (Rx)

Modulation Mode: HSDPA: QPSK /16QAM; HSUPA: BPSK; WCDMA: QPSK

Antenna Type: PIFA

Antenna Gain: WCDMA 2100:-1dBi WCDMA 900:-1dBi

Max power: 21.87dBm

LTE

Frequency Bands:

FDD LTE

LTE Band 1: 1920~ 1980 MHz (TX) 2110~ 2170 MHz (Rx)

LTE Band 3: 1710~ 1785 MHz (TX) 1805 ~ 1880 MHz (Rx)

LTE Band 7: 2500~ 2570 MHz (TX) 2620 ~ 2690 MHz (Rx)

LTE Band 20: 832~ 862MHz (TX) 791~ 821 MHz (Rx)

Modulation Mode: QPSK/16QAM

Antenna Type: PIFA

Antenna Gain: Band 1:-1dBi; Band 3:-1dBi;

Band 7:-1dBi; Band 20:-1dBi

Max power: 23.81dBm

Bluetooth 3.0+EDR

Frequency Bands: 2402-2480 MHz

Modulation Mode: GFSK (1Mbps),  $\pi/4$ -DQPSK (2Mbps), 8-DPSK (3Mbps)

Antenna Type: PIFA

Antenna Gain: -1dBi

EIRP Max power: 5.78dBm

Bluetooth 4.0

Frequency Bands: 2402-2480 MHz

Modulation Mode: GFSK (1Mbps)

Antenna Type: PIFA

Antenna Gain:-1dBi

EIRP Max power: 5.65dBm

2.4G WIFI

Frequency Bands:

IEEE 802.11b /g /n (20MHz):2412-2472 MHz

IEEE 802.11n (40MHz):2422-2462MHz

Modulation Mode: CCK/OFDM/DBPSK/DAPSK

Antenna Type: PIFA

Antenna Gain: -1dBi

EIRP Max power: 17.62dBm

## 5.2G WIFI

Frequency Bands:

802.11a/n (20MHz): 5180~5240MHz

802.11n (40MHz):5190~5230MHz

Modulation Mode: OFDM/DBPSK/DAPSK

Antenna Type: PIFA

Antenna Gain: -1dBi

EIRP Max power: 10.81dBm

## 5.8G WIFI

Frequency Bands:

802.11a/n (20MHz): 5745~5825MHz

802.11n (40MHz):5755~5795MHz

Modulation Mode: OFDM/DBPSK/DAPSK

Antenna Type: PIFA

Antenna Gain: -1dBi

EIRP Max power: 9.32dBm

## GPS

Frequency Bands: 1.57542GHz

Modulation Mode: GSMK

Antenna Type: PIFA

Antenna Gain: -1dBi

## FM

Frequency Bands: 88-108MHz

Modulation Mode: FM

Antenna Type: Dipole Antenna

(Earphone acts as FM antenna which becomes an integral antenna)

Antenna Gain:-1dBi



## **CE Maintenance**

1. Use careful with the earphone maybe excessive sound pressure from earphones and headphones can cause hearing loss.



2. Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

3. The product shall only be connected to a USB interface of version USB2.0.

4. Adapter shall be installed near the equipment and shall be easily accessible.

5. EUT Operating temperature range: -10° C to 40° C.

6. Adapter:

The plug considered as disconnect device of adapter

Input: AC 100V-240V, 50/60Hz 300mA

Output: DC 5V, 1500mA

7. The device complies with RF specifications when the device used at 5mm from your body.

8. To prevent possible hearing damage. Do not listen at high volume levels for long periods.

Declaration of Conformity

BLU Products, Inc. hereby declares that this Mobile phone is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. This product is allowed to be used in all EU member states.

