

**SAMUNG**

This document is watermarked because certain important information in the document has not yet been verified.  
This document has been sent to you as a draft and for informational purposes only.  
The document should only be used for internal purposes and may not be distributed outside of the company.  
Distributing the document outside of the company could result in legal exposure to the company if the preliminary,  
unverified information in the draft turns out to be inaccurate.

# USER MANUAL

---

DRAFT  
FOR INTERNAL USE ONLY

# Galaxy J7 Crown

# Table of contents

|                                |           |
|--------------------------------|-----------|
| <b>Special features</b>        | <b>1</b>  |
| Hi Bixby                       | 2         |
| Face recognition               | 2         |
| Direct Share                   | 2         |
| Media volume limiter           | 2         |
| Multi window                   | 2         |
| <b>Getting started</b>         | <b>3</b>  |
| Front view                     | 4         |
| Back view                      | 7         |
| <b>Set up your device</b>      | <b>8</b>  |
| Assemble your device           | 9         |
| Start using your device        | 11        |
| <b>Learn about your device</b> | <b>16</b> |
| Navigation                     | 17        |
| Home screen                    | 20        |
| Customize your Home screen     | 21        |

|                    |           |
|--------------------|-----------|
| Status bar         | 28        |
| Notification panel | 31        |
| Bixby              | 34        |
| Face recognition   | 38        |
| Multi window       | 40        |
| Enter text         | 43        |
| Emergency mode     | 48        |
| <b>Apps</b>        | <b>51</b> |
| Use apps           | 52        |
| Calculator         | 58        |
| Calendar           | 60        |
| Camera and video   | 64        |
| Clock              | 70        |
| Contacts           | 75        |
| Email              | 84        |
| Galaxy Apps        | 88        |
| Gallery            | 89        |
| Google Apps        | 94        |
| Internet           | 97        |

|                     |            |
|---------------------|------------|
| Messages            | 103        |
| My Files            | 107        |
| Phone               | 109        |
| Samsung Gear        | 126        |
| Samsung Notes       | 127        |
| Samsung+            | 129        |
| Secure Folder       | 131        |
| Smart-Things        | 133        |
| TracFone apps       | 134        |
| Additional apps     | 135        |
| <b>Settings</b>     | <b>136</b> |
| Access Settings     | 137        |
| Search for Settings | 137        |
| <b>Connections</b>  | <b>138</b> |
| Wi-Fi               | 139        |
| Bluetooth           | 143        |
| Phone visibility    | 145        |
| Data usage          | 146        |
| Airplane mode       | 147        |

|                             |            |
|-----------------------------|------------|
| Mobile hotspot              | 148        |
| Tethering                   | 150        |
| Mobile networks             | 151        |
| Location                    | 151        |
| Nearby device scanning      | 153        |
| Connect to a printer        | 153        |
| Virtual Private Networks    | 154        |
| <b>Sounds and vibration</b> | <b>156</b> |
| Sound mode                  | 157        |
| Vibrations                  | 158        |
| Volume                      | 158        |
| Ringtone                    | 160        |
| Notification sounds         | 160        |
| Do not disturb              | 160        |
| System sounds               | 161        |
| Key-tap feedback            | 162        |
| Sound quality and effects   | 162        |
| Separate app sound          | 163        |
| <b>Notifications</b>        | <b>164</b> |

|                               |            |
|-------------------------------|------------|
| Manage notifications          | 165        |
| Smart alert                   | 165        |
| <b>Display</b>                | <b>166</b> |
| Screen off settings           | 167        |
| Screen brightness             | 168        |
| Blue light filter             | 168        |
| Font and screen zoom          | 169        |
| Screen quality                | 169        |
| One-handed mode               | 170        |
| <b>Device maintenance</b>     | <b>171</b> |
| Quick optimization            | 172        |
| Battery                       | 172        |
| Storage                       | 173        |
| Memory                        | 175        |
| Language and input            | 176        |
| Date and time                 | 180        |
| Report diagnostic information | 181        |
| Reset                         | 181        |
| Factory data reset            | 182        |

|                                 |            |
|---------------------------------|------------|
| Auto restart                    | 185        |
| Software update                 | 186        |
| <b>Lock screen and security</b> | <b>187</b> |
| Screen lock types               | 188        |
| Clock and information           | 189        |
| Google Play Protect             | 190        |
| Find My Device                  | 190        |
| Security update                 | 191        |
| Install unknown apps            | 191        |
| Secure Folder                   | 192        |
| App permission monitor          | 192        |
| Secure startup                  | 192        |
| Encrypt SD card                 | 193        |
| Set up SIM card lock            | 193        |
| View passwords                  | 193        |
| Security update service         | 194        |
| Device administration           | 194        |
| Credential storage              | 195        |
| Knox active protection          | 196        |

|                             |            |
|-----------------------------|------------|
| Advanced security settings  | 196        |
| <b>Accounts</b>             | <b>198</b> |
| Samsung Cloud               | 199        |
| Add an account              | 199        |
| Backup and restore          | 201        |
| Google settings             | 202        |
| <b>Accessibility</b>        | <b>203</b> |
| Vision                      | 204        |
| Hearing                     | 206        |
| Dexterity and interaction   | 207        |
| More accessibility settings | 208        |
| Accessibility services      | 209        |
| <b>Other settings</b>       | <b>210</b> |
| Help                        | 211        |
| Manage game features        | 211        |
| Device assistance app       | 211        |
| Dual messenger              | 212        |
| About phone                 | 212        |
| <b>Getting help</b>         | <b>214</b> |



|                   |            |
|-------------------|------------|
| Videos            | 214        |
| Smart Simulator   | 214        |
| Tips and Tricks   | 214        |
| Samsung Care      | 214        |
| <b>Legal</b>      | <b>215</b> |
| Legal information | 216        |

DRAFT  
FOR INTERNAL USE ONLY

# Special features

Learn about your  
mobile device's  
special features.

DRAFT  
FOR INTERNAL USE ONLY

# Hi Bixby

Bixby responds to your voice commands and can help you understand your settings and set up your Samsung device.

For more information, see [“Bixby” on page 34.](#)

## Face recognition

Configure facial recognition security to add an extra layer of security when using your device.

For more information, see [“Face recognition” on page 38.](#)

## Direct Share

Share content with specific people directly. For more information, see [“Direct share” on page 83.](#)

## Media volume limiter

Limit the maximum output of the device’s volume. For more information, see [“Media volume limiter” on page 159.](#)

## Multi window

Multitask by using two applications at the same time. For more information, see [“Multi window” on page 40.](#)

# Getting started

Learn about your mobile device hardware, assembly procedures, and how to get started using your new device.

DRAFT  
FOR INTERNAL USE ONLY

# Front view



DRAFT  
FOR INTERNAL USE ONLY

Devices and software are constantly evolving — the illustrations you see here are for reference only.

- **Proximity sensor**

- Turns off the screen and disables touch functionality during a call when the device is in close proximity to the body.
- Turns the screen back on and enables touch functionality during a call when the device is outside a specific range from the body.

- **Power key**

- Press to turn the screen on or off.
- Press and hold to select a power control option.

DRAFT  
FOR INTERNAL USE ONLY

- **Volume keys**

- Adjust the volume for ringtones, media, notifications, and system sounds. For more information, see [“Volume” on page 158.](#)
- In the camera app, press a volume key to take a photo.

DRAFT  
FOR INTERNAL USE ONLY

# Back view



DRAFT  
FOR INTERNAL USE ONLY

Devices and software are constantly evolving — the illustrations you see here are for reference only.



# Set up your device

Learn how to set up your device for the first time.

DRAFT  
FOR INTERNAL USE ONLY

# Assemble your device

Install a SIM card and an optional memory card (not included), and charge your device before using.

## Install a SIM card and memory card

When you subscribe to a cellular network, you are provided with a SIM card. You may be able to use your previous SIM card. Contact your service provider for more details.

**Warning:** Small components such as SIM cards and memory cards can pose a choking risk. Please be careful when handling these cards to avoid damaging them.

 
You can install an optional microSD<sup>™</sup> memory card (not included) to add more memory space to your device. A memory card can be installed at any time. It is not necessary to install it prior to using the device.

**Caution:** Be careful when using the removal tool to eject an internal card tray.

1. Insert the removal tool into the hole on the SIM card/Memory card tray, and then push until the tray pops out.
2. Place the SIM card on the tray with the gold contacts facing down.

DRAFT  
FOR INTERNAL USE ONLY

3. Place the memory card on the tray with the gold contacts facing down.

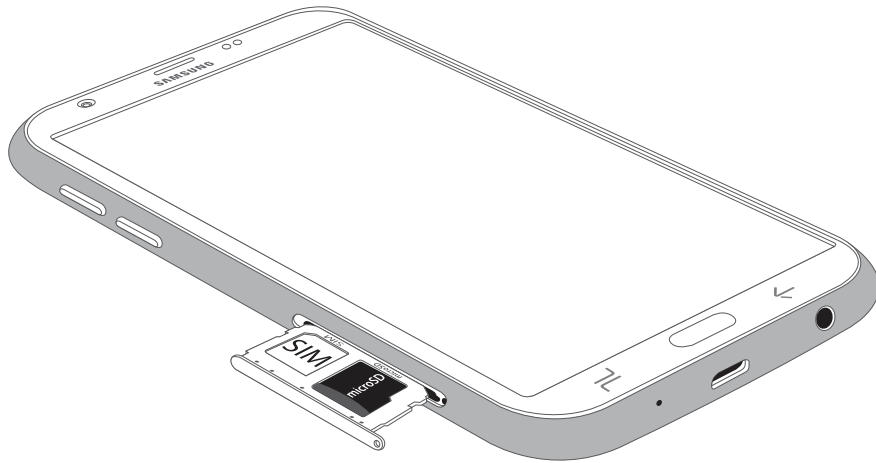

4. Slide the SIM card/Memory card tray back into the slot.

## Charge the battery

Your device is powered by a rechargeable battery. A charger (charging head and USB cable) is included with the device for charging the battery from any standard outlet.

 
**Note:** You should dry the inside of the charging port before inserting a power connector to charge your device. If the charging port is not fully dry, your device may operate abnormally. For example, it may charge more slowly or overheat.

The battery comes partially charged. You can use the device while charging.

DRAFT  
FOR INTERNAL USE ONLY

**Caution:** Use only charging devices that are approved by Samsung. Samsung accessories are designed for your device to maximize battery life. Using other accessories may void your warranty and may cause damage.

1. Insert the USB cable into the USB charger/Accessory port.

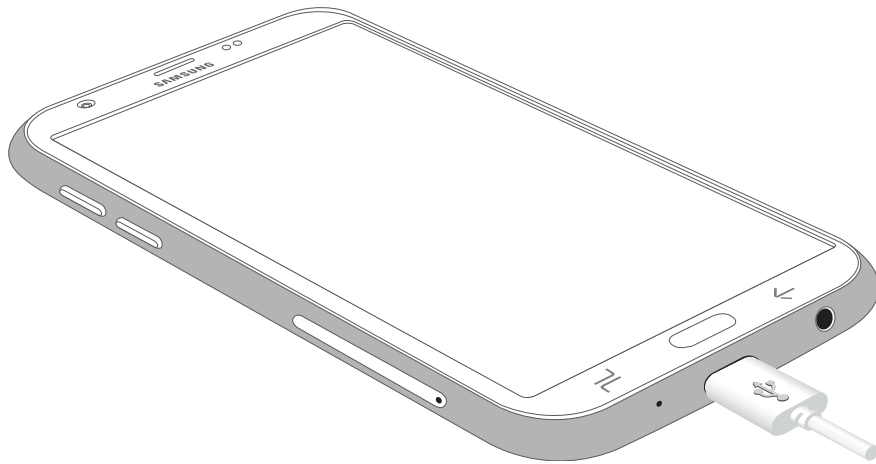

2. Connect the USB cable to the charging head, and then plug the charging head into a standard outlet.
3. Unplug the charging head from the outlet and remove the USB cable from the device when charging is complete.

## Start using your device

The instructions below explain how to turn your device on or off.

To turn the device on:

- Press and hold the **Power** key until the device turns on.

To turn the device off:

1. Press and hold the **Power** key.
2. Tap **Power off**, and confirm when prompted.

## Use the Setup Wizard

The first time you turn your device on, the Setup Wizard guides you through the basics of setting up your device.

Follow the prompts to choose a default language, connect to a Wi-Fi<sup>®</sup> network, set up accounts, choose location services, learn about your device's features, and more.

## Lock or unlock your device

Use your device's screen lock features to secure your device. By default, the device locks automatically when the screen times out.

To lock the device:

- Press the **Power** key.



To unlock the device:

- Press the **Power** key, or press the **Home** key, and then drag your finger across the screen.

The default Screen lock on your device is Swipe. To choose a secure screen lock, see [“Set a secure screen lock” on page 188.](#)

## Add a Google account



Your new device uses your Google<sup>™</sup> account to fully utilize its Android<sup>™</sup> features.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Cloud and accounts** > **Accounts**.
3. Tap  **Add account** > **Google**.

**Note:** When you sign in to a Google account, Factory Reset Protection (FRP) is activated. FRP requires your Google account information when resetting to factory settings. For more information, see [“Factory reset protection” on page 184](#).

## Add a Samsung account

Create a Samsung account for access to Samsung content and apps on your device.



1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Cloud and accounts** > **Accounts**.
3. Tap  **Add account** > **Samsung account**.

**Note:** To quickly access your Samsung account, tap  **Settings** >  **Samsung account**.

DRAFT  
FOR INTERNAL USE ONLY

# Add an email account


View and manage all of your email accounts.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Cloud and accounts** > **Accounts**.
3. Tap  **Add account** > **Email**.

# Transfer data from your old device

Use Smart Switch<sup>™</sup> to transfer contacts, photos, and other content from your old device. For more information, visit [samsung.com/us/support/owners/app/smart-switch](https://samsung.com/us/support/owners/app/smart-switch).



To use Smart Switch:

1. From a Home screen, swipe up to access **Apps**, and then tap  **Settings** > **Cloud and accounts** > **Smart Switch**.
2. Follow the prompts and select the content to transfer.

Visit [samsung.com/smartswitch](https://samsung.com/smartswitch) for more information.

# Set up your voicemail

You can access your voicemail from a Home screen.

1. From a Home screen, tap  **Phone**.
2. Touch and hold  **Voicemail**.

3. Follow the tutorial to create a password, record a greeting, and record your name.

For more information, see [“Voicemail” on page 123.](#)

DRAFT  
FOR INTERNAL USE ONLY



# Learn about your device

Learn some of the key features of your mobile device, including the screens and icons, as well as how to navigate the device and enter text using the keyboard.

DRAFT  
FOR INTERNAL USE ONLY

# Navigation

Please note that a touchscreen responds best to a light touch from the pad of your finger or a capacitive stylus. Using excessive force or a metallic object on the touchscreen may damage the tempered glass surface and void the warranty.

## Tap

Lightly tap items to select or launch them.

- Tap the keyboard to enter characters or text.
- Tap an item to select it.
- Tap an app shortcut to launch the app.

## Double-tap

Lightly tap items twice to select or launch them.

- Double-tap an image to zoom in or out.

## Touch and hold

Touch and hold items to activate them.

- Touch and hold a field to display a pop-up menu of options.

DRAFT  
FOR INTERNAL USE ONLY

# Swipe

Lightly drag your finger vertically or horizontally across the screen.

- Swipe the screen to unlock the device.
- Swipe the screen to scroll through the Home screens or menu options.

# Drag

Touch and hold an item, and then move it to a new location.

- Drag an app shortcut to add it to a Home screen.
- Drag a widget to place it in a new location on a Home screen.

# Pinch and spread








Pinch the screen using your thumb and forefinger or spread by moving your fingers apart.

- Pinch the screen to zoom out while viewing a picture or a web page.
- Spread your fingers on the screen to zoom in while viewing a picture or a web page.

# Common options

 
The device uses basic command options to perform common actions.

DRAFT  
FOR INTERNAL USE ONLY

-  **More options:** Tap to view more menu options for a screen.
-  **Delete:** Tap to select items to delete.
-  **Share:** Tap to select items to share, and then choose a sharing method.
-  **Edit:** Tap to customize the screen.
- **On/Off:** Tap to turn the option on () or off ()
-  **Menu:** Tap to view available options for the field.

DRAFT  
FOR INTERNAL USE ONLY



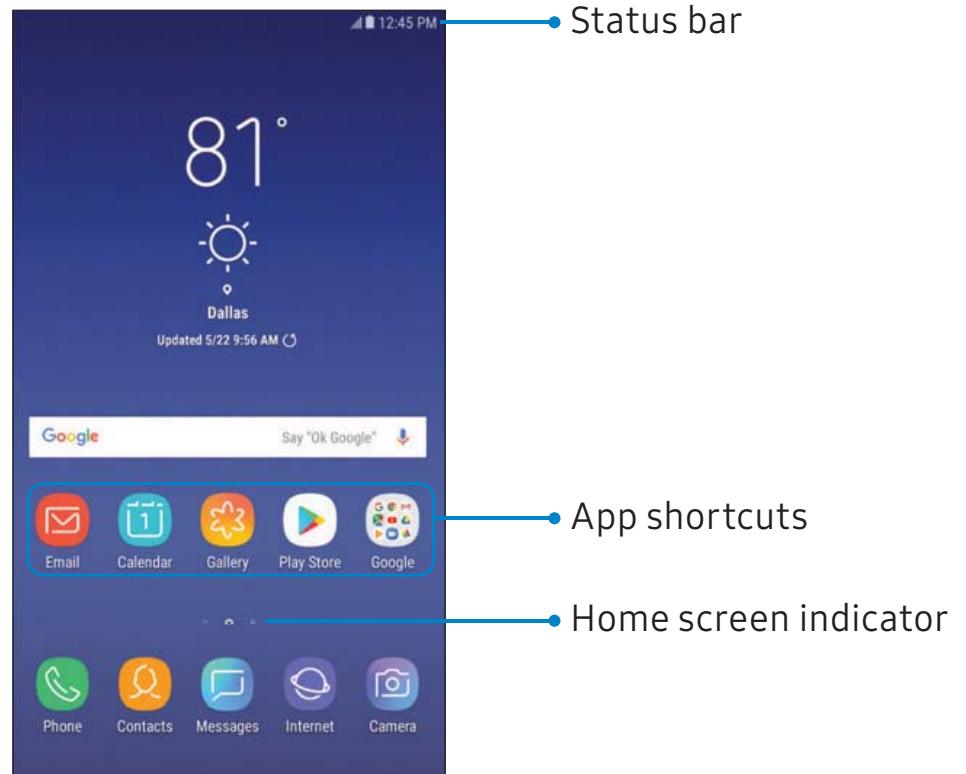


# Home screen



DRAFT  
FOR INTERNAL USE ONLY

# Customize your Home screen

Your device has multiple Home screens to hold app shortcuts and widgets. You can add, remove, change the order of screens, as well as choose a different main Home screen.


1. From a Home screen, pinch the screen.
2. Use these options to manage screens:
  - To align shortcuts into a line at the top of a screen, tap  **Align top**.
  - To align shortcuts into a line at the bottom of a screen, tap  **Align bottom**.
  - To remove a Home screen, tap  **Remove**.
  - To set a screen as the main Home screen, tap  **Main**. This screen is displayed when you press the **Home** key.
  - To change the order of screens, touch and hold a screen, and then drag it to a new position.
  - To add a screen, swipe to the end of the screens, and then tap  **Add**.
  - To enable Bixby Home, swipe right, and then tap **On/Off**.

DRAFT


FOR INTERNAL USE ONLY

# App shortcuts

You can use app shortcuts to launch an app from any Home screen.

1. From a Home screen, swipe up to access **Apps**.
2. Touch and hold an app shortcut to open the options menu.
3. Tap  **Add to Home**.

To remove a shortcut:

1. Touch and hold an app shortcut to open the options menu.
2. Tap  **Remove from Home**.
  - Removing a shortcut does not delete the app, it just removes the shortcut from a Home screen.

To move a shortcut from one Home screen to another:

1. Touch and hold an app shortcut to release it.
2. Drag the app shortcut to a new Home screen, and then release it.

## Use folders

You can organize App shortcuts in folders on an Apps list screen and Home screen.

For more information, see [“Create and use folders” on page 54.](#)

DRAFT  
FOR INTERNAL USE ONLY

# Wallpapers

Change the look of the Home and Lock screens with wallpaper. You can display a favorite picture or choose from preloaded wallpapers.

1. From a Home screen, pinch the screen.
2. Tap **Wallpapers** to customize.
3. Tap **View all** to see all available wallpapers.
4. Tap an image to choose it.
  - Other wallpapers prompt you to select which screen you want to use it for.
5. Tap **Set as wallpaper**, and confirm when prompted.

# Themes

Set the theme to be applied to your Home and Lock screens, wallpapers, and app icons.

1. From a Home screen, pinch the screen.
2. Tap **Themes** to customize.
  - Tap a theme to preview and download it to My themes.
3. Tap **View all** to see downloaded themes.
4. Tap a theme, and then tap **Apply** to apply the selected theme.



# Icons


Apply custom icons to replace built-in app icons.

1. From a Home screen, pinch the screen.
2. Tap **Wallpapers** > **Icons** to customize.
3. Tap an icon set to preview and download it to My icons.
  - Tap **View all** to see downloaded icons.
4. Tap an icon, and then tap **Apply** to apply the selected icon set.

DRAFT  
FOR INTERNAL USE ONLY

## Icon frames

You can show icons with shaded frames to make them stand out on the Home screen and Apps list screen.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Display** > **Icon frames** and choose one of the following options:
  - **Icons only:** Show icons only.
  - **Icons with frames:** Show icons with shaded frames.
3. Tap **Done**, and confirm when prompted.

DRAFT  
FOR INTERNAL USE ONLY


# Widgets

Widgets are simple application extensions that run on a Home screen.

To add a widget to a Home screen:

1. From a Home screen, pinch the screen.
2. Tap **Widgets**.
3. Touch and hold a widget, drag it to a Home screen, and release it.

To remove a widget from a Home screen:

1. From a Home screen, touch and hold a widget to open the options menu.
2. Tap  **Remove from Home screen**.

## Home screen settings

Customize your Home and Apps screens.

1. From a Home screen, pinch the screen.
2. Tap **Home screen settings** to customize:
  - **Home screen layout:** Set your device to have a Home and Apps screen, or only a Home screen where all apps are located.

- **Home screen grid:** Choose a dimension option to determine how icons are arranged on the Home screen.
- **Apps screen grid:** Choose a dimension option to determine how icons are arranged on the Apps screen.
- **Apps button:** Add an apps button to the Home screen for easy access to the Apps screen.
- **App icon badges:** Select how to show icon badges when apps receive notifications.
- **Add apps to Home screen:** Automatically add newly downloaded apps to the Home screen.
- **Quick-open notification panel:** Enable this feature to open the Notification panel from the Home screen by swiping down.
- **Hide apps:** Select apps to hide.
- **About Home screen:** View version information.


## Easy mode

Switch between the default screen layout and a simpler layout. The Easy mode layout has larger text and icons, making for a more straightforward visual experience.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Display** > **Easy mode**.

3. Tap **Easy mode** to enable this feature.
4. Tap **Done** to confirm.

To disable Easy mode:

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Display** > **Easy mode** > **Standard mode**.
3. Tap **Done** to exit Easy mode.

## Status bar

The Status bar provides device information on the right side and notification alerts on the left.

### Status icons



Battery full



Battery low



Battery charging



Vibrate mode



Mute mode



4G LTE™ active



Signal strength



Network not available

DRAFT

FOR INTERNAL USE ONLY

## Status icons



Wi-Fi active



Location service active

## Notification icons



Missed call



Call in progress



Call on hold



New email



New voicemail



New message



File download in progress



File upload in progress



Wi-Fi available




App updates available

DRAFT  
FOR INTERNAL USE ONLY

 
# Status bar display

Configure display options for the Status bar.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Display** > **Status bar**.
  - Tap **Show recent notifications only** to display only the three most recent notification icons on the Status bar.
  - Tap **Show battery percentage** to display the battery charge percentage next to the battery icon on the Status bar.

DRAFT  
FOR INTERNAL USE ONLY

# Notification panel

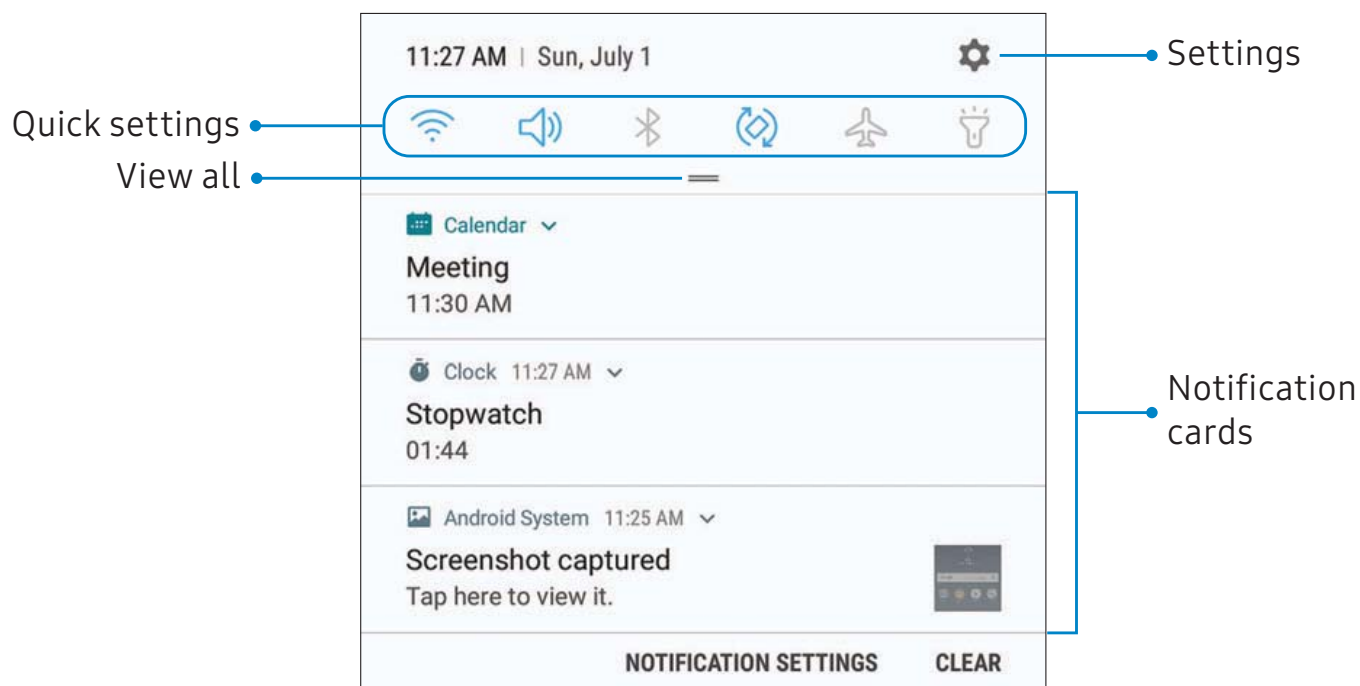


DRAFT  
FOR INTERNAL USE ONLY

Devices and software are constantly evolving — the illustrations you see here are for reference only.



# View the Notification panel

You can access the Notification panel from any screen.

1. Drag the Status bar down to display the Notification panel.
2. Swipe down the list to see notification details.
  - To open an item, tap it.
  - To clear a single notification, drag the notification left or right.
  - To clear all notifications, tap **Clear**.
3. Drag upward from the bottom of the screen or tap  **Back** to close the Notification panel.

DRAFT  
FOR INTERNAL USE ONLY

# Quick settings

The Notification panel also provides quick access to device functions, allowing you to quickly turn them on or off.

1. Drag the Status bar down to display the Notification panel.
2. Drag **≡ View all** downward.
  - Tap a setting to turn it on or off.
  - Tap **⋮ More options** to reorder Quick settings or to change the button layout.
3. Drag **≡ View all** upward to close Quick settings.

DRAFT  
FOR INTERNAL USE ONLY

# Bixby

Bixby is a virtual assistant that learns, evolves, and adapts to you. It learns your routines, helps you set up reminders based on time and location, and is built in to your favorite apps. For more information, visit [samsung.com/us/support/owners/app/Bixby](https://samsung.com/us/support/owners/app/Bixby).

You can customize Bixby's chat responses, quick commands, and more from the Bixby Home page.

## Bixby Home

The Bixby Home page displays customized content based on your interactions. Bixby learns from your usage patterns and will suggest content you may like.

- From a Home screen, swipe right.


## Bixby Vision

Bixby is integrated with your Camera, Gallery, and Internet apps to give you a deeper understanding of what you see. It provides contextual icons for translation, QR code detection, landmark recognition, or shopping.

## Camera

Bixby Vision is available on the Camera viewfinder to help understand what you see.



DRAFT  
FOR INTERNAL USE ONLY

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Camera** > **Bixby Vision** and follow the prompts.

DRAFT  
FOR INTERNAL USE ONLY

# Gallery


Bixby Vision can be used on pictures and images saved in the Gallery app.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Gallery**, and then tap a picture to view it.
3. Tap  **Bixby Vision** and follow the prompts.

DRAFT  
FOR INTERNAL USE ONLY

# Internet

Bixby Vision can help you find out more about an image you find in the Internet app.

1. From a Home screen, swipe up to access **Apps**.
2. Tap **Samsung** folder >  **Internet**.
3. Touch and hold an image until a pop-up menu is displayed.
4. Tap **Bixby Vision** and follow the prompts.


DRAFT  
FOR INTERNAL USE ONLY

# Face recognition

Use face recognition as an alternative to entering passwords in certain apps. You can use face recognition to unlock the screen by recognizing your face.


## Register a face

To use your face to unlock your device, you must set a pattern, PIN, or password.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Biometrics and security** > **Face recognition**.
3. Follow the prompts to register your face.

## Face recognition

Customize how face recognition works.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Biometrics and security** > **Face recognition** for the following options:
  - **Remove face data:** Delete existing faces.
  - **Face unlock:** Enable or disable face recognition security.
  - **Screen-on face recognition:** Unlock your device with face recognition as soon as the screen turns on.




- **Faster recognition:** Turn on for faster face recognition. Turn off to increase security and make it harder to unlock using an image or video of your likeness.

DRAFT  
FOR INTERNAL USE ONLY

 


# Multi window

Multitask by using two apps at the same time. Apps that support Multi window can be displayed together on a split screen. You can switch between the apps and adjust the size of their windows.

1. From any screen, touch and hold  **Recent apps**.
2. Tap  **Multi window** in the title bar to launch an app in split screen view.
  - Recently opened apps are displayed in the lower window. Apps that support Multi window have the  **Multi window** icon in their title bar.
  - If there are no recently opened apps that support Multi window, or if you want to launch a different app, tap **App list**.
3. Tap an app in the lower window to add it to the split screen view.

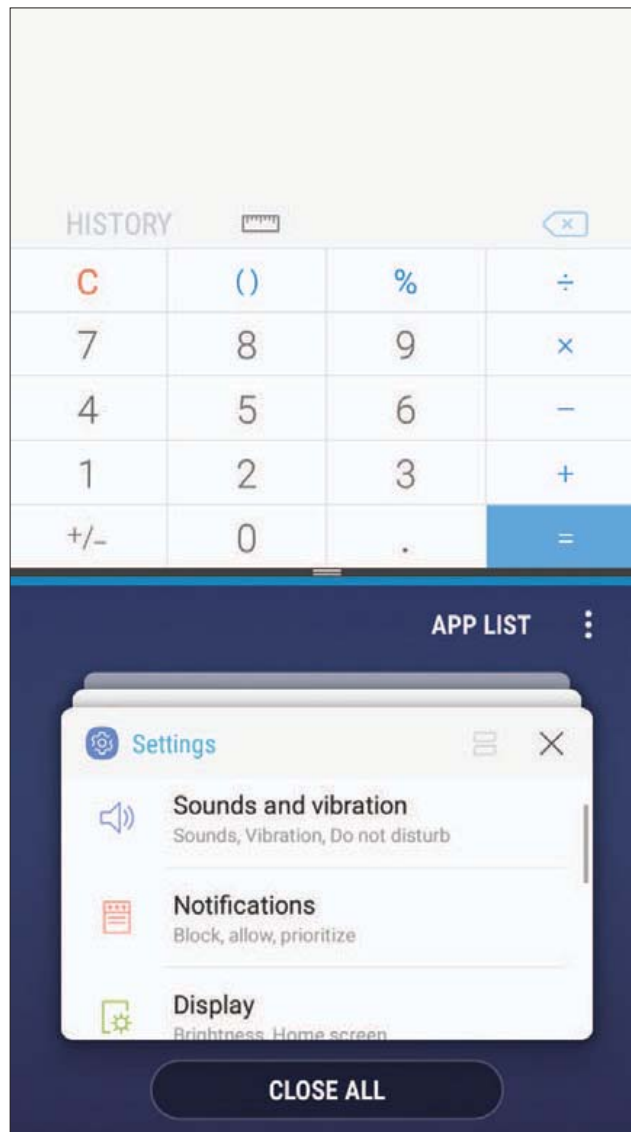


DRAFT  
FOR INTERNAL USE ONLY



DRAFT  
FOR INTERNAL USE ONLY




# Window controls

The Window controls modify the way app windows are displayed in split screen view.


- ▶ Tap the middle of the window border for the following options:
  -  **Add app pair on Home screen:** Add the open pair of apps as a shortcut to the Home screen.
  -  **Switch windows:** Swap the two windows.
  -  **Close app:** Close the selected app.

## Split screen view action

The Recent apps key can be configured to switch between full screen view and split screen view.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Advanced features** > **Multi window**, and then tap **On/Off** to enable **Split screen view action**.
3. To use  **Recent apps** to switch between views:
  - To change the current app from full screen view to split screen view, touch and hold  **Recent apps**.



DRAFT  
FOR INTERNAL USE ONLY

- While in split screen view, touch and hold  **Recent apps** to close the app on the bottom.

# Enter text

Text can be entered using a keyboard or your voice.











- Tap a field to display the Samsung keyboard.
- Tap  **Show predictive text** to view suggested words while you type.
- Tap  **Show toolbar functions** to view all keyboard options.

DRAFT  
FOR INTERNAL USE ONLY

# Toolbar functions


The toolbar provides additional helpful functions.

- From the Samsung keyboard, tap  **Expand toolbar** for the following options:
-  **Clipboard:** Access the clipboard.
  -  **Emojis:** Insert an emoji.
  -  **GIF keyboard:** Add animated GIFs.
  -  **One-handed keyboard:** Change the keyboard layout for use with one hand.
  -  **Settings:** Access keyboard settings.
  -  **Stickers:** Add illustrated stickers.
  -  **Voice input:** Use Google voice typing.

DRAFT  
FOR INTERNAL USE ONLY

# Configure the Samsung keyboard

 
Set customized options for the Samsung keyboard.


- ▶ From the Samsung keyboard, tap  **Settings** for the following options:
  - **Languages and types:** Set the keyboard type and choose which languages are available on the keyboard.
    - To switch between languages, slide the Space bar sideways.
  - **Smart typing:** Use predictive text and auto-correction features to prevent common typing mistakes. Type by swiping between letters.
  - **Keyboard layout and feedback:** Configure the keyboard toolbar, change keyboard size and colors for visibility, adjust layout, and choose key-tap feedback.
  - **Reset to default settings:** Return keyboard to original settings and clear personalized data.
  - **About Samsung keyboard:** View version and legal information for the Samsung keyboard.

DRAFT  
FOR INTERNAL USE ONLY

# Use Google voice typing

Instead of typing, enter text by speaking.

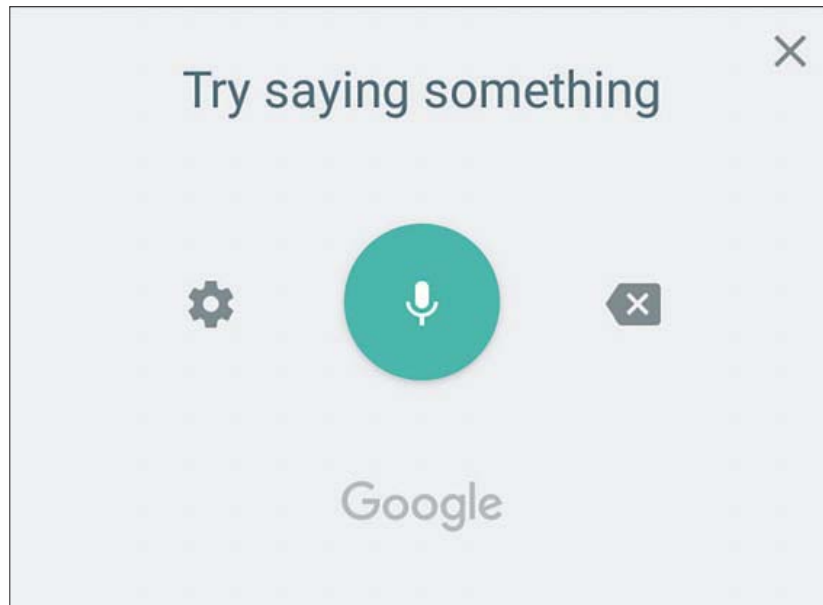



1. From the Samsung keyboard, tap  **Voice input**.
2. Tap the screen and speak your text.

DRAFT  
FOR INTERNAL USE ONLY

# Configure Google voice typing

Set customized options for Google voice typing.

1. From the Samsung keyboard, tap  **Voice input**.
2. Tap  **Settings** for options.
  - **Languages:** Choose the language for the keyboard.
  - **Offline speech recognition:** Download languages for offline Google voice typing.
  - **Block offensive words:** Hide potentially offensive words with asterisks.

DRAFT  
FOR INTERNAL USE ONLY



# Emergency mode

Use Emergency mode to access helpful emergency features and conserve your device's power during an emergency situation.

To save battery power, Emergency mode:

- Restricts application usage to only essential applications and those you select.
- Turns off connectivity features and Mobile data when the screen is off.

## Activate Emergency mode



To activate Emergency mode:

1. Press and hold the **Power** key.
2. Tap **Emergency mode**.
  - When accessing for the first time, read and accept the terms and conditions.
3. Tap **Turn on**.


## Emergency mode features

While in Emergency mode, only the following apps and features are available on the Home screen:

DRAFT  
FOR INTERNAL USE ONLY

- **Flashlight:** Use the device's flash as a steady source of light.
- **Emergency alarm:** Sound an audible siren.
- **Share my location:** Send your location information to your emergency contacts.
- **Phone:** Launch the call screen.
- **Internet:** Launch the web browser.
-  **Add:**
  - **Email:** Launch the Email app.
  - **Maps:** Launch Google Maps™.
-  **Battery charge:** Display estimated battery charge remaining.
- **Estimated usage time remaining:** Display estimated standby time that can be reached based on current battery charge and usage.
- **Emergency call:** Dial the emergency telephone number (for example, 911). This kind of call can be made even without activated cellular service.

DRAFT  
FOR INTERNAL USE ONLY

-  **More options:**
  - **Turn off Emergency mode:** Disable Emergency mode and return to standard mode.
  - **Remove:** Choose apps to remove from the screen.
  - **Manage emergency contacts:** Manage your medical profile and ICE (In Case of Emergency) group contacts.
  - **Settings:** Configure the available settings. Only a limited number of settings are enabled in Emergency mode.

## Turn off Emergency mode

When emergency mode is turned off, the device returns to standard mode.

1. Press and hold the **Power** key.
2. Tap **Emergency mode**.

**Note:** When Emergency mode is activated, Locating method is set to Battery saving. After Emergency mode is turned off, check your location settings. For more information, see [“Location” on page 151](#).

DRAFT  
FOR INTERNAL USE ONLY

# Apps

Learn how to change the way apps are displayed, organize apps into folders, and install, uninstall, disable, or hide apps.

DRAFT  
FOR INTERNAL USE ONLY

# Use apps

The Apps list displays all preloaded and downloaded apps. You can uninstall, disable, or hide apps from view.


## Access apps

Access and launch all apps from the Apps list.

1. From a Home screen, swipe up or down to access **Apps**.
2. Tap an app's shortcut to launch it.
  - To return to the main Home screen, press the **Home** key.


## Add an apps shortcut

In addition to swiping to access apps, you can add an Apps button to the Home screen.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **More options** > **Home screen settings** > **Apps button**.
3. Tap **Show Apps button** > **Apply**.

## Search for apps

If you are not sure exactly where to find a certain setting, you can use the Search feature.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Search phone**.

3. Enter a word or words in the **Search phone** field. As you type, apps that match are displayed on the screen.
4. Tap an entry to go to that app.
  - To customize the Finder search settings, tap **More options** > **Settings**.

## Galaxy Essentials

View and download Samsung apps that are optimized for use with Galaxy devices.

1. From a Home screen, swipe up to access **Apps**.
2. Tap **More options** > **Galaxy Essentials**.

## Uninstall or disable apps

Uninstall or disable apps you have download.



1. From a Home screen, swipe up to access **Apps**.
2. Touch and hold an app to open the options menu.
  - To uninstall an app, tap **Uninstall**.
  - To disable an app, tap **Disable**.

**Note:** Some preloaded apps can only be disabled, not uninstalled. Apps that are disabled are turned off and hidden from view.

DRAFT  
FOR INTERNAL USE ONLY

 

# Sort apps

App shortcuts can be listed alphabetically or in your own custom order.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **More options** > **Sort**.
  - **Custom order:** Arrange apps manually.
    - To remove empty spaces between apps, tap  **More options** > **Clean up pages**.
  - **Alphabetical order:** Sort apps alphabetically.

# Create and use folders


Create a folder to organize App shortcuts on an Apps list screen.

1. From a Home screen, swipe up to access **Apps**.
2. Touch and hold an app shortcut, and then drag it on top of another app shortcut until it is highlighted.
3. Release the app shortcut to create the folder.
  - **Enter folder name:** Name the folder.
  -  **Palette:** Change the folder color.
  -  **Add apps:** Place more apps in the folder. Tap apps to select them, and then tap **Add**.

4. Tap  **Back** to close the folder.


## Copy a folder to a Home screen

Create a folder and copy it to a Home screen.

1. From a Home screen, swipe up to access **Apps**.
2. Touch and hold a folder to open the options menu.
3. Tap  **Add to Home**.

## Delete a folder

When you delete a folder, the app shortcuts are returned to the Apps list screen.




1. From a Home screen, swipe up to access **Apps**.
2. Touch and hold a folder to delete.
3. Tap  **Delete folder**, and confirm when prompted.

DRAFT  
FOR INTERNAL USE ONLY



# App settings

Manage your downloaded and preloaded apps.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Apps**.
3. Tap  **Menu** to set which apps to view, and then choose **All apps**, **Enabled**, or **Disabled**.
4. Tap  **More options** for the following options:
  - **Sort by size/name**: Sort the apps by size or name.
  - **Default apps**: Choose or change apps that are used by default for certain features, like email or browsing the Internet.
  - **App permissions**: Control which apps have permissions to use certain features of your device.
  - **Show/Hide system apps**: Show or hide system (background) apps.
  - **Special access**: Select which apps can have special access permissions to features on your device.
  - **Reset app preferences**: Reset options that have been changed. Existing app data is not deleted.

DRAFT  
FOR INTERNAL USE ONLY

5. Tap an app to view and update information about the app. The following options may be displayed:




- **Uninstall/Disable:** Uninstall or disable the app. Some preloaded apps can only be disabled, not uninstalled.
- **Force stop:** Stop an app that is not working correctly.
- **Mobile data:** View mobile data usage.
- **Battery:** View battery usage since the last full charge.
- **Storage:** Manage the app's storage usage.
- **Memory:** View memory usage.
- **Notifications:** Configure notifications from the app.
- **Permissions:** View permissions granted to the app for access to your device's information.
- **Set as default:** Set the app as a default for a certain category of apps.

**Note:** Options vary by app.

DRAFT  
FOR INTERNAL USE ONLY


# Calculator

The Calculator provides basic and advanced arithmetic functions.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Calculator**, and enter the first number.
3. Tap an arithmetic function key, and enter the next number.
4. Tap  **Equals** to view the result.
5. Tap  **Clear** to clear the results.

## View calculator history



View and clear your calculator history.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Calculator > History**.
  - To return to the calculator, tap **Keypad**.
  - To clear the calculator history, tap **Clear history**.

DRAFT  
FOR INTERNAL USE ONLY



# Convert units of measurement

Quickly convert units of measurement using the unit converter.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Calculator** >  **Unit converter**.
3. Select a category and use the drop-down menus to choose units of measurement.
4. Enter a numeric value to view the conversion.

## Scientific calculator

The Calculator app also provides advanced arithmetic functions.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Calculator**, and turn the device to landscape view.
  - If Auto rotate is not enabled, tap  **Rotate screen**.




DRAFT  
FOR INTERNAL USE ONLY

# Calendar

Manage your events and tasks.


## Add calendars

Add existing calendars to the Calendar app.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Calendar** >  **More options**.
3. Tap **Manage calendars** >  **Add account**, and select an account type.
4. Enter your account information and follow the prompts.

## Calendar view

There are several ways the calendar can be viewed.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Calendar** > **View**, and then tap an option:
  - **Year:** Display all twelve months of this year. Swipe across the screen to display another year.
  - **Month:** Display the current month. Swipe across the screen to display another month. Events and tasks are also displayed.



DRAFT  
FOR INTERNAL USE ONLY

- **Week:** Display the current week. Swipe across the screen to display another week.
- **Day:** Display today's schedule by hour. Swipe across the screen to display another day.
- **Tasks:** Display all tasks.

3. Tap **Today** to return to the current date.


## Create an event

Use your Calendar to create events.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Calendar** >  **Add** to add an event.
3. Enter details for the event, and then tap **Save**.

## Share an event


Share events from your Calendar.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Calendar**, tap an event, and tap again to edit it.
3. Tap **Share**, choose a sharing method, and follow the prompts.

DRAFT  
FOR INTERNAL USE ONLY



# Delete an event

Delete events from your Calendar.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Calendar**, tap an event, and tap again to edit it.
3. Tap **Delete**, and confirm when prompted.


# Create a task

Use your Calendar to create tasks. Tasks are items you add to the calendar to be accomplished on a certain day. A task displays as a checklist item and is removed once you mark the task as complete.


1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Calendar** > **View** > **Tasks**.
3. Tap  **Add** to add a task.
4. Enter details for the task, and then tap **Save**.

# Delete a task

Delete tasks from your Calendar.



1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Calendar**, and tap a day on the calendar to view the tasks for the day, or tap **View** > **Tasks**.

DRAFT  
FOR INTERNAL USE ONLY

3. Tap the  **Checkbox** by the task to mark it as complete and remove it from the calendar.
  - To delete a task, tap the task to open it, tap **Delete**, and confirm when prompted.

## Calendar settings

 
Use Calendar settings to customize your calendar.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Calendar** >  **More options** > **Settings**.
3. Tap an option and follow the prompts.

DRAFT  
FOR INTERNAL USE ONLY



# Camera and video

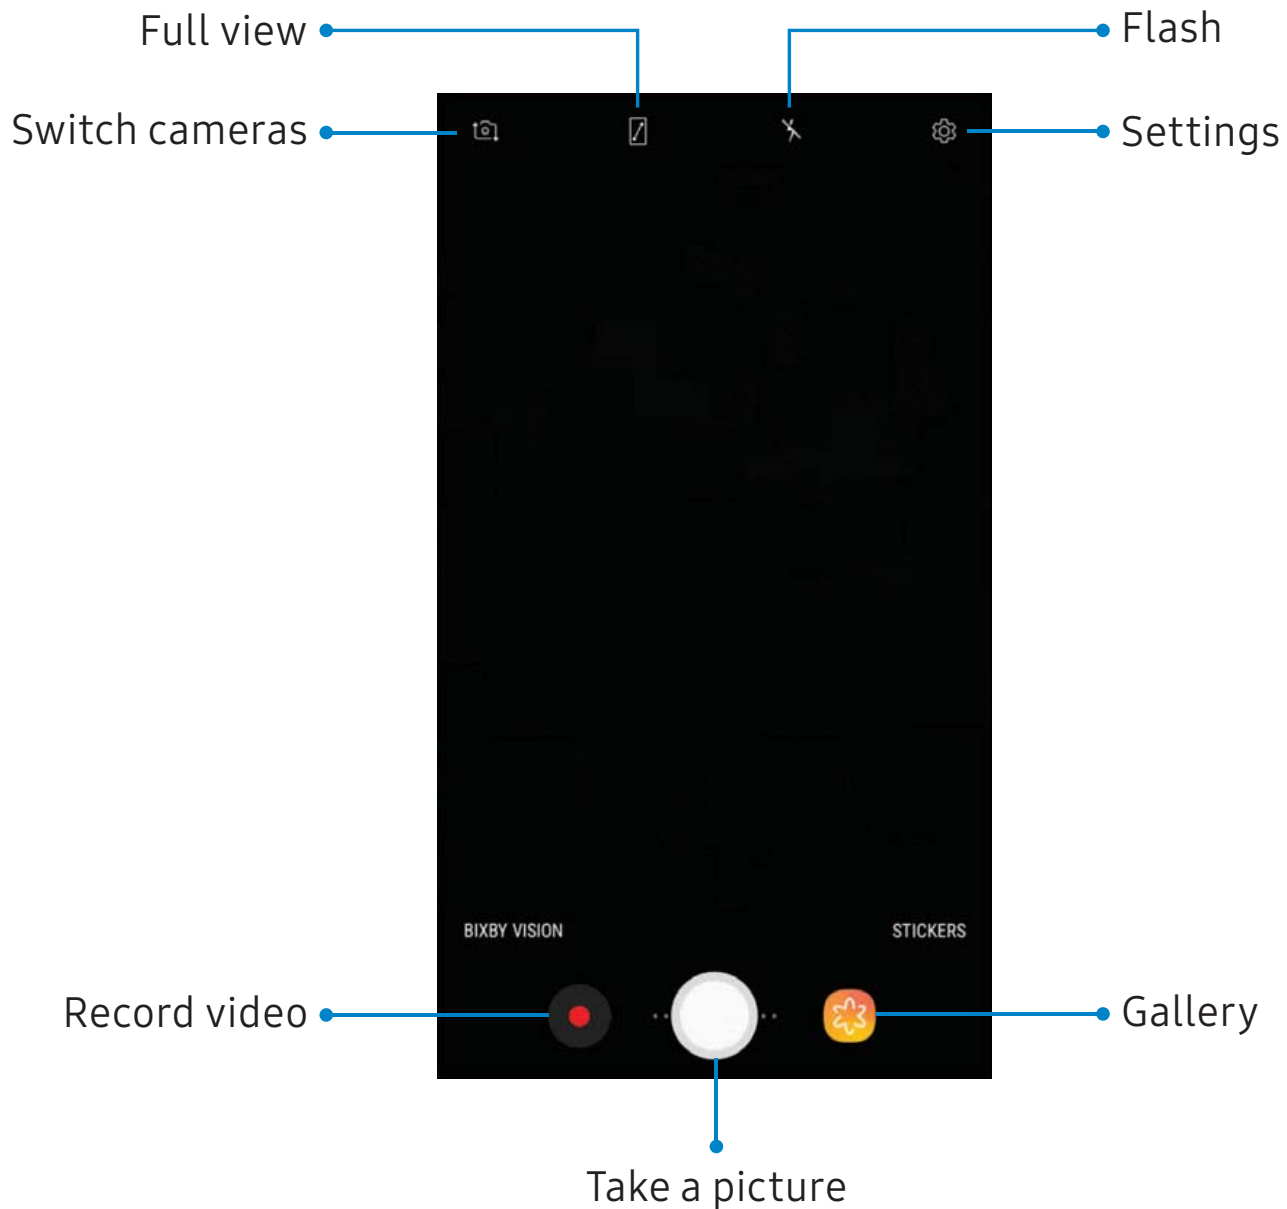




DRAFT  
FOR INTERNAL USE ONLY

Devices and software are constantly evolving — the illustrations you see here are for reference only.

# Take pictures







Take pictures with your device's front or rear camera.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Camera**.
3. Use the display screen as a viewfinder.
  - To focus the shot, tap the screen. When you tap the screen, a brightness scale is displayed. Slide the light bulb to adjust the brightness.
  - To add an effects filter, swipe to the left and tap a preview filter to apply it to the screen.
  - To change the shooting mode, swipe to the right and select a mode.
  - To quickly switch between the front and rear cameras, swipe the screen up or down.
  - To change a camera setting, tap  **Settings**.
4. Tap  **Take a picture**.

DRAFT  
FOR INTERNAL USE ONLY


# Record videos

Record high-quality videos using your device.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Camera**, and aim the camera at your subject.
3. Tap  **Record** to begin recording a video.
  - To take a picture while recording, tap  **Capture**.
  - To temporarily stop recording, tap  **Pause**. To continue recording, tap  **Resume**.
4. Tap  **Stop** when you are finished recording.

## Configure shooting mode

Allow the camera to determine the ideal mode for your pictures or choose from several shooting modes.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Camera**, and swipe to the right to see the available shooting modes.

### Rear camera

- **Auto:** Allow the camera to determine the ideal mode for the picture.

DRAFT  
FOR INTERNAL USE ONLY



- **Pro:** Manually adjust the ISO sensitivity, exposure value, white balance, and color tone while taking pictures.
- **Panorama:** Create a linear image by taking pictures in either a horizontal or vertical direction.
- **Continuous shot:** Touch and hold the Camera button to take pictures continuously.
- **HDR (Rich tone):** Enables the light sensitivity and color depth features of the device to produce a brighter and richer picture.
- **Night:** Use this to take photos in low-light conditions, without using the flash.
- **Sports:** Take clearer pictures of fast-moving subjects.
- **Sound & shot:** Enrich your pictures by adding a few seconds of background sound.

## Front camera

- **Selfie:** Take selfie shots and apply various effects, such as an airbrushed effect.
- **Wide selfie:** Take wide-angle selfie shots to fit more people into your pictures.
- **Sound & shot:** Enrich your pictures by adding a few seconds of background sound.

# Camera settings

Use the icons on the main camera screen and the settings menu to configure your camera's settings.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Camera** >  **Settings**.

## Rear camera

- **Picture size:** Select a resolution. Selecting a higher resolution for higher quality requires more memory.
- **Video size:** Select a resolution. Higher resolution requires more memory.
- **Timer:** Take time-delayed pictures or videos.

## Front camera

- **Picture size:** Select a resolution. Selecting a higher resolution for higher quality requires more memory.
- **Video size:** Select a resolution. Higher resolution requires more memory.
- **Save pictures as previewed:** Save self-portraits or self-recordings as viewed on the camera screen, not as flipped images.
- **Shooting methods:**

DRAFT

FOR INTERNAL USE ONLY


- **Tap screen:** Tap the screen to take selfies.
- **Show palm:** Hold your hand out with your palm facing the camera to have your picture taken.
- **Timer:** Take time-delayed pictures or videos.

## Common

- **Grid lines:** Display viewfinder grid lines to help compose a picture or video.
- **Location tags:** Attach a GPS location tag to the picture.
- **Review pictures:** Review pictures after taking them.
- **Quick launch:** Press the Home key twice in quick succession to open the camera.
- **Storage location:** Select the memory location.
  - A memory card (not included) must be installed to view Storage location.
- **Floating Camera button:** Add a camera button that you can move anywhere on the screen.
- **Volume key function:** Use the Volume key as the camera key, the record key, a zoom key, or for system volume.
- **Shutter sound:** Play a tone when you take a picture.
- **Reset settings:** Reset the camera settings.



# Clock

The Clock app offers features for keeping track of time and setting alarms.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Clock**, and tap a tab to use a feature.

## Alarm

Use the Alarm tab to set one-time or recurring alarms, and choose options for how to be notified.


1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Clock** >  **Add alarm**.
3. Tap the following items to configure an alarm:
  - **Date**: Choose the day for this alarm.
  - **Time**: Set a time for the alarm.
  - **Repeat**: Choose when to repeat the alarm.
  - **Alarm name**: Enter a name for the alarm.
  - **Snooze**: Allow snoozing. Set interval and repeat values for the alarm while snoozing.
  - **Alarm sound**: Choose a sound to play for the alarm, and drag the slider to set the volume of the alarm.

- **Vibration:** Choose whether the alarm uses vibration alert.
- **Read time aloud:** Read the time aloud when the alarm rings.

4. Tap **Save** to save the alarm.


## Turn off alarm

At the set alarm time, the phone sounds the alarm and/or vibrates.

1. To stop an alarm, tap **Dismiss**, or swipe  **Dismiss** to the left or right.
2. To postpone the alarm, tap **Snooze**.

## Delete an alarm

You can delete an alarm that you created.



1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Clock**, and find the alarm in the alarm list (under Alarm), and then touch and hold it to select it.
3. Tap **Delete**.

DRAFT  
FOR INTERNAL USE ONLY



# World clock




The World clock lets you keep track of the current time in multiple cities around the globe.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Clock** > **World clock**.
3. Tap  **Add city**.
4. Tap **Search** and enter the name of the city.
5. Tap the city name in the list, and then tap **Add**.
  - To remove a city, touch and hold it, and tap **Delete**.

DRAFT  
FOR INTERNAL USE ONLY


## Time zone converter

Set a time in a city on your World clock list to see what the local times would be in the other listed cities.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Clock** > **World clock**.
3. Tap  **Time zone converter**.
4. Tap  **Menu** to choose a different city.
  - To add a city to the list, tap **Add city**.
5. Swipe the hours, minutes, and period (**AM** or **PM**) on the clock to set a time. Local times for the other cities listed are automatically updated.
  - To return the clock to the current time, tap **Reset**.

## Stopwatch


The Stopwatch lets you time events down to a hundredth of a second.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Clock** > **Stopwatch**.
3. Tap **Start** to begin timing.
  - To keep track of lap times, tap **Lap**.

4. Tap **Stop** to end timing.
  - To continue timing after stopping the clock, tap **Resume**.
  - To reset the Stopwatch to zero, tap **Reset**.

## Timer

The Timer provides a countdown timer for up to 99 hours, 59 minutes, and 59 seconds.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Clock > Timer**.
3. Use the keypad and tap **Hours**, **Minutes**, and **Seconds** to set the length of the Timer.
4. Tap **Start** to begin the Timer.
  - To temporarily stop the Timer, tap **Pause**. To continue timing after pausing, tap **Resume**.
  - To stop and reset the Timer, tap **Cancel**.

DRAFT  
FOR INTERNAL USE ONLY







# Contacts

Store and manage your contacts. You can synchronize with personal accounts added to your device. For more information, see [“Add an account” on page 199.](#)

**Note:** The Contacts app and the Contacts tab in the Phone app have different options and functions.

## Add a contact

Use the following procedure to add a new contact.



1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Contacts** >  **Create contact**, and then tap contact fields to enter information.
  - Choose a storage account for the contact. You can store the contact on the device or sync it with an account.
  - Tap  **Contact photo** to assign a picture or an animated GIF to the new contact.
  - Enter a name and other contact information.
    - Tap  **Add** field to enter additional entries.
    - Tap  **Remove** field to remove an entry.
    - Tap  **View more** for additional fields.

- Tap the label to the right of an entry to choose a label for the field (for example, Home or Work).
- Tap **Scan business card** to import contact information from a business card through the device's camera.

3. Tap **Save**.



## Edit a contact

When editing a contact, you can tap a field and change or delete information, or you can add more fields to the contact's list of information.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Contacts**, and then tap a contact.
3. Tap  **Details** > **Edit**.
4. Tap any of the fields to add, change, or delete information.
5. Tap **Save**.

## Share a contact



Share a contact by using various sharing methods.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Contacts**, and then tap a contact.
3. Tap  **Details** > **Share**.

4. Tap either **vCard file (VCF)** or **Text**.
5. Choose a sharing method and follow the prompts.



## Import contacts

Your device can import contacts from an installed memory card (not included).

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Contacts** >  **More options** > **Manage contacts**.
3. Tap **Import/Export contacts**.
4. Tap **Import** and follow the prompts.

## Export contacts




Manually back up contacts to an installed memory card (not included).

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Contacts** >  **More options** > **Manage contacts**.
3. Tap **Import/Export contacts**.
4. Tap **Export** and follow the prompts.




DRAFT  
FOR INTERNAL USE ONLY

# Link or unlink contacts

Consolidate contact information from multiple sources into one contact by linking entries into a single contact.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Contacts**, and then tap the contact to select it.
3. Tap  **Details** >  **More options** > **Link contacts**.
4. Tap contacts to choose them.
5. Tap **Link**.





To unlink contacts:



1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Contacts**, and then tap the contact to select it.
3. Tap  **Details** >  **More options** > **Manage linked contacts**.
4. Tap **Unlink** beside contacts to unlink them from the main contact.

DRAFT  
FOR INTERNAL USE ONLY

# Favorites


When you mark contacts as favorites, they are easily accessible from other apps.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Contacts**, and then tap a contact.
3. Tap  **Details**.
4. Tap  **Add to Favorites** to mark the contact as a favorite. The star brightens .

  - To remove the contact from Favorites, tap  **Remove from Favorites**. The star then dims .

# Delete contacts

Delete a single contact or multiple contacts.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Contacts**, and then touch and hold a contact to select it.
  - You can also tap other contacts to select them for deletion.
3. Tap **Delete**, and confirm when prompted.

DRAFT  
FOR INTERNAL USE ONLY




# Groups

You can use groups to organize your contacts.

## Create a group


Create your own contact groups.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Contacts** > **Groups**.
3. Tap **Create**, and then tap fields to enter information about the group:
  - **Group name:** Enter a name for the new group.
  - **Group ringtone:** Customize the sounds for the group.
  - **Add member:** Select contacts to add to the new group, and then tap **Done**.
4. Tap **Save**.

DRAFT  
FOR INTERNAL USE ONLY



## Add or remove group contacts

Add more contacts to a group, or remove contacts.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Contacts** > **Groups**, and then tap a group.
  - To remove a contact, touch and hold a contact to select it, and then tap **Remove**.
  - To add a contact, tap **Edit** > **Add member**, and then tap the contacts you want to add. When finished, tap **Done** > **Save**.

## Send a message to a group



Send a text message to members of a group.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Contacts** > **Groups**, and then tap a group.
3. Tap  **More options** > **Send message**.

DRAFT  
FOR INTERNAL USE ONLY



## Send an email to a group

Send an email to members of a group.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Contacts** > **Groups**, and then tap a group.
3. Tap  **More options** > **Send email**.
4. Tap contacts to select them, or tap the **All** checkbox at the top of the screen to select all, and then tap **Done**.
  - Only group members that have an email address in their records are displayed.
5. Choose an email account and follow the prompts.

## Delete a group



Delete a group you have created.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Contacts** > **Groups**, and then tap a group.
3. Tap  **More options** > **Delete**.
  - To only delete the group, tap **Group only**.
  - To delete the group and the contacts in the group, tap **Group and members**.

DRAFT  
FOR INTERNAL USE ONLY


# Contacts settings

These settings allow you to modify settings associated with using the Contacts app.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Contacts** >  **More options** > **Settings**.
3. Tap an option and follow the prompts.

## Direct share

Share content directly with your contacts from within any app. Once enabled, your frequent contacts are displayed in the Share window.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Advanced features** > **Direct share**, and tap **On/Off** to enable.





DRAFT  
FOR INTERNAL USE ONLY


# Email

View and manage all of your email accounts in one app. To add an email account, see [“Add an email account” on page 14.](#)

## Create and send an email


Learn how to create and send email messages.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Email** >  **Compose new email**.
  - Different email account may have additional steps and options.
3. Tap the **To** field to manually add an email address or tap  **Add from Contacts** to select a recipient from Contacts, Groups, or Recents.
  - If manually entering recipients, enter additional recipients by separating each entry with a semicolon (;). More recipients can be added at any time before the message is sent.
  - If adding a recipient from your Contacts, tap the contact to place a checkmark, and then tap **Done**. The contact is displayed in the recipients field.
  - Tap  **Show additional fields** to add Cc and Bcc fields.

4. Tap the **Subject** and **Message** fields to enter text.
  - Tap **Attach** to add files, images, audio, and more to your email.
  - Tap  **More options** for additional email options.
5. Review your message and tap **Send**.


## Manage the inbox

There are several tools available from the Inbox screen.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Email**.
  - Tap a message to read and reply or forward it.
  - Tap **Search** to search for key words in your email inbox.
  - Tap **Edit** for additional message options.
  - Tap **Sort by** to customize how messages display.


## View multiple email accounts

You can view email you receive for multiple accounts, or you can view email accounts individually.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Email**.




DRAFT

FOR INTERNAL USE ONLY

3. Tap  **Mailbox** at the top left of the screen to choose a different view:
  - **[Account name]**: View email for only one email account.
  - **All accounts**: View all email in a combined inbox.

## Remove email accounts




Email accounts can be removed from your device.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Email**.
3. Tap  **Mailbox** >  **Settings**.
4. Tap the account you want to remove.
5. Tap **Remove**, and confirm when prompted.

DRAFT  
FOR INTERNAL USE ONLY

# Email settings

Modify settings associated with using the Email app.


1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Email**.
3. Tap  **Mailbox** >  **Settings**.
  - Under **General**, tap an option, and then follow the prompts.
  - Tap an account to configure specific settings for only that account.

DRAFT  
FOR INTERNAL USE ONLY



# Galaxy Apps

Find and download premium apps that are exclusive to Galaxy devices. A Samsung account is required to download from Galaxy Apps.

1. From a Home screen, swipe up to access **Apps**.
2. Tap **Samsung** folder >  **Galaxy Apps**.

DRAFT  
FOR INTERNAL USE ONLY

# Gallery




View, edit, and manage pictures and videos.


The following categories allow you to organize your content:

- **Pictures:** View pictures and videos in the order they were saved. Content is organized by date.
- **Albums:** Create custom albums to organize your pictures and videos.
- **Stories:** Create custom collections of related pictures and videos and share them with your contacts.

## View pictures






Pictures stored on your device are viewable in the Gallery app.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Gallery > Pictures**.
3. Tap a picture to view it. Swipe left or right to view other pictures or videos.
  - To mark the picture as a favorite, tap  **Favorite**. The picture is added to Favorites under the Albums tab.
  - To use Bixby Vision on the current picture, tap  **Bixby Vision**. For more information, see [“Bixby” on page 34](#).

- To access the following features, tap  **More options**:
  - **Details**: View and edit information about the picture, including the date created, location, and properties.
  - **Set as wallpaper**: Set the picture as wallpaper.
  - **Show date and location tags**: See date and location tags when viewing your pictures.
  - **Print**: Send the picture to a connected printer.
  - **Open in Photo Editor Pro**: Edit the picture in Photo Editor Pro.





## Edit pictures

Edit pictures stored on your device.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Gallery > Pictures**.
3. Tap a picture to view it.
  -  **Transform**: Rotate, flip, crop, or make other changes to the overall appearance of the picture.
  -  **Effects**: Add color effects.
  -  **Stickers**: Overlay illustrated or animated stickers.
  -  **Draw**: Add handwritten text or hand drawn content.

# Play video

Play videos stored on your device.



1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Gallery > Pictures**.
3. Tap a video to view it. Swipe left or right to view other pictures or videos.
  - To mark the video as a favorite, tap  **Favorite**. The video is added to Favorites under the Albums tab.
  - To access the following features, tap  **More options**:
    - **Details**: View and edit information about the video, including the date created, location, and properties.
    - **Set as wallpaper**: Set the video as wallpaper on the Lock screen.
    - **Show date and location tags**: See date and location tags when viewing your videos.
4. Tap  **Play video** to play the video.

# Edit video

Edit videos stored on your device.



DRAFT

FOR INTERNAL USE ONLY

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Gallery** > **Pictures**.
3. Tap a video to view it.
4. Tap  **Edit** to cut segments of the video.
5. Tap **Save**, and then confirm when prompted.



## Share pictures and videos

Share pictures and videos from the Gallery app.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Gallery** > **Pictures**.
3. Tap  **More options** > **Share**, and then tap pictures and videos to select them.
4. Tap **Share**, and then choose an app or connection to use for sharing your selection. Follow the prompts.

## Delete pictures and videos

Delete pictures and videos stored on your device.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Gallery**.
3. Tap  **More options** > **Edit**.

DRAFT

FOR INTERNAL USE ONLY

4. Tap pictures and videos to select them, or tap the **All** checkbox at the top of the screen to select all pictures and videos.
5. Tap **Delete**, and confirm when prompted.

## Take a screenshot

Capture an image of your screen. It will automatically create a Screenshots album in the Gallery app.

- From any screen, press and hold the **Power** and **Volume down** keys.

DRAFT  
FOR INTERNAL USE ONLY

# Google Apps

Enjoy these apps from Google. Certain apps require a Google Account. Visit [google.com](https://google.com) to learn more.



## Chrome

Browse the Internet with Chrome™ and bring your open tabs, bookmarks, and address bar data from your computer to your mobile device.

Visit [support.google.com/chrome](https://support.google.com/chrome) to learn more.



## Drive

Open, view, rename, and share files saved to your Google Drive™ cloud account.

Visit [support.google.com/drive](https://support.google.com/drive) to learn more.



## Duo

Make one-to-one video calls.

Visit [support.google.com/duo](https://support.google.com/duo) to learn more.



## Gmail

Send and receive email with Google's web-based email service.

Visit [support.google.com/mail](https://support.google.com/mail) to learn more.



## Google

Find online content with tools that learn what interests you. Turn on your personalized feed to receive customized content.



## Maps

Get directions and other location-based information. You must enable location services to use Google Maps. For more information, see “Location” on page 151.

Visit [support.google.com/maps](https://support.google.com/maps) to learn more.



## Photos

Store and back up your photos and videos automatically to your Google Account with Google Photos<sup>™</sup>.

Visit [support.google.com/photos](https://support.google.com/photos) to learn more.



 
## Play Movies & TV

Watch movies and TV shows purchased from Google Play. You can also view videos saved on your device.

Visit [play.google.com/store/movies](https://play.google.com/store/movies) to learn more.

DRAFT  
FOR INTERNAL USE ONLY



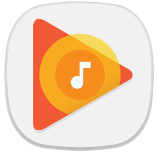

## Play Music

Play music and audio files on your device.

Visit [support.google.com/music](https://support.google.com/music) to learn more.



## Play Store

Find new apps, movies and TV shows, music, books, magazines, and games in the Google Play<sup>™</sup> store.

Visit [support.google.com/play](https://support.google.com/play) to learn more.



## YouTube










Watch and upload YouTube<sup>™</sup> videos right from your device.

Visit [support.google.com/youtube](https://support.google.com/youtube) to learn more.

DRAFT  
FOR INTERNAL USE ONLY

# Internet








Access the Internet with a fully-featured web browser. For more information, visit [samsung.com/us/support/owners/app/samsung-internet](https://samsung.com/us/support/owners/app/samsung-internet).

1. From a Home screen, swipe up to access **Apps**.
  2. Tap **Samsung** folder >  **Internet**.
  3. Tap the address field, enter the web address, and then tap **Go** on the keyboard.
-  **Add to Bookmarks:** Add the current web page to bookmarks.
  -  **Refresh:** Refresh or reload the current web page.
  -  **Back** or  **Back:** Return to the previous page.
  -  **Forward:** Go forward to a recent page.
  -  **Home:** Display your Internet Home screen.
  -  **Bookmarks:** Manage bookmarked pages, saved pages, and history.
  -  **Tabs:** Manage open tabs. The number on the icon indicates the number of tabs that are currently open.

DRAFT  
FOR INTERNAL USE ONLY




# Quick menu

Access common features of your browser.

- Tap  **Quick menu** for the following options:
-  **Share**: Share the web page with others.
  -  **New tab**: Open a new tab.
  -  **Turn on Night mode**: Switch to Night mode.
  -  **Web page text size**: Change the text size.
  -  **Close**: Close the Quick menu.
  -  **Settings**: Change Quick menu options.

## Browser tabs

Use tabs to view multiple web pages at the same time.

1. From a Home screen, swipe up to access **Apps**.
2. Tap **Samsung** folder >  **Internet**.
3. Tap  **Tabs** > **New tab**.
  - To close a tab, tap  **Close tab**.



DRAFT  
FOR INTERNAL USE ONLY

# Bookmarks

The Bookmarks page stores Bookmarks, Saved pages, and History.



## Save a Bookmark

Bookmarking a web page saves the web address so that you can access it quickly.

1. From a Home screen, swipe up to access **Apps**.
2. Tap **Samsung** folder >  **Internet**.
3. Tap  **Add to Bookmarks**.

## Open a Bookmark



Quickly launch a web page from the Bookmarks page.

1. From a Home screen, swipe up to access **Apps**.
2. Tap **Samsung** folder >  **Internet**.
3. Tap  **Bookmarks** > **Bookmarks**.
4. Tap a bookmark entry.

DRAFT  
FOR INTERNAL USE ONLY



## Save a web page

Saving a web page stores its content on your device so that you can access it offline.

1. From a Home screen, swipe up to access **Apps**.
2. Tap **Samsung** folder >  **Internet**.
3. Tap  **More options** > **Save webpage**.

## Open a saved web page

View a web page that has been saved.

1. From a Home screen, swipe up to access **Apps**.
2. Tap **Samsung** folder >  **Internet**.
3. Tap  **Bookmarks** > **Saved pages**.
4. Tap a saved page.

## View history



To view a list of recently visited web pages:

- ▶ Tap  **Bookmarks** > **History**.

DRAFT  
FOR INTERNAL USE ONLY

# Share pages



Web pages can be shared with your contacts.

1. From a Home screen, swipe up to access **Apps**.
2. Tap **Samsung** folder >  **Internet**.
3. Tap  **More options** > **Share**, and follow the prompts.

## Secret mode

Pages viewed in Secret mode are not listed in your browser history or search history, and leave no traces (such as cookies) on your device. Secret tabs are a darker shade than the normal tab windows.



Any downloaded files remain on your device after you close the secret tab.

1. From a Home screen, swipe up to access **Apps**.
2. Tap **Samsung** folder >  **Internet**.
3. Tap  **Tabs**.
4. Tap **Turn on secret mode**.
5. Tap **Set password** to protect your Secret mode data with a password.

– or –



Tap **Don't use password**.

To turn off Secret mode:

1. From a Home screen, swipe up to access **Apps**.
2. Tap **Samsung** folder >  **Internet**.
3. Tap  **1** **Tabs** > **Turn off secret mode**.

## Internet settings






Modify settings associated with using the Internet app.

1. From a Home screen, swipe up to access **Apps**.
2. Tap **Samsung** folder >  **Internet**.
3. Tap  **More options** > **Settings**.
4. Tap an option and follow the prompts.

DRAFT  
FOR INTERNAL USE ONLY

# Messages

Learn how to send and receive text messages (SMS) and multimedia messages (MMS).

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Messages** >  **New message**.
  - You can choose recipients from Contacts or enter a phone number.
3. Tap **Start**.
4. To create an audio recording, touch and hold  **Audio**.  
– or –  
Tap the **Enter message** field to enter a message.
  - To add an attachment, tap  **Attach**.
5. Review the message and tap  **Send**.


**Note:** If you exit a message before you send it, the message is automatically saved as a draft.

## Send SOS messages



Send a message with your location to designated contacts when you are in an emergency situation.

DRAFT  
FOR INTERNAL USE ONLY






1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Advanced features** > **Send SOS messages**, and then tap **On/Off** to enable this feature.
3. Tap **Send messages to** > **Add** and add recipients by creating new contacts or selecting from Contacts.
  - To include a picture from your front and rear camera, tap **Attach pictures**.
  - To include a five-second audio recording in your SOS message, tap **Attach audio recording**.
4. Press the **Power** key quickly three times to send an SOS message.

## View Messages

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Messages**, and then tap a message to view it.
  - To play an audio or video attachment, tap  **Play**.
  - To scroll through the list of messages, swipe up or down.



## Delete messages

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Messages** >  **More options** > **Edit**.

3. Tap each message you want to delete.
4. Tap  **Delete**, and confirm when prompted.



## Message search

Search through your messages by using the search feature.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Messages** > **Search**.
3. Enter a word or phrase to search for, and then tap  **Search** on the keyboard.

## Messages settings



Configure the settings for text and multimedia messages.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Messages** >  **More options** > **Settings**.

DRAFT  
FOR INTERNAL USE ONLY

# Emergency alerts


Emergency alerts notify you of imminent threats and other situations. There is no charge for receiving an Emergency alert message.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Messages** >  **More options** > **Settings**.
3. Tap **Emergency alert settings** to customize notifications for emergency alerts.

DRAFT  
FOR INTERNAL USE ONLY

# My Files

View and manage files stored on your device, including images, videos, music, and sound clips.

1. From a Home screen, swipe up to access **Apps**.
2. Tap **Samsung** folder >  **My Files**.
3. Tap a category to view the relevant files or folders.
4. Tap a file or folder to open it.

## File groups




Files stored in the device are organized into the following groups:

- **Recent files:** View recently accessed files.
  - This option displays if one or more files have been accessed recently.
- **Categories:** View your files based on the file type.
- **Phone:** View folders and files located on the device and optional memory card (not included).
- **Cloud:** View files saved on your cloud accounts.
  - Cloud drives vary depending on the services you sign in to.

DRAFT  
FOR INTERNAL USE ONLY

 
# My Files options

Use My Files options to search, edit, clear file history, and more.

1. From a Home screen, swipe up to access **Apps**.
2. Tap **Samsung** folder >  **My Files**. The following options are available:
  -  **Search**: Search for a file or folder.
  -  **More options**:
    - **Get more space**: View storage information for your device.
    - **Settings**: View settings for the app.

DRAFT  
FOR INTERNAL USE ONLY

# Phone

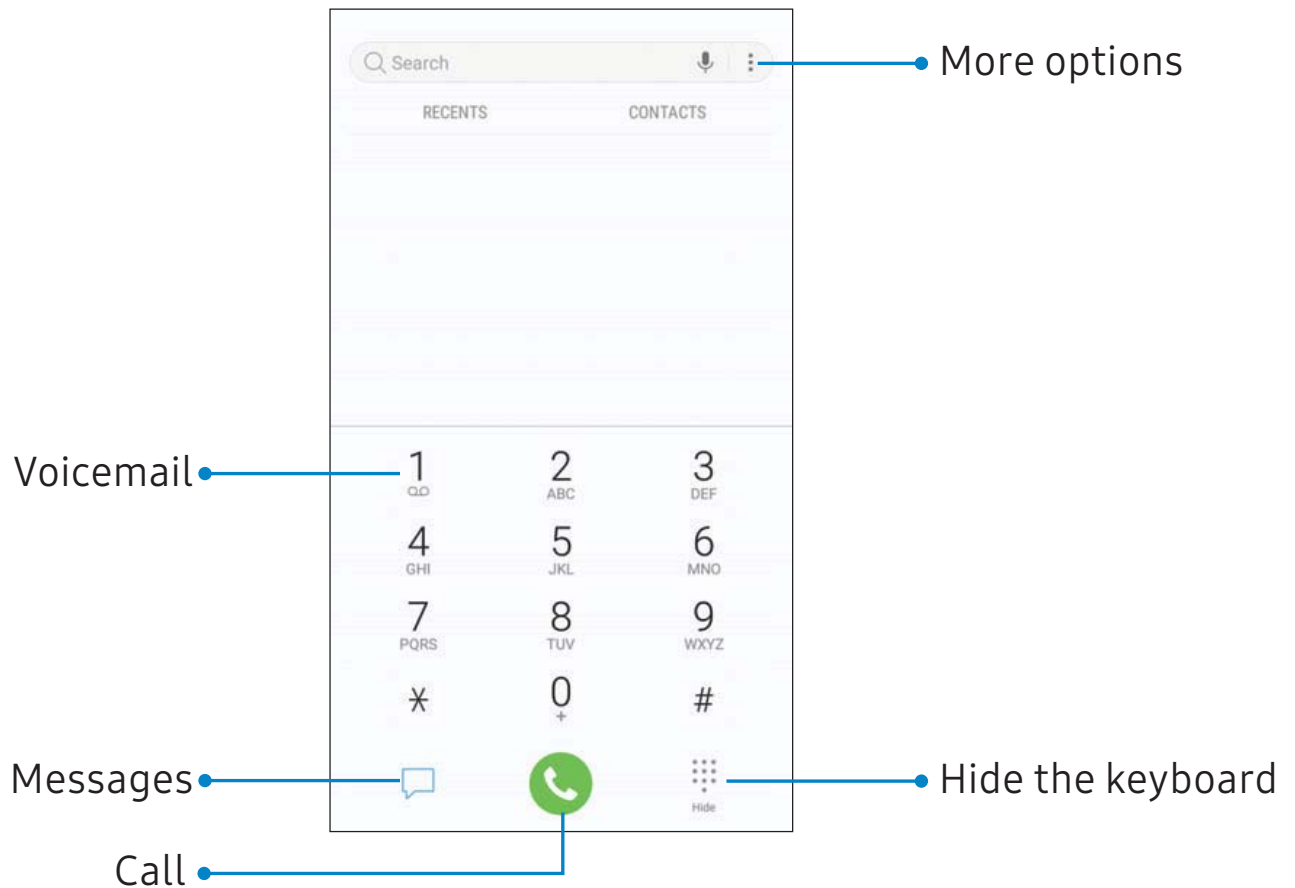




DRAFT  
FOR INTERNAL USE ONLY

Devices and software are constantly evolving — the illustrations you see here are for reference only.


# Make a call

Make a call from a Home screen.

1. From a Home screen, tap  **Phone**.
2. Enter a number on the keypad and tap  **Call**.
  - Tap  **Keypad** if the keypad is not displayed.



## Enable swipe to call

Swipe a contact or number to the right to make a call.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Advanced features** > **Swipe to call or send messages**.
3. Tap **On/Off** to enable this feature.

## Make a call from Recents


All incoming, outgoing, and missed calls are recorded in the Call log.

1. From a Home screen, tap  **Phone**.
2. Tap **Recents** to display a list of recent calls.
3. Tap a contact, and then tap  **Call**.

DRAFT  
FOR INTERNAL USE ONLY


## Make a call from Contacts

Call a contact from the Contacts app.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Contacts**.
3. Swipe your finger across a contact to the right to call the contact.

## Direct calls

Call the contact whose call log, message, or contact details are currently on the screen by bringing the device close to your ear.


1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Advanced features** > **Direct call**, and tap **On/Off** to enable.

DRAFT  
FOR INTERNAL USE ONLY




## Answer a call

When a call is received, the phone rings and the caller's phone number or name is displayed. If you are using an app, a pop-up screen is displayed for the incoming call.


- ▶ On the incoming call screen, drag  **Answer** to the right to answer the call.

– or –


On the incoming call pop-up screen, tap  **Answer** to answer the call.

## Decline a call

You can choose to decline an incoming call. If you are using an app, a pop-up screen is displayed for the incoming call.

- ▶ On the incoming call screen, drag  **Decline** to the left to reject the call and send it to your voicemail.

– or –

On the incoming pop-up screen, tap  **Decline** to reject the call and send it to your voicemail.

DRAFT  
FOR INTERNAL USE ONLY

## Decline with a message

You can choose to decline an incoming call with a text message response.

- ▶ On the incoming call screen, drag **Send message** upward and select a message.

– or –

On the incoming call pop-up screen, tap **Send message** and select a message.

## End a call

- ▶ Tap  **End** when you are ready to end your call.

## Actions while on a call

You can adjust call volume, switch to a headset or speaker, and even multitask while on a call.

### Adjust the call volume

- ▶ Press the Volume keys to increase or decrease the volume.

– or –

Tap  **Extra volume** to quickly add more volume to the incoming audio.

DRAFT  
FOR INTERNAL USE ONLY

## Switch to headset or speaker

Listen to the call using the speaker or through a Bluetooth<sup>®</sup> headset (not included).

► Tap  **Speaker** to hear the caller using the speaker.

– or –

Tap  **Bluetooth** to hear the caller using a Bluetooth headset.

DRAFT  
FOR INTERNAL USE ONLY


## Multitask

If you exit the call screen to use another app, your active call is indicated in the Status bar.

To return to the call screen:

- ▶ Drag the Status bar down to display the Notification panel and tap the call.


To end a call while multitasking:

- ▶ Drag the Status bar down to display the Notification panel, and then tap  **End call**.

DRAFT  
FOR INTERNAL USE ONLY

# Call log



The numbers of the calls you have dialed, received, or missed are stored in the Call log.

1. From a Home screen, tap  **Phone**.
2. Tap **Recents**. A list of recent calls is displayed. If the caller is in your Contacts list, the caller's name is displayed.

DRAFT  
FOR INTERNAL USE ONLY

## Save a contact from a recent call

Use recent call information to create a contact or update your Contacts list.

1. From a Home screen, tap  **Phone**.
2. Tap **Recents**.
3. Tap the call that contains the information that you want to save to your Contacts list.
4. Tap  **Details**.
5. Tap **Create contact**.


– or –

If you want to replace the number for an existing contact, tap **Update existing**.

DRAFT  
FOR INTERNAL USE ONLY

## Delete call records



To delete Call log entries:

1. From a Home screen, tap  **Phone**.
2. Tap **Recents**.
3. Touch and hold the call you want to delete from the Call log.
4. Tap **Delete**.



DRAFT  
FOR INTERNAL USE ONLY

# Block a number

By adding a caller to your Block list, future calls from this number are sent directly to your voicemail, and messages are not received.





1. From a Home screen, tap  **Phone**.
2. Tap **Recents**.
3. Tap the caller you want to add to the Block list.
4. Tap  **Details** > **Block number**, and confirm when prompted.

You can also modify your Block list in Settings:

- From a Home screen, tap  **Phone** >  **More options** > **Settings** > **Block numbers**.

# Speed dial


You can assign a shortcut number to a contact for speed dialing their default number.

1. From a Home screen, tap  **Phone**.
  - Tap  **Keypad** if the keypad is not displayed.
2. Tap  **More options** > **Speed dial numbers**. The Speed dial screen displays the reserved speed dial numbers.
3. Tap an unassigned number.
  - Tap  **Menu** to select a different Speed dial number



than the next one in sequence.

- Number 1 is reserved for Voicemail.



4. Type in a name or number, or tap  **Add from Contacts** to assign a contact to the number.

- The selected contact is displayed in the Speed dial number box.

DRAFT  
FOR INTERNAL USE ONLY





## Make a call with Speed dial

You can make a call using Speed dial.

1. From a Home screen, tap  **Phone**.
  - Tap  **Keypad** if the keypad is not displayed.
2. Touch and hold the Speed dial number.
  - If the Speed dial number is more than one digit long, enter the first digits, and then hold the last digit.

## Remove a Speed dial number



You can remove an assigned Speed dial number.

1. From a Home screen, tap  **Phone**.
  - Tap  **Keypad** if the keypad is not displayed.
2. Tap  **More options** > **Speed dial numbers**.
3. Tap  **Remove** by the contact you want to remove from Speed dial.

DRAFT  
FOR INTERNAL USE ONLY



# Emergency calls

You can dial the emergency telephone number in your region regardless of the phone's cellular service status. If your phone is not activated, you can only make an emergency call.

1. From a Home screen, tap  **Phone**.
2. Enter the emergency telephone number (911 in North America) and tap  **Call**.
3. Complete your call. During this type of call, you have access to most in-call features.

## Make an emergency call from a locked screen



The emergency telephone number can be dialed even if the phone is locked, allowing anyone to use your phone to call for help in an emergency. When accessed from a locked screen, only the emergency calling feature is accessible to the caller. The rest of the phone remains secured.

1. Drag  **Phone** upward to open the call screen.
2. Tap **Emergency call** to display the Emergency dialer.
3. Enter the emergency telephone number (911 in North America) and tap  **Call**.
4. Complete your call. During this type of call, you have access to most in-call features.

# Voicemail

Use your phone's voicemail feature.

For information on setting up voicemail, see [“Set up your voicemail” on page 14.](#)

1. From a Home screen, tap  **Phone**.
2. Touch and hold  **Voicemail**.
3. Follow the voice prompts from the voicemail center.



DRAFT  
FOR INTERNAL USE ONLY

# Optional calling services

If available with your mobile service plan, the following calling services are supported.

## Place a multi-party call



If your service plan supports this feature, you can make another call while a call is in progress.

1. From the active call, tap **+** **Add call** to dial the second call.
2. Dial the new number and tap  **Call**. When the call is answered:
  - Tap the **On hold** number to switch between the two calls.
  - Tap  **Merge** to hear both callers at once (multi-conferencing).

DRAFT  
FOR INTERNAL USE ONLY



# Phone settings

These settings allow you to modify settings associated with the Phone app.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Phone** >  **More options** > **Settings**.
3. Tap an option and follow the prompts.

## TTY mode


A teletypewriter (TTY) is a telecommunications device that allows people who are deaf, hard of hearing, or who have speech or language disabilities to communicate by telephone.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Phone** >  **More options** > **Settings**.
3. Tap **More settings** > **TTY mode**.
4. Tap **TTY OFF**, **TTY FULL**, **TTY HCO**, or **TTY VCO**.

DRAFT  
FOR INTERNAL USE ONLY

# Samsung Gear




Connect your device to your Samsung Gear using this application.  
For more information, visit [samsung.com/  
us/support/owners/app/samsung-gear](https://samsung.com/us/support/owners/app/samsung-gear).

1. From a Home screen, swipe up to access **Apps**.
2. Tap **Samsung** folder >  **Samsung Gear**.

DRAFT  
FOR INTERNAL USE ONLY


# Samsung Notes

Use Samsung Notes to write and save notes. For more information, visit [samsung.com/us/support/owners/app/samsung-notes](https://samsung.com/us/support/owners/app/samsung-notes).

1. From a Home screen, swipe up to access **Apps**.
2. Tap **Samsung** folder >  **Samsung Notes**.
3. Tap  **Create** and type a note. Available options include:
  - **Text**: Use the keyboard to type text.
  - **Pen**: Use your finger to write text.
  - **Brush**: Create a drawing.
  -  **Attach**: Insert an image or voice file into the note.
4. Tap **Save** when finished.

## Edit notes

Make edits to notes you create.

1. From a Home screen, swipe up to access **Apps**.
2. Tap **Samsung** folder >  **Samsung Notes**.
3. Tap a note to view it.



DRAFT  
FOR INTERNAL USE ONLY



4. Tap **Edit** to make changes.
5. Tap **Save**.



## Browse notes

Browse notes you create.

1. From a Home screen, swipe up to access **Apps**.
2. Tap **Samsung** folder >  **Samsung Notes**.
  - Browse note entries by swiping up or down.
  - To search for a note, tap  **Search**.


## Notes options

You can edit, share, or manage notes.

1. From a Home screen, swipe up to access **Apps**.
2. Tap **Samsung** folder >  **Samsung Notes**.
3. Tap  **More options** for the following options:
  - **Edit**: Select notes to share, delete, or move.
  - **Sort by**: Change the way notes are organized.
  - **List/Grid view**: Switch between List view and Grid view.
  - **Trash**: View deleted notes.
  - **Settings**: View settings for the Samsung Notes app.



# Samsung+

Samsung+ allows you to access live customer support, view device diagnostics, and learn about your registered Samsung devices. For support, visit [samsung.com/us/samsung-plus](https://samsung.com/us/samsung-plus).

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Samsung+**.
3. Follow the prompts to log in with either a Samsung account or a Google Account.

## Plus help

The plus icon is at the bottom of every screen to provide you quick access to the help you need.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Samsung+**.
3. Tap  **Plus** for the following options:
  - **Search:** Enter keywords to find the information you need.
  - **Community:** View community boards where you can ask questions and give answers to other Samsung users.
  - **Text chat:** Chat with an automated support system by texting.

- **Call us:** Start a phone call with customer service.
- **Video chat:** Start a video call with customer service.

## Quick tabs


The app will open to your Home page. Swipe left and right across the tabs to view Help topics.

- **Home:** Register your Samsung devices and view customized cards.
- **Diagnostics:** View storage, connection speed, and battery levels for your device.
- **Learn:** View Articles about your device to help you get the most out of it.
- **Community:** View community boards where you can ask questions and give answers to other Samsung users.
- **Get help:** View quick links to call, video, and community support for your device.

DRAFT  
FOR INTERNAL USE ONLY


# Secure Folder

Secure folder is a private encrypted space on the device that can store your private data, files, and apps.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Secure Folder**.
3. Follow the prompts to create a secure lock for your folder.

## Add apps to the Secure Folder


Add apps to the secure folder to add an extra level of security.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Secure Folder**.
3. Tap **Add apps** and tap the apps you want to add to the Secure folder.
4. Tap **Add**.
  - To remove apps from the Secure folder, tap **Edit apps**, select the apps, and tap **Uninstall/Disable**.

DRAFT  
FOR INTERNAL USE ONLY



# Add files to the Secure Folder

Add files to the secure folder to add an extra level of security.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Secure Folder**.
3. Tap **Add files** and tap the location of your files.
4. Tap the file you want to add, and tap **Done**.
  - Secured files are accessed through the **My Files** app.

# Customize Secure Folder



For added security, you can change the app image and name for Secure folder.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Secure Folder**.
3. Tap  **More options** > **Customize icon**.
  - To change the app name, tap under Enter app name and type a new name, and tap **Apply**.
  - To change the app icon, tap an icon, and tap **Apply**.

DRAFT  
FOR INTERNAL USE ONLY

# Secure Folder settings


Customize your secure folder settings.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Secure Folder**.
3. Tap  **More options** > **Settings** and tap an option to customize.

# Smart-Things

Control your devices by monitoring them in one place. Check the status of your devices by looking at the dashboard.

**Note:** Non-Samsung connected device errors or defects are not covered by the Samsung warranty; contact the non-Samsung device manufacturer for support.

1. From a Home screen, swipe up to access **Apps**.
2. Tap **Samsung** folder >  **Smart-Things**, and sign in with your Samsung account.
3. Follow the prompts to begin using Smart-Things.

DRAFT  
FOR INTERNAL USE ONLY

# TracFone apps

The following apps from TracFone are preloaded on your device.



## 1Weather

Receive real-time local weather information at any location in the world. Access 7-day and hourly weather forecasts for your area.

Visit [1weatherapp.com](http://1weatherapp.com) to learn more.



## My Account Downloader

Access your current account information.



## Voice Mail

Retrieve messages left by unanswered calls.



## Wi-Fi Utility

Access free, high-speed data by automatically connecting to reputable Wi-Fi hotspots when available.

DRAFT  
FOR INTERNAL USE ONLY

# Additional apps

The following apps are also preloaded on your device.



## Facebook

Keep up with friends and family with the Facebook app. Share updates, photos, and videos, as well as text, chat, and play games.

DRAFT  
FOR INTERNAL USE ONLY




# Settings

Configure your  
device's connections  
and settings.


DRAFT  
FOR INTERNAL USE ONLY

# Access Settings

There are a couple of ways to access your device settings.



- ▶ From a Home screen, swipe up to access **Apps**, and then tap  **Settings**.

– or –

Drag down from the Status bar to display the Notification panel, and then tap  **Settings**.

## Search for Settings

If you are not sure exactly where to find a certain setting, you can use the Search feature.

1. From a Home screen, swipe up to access **Apps**, and then tap  **Settings**.
2. Tap  **Search**.
3. Enter a word or words in the **Search** field. As you type, settings that match display on the screen.
4. Tap an entry to go to that setting.

DRAFT  
FOR INTERNAL USE ONLY


# Connections

Manage connections between your device and a variety of networks and other devices.

DRAFT  
FOR INTERNAL USE ONLY



# Wi-Fi

Connect your device to a Wi-Fi network.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Connections** > **Wi-Fi**, and then tap **On/Off** to turn on Wi-Fi.
  - When Wi-Fi is turned on, your device automatically scans for available networks and displays them.
3. Tap the network you want to connect to.
  - When you select an open network, you are automatically connected to the network. Otherwise, enter a password to connect.

## Manually connect to a Wi-Fi network

Connect your device to a Wi-Fi network that is hidden.


1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Connections** > **Wi-Fi**, and then tap **On/Off** to turn on Wi-Fi.
3. Tap  **Add network** at the bottom of the list.
4. Enter information about the Wi-Fi network:
  - **Network name:** Enter the network name.

- **Security:** Select a security option and enter your password.
- **Auto reconnect:** Connect to this network automatically.
- **Show advanced options:** Add advanced options, such as IP settings and Proxy settings.

5. Tap **Connect**.

## Wi-Fi preferences

Customize advanced Wi-Fi services.


1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Connections** > **Wi-Fi**, and then tap **On/Off** to turn on Wi-Fi.
3. Tap **Advanced**. To view all network settings, tap **View more**.
  - **Switch to mobile data:** Connect automatically to a mobile network connection when the Wi-Fi connection is unstable. When the Wi-Fi signal is strong, it switches back to Wi-Fi.
  - **Turn on Wi-Fi automatically:** Enable Wi-Fi in frequently used locations.
  - **Network notification:** Receive notifications when open networks in range are detected.

- **Manage networks:** View your saved Wi-Fi networks.
- **Wi-Fi control history:** View devices that have turned your Wi-Fi on or off.
- **WPS push button:** Connect to a Wi-Fi network by pressing the WPS button on a router.
- **WPS PIN entry:** Connect to a Wi-Fi network by entering your WPS PIN.
- **Keep Wi-Fi on during sleep:** Specify whether to disconnect from Wi-Fi when the device is asleep.
- **Install network certificates:** Install authentication certificates.
- **MAC address:** View your device's MAC address, which is required when connecting to some secured networks (not configurable).
- **IP address:** View your device's IP address (not configurable).

DRAFT  
FOR INTERNAL USE ONLY



# Wi-Fi Direct

Wi-Fi Direct uses Wi-Fi capability to share data between devices. A Wi-Fi network connection is not required.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Connections** > **Wi-Fi**, and then tap **On/Off** to turn on Wi-Fi.
3. Tap **Wi-Fi Direct**.
  - Your device scans for discoverable Wi-Fi Direct devices.
4. Tap a device, and then follow the prompts to connect.

## Share data with Wi-Fi Direct

Share data with another device using Wi-Fi Direct.

1. From an app, tap  **Share**.  
– or –  
Tap  **More options** > **Share**.
2. Tap **Wi-Fi Direct** and follow the prompts.

DRAFT  
FOR INTERNAL USE ONLY


# Receive data with Wi-Fi Direct

When another device attempts to send a file to your device using Wi-Fi Direct, your device begins downloading the file.

- To open the file, drag down the Status bar and tap **File received**.


# Disconnect from Wi-Fi Direct

Disconnect your device from a Wi-Fi Direct device.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Connections** > **Wi-Fi** > **Wi-Fi Direct**.
3. Tap a device to disconnect it.

# Bluetooth

Bluetooth allows you to pair your device to another Bluetooth-enabled device. Once a pairing is created, the devices continue to recognize their partnership and exchange information without having to re-enter a passcode.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Connections** > **Bluetooth**, and then tap **On/Off** to turn on Bluetooth.

DRAFT  
FOR INTERNAL USE ONLY





- Your device scans for discoverable Bluetooth devices. To scan again, tap **Scan**.

3. Tap a device, and follow the prompts to connect.



## Rename a paired device

Rename a paired device to make it easier to recognize.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Connections** > **Bluetooth**, and then tap **On/Off** to turn on Bluetooth.
3. Tap  **Settings** next to the previously paired device, and then tap **Rename**.
4. Enter a new name, and tap **Rename**.

## Share data with Bluetooth

Use Bluetooth to transfer information to a paired device.

1. From an app, tap  **Share**.  
  
– or –  
  
Tap  **More options** > **Share**.
2. Tap **Bluetooth** and follow the prompts.

DRAFT  
FOR INTERNAL USE ONLY



# Receive data with Bluetooth

When another device attempts to send a file to your device using Bluetooth, you will see a request to accept the file.

1. Tap **Accept**.
2. To open the file, drag down the Status bar and tap **File received**.


# Unpair from a Bluetooth device

When you unpair from a Bluetooth device, the two devices no longer recognize each other. To connect again, you have to pair the devices.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Connections** > **Bluetooth**, and then tap **On/Off** to turn on Bluetooth.
3. Tap  **Settings** next to the paired device, and then tap **Unpair** to delete the paired device.


# Phone visibility

Allow other devices to find your mobile device and transfer files.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Connections** > **Phone visibility**, and then tap **On/Off**.


# Data usage

View your current mobile and Wi-Fi data usage.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Connections** > **Data usage**.


## Enable Data saver

Prevent selected apps from sending or receiving data in the background.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Connections** > **Data usage** > **Data saver**.
3. Tap **On/Off** to turn Data saver on.
  - To allow some apps to have unrestricted data usage, tap **Allow app while Data saver on**, and tap **On/Off** next to each app to specify restrictions.

## Monitor mobile data


Enable mobile data to access the Internet through your mobile network.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Connections** > **Data usage**. The following options are available:
  - **Mobile data**: Enable mobile data services.

- **Mobile data usage:** Monitor mobile data usage by app.
- **Billing cycle and data warning:** Set the day of the month to start the bill cycle for your device.


## Monitor Wi-Fi data

View your Wi-Fi data usage and set restrictions for Wi-Fi networks.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Connections** > **Data usage**. The following options are available:
  - **Wi-Fi data usage:** View data usage over Wi-Fi connections.
  - **Restrict networks:** Select networks to prevent apps that are running in the background from using them.

## Airplane mode


Airplane mode disconnects your device from all networks and turns off connectivity features.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Connections** > **Airplane mode**.
3. Tap **On/Off** to enable this feature.

DRAFT  
FOR INTERNAL USE ONLY


# Mobile hotspot

Activate Mobile hotspot to allow other devices to use your device's Internet connection.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Mobile hotspot and tethering** > **Mobile hotspot**.
3. Tap **On/Off** to turn on Mobile hotspot.
4. Activate Wi-Fi on the target device.
5. Scan for Wi-Fi hotspots and select your device's Mobile hotspot.
6. Enter your device's Mobile hotspot password on the target device.



## Change the mobile hotspot password

Change your Mobile Hotspot password.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Mobile hotspot and tethering** > **Mobile hotspot**.
3. Tap the password and enter a new password.
4. Tap **Save**.



# Allowed devices list

Control which devices can connect to your Mobile hotspot.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Mobile hotspot and tethering** > **Mobile hotspot**.
3. Tap  **More options** > **Allowed devices**, and then tap **Add** to enter the other device's Device name and MAC address.
4. Tap **Add** to add the device.
  - To restrict connections to your Allowed devices list, tap **Allowed devices only**.

# Configure mobile hotspot settings



Manage your security and connecting settings.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Mobile hotspot and tethering** > **Mobile hotspot**.
3. Tap  **More options** > **Configure mobile hotspot** for the following settings:
  - **Network name:** View and change the name of your Mobile hotspot.

- **Security:** Choose the security level for your Mobile hotspot.
- **Password:** If you choose a security level that uses a password, you can view or change it.
- **Show advanced options:** Configure additional Mobile hotspot settings.


## Timeout settings

Automatically turn off Mobile hotspot if there are no connected devices.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Mobile hotspot and tethering** > **Mobile hotspot**.
3. Tap  **More options** > **Timeout settings**, and then select an interval.

## Tethering

You can use tethering to share your device's Internet connection with a computer.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Mobile hotspot and tethering**.


DRAFT  
FOR INTERNAL USE ONLY

3. Tap an option:

- Tap **Bluetooth tethering** to share your device's Internet connection using Bluetooth.
- Connect the computer to the device using a USB cable, and then tap **USB tethering**.


## Mobile networks

Control your device's access to networks and mobile data service.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Connections** > **Mobile networks**:
  - **Data roaming**: Enable or disable data while roaming on other mobile networks.
  - **Network mode**: Change the network mode.
  - **Access Point Names**: Choose or add APNs.

## Location

Some apps may require one or more location services be turned on for full functionality.


1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Connections** > **Location**.
3. Tap **On/Off** to turn on Location services.



4. Tap **Locating method** to select how your location is determined:
  - **High accuracy**: Uses GPS, Wi-Fi, and mobile networks.
  - **Battery saving**: Uses Wi-Fi and mobile networks (no GPS).
  - **Phone only**: Uses GPS only.
5. Tap **Improve accuracy** to use other connections for determining your location:
  - **Wi-Fi scanning**: Allow apps and services to scan for Wi-Fi networks automatically, even when Wi-Fi is turned off.
  - **Bluetooth scanning**: Allow apps to scan for and connect to nearby devices automatically through Bluetooth, even when Bluetooth is turned off.


## Recent location requests

Apps that have requested your location are listed under Recent location requests.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Connections** > **Location**.
3. Tap **On/Off** to turn on Location services.
4. Tap an entry under **Recent location requests** to view the app's settings.


# Location services

Location services store and use your device's most recent location data. Google apps can use this data to improve your search results based on places that you have visited.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Connections** > **Location**.
3. Tap an entry under **Location services** to use as a location service.

# Nearby device scanning




Scan for nearby devices to connect to and set them up easily. You receive a notification when there are available devices to connect to.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Connections** > **More connection settings** > **Nearby device scanning**.
3. Tap **On/Off** to enable the feature.

# Connect to a printer


Connect your device to a printer on the same Wi-Fi network.

DRAFT  
FOR INTERNAL USE ONLY

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Connections** > **More connection settings** > **Printing**.
3. Tap  **Add service** and follow the prompts to add a print service.
4. Tap the print service, and then tap  **More options** > **Add printer**.

## Virtual Private Networks



Set up and manage your Virtual Private Networks (VPNs). You must set a secured screen lock before setting up a VPN. For more information, see [“Set a secure screen lock” on page 188](#).

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Connections** > **More connection settings** > **VPN**.
3. Tap **Add VPN** and follow the prompts to set up your VPN.

DRAFT  
FOR INTERNAL USE ONLY

# Manage a VPN

Use the VPN settings menu to edit or delete a VPN connection.


1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Connections** > **More connection settings** > **VPN**.
3. Tap  **Settings** next to a VPN.
4. Edit the VPN and tap **Save**.

– or –

Tap **Delete** to delete the VPN.

# Connect to a VPN

Once you have set up a VPN connection, connecting to and disconnecting from a VPN is easy.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Connections** > **More connection settings** > **VPN**.
3. Tap a **VPN**, enter your log in information, and tap **Connect**.
  - To disconnect, tap the VPN, and then tap **Disconnect**.

DRAFT  
FOR INTERNAL USE ONLY


# Sounds and vibration

Configure the sounds and vibrations used to indicate notifications, screen touches, and other interactions.

DRAFT  
FOR INTERNAL USE ONLY


# Sound mode

Switch between sound modes, while preserving the individual sound settings you have made.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Sounds and vibration** > **Sound mode**, and then choose a mode:
  - **Sound**: Use the sounds, vibrations, and volume levels you have chosen in Sound settings for notifications and alerts.
  - **Vibrate**: Use vibration only for notifications and alerts.
  - **Mute**: Set your device to make no sounds.
    - **Temporary mute**: Set a time limit for muting the device.

## Easy mute

Mute sounds and videos by covering the screen or turning over the device.


1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Advanced features** > **Easy mute**, and tap **On/Off** to enable.

DRAFT

FOR INTERNAL USE ONLY


# Vibrations

Configure your device's vibrations.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Sounds and vibration**.
3. Tap options to customize:
  - **Vibrate while ringing**: Set your device to vibrate in addition to ringing when you receive a call.
  - **Vibration pattern**: Choose from preset vibration patterns or create your own pattern.

# Volume

Set the volume level for call ringtones, notifications, and other audio.


1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Sounds and vibration** > **Volume**, and drag the sliders.

**Note:** You can also use the **Volume** key to adjust the volume. Tap  **More** to customize all volume options.

DRAFT  
FOR INTERNAL USE ONLY



# Use Volume keys for media

Set the default of the Volume key to control the media volume.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Sounds and vibration**.
3. Tap **Use Volume keys for media** to enable this feature.

## Media volume limiter

Limit the maximum output of the device's volume while using headphones or Bluetooth speakers (not included).


1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Sounds and vibration** > **Volume**.
3. Tap  **More options** > **Media volume limiter**.
4. Tap **On/Off** to enable this feature.
  - To set the maximum output volume, drag the **Custom volume limit** slider.
  - To require a PIN to make changes to the volume setting, tap **Set volume limit PIN**.

DRAFT  
FOR INTERNAL USE ONLY



# Ringtone

Choose from preset ringtones or add your own.


1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Sounds and vibration** > **Ringtone**.
3. Tap a ringtone to hear a preview and select it.

– or –

Tap **Add** to use an audio file as a ringtone.

# Notification sounds


Customize notification sounds for certain apps or choose a default for all notifications.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Sounds and vibration** > **Notification sounds** and tap a sound to choose it.

# Do not disturb


Set your device to mute all or some notifications and sounds during specific time periods.

DRAFT  
FOR INTERNAL USE ONLY

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Sounds and vibration** > **Do not disturb** and configure the following:
  - **Turn on now:** Enable this option.
  - **Turn on as scheduled:** Configure **Days**, **Start time**, and **End time** to set up a do not disturb schedule.
  - **Allow exceptions:** Customize which notifications are allowed while your device is in Do not disturb mode.
  - **App rules:** Manage rules set by apps.
  - **Hide visual notifications:** Select options for preventing visual notifications for apps silenced by Do not disturb.

## System sounds

Set various other system sound options.


1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Sounds and vibration**
  - **Touch sounds:** Play tones when you touch or tap the screen to make selections.
  - **Screen lock sounds:** Play a sound when you unlock the screen.

DRAFT  
FOR INTERNAL USE ONLY

- **Charging sound:** Play a sound when a charger is connected.


# Key-tap feedback

Play tones when keys are tapped.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Sounds and vibration**, and then tap to enable each option:
  - **Dialing keypad tones:** Play a tone when the dialing keypad is tapped.
  - **Keyboard sound:** Play a sound when the Samsung keyboard is tapped.

# Sound quality and effects


Choose from advanced sound options to customize your audio experience.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Sounds and vibration** > **Sound quality and effects**. The following options are available:
  - **Dolby Atmos:** Transform your experience with audio that surrounds you.

- **Equalizer:** Choose an audio preset that is customized to different genres of music.
- **Advanced/Basic:** Manually adjust various sound qualities.
- **Tube Amp Pro:** Simulate the soft timbre of a tube amplifier.
- **Concert hall:** Simulate the reverb of a concert hall.
- **Adapt Sound:** Customize your sound settings.

## Separate app sound

You can choose to have an app play sound on a speaker or headphones separate from the rest of the sounds on your device.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Sounds and vibration** > **Separate app sound**.
3. Tap **On/Off** to enable Separate app sound, and then set the following options:
  - **App:** Choose an app to play its sound on a separate audio device.
  - **Audio device:** Choose the audio device that you want the app's sound to be played on.

DRAFT  
FOR INTERNAL USE ONLY


# Notifications

Select which apps you want to receive alerts from. Alerts include notifications, sounds, and vibrations.

DRAFT  
FOR INTERNAL USE ONLY


# Manage notifications

Allow or block notifications from apps and services.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Notifications**.
  - To customize App icon badges, tap **App icon badges**.
  - To enable notifications, tap **All apps**, or tap **On/Off** next to an app.
  - To configure additional notification settings, tap **Advanced**.
  - To customize individual notification settings, tap an app or service.

## Smart alert

Set the device to vibrate when you pick it up to notify you about missed calls and messages.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Advanced features** > **Smart alert**, and tap **On/Off** to enable.

DRAFT  
FOR INTERNAL USE ONLY


# Display

Configure your display's brightness, screen timeout delay, and other settings.

DRAFT  
FOR INTERNAL USE ONLY

# Screen off settings

Customize when the screen turns off.


1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Display**.
3. Tap an option to customize:
  - **Screen timeout:** Turn the screen off after a set amount of time.
  - **Block accidental touches:** You can prevent the screen from turning on while the device is in a dark place, such as a pocket or a bag.
  - **Screen saver:** Display colors or images after the screen has turned off or while charging.

DRAFT  
FOR INTERNAL USE ONLY




# Screen brightness

Adjust the screen brightness to suit your surroundings or personal preference. You may also want to adjust screen brightness to conserve battery power.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Display**.
3. Customize options under Brightness:
  - Drag the **Brightness** slider to set a custom brightness level.
  - Tap **Auto brightness** to automatically adjust the screen brightness based on the lighting conditions.

## Blue light filter



Use the Blue light filter at night to help you sleep better. You can set a schedule to automatically turn this feature on and off.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Display** > **Blue light filter**, and then choose one of the following options:
  - Drag the **Opacity** slider to set the opacity of the filter.
  - Tap **Turn on now** to enable this feature.

- Tap **Turn on as scheduled** to set a schedule for when Blue light filter should be enabled. You can choose **Sunset to sunrise** or **Custom schedule**.


## Font and screen zoom

You can set the screen zoom level and the font size and style.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Display** > **Font and screen zoom** for the following options:
  - Drag the **Screen zoom** slider to adjust the zoom level.
  - Drag the **Font size** slider to adjust the size of text.
  - Tap a font to select it, or tap  **Download fonts** to find new fonts from Galaxy Apps.
3. Tap **Apply** to set the screen zoom and font.

## Screen quality

Customize the screen mode to match your viewing preferences.


1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Display** to configure an option:

DRAFT  
FOR INTERNAL USE ONLY

- Tap **Screen mode** and choose Adaptive display or a specific type of screen mode based on what you are viewing.

# One-handed mode

Change the screen layout to accommodate operating your device with one hand.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Advanced features** > **One-handed mode**.
3. Tap **On/Off** to enable the following:
  - **Gesture:** Swipe up diagonally from either bottom corner to reduce the display size.
  - **Button:** Press the **Home** key three times in quick succession to reduce the display size.
  - **Show keys on screen:** Display the Home, Back, and Recents keys on the screen.

DRAFT  
FOR INTERNAL USE ONLY

# Device maintenance

View the status of your device's battery, storage, and memory. You can also automatically optimize your device's system resources.


DRAFT  
FOR INTERNAL USE ONLY

# Quick optimization

The quick optimization feature improves device performance through the following actions:


- Identifying apps that use excessive battery power and clearing unneeded items from memory.
- Deleting unnecessary files and closing apps running in the background.
- Scanning for malware.


To use the quick optimization feature:

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Device maintenance**.
3. Tap **Optimize now**.

## Battery


View how battery power is used for device activities.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Device maintenance** > **Battery** for options:
  - **Battery usage**: View power usage by item.
  - **Power saving mode**: Select a power mode to extend battery life.

- **App power monitor:** View power usage by app.
- **Unmonitored apps:** Select apps to exclude from being put to sleep by the App power monitor.
- **Always sleeping apps:** Select apps to put to sleep immediately when not being used.
-  **More options** > **Advanced settings:** Configure advanced battery settings and notifications.

# Storage

View the device memory and usage. Mount, unmount, or format an optional memory card (not included).

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Device maintenance** > **Storage**.
  - To increase available memory, tap **Clean now**.

## Memory card (SD card)



Once an optional memory card (not included) has been installed in your device, the card memory is displayed in the Storage setting.

For more information, see [“Install a SIM card and memory card” on page 9.](#)

DRAFT  
FOR INTERNAL USE ONLY



# Mount a memory card

When you install an optional memory card, it is automatically mounted (connected to the device) and prepared for use. However, should you unmount the card without removing it from the device, you need to mount it before it can be accessed.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Device maintenance** > **Storage**.
3. Tap  **More options** > **Storage settings**.
4. Under **Portable storage**, tap your SD card, and then tap **Mount**.

# Remove a memory card



**Warning:** To prevent damage to information stored on the memory card, unmount the card before removing it from the device.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Device maintenance** > **Storage**.
3. Tap  **More options** > **Storage settings**.
4. Under **Portable storage**, tap your SD card, and then tap **Unmount**.
5. Remove your memory card from the device.

DRAFT  
FOR INTERNAL USE ONLY


# Format a memory card

**Warning:** When formatting an SD card, you should back up your music and photo files that are stored on the card because formatting the SD card deletes all the stored data.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Device maintenance** > **Storage**.
3. Tap  **More options** > **Storage settings**.
4. Under **Portable storage**, tap your SD card, tap **Format**, and then follow the prompts.

## Memory

Check the amount of available memory. You can close background apps and reduce the amount of memory you are using to speed up your device.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Device maintenance** > **Memory**.
  - The used and available memory are shown.
3. To free up as much memory as possible, tap **Clean now** and follow the prompts.
  - The selected apps and services in the list will be closed.

DRAFT

FOR INTERNAL USE ONLY






# Language and input

Configure your device's language and input settings.

## Change the device language


You can add languages to your list and organize them according to preference. If an app does not support your default language, then it will move to the next supported language in your list.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **General management** > **Language and input** > **Language**.
3. Tap  **Add language**, and select a language from the list.
4. Tap **Set as default** to change the device language.
  - To switch to another language on the list, drag  **Move** next to the desired language to the top of the list, and then tap **Done**.

## Default keyboard


You can select a default keyboard for your device's menus and keyboards. Additional keyboards can be downloaded from the Google Play store.

DRAFT  
FOR INTERNAL USE ONLY

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **General management** > **Language and input**.
3. Tap **Default keyboard**, and select a keyboard.

## Google Voice typing

Speak rather than type your text entries using Google Voice<sup>TM</sup> typing.


1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **General management** > **Language and input**.
3. Tap **On-screen keyboard** > **Google voice typing**.
  - **Languages:** Select languages for Google voice typing.
  - **Voice Match:** Train Google Assistant to recognize your voice when you say "Ok Google".
  - **Hands-free:** Allow requests with the device locked.
  - **Speech output:** Select options for spoken feedback.
  - **Offline speech recognition:** Download and install speech recognition engines, allowing you to use voice input while not connected to the network.

DRAFT  
FOR INTERNAL USE ONLY

- **Block offensive words:** Hide search results that contain offensive words.
- **Bluetooth headset:** Records audio through a Bluetooth headset, if available.


## Manage on-screen keyboards

Enable or disable on-screen keyboards.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **General management** > **Language and input**.
3. Tap **On-screen keyboard** > **Manage keyboards**.
4. Tap each keyboard to enable or disable.

## Physical keyboards


Customize options when you have a physical keyboard connected to your device (sold separately).

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **General management** > **Language and input**.
3. Tap **Physical keyboard**, and then choose an option:
  - **Show on-screen keyboard:** Show the on-screen keyboard while a physical keyboard is also being used.

- **Keyboard shortcuts:** Show explanations of the keyboard shortcuts on the screen.



## Autofill service

Save time entering information using autofill services.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **General Management** > **Language and input**.
3. Tap **Autofill service** and select your preferred service.

## Text-to-speech options


Configure your Text-to-Speech (TTS) options. TTS is used for various accessibility features, such as Voice Assistant.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **General management** > **Language and input** > **Text-to-speech** for options:
  - **Preferred engine:** Choose either the Samsung or Google Text-to-speech engine. Tap  **Settings** for options.
  - **Language:** Select a default language.
  - **Speech rate:** Set the speed at which the text is spoken.
  - **Pitch:** Set the pitch of the speech.

- **Play:** Tap to play a short demonstration of speech synthesis.
- **Reset:** Reset the speech rate and pitch.


## Pointer speed

Configure pointer speed for an optional mouse or trackpad (not included).

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **General management** > **Language and input**.
3. Under **Pointer speed**, drag the slider to the right to go faster or to the left to go slower.

## Date and time

By default, your device receives date and time information from the wireless network. Outside of network coverage, you can set the date and time manually.


1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **General management** > **Date and time**. The following options are available:
  - **Automatic date and time:** Receive date and time updates from your wireless network. When Automatic date and

time is disabled, the following options are available:

- **Set date:** Enter the current date.
- **Set time:** Enter the current time.
- **Select time zone:** Choose a new time zone.
- **Use 24-hour format:** Set the format for displaying time.

## Report diagnostic information

This feature sends diagnostic information about your device when you are having technical problems.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **General management** > **Report diagnostic information**.
3. Read and accept the consent information to enable this feature.


## Reset

Reset device and network settings. You can also reset your device to its factory defaults.

DRAFT  
FOR INTERNAL USE ONLY


# Reset settings

You can reset your device to its factory default settings, which resets everything except the security, language, and account settings. Personal data is not affected.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **General management** > **Reset** > **Reset settings**.
3. Tap **Reset settings**, and confirm when prompted.

# Reset network settings

You can reset Wi-Fi, mobile data, and Bluetooth settings with Reset network settings.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **General management** > **Reset** > **Reset network settings**.
3. Tap **Reset settings**, and confirm when prompted.

# Factory data reset

You can reset your device to factory defaults, erasing all data from your device.

DRAFT

FOR INTERNAL USE ONLY

This action permanently erases ALL data from the device, including Google or other account settings, system and application data and settings, downloaded applications, as well as your music, photos, videos, and other files. Any data stored on an external SD card is not affected.

**Note:** When you sign in to a Google Account on your device, Factory Reset Protection is activated. This protects your device in the event it is lost or stolen.

If you reset your device to factory default settings with the Factory Reset Protection (FRP) feature activated, you must enter the user name and password for a registered Google Account to regain access to the device. You will not be able to access the device without the correct credentials.

**Warning:** If you reset your Google Account password, it can take 24 hours for the password reset to sync with all devices registered to the account.

Before resetting your device:


1. Verify that the information you want to keep has transferred to your storage area.
2. Log in to your Google Account and confirm your user name and password.

To reset your device:

DRAFT

FOR INTERNAL USE ONLY



1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **General management** > **Reset** > **Factory data reset**.
3. Tap **Reset** and follow the prompts to perform the reset.
4. When the device restarts, follow the prompts to set up your device.

## Factory reset protection

When you sign in to a Google Account on your device, Factory Reset Protection is activated. Factory Reset Protection (FRP) prevents other people from using your device if it is reset to factory settings without your permission. For example, if your device is lost or stolen and a factory data reset is performed, only someone with your Google Account username and password can use the device.

You will not be able to access the device after a factory data reset if you do not have your Google Account username and password.

**Caution:** Before shipping your device back to Samsung or taking it to your nearest Samsung-authorized service center, you should remove your Google Account before resetting the device back to factory settings. For more information, visit [samsung.com/us/support/frp](https://samsung.com/us/support/frp).


DRAFT  
FOR INTERNAL USE ONLY

## Enable factory reset protection

Adding a Google Account to your device automatically activates the FRP security feature.


## Disable factory reset protection

To disable FRP, remove all Google Accounts from the device.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Cloud and accounts** > **Accounts** > **[Google account]**.
3. Tap **Remove account**.

## Auto restart

Optimize your device by restarting it automatically at set times. Any unsaved data will be lost when the device restarts.


1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **General management** > **Reset** > **Auto restart**.
3. Tap **On/Off** to activate Auto restart, and then set the following parameters:
  - **Time:** Set the time of day to restart your device.

DRAFT  
FOR INTERNAL USE ONLY

- **Day:** Select the day of the week to automatically restart your device.

# Software update

Check for and install available software updates for your device.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Software update**
  - **Check for update:** Manually check for software updates.
  - **Check software version:** View the software and baseband versions.

DRAFT  
FOR INTERNAL USE ONLY

# Lock screen and security

Secure your device and protect your data with Lock screen and security settings.


DRAFT  
FOR INTERNAL USE ONLY

# Screen lock types

The various Screen lock types offer high, medium, or no security. Choose from the following: Swipe, Pattern, PIN, Password, and None.

## Set a secure screen lock


It is recommended that you secure your device using a secure screen lock (Pattern, PIN, or Password).

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Lock screen** > **Screen lock type** and tap a secure screen lock (**Pattern**, **PIN**, or **Password**).
3. Tap **On/Off** to enable showing notifications on the lock screen. The following options are available:
  - **Hide content**: Enable to hide the content of notifications.
  - **Notification icons only**: Enable to hide notification details and show only the icon.
  - **Transparency**: Adjust the transparency of notifications.
  - **Auto-reverse text color**: Reverse the color of notification text automatically based on the background color.
4. Tap **Done** when finished.
5. Configure the following screen lock options:

- **Smart Lock:** Unlock your device automatically when trusted locations or other devices have been detected. A secure screen lock is required for this feature.
- **Secure lock settings:** Customize your secure lock settings. A secure screen lock is required for this feature.

# Clock and information

Configure features for the Lock screen.


1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Lock screen** for options:
  - **Clock style:** Set the type and color of the clock on the Lock screen.
  - **Roaming clock:** Change to digital clocks showing both local and home time zones when roaming.
  - **FaceWidgets:** Enable widgets on the Lock screen to get quick access to useful information.
  - **Contact information:** Show your contact information, such as your phone number or email address.
  - **Notifications:** Select which notifications to display on the Lock screen.

DRAFT  
FOR INTERNAL USE ONLY

- **App shortcuts:** Select which apps to open from the Lock screen.


# Google Play Protect

Configure app safety checks from Google Play.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Biometrics and security** > **Google Play Protect**.
3. Tap options to customize security.


# Find My Device

Protect your device from loss or theft. You need to sign in to your Google Account to use this feature.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Biometrics and security** > **Find My Device**.
  - If you are not logged in to a Google Account, tap **Find My Device won't work** and follow the prompts to sign in.
3. The following options are available:
  - **Find My Device:** Download the app from Google Play.
  - **Web:** Access Find My Device on the Internet.
  - **Google:** Search for “find my device” topics online.


# Security update

Check the date of the last security software update.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Biometrics and security** > **Security update** to see if the latest security update is installed.

# Install unknown apps

Allow selected apps to install unknown third-party apps.


1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Biometrics and security** > **Install unknown apps**.
3. Tap an app.
4. Tap **Allow from this source** to enable apps to be installed using this app.

DRAFT  
FOR INTERNAL USE ONLY




# Secure Folder

Lock your private content and apps to enhance security. You must sign in to your Samsung account in order to use Secure Folder. You must also set a secure lock for your device.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Biometrics and security** > **Secure Folder** and follow the prompts to secure content on your device.

## App permission monitor


Get notified when permissions you select are being used by apps running in the background.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Biometrics and security** > **App permission monitor**.
3. Tap **On/Off** next to the apps you want to be notified about when they use certain permissions.

## Secure startup


Protect your device by requiring a numeric PIN, pattern, or password to be entered before it starts up. You must have a secured screen lock for this option to be available.

DRAFT  
FOR INTERNAL USE ONLY

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Biometrics and security** > **Secure startup** and select an option.


## Encrypt SD card

Protect your optional memory (not included) card by encrypting its data.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Biometrics and security** > **Encrypt SD card**.
3. Tap **Encrypt SD card** and follow the prompts to encrypt all data on your memory card.


## Set up SIM card lock

Require your SIM card PIN to unlock and use your SIM card.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Biometrics and security** > **Other security settings** > **Set up SIM card lock** and follow the prompts.
  - Tap **Lock SIM card** to enable the feature.
  - Tap **Change SIM card PIN** to create a new PIN.


## View passwords

Display password characters briefly as you type them.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Biometrics and security** > **Other security settings** > **Make passwords visible** to enable the feature.

# Security update service


Automatically receive security updates.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Biometrics and security** > **Other security settings** for the following Security update service options:
  - **Security policy updates:** Automatically or manually check for security policy updates.
    - Automatic updates can also be limited to only when your device is connected to a Wi-Fi network.
  - **Send security reports:** Use Wi-Fi to send security reports to Samsung for threat analysis.

# Device administration


Manage your device administrators and application installation privileges.

DRAFT  
FOR INTERNAL USE ONLY

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Biometrics and security** > **Other security settings** > **Device admin apps**.
3. Tap an option to enable it as a device administrator.

## Credential storage


Manage your security certificates. You can disable or remove certificates.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Biometrics and security** > **Other security settings** for the following options:
  - **Storage type:** Select a storage location for credential contents.
  - **View security certificates:** Display certificates in your device's ROM and other certificates you have installed.
  - **User certificates:** View user certificates.
  - **Install from device storage:** Install a new certificate from storage.
  - **Clear credentials:** Erase the credential contents from the device and reset the password.

DRAFT  
FOR INTERNAL USE ONLY


# Knox active protection

Protect your device against malicious attacks.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Biometrics and security** > **Other security settings** > **Knox active protection** and follow the prompts.

## Advanced security settings

Use these options to configure advanced security settings.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Biometrics and security** > **Other security settings** for the following advanced options:
  - **Trust agents:** Perform selected actions when trusted devices are connected.
    - This option is only displayed when a lock screen is enabled. For more information, see [“Set a secure screen lock” on page 188.](#)
  - **Pin windows:** Pin an app on your device screen, preventing access to other features of your device.
  - **Usage data access:** View the applications that can access your device’s usage history.

- **Notification access:** View the applications that can access notifications you receive on your device.
- **Do not disturb permission:** View which apps have permission to change the Do not disturb settings.

DRAFT  
FOR INTERNAL USE ONLY


# Accounts

Set up and manage accounts, including your Google Account, Samsung account, email, and social networking accounts.

DRAFT  
FOR INTERNAL USE ONLY



# Samsung Cloud

Keep your data safe by backing up and restoring your device. You can also sync your data from multiple devices. For more information, visit [samsung.com/us/support/owners/app/samsung-cloud](https://samsung.com/us/support/owners/app/samsung-cloud).

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Cloud and accounts** > **Samsung Cloud**.
  - If a Samsung account has not been added, follow the prompts to add one.
3. Once a Samsung account is configured, you can view and manage items stored in the Samsung Cloud.

## Add an account

You can add and manage all your email, social networking, and picture and video sharing accounts.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Cloud and accounts** > **Accounts** >  **Add account**.
3. Tap one of the account types.
4. Follow the prompts to enter your credentials and set up the account.




- Tap **Auto sync data** to enable automatic updates to your accounts.

## Account settings


Each account has its own set of settings. In addition, you can configure common settings for all accounts of the same type.

Account settings and available features vary between account types and service providers. Contact your service provider for more information on your account's settings.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Cloud and accounts** > **Accounts** > **[Account type]**.
3. Tap an account to configure that account's sync settings.
4. Tap other available options for the account type.

## Remove an account

You can remove accounts from your device.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Cloud and accounts** > **Accounts** > **[Account type]**.
3. Tap the account and then tap **Remove account**.


DRAFT  
FOR INTERNAL USE ONLY

# Backup and restore

Configure your device to backup data to your personal accounts.

## Samsung account


Enable backup of your information to your Samsung account.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Cloud and accounts** > **Backup and restore** for options:
  - **Back up data:** Configure your Samsung account to back up your data.
  - **Restore data:** Use your Samsung account to restore your backup data.

DRAFT  
FOR INTERNAL USE ONLY


# Google account

Enable backup of your information to your Google account.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Cloud and accounts** > **Backup and restore** for options:
  - **Back up my data:** Enable back up of application data, Wi-Fi passwords, and other settings to Google servers.
  - **Backup account:** Select a Google Account to be used as your backup account.
  - **Automatic restore:** Enable automatic restoration of settings from Google servers.

# Google settings

Configure your device's Google settings. Available options depend on your Google account.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Google**, and select an option to customize.

DRAFT  
FOR INTERNAL USE ONLY

# Accessibility


Accessibility services are special features that make using the device easier for those with certain physical disabilities.

For more information about Accessibility for Samsung products, please contact us at [accessibility@sea.samsung.com](mailto:accessibility@sea.samsung.com).

DRAFT  
FOR INTERNAL USE ONLY

# Vision

You can turn on Accessibility features to assist with visual aspects of the device.


1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Accessibility** > **Vision**, and tap an option:
  - **Voice Assistant:** Give spoken feedback to assist blind and low-vision users.
    - Voice Assistant can collect all of the text you enter, except passwords, including personal data and credit card numbers. It may also log your user interface interactions with the device.
  - **Voice Assistant help:** View help on using Voice Assistant.
  - **Dark screen:** Keep the screen turned off at all times for privacy.
  - **Rapid key input:** Release your finger to enter selection instead of double tapping.
  - **Font and screen zoom:** Configure the screen zoom level and font size and style.
  - **High contrast fonts:** Adjust the color and outline of fonts to increase the contrast with the background.

- **High contrast keyboard:** Adjust the size of the Samsung keyboard and change its colors to increase the contrast between the keys and the background.
- **Show button shapes:** Show buttons with shaded backgrounds to make them stand out.
- **Magnifier window:** Magnify content shown on the screen.
- **Magnification:** Use exaggerated gestures such as triple-tapping, double pinching, and dragging two fingers across the screen.
- **Large mouse/touchpad pointer:** Enable a large pointer for a connected mouse or touchpad.
- **Negative colors:** Reverse the display of colors from white text on a black background to black text on a white background.
- **Color adjustment:** Adjust the color of the screen if you are color blind or have difficulty reading the display because of the screen color.
- **Color lens:** Adjust the screen colors if you have difficulty reading the text.

DRAFT  
FOR INTERNAL USE ONLY

# Hearing


You can turn on Accessibility features to assist with audio aspects of the device.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Accessibility** > **Hearing**, and tap an option:
  - **Flash notification**: Set the camera light or screen to blink whenever you receive a notification.
  - **Mute all sounds**: Turn off all notifications and audio for privacy.
  - **Hearing aids**: Improve the sound quality for use with hearing aids.
  - **Samsung subtitles (CC)**: Use Samsung subtitles with multimedia files when available.
  - **Google subtitles (CC)**: Use Google subtitles with multimedia files when available.
  - **Left/right sound balance**: Use the slider to set the left and right balance when using a stereo device.
  - **Mono audio**: Switch audio from stereo to mono for use with one earphone.

DRAFT  
FOR INTERNAL USE ONLY

# Dexterity and interaction

You can turn on Accessibility features to assist with dexterity and interaction aspects of the device.


1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Accessibility** > **Dexterity and interaction**, and tap an option:
  - **Universal switch:** Control your device with your customized switches.
  - **Assistant menu:** Improve the device accessibility for users with reduced dexterity.
  - **Touch and hold delay:** Select a time interval for this action.
  - **Click after pointer stops:** Automatically click on an item after the pointer stops over it.
  - **Interaction control:** Customize interactable or non-interactable areas, hardkeys, and the keyboard.

DRAFT  
FOR INTERNAL USE ONLY




# More accessibility settings

Customize additional accessibility features for your device.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Accessibility**, and tap an option:
  - **Text-to-speech:** Set your preferred TTS engine and options. For more information, see [“Text-to-speech options” on page 179.](#)
  - **Direction lock:** Unlock the screen by swiping in a series of directions.
  - **Direct access:** Open your accessibility settings by pressing the Volume up key and the Power key together.
  - **Accessibility shortcut:** Quickly enable accessibility features using the Volume keys.
  - **Notification reminder:** Beep at set intervals to remind you of any unread notifications.
  - **Answering and ending calls:** Select shortcuts for answering and ending calls.
  - **Single tap mode:** Dismiss or snooze alarms, calendar events, and timer alerts, and answer or reject incoming calls with a single tap.

# Accessibility services

Additional accessibility apps may be downloaded from the Google Play store.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Accessibility**.
3. Other installed accessibility services may be listed and configured under Services.

DRAFT  
FOR INTERNAL USE ONLY


# Other settings

Configure features on your device that make it easier to use.

DRAFT  
FOR INTERNAL USE ONLY

# Help


View the user manual on your device.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Help**.

## Manage game features



Automatically arrange all your games in one place. For more information on Game Launcher, visit

[samsung.com/us/support/owners/app/game-launcher](https://samsung.com/us/support/owners/app/game-launcher).

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Advanced features** > **Games**.
  - Tap **On/Off** to enable Game Launcher.
  - Tap **On/Off** to enable Game Tools.

## Device assistance app


Device assistance apps help you by gathering information from the screen currently shown.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Apps** >  **More options** > **Default apps** > **Device assistance app**.

3. Tap an option to customize:
  - **Device assistance app:** Select your default assistance app.
  - **Analyze on-screen text:** Analyze text shown on the screen to provide related content.
  - **Analyze on-screen images:** Take and analyze images of the screen.


## Dual messenger

Use two separate accounts for the same app.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **Advanced features** > **Dual messenger**.
3. Tap **On/Off** next to supported apps to enable the feature for each app.

## About phone

View information about your device, including current status, legal information, hardware and software versions, and more.

1. From a Home screen, swipe up to access **Apps**.
2. Tap  **Settings** > **About phone**, and then view your phone number, model number, serial number, and IMEI information.

DRAFT  
FOR INTERNAL USE ONLY

3. Tap additional items to view more information about your device.

DRAFT  
FOR INTERNAL USE ONLY

# Getting help



## Videos

Visit [samsung.com/spsn](https://samsung.com/spsn) to learn more.



## Smart Simulator

Visit [samsungsimulator.com](https://samsungsimulator.com) to learn more.



## Tips and Tricks

Visit [samsung.com/us/support/tips](https://samsung.com/us/support/tips) to learn more.



## Samsung Care

Visit [samsung.com/us/support](https://samsung.com/us/support) to learn more.

DRAFT  
FOR INTERNAL USE ONLY

# Legal

View legal  
information  
for your device.

DRAFT  
FOR INTERNAL USE ONLY



# Legal information

READ THIS INFORMATION BEFORE USING YOUR MOBILE DEVICE.

Arbitration Agreement - This Product is subject to a binding arbitration agreement between you and SAMSUNG ELECTRONICS AMERICA, INC. ("Samsung"). You can opt out of the agreement within 30 calendar days of the first consumer purchase by emailing [optout@sea.samsung.com](mailto:optout@sea.samsung.com) or calling 1-800-SAMSUNG (726-7864) and providing the applicable information. For complete terms and conditions that bind you and Samsung, refer to the "Arbitration Agreement" section of the Terms & Conditions, included with the Product.

DRAFT  
FOR INTERNAL USE ONLY

## Find legal information online

The full Arbitration Agreement, Standard Limited Warranty, End User License Agreement (EULA), and Health & Safety Information for your device are available online.

Arbitration Agreement, Standard Limited Warranty, and Health & Safety Information:

Phone:

- English: [samsung.com/us/Legal/Phone-HSGuide](https://samsung.com/us/Legal/Phone-HSGuide)
- Spanish: [samsung.com/us/Legal/Phone-HSGuide-SP](https://samsung.com/us/Legal/Phone-HSGuide-SP)

Tablet:

- English: [samsung.com/us/Legal/Tablet-HSGuide](https://samsung.com/us/Legal/Tablet-HSGuide)
- Spanish: [samsung.com/us/Legal/Tablet-HSGuide-SP](https://samsung.com/us/Legal/Tablet-HSGuide-SP)

End User License Agreement:

- English: [samsung.com/us/Legal/SamsungLegal-EULA4](https://samsung.com/us/Legal/SamsungLegal-EULA4)
- Spanish: [samsung.com/us/Legal/SamsungLegal-EULA4/#SPANISH](https://samsung.com/us/Legal/SamsungLegal-EULA4/#SPANISH)

DRAFT  
FOR INTERNAL USE ONLY

## Find legal information on the mobile device

The full Arbitration Agreement, Standard Limited Warranty, End User License Agreement (EULA) and Health & Safety Information are also available on the device, in the Samsung legal section of Settings. The location depends on the device, and is usually in the “About device” or “About phone” section, for example:

- **Settings > About phone or About device or About tablet > Legal information > Samsung legal**
- Or, use the Search feature to search for “Legal”.

## Intellectual property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the Product, including but not limited to, accessories, parts, or software relating thereto, is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship.

DRAFT  
FOR INTERNAL USE ONLY

You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with Samsung and its suppliers.

## **Open source software**

Some software components of this product, including but not limited to 'PowerTOP' and 'e2fsprogs', incorporate source code covered under GNU General Public License (GPL), GNU Lesser General Public License (LGPL), OpenSSL License, BSD License and other open source licenses. To obtain the source code covered under the open source licenses, please visit:

[opensource.samsung.com](https://opensource.samsung.com)

## **Disclaimer of warranties; exclusion of liability**

The information below explains that a user accepts this Product as sold, including the hardware and software components as created and packaged for sale. If the user changes these parameters through a unique modification, Samsung will not be held responsible for damages or issues that result from these end-user changes.

Except as set forth in the Standard Limited Warranty that accompanies the Product, the purchaser takes the product “as is”, and Samsung makes no express or implied warranty of any kind whatsoever with respect to the product, including but not limited to the:

- merchantability of the product or its fitness for any particular purpose or use;
- design, condition or quality of the product;
- performance of the product;
- workmanship of the product or the components contained therein; or
- compliance of the product with the requirements of any law, rule, specification or contract pertaining thereto.

Nothing contained in the User Manual shall be construed to create an express or implied warranty of any kind whatsoever with respect to the Product. In addition, Samsung shall not be liable for any damages of any kind resulting from the purchase or use of the product or arising from the breach of the express warranty, including incidental, special or consequential damages, or loss of anticipated profits or benefits.

DRAFT  
FOR INTERNAL USE ONLY

## Modification of software

Samsung is not liable for performance issues or incompatibilities caused by your editing of registry settings, or your modification of Operating System (OS) software.

Using custom OS software may cause your device and applications to work improperly. Your carrier may not permit users to download certain software, such as custom OS.

## Samsung Knox

Samsung Knox is Samsung's security platform and is a mark for a Samsung device tested for security with enterprise use in mind. Additional licensing fee may be required. For more information about Knox, please refer to: [samsung.com/us/knox](https://samsung.com/us/knox).

## Restricting children's access to your mobile device

Your device is not a toy. Do not allow children to play with it because they could hurt themselves and others, damage the device, or make calls that increase your device bill. Keep the device and all its parts and accessories out of the reach of small children.

DRAFT  
FOR INTERNAL USE ONLY

# Samsung Electronics America, Inc.

Address:

85 Challenger Road  
Ridgefield Park  
New Jersey 07660

Phone: 1-800-SAMSUNG (726-7864)

Internet: [samsung.com](http://samsung.com)

©2018 Samsung Electronics America, Inc. Samsung, Samsung Galaxy, Multi Window, Samsung Gear, and Smart Switch are all trademarks of Samsung Electronics Co., Ltd.

Other marks are the property of their respective owners.

Manufactured under license from Dolby Laboratories. Dolby, Dolby Atmos, and the double-D symbol are trademarks of Dolby Laboratories.



Some multimedia (audio/video) files contain Digital Rights Management (DRM) technology to verify you have the right to use the files. Preloaded apps on your device may not be compatible with DRM-protected files.

Screen images are simulated. Appearance of device may vary.

The actual available capacity of the internal memory is less than the specified capacity because the operating system and default applications occupy part of the memory. The available capacity may change when you upgrade the device.

Please check with your service provider to verify qualifying services/features.

DRAFT  
FOR INTERNAL USE ONLY