

ENGLISH FRANÇAIS

User Guide

Guide de l'utilisateur

# LG-P935

P/N: MFL67416801 (1.1)

www.lg.com/ca

English



# LG-P935 User Guide

This guide helps you get started using your phone. If you need more information, please visit www.lg.com/ca\_en.

- Some of the contents of this manual may not apply to your phone. This depends on your phone's software and your service provider.
- This handset is not recommended for the visually impaired because of its touch screen keyboard.
- Copyright ©2011 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google™, Maps™, Gmail™, YouTube™, Talk™ and Android Market™ are trademarks of Google, Inc.



## Table of Contents

For Your Safety	5
Safety Guidelines	11
Important Notice	28
Your Phone	34
Getting Started	36
Installing the SIM card and battery.	36
Charging your phone	
Inserting a micro SD card	37
Removing the micro SD card	
Formatting the microSD card	39
Your microSD card may already be	
formatted. If it isn't, you must format	at it
before you can use it	39
Switching between and exiting	
applications	40
HDMI	40
Your Home screen	41
Touch screen tips	41
Proximity sensors	42
Lock your phone	
Quick Switch to Silent Mode	42
Home	43
Customizing your Home screen	43

Getting back to a recently used	
application	44
Notifications panel	44
Viewing the Status bar	45
On-screen Keyboard	
Entering text	50
123 Mode	50
Entering accented letters	
Google Account Set-up	51
Creating your Google account	51
Signing into your Google account	
Calls	53
Making a call	53
Calling your contacts	
Answering and rejecting a call	
Adjusting the in-call volume	
Making a second call	
Viewing your call logs	
Call settings	
Contacts	55
Searching for a contact	55
Adding a new contact	
Favourite Contacts	

Messaging/Email56
Messaging56 Email57
Social Networking
Camera62Getting to know the viewfinder62Taking a photo63Once you've taken the photo63Using the advanced settings63Viewing your saved photos65Setting a photo as wallpaper65
Video Camera

Multimedia	.69
Gallery	.69
Sending a video	
Using an image	.70
Viewing a slideshow	.70
View photo details	.70
Transferring files using USB mass	
storage devices	
Music	.71
How to save music/video files to the	
phone	.71
How to play music/video files on the	
phone	
Playing a song	
Working with Playlists To remove a song from a playlist	
To rename or delete a playlist	
SmartShare	
Google Applications	
About Google applications	
Google Maps™	
Searching For Locations and Places	
Getting Directions	.77
My Places	
Clear Map	
Latitude	.78

## Table of Contents

Places	.78
Market <sup>™</sup>	.79
Gmail™	.80
Google Talk™	.80
Utilities	.83
Setting the alarm	.83
Using the calculator	
Adding an event to your calendar	
Polaris Office	.84
Voice Control	
Voice recorder	.86
The Web	.87
Browser	.87
Using options	.87
Adding bookmarks	.88
Changing the Browser settings	.88
On-Screen Phone	.89
LG On-Screen Phone 2.0	.89
Settings	.92
Wireless & networks	.92
Airplane mode	.92
Wi-Fi	
Bluetooth	.93
Data Tethering	.95
Mobile Hotspots	.96

Call settings	96
Sound	96
Display	97
Gesture	97
Location & security	
Applications	99
Accounts & sync	.100
Privacy	.100
SD card & phone storage	.100
Language & keyboard	.100
Voice input & output	
Accessibility	.100
Connectivity settings	
Date & time	.101
About phone	.101
Software Update	.102
Phone Software Update	.102
LG Mobile Phone Software update	via
Over-the-Air (OTA)	
DivX Mobile	.103
Dolby Mobile	
Troubleshooting	.104

## For Your Safety

### Important Information

This user guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage to or misuse of the phone. Any changes or modifications not expressly approved in this user guide could void your warranty for this equipment.

### Before You Start

#### Safety Instructions

### 🕂 WARNING

To reduce the possibility of electric shock, do not expose your phone to high humidity areas, such as the bathroom, swimming pool, etc.

#### Always store your phone away from

heat. Never store your phone in settings that may expose it to temperatures less than  $32^{\circ}F$  (0°C) or greater than  $104^{\circ}F$  (40°C), such as outside during extreme weather conditions or in your car on a hot day. Exposure to excessive cold or heat will result in malfunction, damage and/or catastrophic failure.

Be careful when using your phone near other electronic devices. RF emissions from your mobile phone may affect nearby in adequately shielded electronic equipment. You should consult with manufacturers of any personal medical devices such as pacemakers and hearing aides to determine if they are susceptible to interference from your mobile phone. Turn off your phone in a medical facility or at a gas station. Never place your phone in a microwave oven as this will cause the

## Safety Information

battery to explode.

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.

- Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.
- Never place your phone in a microwave oven as it will cause the battery to explode.
- Do not dispose of your battery by fire or with hazardous or flammable materials.

## For Your Safety

- Make sure that no sharpedged items come into contact with the battery. There is a risk of this causing a fire.
- Store the battery in a place out of reach of children.
- Be careful that children do not swallow any parts such as rubber plugs (earphone, connection parts of the phone, etc.). This could cause asphyxiation or suffocation.
- Unplug the power cord and charger during lightning storms to avoid electric shock or fire.
- When riding in a car, do not leave your phone or set up the hands-free kit near to the air bag. If wireless equipment is improperly installed and the air bag is activated, you may be seriously injured.
- Do not use a hand-held phone while driving.
- Do not use the phone in areas where its use is prohibited. (For example: aircraft).
- Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.
- Never store your phone in temperatures

less than -4°F (-20°C) or greater than 122°F (50°C).

- Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. There is a risk of this causing a fire.
- Do not drop, strike, or shake your phone severely. Such actions may harm the internal circuit boards of the phone.
- Do not use your phone in high explosive areas as the phone may generate sparks.
- Do not damage the power cord by bending, twisting, pulling, or heating.
- Do not use the plug if it is loose as it may cause a fire or electric shock.
- Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause fire or electric shock.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.
- Do not disassemble the phone.
- · Do not place or answer calls while

charging the phone as it may shortcircuit the phone and/or cause electric shock or fire.

- Only use the batteries, antennas, and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.
- Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.
- Do not hold or let the antenna come in contact with your body during a call.
- An emergency call can be made only within a service area. For an emergency call, make sure that you are within a service area and that the phone is turned on.
- Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.

# Memory card information and care

- Always insert/ remove the memory card while the handset power is off. If you remove it while the power is on, it may be damaged.
- If a damage cannot be fixed, format the memory card.
- The memory card cannot be used for recording copyright protected data.
- Do not write forcefully on the memo area.
- Carry and store the memory card in its case.
- Do not allow the memory card to get wet.
- Do not leave the memory card in extremely hot location.
- Do not disassemble or modify the memory card.

## For Your Safety

## FCC RF Exposure Information

## A WARNING

Read this information before operating the phone.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies.

The design of this phone complies with the FCC guidelines and these international standards.

### CAUTION

Use only the supplied and approved antenna. Use of unauthorized antennas or modifications could impair call quality, damage the phone, void your warranty and/or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with skin, a minor burn may result. Contact your local dealer for a replacement antenna.

### **Body-worn Operation**

This device was tested for typical bodyworn operations with the back of the phone kept 1 cm (0.39 inches) between the user's body and the back of the phone. To comply with FCC RF exposure requirements, a minimum separation distance of 1 cm (0.39 inches) must be maintained between the user's body and the back of the phone. Third-party belt-clips, holsters, and

similar accessories containing metallic components should not be used.

Body-worn accessories that cannot maintain 1 cm (0.39 inches) separation distance between the user's body and the back of the phone, and have not been tested for typical bodyworn operations may not comply with FCC RF exposure limits and should be avoided.

### Vehicle Mounted External Antenna (optional, if available)

A minimum separation distance of 20cm (8 inches) must be maintained between the user/bystander and the vehicle mounted external antenna to satisfy FCC RF exposure requirements. For more information about RF exposure, visit the FCC website at www.fcc.gov

### FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules and ICES-003 Class B digital apparatus requirements for Industry Canada.

Operation is subject to the following two conditions:

(1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that may cause undesired operation.

## **Cautions for Battery**

- Do not disassemble.
- Do not short-circuit.
- Do not expose to high temperature: 140°F (60°C).
- Do not incinerate.

## **Battery Disposal**

- Please dispose of your battery properly or bring to your local wireless carrier for recycling.
- Do not dispose in fire or with hazardous or flammable materials.

## Adapter (Charger) Cautions

- Using the wrong battery charger could damage your phone and void your warranty.
- The adapter or battery charger is intended for indoor use only.

Do not expose the adapter or battery charger to direct sunlight or use it in places with high humidity, such as the bathroom.

## For Your Safety

## Avoid damage to your hearing

- Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when attempting to cross the street.

## **TIA Safety Information**

Provided herein is the complete TIA Safety Information for Wireless Handheld phones. Inclusion of the text covering Pacemakers, Hearing Aids, and Other Medical Devices is required in the owner's manual for CTIA Certification. Use of the remaining TIA language is encouraged when appropriate.

# Exposure to Radio Frequency Signal

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies: ANSI C95.1 (1992) \*

NCRP Report 86 (1986)

ICNIRP (1996)

Those standards were based on comprehensive and periodic evaluations

of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

\* American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing Radiation Protection

The design of your phone complies with the FCC guidelines (and those standards).

### Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

## **Phone Operation**

NORMAL POSITION: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

## **Tips on Efficient Operation**

For your phone to operate most efficiently:

 Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

## Driving

Check the laws and regulations on the use of wireless phones in the areas where you drive. Always obey them. Also, if using your phone while driving, please:

- Give full attention to driving driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call if driving conditions so require.

## **Electronic Devices**

Most modern electronic equipment is shielded from RF signals.

However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

### Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6") inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers:

- Should ALWAYS keep the phone more than six inches from their pacemaker when the phone is turned ON;
- Should not carry the phone in a breast pocket.
- Should use the ear opposite the pacemaker to minimize the potential for interference.
- If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.

### **Hearing Aids**

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider.

### **Other Medical Devices**

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

### **Health Care Facilities**

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may use equipment that could be sensitive to external RF energy.

### Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle.

You should also consult the manufacturer of any equipment that has been added to your vehicle.

### **Posted Facilities**

Turn your phone OFF in any facility where posted notices so require.

### Aircraft

FCC regulations prohibit using your phone while in the air. Turn your phone OFF before boarding an aircraft.

### **Blasting Areas**

To avoid interfering with blasting operations, turn your phone OFF when in a 'blasting areas or in areas posted: 'Turn off twoway radio'. Obey all signs and instructions.

### Potentially Explosive Atmosphere

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always, marked clearly. Potential areas may include: fueling areas (such as gasoline stations); below deck on boats; fuel or chemical transfer or storage facilities;

vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

# For Vehicles Equipped with an Air Bag

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

## Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user guide in an accessible place at all the times after reading it.

### Charger and Adapter Safety

• The charger and adapter are intended for indoor use only.

## **Battery Information and Care**

- Please dispose of your battery properly or take it to your local wireless carrier for recycling.
- The battery does not need to be fully discharged before recharging.
- Use only LG-approved chargers specific to your phone model since they are designed to maximize battery life.
- Do not disassemble or impact the battery as it may cause electric shock, short-circuit, and fire. Store the battery in a place out of reach of children.
- Keep the battery's metal contacts clean.
- Replace the battery when it no longer provides acceptable performance.
   The battery can be recharged several hundred times before replacement.
- Recharge the battery after long periods of non-use to maximize battery life.
- Battery life will vary due to usage patterns and environmental conditions.

- Use of extended backlighting, Media Net Browsing, and data connectivity kits affect battery life and talk/standby times.
- The self-protection function of the battery cuts the power of the phone when its operation is in an abnormal state. In this case, remove the battery from the phone, reinstall it, and turn the phone on.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

# Explosion, Shock, and Fire Hazards

- Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it is dirty.
- When using the power plug, ensure that it is firmly connected. If it is not, it may cause excessive heat or fire.
- . If you put your phone in a pocket or bag

without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may shortcircuit the phone. Always cover the receptacle when not in use.

 Do not short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.

### **General Notice**

- Using a damaged battery or placing a battery in your mouth may cause serious injury.
- Do not place items containing magnetic components such as a credit card, phone card, bank book or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.

- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn.
   Please contact an LG Authorized Service Centre to replace the damaged antenna.
- Do not immerse your phone in water. If this happens, turn it off immediately and remove the battery. If the phone does not work, take it to an LG Authorized Service Centre.
- · Do not paint your phone.
- The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software.
   Please backup your important phone numbers. (Ring tones, text messages, voice messages, pictures, and videos could also be deleted.) The manufacturer

is not liable for damage due to the loss of data.

- When you use the phone in public places, set the ring tone to vibration so as not to disturb others.
- Do not turn your phone on or off when putting it near your ear.
- Your phone is an electronic device that generates heat during normal operation.
   Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns.
   Therefore, use care when handling your phone during or immediately after operation.

## FDA Consumer Update

The U.S. Food and Drug Administration Centre for Devices and Radiological Health Consumer Update on Mobile Phones.

#### 1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless

phones emit low levels of radio frequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the standby mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

#### 2. What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiation emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radio frequency energy (RF) at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing of wireless phones with the best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Occupational Safety and Health Administration (Administración de la seguridad y salud laborales)
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. The FCC relies on the FDA and other health agencies for safety questions about wireless phones. The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

## 3. What kinds of phones are the subject of this update?

The term 'wireless phone' refers here to handheld wireless phones with builtin antennas, often called 'cell', 'mobile', or 'PCS' phones. These types of wireless phones can expose the user to measurable radiofrequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called ' cordless phones,' which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC

#### safety limits.

#### 4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radiofrequency energy (RF) exposures characteristic of wireless phones have vielded conflicting results that often cannot be repeated in other laboratories. A few animal studies. however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer causing chemicals so as to be predisposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health. Three large epidemiology studies have

been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures.

However, none of the studies can answer questions about longterm exposures, since the average period of phone use in these studies was around three years.

#### 5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human

populations, but 10 or more years followup may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

#### 6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radiofrequency energy (RF). The FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The project has also helped develop a series of public information documents on EMF issues. The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. The FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA funded research is conducted through contracts with independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

#### 7. How can I find out how much radiofrequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit

radiofrequency energy (RF) exposures. The FCC established these guidelines in consultation with the FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless telephones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (http://www. fcc.gov/oet/rfsafety) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

# 8. What has the FDA done to measure the radiofrequency energy coming from wireless phones?

The Institute of Electrical and Electronic

Engineers (IEEE) is developing a technical standard for measuring the radiofrequency energy (RF) exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, 'Recommended Practice for Determining the Spatial- Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques,' sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissuesimulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

# 9. What steps can I take to reduce my exposure to radiofrequency energy from my wireless phone?

If there is a risk from these products - and at this point we do not know that there is - it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radiofrequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna. Again. the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

## 10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radiofrequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure. Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary: it was not based on scientific evidence that any health hazard exists

#### 11. What about wireless phone interference with medical equipment?

Radiofrequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a 'compatible' phone and a 'compatible' hearing aid at the

same time. This standard was approved by the IEEE in 2000. The FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

## 12. Where can I find additional information?

For additional information, please refer to the following resources: FDA web page on wireless phones (http://www.fda.gov/) Federal Communications Commission (FCC) RF Safety Program (http://www.fcc. gov/oet/rfsafety) International Commission on Non-Ionizing Radiation Protection (http://www.icnirp.de) World Health Organization (WHO) International EMF Project (http://www.ho.int/emf) National Radiological Protection Board (UK) (http://www.nrpb.org.uk/)

## **10 Driver Safety Tips**

Your wireless phone gives you the powerful ability to communicate by voice almost anywhere, anytime. An important responsibility accompanies the benefits of wireless phones, one that every user must uphold. When operating a car, driving is your first responsibility.

When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

- Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.
- 2. When available, use a handsfree device. A number of handsfree wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.

- 3. Position your wireless phone within easy reach. Make sure you place your wireless phone within easy reach and where you can reach it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.
- 4. Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.
- 5. Do not take notes or look up phone numbers while driving. If you are reading an address book or business card, or writing a "to-do" list while driving a car, you are not watching where you are going. It is common sense. Don't get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.

- 6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light or otherwise stationary. But if you need to dial while driving, follow this simple tip dial only a few numbers, check the road and your mirrors, then continue.
- 7. Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix; they are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.
- 8. Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations — with your phone at your side, help is only three numbers away. Dial 911 or other local emergency number in the case of fire, traffic accident, road hazard or medical

emergency. Remember, it is a free call on your wireless phone!

- 9. Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a "Good Samaritan" in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.
- 10. Call roadside assistance or a special wireless nonemergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But you can still use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle, you know to be stolen, call roadside assistance or other special non-emergency wireless number.

For more information, please call to 888-901-SAFE, or visit our website www. wow-com.com

# Consumer Information on SAR (Specific Absorption Rate)

# This Model Phone Meets the Government's Requirements for Exposure to Radio Waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These limits are part of comprehensive guidelines

and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. \* Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands.

Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model.

The highest SAR value for this model phone when tested for use at the ear is 0.67 W/kg and when worn on the body, as described in this user's manual, is 1.12 W/kg. (Body-worn measurements differ among phones models, depending upon available accessories and FCC/ IC requirements.) While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of http://www.fcc.gov/oet/ea/fccid after searching on FCC ID: BEJP930.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at http://www. ctia.org/

\* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

\* Product meets current FCC & IC Radio Frequency Exposure Guidelines. FCC ID: BEJP930 IC ID: 2703C-P930

## **Important Notice**

Please check to see if any problems you have encountered with your phone are described in this section before taking the phone in for service or calling a service representative.

### 1. Phone Memory

In order to make more memory available, you will have to manage your applications and delete some data, such as applications or messages.

#### Managing Applications

- From the Home screen, tap the Menu Key
   and tap Settings > Applications > Manage applications.
- 2 When the list of applications appears, scroll and tap the application you want to uninstall.
- 3 Tap Uninstall and then tap OK to confirm that you want to uninstall the desired application.

## 2. Optimizing Battery Life

You can extend your battery's life between charges by turning off features that you don't need to run constantly in the background. You can also monitor how applications and system resources consume battery power.

#### To extend the life of your battery

- Turn off radio communications that you aren't using, such as Wi-Fi, Bluetooth, or GPS.

Wi-Fi will be set to On the first time you use your newly purchased phone.

- Lower screen brightness and set a shorter screen timeout.
- Turn off automatic syncing for Gmail<sup>™</sup>, Calendar, Contacts, and other applications.
- Some applications you have downloaded may cause your battery power to be reduced.
- While using downloaded applications, check the battery charged level.

#### To view the battery charge level

1 From the Home screen, tap the Menu Key and tap Settings > About phone > Status. 2 The battery status (charging or not charging) and level are displayed on the top menu of the screen.

## To monitor and control what uses the battery

- 1 From the Home screen, tap the Menu Key
  and tap Settings > About phone >
  Battery use.
- 2 The top of the screen displays battery usage time. Either how long since last connected to a power source, or if connected to a power source, how long you were last running on battery power. The screen also lists applications or services using battery power from greatest amount to least.

### 3. Installing an Open Source Operating System

Installing an open source operating system on your phone and not using the operating system provided by the manufacturer can cause your phone to malfunction.

#### Warning

- If you install and use an OS other than the one provided by the manufacturer, your phone is no longer covered by the warranty.
- To protect your phone and personal data, download applications only from trusted sources, such as Android Market. If some applications are not properly installed on your phone, your phone may not work properly- or serious errors may occur. You will need to uninstall those applications and all of its data and settings from the phone.

### 4. Using the Unlock Pattern, PIN, or Password

Set an unlock Pattern, PIN, or Password to secure your phone. To set the screen lock, follow the process below.

Tap the Menu Key (1), tap Settings > Location & security > Set up screen lock and select among Pattern, PIN or Password.

## Important Notice

#### Warning

Take precautions when using an Unlock Pattern, PIN, or Password. It is very important that you remember the screen unlock information you set. You are allowed 5 attempts to enter your screen unlock information. If you used up all 5 opportunities, you will have to wait 30 seconds to attempt unlocking the phone again.

## When you can't recall your Unlock Pattern, PIN, or Password:

If you logged into a Google account on the phone and failed to use the correct pattern 5 times, tap **Forgot Pattern?** You will be required to sign in with your Google account and prompted to create a new unlock pattern.

If you haven't created a Google account on the phone or you forgot your PIN or Password, you need to perform a hard reset.

#### Caution

If you perform a hard reset, all user applications and user data will be deleted. Please remember to back up any important data before performing a hard reset.

- 1 Turn the power off.
- 2 Press and hold the following keys at the same time for 8 seconds: Power/Lock Key + Down Volume Key.
- 3 When FACTORY HARD RESET screen is displayed, release the keys.
- 4 Press the **Power/Lock Key** to Yes -- delete all user data, and press the Volume Keys to cancel.
- 5 Press the **Power/Lock Key** to confirm -delete all user data, and press the Volume Keys to cancel.

# 5. Using Hard Reset (Factory Reset)

If your phone needs to be restored to its original condition, use a **Hard Reset** to initialize your phone.

1 Turn the power off.

- 2 Press and hold the following keys at the same time for 8 seconds: Power/Lock Key + Down Volume Key.
- 3 When FACTORY HARD RESET screen is displayed, release the keys.
- 4 Press the **Power/Lock Key** to Yes -- delete all user data, and press the Volume Keys to cancel.
- 5 Press the **Power/Lock Key** to confirm -delete all user data, and press the Volume Keys to cancel.

#### Warning

Do not remove the micro SD card without unmounting it first. Otherwise, it may damage the micro SD card as well as your phone, and the data stored on the micro SD card may be corrupted. To remove the micro SD card safely, from the Home screen, tap the Menu Key and tap Settings > SD card & phone storage > Unmount SD card.

#### Warning

If you perform a Hard Reset, all user applications and user data will be deleted. Please remember to back up any important data before performing a **Hard Reset**.

### 6. Using a micro SD Card

Pictures, Music and Video files, can be saved to external memory. Before saving these files to external memory, you need to insert a micro SD card. If you have not inserted a micro SD card, you will not be able to save these items on external memory.

## Important Notice

# 7. Connecting your phone to a computer via USB

- 1 Use the USB cable that was provided with your phone to connect the phone to a USB port on your computer. You'll receive a notification that the USB is connected and can see USB connection mode popup.
- 2 Tap Mass storage and OK to confirm that you want to transfer files between your phone's micro SD card and the computer.

When the phone is connected as USB storage, you receive a notification. Your phone's micro SD card is installed as a drive on your computer. You can now copy files to and from the micro SD card.

#### TIP

You cannot access the micro SD card from your phone while connected as USB storage. So you cannot use applications that rely on the micro SD card, such as Music.

To disconnect your phone from the computer, carefully follow your computer's instructions to disconnect USB devices correctly, to avoid losing information on the card. Then follow the instructions below.

- 1 Open the Notifications panel and tap Turn off USB storage.
- 2 Then tap Turn off USB storage on the USB Mass Storage screen and safely disconnect the phone from your computer.

# 8. Unlock screen when using data connection

Your screen will go dark if untouched for a period of time when using a data connection. To turn on your LCD screen, press the Power/Lock Key.

## 9. Hold the phone straight up

## Please hold the mobile phone straight up as a regular phone.

While making/receiving calls or sending/ receiving data, try to avoid holding the lower part of the phone where the antenna is located. It may affect call quality.

## 10. When the screen freezes

# If the phone does not respond to user input or the screen freezes:

Press and hold the **Power/Lock Key** for 10 seconds to turn it off. Then, press and hold the **Power/Lock Key** again for 3 seconds to reboot the phone.

### 11. Do not connect your phone when you power on/off your PC

Make sure to disconnect your phone from the PC when powering your PC on or off as it might result in PC errors.

## Your Phone

To turn on the phone, press and hold the Power/Lock Key for 3 seconds.

To turn off the phone, press the Power/Lock Key for 3 seconds and tap  $\ensuremath{\text{Power off}}$  and  $\ensuremath{\text{OK}}$  to confirm.

## Front view




#### Warning

Placing a heavy object on the phone or sitting on it can damage its LCD and touch screen functionalities. Do not cover the LCD's proximity sensor with a protective film. This can cause the sensor to malfunction.

#### TIPS

- Tap the Menu Key 
  whenever you open an application to check what options are available.
- If your phone has errors when you use it or you cannot turn it on, remove the battery, install it again and turn it on after 5 seconds.

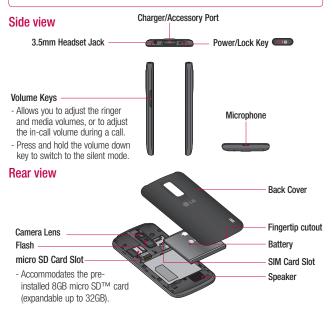

# **Getting Started**

# Installing the SIM card and battery

Before you can start exploring your new phone, you'll need to set it up. To insert the SIM card and battery:

1 Hold the phone on your hand firmly. With the other hand, lift the back cover using the fingertip cutout located on the bottom of the cover and remove it.



2 Slide the SIM card into the SIM card slot. Make sure the gold contact area on the card is facing downwards.



3 Insert the battery into place by aligning the gold contacts on the phone and the battery.



4 Replace the back cover of the phone (as demonstrated below). Apply a steady downward pressure until the battery cover clicks into place.



# Charging your phone

1 Connect the cabless wall adapter and USB cable as shown below. The LG logo on the USB cable should face toward you.



2 Plug the USB cable (as shown below) into the phone's charger/accessory port. Make sure the USB symbol is facing upwards.



#### NOTE

The battery must be fully charged initially to improve battery lifetime.

#### NOTE

Your phone has an internal antenna. Be careful not to scratch or damage this rear area, as that will cause loss of performance.

If the phone is turned off as the battery is fully discharged, the battery is called a weak battery. In this case when the phone connect to the charger(TA or USB) cable, the keypad LED at the bottom of the phone will be blinking. This is normal operation in the weak battery to prevent over-current flowing because the phone is designed to provide reasonable protection algorithm for against damage of battery. And after a few minutes, the LCD is turned on normally.

## Inserting a micro SD card

Insert a micro SD<sup>™</sup> card to use the camera and other multimedia features. Multimedia contents can be saved in the micro SD card. LG-P935 has a micro SD card pre-installed.

# **Getting Started**


#### NOTE

This device supports up to a 32GB micro SD card.

1 Turn the phone off before inserting or removing the micro SD card. Remove the back cover.



2 Then insert the micro SD card into the slot. Make sure the gold contact area is facing downwards.

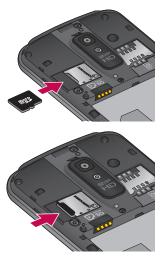

# Removing the micro SD card

To safely remove the micro SD card from your phone, first you need to unmount it.

#### NOTE

On Android OS 2.3 and above, you can download applications from Android Market and store them on a micro SD card as well as on the phone. Due to this feature, if you skip the unmount procedure, it can cause an error because information between the micro SD card and the phone is not accorded properly. In the worst case, the micro SD card can be corrupted or damaged.

- 1 From the Home screen, tap the Menu Key and tap Settings > SD card & phone storage > Unmount SD card.
- 2 Remove the battery cover and gently pull the microSD card from the slot.

#### Warning

Do not remove the micro SD card without unmounting it first. Otherwise, it may damage the micro SD card as well as your phone, and the data stored on the micro SD card may be corrupted.

# Formatting the microSD card

Your microSD card may already be formatted. If it isn't, you must format it before you can use it.

#### NOTE

All files on the card are deleted when you format the micro SD card.

- 1 From the Home screen, tap the Menu Key and tap Settings > SD card & phone storage > Unmount SD card.
- 2 Tap Erase SD card and Erase SD card button.
- 3 If you set an unlock pattern, enter it and tap Erase everything. The card will then be formatted and ready to use.

#### NOTE

If there is content on your micro SD card, the folder structure may be different after formatting since all the files will have been deleted.

# **Getting Started**

# Switching between and exiting applications

Multi-tasking is easy with Android because open applications keep running even when you open another application. There is no need to quit an application before opening another. Use and switch among several open applications. Android manages each application, stopping and starting them as needed, to ensure that idle applications don't consume resources unnecessarily.

## Switching between applications

- Touch and hold the **Home Key** a. A list of recently used applications will be displayed. Then tap the application you want to access.

#### To stop/exit an application

 From the Home screen, tap the Menu Key
 and tap Settings > Applications > Manage applications. 2 Tap the desired application and tap Force stop to exit.

# HDMI

HDMI (High Definition Multimedia Interface) is a compact audio/video interface for transmitting uncompressed digital data. If your phone is connected to a TV/monitor via an HDMI cable, you can see the image and video file through the **TV/monitor** when the video player or image viewer is visible on your phone screen.

#### NOTE

It may take time to play media files depending on the device connected to your phone. Files may not be played properly when using a cable or device that is not HDMI-certified. The image orientation set in your phone also applies to the image displayed on the device. The protected video as like DRM(digital rights management) displays only on your phone. If your phone is connected to a TV/monitor with the low HDMI resolution, the high resolution video playback/camera preview may not display on the TV/monitor.

# Your Home screen

# **Touch screen tips**

With the touch of your finger, you can access available applications, make menu selections, and access data saved to your phone. The following terms are used for describing the different available actions using the touchscreen:

**Tap** - A single finger tap selects items, links, shortcuts and letters on the on-screen keyboard.

Touch and hold - Touch and hold an item on the screen by touching it and not lifting your finger until an action occurs. For example, to open a contact's available options, touch and hold the contact in the Contacts list until the context menu opens.

**Drag** - Touch and hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position. You can drag items on the Home screen to reposition them.

Swipe or slide - To swipe or slide, quickly move your finger across the surface of the screen, without pausing when you first touch it (so you don't drag an item instead). For example, you can slide the screen up or down to scroll through a list, or browse through the different Home screens by swiping from left to right (and vice versa).

**Double-tap -** Double-tap to zoom on a Web page or a map. For example, quickly double-tap a section of a Web page to adjust that section to fit the width of the screen. You can also double-tap to zoom in and out when taking a picture (using the Camera), and when using Maps.

Pinch-to-Zoom - Use your index finger and thumb in a pinch or spread motion to zoom in or out when using the browser, Maps, or browsing pictures.

Rotate the screen - From many applications and menus, the orientation of the screen adjusts to the device's physical orientation.

#### NOTE

- To select an item, tap the center of the icon.
- Do not to press too hard; the touch screen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to tap the option you want. Be careful not to tap any other keys or icons.

# Your Home screen

# **Proximity sensors**

When receiving and making calls, this sensor automatically turns the backlight off and locks the touch keypad by sensing when the phone is near your ear. This extends battery life and prevents the touch keypad from activating unintentionally during calls.

# Lock your phone

When you are not using the LG-P935 press the **Power/Lock Key** to lock your phone. This helps prevent accidental presses and saves battery power.

Also, if you do not use the phone for a while, the Home screen or other screen you are viewing, is automatically replaced with the lock screen after 30 seconds of inactivity to conserve the battery and prevent pocket dialing.

To wake up your phone, press the **Power/** Lock Key **Description**. The lock screen will appear. Slide the lock screen up. The last screen you were working on opens.

#### NOTE

- The automatic screen timeout can be configured manually in Settings.
- If there are any programs running when you lock the phone, they may still be running in lock mode.
   It is recommended that you exit all programs before entering the lock mode to avoid unnecessary charges (e.g., phone call, web access and data communications).

#### Setting an unlock pattern:

You can draw your own unlock pattern by connecting four or more dots.

To unlock the phone, draw the pattern you set on the screen.

#### Caution

If there are more than 5 pattern drawing errors in a row, you will be required to wait for 30 seconds to retry.

# Quick Switch to Silent Mode

To quickly set your phone to silent mode, press and hold the **Volume Down Key** until you see **(**) on the Status Bar.

# Home

Simply swipe your finger to the left or right to view the different panels.

You can also customize each panel with shortcuts, and folders. You can also customize each panel with widgets, which are shortcuts to your Favourite applications.

#### NOTE

On the Home screen, you can view quick keys at the bottom of the screen. The quick keys provide easy, one-tap access to the functions you use the most.

# Customizing your Home screen

You can customize your Home screen by adding quick access elements, such as shortcuts, widgets, folders to it, or changing the wallpaper.

- Widgets: Add dynamically updating widgets to your Home screen to allow quick access to applications without opening the full application.
- Shortcuts: Add application, web bookmark, contact, email, and music playlist shortcuts to the Home screen.

- Folders: Add folders to organize contacts and shortcuts.
- Wallpaper: Change the Home screen wallpaper.

# To add Widgets, Shortcuts, and Folders on the Home screen:

- Select a location (Home screen panels) to add an item by swiping the Home screen from left to right or vice versa.
- 2 Tap the Menu Key S > Add. Or, touch and hold an empty part of the Home screen.
- 3 Tap the type of item you want to add on the screen: Widgets, Shortcuts, Folders, or Wallpaper.
- 4 Tap an available widget, shortcut, or folder.
- 5 You will see a new icon on the Home screen. To place it on a different panel, drag it to the desired location on the desired panel and release your finger from the screen.

#### TIP

To add a preloaded application or an application you have downloaded from Market to the Home screen, simply touch and hold the icon you want in the Applications Screen to add to the Home screen.

# Your Home screen

#### NOTE

If there is no available space on a particular Home screen panel, Add will not be available; you must delete or remove an item before you can add another item. In this case, you have the option of switching to another Home screen panel.

To delete an application icon from the Home screen, touch and hold the shortcut icon you want to delete and drag to at the bottom of the screen. You cannot delete the preloaded applications. (Only their icons can be deleted from the screen).

# Getting back to a recently used application

- 1 Touch and hold the **Home Key** . The screen will display the icons of applications that you have used recently.
- 2 Tap an icon to open its application or tap the **Back Key** to return to the current application.

# **Notifications panel**

Notification icons on the Status Bar report the arrival of new messages, calendar events, alarms, as well as ongoing events, such as when you are in a call. You can view a list of all recent notifications.

The Notifications panel runs across the top of your screen.



Touch and hold the Status Bar and slide it down with your finger. Or, from the Home screen, tap the **Menu Key** > **Notifications**. From here, you can check and quickly turn on and off Silent (Vibrate) mode, Wi-Fi, Bluetooth, GPS, and Airplane Mode.

## Viewing the Status bar

Telus 00

The Status bar uses different icons to display phone information, such as signal strength, new messages, battery life, and active Bluetooth and data connections.

Below is a table explaining the meaning of icons you are likely to see in the Status bar.

#### [Status bar]

00 all 4

6:50 PM

Icon	Description
	No SIM card inserted
äill	No network signal available
	Airplane mode is on
(((+	Connected to a Wi-Fi network
6	Wired headset connected
6	Call in progress
<b>C</b>	Call on hold
۷.	Speakerphone is on
1	Phone microphone is muted

lcon	Description
*	Missed call
8	Bluetooth is on
-	Connected to a Bluetooth device
G	Alarm is set
070	New voicemail available
×	Ringer is silenced
	Vibrate mode is on
	Battery fully charged
-	Battery is charging
÷	Phone is connected to PC via USB cable
	Downloading data
<u><u>+</u></u>	Uploading data
Q	GPS is on
00	Receiving location data from GPS
	On-Screen Phone connected

# Your Home screen

Icon	Description
۲	3 more notifications not displayed
Q	Data is synchronizing
<b>v</b>	Download finished
	New email available
Μ	New Gmail available
talk	New Google Talk message available
<b>P</b>	New text/multimedia message available
	Song is playing
51	Upcoming event
0	USB tethering is active.
<b></b>	Portable Wi-Fi hotspot is active
6	USB tethering & Portable Wi-Fi hotspot are active.

# **On-screen Keyboard**

You can enter text using the on-screen keyboard. The on-screen keyboard displays automatically on the screen when you need to enter text. To manually display the keyboard, simply tap a text field where you want to enter text.

There are two types of keypads that you can use: Android keyboard and LG keyboard.

To select the keyboard:

1 Tap the Menu Key Settings > Language & keyboard > Input method.

Touch and hold the the text entry field and tap **Input Method**.

2 Select the desired keyboard between Android keyboard and LG keyboard.

#### Android keyboard - Letters Entry



- Shift Key Tap once to capitalize the next letter you type. Double-tap for all caps.
- Number and Symbols Key Tap to change input to number and symbol entry.
- Settings Key Tap to set various Android keyboard settings or select another input method.
- Voice to Text Key Tap to enter text by voice.
- **5** Space Key Tap to enter space.
- 6 Emoticon Key Tap to enter various emoticons.
- Delete Key Tap to delete characters to the left of the cursor.

#### Android keyboard -Numbers and Symbols Entry



- Alt Key Tap to enter additional symbols. The keyboard will change to alternate characters.
- Letters Key Tap to change input to letters entry.
- Settings Key Tap to set various Android keyboard settings.
- **O Space Key** Tap to enter space.
- Next Tap to move the cursor to the next field.
- O Delete Key Tap to delete characters to the left of the cursor.

# Your Home screen

#### LG keyboard - QWERTY - Letters Entry



- Shift Key Tap once to capitalize the next letter you type. Double-tap for all caps.
- Number and Symbols/ Settings Key - Tap to change input to number and symbol entry. Touch and hold to set various LG keyboard settings.
- Objecte Key Tap to delete characters to the left of the cursor.
- Hide Keyboard Key Tap to hide the keyboard.
- Enter Key Tap to move the cursor to the next line.

LG keyboard - QWERTY - Numbers and Symbols Entry



- Alt Key Tap to enter additional symbols. The keyboard will change to alternate characters.
- Letters/ Settings Key Tap to change input to letters entry. Touch and hold to set various LG keyboard settings.
- **Space Key** Tap to enter space.
- Oblete Key Tap to delete characters to the left of the cursor.
- Hide Keyboard Key Tap to hide the keyboard.
- Next Key Tap to move the cursor to the next field.

#### LG keyboard - Phone keypad

To switch to the phone keypad on LG keyboard, touch and hold Tap LG keyboard settings > Keyboard layout, then tap Phone keypad. The Phone keypad allows you to enter letters by tapping the key labeled with the desired letters, similar to how you would on a traditional 12 key phone. You may have to tap a key up to four times to type the desired letter or number.



- Shift Key Tap once to capitalize the next letter you type. Double-tap for all caps.
- **2** Space Key Tap to enter space.
- Delete Key Tap to delete characters to the left of the cursor.

- Onumber and Symbols/ Settings Key - Tap to change input to number and symbol entry. Touch and hold to set various LG keyboard settings.
- Enter Key Tap to move the cursor to the next line.
- Hide Keypad Key Tap to hide the keypad.
- **79 Key** Tap to turn on the T9 entry mode.

#### TIP

To switch quickly between the Android keyboard and LG keyboard, touch and hold the text entry field. When the Edit text menu pops up, tap **Input method**. Then tap the keyboard you wish to use.

# Your Home screen

## **Entering text**

Shift Key - Tap once to capitalize the next letter you type. Double-tap for all caps. The coloured circle on the button tells you if uppercase is locked on or if it is just on for one character o.

#### 1237<sup>°</sup> Number and Symbols/ Settings Key

- Tap to change to 123 Mode and enter numbers and symbols. Touch and hold to set various LG keyboard settings.

- Enter Key- Adds another line when entering text.
- Hide Keypad Key Removes the keypad from the screen.
- Delete Key- Deletes any text you have entered.

To enter a space, tap ° – .

# 123 Mode

This mode allows you to enter numbers in a text message (a telephone number, for example) more quickly. Tap the keys corresponding to the required digits before manually switching back to the appropriate text entry mode by tapping the T227 key.

# Entering accented letters

When you select French as the text entry language, you can enter special French characters (e.g., "á").

### From Phone Keypad

After the corresponding letter character disappears, press the same key repeatedly until you see the special character you want.

#### From Qwerty keyboard

To input the accent, press and hold the "a" key.

After the accented character appears, tap it to enter it.

# Google Account Set-up

The first time you open a Google application on your phone, you will be required to sign in with your existing Google account. If you do not have a Google account, you will be prompted to create one.

# Creating your Google account

- 1 From the Home screen, tap the **Applications Key .**
- 2 Tap **Gmail** > Next > Create to start the Gmail<sup>™</sup> setup wizard.
- 3 Tap a text field to open the keyboard and enter your name and username for your Google account. When you finish entering the text, you can move to the next text field by tapping Next on the keyboard.
- 4 When you're finished entering your name and username, tap Next. Your phone will communicate with Google servers and check for username availability.
- 5 Enter and re-enter your password. Then follow the instructions and enter the required and optional information about the account. Wait while the server creates your account.

# Signing into your Google account

- 1 Enter your email address and password, then tap **Sign in**.
- 2 After signing in, you can use Gmail<sup>™</sup> and take advantages of Google services on your phone.
- 3 Once you have set up your Google account, your phone will be automatically synchronized with your Google account on the web. (Depending on your synchronization settings.)

After signing in, your phone will sync with your Google services, such as Gmail<sup>™</sup>, Contacts, Google Calendar, and Picasa photo albums. You can also use Google Maps<sup>™</sup>, download applications from Android Market<sup>™</sup>, back up your settings to Google services on your phone.

# Google Account Set-up

### IMPORTANT

- Some applications, such as Calendar. work only with the first Google Account vou add. If you plan to use more than one Google Account with your phone. be sure to sign into the one you want to use with such applications first. When you sign in, your contacts, Gmail messages. Calendar events, and other information from these applications and services on the web are synchronized with your phone. If you don't sign into a Google Account during setup, you will be prompted to sign in or to create a Google Account the first time you start an application that requires one, such as Gmail or Android Market<sup>™</sup>.
- If you have an enterprise account through your company or other organization, your IT department may have special instructions on how to sign into that account.

# Calls

## Making a call

- 1 Tap Kan to open the keypad.
- 2 Enter the number on the keypad. To delete a digit, tap the Clear icon <a>
- 3 Tap the Call icon 🔽 to make a call.
- 4 To end a call, tap the End icon

#### TIP

To enter "+" to make international calls, touch and hold  $\boxed{\mathbf{0}}$ .

## Calling your contacts

- 1 Tap 🛄 to open your contacts.
- 2 Scroll through the contact list or tap the Search box and enter the first letter(s) of the contact you want to call.
- 3 In the list that is displayed, tap the contact you want to call.
- 4 In the Contact Info screen, tap the phone number you wish to call.

## Answering and rejecting a call

### When the screen is locked

When your phone rings, drag the **Answer** icon **7** to the right.

Drag the **Decline** icon **o** to the left to reject an incoming call. Drag the Excuse Msg bar upwards if you want to send a message to the caller. If the caller is unknown, this **Excuse Msg bar** is not available.

#### When the screen is unlocked

When your phone rings, tap the **Answer** icon **\_\_\_**. Tap **Decline** icon **\_\_\_** to reject an incoming call.

Tap the Excuse Msg bar upwards if you want to send a message to the caller. If the caller is unknown, the **Excuse Msg bar** is not available.

## Adjusting the in-call volume

To adjust the in-call volume during a call, use the volume up and down keys on the left side of the phone.

# Calls

# Making a second call

- During your initial call, tap the Menu Key and select Or, tap the Dialpad icon
   Then enter the number you want to call.
- 2 Dial the number or search your contacts.
- 3 Tap the Call icon 🤽 to connect the call.
- 4 Both calls will be displayed on the call screen. Your initial call will be locked and put on hold.
- 5 Tap the Contact on the screen to toggle between calls or tap to merge the calls.
- 6 To end active calls, tap **End**. If there is no active call, it will end the call on Hold.

#### NOTE

You will be charged for each call you make.

# Viewing your call logs

From the Home screen, tap the **Call icon** 

View a complete list of all dialed, received, and missed voice calls.

#### TIP

Tap any single call log entry to view the date, time, and duration of the call.

#### TIP

Tap the **Menu Key (D)**, then tap **Delete all** to delete all the recorded items.

## Call settings

You can configure phone call settings, such as call forwarding, and other special features offered by your carrier.

- 1 From the Home screen, tap the **Menu Key** and tap **Settings**.
- 2 Tap Call settings.

# Contacts

You can add contacts on your phone and synchronize them with the contacts in your Google Account or other accounts that support syncing contacts.

# Searching for a contact

- 1 From the Home screen, tap the Applications Key 🔠 and then tap 🛄 to open your contacts.
- 2 Tap the Search field and enter the contact name using the keypad.

# Adding a new contact

- 1 Tap sign and enter the new contact's number. Tap the Menu Key 💷, tap Add to contacts and then Create new contact
- 2 If you want to add a picture to the new contact, tap . Choose from Capture picture or Pick from Gallery.
- 3 Select the contact type by tapping



- 4 Tap a category of contact information and enter the details about your contact.
- 5 Tap Save to save the contact entry.

# **Favourite Contacts**

You can classify frequently called contacts as favourites.

#### To add a contact to your favourites

- 1 From the Home screen, tap the Applications Key 🔠 and then tap 🛄 to open your contacts.
- 2 Tap a contact to view its details.
- 3 Tap the star to the right of the contact's name. The star turns gold and the contact is added to your favourites.

#### To remove a contact from your favourites list

- 1 From the Home screen, tap the Applications Key 📰 and then tap 🛄 to open your contacts.
- 2 Tap the Groups tab and tap favourites.
- 3 Tap a contact to view its details.
- 4 Tap the gold star to the right of the contact's name. The star turns grev and the contact is removed from your favourites.

# Messaging/Email

# Messaging

Your phone combines SMS and MMS into one intuitive, easy-to-use menu.

## Threaded box

Messages (SMS and MMS) exchanged with another party can be displayed in chronological order so that you can conveniently see an overview of your conversation.

### Sending a message

- Tap the screen, then tap New message to create a new message.
- 2 Enter a contact name or phone number in the To field. As you enter the contact name, matching contacts appear. You can tap a suggested recipient. You can also add multiple contacts.

#### NOTE

You will be charged for a text message for every person you send the message to.

**3** Tap the text field to start entering your message.

- 4 Tap the Menu Key (I) to open the options menu. Choose from Call, Attach, Discard, Add subject, Insert smiley, and More (Templates, All messages, Keyboard settings).
- 5 Tap Send to send your message.
- 6 The message screen opens, with your message after your name. Responses appear on the screen. As you view and send additional messages, a message thread is created.

#### Warning

The 160-character limit may vary from country to country depending on how the SMS is coded and the language used in the message.

#### Warning

If an image, video, or audio file is added to an SMS message, it will be automatically converted into an MMS message and you will be charged accordingly.

#### NOTE

When you get an SMS message during a call, there will be an audible notification.

#### Using smilies

Liven up your messages using smilies. When writing a new message, tap the Menu Key (1), then tap Insert smiley.

#### Changing your message settings

Your phone's message settings are predefined, so you can send messages immediately. You can change the settings based on your preferences.

From the Home screen, tap Messaging \$\$\begin{bmatrix} > Menu Key \$\$\box\$ > Settings.

## Email

You can use the **Email** application to read Email from providers other than Gmail. The Email application supports the following account types: POP3, IMAP and Microsoft Exchange ActiveSync (for Enterprise users).

### To open the Email application

From the Home screen, tap the Applications Key :=> Email. The first time you open the **Email** application, a setup wizard opens to help you add an Email account.

#### Microsoft Exchange Email Account

Email address – Enter the account email address.

**User name** – Enter the account username.

Password - Enter the account password.

**Domain** – Enter the account domain (optional)

Server address – Enter the server address

Use SSL – Choose whether or not to use SSL for Microsoft Exchange.

#### Other (POP3, IMAP) Email Account

Email address – Enter the account email address.

Password – Enter the account password. Setup complete page will appear and you will need to enter "name". The account will now appear in the list of accounts in your Email folder.

**POP3 / IMAP4** – Select protocol type, either POP3 or IMAP4.

**Incoming server** – Enter the incoming email server address.

# Messaging/Email

Secure type - TLS/SSL/Off.

**Port number** – Normally each account's default number will be displayed.

**Outgoing server** – Enter the outgoing email server address.

SMTP Secure Connection - TLS/SSL/Off.

**Port number** – Normally each account's default number will be displayed.

Tap the Next button to connect the server. Setup Completed page will appear. You will need to enter "name" for account display and My name. Then, tap Done.

The account will now appear in the list of accounts in your Email folder.

### The Accounts Screen

The **Accounts** screen lists your **Combined Inbox** and each of your email accounts.

Tap the Applications Key :=> Email. The Account list appears.

#### TIP

To make a shortcut to the lnbox of an account:

In the accounts list, touch and hold an email account. Then, tap  ${\mbox{\rm Add}}\ to$ 

#### homescreen.

You can tap an account to view its **Inbox**. The default account from which you send email is indicated with a checkmark.

## To open your Combined Inbox

If you have configured email to send and receive email from more than one account, you can view all messages sent to all accounts in your Combined Inbox.

Tap Email > Combined Inbox (on the Accounts screen).

Messages in the **Combined Inbox** are colour coded on the left, by account, using the same colours used for your accounts in the **Accounts** screen.

When a new email arrives in the inbox, there will be sound and vibration notification. Tap the email notification to end it.

## **Composing and Sending Email**

- 1 In the Email application, tap the Compose.
- 2 Enter an address for the message's intended recipient. As you enter text, matching addresses will be offered from your contacts.
- 3 Tap the **Cc/Bcc** field to copy or blind copy to other contacts/email addresses.

- 4 Enter the text of the message.
- 5 Tap **Attach** to attach the file you want to send with your message.
- 6 Tap Send.

If you are not ready to send the message, tap **Save** to save it in a **Drafts** folder. Touch a message in the **Drafts** folder to resume working on it. Your message will also be saved as a draft if you touch the **Back** key before sending it.

Tap **Cancel** to abandon and delete a message, including any saved drafts. If you are not connected to a network, for example if you're working in airplane mode, the messages you send are stored in your **Outbox** folder until you're connected to a network. If it contains any pending messages, the **Outbox** will be displayed on the **Accounts** screen.

#### NOTE

The messages sent using an Exchange account will not be stored on the phone; they will be stored on the Exchange server itself. If you want to see your sent messages in the Sent folder (or with the Sent label), you may need to open the Sent folder/label and select Refresh from the options menu.

## Working with Account Folders

Each account has **Inbox**, **Outbox**, **Sent**, **Drafts**, **Trash and Junk folders**. Depending on the features your account

service provider supports, you may have additional folders.

## Adding and Editing Email Accounts

### To add an email account

- 1 Tap the Applications Key 📰 > Email.
- 2 Select MS Exchange or Other.

If an email account is already set up, the wizard is not activated automatically.

In this case, tap the Menu Key  $\blacksquare>$  Add account.

### To change account settings

- 1 Open the Accounts screen.
- 2 Tap the Menu Key **E** > Settings.

### To delete an email account

- 1 Open the Accounts screen.
- 2 Touch and hold the account you want to delete.
- 3 Tap Remove account in the menu that opens and tap Remove in the dialogue box to confirm.

# Social Networking

With your phone, you can enjoy social networking and manage your micro-blog in on-line communities. You can update your current status, upload photos, and view your friends' status updates in real-time. You can add your Facebook, Twitter, and MySpace accounts to your phone. If you don't have an account, you can visit their sites to set one up.

#### NOTE

Additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

# Adding an account to your phone

- 1 From the Home screen, tap the Menu Key > Settings > Accounts & sync.
- 2 Tap Add account.
- **3** Tap any social networking service you want to use.
- 4 Enter your email address and password that you set up for your social networking account, then tap **Log in**.

# Adding a social networking widget on the home screen

If you add a social networking widget on your Home screen, the widget will show your status when your phone receives updates from the network. You can also access the social community directly by tapping the widget.

1 Touch and hold an empty spot on the Home screen.

**NOTE** : If there is no available space on a particular Home screen panel, you won't be able to add any widget; you must delete or remove an item before you can add another item. In this case, you have the option of switching to another Home screen panel.

2 When various Widgets appear, scroll through the widget and tap Social+ W.

# Viewing and updating your status

- 1 Go to the Home screen panel where the Social+ widget is. You can see the current status of social applications you set.
- 2 You can select each social application you'd like to view. Tap the ①.
- 3 Tap "What are you doing?" field to update your status with comments or upload pictures.

- Check all the social applications you'd like to update. It'll will simultaneously update all.

4 After entering comments with attachment (if any), tap Post.

#### TIP

You can use information about friends only in your social network(s) or sync all data to Contacts.

# Syncing accounts on your phone

You can sync information from your social networking accounts with your Contacts and other functions on your phone, if applicable.

- From the Home screen, tap the Menu Key > Settings > Accounts & sync. Choose the account you want to synchronize and enter the necessary information.
- 2 Check Background data and Auto-sync.
- 3 Tap the account to sync.
- 4 Check sync options such as Sync Contacts.

"o" indicates that synchronization has been enabled.

# Removing accounts on your phone

- From the Home screen, tap the Menu Key
   Settings > Accounts & sync.
- 2 Tap the account(s) you want to delete, then tap **Remove account** (twice).

# Camera

To open the Camera application, tap Applications Key 🔢 > Camera

# Getting to know the viewfinder



#### NOTE

You can close all the shortcut options to give a clearer viewfinder screen. Just tap the center of the screen once. To recall the options, tap the screen again.

# Taking a photo

- 1 From the Home screen tap Camera
- 2 Holding the phone horizontally, point the lens towards the subject you want to photograph.
- 3 Touch and hold the capture button lightly. and a focus box will appear in the center of the viewfinder screen
- 4 Position the phone so you can see the subject in the focus box.
- 5 When the focus box turns green, the camera has focused on your subject.
- 6 Release the Capture button.

#### NOTE

A shading issue may occur when you take a picture indoors, due to the characteristics of the camera. (Shading means a colour difference between the center and sides.)

# Once you've taken the photo

Your captured photo will appear on the screen if Auto review is set to On

Share Tap to share the picture via various methods such as Bluetooth or Messaging.

#### NOTE

Additional charges may apply when MMS messages are sent while roaming.

- Set as Tap to use the image as Contact icon or Wallpaper.
- Rename Tap to edit the name of the selected picture.
- Tap to delete the image.
- Tap to take another photo immediately. Your current photo will be saved.
- Tap to view the Gallery of your saved photos.

# Using the advanced settings

In the viewfinder, tap to open the advanced options.

You can change the camera settings by scrolling the list. After selecting the option, tap the Back key [\_\_\_].

Focus - Tap to select the focus mode.

- Auto : Allows the camera to focus automatically.
- · Face tracking : The camera detects and focuses on human faces automatically.

# Camera

Image size – Tap to set the size (in pixels) of the picture you take. Select a pixel value from the following options: 8M(3264X2448), W6M(3264X1836), 5M(2560X1920), 3M(2048X1536), W3M(2304X1296), 1M(1280X960), W1M(1536X864).

**Scene mode** – Select the colour and light settings appropriate for the current environment.

- Normal : Automatically adjusts according to the environment.
- Portrait : It's good to capture people.
- Landscape : It's good to capture natural scenery such as trees, flowers and sky.
- **Sports :** It's good to capture sports scenery.
- Sunset : It's good to capture the sunset scenery.
- Night : It's good to capture the night scenery. Slow shutter speeds are used to detect night landscape.

**ISO -** Control the camera's sensitivity to light. Choose from Auto, **400**, **200**, and **100**.

White balance – Choose from Auto, Incandescent, Sunny, Fluorescent, and Cloudy.

**Colour effect** – Choose a colour tone for your new photo.

Timer – The self-timer allows you to set a delay after the shutter is pressed. Select **Off, 3 sec, 5 sec,** or **10 sec.** This is ideal if you want to be included in a photo.

Shot mode – Choose from Normal, Continuous shot, and Panorama.

Shutter sound – Select one of the four shutter sounds.

Auto review – If you set Auto review on, it will display the picture that was just taken automatically.

Tag location – Activate to use your phone's location-based services. Take pictures wherever you are and tag them with the location. If you upload tagged pictures to a blog that supports geotagging, you can see the pictures displayed on a map.

#### NOTE

This function uses wireless networks. You need to checkmark Use wireless networks.

From the Home screen, tap the Menu Key  $\blacksquare$  > Settings > Location & security > Use wireless networks.

- 0
- Restore all camera default settings.
- Tap whenever you want to know how a function operates. This will provide you a quick guide.

#### NOTE

- When you exit the camera, some settings will return to their defaults. Check the camera settings before you take your next photo.
- The settings menu is superimposed over the viewfinder, so when you change elements of the image colour or quality, you will see a preview of the image change behind the settings menu.

## Viewing your saved photos

You can access your saved photos from within the camera mode. Just tap the Gallery button and your Gallery will be displayed.

#### TIP

Flick left or right to view other photos or videos.

- slideshow Tap to see slide show.
- Menu Tap to access the following options:

Share to share the picture via various methods such as Bluetooth or Messaging. Delete - to delete the picture. More - to access options such as Details, Set as, Crop, Rotate left, Rotate right.

### Setting a photo as wallpaper

- 1 Tap the photo you want to set as wallpaper to open it.
- 2 Tap the screen to open the options menu.
- 3 Tap Menu > More > Set as > Wallpaper.
- 4 Crop the image as desired and tap Save.

# Video Camera

Q 2 3


Ö

# Getting to know the viewfinder

0:00:00 • RE

- Brightness This defines and controls of the amount of sunlight entering the lens. Slide the brightness indicator along the bar, towards "-" for a lower brightness video, or towards "+" for a higher brightness video.
- Zoom Zoom in or zoom out. Alternatively you can use the Volume Keys.

Camera Switch - Allows you to switch between the front-facing and back-facing cameras.

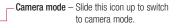

Start recording – Allows you to start recording.

Gallery – This enables you to access your saved photos and videos from within the video camera mode. Simply tap and your Gallery will appear on the screen.

Settings – Tap this icon to open the settings menu. See Using the advanced settings on page 67.

Flash - Allows you turn on the flash when recording video in a dark place.

# Recording a video

- From the Home screen, tap Camera and slide the camera mode button to change to Video mode. The icon will change to .
- 2 The video camera's viewfinder will appear on the screen.
- **3** Holding the phone horizontally, point the lens towards the subject of the video.
- 4 Tap the Record icon once to start recording.
- 5 REC will appear at the bottom of the viewfinder with a timer showing the length of the video.
- 6 Tap the Stop icon ) on the screen to stop recording.

## After recording a video

A still image representing your video will appear on the screen.



Tap to play the video.


Tap to share the picture via various methods such as **Bluetooth** or **Messaging**.

### NOTE

Additional charges may apply when MMS messages are downloaded while roaming.

Rename Tap to edit the name of the selected video.

Tap to delete the video you just recorded. Tap OK to confirm it. The viewfinder will reappear.

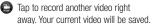

Tap to view the Gallery of your saved videos.

# Using the advanced settings

Using the viewfinder, tap 😧 to open the advanced options.

Adjust the video camera settings by scrolling the list. After selecting the option, tap the **Back key** 

Video size – Tap to set the size (in pixels) of the video you record. Select the video size from Full HD(1920X1088), HD(1280X720), TV(720X480), VGA(640X480), QVGA(320X240)(MMS), and QCIF(176X144)(MMS).

# Video Camera

White balance – The white balance ensures any the white areas in your video are realistic. To enable your camera to adjust the white balance correctly, you may need to determine the light conditions. Choose from Auto, Incandescent, Sunny, Fluorescent, and Cloudy.

**Colour effect** – Choose a colour tone to use for your new video.

Audio recording – Choose Mute to record a video without sound.

Auto review – If you turn Auto review on, it will play back the video you just recorded automatically.

 O – Restore all video camera default settings.

Tap whenever you want to know how a function operates. This will provide you a quick guide.

# Watching your saved videos

- 1 In the viewfinder, tap
- 2 Your Gallery will appear on the screen.
- 3 Tap a video to play it automatically.

# Adjusting the volume when viewing a video

To adjust the volume of a video while it is playing, use the Volume Keys on the left side of the phone.

# Multimedia

You can store multimedia files to a micro SD card to have easy access to all your image and video files.

## Gallery

Tap the Applications Key  $\mathbf{II} > \mathbf{Gallery}$ .

### View mode

When you open the Gallery, your photos will be presented in Folder view. Once you open a folder, your photos will be in Grid view. When you tap a photo from Grid view, it will be displayed in Full view.

### **Calendar View**

In Folder view, tap **more** to change to the Calendar view. The calendar will open and you will see with photos taken on the days.

### **Timeline view**

The phone's **Gallery** provides a timeline view of your photos and videos. From the Grid view mode, drag **Hermon** to the right. The date you took your photos will be displayed starting with the most recent. If you select a specific date, all the photos you took on that day will be grouped together.

### Gallery menu options

Tap a photo and tap the **Menu Key** to see the following available options: **Share, Delete, and More. Tap More** to access **Details, Set as, Crop, Rotate** and **Right/Left**.

## Sending a photo

- 1 To send a photo, touch and hold the photo you want.
- 2 Tap Share and choose from any of the available applications.
- 3 When you choose Email, Gmail or Messaging, your photo will be attached to a message, which you can then write and send normally.

#### TIP

If you have a social networking account set up on your phone, you can share your photo with that social networking community.

## Sending a video

- 1 To send a video, touch and hold the video you want.
- 2 Tap Share and choose from any of the available applications.

# Multimedia

3 When you choose Email, Gmail or Messaging, your video will be attached to a message, which you can then write and send normally.

# Using an image

Choose images to use as wallpaper or identify callers.

- 1 Touch and hold a photo, then tap More > Set as.
- 2 Choose from Contact icon or Wallpaper.

# Viewing a slideshow

To view a slideshow of your photos, open the Gallery and tap a photo. Once the photo is displayed, tap the screen to see the menu. Tap **Slideshow** to begin the slideshow of all your photos.

# View photo details

You can view a photo's detailed information, such as the name, date, time, size, and type.

While viewing a photo, tap **Menu > More > Details**.

# Transferring files using USB mass storage devices

To transfer files using a USB device:

- 1 Connect the phone to a PC using a USB cable.
- 2 You can see USB connection mode popup. (From the Home screen, tap the Menu Key and tap Settings > Connectivity settings > USB connection mode > Mass storage.)
- 3 Tap Mass storage and OK to confirm.
- 4 You can view the phone content on your PC and transfer the files.

#### NOTE

If you don't want to see USB connection mode popup, uncheck Don't ask again on USB connection mode popup or turn off Always ask (Settings > Connectivity settings > Always ask).

### Music

Your phone has a music player that lets you play all your favourite tracks. To access the music player from the Home screen, tap the **Applications Key** and tap **Music**.

# How to save music/video files to the phone

# Connect your phone to the PC using the USB cable.

You'll receive a notification that the USB is connected and can see USB connection mode popup. Tap Mass storage and OK. Then open the folder you wish to view from your computer.

# Save music or video files from the PC to the phone's removable storage.

- You may copy or move files from the PC to the phone's removable storage using a card reader.
- If there is a video file with a subtitle file (.smi file with the same name as the video file), place them in the same folder to display the subtitle automatically when playing the video file.

 When downloading music or video files, copyright must be secured. Please note that a corrupted file or file with a wrong extension may cause damage to the phone.

# How to play music/video files on the phone

#### Playing music/video files

Locate the file you want in the Gallery and tap it to play it.

## Playing a song

- 1 From the Home screen, tap the Applications Key 🔢 and tap Music.
- 2 Tap the Songs tab.
- 3 Tap the song you want to play.
- 4 Tap III to pause the song.
- 5 Tap **b** to skip to the next song.
- 6 Tap KK to go back to the beginning of the song. Tap KK twice to go back to the previous song.

To change the volume while listening to music, press the up and down Volume Keys on the left side of the phone.

# Multimedia

To display the options for a song, touch and hold any song in the list. You will see the following options: Play, Add to playlist, Use as ringtone, Delete, Share, Search, and Details.

## Working with Playlists

You can create playlists to organize your music files into sets of songs, which you can play in the order you set or in a shuffle.

### To create a playlist

- 1 When viewing a list of songs in the library, touch and hold the first song you want to add to the new playlist.
- 2 Tap Add to playlist.
- 3 Tap New playlist.
- 4 Enter a name for the playlist, then tap **Save**.

The new playlist is added to the **Playlists** library.

You can also add the song that is playing in the Playback screen as the first song in a playlist by pressing the **Menu Key** , then tapping **Add to playlist** or tapping **Save as playlist** to save all the songs in an album that you're playing as a playlist.

# To remove a song from a playlist

- 1 Open a playlist.
- 2 Touch and hold the song you want to remove, then tap **Remove from playlist** or when viewing the currently playing playlist, tap the **Menu Key** , then tap **Remove from playlist** to remove all the songs from the current playlist.

## To rename or delete a playlist

- 1 Open the Playlist library.
- 2 Touch and hold the playlist to display the menu, then tap Delete or Rename.

#### NOTE

Music file copyrights may be protected by international treaties and national copyright laws. Therefore, it may be necessary to obtain permission or a licence to reproduce or copy music. In some countries, national laws prohibit private copying of copyrighted material. Before downloading or copying the file, please check the national laws of the relevant country concerning the use of such material.

### SmartShare

SmartShare uses DLNA (Digital Living Network Alliance) technology to share digital content through a wireless network. Both devices must be DLNA certified to support this feature.

# To turn SmartShare on and allow sharing contents

- 1 Tap the Applications Key **SmartShare**.
- 2 Tap the Menu Key 
  > Settings.
- 3 Tap Discoverable checkbox to turn on.
  - Tap **Always accept request** to automatically accept sharing requests from other devices.
  - Tap **Receive files** to allow automatically allow upload files to my phone from other devices.
- 4 Under the Sharing contents section, tap each type of content you would like to share. Choose from Pictures, Videos, and Music.
- 5 SmartShare is now activated and ready to share contents.

# To share contents from remote content library to other devices

Let your renderer device (e.g. TV) play multimedia contents from your remote content library (e.g. PC)

#### NOTE

Make sure that the DLNA functionality of your devices is properly configured (e.g. TV and PC)

# 1 Tap the Applications Key **E** > SmartShare.

- 2 Tap the top right button to or select the device from renderer lists.
- 3 Tap the top left button and select the device of the remote content library.
- 4 You can browse the content library.
- 5 Tap a content thumbnail or tap the **Menu Key 1** and tap **Play** button.

To share contents from your phone to your renderer device(e.g. TV)

#### NOTE

Make sure that your renderer device is properly configured.

# Multimedia

- 1 While browsing your pictures or videos using the **Gallery** application, touch and hold to select files. Then you will be able to select multiple files to be shared.
- 2 Tap Share > SmartShare. SmartShare is automatically launched with the selected files.
- **3** Select the device from renderer lists to play the files.

#### NOTE

Follow the similar steps to use the Music player, Camera and Video player to share contents.

#### NOTICE

Check that your device is connected with your home network using Wi-Fi connection to use this application. Some DLNA enabled devices (e.g. TV) support only the DMP feature of DLNA and will not appear in the renderer device list. Your device might not be able to play some contents.

# To download contents from remote content library

- 1 Tap the Applications Key **E** > SmartShare.
- 2 Tap the top left button and select the device of the remote content library.
- 3 You can browse the content library.
- 4 Tap a content thumbnail then tap download menu key.

#### NOTICE

A few types of contents are not supported.

# To upload contents from my phone to remote content library

#### NOTE

Make sure that SD card is correctly mounted and the **Receive files** in settings menu is checked.

- 1 Tap the Applications Key **E** > SmartShare.
- 2 Tap the top left button and select My phone.
- 3 You can browse the content library.
- 4 Touch and hold a content thumbnail and then tap the **upload menu key**.
- 5 Select a device of remote content library to be uploaded.

#### NOTICE

Some DLNA enabled devices do not support DMS upload functionality and will not be uploaded. A few types of contents are not supported.

# **Google Applications**

## About Google applications

Google applications, including mobile versions of Gmail, Google Talk, Google Calendar, and Google Maps, are loaded on your phone.

- 1 First, set up a Google account. Then enter your user name and password and sign in.
- 2 After signing in, your contacts, email, and calendar in your Google account will automatically synchronize with your phone.

## Google Maps™

# To open Google Maps and view your location

- 1 From the Home screen, tap the **Applications Key :::** and tap **Maps**.
- 2 Tap the My location icon 🔗 on the map.

The map centers on a blue dot that indicates your location. A blue circle around the dot indicates that your actual location is within the circle.

# To get an address and additional information for a location

Touch and hold a location on the map. A balloon with the address and a thumbnail from Street View (if available) opens over the location.

Tap the balloon to access additional options.

# To view map, satellite, or traffic layers

► Tap the Layers icon ● on the map and select a layer option. You can choose from Traffic, Satellite, Terrain, Latitude, or More Layers.

# Searching For Locations and Places

You can search for a location and view it on a map. You can also search for places on the map that you're viewing.

#### To search for a location

- 1 While viewing a map, tap the Search field at the top of the screen. You can also tap the **Menu Key** and tap **Search**.
- 2 In the search box, enter the place you're looking for. You can enter an address, a city, or a type of business or establishment. For example, "theater in New York".
- 3 Tap the Search icon.

Markers with letter labels indicate search matches on the map.

#### NOTE

Location information might be inaccurate if GPS and Wi-Fi is turned off. Please make sure that GPS and Wi-Fi is turned on.

## **Getting Directions**

#### To get directions

- 1 While viewing a map, tap the **Menu Key** and tap **Directions**.
- 2 Enter a starting point in the first text box and your destination in the second text box.

To reverse directions, tap the **Menu Key** and tap **Reverse Start & End**.

- 3 Tap the icon for car, public transit, or walking directions.
- 4 Tap Get directions. The directions to your destination appear in a list.

#### To view turn-by-turn directions in a list

You can view each turn in your route as a list of written directions.

When viewing a list of directions, tap the **Navigation** icon to view turn-by-turn directions in Navigation View.

#### To search for locations along your route

You can search for businesses, points of interest, and other features along your route. When you search while navigating, your results include locations along your route, rather than locations that are near your current location.

Tap the Search Key and search for locations of interest.

The results are displayed as markers along your route; the first result is labeled. You can tap a label for more information about the marker.

When you're finished, tap the **Navigation** icon to return to Navigation View.

### **My Places**

My Places bookmarks your favourite places, such as addresses or local businesses, to be able to find them quickly later.

#### To view My Places

While viewing a map, tap the **Menu Key** and tap **My Places**.

## **Clear Map**

Clear any information, such as routes and search results, from the map.

# **Google Applications**

#### To clear a map

While viewing a map, tap the **Menu Key** and tap **Clear Map**.

## Latitude

# Finding Your Friends with Google Latitude™

Google Latitude lets you and your friends view each others' locations on maps and get directions to your friends' locations using Google Latitude. Your location is not shared automatically. It is by invitation only. You must join Latitude and then invite your friends to view your location or accept invitations from your friends.

#### To join Latitude

While viewing a map, tap the Menu Key and tap Join Latitude.

The first time you join Latitude, you're prompted to accept or reject the Google privacy policy. After you've joined Latitude, the Join Latitude option changes to Latitude.

#### To open Latitude

After you join Latitude, you can open it to find your friends and view their updates.

While viewing a map, tap the Menu Key and tap Latitude.

#### To invite friends to share their locations After you join Latitude, you can start sharing your location with your friends. Only friends whom you have explicitly invited or accepted can see your location.

- 1 Open Latitude, tap the Menu Key and tap Add friends.
- 2 Tap Select from Contacts or Add via email address in the menu that opens.
- 3 Tap Add friends at the bottom of the screen. If your friends already use Latitude, they receive an email request and a notification on Latitude. If they have not yet joined Latitude, they receive an email inviting them to sign in to Latitude with their Google Account.

## Places

#### To find places

Tap the **Places** icon **•** while in Google Maps to find different venues, such as gas stations, coffee shops, bars, restaurants, etc. Once you select a category, you will see a list of closest matches, including their distance, compass bearing, description and even user reviews. You can customize your own location search categories, and even add the Places icon to your Home screen.

#### Тір

While viewing a map, tap the Menu Key > More for the following options: Labs, Cache Settings, Help, Terms, Privacy & Notices and About.

#### **Market<sup>™</sup>**

Android Market<sup>™</sup> lets you browse through and download thousands of fun and useful applications and games. You can check other users' comment regarding an application or you can post your own comments. If you install applications and games from Android Market<sup>™</sup>, they appear in the phone's menu below the preloaded applications, and you can find them by scrolling down with your finger. You can open downloaded applications from the Market by tapping the **Menu Key 2** > **My apps**.

#### To download applications and games

- 1 From the Android Market home page, tap a category near the top of the screen.
- 2 Scroll to view subcategories and tap the one you want to explore.
- 3 Tap an application to open its details screen, or further sort the subcategory by tapping Top paid, Top free, Top Grossing, Top New paid, Top New Free, Trending.
- 4 Tap the application you desire to install. The descriptions and the prices of the application will be displayed.
- 5 Tap the price button at the top right of the screen for paid applications. For free applications, tap the FREE button. The applications will then be downloaded and installed.

#### NOTE

To purchase a paid app, you'll need to set up a payment method with Google Checkout<sup>™</sup>. You have the option to use a credit card or charge to your carrier bill.

# **Google Applications**

#### NOTE

When you want to exit a game or application, use the Home or Back Key, which will return you to the Home screen. Or select Menu (or Options) within the game or application and select Exit. (Exit option may vary by game/application). Ending applications that continue to run in the background (after going back to the Home screen) will help conserve battery life and reduce unwanted data usage.

## Gmail™

Gmail<sup>™</sup> can be configured when you first set up your phone. Depending on your synchronization settings, Gmail<sup>™</sup> on your phone is automatically synchronized with your Gmail<sup>™</sup> account on the web. The inbox conversations list is your default Gmail<sup>™</sup> view.

Tap the **Menu Key (□)**, then tap **Refresh** to send or receive new email and to synchronize your email with your Gmail<sup>™</sup> account on the web. Tap the **Menu Key (□)** for the following additional options:

Compose, Accounts, Go to labels, Search and More.

Tap the Menu Key 💷 and tap Accounts > Add account to add another Gmail account. You can also change the settings by tapping the Menu Key 💷 > More > Settings from any screen within an account.

### Google Talk™

Google Talk<sup>™</sup> is Google's instant messaging program. It lets you communicate with other people who also use Google Talk<sup>™</sup>.

Tap the **Menu Key** for the following available options.

All friends \_\_\_\_\_ – Displays all friends you can communicate with.

Add friend Market – Send invitations to chat.

Search — It searches for contacts to chat with or any chat records that contain the word(s) you entered.

Sign out O - Sign out from chat. When you tap the Talk icon from the Home screen, you will be signed in automatically if you activate Automatically sign in. Settings 🙆 – Allows you to adjust various settings.

More O - Choose from End all chats to close all the current chats, Invites to see a list of friends you have invited to chat, or Blocked to view a list of friends you have blocked.

#### **Changing Google Talk Settings**

You can configure Google Talk to send you a notification of each message that you receive in a chat and also to sound a ringtone or vibrate the phone.

You can also configure Google Talk to sign you in automatically when you turn on your phone, and you can set whether the mobile indicator is displayed next to your name in other people's Friends lists.

# To configure notifications for new Google Talk messages

- 1 From the Friends list, tap the **Menu Key (D)**, then tap **Settings**.
- 2 Checkmark notifications to receive a notification in the Status Bar when a new chat message arrives.

#### 3 Tap Select ringtone to choose a ringtone that will ring to notify you of a new chat.

4 Tap **Vibrate** to choose the vibration setting when you receive a notification of a new chat.

# To show or hide the mobile indicator to friends

- 1 From the Friends list, tap the Menu Key , then tap Settings.
- 2 Checkmark or uncheck Mobile indicator. If Mobile indicator is checkmarked, your friends see an outline of an AndroidTM next to your name in their Friends list when you are signed into Google Talk on an Android phone.

# To set whether you sign into Google Talk automatically

- 1 From the Friends list, tap the Menu Key , then tap Settings.
- 2 Checkmark or uncheck Automatically sign in. When Automatically sign in is checked, you are signed into Google Talk when you turn on your phone.

# **Google Applications**

# To set Google Talk to change your status

- 1 From the Friends list, tap the Menu Key , then tap Settings.
- 2 Checkmark or uncheckmark Automatic away-status.

When Automatic away-status is checkmarked, your status will automatically be changed to Away when the screen is turned off.

# Utilities

## Setting the alarm

- 1 From the Home screen, tap the Applications Key 🚺 and tap Alarm/ Clock.
- 2 To add a new alarm, tap the 🔯 tab (if necessary).
- 3 Tap New alarm and set the alarm time.
- 4 Set any other desired options and tap Save.
- 5 Tap the Menu Key 💿 to add another alarm or adjust the alarm settings.

## Using the calculator

- 1 From the Home screen, tap the Applications Key 🔛 and tap Calculator.
- 2 Tap the number keys to enter numbers.
- 3 For simple calculations, tap the function you want (+, -, x, or ÷), followed by =.
- 4 For more complex calculations, tap the **Menu Key** (1), tap the **Advanced panel**, then choose an option.

# Adding an event to your calendar

#### NOTE

You must create a Google account to use Calendar.

- 1 From the Home screen, tap the **Applications Key …** and tap **Calendar**.
- 2 To view an event, tap the date. The events occurring on that date are displayed below the Calendar. Tap the event to view its details. If you want to add an event, tap ↔ at the top right corner of the Calendar.
- 3 Tap the What field and enter the event name. Check the date and enter the start and end time you want your event to begin and finish.
- 4 Tap the Where field to enter the location.
- 5 To add a note to your event, tap the **Description** field and enter the details.
- 6 To repeat the event, set **Repetition**, and set **Reminders**, if necessary.

# Utilities

7 Tap Save to save the event in the calendar. A coloured square in the calendar will mark all days that have saved events. An alarm will sound at the event start time if you set it.

#### Changing your calendar view

- 1 From the Home screen, tap the **Applications Key !!** and tap **Calendar**.
- 2 At the top of the Calendar, tap **Day, Week, Agenda,** or **Month**.

## **Polaris Office**

With Polaris Office, you can view, create and edit document files on your device. The loaded files can be from micro SD cards of your device, or from downloaded email attachments. The Polaris Office application supports the following file formats: bt, doc, docx, xls, xlsx, ppt, ppt, pdf.

#### Create a New Document

- From the Home screen, tap the Applications Key :> Polaris Office.
- 2 Register your name and email address on the User Registration page. If you want to skip the registration process, tap Later.
- 3 Tap My Folders for folders and documents on your micro SD card.

- 4 Tap the Menu Key 
  > New File to start a new document.
- 5 Tap a document type.
- 6 Enter contents in the document using the tools at the bottom of the screen.
- 7 When you're done working on the document, tap the Menu Key > File > Save (or Save as to enter a new document name) to save.
- 8 Tap the Back Key 💿 to exit.

# View and edit a document on your device

- 1 From the Home screen, tap the Applications Key SSI > Polaris Office.
- 2 Tap My Folders for folders and documents on your micro SD card.
- 3 Move to the folder that contains the file that you want to open if it is not in the root directory. Tap the document that you want to view or edit.

#### NOTE

You can also open an attachment in an email by tapping the attachment in the message.

- 4 The document opens for you to view. If you want to edit it, Tap the Menu Key 
  then select Edit Mode.
- ► To move between pages or pan through the document, scroll in the corresponding direction.
- To change the zoom level, tap the Menu Key 2 > Zoom, then tap the zoom level you want or simply pinch-to zoom to achieve the zoom level you want.
- Use the toolbar at the bottom of the screen to edit the document (Word, Excel, or PowerPoint file).
- Tap the Menu Key for additional menu options such as Reflow text, Bookclip, Send file, and Setting
- 5 When you're finished editing, tap Save. Then, tap the Back Key 💿 to exit.

#### Polaris Office document tools

The Polaris Office application has a toolbar that appears automatically when you create

- a document.
- 1 To display the toolbar in an existing document, Tap the Menu Key 
  then select Edit Mode.
- 2 Tap a toolbar icon and the corresponding tool options will be displayed in a pop-up balloon for you to tap and use.
- 3 To hide the tool options pop-up balloon, tap the toolbar icon again. Left and right arrows on the toolbar indicate that you can scroll horizontally for more icons. The tools in the toolbar vary depending on the document type.

#### Manage documents online

- 1 From the Home screen, tap the Applications Key : > Polaris Office.
- 2 Tap Add account > Box.net for access to your online account.
- 3 Enter your Email account and password to access your account then tap Add.
- 4 View and manage your documents on the server as desired.

# Utilities

### **Voice Control**

You can search by voice and complete other voice actions, such as calling or texting a contact, sending an email, creating a note or getting directions with just a simple tap of the Voice Control icon.

- 2 Wait for the "Say a command" prompt, then say your query.
- 3 For a query, the search results will be displayed in the web browser. Tap the result you want or continue searching.

## Voice recorder

Use the voice recorder to record voice memos or other audio files.

#### Recording a sound or voice

- 1 From the Home screen, tap the Applications Key 🔛 and tap Voice Recorder.
- 2 Tap **E** to begin recording.
- 3 Tap **1** to end recording.

#### NOTE

Tap **Tap** to access your voice recordings. You can listen to the saved recordings.

#### Sending the voice recording

- 4 Once you have finished recording, you can send the audio clip. Tap **Share**.
- 5 Choose from Bluetooth, Wi-Fi share, Email, Gmail and Messaging. When you select Email, Gmail or Messaging, the voice recording will be added to a message that you can write and send normally.

# The Web

### Browser

The Browser gives you a fast, full-colour world of games, music, news, sports, entertainment, and much more, right on your mobile phone.

#### NOTE

Additional charges apply when connecting to these services and downloading content. Check data charges with your network provider.

#### < Tool bar >

The icons bar on the screen below makes it easier to use the browser.

The browser that allows you to look at webpages similarly to how you would on a computer.

- Back Moves to the previous web page.
- Forward Used in conjunction with the Back Key. This allows you to go back and forth between web pages without opening multiple windows.
- Windows Shows all your open windows.
  - New windows Opens a new window.
  - Settings Moves to Browser settings.

## **Using options**

Tap the **Menu Key to** view the following options:

- Read it later To add the current web page in Read it later.
- Add RSS Feed To add your favourite web page. When a new item appears on the web site, you are automatically notified with Google reader.

#### NOTE

RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content, such as blog entries, news headlines or podcasts. An RSS document, called a feed, web feed or channel, contains either a summary of content from an associated website or its full text. RSS makes it possible for people to keep up-to-date with their favourite websites in an automated way that is easier than checking manually. The user subscribes to a feed by entering its link into the reader or clicking an RSS icon in a browser that starts the subscription process. The reader checks the user's subscribed feeds regularly for new content, and downloads any updates it finds. For unavailable RSS Feed web pages, the 'Add RSS Feed' icon menu will be disabled.

# The Web

- Share page Tap to share the web page.
- Find on page Allows you to find text on the current web page.
- As Select text To select text on the web page. Highlight the text you want with your finger. The highlighted text is copied to the clipboard and you can paste it anywhere that allows text to be entered.

More

- Home page To move to the Home page.
- Set home page To set the current page as your home page
- Page info To view the web page details.
- **Downloads** To view downloaded history.

#### TIP

To return to the previous web page, tap the **Back key** .

## Adding bookmarks

- 1 Tap 📕 next to the URL field.
- From Thumbnail view, tap Add, enter a name and URL, and tap OK.
- From List view, tap Add bookmark, enter a name and URL, and tap OK.

## Changing the Browser settings

Tap 💿 and set any desired options.

# **On-Screen Phone**

## LG On-Screen Phone 2.0

On-Screen Phone allows you to view your mobile phone screen from a PC via a USB, Bluetooth, or Wi-Fi connection. You can also control your mobile phone from your PC, using the mouse or keyboard.

#### **On-Screen Phone icons**

- Connects your mobile phone to your PC, or disconnects it.
- Rotates the On-Screen Phone window (only available with applications that support rotation).
- Launches LG Home Panorama or changes the On-Screen Phone preferences.
- Maximizes the On-Screen Phone window.
- × Exits the On-Screen Phone program.
- Minimizes the On-Screen Phone window.

### **On-Screen Phone features**

- Real-time transfer and control: displays and controls your mobile phone screen when connected to your PC.
- Mouse control: allows you to control your mobile phone by using the mouse to

click and drag on your PC screen.

- Text input with keyboard: allows you to compose a text message or note using your computer keyboard.
- File transfer (mobile phone to PC): sends a File from your mobile phone (e.g. Gallery, Video Player, music and Polaris Office) to your PC. Simply right-click and drag to send a File to your PC.
- File transfer (PC to mobile phone): sends files from your PC to your mobile phone. Simply select the files you wish to transfer and drag and drop into the on-Screen phone window. the files you send are stored on OSP folder.
- LG Home Panorama: Shows the whole work spaces of LG Home. You can easily organise icons or widgets and run an application by double-clicking the shortcut.

**NOTE:** Please make sure that LG Home is the default launcher. Some widgets may not work properly on the LG Home Panorama.

# **On-Screen Phone**

# How to install On-Screen Phone on your PC

Visit LG Home (http://www.lg.com/ca\_en) and go to **Support** > **Mobile Phone Support** > Select the Model (LG-P935) > Click OSP ( On-Screen Phone ) to download. You can install the On-Screen Phone on your PC.

# How to connect your mobile phone to your PC

On-Screen Phone 2.0 provides USB, Bluetooth and Wi-Fi connection. Please follow the instruction on Connection Wizard of OSP program.

#### NOTE

Please make sure that On-Screen Phone check box in **Settings** > **Connectivity** > **On-Screen Phone** is selected.

Please make sure that the battery may run out more quickly due to the current consumption if On-Screen Phone is connected via Wi-Fi.

When you connect your mobile phone to your PC via Mobile Hotspot and access to the Internet on the PC, additional data charges may be incurred depending on your DataPro data plan.

Access to the Internet using Wi-Fi networks may not work well depending on the network's traffic. When you enlarge the On-Screen Phone window, the display on the screen might become slow.

# To check the phone-to-PC connection

Once the devices have been connected, drag down the Status Bar at the top of

the Home screen to check the On-Screen Phone connection status.

# To disconnect your phone from your PC

Click in the top left of the On-Screen Phone window. Alternatively, drag down the Status Bar at the top of the Home screen and select "On-Screen Phone connected" > "Disconnect On-Screen Phone". Touch "Disconnect" in the disconnect dialog.

# Settings

## Wireless & networks

This menu allows you to manage Wi-Fi and Bluetooth connections, portable hotspot and data tethering, airplane mode and VPN connections. To access this menu, from the Home Screen, tap Menu Key I > Settings > Wireless & networks.

## Airplane mode

Airplane mode allows you to quickly turn off all wireless connections.

- From the Wireless & networks screen, tap the Airplane mode checkbox to turn it on (a blue checkmark will appear).
- 2 Tap again to turn it off.

OR

- 1 From the Home Screen, swipe the Status Bar down to open the Notifications panel.
- 2 Tap 🛃 to turn on Airplane mode.
- 3 Tap again to turn it off.

OR

- 1 Press and hold the **Power/Lock Key** and tap **Airplane mode**.
- 2 Press and hold the **Power/Lock Key** and tap **Airplane mode** again to turn it off.

## Wi-Fi

To use Wi-Fi on your phone, you need access to a wireless access point, or "hotspot." Some access points are open and you can simply connect to them. Others are hidden or implement other security features, so you must configure your phone in order to connect to them.

### Turn on Wi-Fi

From the Home Screen, open the Notifications panel and tap to turn Wi-Fi on.

OR

Tap the Menu Key  $\blacksquare$  and tap Settings > Wireless & networks > Wi-Fi

#### To connect to a Wi-Fi Network

Turn off Wi-Fi when you're not using it to extend the life of your battery.

- 1 From the Home screen, tap the Menu Key and tap Settings > Wireless & networks > Wi-Fi settings.
- 2 Tap **Wi-Fi** to turn it on and begin scanning for available Wi-Fi networks.
- A list of available Wi-Fi networks will be displayed. Secured networks are indicated by a lock icon.

- 3 Tap a network to connect to it.
- If the network is open, you are prompted to confirm that you want to connect to that network by tapping Connect.
- If the network is secured, you are prompted to enter a password or other credentials. (Ask your network administrator for details).
- 4 The Status Bar at the top of your screen will display an icon that indicates your Wi-Fi status.

#### TIP

If you are not in range of a Wi-Fi network and use a network connection. Additional data charges may apply.

#### NOTE

This device supports WEP, WPA/ WPA2- PSK, WPA PSK, WPA2 Only PSK and 802.1x EAP. (Some EAP methods are not supported.) If your Wi-Fi service provider or network administrator sets encryption for network security, enter the key in the pop-up window. If encryption is not set, this pop-up window will not be shown. You can obtain the key from your Wi-Fi service provider or network administrator.

## Bluetooth

#### Using Bluetooth

- 1 From the Wireless & networks screen, tap Bluetooth to turn on the Bluetooth setting.
- 2 Tap Bluetooth settings > Scan for devices.
- 3 Tap the name of the device you wish to pair with, and then tap **Pair** to pair and connect.

# Settings

#### TIP

Please consult documentation included with Bluetooth device for information on pairing mode and passcode (typically  $0 \ 0 \ 0 -$  four zeroes).

# How to send data from your phone via Bluetooth

You can send data via Bluetooth by running a corresponding application, not from Bluetooth menu, unlike regular mobile phones.

- \* Sending pictures: Open the Gallery application and tap a picture. Then tap Menu > Share > Bluetooth. Check if Bluetooth is turned on and tap Scan for devices. Then tap the device you want to send data to from the list.
- \* Exporting contacts: Open the Contacts application. Tap the contact you want to share, tap the Menu Key and tap Share > Bluetooth. Check if Bluetooth is turned on and tap Scan for devices. Then tap the device you want to send data to from the list.
- \* Sending multi-selected contacts: Open the Contacts application. To select more

than one contact, tap the Menu Key and tap Share. Tap the contacts you want to send or tap Select all. Then tap Share > Bluetooth. Check if Bluetooth is turned on and tap Scan for devices. Then tap the device you want to send data to from the list.

Connecting to FTP (Only the FTP server is supported on this handset): From the Home screen, tap the Menu Key and tap Settings > Wireless & networks > Bluetooth settings. Make sure Bluetooth is turned on. Tap Discoverable to place a checkmark and make the phone visible to other Bluetooth devices. Then search for other devices. Find the service you want and connect to the FTP server.

#### TIP

The supported Bluetooth version is Bluetooth 3.0 EDR and certified by Bluetooth SIG. It is compatible with other Bluetooth SIG certified devices.

- If you want to search for this phone from other devices, from the Home screen, tap the Menu Key
   and tap Settings > Wireless & networks > Bluetooth settings.
   Make sure Bluetooth is turned on. Tap Discoverable to place a checkmark and make the phone visible to other Bluetooth devices for 120 seconds.
- Supported profiles are HFP/HSP, A2DP, AVRCP, OPP, FTP(Server) and PBAP.

## Data Tethering

You can use your phone to provide a data connection to a computer by activating data tethering and connecting them with a USB cable.

# To tether your phone with your computer using the USB

1 Connect your phone to your computer with a USB cable.

- 2 You can see USB connection mode popup and tap USB tethering and OK to confirm then tap USB tethering.
- **3** A blue check mark will appear, indicating that the function is activated.

#### NOTE

- Data Tethering requires an appropriate DataPro data plan.
   Devices connected by tethering use data from your DataPro plan. Plans are not unlimited and significant charges may be incurred if the included data allowance is exceeded. Performance may vary depending on the number of devices connected and other factors.
- You cannot access your phone's micro SD card on your computer when using USB tethering.
- From the Home screen, tap the Menu Key and tap Settings > Wireless & networks > Tethering & portable hotspot > USB tethering.

# Settings

## **Mobile Hotspots**

You can also use your smartphone to provide a mobile broadband connection for up to 8 other devices. Create a hotspot and share your connection.

To create a portable hotspot, tap the Menu Key 
> Settings > Wireless & networks > Tethering & portable hotspot > Portable Wi-Fi hotspot. Set a password upon first use.

#### NOTE

Mobile Hotspots requires an appropriate DataPro data plan. Devices connected to your Mobile Hotspot use data from your DataPro plan. Plans are not unlimited and significant charges may be incurred if the included data allowance is exceeded. Performance may vary depending on the number of devices connected and other factors. If you do not use a password, others will be able to use your Mobile Hotspot connection.

## **Call settings**

You can set Fixed Dialing Numbers, Voicemail and Other call settings including TTY mode, Hearing aids, Call reject, Caller ID, Additional settings, Send Messages, Call barring, Call duration.

## Sound

Adjust sound, notification default settings and vibrate mode. You can also manage audible and Haptic feedback.

Silent mode - Checkmark this to silence all sounds except media and alarms.

Vibrate - Set the option of whether to let the phone feedback you with vibration.

**Volume** - Adjust the phone's volume settings to suit your needs and your environment.

**Phone ringtone** - Select the ringtone for incoming calls.

**Notification ringtone** - Select the ringtone for notifications such as new messages receipt or calendar events.

Audible touch tones - Select whether to hear tones when you use the dialpad.

Audible selection - Select whether to hear sound when you tap buttons, icons, and other onscreen items.

Screen lock sounds - Select whether to hear sound when the screen is locked or unlocked.

Haptic feedback – Vibrate when pressing soft keys and on certain user interface interactions.

## Display

Brightness – Adjust the brightness of the screen.

Auto-rotate rotation – Set to switch orientation automatically when you rotate the phone.

Animation – Set to allow animations.

Screen timeout – Set the time delay before the screen automatically turns off.

Display font - Change the display font.

**Screen optimization** - Change the resolution size of downloaded applications to fit the screen size.

Motion sensor calibration - Allows you to reset calibration for motion sensor.

## Gesture

Move cursor - Checkmark to set the device to move the cursor by tapping on any side of the device to move the cursor while typing.

**Relocate item** - If you checkmark this, you can relocate an item to other home screens by touching and holding an item and tilting the device.

Mute - Checkmark this to mute the incoming call by flipping the phone over while the phone is ringing.

**Snooze (stop)** - Checkmark this to snooze(stop) the alarm by flipping the phone over.

Previous/Next item - Checkmark this to display a previous/next photo in Gallery by tapping on the left/right side of the phone.

**Pause** - Checkmark this to pause the video by flipping the phone over.

## Location & security

Use wireless networks – If you check Use wireless networks, your phone will determine your approximate location by using Wi-Fi and mobile networks. When you check this option, you're asked

# Settings

whether you consent to allowing Google to use your location when providing these services.

Use GPS satellites – If you check Use GPS satellites, your phone will be determine your location to street-level accuracy.

Set up screen lock – Set an unlock pattern to secure your phone. Opens a set of screens that guide you through drawing a screen unlock pattern. You can set a PIN or Password instead of a Pattern or leave it as None.

When you turn on your phone or wake up the screen, you're prompted to draw your unlock pattern to unlock the screen.

Screen lock timer - Set the amount of idle time before the screen lock is enabled.

Set up SIM card lock – Set up SIM card lock or change SIM PIN.

Visible passwords – select to show passwords as you type them or deselect to hide passwords as you type them.

Select device administrators – Add or remove administrators.

Use secure credentials – Allows you to access secure certificates

Install from SD card - Choose to install

encrypted certificates from your micro SD card.

**Set password** – Set or change the credential storage password.

Clear storage - Clear credential storage of all contents and reset its password

# Using the Unlock Pattern, PIN, or Password

Set an unlock Pattern, PIN, or Password to secure your phone. To set the screen lock, follow the process below.

Tap the Menu Key (1), tap Settings > Location & security > Set up screen lock and select between Pattern, PIN or Password.

#### Warning

Take precautions when using an Unlock Pattern, PIN, or Password. It is very important that you remember the screen unlock information you set. You are allowed 5 attempts to enter your screen unlock information. If you used up all 5 opportunities, you will have to wait 30 seconds to attempt unlocking the phone again.

# When you can't recall your Unlock Pattern, PIN, or Password:

If you logged into a Google account on the phone and failed to use the correct pattern 5 times, tap **Forgot Pattern?** You will be required to sign in with your Google account and prompted to create a new unlock pattern. If you haven't created a Google account on the phone or you forgot your PIN or Password, you need to perform a hard reset.

#### Caution

If you perform a hard reset, all user applications and user data will be deleted. Please remember to back up any important data before performing a hard reset.

- 1 Turn the power off.
- 2 Press and hold the following keys at the same time for 8 seconds: Power/Lock Key + Down Volume Key.
- 3 When FACTORY HARD RESET screen is displayed, release the keys.
- 4 Press the Power/Lock Key to Yes -- delete all user data, and press the Volume Keys to cancel.

5 Press the **Power/Lock Key** to confirm -delete all user data, and press the Volume Keys to cancel.

### Applications

**Unknown sources** - Checkmark to permit the installation of applications you get from Web sites, email or any other locations other than Android Market.

#### Warning

Depending on the applications you install, the mobile phone may not operate correctly and could be illegally used to establish your location and gain access to personal information via the Internet.

To protect your phone and personal data, only download applications from trusted sources such as Android Market.

Manage Applications – Manage and remove installed applications.

Running services - Check currently running services.

# Settings

Storage use – View storage used by applications.

**Battery use** – See what has been using the battery.

 $\label{eq:constraint} \begin{array}{l} \textbf{Development}-\text{Set options for application} \\ \textbf{development}. \end{array}$ 

## Accounts & sync

Allows you to enable Background data, Auto-sync and synchronize or add new accounts.

### **Privacy**

Allows you to perform a Factory data reset. Be careful as this will erase all your data.

### SD card & phone storage

Allows you to check total available micro SD card space. You can also unmount the micro SD card to safely remove it or format it.

### Language & keyboard

Select language and customize the input method and keyboard settings.

## Voice input & output

Set Voice recognizer settings and use the Text-to-Speech settings to configure the Android text-to-speech synthesiser, for applications that can take advantage of it.

## Accessibility

Use the Accessibility settings to configure any accessibility plug-ins you have installed on your phone.

#### NOTE

Requires additional plug-ins to become selectable.

## **Connectivity settings**

USB connection mode - Your phone can be used as a mass storage device if you have a memory card inserted. You can set Mass storage as a default setting for USB connection mode.

**On-Screen Phone** - Tap this icon to use On-Screen Phone. See On-Screen Phone on page 90.

### Date & time

Set date, time, time zone and date and time formats.

## About phone

View legal information, check phone status and software versions, and perform the software update.

# Software Update

## Phone Software Update

This feature allows you to update the firmware of your phone to the latest version conveniently from the internet without the need to visit a service center. For more information on how to use this function, please visit: http://www.lg.com/ca\_en/ As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB cable or battery during the upgrade may seriously damage your mobile phone.

# LG Mobile Phone Software update via Over-the-Air (OTA)

This feature allows you to update the firmware of your phone to the newer version conveniently via OTA without connecting the USB data cable. This feature is only available if and when LG makes the newer version of the firmware available for your device.

First, you can check the software version on your mobile phone:

Tap the Menu Key 
Settings > About phone.You can check the software

version at the bottom of the list.

To perform the phone software update, tap the Menu Key 2 > Settings > About phone > Software update > Check now for update.

#### NOTE

LG reserves the right to firmware updates available only for selected models at its own discretion and does not guarantee the availability of the newer version of the firmware for all handset models.

#### NOTE

Your personal data—including information about your Google account and any other accounts, your system/ application data and settings, any downloaded applications and your DRM licence —might be lost in the process of updating your phone's software. Therefore, LG recommends that you back up your personal data before updating your phone's software. LG does not take responsibility for any loss of personal data.

#### Notice:

#### Open Source Software

To obtain the corresponding source code under GPL, LGPL, MPL and other open source licences, please visit http://opensource.lge.com/ All referred licence terms, disclaimers and notices are available for download with the source code.

# DivX Mobile

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Videoon-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx. com for more information on how to complete your registration. DivX Certified® to play DivX® video up to HD 720p, including premium content.

DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.

# Dolby Mobile

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

# Troubleshooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy to fix yourself.

Message	Possible causes	Possible corrective measures
SIM error	There is no SIM card in the phone or it is inserted incorrectly.	Make sure that the SIM card is correctly inserted.
No network connection/ Losing network	Signal is weak or you are outside the carrier network. Operator applied new services.	Move towards a window or into an open area. Check the network operator coverage map. Check whether the SIM card is more than 6~12 months old. If so, change your SIM at your network provider's nearest branch. Contact your service provider.
Codes do not match	To change a security code, you will need to confirm the new code by re-entering it. The two codes you have entered do not match.	If you forget the code, contact your service provider.
Any application cannot be set	Not supported by service provider or registration required.	Contact your service provider.
Calls not available	Dialing error	New network not authorised.
	New SIM card inserted.	Check for new restrictions.
	Pre-paid charge limit reached.	Contact service provider or reset limit with PIN2.

Message	Possible causes	Possible corrective measures
Phone cannot be switched on	On/Off key pressed	Press the On/Off key down for at least two
	too briefly.	seconds.
	Battery is not charged.	Charge battery. Check charging indicator on the
	Battery contacts are	display.
	dirty.	Clean the battery contacts.
Charging	Battery is not charged.	Charge battery.
	Outside temperature is	
	too hot or cold.	Make sure phone is charging at a normal
	Contact problem	temperature.
		Check the charger and connection to the phone.
error		Check the battery contacts and clean them if
CITO	No voltage	necessary.
	Charger defective	Plug the charger into a different socket.
		If the charger does not warm up, replace it.
	Wrong charger	Only use original LG accessories.
	Battery defective	Replace battery.
Number not permitted	The Fixed dialling number function is on.	Check the Settings menu and turn the function off.
Impossible		
to receive /	Memory full	Delete some messages from the phone.
send SMS &	internet y run	
picture	l la sua sats d'Éls	
Files not	Unsupported file format	Check the file formats that can be supported.
opening		Chaoli CD courd file quatern via courd regiter
SD card not working	FAT16, FAT32 file system supported	Check SD card file system via card reader, or format SD card using the phone.
working	ayarem anhhouran	ionnal op calu using the phone.

# Troubleshooting

Message	Possible causes	Possible corrective measures
The screen does not turn on when I receive a call.	Proximity sensor problem	If you use any protection tape or case, check to see if it has covered the area around the proximity sensor. Make sure that the area around the proximity sensor is clean.
No sound	Vibration mode	Check the settings status of the sound menu to make sure you are not in vibrate or silent mode.
Hang up or freeze	Intermittent software problem	Remove the battery, insert it again and switch on the phone. Try to perform a software update via the website.
Phone locked and does not function.	Restarting the phone	Turn the phone off.     Remove the battery cover.     Install the battery.     Close the cover.     Turn the phone on again.

# LIMITED WARRANTY STATEMENT

## 1. WHAT THIS WARRANTY COVERS:

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- 1. The limited warranty for the product extends for ONE (1) year beginning on the date of purchase of the product by the original end user.
- The limited warranty extends only to the original end user of the product and is not assignable or transferable to any subsequent purchaser/end user.
- 3. This warranty is good only to the original end user of the product during the warranty period as long as it is in Canada.
- 4. Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
- 5. During the applicable warranty period, LG will repair or replace at LG's sole option, without charge to the original end user, any defective component part of the phone or accessory.
- 6. LG may use rebuilt, reconditioned or new parts or components when repairing any product or replace a product with a rebuilt, reconditioned or new product.

# 2. WHAT THIS WARRANTY DOES NOT COVER:

- 1. Defects or damages resulting from use of the product in other than its normal and customary manner.
- 2. Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation or other acts which are not the fault of LG, including damage caused by spills of food or liquids.
- 3. Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- 4. The fact that the Customer Service Department at LG was not notified by the original end user of the alleged defect or malfunction of the product, during the warranty period.

- 5. Products which have had their serial numbers removed or made illegible.
- 6. Damage resulting from use of non-LG approved accessories.
- 7. All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- 8. Products serviced by non-authorized persons or companies.

### Notes:

- This limited warranty supersedes all other warranties, expressed or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of merchantability or fitness for a particular purpose.
- 2. Shipping damage is the sole responsibility of the shipping company.

# 3. EXCLUSION OF LIABILITY:

No other express warranty is applicable to this product.

THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN, LG ELECTRONICS CANADA, INC. SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY APPLICABLE TO THIS PRODUCT.

# 4. HOW TO GET WARRANTY SERVICE:

To obtain warranty service, please call the following telephone number from anywhere in Canada:

LG Electronics Canada, Inc.

Tel. 1-888-LG-Canada (1-888-542-2623) http://www.lg.com/ca\_en (see links to "Support > Mobile phone support")



LG Electronics Canada Inc. Mississauga, Ontario