

Copyright © Huawei Technologies Co., Ltd. 2011. All rights reserved.

## Trademarks and Permissions



**HUAWEI, HUAWEI**, and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

## NO WARRANTY

THE CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

# Contents

<b>1 Getting to Know Your Phone .....</b>	<b>1</b>
Your Phone .....	1
Keys and Functions.....	2
Screen Icons.....	4
<b>2 Getting Started .....</b>	<b>5</b>
Installing the SIM Card and the Battery .....	5
Removing the Battery and the SIM Card.....	5
Installing a microSD Card.....	6
Charging the Battery .....	6
Accessing a Function Menu .....	7
Accessing a Quick Menu.....	7
Organize the Main Menu.....	7
Automatically Switching Between Profiles .....	8
Phone Lock .....	8
Mass Storage .....	9
PIN and PUK .....	10
Locking the Keypad.....	10
Entertainment .....	11
<b>3 Call Functions .....</b>	<b>11</b>
Making a Call.....	11
Answering a Call .....	12
<b>4 Text Input .....</b>	<b>12</b>
Changing the Text Input Mode .....	12
Traditional Input Mode .....	13
Predictive Input Mode .....	13
Number Input Mode .....	14

 
Switching Between Input Methods .....	14
Entering a Symbol .....	14
<b>5 Messaging .....</b>	<b>15</b>
Writing and Sending a Text Message .....	15
Writing and Sending a Multimedia Message .....	15
<b>6 Phonebook .....</b>	<b>17</b>
Creating a Contact .....	17
Searching for a Contact .....	17
Setting the Preferred Storage .....	17
Copying the Contacts .....	18
<b>7 Video Recorder .....</b>	<b>19</b>
<b>8 Video Player .....</b>	<b>19</b>
<b>9 Sound Recorder .....</b>	<b>20</b>
<b>10 Answer machine .....</b>	<b>20</b>
<b>11 Ebook Reader .....</b>	<b>21</b>
<b>12 Camera .....</b>	<b>22</b>
<b>13 Audio Player .....</b>	<b>23</b>
<b>14 FM Radio .....</b>	<b>24</b>
<b>15 Java Application .....</b>	<b>25</b>
Installing a Java Application .....	25
Using a Java Application .....	25
Deleting or Removing a Java Application .....	26
<b>16 Services .....</b>	<b>26</b>
Network Settings .....	26
Selecting a SIM card .....	27
Connecting to a Network .....	28
<b>17 Bluetooth .....</b>	<b>28</b>
Using a Bluetooth Headset .....	28

Transferring Data .....	29
<b>18 STK .....</b>	<b>29</b>
<b>19 Chat Functions .....</b>	<b>30</b>
<b>20 Warnings and Precautions.....</b>	<b>30</b>

# 1 Getting to Know Your Phone





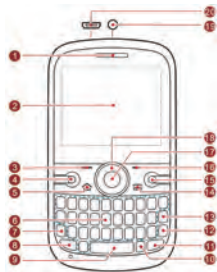









## Your Phone








The following figure shows the appearance of your phone and it is provided only for your reference.
















 





- |    |                 |    |   |
|----|-----------------|----|---|
| 1  | Earpiece        | 11 | Input switch key                              |
| 2  | Screen          | 12 | Enter key                                     |
| 3  | Left soft key   | 13 | Delete key                                    |
| 4  | Call/Answer key | 14 | Message key                                   |
| 5  | Menu key        | 15 | End/Power key                                 |
| 6  | Keypad          | 16 | Right soft key                                |
| 7  | Alt key         | 17 | Ok/Confirm key                                |
| 8  | A/a key         | 18 | Navigation keys                               |
| 9  | Space key       | 19 | Headset jack                                  |
| 10 | Sym key         | 20 | Charger jack/ Universal serial bus (USB) port |

## Keys and Functions

Press...	To...
	<ul style="list-style-type: none"> <li>• Make a call from SIM1/SIM2 card in standby mode.</li> <li>• Answer an incoming call.</li> <li>• View call logs of SIM1 and SIM2 cards in standby mode.</li> </ul>
	<ul style="list-style-type: none"> <li>• Power on or power off the phone (by pressing and holding the key for about 3s).</li> <li>• End a call or reject an incoming call.</li> <li>• Return to the standby mode.</li> </ul>
	<ul style="list-style-type: none"> <li>• Access the main menu in standby mode.</li> <li>• Select a highlighted item.</li> </ul>
	<ul style="list-style-type: none"> <li>• Access <b>Phonebook</b> in standby mode.</li> <li>• Return to the previous menu.</li> </ul>
	<ul style="list-style-type: none"> <li>• Access the main menu screen in standby mode.</li> <li>• Show the quick icons in any menu functioning screen.</li> </ul>
	Access the <b>Messaging</b> screen in standby mode.
	<ul style="list-style-type: none"> <li>• Access the selected quick icon option in standby mode.</li> <li>• Confirm a selection.</li> </ul>
	<ul style="list-style-type: none"> <li>• Press to select the desired quick icon option in standby mode (the key can be used in four ways, Up (), Down (), Left (), and Right ( direction keys).</li> <li>• Press in left () or right () direction to select or function a function.</li> </ul>

Press...	To...
	<ul style="list-style-type: none"> <li>• Enter numbers, letters, and symbols.</li> <li>• Call the voicemail in standby mode (by pressing and holding the <b>1</b> key for about 3s).</li> <li>• Speed-dial phone numbers by pressing and holding the <b>2–9</b> keys for about 3s in standby mode. (select <b>Menu &gt; Phonebook</b>, press  (<b>Options</b>), select <b>Go to</b> to access the menu, then press  (<b>Options</b>), select <b>Phonebook settings &gt; Speed dial</b>, enable speed dial function and assign the desired phone numbers to the corresponding number keys).</li> <li>• Select a submenu by pressing the corresponding number key.</li> </ul>
	<ul style="list-style-type: none"> <li>• Access <b>Audio player</b> in standby mode (by pressing and holding the key for about 3s).</li> <li>• Enter a blank character in text editing mode.</li> </ul>
	<ul style="list-style-type: none"> <li>• Press to lock the keypad in standby mode (by pressing and holding the key for about 3s).</li> <li>• Switch between input methods in text editing mode.</li> </ul>
	<ul style="list-style-type: none"> <li>• Activate or deactivate the <b>Meeting</b> profile in standby mode (by pressing and holding the key for about 3s).</li> <li>• Switch between the upper case and the lower case in text editing mode.</li> </ul>
	<ul style="list-style-type: none"> <li>• Access the <b>FM radio</b> in standby mode (by pressing and holding the key for about 3s).</li> <li>• Display the <b>Select symbol</b> list in text editing mode.</li> </ul>


## Screen Icons

Icon	Indicates...
 / 	Signal strength.
 / 	New text messages.
 / 	New multimedia messages.
 / 	The call forwarding function is enabled.
 / 	Missed call(s).
	The <b>Answer machine</b> is enabled.
	New voicemail message.
	An alarm is enabled.
	The keypad is locked.
	Battery power level.
	The <b>General/Indoor</b> profile is enabled.
	The <b>Meeting</b> profile is enabled.
	The <b>Outdoor</b> profile is enabled.
	The headset is connected.



## 2 Getting Started

### Installing the SIM Card and the Battery

 Before installing or removing a microSD card, power off the phone. The phone checks whether the microSD card is installed only when the phone is powered on.

You can install two SIM cards on the phone at the same time. When installing a SIM card, ensure that the golden contact area on the SIM card is facing downward and that the beveled edge of the SIM card is properly aligned with that of the SIM card slot.



### Removing the Battery and the SIM Card

Before removing the battery and the SIM cards, ensure that your phone is powered off.

 
 


## Installing a microSD Card



 
Before installing or removing a microSD card, power off the phone. The phone checks whether the microSD card is installed only when the phone is powered on.

You can install a microSD card to expand the memory capacity of your phone. When installing a microSD card, ensure that the golden contact area on the microSD card is facing downward.

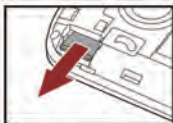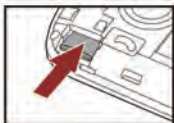

## Charging the Battery



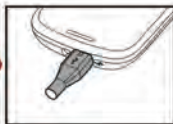






1. Connect the USB cable (the larger end) to the charger.
2. Connect the charger to a power socket.
3. Connect the USB cable (the smaller end) to the charger jack on the phone.



4. Wait until the battery is completely charged.  
During the charging, the charging icon is displayed in animation. When the charging icon becomes static, the battery is fully charged.
5. Disconnect the charger from the phone.




6. Disconnect the charger from the power socket.

## Accessing a Function Menu

1. In standby mode, press  (**Menu**).
2. Press  to select the desired function menu.
3. Press  (**Options**), then select **Go to**, or  to display the selected menu.
4. Press  or  to select a submenu.
5. Press  (**OK**) or  to display the submenu.
6. Press  (**Back**) to return to the previous menu or exit the function menu.



To return to the standby mode directly, press .



## Accessing a Quick Menu


1. In standby mode, press  or  to highlight a quick menu.
2. Press  to select the desired quick menu.

## Organize the Main Menu

You can organize the main menu. For example, you can hide or move a function menu.




1. In standby mode, press  (**Menu**) to access the main menu.
2. Select a function menu, and then press  (**Options**) for the following options:
  - **Go to**: to access the selected menu.
  - **Hide**: to remove the selected menu from the main menu screen.  
To show the menu again, in standby mode, select **Menu** >

**Settings**, press  (**Options**), select **Go to** to access the menu, then select **Phone settings > Mainmenu settings**, select the desired menu, and then press  (**Show**).

- **Move:** to change the location of the selected menu on the main menu screen.  
To move the menu, scroll to it, select **Options > Move**, scroll to the desired location, and then press  (**Ok**).
- **Back:** to return to the main menu.

## Automatically Switching Between Profiles



You can set your phone to activate different profiles for different time period. The phone can automatically switch between profiles for a maximum of three times each day according to your settings.

1. In standby mode, select **Menu > User profiles**, press  (**Options**), select **Go to** to access the menu, then select **ProfileSwitchTiming**.
2. Select a clock.
3. Press  (**Edit**) to set the status and time and assign a profile.
4. Press  (**Done**) to save the setting as prompted.

## Phone Lock


The phone lock protects your phone from unauthorized use. By default, the phone lock function is disabled; once it is enabled, the phone code is required each time the phone is powered on.

To enable the phone lock function, do as follows:

1. In standby mode, select **Menu > Settings**, press  (**Options**), select **Go to** to access the menu, then select **Security settings > Phone lock**.
2. Input the phone code, and then press  (**OK**).

You can change the default phone lock code (**1234**) to any numeric string of four to eight digits.

To change the phone lock code, do as follows:

1. In standby mode, select **Menu > Settings**, press  (**Options**), select **Go to** to access the menu, then select **Security settings > Change password > Phone password**.
2. Input the old password.
3. Input the new password twice.

Do remember your phone lock code. If you forget it, contact the service center.

## Mass Storage

When the phone is connected to a PC through a USB cable, the options including **Mass storage** are displayed on the phone screen.

When you select **Mass storage**, you can manage the files stored on the phone and the microSD card.

The microSD card and the phone memory appear as removable disks on the PC. You can perform the following operations:

1. Double-click a disk to open it.
2. Copy, paste or delete files on a disk.
3. Disconnect the phone from the PC.




- Ensure that you connect and disconnect the USB cable properly.
- Do not use format command attempts to format the phone memory on a PC; otherwise, it may lead to permanent damage.
- The USB cable supports both data transfers and charging functions.

## PIN and PUK

The personal identification number (PIN) protects your SIM card from unauthorized use. The PIN unblocking key (PUK) is used to unlock the blocked PIN. Both the PIN and the PUK are provided with the SIM card. For details, contact your service provider.

For your phone, SIM1 and SIM2 PIN codes are configured separately.



 
To enable the PIN lock function, do as follows:



1. In standby mode, select **Menu** > **Settings**, press  (Options), select **Go to** to access the menu, then select **Security settings** > **SIM1/SIM2 security settings** > **SIM1/SIM2 lock**.
2. Input the PIN code, and then press  (OK).

If you enter wrong PINs for a specified number of times consecutively, the phone asks you to enter the PUK.


If you enter wrong PUKs for a specified number of times consecutively, the SIM card becomes permanently invalid. In that case, contact your service provider for a new SIM card.

## Locking the Keypad

In standby mode, press and hold  for 3s to lock the keypad. To unlock the keypad, press  (Unlock), and then  (OK).

If the **Auto keypad lock** function is enabled, the keypad is locked automatically when the phone is idle for a preset period in standby mode. To enable the **Auto keypad lock** function, select **Menu** > **Settings**, press  (Options), select **Go to** to access the menu, then select **Security settings** > **Auto keypad lock**, select a preset duration, and then press  (OK) to confirm the selection.






When the keypad is locked, you can still press  to answer an incoming call or make an emergency call.

## Entertainment

- **Camera:** to take photos.
- **Photos:** to view the photos stored on the phone or the microSD card.
- **Audio player:** to play the audio files stored on the phone or the microSD card.
- **Video player:** to play the video files stored on the phone or the microSD card.
- **Sound recorder:** to record audio files.
- **Video recorder:** to record video files.
- **FM radio:** to receive and play radio programs.
- **Ebook reader:** to read the e-books stored on the phone or the microSD card.
- **Games:** to provide games and fun.
- **Java:** to run Java applications.
- **Facebook:** to send and receive instant messages.



## 3 Call Functions

### Making a Call

1. In standby mode, enter a phone number.
  - To make an international call, press  to enter the plus sign (+), and then enter the country or region code, area code, and phone number in sequence.
  - To call an extension, enter the phone number, press  to enter P, and then enter the extension number.
2. Press  to dial the number from SIM1/SIM2 card.







 

3. Press  to end the call.



- You can also make calls through call logs, contacts, and messages.
- During a call, you can press  or  to adjust the volume.


## Answering a Call

When there is an incoming call, you can do as follows:

- Press  to answer the call.
- Press  (**Options**), and then select **Answer** to answer the call.
- Press  to reject the call.
- Press  (**Silent**) to silence the phone. Then press  (**Reject**) to reject the call, or press  (**Options**), and then select **Answer** to answer the call.
- If the **Any key** answer function is enabled, you can press any key except  and  to answer an incoming call.

# 4 Text Input







## Changing the Text Input Mode

The icon of the current text input mode is displayed in the upper left corner of the screen. You can press  to switch between the following modes.



Icon	Text Input Mode
abc, el	Traditional input mode
eZi abc, eZi el	Predictive input mode
123	Number input mode








- You can press  (Clear) or  once to delete the last entered character. You can also press and hold  (Clear) for 3s to clear all the entered characters at a time, or press and hold  to delete the entered character one by one.
- In any text input mode, press  to enter a space.
- In any text input mode, press  to add a new paragraph.


## Traditional Input Mode

In traditional input mode, you can press the key labeled with the desired letter to enter the letter on the key.

## Predictive Input Mode

In predictive input mode, you can enter a word as follows:

- Press each key once to enter the letters according to the spelling sequence of the desired word.  
The phone displays the candidate words according to the sequence of key presses.
- Press  to scroll to the desired word.  
Press  or  to scroll in the left or right direction and press  or  to turn a page.



3. Press the corresponding number key or  to enter desired word.

## Number Input Mode

In number input mode, press the number key labeled with the desired number.

## Switching Between Input Methods

To quickly switch between the input methods, do as follows:



- Press  to switch between the traditional, predictive, number, and Chinese input modes.
- Press  to switch between the upper case and the lower case when the input language is English.

## Entering a Symbol

To enter a symbol with the QWERTY keypad in any input mode, you can do as follows.







### Using to enter a symbol


In text editing mode, do as follows:

- To enter only a symbol, press  once and then the key labeled with the desired symbol.
- To enter multiple symbols, press  twice and then the keys labeled with the desired symbols.

### Using to enter a symbol







To enter a desired symbol in text editing mode, do as follows:

1. Press  to display the symbol list.
2. Press  to scroll to the desired symbol. Press  or  to scroll in the left or right direction and press  or  to scroll in the up or down direction.




3. Press  to enter the symbol.

## 5 Messaging






### Writing and Sending a Text Message

1. Select **Menu > Messaging**, press  (**Options**), select **Go to** to access the menu, then select **Write message**, or press  in standby mode, and then select **Write message**.
2. Write the message.
3. Press  (**Options**), and then select **Send to** or press .
4. Select **Enter recipient** to input the phone numbers of the recipients manually, or select **Add from Phonebook** to add the desired contacts from the phonebook.
5. Highlight a recipient, and then press  to directly send the message; or press  (**Options**) for the following options:
  - **Send**: to send the message to the recipient.
  - **Save**: to save the message to **Drafts** and exit the message editing screen.

### Writing and Sending a Multimedia Message





1. Select **Menu > Messaging**, press  (**Options**), select **Go to** to access the menu, then select **Write message** or press  in standby mode, and then select **Write message**.
2. Write the message.
3. Press  (**Options**) for the following options:
  - **Switch to MMS**: to change from a text message to a multimedia message.  
If you select **Add subject**, **Add picture**, **Add sound**, or **Add video**,

the message automatically changes from a text message to a multimedia message.

- **Add subject:** to add a subject to the message.
  - **Add picture:** to add a picture to the message.
  - **Add sound:** to add an audio clip to the message.
  - **Add video:** to add a video clip to the message.  
You can also add slides to the message, preview the message, and set the playing interval between two slides.
4. In message editing screen, press  (**Options**). Then select **Send to**, or press .
  5. Select **Enter recipient** to input the phone numbers of the recipients manually, or select **Add from Phonebook** to add the desired contacts from the phonebook.
  6. Highlight a recipient, and then press  to directly send the message; or press  (**Options**) for the sending options as follows:
    - **Send:** to send the message.
    - **Change to Cc:** to copy the message to the recipient.
    - **Change to Bcc:** to blind copy the message to the recipient.
    - **Save to Drafts:** to save the message to **Drafts**.
-  • You can contact your service provider for the availability of the Multimedia Messaging Service (MMS) and the method for subscribing to the service.
- Your phone supports a multimedia message of a maximum size of 300 KB.
  - You need to open multimedia messages with caution.  
Objects in multimedia messages may contain viruses (such as malicious software) that can damage your phone.

## 6 Phonebook

### Creating a Contact




1. Select **Menu > Phonebook**, press  (**Options**), select **Go to** to access the menu, then select **Add new contact** and press .
2. Select **To SIM1/SIM2** or **To phone** for saving the contact.
3. Edit the contact.
4. Press  (**OK**), and then press  (**Yes**) to save the contact as prompted.

### Searching for a Contact

1. Select **Menu > Phonebook**, press  (**Options**), select **Go to** to access the menu.
2. Enter several letters of the name until the desired contact appears, or press  or  to scroll to the desired contact.

### Setting the Preferred Storage






You can set the storage location where the new contacts are stored.

1. Select **Menu > Phonebook**, press  (**Options**), select **Go to** to access the menu.
2. Press  (**Options**), and then select **Phonebook settings > Preferred storage**.
3. Select **SIM1**, **SIM2**, **Phone**, or **All** as required.
4. Press  (**OK**) to confirm the selection.






## Copying the Contacts

You can copy the contacts to the phone, SIM1 or SIM2.

### Copying One Contact









1. Select **Menu > Phonebook**, press  (**Options**), select **Go to** to access the menu.
2. Press  or  to scroll to the desired contact.
3. Press  (**Options**), and then select **Copy**.
4. Select a final location by selecting **To phone**, **To SIM1**, **To SIM2**, or **To file** as required.
5. Press  (**OK**) to copy the contact to the desired location.

### Copying Multiple Contacts

1. Select **Menu > Phonebook**, press  (**Options**), select **Go to** to access the menu.
2. Press  (**Options**), and then select **Phonebook settings > Copy contacts**.
3. Press  or  to scroll to the desired operation, such as **SIM1 to phone** or **Phone to SIM1**.
4. Press  (**OK**) to copy the contacts to the desired location.

 



## 7 Video Recorder

To record a video clip, do as follows:

1. Select **Menu > Video recorder**, press  (Options), select **Go to** to access the menu in standby mode.
2. In video recording mode, you can do as follows:
  - Press  to perform relevant settings.
  - Press  to start recording or to pause.
  - Press  or  to adjust brightness.
  - Press  to zoom in or  to zoom out.
  - Press  to stop recording and save the video clip as prompted.






## 8 Video Player

The video player can play downloaded or recorded video clips that are saved in the **Videos** folder in **File manager** of **Phone** or **Memory card**. To play a video clip, do as follows:

1. Select **Menu > Video player**, press  (Options), select **Go to** to access the menu.
2. Press  and  to select a video clip.
3. Press  (Options), and then select **Play** to play the video clip.






When the video is being played, you can do as follows:

- Press  or  to adjust the volume.

- Press  to rewind the video clip or  to fast-forward the video clip.
  - Press  to pause or continue.
  - 4. Press  to stop playing the video clip.
-  Only files in .mp4 and .3gp formats can be played properly. Files in other formats may fail to be played.

## 9 Sound Recorder


The sound recorder provided by your phone can function as a digital recorder. To record an audio clip, do as follows:

1. Select **Menu > Sound recorder**, press  (**Options**), select **Go to** to access the menu.
2. Press  (**Options**), and then select **New record** to record an audio clip.  
During the recording, press  (**Pause/Cont.**) or  to pause or continue.
3. Press  (**Stop**) to stop recording the audio clip, and then save the recorded clip as prompted.

## 10 Answer machine

When the answer machine is enabled, a caller will be notified that you cannot answer the call at the moment and can leave a voicemail message. To enable the answer machine, do as follows:

 


1. Select **Menu > Answer machine**, press  (Options), select **Go to** to access the menu, then select **Settings**.
2. Set **Auto answer** to **On**.
3. Set **Record duration**.
4. Set **Greeting file** to **Default** or **From files** as required.
5. Set **Remote access** to listen to the voicemail messages using another phone.  
Set **Status** to **On**, input a number key, **\*** key or **#** key in **Hot key**, and then input a confirmation number from 1 to 4 digits string in **Password**.

After the **Remote access** setting, you can listen to voicemail messages on your phone using another phone.

 
Set up a call between the other phone and your phone, press the hot key that has been set on your phone after an alert tone is heard, and then input the password following the interactive voice response (IVR).








The phone displays a message on the standby screen if there is a new voicemail message. You can also manually access the voicemail messages by selecting **Menu > Answer machine**, press  (Options), select **Go to** to access the menu, then select **Leaving messages**.

## 11 Ebook Reader







Your phone supports ebooks in .txt format.





1. Select **Menu > Ebook reader**, press  (Options), select **Go to** to display the bookshelf.  
The phone automatically adds the ebooks stored in **Ebook** on the phone or on the microSD card to the bookshelf.

2. Select an ebook.
  3. Press  (**Options**) for the following options:
    - **Open ebook**: to start reading the ebook.
    - **Global settings**: to set the font size, scroll type, encoding, alignment, and other relevant parameters.
  4. Press  (**Back**) to stop reading the ebook.
-  • When reading an ebook, you can press  and  to turn pages.
- It is recommended that you store ebooks in **Ebook** on the phone or on the microSD card. When you open an ebook stored in a folder other than **Ebook**, the phone automatically moves the ebook to **Ebook** so that you can find it easily in your next reading.

## 12 Camera


 








The phone is provided with a built-in 1.3 mega pixel complementary metal–oxide–semiconductor (CMOS) camera, which supports the photographing functions.

1. Select **Menu > Camera**, press  (**Options**), select **Go to** to launch the camera.
2. On the screen for taking a picture, do as follows:
  - Press  to view photos or configure relevant settings.
  - Press  or  to adjust brightness.
  - Press  to zoom in or  to zoom out.
  - Press the **1**, **2**, **4**, **6**, and **7** keys to configure the corresponding settings quickly.

- Press  to switch to the simplified mode.
- 3. Focus the camera on the scene, and then press  to take a picture.
- 4. Press  (**Back**) to save the picture and be ready for taking another one, or press  (**Options**), and then select **Delete** to delete the captured picture.



## 13 Audio Player

**Audio player** allows you to listen to music. It is recommend that you listen to music with the headset to enjoy the enhanced music effect. The music files are loaded from **My music** on the phone or on the microSD card.











1. In standby mode, select **Menu > Audio player**, press  (**Options**), select **Go to** to access the menu, or press and hold  for 3s.
2. Press  to start playing music.  
When the music is being played, you can do as follows:
  - Press  and  to adjust the volume.
  - Press  and  to switch between songs.
  - Press the button on the headset cable to switch between songs.
  - Press  (**List**) to view the music list, and then press  (**Options**) to configure relevant settings.
3. Press  to pause or to continue.

# 14 FM Radio

Besides being used for listening to radio programs, the headset cable functions as an antenna. To ensure that you can listen to radio programs with nicer radio quality, do not plug out the headset or bind the headset cable.

1. Connect the headset to the phone.
2. In standby mode, select **Menu > FM radio**, press  (**Options**), select **Go to** to access the menu, or press and hold  for 3s.


During the playing of a radio program, you can do as follows:

- Press  to stop or continue the playing.
- Press  or  to adjust the volume.
- Press  or  to adjust the frequency at a precision of 0.1 MHz.
- Press and hold  or , then release the key to switch to the adjacent channel.
- Press  to search and save channels.
- Press the number key to switch to the corresponding channel based on the settings in **Channel list**.
- Press the button on the headset cable to switch between channels.
- Press  (**Options**), and then select **Record** to record the radio program.
- Press  (**Options**) to view or edit the channel list, manually enter a frequency, automatically search for and save channels, and configure relevant settings.

# 15 Java Application



**Java** allows you to install Java applications provided by third-party operators to expand the phone use field.



- Not all the Java applications are compatible with your phone. If you have trouble in installing or running a Java application, press  to return to the standby screen, and then remove the application from your phone.
- Certain Java applications require network connections. Therefore, ensure that the General Packet Radio Service (GPRS) connection is proper.

## Installing a Java Application

To install a Java applications on your phone, do as follows:


1. Store the Java installation files in .jar or .jad format to **Phone** or **Memory card**.
2. Select a Java installation file, press  (**Options**), and then select **Install** to start the installation.
3. Press  (**Yes**) to confirm the certification information.
4. Select a location to install the Java application: Phone or Memory card.

When the installation is successful, the message “**Installed**” is displayed.

## Using a Java Application




To launch a Java application, do as follows:

1. Select **Menu > Java**, press  (**Options**), select **Go to** to access the menu, then select **Java**.

2. Select an installed application, and then press  (Options).
3. Select **Launch** to access the application.

## Deleting or Removing a Java Application

To delete or remove a Java application installed on your phone, do as follows:

1. Select **Menu > Java**, press  (Options), select **Go to** to access the menu, then select **Java**.
2. Select an application, and then press  (Options).
3. Select **Delete** to delete the application.
4. Press  (Yes) to confirm the certification information. When the deleting is successful, the message “**Deleted**” is displayed.

# 16 Services

You can access Wireless Application Protocol (WAP) sites and use WAP-based services on your phone. To access WAP sites on your phone, you need to subscribe to the corresponding service from your service provider and set the relevant parameters on your phone. For details about the services and charges, contact your service provider.



## Network Settings

Before accessing WAP sites on your phone, you need to set your data account and WAP parameters on your phone.

### Setting the Connection Profile

1. Select **Menu > Settings**, press  (Options), select **Go to** to





access the menu, then select **Connectivity > Data account**.

2. Press  (**Options**), and then select **Add**.
3. Set the parameters based on the information obtained from your service provider.
4. Press  (**OK**) to save the settings.



If the data account provided by your service provider already exists, you do not need to create a data account.

## Setting the WAP

1. Select **Menu > Services**, press  (**Options**), select **Go to** to access the menu, then select **Internet service > Settings > Profiles**.
2. Select **SIM1** or **SIM2**.
3. Select **Add new**, and then press .
4. Set the Internet parameters based on the information obtained from your service provider.
5. Press  (**Done**) to save the settings.
6. Select your service provider, press  (**Options**), and then select **Activate**.





If the profile supported by your service provider already exists, select the profile, press  (**Options**), and then select **Activate**.



## Selecting a SIM card

You can select a SIM card to connect to the Internet. Only one SIM card can be used each time you browse the Internet.

To select a SIM card, do as follows:

1. Select **Menu > Services**, press  (**Options**), select **Go to** to access the menu, then select **Internet service > Settings > Select SIM**.
2. Select **SIM1**, **SIM2**, or **Always ask** as required.
3. Press  (**OK**) to save the setting.

## Connecting to a Network

1. Press **Menu > Services**, press  (**Options**), select **Go to** to access the menu, then select **Internet service > Input address**.
2. Enter a Uniform Resource Locator (URL) address.
3. Press  (**Options**), and then select **Done** to access the address.

# 17 Bluetooth


Through Bluetooth, you can exchange data with other Bluetooth devices, and use a Bluetooth headset.




You can enable the Bluetooth function by performing Bluetooth settings.

## Using a Bluetooth Headset

No Bluetooth headset is delivered in the product package. If a Bluetooth headset is required, you can buy one by yourself.

1. Select **Menu > Bluetooth**, press  (**Options**), select **Go to** to access the menu, then select **Power**. Then select **On** to enable the Bluetooth function.
2. Select **Search audio device** to search for available Bluetooth headsets.




3. Select the desired Bluetooth headset, and then press  (Pair).

4. Enter the password for pairing the Bluetooth headset.

After the phone is connected with the headset, the headset icon is displayed on the standby screen, indicating that you can use the headset.

## Transferring Data

1. Select **Menu > Bluetooth**, press  (**Options**), select **Go to** to access the menu, then select **Power**. Then select **On** to enable the Bluetooth function.
2. Select **My device > Search new device** to search for available Bluetooth devices.
3. Pair the phone with the desired device.  
When a Bluetooth device is connected with the phone for the first time, you need to enter a pairing password for verification.
4. After pairing, exchange data between the phone and the Bluetooth device.

# 18 STK

The SIM Tool Kit (STK) function is available only if it is provided by your SIM card. STK is a value added service provided by your operator, you can use it to send text messages, view news, and use other applications. For further details, contact your network operator.

# 19 Chat Functions

The built-in chat programs **Facebook** on your phone allow you to send instant messages and files on the move.

To launch **Facebook**, do as follows:

1. Select **Menu > Facebook**, press  (Options), select **Go to** to access the menu, then select **Start**.
2. Enter your email account and password.



- Check your GPRS settings before using the chat programs.
- Before saving the chat history, ensure that a microSD card has been inserted.

# 20 Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

## Electronic Device

Power off your device if using the device is prohibited. Do not use the device when using the device causes danger or interference with electronic devices.

## Medical Device

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device when using the device is prohibited.

- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.

## **Potentially Explosive Atmosphere**

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause an explosion or a fire, resulting in bodily injuries or even deaths. Do not power on your device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. In addition, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmospheres that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) whether this device can be safely used in their vicinity.

## **Traffic Security**

Observe local laws and regulations while using the device. In addition, if using the device while driving a vehicle, comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not talk on the device while driving. Use hands-free accessories.
- When you have to make or answer a call, park the vehicle at the road side before using your device.

- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device may hurt you owing to the strong force when the air bag inflates.
- Do not use your device while flying in an aircraft. Power off your device before boarding an aircraft. Using wireless devices in an aircraft may cause danger to the operation of the aircraft and disrupt the wireless telephone network. It may also be considered illegal.

## Operating Environment

- Do not use or charge the device in dusty, damp, and dirty places or places with magnetic fields. Otherwise, it may result in a malfunction of the circuit.
- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5 cm away from your body to meet the requirement earlier mentioned.
- On a stormy day with thunder, do not use your device when it is being charged, to prevent any danger caused by lightning.
- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power consumption. As a result, the talk time and the standby time are reduced.
- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
- Keep the ambient temperature between 0°C and 40°C while the device is being charged. Keep the ambient temperature between 0°C to 40°C for using the device powered by a battery.

## Prevention of Hearing Damage

Using a headset at high volume can damage your hearing. To reduce the risk of damage to hearing, lower the headset volume to a safe and comfortable level.

## Safety of Children

Comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may be dangerous, as it may present a choking hazard. Ensure that small children are kept away from the device and accessories.

## Accessories

Use the accessories delivered only by the manufacturer. Using accessories of other manufacturers or vendors with this device model may invalidate any approval or warranty applicable to the device, result in the non-operation of the device, and cause danger.

## Battery and Charger

- Unplug the charger from the electrical plug and the device when not in use.
- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and the talk time are shorter than the normal time, replace the battery.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause a fire or a malfunction of the charger.
- Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelries. Otherwise, the battery may be short-circuited and may cause injuries and burns on your body.
- Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.

- If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
- If there is a case of battery deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.
- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.
- Danger of explosion if battery is incorrectly replaced. Recycle or dispose of used batteries according to the local regulations or reference instruction supplied with your device.

## **Cleaning and Maintenance**

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery, and charger from water or vapor. Do not touch the device or the charger with a wet hand. Otherwise, it may lead to a short circuit, a malfunction of the device, and an electric shock to the user.
- Do not place your device, battery, and charger in places where they can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion.
- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.
- Do not leave your device, battery, and charger in a place with an extreme high or low temperature. Otherwise, they may not function properly and may lead to a fire or an explosion. When

the temperature is lower than 0°C, performance of the battery is affected.

- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
- Before you clean or maintain the device, power off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may be damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.
- Do not dismantle the device or accessories. Otherwise, the warranty on the device and accessories is invalid and the manufacturer is not liable to pay for the damage.

## **Emergency Call**

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

## **Certification Information (SAR)**

This device meets guidelines for exposure to radio waves.

Your device is a low-power radio transmitter and receiver. As recommended by international guidelines, the device is designed not to exceed the limits for exposure to radio waves. These guidelines were developed by the independent scientific organization International Commission on Non-Ionizing Radiation Protection (ICNIRP) and include safety measures designed to ensure safety for all users, regardless of age and health.

The Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a device. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the

device when being operated can be well below the value. This is because the device is designed to use the minimum power required to reach the network.

The SAR limit adopted by USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The highest SAR value reported to the FCC and IC for this device type when tested for use at the ear is 0.950 W/kg, and when properly worn on the body is 1.520 W/kg.

The SAR limit also adopted by Europe is 2.0 W/kg averaged over 10 grams of tissue. The highest SAR value for this device type when tested at the ear is 0.773 W/kg, and when properly worn on the body is 0.485 W/kg.

## **FCC Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any



interference received, including interference that may cause undesired operation.

Warning: Changes or modifications made to this device not expressly approved by Huawei Technologies Co., Ltd. may void the FCC authorization to operate this device.

## Disposal and Recycling Information



This symbol on the device (and any included batteries) indicates that they should not be disposed of as normal household garbage. Do not dispose of your device or batteries as unsorted municipal waste. The device (and any batteries) should be handed over to a certified collection point for recycling or proper disposal at the end of their life.

For more detailed information about the recycling of the device or batteries, contact your local city office, the household waste disposal service, or the retail store where you purchased this device.

The disposal of this device is subject to the Waste from Electrical and Electronic Equipment (WEEE) directive of the European Union. The reason for separating WEEE and batteries from other waste is to minimize the potential environmental impacts on human health of any hazardous substances that may be present.

## Reduction of Hazardous Substances

This device is compliant with the EU Registration, Evaluation, Authorisation and Restriction of Chemicals (REACH) Regulation (Regulation No 1907/2006/EC of the European Parliament and of the Council) and the EU Restriction of Hazardous Substances (RoHS) Directive (Directive 2002/95/EC of the European Parliament and of the Council). For more information about the REACH compliance of

the device, visit the Web site [www.huaweidevice.com/certification](http://www.huaweidevice.com/certification). You are recommended to visit the Web site regularly for up-to-date information.

## **EU Regulatory Conformance**

Hereby, Huawei Technologies Co., Ltd. declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

For the declaration of conformity, visit the Web site [www.huaweidevice.com/certification](http://www.huaweidevice.com/certification).

**C € 0682**

Notice: Observe the national local regulations in the location where the device is to be used. This device may be restricted for use in some or all member states of the European Union (EU).

Version: 01 NO.: 6010737