



- Do not remove the battery before removing the travel adapter. Doing this may cause damage to the phone.
- To save energy, unplug the travel adapter when not in use. The travel adapter does not have a power switch, so you must unplug the travel adapter from the outlet to interrupt the power supply. The travel adapter should remain close to the socket when in use.

Insert a memory card (optional)

Your phone accepts microSD™ or microSDHC™ memory cards up to 8 GB (depending on memory card manufacturer and type).



Formatting the memory card on a PC may cause incompatibility with your phone. Format the memory card only on the phone.




With the gold-coloured contact facing down

Instructional icons

	Note: notes, usage tips, or additional information
	Followed by: the order of options or menus you must select to perform a step
	Square brackets: phone keys
	Angled brackets: softkeys that control different functions at each screen

Turn your phone on or off


To turn your phone on or off, press and hold [⏻].

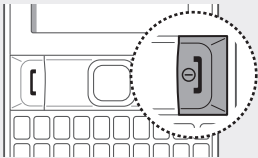

If the battery remains fully discharged or removed from the device, the time and date will be reset.


Lock or unlock the keys

In Idle mode, press and hold [Alt] or [Alt] to lock or unlock the keys.

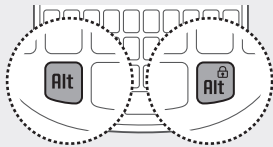

Switch to Silent mode

In Idle mode, press and hold [Mute] to mute or unmute your phone.

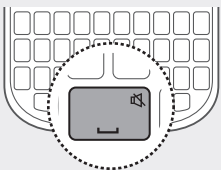

Access menus

- In Idle mode, press <Menu> to access Menu mode.
 - You may need to press the Confirm key to access Menu mode depending on your region or service provider.
- Use the Navigation key to scroll to a menu or option.
- Press <Select>, <Save> or the Confirm key to confirm the highlighted option.
- Press <Back> to move up one level; Press [⏻] to close the menu or application and return to Idle mode.
 - When you access a menu requiring the PIN2, you must enter the PIN2 supplied with the SIM card. For details, contact your service provider.
 - Samsung is not responsible for any loss of passwords or private information or other damages caused by illegal software.

Make a call

- In Idle mode, enter an area code and a phone number.
- Press [☎] to dial the number.
- To end the call, press [⏻].
 - To adjust the volume during a call, press the Navigation key up or down.

Use the smart home screen

The smart home screen allows you to access applications, contacts, and calendar events or view the clock from Idle mode.



When you are using the smart home screen, the Navigation key does not work as shortcuts.

To add items to the smart home screen

- In Menu mode, select **Settings** → **Display** → **Smart home**.
- Press <Edit>.
- Select the items to display on the smart home screen.
 - For the shortcuts toolbar, you can add or delete the shortcuts as desired. Press <Options> → **Edit shortcuts**.
- Press <Options> → **Save**.
- Press the Confirm key.



You can change the idle screen to another style. In Menu mode, select **Settings** → **Display** → **Smart home** and scroll left or right to a style you want.

To access the smart home items

Press the Navigation key to scroll through the items on the smart home screen and press the Confirm key to select an item.

Enter text

Press appropriate alphanumeric keys to enter characters, numbers, and symbols. To enter characters on the upper half of the keys, press [Alt] or [Alt].

To change the text input mode

- Press <Options> → **Writing options** → **Writing language** to change the input language.
- Press <Options> → **Writing options** → **Predictive text on** to turn on T9 mode.
- Press [Sym] to open the symbol panel.
- Press [Alt] and [Sym] to open the emoticon panel.

To use other features for text input

- To move the cursor, press the Navigation key.
- To change case, press [↕].
- To delete characters one by one, press [↵]. To delete characters quickly, press and hold [↵].
- To insert a space between characters, press [␣].
- To start a new line, press [↵].

Add a new contact



The memory location to save new contacts may be preset depending on your service provider. To change the memory location, in Menu mode, select **Contacts** → <Options> → **Settings** → **Save new contacts to** → a memory location.

- In Idle mode, enter a phone number and press the Confirm key.
- Select a memory location (if necessary).
- Select **Create contact**.
- Select a number type (if necessary).
- Enter contact information.
- Press the Confirm key.

Send and view messages

To send a text or multimedia message

- In Menu mode, select **Messages** → **Create message**.
- Enter a recipient number and scroll down.
- Enter your message text. *See "Enter text"* For sending as a text message, skip to step 5. For attaching multimedia, continue with step 4.
- Press <Options> → **Add multimedia** and add an item.
- Press the Confirm key to send the message.

To view text or multimedia messages

- In Menu mode, select **Messages** → **Inbox**.
- Select a text or multimedia message.

Activate and send an SOS message

To activate the SOS message

- In Menu mode, select **Messages** → **Settings** → **SOS messages** → **Sending options**.
- Press <Change> to turn on the SOS message.
- Scroll down and press the Confirm key to open the recipient list.
- Press <Search> to open your contact list.
 - You can also enter phone numbers including a country code (with +) in the recipient list. Skip to step 7.
- Select a contact.
- Select a number (if necessary).
- When you are finished selecting contacts, press the Confirm key to save the recipients.
- Scroll down and set the number of times to repeat the SOS message.
- Press <Back> → <Yes>.

To send an SOS message

- With the phone locked, press [☎] 4 times.
- To exit SOS mode, press [⏻].

Use the camera

To capture photos

- In Idle mode, press and hold [Cam] to turn on the camera.
- Aim the lens at the subject and make any adjustments.

- Press the Confirm key or [Cam] to take a photo.

To view photos

In Menu mode, select **My files** → **Images** → a photo file.

To record videos

- In Idle mode, press and hold [Cam] to turn on the camera.
- Press [1] to switch to the camcorder.
- Aim the lens at the subject and make any adjustments.
- Press the Confirm key or [Cam] to start recording.
- Press the Confirm key, <Stop>, or [Cam] to stop recording.

To view videos

In Menu mode, select **My files** → **Videos** → a video file.

Listen to music

- In Menu mode, select **Music**.
- Select a music category → a music file.
- Control playback with the following keys:

Key	Function
Confirm	Pause or resume playback
Navigation	<ul style="list-style-type: none">Left: Restart playback; Skip backward (press within 3 seconds); Scan backward in a file (press and hold)Right: Skip forward; Scan forward in a file (press and hold)Up/Down: Adjust the volume

Listen to the FM radio

- Plug a headset into the phone.
- In Menu mode, select **Apps** → **FM radio**.
- Press the Confirm key to turn on the FM radio.
- Press <Yes> to start automatic tuning.
- The radio scans and saves available stations automatically.



The first time you turn on the FM radio, you will be prompted to start automatic tuning.

- Control the FM radio with the following keys:

Key	Function
Confirm	Turn the FM radio on or off
Navigation	<ul style="list-style-type: none">Left/Right: Fine-tune the frequency; Search for an available radio station (press and hold)Up/Down: Adjust the volume

Use an instant messenger

- In Menu mode, select **IM** → an instant messenger.
- Enter your user name and password, and then press <Sign in>.
- Send and receive instant messages to friends and family.

To use the Bluetooth messenger

- In Menu mode, select **BT msgr**.
- Press the Confirm key.
- Press <Yes> to turn on the Bluetooth wireless feature (if necessary).
- Select a device.
- Enter your message and press the Confirm key.
- Enter a PIN for the Bluetooth wireless feature or the other device's Bluetooth PIN, and press <OK>. Alternatively, press <Yes> to match the PIN between your phone and the device.
- Chat with friends and family instantly.

Make fake calls

You can simulate an incoming call when you want to get out of meetings or unwanted conversations.

To activate the fake call feature

- In Menu mode, select **Settings** → **Call** → **Fake call** → **Fake call hot key**.
- Press the Confirm key to **On**.

To make a fake call

- In Idle mode, press and hold the Navigation key down.
- With the keys locked, press the Navigation key down four times.

Set and use alarms

To set a new alarm

- In Menu mode, select **Alarms**.
- Press <Create>, or press <Options> → <Create alarm>.
- Set alarm details.
- Press <Save> or the Confirm key.

To stop an alarm

When the alarm sounds,

- Press <Confirm> or the Confirm key to stop the alarm with snooze, or press <Snooze> to silence the alarm for the snooze period.

To deactivate an alarm

- In Menu mode, select **Alarms**.
- Select the alarm you want to deactivate.
- Press <Options> → **Deactivate alarm**.



If the battery has been removed, the scheduled alarm may not sound.

Answer a call

- When a call comes in, press [☎].
- To end the call, press [⏻].

Change your ringtone

- In Menu mode, select **Settings** → **Sound profiles**.
- Scroll to the profile you are using.



If you are using the silent or meeting profile, you are not allowed to change the ringtone.

- Press <Edit> → **Voice call ringtone**.
- Select a memory location (if necessary).
- Select a ringtone.
- To switch to another profile, select it from the list.

Activate the mobile tracker

When someone inserts a new SIM card in your phone, the mobile tracker feature will automatically send the contact number to two recipients to help you locate and recover your phone. To activate the mobile tracker,

- In Menu mode, select **Settings** → **Security** → **Mobile tracker**.
- Enter your password and press <OK>.



The first time you access **Mobile tracker**, you will be prompted to create and confirm a password.

- Press the Confirm key to **On**.
- Scroll down and press the Confirm key to open the recipient list.
- Press <Search> to open your contact list.
 - You can also enter phone numbers including a country code (with +) in the recipient list. Skip to step 9.
- Select a contact.
- Select a number (if necessary).
- When you are finished selecting contacts, press <Add>.
- Press the Confirm key to save the recipients.
- Scroll down and enter the sender's name.
- Press the Confirm key → <Accept>.

SAMSUNG ELECTRONICS



Declaration of Conformity (R&TTE)

We, Samsung Electronics

declare under our sole responsibility that the product

GSM Mobile Phone : GT-E2220

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

SAFETY	EN 60950-1 : 2006 + A11 : 2009
SAR	EN 50360 : 2001 / AC 2006 EN 62209-1 : 2006
EMC	EN 301 489-01 V1.8.1 (04-2008) EN 301 489-07 V1.3.1 (11-2005) EN 301 489-17 V2.1.1 (05-2009)
RADIO	EN 301 511 V9.0.2 (03-2003) EN 300 328 V1.7.1 (10-2006)

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex IV of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

BABT, Forsyth House,
Churchfield Road,
Walton-on-Thames,
Surrey, KT12 2TD, UK*
Identification mark: 0168

The technical documentation kept at :
Samsung Electronics QA Lab.

which will be made available upon request.
(Representative in the EU)

Samsung Electronics Euro QA Lab,
Blackbushe Business Park, Saxony Way,
Yateley, Hampshire, GU46 6GG, UK*

2011.05.26
(place and date of issue)

CE 0168

Joong-Hoon Choi / Lab Manager
(name and signature of authorised person)

* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your product.