

LG-C375 User Guide - English



This guide will help you understand your new mobile phone. It will provide you with useful explanations of features on your phone. Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



P/N: MFL67264429(1.0)

www.lg.com

Getting to know your phone

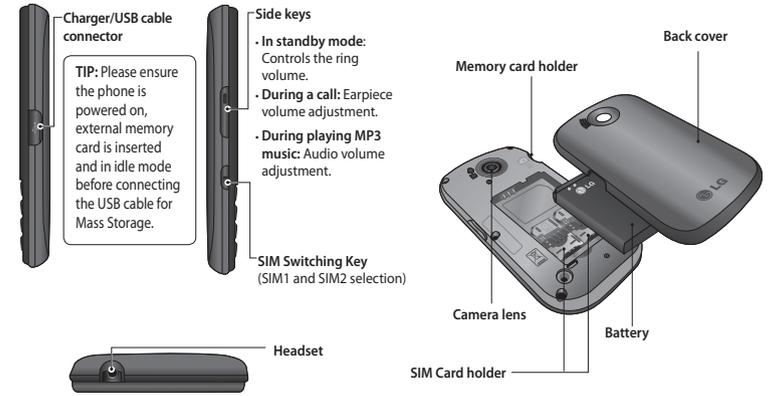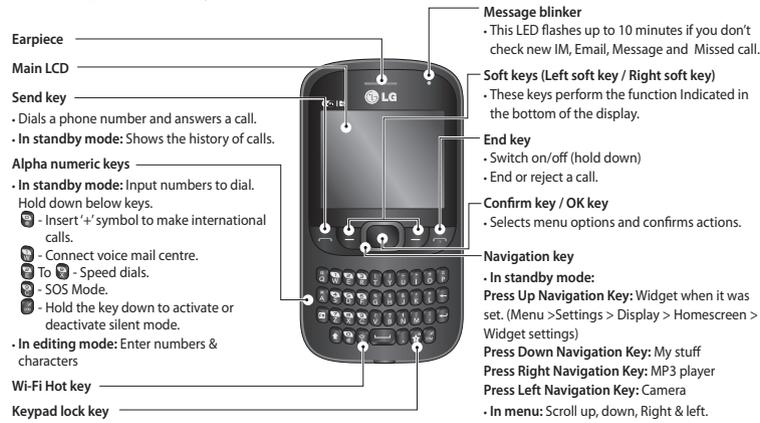

Installing the SIM Card and Charging the Battery

Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

Important! The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of reach of small children.
only 2G/2.5G SIM supported

Illustrations

- 1 Remove the back cover
- 2 Remove the battery
- 3 Insert the SIM card
- 4 Insert the battery
- 5 Insert the back cover
- 6 Charging your phone



WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

Answering and rejecting a call

When your phone rings, press **Accept** or press **Silent** to answer the call. While your phone is ringing you can press **Silent** to mute the ringing. This is useful if you have forgotten to change your profile to silent for a meeting.

Press **Reject** or select **Reject** in order to reject an incoming call. **Note:** In call when speaker is activated, the speaker icon is displayed with red colour cross, when the speaker is deactivated speaker icon is displayed without red colour cross.

Speed dialling

You can assign a speed dial number to a contact you call frequently.

- 5 Choose **Send to**.
- 6 Choose a contact from the list of contacts or enter the phone number.
- 7 Select **Send**.

WARNING: Image, Sound, Video, Slide, Subject, Business card, Schedule or My profile is added to the message editor, it will be automatically converted to MMS mode and you will be charged accordingly.

Entering text

You can enter alphanumeric characters using the phone's keypad. For example, storing names in contacts, writing a message and creating scheduling events in the calendar all require entering text. The following text input methods are available in the phone: ABC mode, and 123 mode.

Note: Some fields may allow only one input mode (e.g. telephone number in contact fields).

Quick feature reference

Menu 1. Games & apps.

You can install new games and applications on your phone to keep you amused when you have spare time. Press **Menu** and select **Games & apps**.

Menu 2. Logs

You can check the record of all logs, calls, missed, outgoing, incoming logs and messages only. The number and name (if available) are displayed together with the date and time at which the call was made. You can also view the number of times you have called.

- All logs:** View a complete list of all your dialled, received and missed calls and also send and received messages.
- Calls Only:** View a list of all the numbers you have called, received calls and missed calls.
- Messages Only:** View a list of all the numbers you have sent or received messages.

Text input mode using the keypad

When you want to enter text, for example when writing a message, the keypad will default to ABC mode. If you are entering a number, for example when making a call, the keypad number keys will default to numbers. To change the mode press **Key** in editor screen.

Menu 7. Music

MP3 Player

Your LG-C375 has a built-in music player so you can play all your favourite music.

Note: Before using music player, you will need to transfer music file onto your phone. Music player supports codec types as follows: MP3, WMA, AAC. Music player does not necessarily support all features and variations of file formats.

Using Dual SIM-card

You can see two Network Signal icons on the left-top of the screen when you insert two SIM-Cards.

Activating and switching SIM cards

The SIM Switching key allows you to select the default SIM card for call or message in contact, call logs and message box in standby mode.

User can press SIM switching key simply on the right side of the LG-C375. Dual SIM key make it easy for you to switch SIM-Card whenever you call, send messages and so on.

Note: If there is only one SIM card installed, this SIM card would be activated as default.

TIP!

1. You can see the network signals highlighted by background colour when you switch them. It makes you easily identify the strength of your signal of the selected SIM-Card.
2. You must choose SIM1 or SIM2 to use some function. For example, Call, Messaging, Phonebook, Settings and any Options.

- Missed logs:** View a list of any calls you have missed.
- Outgoing logs:** View a list of all the numbers you have called.
- Incoming logs:** View a list of all the numbers that have received.
- Call durations:** Allows you to view the duration of your Last call, outgoing calls, Incoming calls and All calls.
- Data volume:** Allows you to view the received data and sent data.

Menu 3. Camera

Camera

- 1 Press **Menu** and select **Camera** and **Camera**.
- 2 When the camera has focused on your subject, select the **Capture** icon on the bottom-centre of the screen and press **OK** to take a photo.

Video Camera

- 1 Press **Menu** and select **Camera** and choose **Video Camera**. The video camera's viewfinder will appear on screen.
- 2 Focus the camera on what to record.

Playing a song

- 1 Press **Menu** and select **Music**, then choose **MP3 player**.
- 2 Choose **All songs** then select the song you want to play. Select **Key**.
- 3 Select **Key** to pause the song.
- 4 Select **Key** to skip to the next song.
- 5 Select **Key** to skip to the previous song.

TIP! To change the volume while listening to music, use the volume keys on the left hand side of your phone.

Note: The copyright of music files can be protected in international treaties and national copyright laws. Therefore, it may be necessary to obtain a permission or a license to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Before downloading or copying the file, please check the national legislation of the applicable country concerning the use of such material.

FM Radio

Your LG-C375 has an FM radio feature so you can tune into your favorite stations and listen on the move.

Memory card

Installing a memory card

You can expand the memory available on your phone using a memory card.

Note: A memory card is an optional accessory.

Slide the memory card into the slot until it clicks into place. Make sure that the gold contact area is facing downwards.



WARNING: External memory cannot be exceeded 8GB.

- 3 Select the **Rec.** icon on the bottom-centre of the screen and press **OK** to take a video. **Rec.** will appear at the bottom of the viewfinder. Press again to stop recording.
- Album**
 - View the pictures and videos you have taken in your Album.

Menu 4. Internet

You can launch the internet browser and access the homepage of the activated profile on web settings. You can also manually enter a URL address and access the associated WEB page.

- 1 In **Menu** mode, select **Internet** -> **Yes** to launch your service provider's homepage.
- 2 Navigate web pages using the following keys:
 - Navigation** - Scroll up or down on a web page.
 - OK** - Select an item.
 - Back** - Return to the previous page.
 - Options** - Access a list of browser options.

Note: You will incur extra cost by connecting to these services and downloading content. Check data charges with your network provider.

Note: If you are in an area with bad radio reception, you may have difficulty listening to the radio. It is recommended that you insert headphone into the hands-free connector when listening to the radio to ensure good radio reception.

- Listening to the radio**
 - 1 Press **Menu**, select **Music** and choose **FM radio**.
 - 2 Select the channel number of the station you would like to listen to.
- Recording the Radio**
 - 1 Press **Rec.** while listening to the radio.
 - 2 The recording time is displayed on your phone. If you want to stop the recording, press **Stop**. If recording is done, the recorded contents will be saved in **My stuff** -> **Sounds** as mp3 file.

TIP! To configure your recording settings such as the saved memory, recording type or pre-recording, press **Option** and select **Recording** settings.

Formatting the memory card

Your memory card may already be formatted. If your memory card isn't formatted, you will need to format it before you can begin using it.

- 1 From the home screen press **Menu** then select **Settings**.
- 2 Choose **Device and Memory info.** and select **External memory**.
- 3 Press **Format** and enter the password, which is set to 0000 as default. Your memory card will be formatted and ready to use.
- 4 To view the new formatted folders on your LG-C375 press **Menu** and select **My stuff**. Press right navigation key two times to choose memory card.

WARNING

1. When you format your memory card, all the content will be wiped. If you do not want to lose the data on your memory card, back it up first.
2. Do not remove your MicroSD card during the data transfer.

Menu 5. SNS (Social network services)

Your LG-C375 has SNS that lets you enjoy and manage your social network. You can update your own SN place status and view your friends' SN updates.

Note: SNS feature is a data intensive application. An additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

Facebook

Home: Log in and you will see your friend's updated status. Input your comment about new status or check others. Select **Options** to choose **Refresh** and main menu.

Twitter

Twitter is a micro blogging service that enables its users to send and read messages known as tweets.

Orkut

Orkut is an online community designed to make your social life more active and stimulating.

Menu 8. E-Mail

Sending an email using your new account

- To send/receive an email, you should set up an email account.
- 1 Press **Menu**, select **E-Mail** and set up an account you want to use.
 - 2 From **Options** Choose **Write e-mail** and a new email window will open.
 - 3 Enter address in **To** field then **Write** a subject line and press down navigation key.
 - 4 Enter your message using the keypad then Press **Ok** to send the email.

Menu 9. My stuff

View the images, sounds, videos and others in your **My stuff**.

Calling

Making a call

- 1 Make sure your phone is on.
- 2 You can use the keypad. To delete a digit press back arrow.
- 3 Press **Key** to begin the call.
- 4 To end the call, press **Key**.

TIP! To enter + when making an international call, press and hold 0.

Making a call from your Contacts

It's easy to call anyone whose number you have stored in your **Phonebook**.

- 1 Press **Menu** to open the main menu. Select **Phonebook**.
- 2 Using the keypad, enter the first letter of the contact you want to call and scroll to the **Phonebook**.
- 3 Press **Key** to begin the call.

Windows Live!

This indicates the Instant Messaging Client Information such as Client Name and Version Number.

Menu 6. Messaging

Your LG-C375 includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service) as well as the network's service messages.

Sending a message

- 1 Press **Menu**, select **Messaging** and choose **Write message**.
- 2 A new message editor will open. Message editor combines SMS and MMS in one intuitive mode that is easy to switch between. The default setting of the message editor is SMS mode.
- 3 Enter your message using the keypad.
- 4 Select **Options** and choose **Insert** to add an Image, Video, Sound, Text template, Multimedia template, Emoticon, Name & Number, Slide, Subject or More (Business card/Schedule/Memo/Task/My profile).

Menu 10. Phonebook

Searching for a contact

- 1 Press **Menu** and select **Phonebook**.
- 2 Using the keypad enter the first letter of the name of the contact you want to call.
- 3 To scroll through the contacts and their different numbers use the navigation keys.

Adding a new contact

- 1 Press **Menu** and select **Phonebook**.
- 2 Press **Option** and select **New contact**.
- 3 Enter the information you want in the fields provided and select **Done**.

Menu 11. Tools

• Quick menu

1 Press **Menu** and select **Tools**, then choose **Quick menu**.
2 Press **Add** and choose the menu you want to quickly approach.

• Organiser

You can access Calendar, Tasks, Memo and Calculate date to get the Target Date.

• Alarm clock

You can set up an alarm clock to go off at a specified time.

• Calculator

This contains the standard functions such as Addition, Subtraction, Multiplication and Division.

• Voice recorder

Use your Voice recorder to record voice memos or other sounds.

• Stopwatch

This option allows you to use the function of a stopwatch.

Backing up and restoring your phone's information

- 1 Connect the USB cable to your phone and your PC.
- 2 Select the PC suite from the popup menu in your phone and run PC Suite Program in your PC.
- 3 Click the "Phone Backup & Restore" in PC suite (Tools > Phone Backup & Restore), and select Backup or Restore.
- 4 Mark the contents you would like to back up or restore. Select the location you would like to backup information to, or restore information from. Now select Backup or Restore and Click Finish.
- 5 Your information will be Backed up or Restored.

TIP! You can download the PC suite from the LG website (www.lg.com). Go to www.lg.com > products > Manual & Software > Go to Manual & S/W Download Section.

• Unit converter

This converts any measurement into a unit you want.

• World clock

Allows you to determine the current time in another time zone or country.

• USIM services

This feature depends on SIM and the network services. In case the SIM card supports SAT (i.e. SIM Application Toolkit) services, this menu will be the operator specific service name stored on the SIM card.

Menu 12. Settings

• Dual SIM

You can select the default SIM card for call or message in Contact, Call logs and Message box.

• Profiles

Choose the profile you want to edit.

> **Flight mode** : Flight mode will not allow you to make calls, connect to the internet or send message.

Viewing your phone files on your PC

- 1 Connect the USB cable to your phone and your PC.
- 2 Select the PC suite from the popup menu in your phone and run PC Suite Program in your PC.
- 3 Open LG PC Suite icon in your PC which is already installed, after searching the phone it will be connected automatically.

TIP! Viewing the contents of your phone on your PC helps you to arrange files, organise documents and remove contents you no longer need.

• Device

> **Date and time**: Select Auto update On, and the phone will automatically update the date and time.

> **Battery status**: Choose to switch the factory set power save settings On or Off.

> **Languages**: Change the language of your LG-C375's display.

> **Auto key lock**: Lock the keypad automatically in standby screen.

> **Security**: Change your security to keep your LG-C375 and the important information it holds protected.

Anti-theft mobile tracker: When the handset is stolen, handset sends the SMS to the numbers configured by real Owner. To activate the ATMT feature, you will need to set ATMT on, and configure the ATMT settings with Owner name and Alternate numbers. Default ATMT Code is "0000".

> **Reset device**: Use **Reset device** to reset all the settings to their factory definitions. You need the security code to activate this function. The default number is "0000".

> **Memory info**: You can check free space and memory usage of each repository.

• Display

You can adjust settings for the phone display.

• Call

You can set the menu relevant to a call.

• Connectivity

> **Bluetooth**: Set up your LG-C375 for Bluetooth use. You can adapt your visibility to other devices or search through devices where your phone is paired with.

Note: Pair LG-C375 with any device supporting BT version above 2.0, then passcode is not asked, since passcode is auto generated. Pair LG-C375 with any device supporting lesser BT versions such as 1.2 etc, then passcode is asked.

> **USB connection mode**: You can select the USB connection mode on your phone for several uses.

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy Radio Wave Exposure and Specific Absorption Rate (SAR) Information

This mobile phone model LG-C375 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.

While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/Kg averaged over 10g of tissue.

The highest SAR value for this model phone tested by DASy4 for use at the ear is 1.25 W/Kg (10g) and when worn on the body is 1.28 W/Kg (10g).

SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/Kg averaged over 1g of tissue.

Product care and maintenance

⚠ WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.

Guidelines for safe and efficient use

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.

- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery's performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose off used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

Accessories

Various accessories are available for your mobile phone. These are detailed below.

Charger



Stereo headset



Battery



User Guide



NOTE

- Always use genuine LG accessories.
- Failure to do so may invalidate your warranty.
- Accessories may be different in different regions. Please check with our regional service company or agent for further enquires.

• Wi-Fi

Wireless Manager allows you to manage Internet connections via Wi-Fi (Wireless LAN) on your device. It allows the phone to connect to local wireless networks or access the Internet wirelessly.

NOTE: The LG-C375 supports WEP and WPA/PSK/2 encryption, but not EAP or WPS encryption. If your Wi-Fi service provider or network administrator sets encryption for network security, fill in the key in the pop-up window. If encryption is not set, this popup window will not be shown. You can obtain the key from your Wi-Fi service provider or network administrator.

Guidelines for safe and efficient use

- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.

Phone Software update

LG Mobile Phone Software update from internet

For more information on using this function, please visit the <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> → select country.

This Feature allows you to update the Software of your phone to the latest version conveniently from the internet without the need to visit a service centre.

As the mobile phone Software update requires the user's full attention for the duration of the update process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage your mobile phone.

Synchronise your phone with your PC

You can synchronize your phone with your PC to make sure all your important details and dates match, but also to back up your files and to put your mind at ease.

- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.

Guidelines for safe and efficient use

- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refuelling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle with your mobile phone and accessories.

In aircraft

- Wireless devices can cause interference in aircraft.
- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the aircraft without permission from the crew.

Children

Keep the phone in a safe place out of reach of small children. It includes small parts which may cause a choking hazard if detached.

Troubleshooting

Symptom	Possible causes	Possible Corrective measures
Phone cannot be switched on	On/Off key pressed too briefly. Battery is not charged. Battery contacts are dirty.	Press On/Off key for at least two seconds. Charge battery. Check charging indicator in the display. Clean the battery contacts.
Charging error	Battery totally empty. Contact Problem. No power from outlet. Charger defective. Wrong Charger. Battery defective.	Charge battery. Check power supply and connection to the phone. Check the battery contacts, clean them if necessary. Plug in to a different socket or check voltage. Test with another charger. Only use original LG accessories. Replace battery.
Network connection is lost.	Signal too weak.	Reconnection to another service provider if network mode is automatic.
Number not permitted	The Fixed Dial Number function is on.	Check the Settings menu and turn the function off.

Troubleshooting

Symptom	Possible causes	Possible Corrective measures
No connection to the network	Signal is weak or you're outside of the carrier network.	Move to a window or open space. Check service provider coverage map.
Codes do not match	When you want to change a security code you have to confirm the new code by entering it again. The two codes that you have entered do not match.	Contact your Service Provider.
Function cannot be set	Not supported by Service Provider or registration required.	Contact your Service Provider.
Calls not available	Dialing error or service limitations.	Check the number dialed and check the reception. Contact your service provider.
Calls not available	Dialing error New SIM card inserted Prepaid Charge limit reached	New network not authorized. Check for new restrictions. Contact Service Provider or reset limit with PIN 2.

Technical data

Ambient Temperatures

Max : +55°C (discharging)
+45°C (charging)

Min : -10°C

Declaration of Conformity	
<p>Model/Device Name: LG Electronics Inc. Address: LG Twin Tower 20, Haneul-dong, Yongdeungpo-gu, Seoul, Korea 150-271</p>	
<p>Product Description Product Name: GSM 900 / G-GSM 900 / DCS-1800 / PCS 1900 Quad Band Terrestrial Equipment Model Name: LG-C375 Trade Name: LG</p>	
<p>Applicable Standards/Conformity EMTE Directive 1999/5/EC EN 301 490-1 V1.8.1, EN 301 490-2 V1.3.1, EN 301 490-3 V2.1.1 EN 300 335 V9.2.2 EN 300 338 V9.2.2, EN 300 341 V9.2.2, EN 300 342 V9.2.2, EN 300 343 V9.2.2, EN 300 344 V9.2.2, EN 300 345 V9.2.2, EN 300 346 V9.2.2, EN 300 347 V9.2.2, EN 300 348 V9.2.2, EN 300 349 V9.2.2, EN 300 350 V9.2.2, EN 300 351 V9.2.2, EN 300 352 V9.2.2, EN 300 353 V9.2.2, EN 300 354 V9.2.2, EN 300 355 V9.2.2, EN 300 356 V9.2.2, EN 300 357 V9.2.2, EN 300 358 V9.2.2, EN 300 359 V9.2.2, EN 300 360 V9.2.2, EN 300 361 V9.2.2, EN 300 362 V9.2.2, EN 300 363 V9.2.2, EN 300 364 V9.2.2, EN 300 365 V9.2.2, EN 300 366 V9.2.2, EN 300 367 V9.2.2, EN 300 368 V9.2.2, EN 300 369 V9.2.2, EN 300 370 V9.2.2, EN 300 371 V9.2.2, EN 300 372 V9.2.2, EN 300 373 V9.2.2, EN 300 374 V9.2.2, EN 300 375 V9.2.2, EN 300 376 V9.2.2, EN 300 377 V9.2.2, EN 300 378 V9.2.2, EN 300 379 V9.2.2, EN 300 380 V9.2.2, EN 300 381 V9.2.2, EN 300 382 V9.2.2, EN 300 383 V9.2.2, EN 300 384 V9.2.2, EN 300 385 V9.2.2, EN 300 386 V9.2.2, EN 300 387 V9.2.2, EN 300 388 V9.2.2, EN 300 389 V9.2.2, EN 300 390 V9.2.2, EN 300 391 V9.2.2, EN 300 392 V9.2.2, EN 300 393 V9.2.2, EN 300 394 V9.2.2, EN 300 395 V9.2.2, EN 300 396 V9.2.2, EN 300 397 V9.2.2, EN 300 398 V9.2.2, EN 300 399 V9.2.2, EN 300 400 V9.2.2, EN 300 401 V9.2.2, EN 300 402 V9.2.2, EN 300 403 V9.2.2, EN 300 404 V9.2.2, EN 300 405 V9.2.2, EN 300 406 V9.2.2, EN 300 407 V9.2.2, EN 300 408 V9.2.2, EN 300 409 V9.2.2, EN 300 410 V9.2.2, EN 300 411 V9.2.2, EN 300 412 V9.2.2, EN 300 413 V9.2.2, EN 300 414 V9.2.2, EN 300 415 V9.2.2, EN 300 416 V9.2.2, EN 300 417 V9.2.2, EN 300 418 V9.2.2, EN 300 419 V9.2.2, EN 300 420 V9.2.2, EN 300 421 V9.2.2, EN 300 422 V9.2.2, EN 300 423 V9.2.2, EN 300 424 V9.2.2, EN 300 425 V9.2.2, EN 300 426 V9.2.2, EN 300 427 V9.2.2, EN 300 428 V9.2.2, EN 300 429 V9.2.2, EN 300 430 V9.2.2, EN 300 431 V9.2.2, EN 300 432 V9.2.2, EN 300 433 V9.2.2, EN 300 434 V9.2.2, EN 300 435 V9.2.2, EN 300 436 V9.2.2, EN 300 437 V9.2.2, EN 300 438 V9.2.2, EN 300 439 V9.2.2, EN 300 440 V9.2.2, EN 300 441 V9.2.2, EN 300 442 V9.2.2, EN 300 443 V9.2.2, EN 300 444 V9.2.2, EN 300 445 V9.2.2, EN 300 446 V9.2.2, EN 300 447 V9.2.2, EN 300 448 V9.2.2, EN 300 449 V9.2.2, EN 300 450 V9.2.2, EN 300 451 V9.2.2, EN 300 452 V9.2.2, EN 300 453 V9.2.2, EN 300 454 V9.2.2, EN 300 455 V9.2.2, EN 300 456 V9.2.2, EN 300 457 V9.2.2, EN 300 458 V9.2.2, EN 300 459 V9.2.2, EN 300 460 V9.2.2, EN 300 461 V9.2.2, EN 300 462 V9.2.2, EN 300 463 V9.2.2, EN 300 464 V9.2.2, EN 300 465 V9.2.2, EN 300 466 V9.2.2, EN 300 467 V9.2.2, EN 300 468 V9.2.2, EN 300 469 V9.2.2, EN 300 470 V9.2.2, EN 300 471 V9.2.2, EN 300 472 V9.2.2, EN 300 473 V9.2.2, EN 300 474 V9.2.2, EN 300 475 V9.2.2, EN 300 476 V9.2.2, EN 300 477 V9.2.2, EN 300 478 V9.2.2, EN 300 479 V9.2.2, EN 300 480 V9.2.2, EN 300 481 V9.2.2, EN 300 482 V9.2.2, EN 300 483 V9.2.2, EN 300 484 V9.2.2, EN 300 485 V9.2.2, EN 300 486 V9.2.2, EN 300 487 V9.2.2, EN 300 488 V9.2.2, EN 300 489 V9.2.2, EN 300 490 V9.2.2, EN 300 491 V9.2.2, EN 300 492 V9.2.2, EN 300 493 V9.2.2, EN 300 494 V9.2.2, EN 300 495 V9.2.2, EN 300 496 V9.2.2, EN 300 497 V9.2.2, EN 300 498 V9.2.2, EN 300 499 V9.2.2, EN 300 500 V9.2.2, EN 300 501 V9.2.2, EN 300 502 V9.2.2, EN 300 503 V9.2.2, EN 300 504 V9.2.2, EN 300 505 V9.2.2, EN 300 506 V9.2.2, EN 300 507 V9.2.2, EN 300 508 V9.2.2, EN 300 509 V9.2.2, EN 300 510 V9.2.2, EN 300 511 V9.2.2, EN 300 512 V9.2.2, EN 300 513 V9.2.2, EN 300 514 V9.2.2, EN 300 515 V9.2.2, EN 300 516 V9.2.2, EN 300 517 V9.2.2, EN 300 518 V9.2.2, EN 300 519 V9.2.2, EN 300 520 V9.2.2, EN 300 521 V9.2.2, EN 300 522 V9.2.2, EN 300 523 V9.2.2, EN 300 524 V9.2.2, EN 300 525 V9.2.2, EN 300 526 V9.2.2, EN 300 527 V9.2.2, EN 300 528 V9.2.2, EN 300 529 V9.2.2, EN 300 530 V9.2.2, EN 300 531 V9.2.2, EN 300 532 V9.2.2, EN 300 533 V9.2.2, EN 300 534 V9.2.2, EN 300 535 V9.2.2, EN 300 536 V9.2.2, EN 300 537 V9.2.2, EN 300 538 V9.2.2, EN 300 539 V9.2.2, EN 300 540 V9.2.2, EN 300 541 V9.2.2, EN 300 542 V9.2.2, EN 300 543 V9.2.2, EN 300 544 V9.2.2, EN 300 545 V9.2.2, EN 300 546 V9.2.2, EN 300 547 V9.2.2, EN 300 548 V9.2.2, EN 300 549 V9.2.2, EN 300 550 V9.2.2, EN 300 551 V9.2.2, EN 300 552 V9.2.2, EN 300 553 V9.2.2, EN 300 554 V9.2.2, EN 300 555 V9.2.2, EN 300 556 V9.2.2, EN 300 557 V9.2.2, EN 300 558 V9.2.2, EN 300 559 V9.2.2, EN 300 560 V9.2.2, EN 300 561 V9.2.2, EN 300 562 V9.2.2, EN 300 563 V9.2.2, EN 300 564 V9.2.2, EN 300 565 V9.2.2, EN 300 566 V9.2.2, EN 300 567 V9.2.2, EN 300 568 V9.2.2, EN 300 569 V9.2.2, EN 300 570 V9.2.2, EN 300 571 V9.2.2, EN 300 572 V9.2.2, EN 30</p>	