 
 
 
 




Your phone



Philips continuously strives to improve its products. Due to software upgrading, some contents in this user guide may be different from your product. Philips reserves the rights to revise this user guide or withdraw it at any time without prior notice. Please take your product as standard.





Turn your phone on and off

- 1 Press and hold power key to turn on your phone.
- 2 To turn off your device, press and hold power key and then select **Power off**.

Lock/unlock the touch screen

You can lock the touch screen and keys to prevent any unwanted device operations.

- 1 To lock, press power key.
- 2 To unlock, drag right the icon  to .

Keys

Learn about the main keys.

Key	Definition	Function
	Power	-Press and hold to power on/off. -Press to turn on/off the screen display. -Hold to access the Phone options, choose Silent or Airplane mode.

	Home key	-Press to return to the home screen. -Hold to open the list of recent applications.
	Option key	-Open a list of options available on the current screen. -On the home screen, open the Wallpaper, Manage applications and System settings.
	Back key	-Return to the previous screen or exit. -Hide the onscreen keyboard when it is opened.
	Menu key	-Tap to enter into menu screen and widgets..



Your phone I







Use the touch screen

Learn basic actions to use the touch screen.

Function	Operation
Tap	Touch once to select or launch a menu, option, or application.
Tap and hold	Tap an item and hold it for more than 2 seconds.
Drag	Tap an item and move it to a new location.
Double-tap	Tap an item twice quickly.
Flick	Briskly scroll up, down, left, or right to move through lists or screens.
Pinch	Place two of your fingers far apart, and then pinch them together. In some apps, like web browser, you can pinch the screen using two fingers (for example, thumb and index finger) to zoom in or zoom out when viewing a picture or a web page.

 


2 Your phone

 

Customise home screen

You can customise the home screen to match your preferences.

Function	Operation
Add items	Tap to enter into menu screen or widgets, tap and hold an item, and then drag it to home screen.
Move items	Tap and hold an item, and then drag it to a new location.
Remove items	Tap and hold an item, the trash bin appears at the bottom of the home screen. Drag the item to the trash bin. When the item turns red, release the item.
Select a wallpaper	In home screen, press > Wallpaper or tap and hold the blank area in home screen, select an image from options.

 




Home screen

From the Home screen, you can view your device's status and access applications.

The Home screen has multiple panels. Scroll left or right to view the panels on the Home screen. There are 5 extended home screen, slide your finger horizontally to the left and right to check each one. Tap  to return to the center home screen.

You can add your favorite applications, shortcuts and widgets so they're always just a tap away.

Your phone's home screen consists of the following areas:


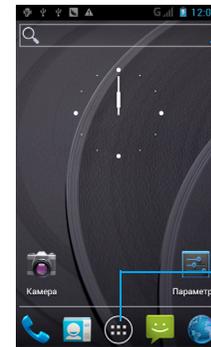


Status Bar
Search input window

Widgets and applications

Menu key: Tap to enter into applications

  Shortcut icons



Your phone 3





Notifications panel

When you get a new notification, you can open the Notifications panel to see what event notification or new information you have received. The Notifications panel lets you quickly switch between recently-opened apps, and also lets you easily turn on settings such as Wi-Fi and Bluetooth.

- To open/hide the Notifications panel:

 
Press and hold the status bar, then slide your finger downward. If you have several notifications, you can scroll down the screen to see them all. To hide the panel, drag the bottom of the panel upwards.

- Using Quick Settings tab

The Quick Settings tab lets you easily turn on Wi-Fi, Bluetooth, GPS and more, and also provides a quick shortcut to change the mode and set the brightness, timeout, auto rotation if slide the tab.



4 Your phone





Icons and symbols

Learn about the icons and symbols on the screen.

Icons	Function
-------	----------

	Your phone will not ring when receiving a call.
--	---

	Your phone will vibrate when receiving a call.
--	--

	Flight mode activated.
--	------------------------

	Your phone is connected to a GSM network. The more bars are shown the better the reception is.
--	--

	Your phone is connected to network.
--	-------------------------------------

	Downloading data.
--	-------------------

	Uploading data.
--	-----------------

	Call in progress.
--	-------------------

	You have a missed call.
--	-------------------------

	New SMS or MMS.
--	-----------------

	The bars indicate the battery level.
--	--------------------------------------

	WLAN activated.
--	-----------------

	Connected to PC.
--	------------------

	Bluetooth is activated.
--	-------------------------

	The headset is plugged into the phone.
--	--



	The alarm clock is activated.
--	-------------------------------

	Indicates the memory card is in use.
--	--------------------------------------

	Error occurred or caution required.
--	-------------------------------------

	FM radio turned on in the background.
--	---------------------------------------

	USB debugging connected.
--	--------------------------

  

Your phone 5






Table of contents

Getting started	7	Bluetooth	28
Assembling and Charge	7	Wi-Fi	28
Insert a Micro SD card (Memory card)	9	VPN	29
Personalize your phone	10	Mobile network sharing	29
Apps	12	Internet	30
Basic function	15	PC connections	31
Calls	15	Sync	31
Messages	16	Settings	32
Email	17	Wireless&Networks	32
Manage your phonebook	18	Device	33
MultiMedia	20	Personal	33
Music	20	System	34
Camera	21	Safety & Precaution	35
Recorder	25	Precaution	35
FM radio	25	Tips	36
Business applications	26	Troubleshooting	36
Manage your calendar	26	Trademark Declaration	38
Alarm	26	Specific Absorption Rate Information	38
File management	27	Declaration of Conformity	39
Calculator	27	Советы и рекомендации	40
Connections	28	Продление времени работы батареи телефона	
		Philips Xenium	40



 

Getting started

Congratulations on your purchase and welcome to Philips!

To get the most of your product and enjoy all Philips has to offer, register your product at:

www.philips.com/mobilephones

More details about your product, please access:

www.philips.com/support

 **Note:**

- Please read the safety instructions in the "Safety & Precaution" section before use.

Assembling and Charge

Learn about installing USIM or SIMcard and charging the battery for the first use.

 
Insert SIM card

Follow the steps below to insert your USIM or SIM card. Remember to turn off your mobile phone before removing the back cover.

- 1 Remove the back cover.




- 2 Take out the battery.





3 Insert the USIM or SIM card.

 


Note:

- SIM1/SIM2 both support 3G&2G network. Based on the default settings of your phone, it will connect 3G network by SIM1 directly. Also you can enter into **Settings>Wireless and networks>Mobile networks>3G service** to get your personal settings.



4 Install the battery.



 5 Replace the back cover.




8 Getting started

  




Charge the battery

A new battery is partially charged. The battery icon in the upper-right corner shows the battery level of charging status.

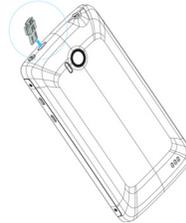

* Tips:

 - You can use the phone while it is charging.
- Keeping the charger plugged to the mobile phone when the battery is fully charged will not damage the battery. The only way to turn off the charger is to unplug it, so it is advisable to use an easily accessible power socket.
- If you do not intend to use your phone for several days, we recommend that you remove the battery.
- If a fully charged battery left unused, it will lost its charge over time.



- If a battery is being used for the first time or the battery has not been used for a prolonged period, it may take longer time to recharge.

Insert a Micro SD card (Memory card)

Insert a memory card

You can expand the memory of your phone and store more additional multimedia files by adding a micro-SD card.

Your device accepts memory cards with maximum capacities of 32 GB.

- 1 Remove the back cover.
- 2 Align your micro-SD card with the slot. Put it in place.

 




Remove the memory card

Ensure that the phone is not currently accessing the memory card. Before removing a memory card, first unmount it for safe removal.

- 1 In Idle screen, select  > **Settings** > **Storage** > **Unmount SD card**.
- 2 Push the memory card gently until it disengages from the phone.
- 3 Remove the memory card.



Note:

- Do not remove a memory card while the device is transferring or accessing information to prevent corrupting or damaging the files in the memory card.

Format the memory card

Formatting your memory card on a PC may cause incompatibilities with your device. Format the memory card only on the device.

In Idle screen, select  > **Settings** > **Storage** > **Erase SD card**.

Note:

- Before formatting the memory card, remember to make backup copies of all important data stored on your device. The manufacturer's warranty does not cover loss of data resulting from user actions.

Personalize your phone

Time and Date

Change the settings to control how time and date appears on your device.





- **Automatic date and time:** Set to receive time information from the network and update the time and date automatically.
- **Automatic time zone:** Set to receive time zone information from the network when you move across time zones.
- **Set date:** Set the current date manually.
- **Set time:** Set the current time manually.
- **Select time zone:** Select a time zone.
- **Use 24-hour format:** Set to show the time in 24-hour format or 12-hour format.
- **Select date format:** Select a date format.

Tips:

- If the battery remains fully discharged or removed from the device, the time and date will be reset.

Set a screen lock

You can lock your device by activating the screen lock feature.

Select > **Settings** > **Personal** > **Security** > **Screen lock**.

- **None:** Disable the screen lock.

- **Slide:** Choose slide to unlock the screen..
- **Pattern:** Draw a pattern to unlock the screen.
- **PIN:** Unlock the screen by enter the PIN code.
- **Password:** Creat your private password to unlock the screen.

 
Lock your SIM or USIM card

You can lock your phone with the PIN that is supplied with your SIM or USIM card.

- 1 In the application list, select **Settings**>**Security**>**Set up SIM card lock**> **Lock SIM card**.
- 2 Select the SIM or USIM card, enter your PIN and select **OK**.

Note:

- If you enter an incorrect PIN too many times, your SIM or USIM card will be blocked. You must enter a PIN unlock key (PUK) to unblock the SIM or USIM card.
- If you block your SIM or USIM card by entering an incorrect PUK, take the SIM or USIM card to your service provider to unblock it.






Apps

You can download a wide variety of free and paid apps ranging from productivity apps, entertainment, to games from the Android Market.

Access applications

- Scroll left or right to another screen, select an application.
- On the Home screen, tap  to access the application list.
- Press  to return to the previous screen, press  to return to the Home screen.
- Access recently-used applications: Press and hold  to view the applications you have accessed recently.

 Your device has a built-in motion sensor that detects its orientation. If you rotate the device while using some features, the interface will automatically switch to landscape view. To set the interface to keep the orientation when you rotate the device, select **Settings>Display>Auto-rotate screen**.



Download applications from Android Market

Based on the Android platform, your device's functionality can be extended by installing additional applications. Android Market provides you an easy and quick way to shop for games and mobile applications.

- 1 Install an application
 - In Idle mode, open the application list and select **Market**.
 - Select **Accept** when the terms and conditions appear.
 - Search for a file or application and download it.

Note:

- Download and install only apps that you trust.

- 2 Uninstall an application
 - From the Android Market home screen, select **My apps**.
 - Select the item you want to delete.
 - Select **Uninstall > OK**.





Download files from the web

When you download files or web applications from the web, your device saves them in a memory card.

 **Note:**

 
 
- Files you download from the web can include viruses that will damage your device. To lessen your risk, only download files from sources you trust.
- Some media files include Digital Rights Management to protect copyrights. This protection may prevent you from downloading, copying, modifying, or transferring some files.

 **Note:**

- To install applications downloaded from websites other than Android Market, you must select **Settings >Applications >Unknown sources >OK**.

| Synchronise data

You can synchronise data with various web servers and back up or restore your data. Once the synchronisation is completed, your device stays connected to the web. If any change is made on the web, the updated information will appear on your device and will automatically begin synchronisation, and vice versa.



 **Tips:**

- This feature may be unavailable depending on your region or service provider.

2 Set up a server account

 
- In Idle mode, open the application list and select **Settings>Accounts&sync**.
- Select **Add account >an account type**.
- Follow the on-screen instructions to complete the account setup. For online community services, such as Facebook or MySpace, enter your user name and password and select **Log in**.

3 Activate automatic sync

- In Idle mode, open the application list and select **Settings>Accounts&sync**.
- Select Auto-sync.
- Select an account.
- Select the applications you want to synchronise.

 **Note:**


- To exclude applications from automatic synchronisation, clear the check boxes next to the applications you want.





4 Synchronise data manually

 - In Idle mode, open the application list and select **Settings > Accounts&sync**.
- Select an account.
- Select Sync now. Your device will start synchronising the data you set for synchronisation.



Basic function

Calls

Learn to use calling functions, such as making and answering calls, using options available during a call or customising and using call-related features.

Make a call

- 1 In the application list, tap .
- 2 Dial the number directly or choose one number from the filtered list that have matching digits.
- 3 Make a voice call or a video call.
- 4 Tap  to end the call.

Tips:

- The phone dialer's Smart dial features makes it quick and easy for you to make a call. Simply enter the phone number or first few letters of the person's name you want to call. Smart dial automatically searches and filters your stored contacts and the phone numbers from the call history.

Note:

- For international calls, long press 0 to enter the "+" sign for the international prefix.
- It is illegal in many areas to record a call without permission. Always ask the other party for permission before recording a call.



Answer/Reject a call

- 1 During an incoming call, press and hold  and then drag your finger right to  to answer the call, drag left to  to reject the call. (Press the side volume key to adjust the volume).
- 2 Tap  to turn on loudspeaker.
- 3 Tap  to hang up.



Make a conference call

If network applicable, you can handle two or more calls, or make a conference call.

- 1 During a call, tap to enter a phone number, and then tap to dial the number. The second number is dialled.
- 2 The first call is put on hold at this time.
- 3 Tap to switch the phone, tap to start conference.
- 4 To end the call, tap to hang up.

 
 
Make an emergency call

Without a SIM card in phone, you can make the emergency call.

In Europe, the standard emergency number is 112; in the UK, it is 999.

Tips:

- If you've enabled but forgot your lock password or lock pattern, you can still make emergency calls by tapping Emergency call on the screen.



Messages

 
You can use your phone to send text message and multimedia messages.

Send a message

- 1 In the application list, tap .
- 2 Tap New message .
- 3 Enter the number or tap to select the number from phonebook.
- 4 Select the text field and enter your message text.
- 5 Press > **Add subject** and add a subject for the message.
- 6 To insert emoticons, press and select **Insert smiley**.
- 7 Tap and attach a file. (Pictures, Videos, Audio or Slideshow)
- 8 Tap to send the message.

Note:

- Copyright protected pictures and sound cannot be sent by MMS.






Email

Gmail

Make sure you sign into your Google Account before using Gmail. If you didn't do so, go to the Accounts & sync setting to sign in.

You can also set up more than one Google Account on the phone, and then switch between accounts in Gmail.

 - 1 Send an email message:
 - In the Gmail inbox, press  and then tap **Compose**.
 - If you've set up multiple Google Accounts, choose which Gmail address you want to use for sending your email.
 - Enter the message recipient's email address in the **To** field. If you are sending the email to several recipients, separate the email addresses with a comma.
 - Enter the detailed information, tap **>Attach** if you want to add an attachment.
 - Tap to send the mail or save it as a draft, or press  to discard the message.



Email

Learn to send or view email messages via your personal or company email account.

Set up an email account

- 1 On the home screen, tap .
- 2 Enter your email address and password.
- 3 Select **Manual setup** and choose **POP3/IMAP/Exchange** and then tap **Next**.
- 4 If the account type you want to set up is not in the phone database, you'll be asked to enter more details.
- 5 Follow the on-screen instructions.

Note:

- When you are finished setting up the email account, the email messages are downloaded to your device.
- Consult your mail service provider for the mail server configuration.

Send an email

- 1 Tap  and start to edit the email.
- 2 Select the subject field and text input field to enter a subject and your email text.





- 3 Press , select the **Cc/Bcc** field and add more recipients.
- 4 Press  and attach a file. You can attach media files, contacts, or location information.
- 5 Tap  to send the mail.

Tips:

- If you are offline or outside your service area, the message will be held in the message thread list until you are online and in your service area.

View an email message

When you are finished setting up the email account, email messages will be downloaded to your device. If you have created two or more accounts, you can switch between them. .

From the message view, use the following options:

- To move to the next message, select .
- To move the message to another folder, press  > Move
- To delete the message, select .
- To reply to the message, select .
- To forward the message to others, select  > Forward.

18 Basic function



- To search one mail, select .
- To update the message list, select .

Manage your phonebook

Learn about basic phonebook function.

Add a new contact

- 1 Tap  to enter the **Contacts**.
- 2 Tap  and select a memory location.
- 3 Add phone number and details as desired.
- 4 Tap **Done** to finish saving.

Tips:

- You can create contacts from the dialling screen by selecting **Add to contacts**.
- For contacts on the smart phonebook, you can add detailed information, like home number, office number, contact pictures and ringtones.

Find a contact

- 1 On the home screen, tap  to enter the **Contacts**.
- 2 Scroll up or down the contact list.





- 3 Tap and enter the first few letters of the name in the search bar. (For example "John Henry" enter JH)
- 4 Select the contact from the option list.

 
Use Speed dial

- 1 In the application list, tap .
- 2 Press > **Speed dial**.
- 3 Select a location number and add contact.
- 4 You can call a speed dial number by tapping and holding the location number on the dialling screen.

Create your namecard

- 1 In the application list, tap > .
- 2 Select **My local profile** at the top of the contact list.
- 3 Enter your personal details.
- 4 Tap **Done**.

You can send your namecard to others or share it by pressing and selecting **Share**.



Create a group of contacts

By creating groups of contacts, you can manage multiple contacts and send a message to an entire group.

- 1 In the application list, tap > .
- 2 Tap and select a memory location.
- 3 Enter a name and customise the settings for the group.
- 4 Add members to the group.
- 5 Tap **Done**.

Import/Export your contacts

You can import contact files from a memory card to your device and export contacts from your device to a memory card.

- 1 In the application list, tap .
- 2 Press > **Import/Export**.
- 3 Select a memory location.
- 4 Select contacts to copy.
- 5 Tap to confirm.



MultiMedia

Music

Learn to listen to your favourite music while on the go with the music player.

Play music

- 1 Tap  to open the music screen.
- 2 Select a music category.
- 3 Using the following keys to control playback.

Function	Definition
	Play and resume playback.
	Pause the playback.
	Select previous track.
	Select next track.
	Select the play mode:
	<ul style="list-style-type: none">• Repeat once (play current file repeatedly)
	<ul style="list-style-type: none">• Repeat all (play all the files in the folder repeatedly)

20 MultiMedia

	Activate Shuffle mode, play current file randomly.
	Select to enter into playlist.
	Return to the home screen.

Music settings

Press  to enter into Settings:

- **Party shuffle:** Play all the files in the folder randomly.
- **Add to playlist :** Add new music to your playlist.
- **Use as ringtone:** Choose music as ringtone.
- **Delete:** Delete the music from playlist.
- **Sound effects:** Select a sound effect.
- **Library:** Return to music category.

Note:

- When listening to music, adjust the volume to a moderate level. Continuous exposure to high volume may impair your hearing.

Camera


Learn about camera function. Let you take photos as desired by using your phone.

Take a photo

- 1 In the application list, select .
- 2 Scroll to  turn on the camera mode.
- 3 Aim the camera lens at the subject and make any necessary adjustments.
- 4 Drag  to zoom in /zoom out.
- 5 Select  to take a photo.

Switch to the front camera to take a photo of yourself.

View photos

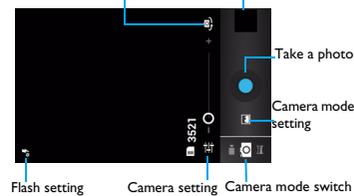

Capture a panoramic photo

You can take wide panoramic photos using Panorama shooting mode. This mode is convenient for photographing landscapes.

- 1 Open the application list and select .
- 2 Select the Panorama mode .
- 3 Aim the camera lens and take the first photo.
- 4 Slowly move the device in any direction and align the green frame with the viewfinder. When you have aligned the green frame and viewfinder, the camera will automatically take the next photo.
- 5 Repeat step 4 to complete the panoramic photo.

Capture a photo of action

You can capture shots of a moving subject and then combine them into a single photo that shows the action.

- 1 Open the application list and select .
- 2 Select the Action mode .
- 3 Aim the camera lens and take the first photo.

 


- 4 Move the device to follow the moving subject. The device automatically captures the next photos.
- 5 Continue to follow the subject until the device has captured all the shots necessary for the action photo

View photos

After taking photos, select the image viewer icon to view the taken photos or tap  to view photos.

- To view more photos, scroll left or right.
- To zoom in or out, place two fingers on the screen and slowly spread them apart or pinch them together. To return to the original size, double-tap the screen.
- To send a photo to others, tap
- To delete the photo, tap
- To start a slide show, tap
- Press the Option key  to access the following options:
 - **Slide show:** To start a slide show.
 - **Edit:** To edit the photo with the image editor.



- **Print:** To print the photo via Wi-Fi or USB.
- **Rotate right:** To rotate the photo clockwise.
- **Rotate left:** To rotate the photo anti-clockwise.
- **Copy to clipboard:** To add the photo to the clipboard.
- **Set picture as:** To set the photo as your wallpaper or a contact image.

Record a video

- 1 Tap  to turn on the camera.
- 2 Scroll to  turn on the video mode
- 3 Aim the lens at the subject and make any necessary adjustments.
- 4 Drag  to zoom in / zoom out.
- 5 Select  to start/stop recording. The video is saved automatically.

Play a video

- 1 In the application list, tap  and select a video.
- 2 Control playback with the following keys:
 - Tap  or , start or pause playback.
 - Press side volume key to adjust volume.



- Tap  to delete video.
 - Tap  to share video.
 - To adjust the video screen, tap / / .
- 3 Press  to return.

Change the shooting mode

You can take photos with various shooting modes.

Icon	Option	Function
	Self shot mode	You can take photos of yourself conveniently using the front camera lens.
	Normal	Take photo in normal mode.
	Auto scene detect	Simply select the proper mode for your shooting conditions and subjects.
	Face beauty	Hide facial imperfections.
	Smile shot	Set the device to recognise people's faces and help you take photos of them when they smile.

	Best shot	Select the best mode for your shooting.
	EV bracket shot	Adjust the exposure value for your shooting.
	4 shots	Continuous shooting function.
	8 shots	Continuous shooting function.
	16 shots	Continuous shooting function.

Camera settings

Before taking photos/recording videos, customise your camera settings, tap  to access the following options:

Option	Function
HDR	Take three photos with different exposures and then combine them to improve the contrast ratio.
Flash mode	Turn on/off flash mode depending on your lighting conditions.



White balance White balance enables the camera to capture colors more accurately by adjusting to your current lighting environment.

Color effect Apply a special effect, such as sepia or black and white tones.

Scene mode Change the scene mode.

Store location Set the camera to include location information for your photos. To use this feature, you must activate location services.

Exposure Adjust the exposure value to change the brightness.

 
Self timer Select the length of the delay before the camera takes a photo.

Sharpness Sharpen or blur the borders between objects.

Hue Adjust the Hue level.

Saturation Make colors more or less pronounced.

Brightness Adjust the brightness level.



Contrast Adjust the contrast.

Picture size Select the size of picture.

ISO Set the ISO level manually..

AE meter Select Spot, Center-weighted or Average mode.

Anti-flicker Reduce blur caused by the device's vibration or movement.

Restore defaults Restore to default settings.

 
Time lapse interval Select the length of the delay before the camcorder starts recording a video.

EIS Adjust the EIS level.

Focus mode Select to use either type of focus mode.

video duration Select time and size limit for the file.

Microphone Turn on/off microphone.





Recorder

Learn to operate your device's voice recorder.

Record a voice memo

- 1 Open the application list and tap
- 2 Tap to start recording.
- 3 Speak into the microphone.
- 4 When you are finished, tap .

Play a voice memo

- 1 Tap to access the voice memo list.
- 2 Select a voice memo to listen.

FM radio

Learn to listen to music and news on the FM radio.
To listen to the FM radio, you must connect a headset, which serves as the radio antenna.

 
 
Listen to the FM radio

- 1 Plug a headset into your phone.
- 2 Tap to enter into FM radio.
- 3 Tap **Search**. The FM radio scans and saves available stations automatically.

- 4 Tap to previous/next available FM station.
- 5 Tap to tune the radio frequency by +/- 0.1 MHz.
- 6 Tap to turn on the Speaker.
- 7 Tap **Exit** to turn off the FM radio.

Tips:

- The first time you turn on the FM radio, it will start automatic tuning.





Business applications

Manage your calendar

You can create your to-do list and make a plan on your calendar.

 
View the calendar

- 1 In the application list, tap .
- 2 Tap the date at the top of the screen.
- 3 Select a view mode:
 - **Day:** Hourly blocks for one full day.
 - **Week:** Hourly blocks for the days in one full week.
 - **Month:** A full month in one view.
 - **Agenda:** A list of all the events and tasks scheduled for a specific period.

Create an event

- 1 In the application list, tap .
- 2 Tap  **>New event**.
- 3 Enter the details of the event and select **Done**.

26 Business applications



Alarm

Learn about how to set and use an alarm. You can set up to five alarms.

Set an alarm

- 1 In application list, tap .
- 2 Select **Add alarm** and set the details of the alarm.
- 3 Tap **OK** to finish setting the alarm.

Turn on an alarm

- 1 Go to **Alarm**.
- 2 Select the alarm you want to turn on.
- 3 Tap **Turn alarm on**.

Stop an alarm

When the alarm rings,

- Select **Dismiss**: The alarm stops.
- Select **Snooze**: The alarm will sound again after 10 minutes.





File management

Learn about how to use and manage your files and folders.

Share your files

 
 
You can share your photos, audio or video files with others via MMS, E-mail or Bluetooth.

- 1 Tap to open your files.
- 2 Tap , and select photos, audio or video files you want to share.
- 3 Tap and select **Share** in option list.

Manage your files

You can copy, move or delete a file in a folder.

- Open a file, tap to create a new folder.
- Tap , select the file or folder.
- Tap , copy the file
- Tap , paste/cut/rename the file.
- Tap , delete files.





Search

- 1 In the application list, tap .
- 2 Enter a keyword and select.
- 3 Select a search result.

Calculator

Learn to perform calculations with your phone.

  - Use the keys on the screen to perform basic calculations. (Scroll the screen to view the scientific calculator).
- Press > **Clear history** to clear the calculation history.





Connections

Bluetooth

Your phone can connect to a compatible Bluetooth device for exchanging data.

Turn on/off Bluetooth

- 1 From the Home screen, tap  > **Wireless & networks** > **Bluetooth**.
- 2 Select or clear the Bluetooth check box.

Note:

- Turn off Bluetooth when not in use to save battery power, or in places where using a wireless device is prohibited, such as on board an aircraft and in hospitals.

Receive data via Bluetooth

- 1 Turn on the Bluetooth firstly, then tap  > **Wireless & networks** > **Bluetooth** to make device visible.
- 2 Then select **Search for devices**.
- 3 Select a device, Enter a pair password and select **Accept to pair with the other device**.
- 4 On the receiving device, accept the file.

28 Connections

Note:

 
 
 
- Some devices, especially headsets or hands-free car kits, may have a fixed Bluetooth PIN, such as 0000. If the other device has a PIN, you must enter it.
- Received data is saved to the bluetooth folder. If you receive a contact, it is automatically saved to the phonebook..

Send data via Bluetooth

- 1 Select a file or item, such as a contact, calendar event, memo, or media file, from an appropriate application or **My files**.
- 2 Select an option for sending data via Bluetooth.
- 3 Search for and pair with a Bluetooth-enabled device.

Wi-Fi

Learn to use your device's wireless networking. The availability and strength of the Wi-Fi signal will vary depending on objects, such as buildings or simply a wall between rooms, the Wi-Fi signal has to pass through.





Turn on Wi-Fi and connect to a WLAN

- 1 From the Home screen, tap  > **Wireless & networks** > **Wi-Fi**.
- 2 Turn Wi-Fi on.
- 3 Detected Wi-Fi networks will be listed in the Wi-Fi networks section.
- 4 Choose the Wi-Fi network you want to connect to, tap **Connect**.
- 5 If you selected a secured network, you'll be asked to enter the network key or password.

* Tips:

 
- If the wireless network that you want is not listed, tap **Add Wi-Fi network** to manually add it.

VPN

Learn to create virtual private networks (VPNs) and connect

Set up a VPN profile

- 1 In the application list, tap  > **Wireless & networks** > **VPN** > **Add VPN network**.
- 2 Enter a name for the VPN server and select a VPN type.



- 3 Change the options as required.
- 4 When you are finished, select **Save**.

* Tips:

- The options available may vary depending on the VPN type.
- Your device should already be configured with Internet access. If you have trouble accessing the Internet, you must edit the connections. If you are not sure what information to enter, ask your VPN administrator.
- To use this feature, you must activate the screen lock feature.

Connect to a VPN

- 1 In the application list, tap  > **Wireless & networks** > **VPN**.
- 2 Select a private network.
- 3 Enter the user name and password, and then select **Connect**.

Mobile network sharing

Learn to set your device as a wireless modem or wireless access point for PCs or other devices, and share your device's mobile network connection.





Share your mobile network via WLAN

- 1 In the application list, select **Settings>Wireless and network>Tethering & portable hotspot**.
- 2 Select **Portable Wi-Fi hotspot** to activate the WLAN tethering feature.
- 3 Select **Configure Wi-Fi hotspot** to configure network settings to use your device as an access point.
 - **Network SSID:**View and edit the device name that will be shown to external devices.
 - **Security:**Select the security type.
- 4 When you are finished, select **Save**.
- 5 From another device, locate your device's name in the available connection list and connect to the network.Your device shares the mobile network connection on another device.

Share mobile network via USB

- 1 Using a USB cable, connect the multifunction jack on your device to a PC.
- 2 In the application list, select **Settings>Wireless and network>Tethering & portable hotspot**.

- 3 Select **USB tethering** to activate the USB tethering feature. Your device shares the mobile network connection on your PC.
- 4 To stop sharing the network connection, tap to turn off USB tethering.

Tips:

- The sharing method for the network connection may differ depending on the PC's operating system.

Internet

 
Learn to access and bookmark your favourite web pages.

Browse a webpage

- 1 In the application list, tap .
- 2 To access a specific webpage, select the URL field, enter the web address.
- 3 Start to view the webpages.

While browsing a webpage, access the following options:

- To zoom in or out, place two fingers on the screen and slowly spread them apart or pinch them together.





- To open/close the window, tap
- To bookmark the current webpage, press > **Add bookmark.**
- To view your download history, press > **Downloads.**
- To change the browser settings, press > **Settings.**

PC connections

Learn to connect your phone to a PC with a USB cable in USB connection modes.

 
- 1 Connect your phone to a computer with a USB cable.
- 2 When connected, select **Turn on USB storage.**
- 3 Your phone act as a removable disk. If you insert a memory card in the device, you can also access the file directory of the memory card by using the device as a memory card reader.
- 4 Copy files from the PC to the memory card.
- 5 When you are finished, select **Turn off USB storage.**

Sync

Tap > **Accounts&sync** to finish setting online account before sync.

Synchronizing with a Google Account

- 1 Tap > **Accounts&sync** > **Add account.**
- 2 Follow the onscreen instructions to sign in to an account or create a new account.
- 3 If select **Background data**, apps can send and receive online account information even if you are not currently using them.
- 4 If select **Auto-sync**, apps can use the sync schedule defined in the account settings. If this is cleared, you will need to sync accounts manually.



Settings

Wireless&Networks

Function	Definition
SIM management	Set the dual SIM card information/set the SIM card for data connection, call, message.
Wi-Fi	Activate the Wi-Fi feature to connect to a Wi-Fi AP and access the Internet or other network devices.
Bluetooth	Activate the Bluetooth feature to exchange information over short distances.
Data usage	Keep track of your data usage amount, and customise the settings for the limitation.
Airplane mode	Activate Flight mode to disable all wireless functions on your device. You can use only non-network features.
VPN	Set up and manage virtual private networks (VPNs).

Tethering& portable hotspot

- Set to use your device as a wireless modem by making a USB connection with a computer.
- Set to use your device as a wireless access point for other devices.
- Activate the Bluetooth tethering feature to share your mobile network with computers via Bluetooth.

- Mobile networks**
- Set to use data connections on any mobile network.
 - Set to use data connections when you are roaming.

- GPRS transfer prefer mode**
- Turn on the GPRS data transmission.





Device

Function	Definition
Audio profiles	<ul style="list-style-type: none"> •Select the profiles of the phone. •Set the volume and type for ringtone, alarm and notification.
Display	Change the settings to control the display and backlight on your device.
Storage	View memory information for your device and memory card.You can also format the memory card.
Battery	View the amount of battery power consumed by your device.
Apps	Manage running applications, move applications to or from the storage card, and install or uninstall programs.



Personal


Function	Definition
Account&sync	<ul style="list-style-type: none"> •Change the settings for the auto sync feature or manage accounts for synchronisation. •Log in or out of your social network accounts, Google Account and Exchange ActiveSync account.
Location services	Select the sources to use when determining your location.
Security	Set a screen lock or manage the credential storage.
Language&input	Set the operating system language and region. You can also setonscreen keyboard options.
Reset	Reset your settings to the factory defaults and delete all your data.

  



System

Function	Definition
Date & time	<ul style="list-style-type: none">•Set the date and time, time zone, and date or time format.•Choose the time and date formats that suit you.
Schedule power on/off	Set the time to power on/off automatically.
Accessibility	Use these settings when you've downloaded and installed an accessibility tool, such as a screen reader that provides voice feedback. You can turn accessibility functions or services on or off.
Developer options	Change the settings for application development.
About phone	View different information about the phone, such as the battery, legal information, model number, software version, baseband version and build number.

 

Safety & Precaution

Precaution

Keep your phone away from small children

 Keep your phone and all accessories out of the reach of small children. Small parts may cause choking or serious injury if swallowed.

Radio Waves

 Your phone transmits/receives radio waves in the GSM frequency(900/1800/1900MHz) and WCDMA (2100MHz).

 Check with the vehicle manufacturer that electronic equipment used in your vehicle will not be affected by radio energy.

Switch off your phone...

 Turn off the phone when in an aircraft. The use of mobile phones in an aircraft may be dangerous for the operation of the aircraft, disrupt the mobile phones network and may be illegal.

 In hospitals, clinics, other health care centers and anywhere else where you may be in the close vicinity of medical equipment.

 In areas with a potentially explosive atmosphere (e.g. petrol stations and also areas where the air contains dust particles, such as metal powders).In a vehicle transporting flammable products or a vehicle powered by liquefied petroleum gas (LPG).In quarries or other areas where blasting operations are in progress.

Your mobile phone and your car

 Avoid using your phone while driving and obey all regulations that restrict the use of mobile phones while driving. Use hands free accessories to increase your safety when possible. Ensure that your phone and car kit do not block any air bags or other security devices fitted in your car.

Handle your phone carefully and sensibly

 For the optimal and satisfactory operation of the phone you are recommended to use the phone in the normal operating position.

- Do not expose your phone to extreme temperatures.
- Do not immerse the phone in any liquid; if your phone is damp, switch it off, remove the battery and let them dry for 24hrs before using them again.
- To clean the phone, wipe it with a soft cloth.
- In hot weather or after prolonged exposure to the sun (e.g., behind a window or a windscreen), the temperature of your phone's casing might increase. Be very careful in this case when picking up your phone and also avoid using it with an ambient temperature over 40° C.

Protect batteries from damage

 You should only use Philips Authentic Accessories, as the use of any other accessories may damage your phone and may be dangerous, and will make all guarantees for your Philips phone null and void. The use of an unspecified type of battery may also cause an explosion.

Make sure damaged parts are replaced immediately by a qualified technician and that they are replaced with genuine Philips replacement parts.

- Your phone is powered by a rechargeable battery.
- Use specified charger only.
- Do not incinerate.
- Do not deform or open the battery.
- Do not allow metal objects (such as keys in your pocket) to short circuit the battery contacts.
- Avoid exposure to excessive heat (>60° C or 140° F), moisture or caustic environments.

Environmental care

 Remember to observe the local regulations regarding the disposal of the packaging materials, exhausted batteries and old phone and please promote their recycling.Philips has marked the battery and



packaging with standard symbols designed to promote the recycling and appropriate disposal of your eventual waste.

:The labeled packaging material is recyclable.

:A financial contribution has been made to the associated national packaging recovery and recycling system.

:The plastic material is recyclable (also identifies the type of plastic).

WEEE Marking in the DFU: "Information to the Consumer"

Disposal of your old product

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

Tips

Pacemakers

If you have a pacemaker:

- Always keep the phone more than 15 cm from your pacemaker when the phone is switched on, in order to avoid potential interference.
- Do not carry the phone in a breast pocket.
- Use the ear opposite to the pacemaker to minimize the potential interference.
- Switch off your phone if you suspect that interference is taking place.

36 Safety & Precaution



Hearing aids

If you are a user of a hearing aid, consult your physician and hearing aid manufacturer to learn whether your particular device is susceptible to cellular phone interference.

How to prolong the battery life of your phone

To have your mobile phone function properly, sufficient battery power is important. For the power-saving purpose, do the following, if applicable:

- Turn off the Bluetooth function of your phone.
- Set the backlight level and duration of your phone to a low value.
- Turn on the auto keypad lock, turn off the key sounds, tap vibration, or vibration alerts.
- Establish GPRS connection when needed. Otherwise, your phone will keep searching for GPRS connection, and drain your battery power.
- Turn off your phone if there is no coverage. Otherwise, the phone will keep searching for network, and drain your battery power.

Troubleshooting

The phone does not switch on

Remove/reinstall the battery. Then charge the phone until the battery icon stops scrolling. Unplug the charger and try to switch the mobile on.

The display shows BLOCKED when you switch on the phone

Somebody tried to use your phone but didn't know the PIN code nor the unblocking code (PUK). Contact your service provider.

The display shows IMSI failure

This problem is related to your subscription. Contact your operator.

Your phone doesn't return to idle screen

Long press the hang-up key or switch off the phone, check that the SIM card and the battery are installed correctly and switch it on again.



The network symbol is not displayed

The network connection is lost. Either you are in a radio shadow (in a tunnel or between tall buildings) or you are outside the network coverage area. Try from another place, try to reconnect to the network (especially when abroad), check that the antenna is in place if your mobile has an external antenna, or contact your network operator for assistance/information.

The display doesn't respond (or the display responds slowly) to key presses

The display responds more slowly at very low temperatures. This is normal and does not affect the operation of the phone. Take the phone to a warmer place and try again. In other cases please contact your phone supplier.

Your battery seems to over heat

You might be using a charger that was not intended for use with your phone. Make sure you always use the Philips authentic accessory shipped with your phone.

Your phone doesn't display the phone numbers of incoming calls

This feature is network and subscription dependent. If the network doesn't send the caller's number, the phone will display Call 1 or Withheld instead. Contact your operator for detailed information on this subject.

You can't send text messages

 
Some networks don't allow message exchanges with other networks. First check that you have entered the number of your SMS centre, or contact your operator for detailed information on this subject.

You can't receive and/or store JPEG pictures

A picture may not be accepted by your mobile phone if it is too large, if its name is too long, or if it doesn't have the correct file format.

You feel that you have missed some calls

Check your call divert options.



When charging, the battery icon shows no bar and the outline is flashing

Only charge the battery in an environment where the temperature does not go below 0°C (32°F) or above 50°C (113°F). In other cases please contact your phone supplier.

The display shows SIM failure

Check that the SIM card has been inserted correctly. If the problem persists, your SIM card may be damaged. Contact your operator.

When attempting to use a feature in the menu, the display shows NOT ALLOWED

Some features are network dependent. They are only available, therefore, if the network or your subscription supports them. Contact your operator for detailed information on this subject.

The display shows INSERT YOUR SIM CARD

Check that the SIM card has been inserted correctly. If the problem persists, your SIM card may be damaged. Contact your operator.

The autonomy of your phone seems lower than indicated on the user guide

 
 
The autonomy is linked to your settings (e.g., ringer volume, backlight duration) and the features you use. To increase the autonomy, and whenever possible, you must deactivate features you do not use.

Your phone doesn't work well in your car

A car contains many metallic parts that absorb electromagnetic waves which can affect the phone's performance. A car kit is available to provide you with an external antenna and enables you to make and receive phone calls without handling the handset.

Note:

- Check with the local authorities whether or not you are allowed to use the phone while driving.





Your phone is not charging

If the battery is completely flat, it might take several minutes of pre-charge (up to 5 minutes in some cases) before the charging icon is displayed on the screen.

The picture captured with the phone camera is not clear
Make sure that the camera lens on both sides is clean.

Trademark Declaration

Android Android is a trademark of Google, Inc.

Bluetooth™ Bluetooth™ is a trade-mark owned by telefonaktiebolaget L M Ericsson, Sweden and licensed to Philips.

Philips PHILIPS and PHILIPS' Shield Emblem are registered trademarks of Koninklijke Philips Electronics N.V., manufactured by Shenzhen Sang Fei Consumer Communications Co., Ltd. Under license from Koninklijke Philips Electronics N.V..

Specific Absorption Rate Information

International standards
THIS MOBILE PHONE MEETS THE INTERNATIONAL RECOMMENDATIONS FOR EXPOSURE TO RADIO WAVES

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) energy defined by the international standards. These recommendations have been established by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) and, the Institute of Electrical and Electronics Engineers (IEEE) that forecast a substantial safety margin for assuring the protection of all persons, regardless of age and health.

38 Safety & Precaution

 
 
 
The exposure recommendations for mobile phones use a measurement unit known as the Specific Absorption Rate (SAR). The SAR limit recommended by the ICNIRP for the mobile phones used by the general public is **2.0W/kg averaged over ten grams of tissue and, is 1.6W/kg averaged over one gram of tissue** by IEEE Std 1528 for the head.

Tests for SAR have been conducted using recommended operating positions with the mobile phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR levels of the mobile phone while operating are generally below the maximum SAR value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station antenna, the lower the power output.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the international protection standards for exposure to radio waves.

The highest SAR value for this W732 model phone when tested for compliance against the standard was 0.384 W/kg for ICNIRP recommendation.

For limiting the radio waves exposure, it is recommended to reduce the mobile phone call duration or to use a headset. The purpose of those precautions is to take the mobile phone away from the head and the body.





Declaration of Conformity

We,
**Shenzhen Sang Fei Consumer
Communications Co., Ltd.**
11 Science and Technology Road,
Shenzhen Hi-tech Industrial Park,
Nanshan District, Shenzhen 518057
China

declare under our sole responsibility that the product

Philips W732
Philips GSM (900/1800/1900MHz) WCDMA(2100MHz)
TAC number: 86485401

to which this declaration relates, is in conformity with the following
Standards:

- SAFETY: EN 60950-1:2006+A11:2009+A1:2010
IEC 60950-1:2005+A1:2010
- HEALTH: EN 50360:2001
EN 62209-1:2006
- EMC: ETSI EN 301 489-1 v1.8.1
ETSI EN 301 489-7 v1.3.1
ETSI EN 301 489-17 v2.1.1
ETSI EN 301 489-24 v1.5.1
ETSI EN 301 511 v9.0.2
- Radio: ETSI EN 301 908-1 v4.2.1
ETSI EN 301 908-2 v4.2.1
ETSI EN 300 328 v1.7.1

We hereby declare that (all essential radio test suites have been carried out and that) the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The Conformity assessment procedure referred to in Article 10 and detailed in Annex III or IV of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(es):

British Approvals Board for Telecommunications TUV SUD Group

Balfour House Churdhfield Road-walton-on-Thames Surrey - KT12 2TD

United Kingdom

Identification mark: CE 0168
Februaty 15th, 2012

Quality Manager

