

## ***User Guide***



**Samsung Epic™ 4G**  
a GALAXY S™ phone

***[www.sprint.com](http://www.sprint.com)***

©2011 Sprint. SPRINT and the logo are trademarks of Sprint.  
Other marks are the property of their respective owners.

7/12/11





**Consejo:** Para encontrar esta guía para usuarios en español, por favor visita a [www.sprint.com](http://www.sprint.com) y haz clic en **Support > Devices**.

To find this user guide in Spanish, please visit [www.sprint.com](http://www.sprint.com) and click **Support > Devices**.

**Important Privacy Message** – Sprint's policies often do not apply to third-party applications. Third-party applications may access your personal information or require Sprint to disclose your customer information to the third-party application provider. To find out how a third-party application will collect, access, use, or disclose your personal information, check the application provider's policies, which can usually be found on their website. If you aren't comfortable with the third-party application's policies, don't use the application.

**Open Source Software** – Some software components of this product incorporate source code covered under GNU General Public License (GPL), GNU Lesser General Public License (LGPL), OpenSSL License, BSD License and other open source licenses. To obtain the source code covered under the open source licenses, please visit:

<http://opensource.samsungmobile.com/index.jsp>.

This device uses open source software. Press  >  >  > **About phone > Legal information** on the device for more details.

# Table of Contents

---

*Tip:* Looking for something? If you don't see it in the headings listed here, try the Index on page 252.

<b>Introduction</b>	<b>i</b>
<b>Your Device's Menu</b>	<b>i</b>
<b>Section 1: Getting Started</b>	<b>1</b>
<b>1A. Setting Up Service</b>	<b>2</b>
Setting Up Your Device	2
Activating Your Device	5
Setting Up Your Voicemail	6
Sprint Account Passwords	6
Getting Help	7
<b>Section 2: Your Device</b>	<b>9</b>
<b>2A. Device Basics</b>	<b>10</b>
Your Device	11
Viewing the Display Screen	15
Turning Your Device On and Off	18
Battery and Charger	19
Device Function Keys	23

Navigation and Customization	27
Displaying Your Phone Number	47
Entering Text Using the Onscreen Keyboards	47
Entering Text Using the Samsung Keypad	48
Entering Text Using Swype	54
Entering Text Using the QWERTY Keyboard	59
Creating a Google Account	63
<b>2B. Making and Answering Calls</b>	<b>64</b>
Making Calls	64
Dialing Options	65
Answering Calls	66
Missed Call Notification	66
Calling Emergency Numbers	67
In-Call Options	68
End-of-Call Options	69
Additional Calling Options	70
Saving a Phone Number	70
Finding a Phone Number	71
Dialing From the Contacts List	72
Speed Dialing	72
Plus (+) Code Dialing	73

## **2C. Settings ..... 74**

Sound Settings .....	74
Display Settings .....	77
Language Settings .....	80
Location Settings .....	80
Synchronizing Accounts .....	81
Search Settings .....	85
Call Settings .....	86
Airplane Mode .....	86
TTY Use With Sprint Service .....	87
Security Settings .....	88

## **2D. Logs ..... 96**

Viewing Call Logs .....	96
Logs Options .....	97
Making a Call From Logs .....	99
Saving a Number From Logs .....	99
Altering a Number From Logs .....	100
Erasing the Logs .....	100

## **2E. Contacts ..... 101**

Creating a New Contacts Entry .....	101
Saving a Phone Number .....	103

Confirming Contact Synchronization .....	103
Groups .....	105
Contacts Menu Options .....	106
Contacts Entry Options .....	107
Editing a Contacts Entry .....	108
Adding a Number to a Contacts Entry .....	108
Editing a Contacts Entry's Number .....	109
Sending Contacts .....	109
Assigning a Picture to an Entry .....	110
Deleting Entries .....	110
Adding Entries to Your Favorites .....	111
Adding Facebook Content to your Contacts ..	111

## **2F. Calendar & Tools ..... 114**

Before You Begin .....	114
Calendar .....	114
My Files .....	120
Memo .....	121
Clock .....	121
Calculator .....	124
Updating Your Device Firmware .....	125
Updating Your Android Operating System ...	128
Updating Your Profile .....	128



Updating Your PRL .....	128
<b>2G. Voice Services .....</b>	<b>129</b>
Voice Dialing .....	129
Opening Menus With Voice Dialer .....	131
Text-to-Speech .....	131
Voice Search .....	132
<b>2H. microSD Card .....</b>	<b>133</b>
Your Device's microSD Card and Adapter ...	133
Connecting Your Device to Your Computer ..	135
microSD Card Settings .....	139
Important Connection Information .....	140
<b>2I. Camera .....</b>	<b>141</b>
Taking Pictures .....	141
Recording Videos .....	147
<b>2J. Bluetooth .....</b>	<b>152</b>
Turning Bluetooth On and Off .....	152
Using the Bluetooth Settings Menu .....	153
Pairing Bluetooth Devices .....	154
Sending Contacts via Bluetooth .....	156
Disconnecting Bluetooth Connection During an Active Call .....	157

<b>Section 3: Sprint Service .....</b>	<b>159</b>
<b>3A. Sprint Service: The Basics .....</b>	<b>160</b>
Visual Voicemail .....	160
Text Messaging (SMS) .....	166
Multimedia Messaging (MMS) .....	168
Caller ID .....	172
Call Waiting .....	173
Making a 3-Way Call .....	173
Call Forwarding .....	174
Roaming .....	175
<b>3B. Web and Data Services .....</b>	<b>179</b>
Getting Started With Data Services .....	179
Navigating the Web .....	181
Wi-Fi .....	188
4G Services .....	191
Email .....	194
Using the Android Market .....	208
Applications .....	209
<b>3C. Entertainment: TV and Music .....</b>	<b>215</b>
DivX .....	215
Media Hub .....	218

Sprint TV .....	221
Music .....	222
Streaming Music .....	224
YouTube .....	225
AllShare .....	225
<b>3D. GPS Navigation .....</b>	<b>228</b>
GPS Services .....	228
Google Maps .....	228
TeleNav GPS .....	230
Navigation .....	231

## **Section 4: Safety and Warranty Information .....**

<b>4A. Important Safety Information .....</b>	<b>234</b>
General Precautions .....	234
Maintaining Safe Use of and Access to Your Phone .....	235
Using Your Phone With a Hearing Aid Device .....	236
Caring for the Battery .....	238
Radio Frequency (RF) Energy .....	239
Samsung Mobile Products and Recycling ...	241
Owner's Record .....	242

User Guide Proprietary Notice .....	242
<b>4B. Manufacturer's Warranty .....</b>	<b>243</b>
Manufacturer's Warranty .....	243
<b>Index .....</b>	<b>252</b>

## Introduction

---

This **User Guide** introduces you to Sprint® service and all the features of your new device. It's divided into four sections:

- ◆ Section 1: Getting Started
- ◆ Section 2: Your Device
- ◆ Section 3: Sprint Service Features
- ◆ Section 4: Safety and Warranty Information

**Note:** Because of updates in your device's software, this printed guide may not be the most current version for your device. Visit [www.sprint.com](http://www.sprint.com) and sign on to **My Sprint** to access the most recent version of the user guide.







**WARNING:** Please refer to the **Important Safety Information** section on page 234 to learn about information that will help you safely use your device. Failure to read and follow the Important Safety Information in this device guide may result in serious bodily injury, death, or property damage.

## Your Device's Menu


---


The following table outlines your device's main menu structure. For more information about using your device's menus, see "Navigation and Customization" on page 27.






From the Home screen, press  to open the menu:


- Add (  )
- Wallpaper (  )
- Search (  )
- Notifications (  )
- Edit (  )
- Settings (  )


Tap these onscreen buttons to reveal these additional options and features.


Device menus with additional options ("sub-options") appear with  adjacent to the list entry.


 <b>&gt; Add</b>	
<b>1: Widgets</b>	
1: Buddies now	2: Calendar
3: Calendar Clock	4: Facebook
5: Feeds and Updates	6: Google Search
7: Home screen tips	8: Latitude
9: Market	10: NASCAR
11: News & Weather	12: Picture frame
13: Power control	14: Program Monitor
15: Rate Places	16: Sprint Football Live
17: Sprint ID	18: Sprint Tutorial #1
19: Sprint Tutorial #2	20: Sprint Tutorial #3
21: Sprint Tutorial #4	22: Sprint Tutorial #5
23: Sprint TV	24: Voicemail
25: Y! Finance Clock	26: YouTube
<b>2: Shortcuts</b>	
1: Applications	2: Bookmark
3: Contact	4: Direct dial
5: Direct message	6: Directions & Navigation
7: Email	8: Latitude
9: Settings	
<b>3: Folders</b>	
1: New folder	2: All contacts
3: Contacts with phone numbers	
4: Facebook Phonebook	
5: Received list from Bluetooth	
6: Recent documents	7: Starred contacts

<b>4: Wallpapers</b>	
1: Gallery	2: ID wallpapers
3: Live wallpapers	4: Wallpapers
 <b>&gt; Wallpaper</b>	
<b>1: Gallery</b>	
<b>2: ID wallpapers</b>	
<b>3: Live wallpapers</b>	
<b>4: Wallpapers</b>	
 <b>&gt; Search</b>	
 <b>&gt; Notifications</b>	
 <b>&gt; Edit</b>	
 <b>&gt; Settings &gt; Wireless and network</b>	
<b>1: Airplane mode (On/Off)</b>	
<b>2: Wi-Fi settings</b>	
1: Wi-Fi (On/Off)	2: Network notification (On/Off)
3: Add Wi-Fi network	
<b>3: 4G settings</b>	
1: 4G (On/Off)	2: Network notification (On/Off)

<b>4: Bluetooth settings</b>
1: Bluetooth (On/Off)      2: Device name 3: Discoverable (On/Off)    4: Scan devices 5: <detected Bluetooth devices>
<b>5: Tethering</b>
1: USB tethering (On/Off)
<b>6: VPN settings</b>
1: Add VPN
<b>7: Mobile networks</b>
1: 3G Data (On/Off)
<b>8: Roaming</b>
1: Roaming mode (Sprint Only/Automatic) 2: Roaming Settings Domestic (Voice/Data) 3: Roaming Settings International (Voice/Data) 4: Roaming guard Domestic (Voice/Data) 5: Roaming guard International (Voice/Data)
 <b>&gt; Settings &gt; Call settings</b>
<b>1: Reject with message</b>
<b>2: North American dialing (On/Off)</b>
<b>3: International Dialing</b>
<b>4: DDTM (On/Off)</b>

<b>5: TTY</b>
1: TTY Off                      2: TTY HCO 3: TTY VCO                    4: TTY Full
<b>6: Voicemail settings</b>
1: Voicemail-to-Text      2: Personalize voicemail 3: Notifications            4: Pictures (On/Off) 5: Transcription font size 6: Speakerphone (On/Off) 7: Display name            8: Auto forward to email 9: Check for update        10: Help 11: About Voicemail
 <b>&gt; Settings &gt; Sound</b>
<b>1: Silent mode (On/Off)</b>
<b>2: Vibrate</b>
1: Always                      2: Never 3: Only in silent mode      4: Only when not in silent mode
<b>3: Volume</b>
1: Incoming call volume    2: Media volume 3: System volume            4: Notification volume
<b>4: Voice call ringtone</b>
<b>5: Notification ringtone</b>
<b>6: Audible touch tones (On/Off)</b>

7: Audible selection (On/Off)	
8: Screen lock sounds (On/Off)	
9: Haptic feedback (On/Off)	
10: Vibration intensity	
 > <b>Settings &gt; Display</b>	
1: Brightness	
2: Auto-rotate screen (On/Off)	
3: Animation	
1: No animation 3: All animations	2: Some animations
4: Screen timeout	
1: 15 seconds 3: 1 minute 5: 10 minutes	2: 30 seconds 4: 2 minutes
5: Keyboard timeout	
1: 3 seconds 3: 15 seconds	2: 6 seconds 4: Same as Screen timeout
6: Power saving mode On/Off)	
7: Horizontal calibration	

 > **Settings > Location and security**

**My location**

1: Use wireless networks (On/Off)

2: Use GPS satellites (On/Off)

**Screen unlock settings**

1: Set screen lock

1: None	2: Pattern
3: PIN	4: Password

**Passwords**

1: Visible passwords (On/Off)

**Device administration**

1: Select device administrators



**Credential storage**




1: Use secure credentials (On/Off)

2: Install encrypted certificates



3: Set password

4: Clear storage

 <b>&gt; Settings &gt; Applications</b>
1: Unknown sources (On/Off)
2: Quick launch
3: Manage applications
4: Running services
5: Memory usage
6: Battery use
7: Development
1: USB debugging (On/Off) 2: Stay awake (On/Off) 3: Allow mock locations (On/Off)
 <b>&gt; Settings &gt; Accounts and sync</b>
<b>General sync settings</b>
1: Background data (On/Off)
2: Auto-sync (On/Off)
<b>Manage accounts</b>

 <b>&gt; Settings &gt; Privacy</b>
<b>Personal data</b>
1: Factory data reset
 <b>&gt; Settings &gt; Storage</b>
<b>SD card</b>
1: Total space
2: Available space
3: Mount/Unmount SD card
4: Format SD card (On/Off)
<b>System storage</b>
1: Available space
 <b>&gt; Settings &gt; Locale and text</b>
1: Select locale
1: English                      2: Español
<b>Text settings</b>
1: Select input method
1: Samsung keypad            2: Swype

<b>2: Swype (On/Off)</b>
<b>3: Swype (settings)</b>
1: Language (US English//Español) 2: Audio feedback (On/Off) 3: Vibrate on keypress (On/Off) 4: Enable tip indicator (On/Off) 5: Word suggestion 6: Auto-spacing (On/Off) 7: Auto-capitalization (On/Off) 8: Show complete trace (On/Off) 9: Speed vs. accuracy 10: Swype help                      11: Tutorial 12: Version
<b>4: Samsung keypad (On/Off)</b>
<b>5: Samsung keypad (settings)</b>
1: Portrait keypad types      2: Input languages 3: XT9 (On/Off)                      4: XT9 advanced settings 5: Keypad sweeping (On/Off) 6: Auto-capitalization (On/Off) 7: Handwriting settings      8: Voice input (On/Off) 9: Auto-full stop (On/Off)      10: Tutorial

<b>6: Device keyboard (settings)</b>
1: Auto-replace (On/Off)    2: Auto-cap (On/Off) 3: Auto-punctuate (On/Off)
 <b>&gt; Settings &gt; Voice input and output</b>
<b>1: Voice recognition settings</b>
1: Language 2: SafeSearch (Off/Moderate/Strict) 3: Block offensive words (On/Off) 4: Personalized recognition (On/Off) 5: Google Account dashboard
<b>2: Text-to-speech settings</b>
1: Listen to an example 2: Always use my settings (On/Off) 3: Default engine (Pico TTS) 4: Install voice data                      5: Speech rate 6: Language                                      7: Pico TTS
 <b>&gt; Settings &gt; Accessibility</b>
<b>1: Accessibility (On/Off)</b>
<b><i>The power key</i></b>
<b>1: The power key ends call (On/Off)</b>





## > **Settings > Date and time**

1: Automatic (On/Off)

2: Set date

3: Select time zone

4: Set time

5: Use 24-hour format (On/Off)

6: Select date format

1: MM/DD/YYYY

2: DD/MM/YYYY

3: YYYY/MM/DD



## > **Settings > About phone**

1: System updates

1: Update Firmware

2: Update Profile

3: Update PRL

4: Update Android

2: Status

1: Battery status

2: Phone number

3: MSID

4: PRL version

5: MEID

6: Network

7: Signal strength

8: Service state

9: Roaming

10: User name

11: Mobile network state

12: 4G MAC address

13: Wi-Fi MAC address

14: Bluetooth address

15: Up time

3: Battery use

4: Legal information

1: Open source licenses

2: License settings

3: Google legal

4: Privacy Alert from Sprint

5: System tutorial

6: Model number

7: Firmware version

8: Baseband version

9: Kernel version

10: Build number

11: Hardware version

## **In Use Menu**

1: Add call/Merge

2: Dialpad

3: End call

4: Speaker (On/Off)

5: Mute/Unmute

6: Bluetooth

While in an active call, press  to display the following options:

1: Contacts (image)

2: Memo

## ***Quick Search Box***

### **1: Searchable items**

1: Web (On/Off)	2: Apps (On/Off)
3: Contacts (On/Off)	4: Memo (On/Off)
5: Messaging (On/Off)	6: Music (On/Off)
7: Voice Search (On/Off)	8: Voicemail (On/Off)

### **2: Clear search shortcuts**

*Section 1*  
***Getting Started***




## 1A. Setting Up Service

- ◆ Setting Up Your Device (page 2)
- ◆ Activating Your Device (page 5)
- ◆ Setting Up Your Voicemail (page 6)
- ◆ Sprint Account Passwords (page 6)
- ◆ Getting Help (page 7)

### Setting Up Your Device

#### 1. Install the battery.


- Remove the battery from its packaging.
- Grasp the device firmly and locate the cover release latch.
- Place your fingernail in the opening and firmly “pop” the cover off the device (similar to a soda can).

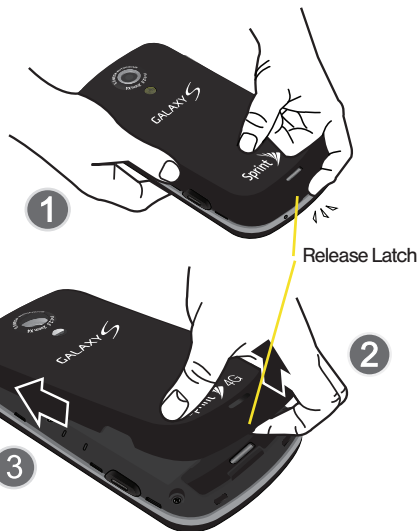






- Insert the battery into the opening in the back of the device, making sure the connectors align. Gently press down to secure the battery.

- Position the battery cover over the battery compartment and press down until you hear a click.



2. Press and hold  to turn the it on.
  - If your device is activated, it will turn on, search for Sprint service, and enter standby mode.




3. Make your first call.
  - Press  to access the Home screen and touch  to access the onscreen keypad.
  - Use the onscreen keypad to enter a phone number and touch .
    - If your device is in PowerSave mode, press  or  to reactivate the screen.

**WARNING:** If your device has a touchscreen display, please note that a touchscreen responds best to a light touch from the pad of your finger. Using excessive force or a metallic object when pressing on the touchscreen may damage the tempered glass surface and void the warranty. See "4B. Manufacturer's Warranty" on page 243.

**Note:** Your device's battery should have enough charge for your device to turn on and find a signal, but you should fully charge your battery as soon as possible.

## Unlocking Your Device Screen

- To unlock your device from this screen, touch and drag the lock icon up or slide the QWERTY keyboard out.

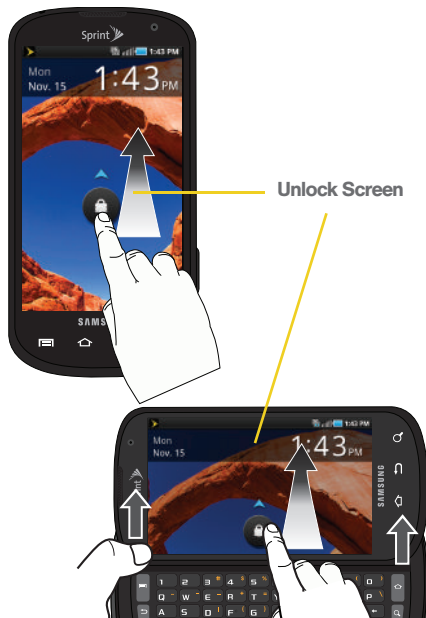

## Activating Your Device

- If you purchased your device at a **Sprint Store**, it is probably activated and ready to use.
- If you received your device in the mail and it is for a new **Sprint account or a new line of service**, it is designed to activate automatically. To confirm your activation, make a phone call.
- If you received your device in the mail and you are **activating a new device for an existing number on your account**, (you're swapping phones), you can activate on your computer online or directly on your phone.

### ■ Activate on your computer:

- Go to [sprint.com/activate](http://sprint.com/activate) and follow the instructions.

### ■ Activate on your phone:

**Important:** For security reasons, you will need your Sprint phone number and PIN to use this activation method.

1. Turn on your new phone. (Make sure the old one is turned off.) Your phone will automatically attempt Hands-Free Activation.



**Note:** Your phone will need to complete one hands-free activation attempt before you can continue.

2. Tap **Activate** to override auto-activation and start the manual activation wizard.

**Note:** If you don't override Hands-Free Activation, your phone will attempt to auto activate five times. Wait for **Retry** to appear on your screen. Tap **Retry** and then tap **Activate**.

3. Follow the on-screen prompts to complete the activation process.
4. After you have completed the wizard, make a phone call to confirm your activation.

If your device is still not activated or you do not have access to the Internet, contact Sprint Customer Service at **1-888-211-4727** for assistance.

**Tip:** Do not press  while the device is being activated. Pressing  cancels the activation process.

**Note:** If you are having difficulty with activation, contact Sprint Customer Service by dialing **1-888-211-4727** from any other phone.

## Setting Up Your Voicemail

---

Your device automatically transfers all unanswered calls to your voicemail, even if your device is in use or turned off. You should set up your Sprint Voicemail and personal greeting as soon as your device is activated. Always use a password to protect against unauthorized access.

1. From the phone standby mode, touch and hold **100**.
2. Follow the system prompts to:
  - Create your password.
  - Record your name announcement.
  - Record your greeting.

### **Note: Voicemail Password**

Sprint strongly recommends that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your device is able to access your voicemail messages.

For more information about using your Visual Voicemail, see “Visual Voicemail” on page 160.

## Sprint Account Passwords

---

As a Sprint customer, you enjoy unlimited access to your personal account information, your voicemail account, and your data services account. To ensure that no one else has access to your information, you will need to create passwords to protect your privacy.

### Account Username and Password

If you are the account owner, you will create an account username and password when you sign on to [www.sprint.com](http://www.sprint.com). (Click **Need to register for access?** to get started.) If you are not the account owner (if someone else receives the bill for your Sprint service), you can get a sub-account password at [www.sprint.com](http://www.sprint.com).

### Voicemail Password

You'll create your voicemail password (or passcode) when you set up your voicemail. See “Setting Up Your Voicemail” on page 6 for more information on your voicemail password.



## Data Services Password

With your Sprint device, you may elect to set up an optional data services password to control access and authorize Premium Service purchases.

For more information, or to change your passwords, sign on to [www.sprint.com](http://www.sprint.com) or call Sprint Customer Service at **1-888-211-4727**.

## Getting Help













### Managing Your Account

Online: [www.sprint.com](http://www.sprint.com)

- Access your account information.
- Check your minutes used (depending on your Sprint service plan).
- View and pay your bill.
- Enroll in Sprint online billing and automatic payment.
- Purchase accessories.
- Shop for the latest Sprint phones.
- View available Sprint service plans and options.

- Learn more about data services and other products like Sprint Picture Mail, games, ringers, screen savers, and more.

### From Your Sprint Phone Keypad

- Tap    to check minute usage and account balance.
- Tap    to make a payment.
- Tap    to add a new line of service, upgrade your phone, purchase accessories, or access other account services.
- Tap    to access a summary of your Sprint service plan or get answers to other questions.

### From Any Other Phone

- Sprint Customer Service: **1-888-211-4727**.
- Business Customer Service: **1-800-927-2199**.

## *Sprint 411*

Sprint 411 gives you access to a variety of services and information, including residential, business, and government listings; movie listings or showtimes; driving directions, restaurant reservations, and major local event information. You can get up to three pieces of information per call, and the operator can automatically connect your call at no additional charge.

There is a per-call charge to use Sprint 411, and you will be billed for airtime.

► Tap    .

## *Sprint Operator Services*

Sprint Operator Services provides assistance when you place collect calls or when you place calls billed to a local telephone calling card or third party.

► Tap  .

For more information or to see the latest in products and services, visit us online at [www.sprint.com](http://www.sprint.com).



*Section 2*  
***Your Device***



## 2A. Device Basics

- ◆ Your Device (page 11)
- ◆ Viewing the Display Screen (page 15)
- ◆ Turning Your Device On and Off (page 18)
- ◆ Battery and Charger (page 19)
- ◆ Device Function Keys (page 23)
- ◆ Navigation and Customization (page 27)
- ◆ Displaying Your Phone Number (page 47)
- ◆ Entering Text Using the Onscreen Keyboards (page 47)
- ◆ Entering Text Using the Samsung Keypad (page 48)
- ◆ Entering Text Using Swype (page 54)
- ◆ Entering Text Using the QWERTY Keyboard (page 59)
- ◆ Creating a Google Account (page 63)

**Tip: Device Software Upgrades** – Updates to your device's software may become available from time to time. Sprint will automatically upload critical updates to your device.

- You can also use the menu to manually check for and download updates. Press  >  and tap **Settings > About phone > System updates > Update Firmware** or **Update Android** to search for and download available updates.

## Your Device




## Key Functions

1. **Proximity Sensor** detects how close an object is to the surface of the screen. This is typically used to detect when your face is pressed up against the screen, such as during a phone call.
  - While talking on the phone, the sensor detects talk activity and locks the keypad to prevent accidental key presses.
2. **Status Bar Icons** provide information about your device's status and options, such as signal strength, wireless technology, roaming, ringer setting, messaging, and battery charge.
3. **Touchscreen Display** displays all the information needed to operate your device, such as the call status, the Contacts list, and the date and time. Also provides one-touch access to all of your features and applications.
4. **HOME Key** returns you to the Home screen. Press and hold to open the recently-used applications window.


5. **MENU Key** allows you to access your device's main functions menu: Add, Wallpaper, Search, Notifications, Edit, and Settings. While in a menu, press to open a list of actions available from the current screen or onscreen option.
  - During an active call, press to open additional call options such as Contacts or Memo.
6. **Camera Lens**, as part of the built-in camera, this 5.0 megapixel camera lets you take pictures and videos.
7. **Flash**, as part of the built-in camera, provides an additional light source for pictures during low-light conditions.
8. **Microphone** allows other callers to hear you clearly when you are speaking to them.
9. **External Speaker** lets you hear the different ringers and sounds. You can mute the ringer when receiving incoming calls by pressing the volume button. The speaker also lets you hear the caller's voice in speakerphone mode.
10. **SEARCH Key** displays the Quick Search box that can be used to search for a key term both on the device and online. It's the ultimate search field (page 24).
  - For example, entering the word "Pa", will display any matching entries from your device's Contacts list, current device applications, online Android/Google apps, or from any online Web page via Google™ search.
  - Press and hold to launch **Voice Search** where you can initiate a Google™ search by verbally entering a text string. The device recognizes your spoken words and initiates a Web search.
11. **BACK Key** returns you to the previous menu, closes a dialog box, or exits an onscreen menu/option.
12. **Light sensor** lets you use the ambient light level to adjust the screen brightness/contrast.
  - In a bright light condition (outdoors), the sensors cause the device to increase the brightness and contrast for better viewing.
  - In dim light conditions, the device increases the screen brightness to compensate.

13. **Self Camera Lens**, for use with the Qik application, take pictures while facing the screen, and allows you to video conference.
14. **Front Indicator Light (LED)** displays a device notification, charging status, or alert.
15. **Earpiece** lets you hear the caller and automated prompts.
16. **Volume Button** allows you to adjust the ringer volume in standby mode, the voice volume during a call, and media playback volume.
17. **Camera Button** lets you activate the camera and camcorder and take pictures and videos.
18. **Charger/Accessory Jack** allows you to connect the phone charger or a USB cable (included).  
**CAUTION!** Inserting an accessory into the incorrect jack may damage the device.
19. **microSD Card Slot** lets you use a microSD card to expand the memory of your phone. (A 16GB SDHC card comes preinstalled in your Epic 4G.)

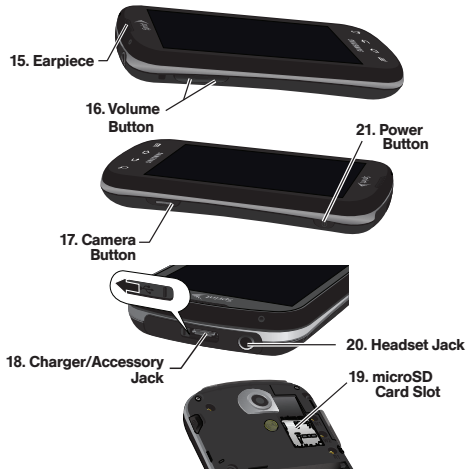


20. **Headset Jack** allows you to plug in an optional headset for convenient, hands-free conversations. **CAUTION!** Inserting an accessory into the incorrect jack may damage the device.
21. **POWER Button** lets you turn the device on or off, or turn off the touchscreen display.
- When the screen is turned off, press once to return to Screen lock mode.
  - While the device is unlocked and not on an active call, press and hold to display the Phone options menu (Silent mode, Airplane mode, Power off).

## Landscape Phone Features

1. **QWERTY Keyboard** provides an alphanumeric character keyboard layout. Lets you enter numbers, letters, and characters, as well as navigate within menus.
2. **Fn Key** (Function) key  lets you enter the alternate character or symbol displayed on each key on the QWERTY keyboard.












3. **Shift Key** lets you toggle alphabet characters between mixed case, uppercase, and lowercase. Character case remains as selected until the Shift key is pressed again.
4. **Smiley Key** (  ) lets you access Smiley icons (Emoticons).
5. **Space Key** lets you add spaces between words and characters.



6. **Navigation Keys** allow you to navigate around your device's menu options while in Landscape mode.
7. **Enter Key** lets you enter additional lines of text.
8. **Function Keys** allows you to access your device's main functions while in Landscape mode (Menu and Back on the left, Home and Search on the right). These buttons function in the same manner as those below the display screen.
9. **Delete Key** deletes characters from the display in text entry mode.

## Viewing the Display Screen

Your device's display screen provides information about your device's status and options. This list identifies the symbols you'll see on your device's display screen:

<i>Status Bar – Service Icons</i>	
	<b>Activation Not Completed</b> – Your automatic device activation process failed, please retry.
	<b>Signal Strength</b> – Shows your current signal strength. (More bars = stronger signal.)
	<b>No Service</b> – Your device cannot find a usable signal.
	<b>Airplane Mode On</b> – Your device will not make or receive calls, or provide data access. Local applications are still available.
	<b>Roaming</b> – Your device is “roaming” off the Nationwide Sprint Network.
	<b>3G Available</b> – Sprint 3G data service is active.
	<b>3G Communicating</b> – Sprint 3G data service is active and communicating. When active, the icon is animated.
	<b>4G Service Available</b> – Sprint 4G is turned on and coverage is available.
	<b>4G Service Communicating</b> – Sprint 4G is turned on and coverage is available although your signal is weak.

### Status Bar – Service Icons



**4G Service Unavailable** – There is no 4G coverage currently unavailable. You are disconnected from the 4G network. (See “4G Services” on page 191.)

### Status Bar – Status Icons



**Call in Progress** – A voice call is in progress. Audio is routed through either the earpiece or external speaker.



**Bluetooth Call in Progress** – A voice call is being routed through a Bluetooth headset.



**Missed Call** – You have missed an incoming call.



**Call Muted** – The device microphone has been muted.



**Speaker** – Speakerphone feature is enabled.



**Battery Strength** – Shows your current battery charge level. (Icon shown is fully charged.)



**Battery Low** – Shows your current battery charge level is very low.S

### Status Bar – Status Icons



**Device Power Critical** – Shows your current battery only has five percent power remaining and will immediately shutdown. Represented as a blinking icon.



**Bluetooth Active** – Bluetooth technology is active and enabled.



**Bluetooth Connected** – Bluetooth technology is active and communicating with an external device.



**GPS Location On** – Device location feature is on and available for location-based services such as GPS Navigation (see page 228).



**GPS Communicating** – Device location feature is on and communicating.









**Wi-Fi Connected** – Wi-Fi is connected, active, and communicating with a Wireless Access Point (WAP).
















**Wi-Fi Connection Issue** – Wi-Fi is active and there is an available open wireless network.



**Sprint Hotspot Active** – The Sprint Hotpost feature has been activated (page 193).

<i>Status Bar – Status Icons</i>	
	<b>microSD Unmounted</b> – The External SD card (internal microSD) has been disconnected (unmounted) from the device and is now ready for either removal or formatting.
	<b>Preparing for Mounting</b> – The External SD card is being prepared for mounting to the device. This is required for communication with the External SD card.
	<b>USB Connection</b> – The device has detected an active USB connection.
	<b>USB Debug Connection</b> – The device has detected an active USB connection and is in a USB Debugging mode.
	<b>Sign-in/Sync Error</b> – There has been an issue with your connection to the Google server, or you were not properly signed into your account. In order to use Google application or sync features, you must set up and sign into an active Google account.
	<b>Silence All</b> – All incoming sounds are turned off.

<i>Status Bar – Status Icons</i>	
	<b>Vibrate Only</b> – The ringer is set to vibrate only.
	<b>Data Synchronization</b> – Application sync is active and synchronization is in progress for Gmail, Calendar, and Contacts.
	<b>Android OS Update Available</b> – A new Android operating system update is available for download.
	<b>System Updates Available</b> – A new system update is available for download.
	<b>Files Downloading</b> – The device is downloading selected files.
	<b>Download Successful</b> – A recent software download was successfully downloaded.
	<b>Calendar Reminder</b> – Shows you have a reminder of an upcoming Calendar event.

<i>Status Bar – Messaging Icons</i>	
	<b>Text Message</b> – You have new text (SMS) or multimedia (MMS) messages.
	<b>Voicemail Message</b> – You have a new voicemail messages.
	<b>Voicemail Message</b> – You have multiple new voicemail messages.
	<b>New Email message</b> – Shows you have received either a new Internet email message or Outlook email message via an Exchange server.
	<b>New Gmail message</b> – Shows you have received a new Gmail message.
	<b>Alarm</b> – You have an alarm event.

## Turning Your Device On and Off

### Turning Your Device On

- Press and hold .



Once your device is on, it may display “Searching for Service.” When your device finds a signal, it enters standby mode – the device’s idle state. At this point, you are ready to begin making and receiving calls.

If your device is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. When a signal is found, your device automatically returns to standby mode.

In Power Save mode, your device searches for a signal periodically without your intervention. You can also initiate a search for Sprint service by pressing any key (when your device is turned on).

*Tip:* The Power Save feature conserves your battery power when you are in an area where there is no signal.

### Turning Your Device Off

1. Press and hold  for two seconds until you see the **Phone options** menu.
2. Tap  **Power off** and then tap **OK** to power off the device.

Your screen remains blank while your device is off (unless the battery is charging).


## Battery and Charger

**WARNING:** Use only Sprint-approved or Samsung-approved batteries and chargers with your device. The failure to use a Sprint-approved or Samsung-approved battery and charger may increase the risk that your device will overheat, catch fire, or explode, resulting in serious bodily injury, death, or property damage.

Sprint-approved or Samsung-approved batteries and accessories can be found at Sprint Stores or through Samsung; or call 1-866-866-7509 to order. They're also available at [www.sprint.com](http://www.sprint.com).

### Battery Capacity

Your device is equipped with a Lithium Ion (Li-Ion) battery. It allows you to recharge your battery before it is fully drained. The battery provides up to 6.0 hours of continuous digital talk time.

At 5% of charge capacity, there are only a few minutes of talk time left, the device sounds an audible alert, displays a critical charge icon () , and then turns off.

**Note:** Long backlight settings, searching for service, vibrate mode, browser use, and other variables may reduce the battery's talk and standby times.

**Tip:** Watch your device's battery level indicator and charge the battery before it runs out of power.

### Installing the Battery

- See "Setting Up Your Device" on page 2.

### Removing the Battery

1. Make sure the power is off so that you don't lose any stored numbers or messages.
2. Grasp the device firmly, locate the cover release latch, and then place your fingernail in the opening and firmly "pop" the cover off the device.
3. Carefully remove the battery from the device.



**WARNING:** Do not handle a damaged or leaking Li-Ion battery as you can be burned.

## Charging the Battery


Keeping track of your battery's charge is important. If your battery level becomes too low, your device automatically turns off, and you will lose any information you were just working on.

*Note:* Although the battery comes partially charged. It is recommended you fully charge the battery before using your device for the first time.

1. Connect the USB cable to the charging head.

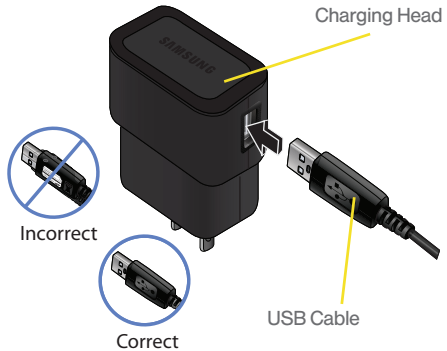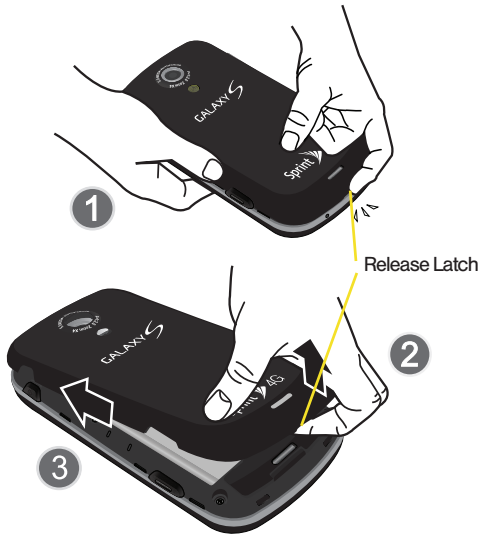

2. Slide open the Charger/Accessory jack cover.
3. Insert the USB cable into the device's Charger/Accessory jack.
4. Plug the charging head into a standard AC power outlet.

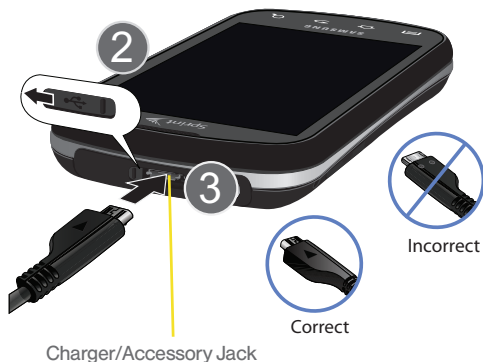

Always use a Sprint-approved or Samsung-approved desktop charger, travel charger, or vehicle power adapter to charge your battery.

**Note:** The front LED turns red to indicate the battery is currently charging.

- Plug the flat end of the charger into the device's charger jack and the other end into an electrical outlet. The device turns on with the screen locked and indicates both its charge state and percent of charge.

With the Sprint-approved Li-Ion battery, you can recharge the battery before it becomes completely run down.

## Extending Your Battery Life

Active applications, light levels, Bluetooth usage, and GPS functionality all act to drain your battery. The following is a list of helpful tips that can help conserve your battery power:

- Reduce your backlight on time. (See “Changing the Backlight Time Length” on page 77.)
- Turn Bluetooth off when not in use. (See “Turning Bluetooth On and Off” on page 152.)


- Turn Wi-Fi off when not in use. (See “Turning Wi-Fi On and Off” on page 189.)
- Turn 4G off when not in use. (See “Turning 4G On and Off” on page 192.)
- Turn off Sprint Hotspot (Wi-Fi hotspot) services when not in use. This is one of the largest drains on your battery as it is not only transmitting a Wi-Fi connection to your devices but is also doing it while using a 4G connection. (See “Sprint Mobile Hotspot” on page 193.)
- Deactivate the GPS when not needed. Most applications using this function will periodically query the GPS satellites for your current location; each query drains your battery. (See “Activating Location Mode” on page 228.)
- Do not wait until your battery is completely depleted before charging your device. Repeating this process of a complete discharge and recharge can over time reduce the storage capacity of any battery.
- Turn off Automatic application sync. (See “Synchronizing Accounts” on page 81.)
- Use the Power Control Widget to deactivate hardware functions such as Wi-Fi, Bluetooth, GPS, Synchronization, or LCD brightness setting. (See “Adding and Removing Widgets” on page 40.)
- Check the Battery use screen to review what features or functions have been consuming your battery resources. (See “Viewing Battery Use” on page 78.)
- Check the Running Services and close any unnecessary applications. (See “Manage Running Services” on page 93.)
- Use the Task Manager feature to end/shutdown background applications that are still running. These minimized applications can, over time, cause your device to “slow down”. (See “Using the Task Manager” on page 94.)
- Animated wallpapers use processing power, memory, and more power. Change your Live Wallpaper to a non-animated Wallpaper gallery or Gallery image. (See “Changing the Display Screen” on page 78.)








## Device Function Keys

The Epic™ 4G comes equipped with four main function keys that can be used on any screen.

### Menu Key

The **Menu** key () activates an available menu function for the current screen or application. When on the Home screen, the following menu options are available:

- **Add** () adds one of the following functions to a selected screen: Widgets, Shortcuts, Folders, and Wallpapers. (See “Customizing Your Home Screen” on page 37.)
- **Wallpaper** () lets you to customize the current screen’s wallpaper image. You can obtain this image from either your Pictures folder, from any of the available images within the device’s Wallpaper gallery, or from the animated Live Wallpapers. (See “Changing the Display Screen” on page 78.)

- **Search** () displays the Google Search box that you can use to search for a key term both on the phone and online. (See “Search Key” on page 24.)
  - For example, entering the word “Pa”, will display any matching entries from your device’s Contacts list, current device applications, online Android/Google apps, or from any online Web page via Google search.
- **Notifications** () allows you to open the notifications panel to provide more detailed information about the current onscreen notification icons. (See “Using the Notifications Panel” on page 45.)
- **Edit** () allows you to add or remove extended screens from your device. You can have up to seven extended screens.

- **Settings** (⚙️) provides quick access to the device's settings menu. (See "2C. Settings" on page 74.)

- The Settings menu can also be accessed by pressing 🏠 and tapping 🗄️ > ⚙️.

## Home Key


The **Home** key (🏠) takes you back to your Home screen (#4 of the 7 total available screens).

## Back Key

The **Back** key (↶) returns you to the previously active screen. If the onscreen keyboard is currently open, this key closes the keyboard.

## Search Key

The **Search** key (🔍) displays the Google Search box that can be used to search for a key term both on the device and online. In some instances, this key opens a search box specific only to the current application.

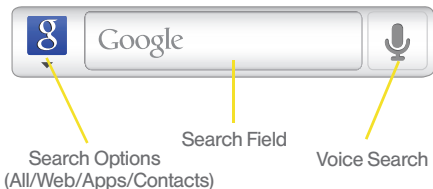

- Press 🔍 to launch the **Google Search** box.



– or –


Press 🏠 and tap 🗄️ > 📄.

- Touch and hold 🎤 to launch the **Voice Search** function.

## Using Your Device to Search

Use the **Google Search** box to manually search for a term on both your device and on the Web.


1. Press  to launch the **Google Search** box.
2. Tap  to select a search area.
  - **All** searches your device, the Web, and the Android Market for your search term.
  - **Web** searches for your term only on the Web using the Google search engine.
  - **Apps** searches for your term only within the Android Market.

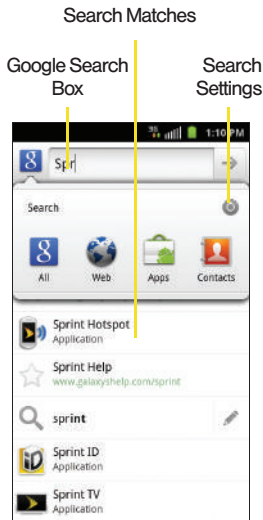


- **Contacts** searches for your term only within your current Contacts entries.


- Search preferences and settings can be configured to display suggestions in a different manner. (See “Search Settings” on page 85.)

*Note:* To hide the onscreen keyboard and see more of your search matches, press .

- **Search Settings** configures the items that are searched against. Example: Web, Apps, Memo, etc.
3. Tap a match from the list of suggestions, phone search results, or previously chosen search matches. Once touched, the item opens in the appropriate application.  
– or –  
Tapping **Voice Search** (  ) lets you speak into your device's microphone to enter a search term.



To search the device and Web by entering text:

1. Press  to launch the **Google Search** box.
2. Use either the QWERTY or onscreen keyboard to enter your search term. (See either “Entering Text Using the Onscreen Keyboards” on page 47 or “Entering Text Using the QWERTY Keyboard” on page 59.)
  - As you type, matching items on your device and matches from Google’s Web search are added to the onscreen list of previously chosen search results.
  - Search preferences and settings can be configured to display suggestions in a different manner. (See “Search Settings” on page 85.)

*Note:* To hide the onscreen keyboard and see more of your search matches, press .

3. Tap a match from the list of suggestions, phone search results, or previously chosen search matches. Once touched, the item opens in the appropriate application.

To search the device and Web via Voice Search:

1. Press  and then tap  (on the side of the **Google Search** box).

*Note:* Touching  in an application’s search box, searches the application by voice, not the Web.

2. From the open dialog, say what you want to search for.
3. Once complete, the Voice Search application analyzes your spoken words and displays a list of matching keyword terms.

*Note:* It is recommended that you use this feature in a quiet room. Loud ambient or background noises can confuse the application and result in inaccurate search results.

To use additional Voice Search functions:

From an open Voice Search dialog, speak the following words to access additional features:

- **voice actions** allows you to search the web by speaking the search parameters.
- **send text** allows you to open the Messaging screen.

- **navigate to** allows you to receive directions via Google maps™. Use either an Address name, Business name, business type, or other navigation information to get the desired directions.
- **call** allows you to open the phone dial and automatically
- **send email** allows you to open your email account and compose a new email message.
- **map of** allows you to view a map of an area via Google maps. Use either an Address name, Business name, zip code, or other navigation information.
- **go to** allows you to navigate to any component of your device.
- **note to self** allows you to search for a note save to your Memo Pad.
- **directions to** allows you to receive a list of websites that contain the spoken address via Google™. Use an Address name for the desired result list.

## Navigation and Customization

The Epic 4G™ is touch-sensitive, and this allows you to not only select an onscreen option with a single tap, but also scroll through long menu lists. Simply slide up and down through the display with your fingertip.

*Tip:* Some menu options are also accessed by pressing and holding an onscreen item, such as a Contact entry from the Contacts tab.

### Getting Around Your Device



#### Move Around Your Device's Menus and Screens

- **Tap:** When you want to type using the onscreen keyboard, select items such as application and settings icons, or press onscreen buttons, simply tap them with your finger. A light touch works best.
- **Press and hold:** To open the available options for an item (for example, a link in a Web page), simply press and hold the item.
- **Flick:** Move your finger in lighter, quicker strokes than swiping. This finger gesture is always used in a vertical motion, such as when flicking through contacts or a message list.

Tap



Press and Hold

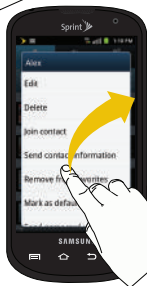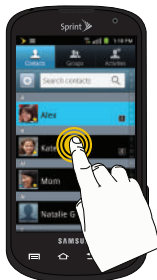


Flick

- **Swipe or slide:** Quickly drag your finger vertically or horizontally across the screen.
- **Drag:** Press and hold your finger with some pressure before you start to move it. Do not release your finger until you have reached the target position.

Swipe, Slide or Drag



Rotate

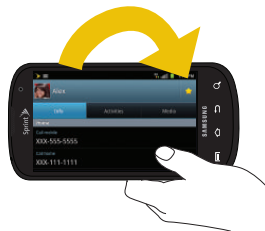

Pinch




Spread

- **Rotate:** Automatically change the screen orientation from portrait to landscape by turning the device sideways.
- **Pinch:** “Pinch” the screen using your thumb and forefinger to zoom out when viewing a picture or a Web page. (Move fingers inward to zoom out.)
- **Spread:** “Spread” the screen using your thumb and forefinger to zoom in when viewing a picture or a Web page. (Move fingers outward to zoom in.)

## Home Screen Overview




The Home screen is the starting point for many applications and functions, and it allows you to add items like application icons, shortcuts, folders, or widgets to give you instant access to information and applications.


This is the default page and accessible from any menu by pressing .

- **Status bar:** located at the top of the screen, displays both Notification and Status icons.




- **Notification area:** displays icons associated with end-user notifications such as: email messages, calls (missed, call in progress), new voicemail, upcoming event, USB connection, emails, and Text/MMS messages. (See “Using the Notifications Panel” on page 45.)


- These notifications appear at the top-left of the screen (within the Status bar) and display important user information.
- This information can be accessed by either swiping down from the Status bar (page 45) or by accessing the Notifications panel  > **Notifications** (  ).
- **Status area:** displays icons associated with the status of the device such as communication, coverage, Bluetooth, 3G/4G and Wi-Fi communication, battery levels, GPS, etc.
- **Home Screen:** a customizable screen (  ) that provides information about notifications and device status, and allows access to application Widgets.
- **Extended Home Screens:** extend beyond the current visible screen width to provide more space for adding icons, widgets, and other customization features.
  - There are six available extended screens each of which may be populated with its own shortcuts or widgets. These screens share the use of the four Primary Shortcuts (see page 31).


- The current screen is indicated at the top by a larger circle. Up to seven (7) total screens are available.
- Press  to access the Home screen (page 30), which appears as the default “page” on the device, and then slide your finger horizontally across the screen to go to the left or right extended screens.

*Note:* Both the status bar and primary shortcuts are visible across all screens (Home and Extended).







- Think of it as having a desktop so wide that your screen can only display a portion at a time.

*Tip:* While on an extended Home screen, press  to return to the main Home screen.

*Note:* Screen  is the Home screen.

- **Google search:** is an onscreen Internet search engine powered by Google™. Tap  to access the Voice Search feature where you can verbally enter a search term and initiate an online search.






- **Widgets:** self-contained onscreen applications (not shortcuts). These can be placed onto any of the available screens (Home or extended). (See “Adding and Removing Widgets” on page 40.)
- **Shortcuts:** are icons that launch available device applications such as Voicemail, Contacts, Phone, Email, Alarm Clock, etc. These function the same as shortcuts on your computer.
  - Although some may already be found on the Extended Home screens, the majority can also be found within the Applications screens.
  - The Application screens can be accessed by tapping **Applications** (  ) from the Primary shortcuts area.
  - Shortcuts can be removed from a screen and added back any number of times. (See “Creating Shortcuts” on page 38.)
- **Primary Shortcuts:** are four shortcuts present throughout all of the available screens (all 7) and can be used to both navigate within the device or launch any of the following functions:
  - **Phone** (  ) launches the phone-related screen functions (Keypad, Logs list, Favorites, and Contacts).
  - **Contacts** (  ) launches the Contacts-related screens (Contacts, Groups, and Activities).
  - **Messaging** (  ) launches the Messaging menu (create new messages or open an existing message string).
  - **Applications/Home** toggles functionality between the Home and Application screens.
    - Tap **Applications** (  ) to access the Application screens loaded with every available local application.
    - While in the Applications screen, tap the **Home** icon (  ) to easily return to the Home screen.


## Using the Sprint ID Theme


This is a collection of themes that allow you to customize your device with an incredible library of themes containing images, sounds, and more.

*Note:* The default Sprint ID theme is **Samsung**.


To change the Sprint ID:

1. Press  and tap  (**Sprint ID**).
  2. Tap an available ID. Example: MyID. The screen then changes to reflect the changes to both the Primary shortcuts and screens.
- **Sprint ID** () lets you quickly change the ID packet you're currently using. Tap **Get New** to download and install a new ID.
  - **Page Navigation** is a visual indication of the currently active page. The onscreen dots (located at the bottom left and right of the screens) indicate your current page location.
    - When on the Home screen, two dots appear at both locations (this indicates there are two pages at either side of the current page).

- Touch and hold  to reveal the Quick Screen Access. Tap a page preview to launch the selected screen.

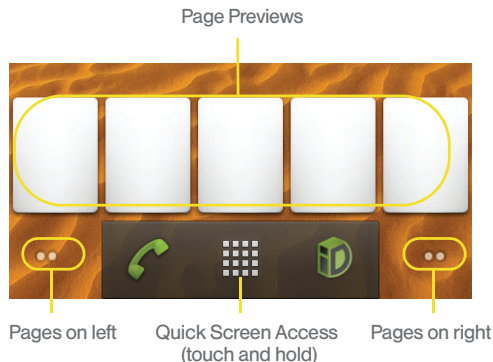

To return to the Samsung Theme:





1. Press  and tap  (**Sprint ID**).
2. Tap **Samsung** to restore the default Samsung theme.

## Adding and Removing Extended Screens

The device comes by default with a Home screen and two extended screens. You can add up to four additional extended screens for a total of seven screens.




**Note:** Screen ④ is always assigned to the Home screen and cannot be removed.

To remove an extended screen:

1. Press  >  and tap  (**Edit**).
2. Touch and drag an existing screen over the **Remove** icon (  ) and release it.
  - As you place the screen into the Trash, the discarded screen will turn red.
  - Removing a screen doesn't delete it or any widget or shortcuts on that screen. All will be available for future use.

**Note:** If you are removing a screen with shortcuts, you will be prompted with an additional pop-up asking you to confirm the removal.





To assign a different screen as the new Home screen:

1. Press  >  and tap  (**Edit**).
2. Tap **Set home** below the screen you wish to assign as the new Home screen.

## Using the Applications Screens

All of your device's applications are located within the Applications screens.

**Note:** These screens house all default and downloaded applications (installed from Android Market or from the Web).





1. Press  and tap  to open the screen.
  - To close the Applications screen, tap  or press .








**Note:** These screens can be displayed as a list by pressing  and tapping **List view**.








2. Scroll through the screens and tap an icon to launch the associated application.
  - The screens contains device applications such as **AllShare**, **Calendar**, **Camera**, **Gmail**, **Market**, **MediaHub**, **Sprint Hotspot**, **Sprint ID**, **ThinkFree Office**, **YouTube**, and many more.









## Applications









The following is a listing of the current applications available via both the Primary shortcuts area and via the Applications screens.







Application Icons	
	<b>AllShare</b> – Allows you to share your on-device media content with other external devices using DLNA (Digital Living Network Alliance) and built-in AllShare™ technology (page 225). The external devices must also be DLNA-compliant.
	<b>Amazon MP3</b> – Launches the Amazon MP3 music download service (page 222).
	<b>Asphalt 5</b> – Launches a demo version of a built-in racing video game.
	<b>Calculator</b> – Launches the onscreen calculator application (page 124).

Application Icons	
	<b>Calendar</b> – Launches a calendar application that syncs to your Facebook™, Google™, or Microsoft Exchange work calendars (page 114). Events can only be synced to a managed account (page 81).
	<b>Camera</b> – Launches the built-in camera (page 141).
	<b>Clock</b> – Accesses the Alarm Clock application (page 121).
	<b>Contacts</b> – Displays the Contacts tab listing current contacts, synced from either your Google or Outlook account (page 101). Contacts can only be synced to a managed account (page 81).
	<b>Email</b> – Provides access to both your Outlook (Exchange Server-based) work email and Internet email accounts (such as Gmail and Yahoo! Mail) (page 194).
	<b>Downloads</b> – Allows you to view your downloaded applications.
	<b>Facebook</b> – Launches the Facebook Web page via the browser (page 181).







<i>Application Icons</i>	
	<b>Free HD Games</b> – Launches a website containing HD game samples.
	<b>Gallery</b> – Displays a Gallery of camera images and video stored in the microSD card (page 145).
	<b>Gmail</b> – Provides access to your Gmail account (page 195).
	<b>Google Search</b> – Provides an onscreen Internet search engine powered by Google™.
	<b>Internet</b> – Launches the browser running Google search (page 179). The browser is fully optimized and comes with advanced features to enhance Internet browsing on your device.
	<b>Latitude</b> – Lets you see your friends' locations and share yours with them. The application also lets you see your friends' locations on a map or in a list.
	<b>Maps</b> – Launches a Web-based dynamic map that helps you find local businesses, locate friends, view maps and get driving directions (page 228).

<i>Application Icons</i>	
	<b>Market</b> – Find and download free and for-purchase applications on Android Market (page 208).
	<b>Media Hub</b> – Provides one-stop access to the hottest movies and TV programs that you can rent or buy and watch anytime, anywhere (page 218).
	<b>Memo</b> – Creates new text memos (page 121).
	<b>Messaging</b> – Provides access to text and multimedia messaging (SMS and MMS) (page 166).
	<b>Music</b> – Launches the built-in Music Player (page 223).
	<b>My files</b> – Lets you view supported image files and text files on your microSD card (page 120).
	<b>NASCAR</b> – Launches the Web-based NASCAR Sprint Cup Mobile application (page 209).
	<b>Navigation</b> – Launches a Web-based navigation application (page 231).

<i>Application Icons</i>	
	<b>News and Weather</b> – Launches a Web-based news and weather feed based on your current location.
	<b>Phone</b> – Accesses the phone keypad (page 64).
	<b>Places</b> – Allows others to find your business on local search results using either Google Search or Google Maps.
	<b>Qik</b> – Allows you to record and share live video from your device with your friends, family and your favorite social networks (page 213).
	<b>Settings</b> – Accesses the device's built-in Settings menu (page 74).
	<b>Sprint Football Live</b> – Launches the Sprint Football Live services (page 211).
	<b>Sprint Hotspot</b> – Launches the Sprint Mobile Hotspot which allows you to share your phone's 3G/4G mobile Internet connection with Wi-Fi-enabled devices (page 193).
	<b>Sprint ID</b> – lets you quickly change the ID packet you're currently using. Tap <b>Get New</b> to download and install a new ID (page 32).

<i>Application Icons</i>	
	<b>Sprint TV</b> – Allows you to watch live mobile TV and listen to streaming radio on your device (page 221).
	<b>Sprint Zone</b> – Links to Sprint Zone services such as Account Information, What's New, recommended Android applications, and other support and promotional content (page 213).
	<b>Talk</b> – Launches a Web-based Google Talk application that lets you chat with family and friends over the Internet for free.
	<b>Task Manager</b> – Provides access to a management screen from where you can close currently active applications, manage packages, RAM and obtain device summary information (page 94).
	<b>TeleNav GPS</b> – Launches a driving aid that provides both audible and visual navigation instructions for GPS navigation (page 230).
	<b>ThinkFree Office</b> – Provides access to a Microsoft® Office-compatible applications suite. It also provides a centralized location for the management of your online and offline files.

### Application Icons

	<b>Video Player</b> – Launches your device's built-in video application that plays video files stored on your microSD card.
	<b>Voice Dialer</b> – Launches your device's built-in automatic speech recognition (ASR) software, called Voice Control, to dial a phone number in your Contacts or to launch phone functions (page 129).
	<b>Voice Recorder</b> – Provides the ability to record a small audio file.
	<b>Voice Search</b> – Launches your device's built-in automatic speech recognition (ASR) software and initiates a Google search based on the recognized text (page 132).
	<b>Voicemail</b> – Launches Visual Voicemail (page 160).
	<b>YouTube</b> – Launches the YouTube webpage via the browser (page 181).

**Note:** The Email application includes access to both Exchange Server-based email (also known as Work email) and other Internet-based email providers such as Yahoo! and Gmail.

## Customizing Your Home Screen

You can customize your Home screen by doing the following:

- **Creating Shortcuts**
- **Adding and Removing Widgets**
- **Repositioning Widgets**
- **Creating Folders**
- **Changing the Background (Wallpapers)**

## Creating Shortcuts



Shortcuts activate a feature or launch an application. Widgets are already open and active onscreen applications.

**Note:** To move a shortcut from one screen to another, you must carefully touch and hold the shortcut and slowly drag it to the edge of the screen. As the shortcut turns light blue, you can begin to move it to the adjacent screen.

---

If this does not work, delete it from its current screen. Activate the new screen and then add the selected shortcut.

To add a shortcut from the Applications screens:

1. Press  to activate the Home screen.
2. Select a location (screen) for your new shortcut by scrolling across your available screens until you reach the desired one. (See “Home Screen Overview” on page 29.)
3. Tap **Applications** () to reveal all your current available applications. By default, applications are listed in a Grid view.
4. Scroll across the screens and locate your desired application.
5. Touch and hold the onscreen icon. The new shortcut then appears to hover over the current screen.






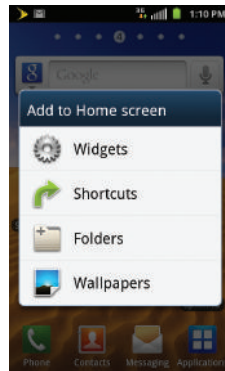
6. While still holding the onscreen icon, position it on the current screen. Once complete, release the screen to lock the shortcut into its new position.

*Note:* The same shortcut can be added to any of the available screens (Home or Extended). The application you add to the screen will still appear within the **Applications** screens.



To add a shortcut via the Add to Home screen:

1. Press  to activate the Home screen.
2. Touch and hold on an empty area of the screen.

3. From the **Add to Home screen** window tap **Shortcuts**.
4. Tap a selection from the available list:
  - **Applications**
  - **Bookmark**
  - **Contact**
  - **Direct dial**
  - **Direct message**
  - **Directions & Navigation**
  - **Latitude**
  - **Settings**
5. Follow the onscreen instructions to add the new shortcut to your current Home screen.



To delete a shortcut:

1. Press  to activate the Home screen.
2. Touch and hold the desired shortcut. This unlocks it from its location on the current screen.
3. Drag the icon over the **Delete** tab () and release it.



Delete (Shortcut or Widget)


## Adding and Removing Widgets

Widgets are self-contained applications that can be placed on either the Home screen or an extended screen. Unlike shortcuts, widgets appear as onscreen applications.


### ● Widgets

- Choices include: **Buddies now, Calendar, Calendar Clock, Facebook, Feeds and Updates, Google Search, Home screen tips, Latitude, Market, NASCAR, News & Weather, Picture frame, Power control, Program Monitor, Rate Places, Sprint Football Live, Voicemail, Y! Finance Clock, and YouTube.**

To add a Widget:

1. Press  to activate the Home screen.
2. Touch and hold on an empty area of the screen.
3. From the **Add to Home screen** window tap **Widgets**.
4. Tap an available widget to place it on your current screen.

### To remove a Widget:

1. Touch and hold a widget until you can move it around on the screen.
2. Drag the widget over the **Delete** tab (  ) and release it.
  - As you place the widget into the Trash, both items turn red.
  - This action doesn't delete the widget, it just removes it from the current screen.


### To place a Widget onto a different screen:

1. Touch and hold the widget until it becomes dark.
2. Drag it to the edge of your screen.
3. Slowly drag it past the edge of the screen until it turns light blue.
4. Add the widget to the new screen.
5. Repeat these steps to continue moving it to other adjacent screens.

## Creating and Managing Folders

Folders are located on any of the seven available screens and contain both files (such as data and images) and Contact or entries.


### To create a folder onscreen:

1. Press  to activate the Home screen.
2. Touch and hold on an empty area of the screen.
3. From the **Add to Home screen** window tap **Folders**.
4. Tap an available folder type to place it on your current screen.
  - Choices include **New folder**, **All contacts**, **Contacts with phone numbers**, **Received list from Bluetooth**, **Recent documents**, or **Starred contacts**.

*Note:* Starred contacts are those Contact entries tagged as very important.

## Accessing Recently-Used Applications


Your device keeps a running list of your six most recently used applications.

1. Press and hold  to open the recently-used applications window.
2. Tap an icon to open an application.

## Changing the Screen Orientation

The Epic 4G™ is capable of automatically changing the orientation of some onscreen content. The device's built-in 6-axis accelerometer senses movement and changes in the device's angle and orientation.

This allows the device to change onscreen content (images, video, Web pages) to properly display based on the current angle. (Some screens may not automatically change.)

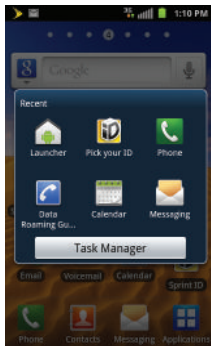







Although most screens will change orientation once the QWERTY keyboard is opened, this feature can be manually enabled to change the orientation for all applicable screens when rotation is detected.

**Note:** An example of a screen that does not automatically re-orient is the Home screen. This screen requires you slide out the QWERTY keyboard.

An example of a screen that automatically re-orient by moving the device is the Contacts screen. This only requires you to turn the device on its side.

To manually activate the auto-rotate feature:

1. Press  >  and tap  > **Display**.  
– or –  
Press  and tap  >  > **Display**.
2. Scroll down and tap **Auto-rotate screen**. A checkmark indicates the feature is enabled. (See “Changing the Screen Orientation” on page 77.)
  - Clear the **Auto-rotate screen** checkmark to disable this automatic orientation adjustment.

## Menu Navigation


There are two ways to navigate through a menu:

- Using your finger (page 43)
- Using the built-in keyboard's navigation/arrow keys (page 44)

### Selecting Menu Items Using Your Fingers


As you navigate through the menu, you activate menu options by tapping the onscreen entry. Select any option by tapping it.

1. Tap an onscreen icon to launch a menu or feature.
2. Flick up or down the screen to navigate through a menu list (bottom up or top down).

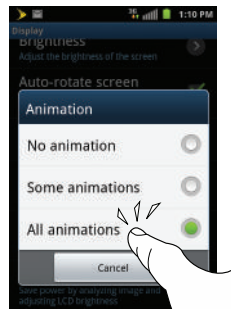


3. Tap a menu item to make a selection or activate a field.

To launch the keypad using your fingers:


- ▶ Tap  from the Home screen.

## Selecting Menu Items Using Your Keyboard




As you navigate through a menu with these navigation keys, options are highlighted. Select any option by pressing a directional arrow from the QWERTY keyboard and moving the onscreen selection, highlighting it and pressing .

- If the option is numbered, you can select it by pressing the corresponding number on the phone's keypad.

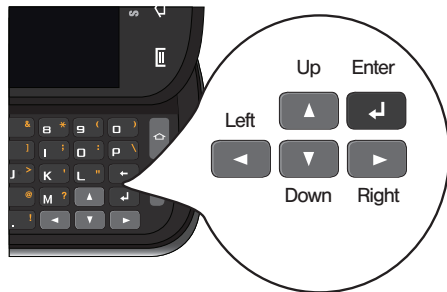Access the QWERTY keyboard and locate the navigation keys, located at the right of the keyboard.




To view your text messages using the directional keys:

1. Use the navigation keys until  is highlighted and press . (If you have any text messages, they are displayed.)
2. Press Up or Down to highlight an available message and press  to view its content.

## Backing Up Within a Menu

To go to the previous menu:

- ▶ Press .


To return to Home screen:

- Press .

## Using Context Menus

Context menus (also called pop-up menus) contain options that apply to a specific item on the screen. They function similarly to menu options that appear when you right click your mouse on your desktop computer.

- Touch and hold an item onscreen to open its context menu.

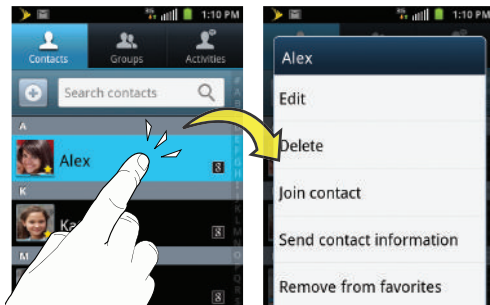


*Note:* Not all items have context menus. If you touch and hold an item that has no context menu, nothing happens.

## Using the Notifications Panel

The Notification area indicates new message events (data sync status, new messages, calendar events, call status, etc). You can expand this area to provide more detailed information about the current onscreen notification icons.


3. Tap the status bar to reveal the Notifications tab, and then drag the tab to the bottom of the screen to open the Notifications panel (1).
4. Tap a notification entry to open the associated application (2).

*Note:* The Notifications panel can also be opened on the Home screen by pressing  and then tapping **Notifications**.

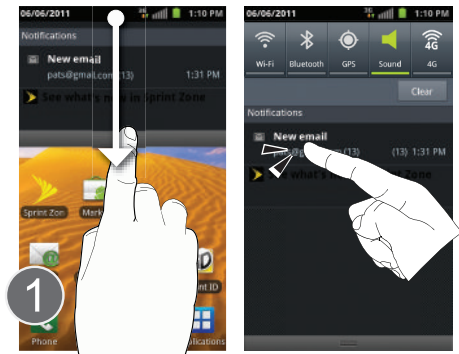

## Launching Additional Panel Functions

In addition to notifications, this panel also provides quick and ready access to four device functions. These can be quickly activated or deactivated.

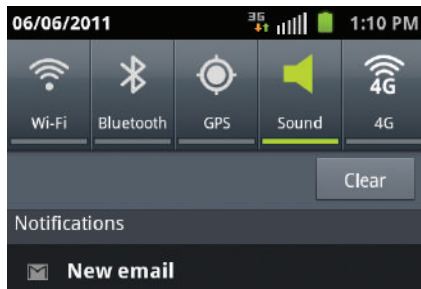




The following functions can either be activated (green) or deactivated (gray): **Wi-Fi**, **Bluetooth**, **GPS**, **Sound/Vibration**, or **4G**.

*Note:* 4G and Wi-Fi connections can not be simultaneously active. To activate 4G services, you must turn Wi-Fi off on your Epic 4G.



## Displaying Your Phone Number

- ▶ Press  >  and tap  > **About phone** > **Status**. (Your phone number and other information about your device and account is displayed.)


## Entering Text Using the Onscreen Keyboards

When you activate a field where you can enter text, numbers, symbols, etc., you can either use the onscreen keyboard or QWERTY keyboard.


There are two versions of onscreen keyboards available on your Epic 4G: the **Samsung keypad** which emulates a standard QWERTY keyboard and **Swype** (default input method), which uses a unique gliding method to let you enter whole words quickly.

Onscreen keyboard entry can be done in either Portrait or Landscape orientations. The Landscape orientation provides more space and results in slightly bigger onscreen keys. If you find that you prefer to enter text via the onscreen keyboard, and need bigger keys, use this orientation.

(To use the onscreen keyboard in landscape mode, you will need to set your device to automatically change orientation when rotated. See “Changing the Screen Orientation” on page 77.)

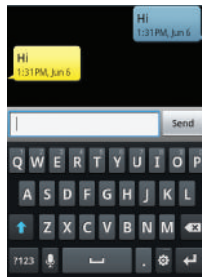

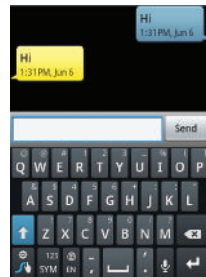


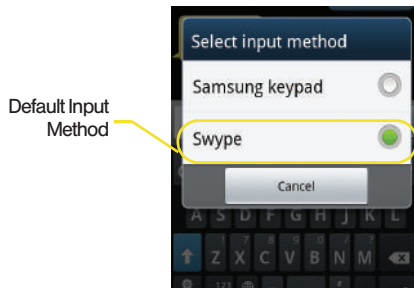
**Samsung  
keypad**



**Swype**

## Choosing an Input Method

1. Press  >  and tap  > **Locale and text** > **Select input method**.
2. Tap **Swype** or **Samsung keypad**.  
– or –
1. From a screen where you can enter text, tap the input field to reveal an onscreen keyboard, and then touch and hold the text input field to display the onscreen context menu.
2. Select **Input method** and then tap **Swype** or **Samsung keypad**.



*Note:* Although the default text input method is the **Swype** method, if Swype input is not enabled within the device's settings menu, it will not be provided as an available input method option. (See "Entering Text Using Swype" on page 54.)


## Entering Text Using the Samsung Keypad

### Selecting a Text Input Mode With the Samsung Keypad

*Note:* Certain characters and types, such as some symbols and emoticons, are not accessible from the onscreen keyboard.

1. From a screen where you can enter text, tap the input field to reveal the onscreen keyboard.
2. With the Samsung keypad as your text entry method (see "Choosing an Input Method" on page 48), select one of the following text mode options:

- **ABC** to use alphabetic characters from the onscreen keyboard (See page 50.) In this mode, the text mode button displays **?123**.
- **?123** to enter numbers by pressing the numbers selecting them on the onscreen keyboard. In this mode, the text mode button displays **ABC**.

*Tip:* When entering text, tap  to toggle capitalization.

## Samsung Keypad Overview

- **Entry field:** a screen area where text, numbers, or other characters can be entered.
- **Delete:** removes characters from the entry field.
- **CAPS/ALT:** When in **ABC** mode, this key changes the capitalization of the subsequent entered characters. When in **?123** mode, this key can show additional symbol characters.
  - Capitalization in **ABC** mode can be altered by using the Caps button. (See “Samsung Keypad - ABC Mode” on page 50.)

- Symbols used in **?123** mode can be enhanced by accessing additional symbol characters. (See “Samsung Keypad - Entering Numbers and Symbols” on page 50.)






- **Text mode:** There are two available modes: **ABC** and **?123**.
  - **ABC** mode contains only letters. In this mode, the text mode button displays **?123**.
  - **?123** mode contains only numbers and symbols. In this mode, the text mode button displays **ABC**.
- **Settings:** Activates the settings menu for the current text input mode.
- **Return:** Inserts a new text line into your text entry field.

## Samsung Keypad - ABC Mode



In **ABC** mode, you can enter only letters from the onscreen keyboard.

While in this mode, the text mode key displays **?123**.

1. Select the **ABC** mode by tapping **ABC**.
  - Capitalization in **ABC** mode can be altered by using the Caps button.
    -  next character will be lowercase.
    -  only the next character will be uppercase.
    -  all subsequent characters are uppercase.

*Note:* When you touch and hold the shift key, a light blue box appears above it to indicate the keypad is set to “Shift-Lock”, in which all characters are entered in uppercase.

2. Begin typing your word.

- If you make a mistake, tap  to erase a single character. Touch and hold  to erase one or more previously entered words.

By default, the first letter of a new entry is capitalized and the following letters are lowercased. After a character is entered, the cursor automatically advances to the next space.

## Samsung Keypad - Entering Numbers and Symbols



In **?123** mode, you can enter only numbers and symbols.

While in this mode, the text mode key displays **ABC**.

To enter numbers:

1. Tap **?123** to enter the **?123** mode.
2. Tap the appropriate numeric key.

To enter symbols:

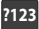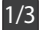


1. Tap  to enter the **?123** mode.
2. Tap the appropriate symbol key.
  - or –
  - Tap  to select from additional symbol characters. The first number on this key indicates which page (1, 2, or 3) of additional characters is active.


## Samsung Keypad - Settings

To assign the Samsung keypad as the default:

1. Press  >  and tap  > **Locale and text**.
2. Tap **Select input method** > **Samsung keypad**. A green circle indicates the feature is enabled.

To configure Samsung keypad settings:

1. Press  >  and tap  > **Locale and text** > **Samsung keypad**.
  - or –


From within an active text entry screen, tap  from the bottom of the screen to reveal the Samsung keypad settings screen.

2. Set any of the following options:
  - **Portrait keypad types** allows you to choose a keypad configuration (**Qwerty Keypad** [default]), **3x4 Keypad**, **Handwriting box 1**, or **Handwriting box 2**).
  - **Input languages** sets the input language. Tap a language from the available list. The keyboard is updated to the selected language.
  - **XT9** enables predictive text entry mode. See “Using XT9 Predictive Text” on page 52.
  - **XT9 advanced settings** enables further configuration of more advanced XT9 features. See “Setting XT9 Advanced Features” on page 52.
  - **Keypad sweeping** automatically moves the screen in the direction your finger moves along the screen.
  - **Auto-capitalization** automatically capitalizes the first letter of the first word in each sentence (standard English style).

- **Handwriting settings** configures the recognition times for onscreen handwriting. Recognition time ranges from 0.1s to 2s.
- **Voice input** activates the Voice input feature. This is an experimental feature that uses Google's networked speech recognition application.
- **Auto-full stop** automatically inserts a full stop by tapping the space bar twice.
- **Tutorial** launches a brief onscreen tutorial covering the main concepts related to the Samsung keypad.

## Using XT9 Predictive Text





XT9 is a predictive text system that has next-letter prediction and regional error correction that compensates for users pressing the adjacent keys by mistake.


1. From within an active text entry screen, tap  at the bottom of the screen to open the Samsung keypad settings screen.
2. Tap **XT9**. (A green check mark indicates the feature is enabled. This allows access to the XT9 advanced settings menu.)

3. Tap **XT9 advanced settings** and modify any XT9 associated settings.

## Setting XT9 Advanced Features

*Note:* XT9 advanced settings are available only if the XT9 field has been selected.

1. Press  >  and tap  > **Locale and text** > **Samsung keypad**.  
– or –  
From within an active text entry screen, tap .
2. Tap **XT9 advanced settings** and configure any of the following advanced options:
  - **Word completion** tells your device to attempt to predict how to complete the word you have started. (A green check mark indicates the feature is enabled.)
  - **Word completion point** sets how many letters should be entered before a word prediction is made. Choose from **2 letters**, **3 letters**, **4 letters**, or **5 letters**.

- **Spell correction** enables the automatic correction of typographical errors by selecting from a list of possible words that reflect both the characters of the keys you touched, and those of nearby characters. (A green check mark indicates the feature is enabled.)
  - **Next word prediction** predicts the next word you are likely to enter. (A green check mark indicates the feature is enabled.)
  - **Auto-append** automatically adds predictions to the word you are typing. (A green check mark indicates the feature is enabled.)
  - **Auto-substitution** allows the device to automatically replace misspelled or miskeyed words. This option reduces “typos.” (A green check mark indicates the feature is enabled.)
  - **Regional correction** automatically tries to correct errors caused when you tap keys adjacent to the correct keys. (A green check mark indicates the feature is enabled. See “Language Settings” on page 80.)
  - **Recapture** sets the device to redisplay the word suggestion list after selecting the wrong word from the list.
- **XT9 my words** allows you to add new words to the built-in XT9 dictionary.
    - Tap **Add**.
    - Use the **Register to XT9 my words** field to enter the new word.
    - Tap **Done** to save the new word.
  - **XT9 auto-substitution** allows you create a word rule by adding words for automatic substitution during text entry (for example **youve** becomes **you’ve**).
    - Tap the **XT9 auto-substitution** field. Flick up or down to review the current list of word substitutions.
    - Tap **Add**.
    - Enter the original word that will be replaced in the **Shortcut** field (for example, **youve**).
    - Enter the substitute word that will be used in the **Substitution** field (for example, **you’ve**).
    - Tap **Done** to save the substitution rule.
3. Tap  to return to the previous screen.

## Entering Text Using Swype

---

Swype™ is a unique text input method that allows a user to enter a word by sliding a finger from letter to letter, lifting only between words. It uses error-correcting algorithms and a language model to guess the word intended. It also includes a tapping predictive text system in the same interface.




The onscreen keyboard options are different between the Samsung keypad and Swype onscreen input methods.

### Enabling and Configuring Swype




The onscreen Samsung keypad is the default touchscreen input method on the Epic 4G. This method of text input is similar to a normal keyboard.

Before you can select Swype as your text input method, you must enable it in the Settings menu.


To enable Swype:


1. Press  >  and tap  > **Locale and text**.
2. Scroll down and tap **Swype**. A green checkmark indicates the feature is enabled.

To configure Swype settings:

1. Press  >  and tap  > **Locale and text**.
2. Scroll down and tap **Swype** (Swype settings).
3. Scroll down the screen list of available options and touch a corresponding entry to either activate or configure the setting.
  - **Preferences** allows configuration of the Swype text input and feedback parameters.
    - **Language** allows you to select the current text input language. Default language is **US English**.
    - **Audio feedback** turns on/off sounds generated by the Swype application during use.



- **Vibrate on keypress** activates a vibratory sensation as you enter text via the onscreen keypad.
  - **Enable tip indicator** turns on an onscreen flashing indicator that provides helpful usage information.
  - **Swype Advanced Settings** provides access to Swype advanced options:
    - **Word suggestion** uses a built-in word database to suggest your desired words while entering text in Swype.
    - **Auto-spacing** automatically inserts spaces between words. When you finish a word, just lift your finger to start the next word.
    - **Auto-capitalization** automatically capitalizes the first letter of the first word in a sentence.
    - **Show complete trace** determines whether to show the entire path formed by the letters you are sliding over to form a given word.
  - **Speed vs. accuracy** sets how quickly Swype responds to your onscreen input. Do you prefer more accurate text entry or is your desire for speed? Move the slider between **Fast Response** (speed) or **Error Tolerance** (accuracy) and tap **OK**.
  - **Help** provides access to Swype help.
    - **Swype help** to access Swype Help information and user manual.
    - **Tutorial** provides access to onscreen Swype tutorials.
  - **About** displays the current software version.
- Text Entry tips:**
- To create double letter like **pp** in "apple," just do a "squiggle" on the P key.
  - To enter punctuation, touch and hold a key to view a punctuation menu and make a selection.
  - To enter contractions, move your finger over the apostrophe.
  - To correct a misspelled word, double-tap on the word you want to change and then tap  to erase

a single character. Touch and hold  to erase an entire word.

## Selecting a Text Input Mode in Swype

*Note:* Some characters and types, such as some symbols and emoticons, are not accessible from the onscreen keyboard.


1. From a screen where you can enter text, tap the input field to reveal the onscreen keyboard.
2. With Swype as your text entry method, select one of the following text mode options:
  - **123 ABC** to use Swype with alphanumeric characters from the onscreen keyboard.
  - **SYM (Symbol)** to enter symbols from the onscreen keyboard.




*Tip:* When entering text, tap  to change letter capitalization.

*Important:* Even if Swype is enabled from within the **Locale and text** menu (page 54), Swype must also be selected from within the Select Input Method context menu (page 48).


## Swype Keyboard Overview

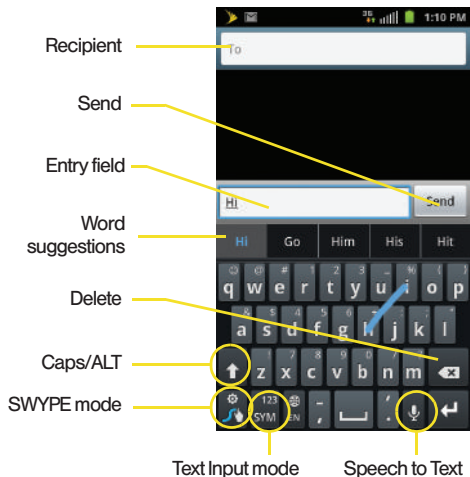- **Entry field:** a field where text, number, or other characters can be entered.
- **Delete:** deletes characters from the entry field.



- **CAPS/ALT:** When in **123ABC** mode, this key changes the capitalization of the subsequent entered characters. When in **SYM** mode, this key can show additional symbol characters.
- **Text Input mode:** There are two available modes: **123ABC** and **SYM**.
  - **123ABC** mode contains alphanumeric characters and a few common punctuation marks. Text mode button indicates .
  - **SYM** mode contains only symbols and numbers. Text mode button indicates .
- **SWYPE tips** (): Tapping this button displays the Swype tips and tutorial screen.

## 123ABC Mode

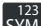In **123ABC** mode, you can enter only letters and a few common punctuation marks from the onscreen keyboard. The text mode key shows .

1. Select the **123ABC** mode (showing letters and numbers on the onscreen keys).

- Capitalization in this mode can be altered by using the Caps button.





next character is lowercase.



only the next character is uppercase.




all subsequent characters are uppercase.



2. Swipe your finger continuously over the letters to form a word.
  - If you make a mistake, tap  to erase a single character. Touch and hold  to erase an entire word.

By default, the first letter of an entry is capitalized and the following letters are lower case. After a word is entered and you lift your finger, the cursor automatically adds a space after the word.

## Entering Numbers and Symbols

By using the onscreen keyboard in Portrait mode, some symbols are not available (such as Emoticons or Smileys). In **SYM** mode using Swype, you can only enter symbols and numbers from the onscreen keyboard. The text mode key shows .

To enter numbers and symbols in Swype mode:

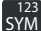1. Tap  to enter the **SYM** mode.
2. Touch the key for the number or symbol you want to enter. To enter the alternate symbol on a key, tap .


To enter text via Swype:


This example shows a user entering the word “there”. Put your finger down on the “t”, and without lifting, glide it to the “h”, and then to the “e”, and then over to the “r”, and back to the “e”. When complete, lift your finger off the screen to allow the device to determine the closest word match.

*Note:* If multiple word choices exist for your Swype entry, an onscreen popup appears to provide additional word choices.

1. Tap an onscreen character, and then, while maintaining your finger onscreen, drag to the next character in the desired word.
2. Repeat this process until the desired characters have been drawn over.

- Select from an onscreen list of possible word matches (if prompted).
- This occurs if your current swype has generated more than one possible word match.

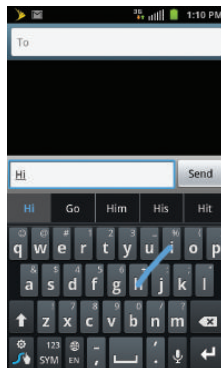

For tips on using Swype, touch  and follow the onscreen information.

# Entering Text Using the QWERTY Keyboard

## Accessing the QWERTY Keyboard

The Epic 4G™ has a full, slide-out QWERTY keyboard. The keyboard is located beneath the display screen and is accessed by sliding it open. This orients the device's display to Landscape (widescreen) mode.

With the QWERTY keyboard, you can type letters, numbers, punctuation, and other special characters into text entry fields or other applications as easily as on your computer.

To open the device and access the keyboard:

1. Rotate the device 90 degrees counter-clockwise.
2. Slide the top section of the device up to open, as shown in the illustration. When you slide the device open, the display rotates from a vertical viewing mode (Portrait) to a horizontal viewing mode (Landscape).



To reveal additional QWERTY text editing options:



1. Touch and hold an active text entry field.
2. From the **Edit text** context menu, tap an available function:
  - **Select word** lets you manually highlight characters in the text message field.
  - **Select all** highlights all characters in the text message field.








- **Cut** cuts selected characters from the current text message field.
- **Copy** copies selected characters in the current text message field.
- **Paste** inserts the previously cut or copied text into the message field.
- **Input method** provides additional text input methods (**Swype** or **Samsung Keypad**). (When the QWERTY keyboard is open, Swype is disabled.)

## Using the Keyboard

In this section we'll cover the steps necessary to enter text using the QWERTY keyboard. Using your device's QWERTY keyboard is just like using any standard computer keyboard.

The following keys perform special functions when entering text:

	<b>FN:</b> Allows you to use alternate characters displayed at the top of the QWERTY keys. Examples: \$, @, #, !
	<b>Shift:</b> Changes the text input mode among Upper/Lower/Mixed case mode.

	<b>Smiley:</b> Launches the Smileys page. Scroll down and tap an entry from the extensive list of emoticons.
	<b>Space:</b> Inserts an empty space.
	<b>OK/Enter:</b> Moves the insertion point to the next line in a message.
	<b>Delete:</b> Deletes the previous character, similar to the backspace key on a computer keyboard.
	<b>Menu:</b> Allows you to access your device's main functions menu. Works in the same manner as the device's main function keys.
	<b>Back:</b> Returns you to the previous screen. Works in the same manner as the device's main function keys.
	<b>Home:</b> Returns you to the Home screen. Works in the same manner as the device's main function keys.



**Search:** Displays the Quick Search box that can be used to search for a key term both on the device or online. Works in the same manner as the device's main function keys.



## Entering Letters

The first letter entered (of a field or new sentence) is always an initial uppercase letter. By default, text is entered in lowercase characters unless altered by pressing **Shift**.

To enter uppercase and lowercase characters:

1. Press **Shift** to make the next character uppercase. Characters revert back to lowercase after the next character is typed.  
– or –  
Press **Shift** twice to make all subsequent characters uppercase (all new characters are in uppercase).
  - Pressing **Shift** cycles through the capitalization modes (all lowercase, initial uppercase, and all uppercase).

2. Press the corresponding keys:



- For example, to enter the word “Bill” within a text field, type the keypad sequence below.
- If you make a mistake, press  to erase a single character. Press and hold  to erase all previously entered text.



- To enter all uppercase characters, quickly press **Shift** twice.




## Entering Numbers


- ▶ Press a number key on the top row of the keyboard.
- If you make a mistake, press  to erase a single character. Press and hold  to erase all previously entered text.
- For example, to enter “9:30,” you would use the keyboard sequence shown below.




9:30

## Entering Symbols and Smileys

Most symbols and punctuation marks appear as alternate characters above the primary letters and numbers on the QWERTY keyboard. To access these symbols, press  and then press the appropriate key.


Smileys (emoticons) are accessed by pressing  and then selecting an image from the **Insert Smiley** page that is then inserted at your current cursor position.

To enter symbols:

1. Position the cursor where you want the symbol to appear within your message.
  2. Press  and then press the key corresponding to the symbol you want to insert.
- For example, to enter “I’m #1,” you would use the keyboard sequence shown below.




I'm #1

*Tip:* Certain additional symbols can be accessed by pressing  and touching the onscreen symbol.



To enter “smileys” (emoticons):

1. Position the cursor where you want the emoticon to appear within your message.
2. Press  to open the onscreen smiley page.
3. Scroll through the list and select a smiley by touching the onscreen icon.

## Creating a Google Account

You will need a Google account to access several device features such as Gmail, Google Maps, Google Talk, and the Android Market applications. Before you are able to access Google applications, you must enter your account information. These applications sync between your device and your online Google account.

1. From a computer, launch a Web browser and navigate to [www.google.com](http://www.google.com).
2. On the main page, click **Sign-in > Create an account now**.
3. Follow the onscreen prompts to create your free account.

4. Look for an email from Google in the email box you provided, and respond to the email to confirm and activate your new account.

## Signing In to Your Google Account

1. Launch an application that requires a Google account (such as Android Market or Gmail).
2. Click **Next > Sign in**.

**Note:** If you do not already have a Google account, touch **Create** and follow the onscreen prompts to create your new account.







3. Touch the **Username** and **Password** fields and enter your information.
4. Tap **Sign in**. Your device communicates with the Google servers to confirm your information.
5. If prompted, create a new Gmail username by entering a prefix for your **@gmail.com** email address.


For additional information about synchronizing accounts, see “Synchronizing Accounts” on page 81.

## 2B. Making and Answering Calls

- ◆ Making Calls (page 64)
- ◆ Dialing Options (page 65)
- ◆ Answering Calls (page 66)
- ◆ Missed Call Notification (page 66)
- ◆ Calling Emergency Numbers (page 67)
- ◆ In-Call Options (page 68)
- ◆ End-of-Call Options (page 69)
- ◆ Additional Calling Options (page 70)
- ◆ Saving a Phone Number (page 70)
- ◆ Finding a Phone Number (page 71)
- ◆ Dialing From the Contacts List (page 72)
- ◆ Speed Dialing (page 72)
- ◆ Plus (+) Code Dialing (page 73)

## Making Calls

 
1. Press  and then tap .
2. Enter a phone number using the onscreen keypad and tap .
  - If you make a mistake while dialing, tap  to erase the numbers.
  - To make a call when you are roaming and Roaming guard is enabled, select **OK** and tap . (See “Roaming Guard” on page 176.)
3. Tap  when finished.

*Tip:* To redial a recent number, press , tap a number from the Logs list, and tap **Call**.

You can also place calls from your device by speed dialing numbers from your Contacts (page 72) and using your Logs listings (page 96).

If you exit the current call screen and return to the Home screen, you are visually notified that you are still on an active call by the green bar within the Status bar.



In Call notification





## Dialing Options


When you enter numbers on the Keypad, you will see three onscreen options.

From the Keypad screen, you have the following options:

- **Call** (  ) to call the entered number.
- **Delete** (  ) to delete digits from the current number.

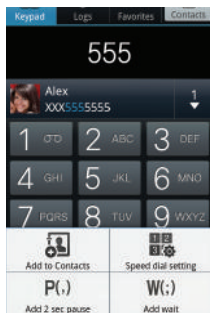

- **Send message** (  ) to send the current caller a text message while still maintaining the current call active.




To initiate additional options, tap  and select an option.

- **Add to Contacts** to add the current number to either a new or existing Contacts entry.
- **Speed dial setting** to access the Speed Dialing menu where you can assign a speed dial location to a current Contacts entry. (See “Speed Dialing” on page 72.)
- **Add 2 sec pause:** to insert a two-second pause to enter a 2-second delay within a number string (the phone continues dialing after 2 seconds without any additional keys being pressed).
- **Add wait** to insert a hard pause within the number string (the phone waits for your input). A wait requires that any consecutive numbers be manually sent by tapping **Yes**.

## Answering Calls

---

*Note:* All incoming call answering options listed below require you to drag the incoming call notice to the option.

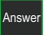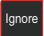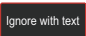- ▶ Drag the incoming call notice up to . Other options include:
  - **Ignore** (  ) sends the call directly to your voicemail box.
  - **Ignore with text** (  ) sends the call to your voicemail box and immediately allows you to send the caller a text message.

Pressing the Volume down button mutes the ringer.

Your device notifies you of incoming calls in the following ways:

- The device rings or vibrates.
- The backlight illuminates.
- The screen displays an incoming call message.

If the incoming call is from a number stored in your Contacts, the entry's name is displayed. You may also see the caller's phone number, if available.

## Answering a Roam Call With Roaming Guard Enabled

Roaming guard is an option that helps you manage your roaming charges when making or receiving calls while outside the Nationwide Sprint Network. (Please see “Roaming” on page 175 for more information.)

- ▶ Tap **OK** to answer the call. (See “Roaming Guard” on page 176 for additional information.)


*Note:* When your device is off, calls go directly to voicemail.

## Ending a Call

- ▶ Tap .


## Missed Call Notification

---

When you do not answer an incoming call, the Status bar indicates .

To display a Missed Call entry from the Home screen:

1. Touch and hold the Status bar, and then slide your finger down the screen.





2. Tap the Missed call entry (). This opens the **Logs** screen.

3. Tap an entry and select **Call**.

– or –

Touch and hold an entry from the Logs list and from the context menu, select **Call** [number]. (See “Using Context Menus” on page 45.)
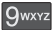
## Calling Emergency Numbers

You can place calls to 911 (from the Keypad, enter    ) , even if your device is locked or your account is restricted.


*Note:* When you place an emergency call, your device automatically enters Emergency mode.

During an emergency call, select an option.

- **Speaker On** to activate speakerphone mode. (If you are in speakerphone mode, the option is displayed as **Speaker Off** to deactivate.)
- **Dialpad/Hide dialpad** to show or hide the onscreen dialpad.

- **End call** to end the current call.

To exit Emergency mode:

1. Tap  to end a 911 call.
2. Touch and hold **Exit** on the Emergency Call Back mode.

*Note:* When you end the 911 call, you are returned to the Emergency Call Back mode.

Within the Emergency Call Back mode, press the **Home** key to use another menu.

## Enhanced 911 (E911) Information

This device features an embedded Global Positioning System (GPS) chip necessary for utilizing E911 emergency location services where available.

When you place an emergency 911 call, the GPS feature of your device seeks information to calculate your approximate location.

*Note:* Depending on several variables, including availability and access to satellite signals, it may take up to 30 seconds or more to determine and report your approximate location.

**Important:** Always report your location to the 911 operator when placing an emergency call. Some designated emergency call takers, known as Public Safety Answering Points (PSAPs) may not be equipped to receive GPS location information from your device.

## In-Call Options

Once you initiate a call, you will see six onscreen options. Tap an option to select it.

- **Add call** touch and hold to initiate a 3-way call (page 173).
- **Merge** to join two currently active calls (conference).
- **Dialpad/Hide** to toggle the appearance of the onscreen dialpad.
- **End call** to end the current call.



- **Speaker** to route the device's audio through the speaker (**On**) or through the earpiece (**Off**).
- ▶ Activate **Speaker** to route the device's audio through the speaker. (You can adjust the speaker volume using the volume buttons.)
- ▶ Deactivate **Speaker** to use the device's earpiece.


**WARNING:** Because of higher volume levels, do not place the device near your ear during speakerphone use.


- **Mute** to mute the microphone during an active call. Tap again to unmute the microphone.

**Note:** If Mute is activated, the speaker mode is deactivated.


- **Bluetooth** to route the device's audio through a connected Bluetooth headset (**On**) or through the speaker (**Off**). (See “2J. Bluetooth” on page 152.)
  - When the call is routed to a Bluetooth headset, the current call area shows the **Bluetooth** call icon (📞🔵).


**Note:** The Headset button is activated to show the current call is routed to the connected Bluetooth headset.

- To route the current call back to the device, tap **Headset** to temporarily use the device. Tap it again to route the call back to the connected Bluetooth headset.
- When Bluetooth or the Bluetooth headset is turned off, the call is routed through either the earpiece or speaker and shows .

Tap **Dialpad** () to use the onscreen dialpad to enter additional numbers, for example, an extension or access code.

- For example: When you call your bank's 800 number, use your dialpad to enter your account number and PIN.

Pressing  during a call displays a list of available in-call features. Tap an option to select it.

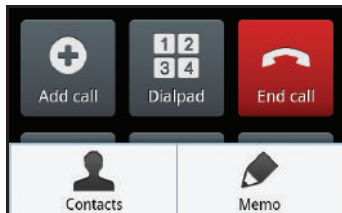

- **Contacts** to toggle the appearance of the onscreen dialpad.
- **Memo** to create a new memo while remaining on the call.

## End-of-Call Options




After you receive a call from or make a call to a phone number that is not in your Contacts, the device displays the following options:

- **Add to Contacts** to add the current new number to your Contacts. (See “Creating a New Contacts Entry” on page 101.)
- **Call** to redial the selected number and call back the recipient.
- **Message** to send the selected number a text (SMS) message.


*Note:* The End-of-Call options are not displayed for calls identified as No ID, Restricted, or Unknown.

## Additional Calling Options

To obtain additional options such as phone number and the duration of the call, you must access the Call log screen. (See “2D. Logs” on page 96.)

1. Press  and then tap  >  Logs.
2. Tap an entry from the list and then tap:
  - **Call** to dial the selected number and call the recipient.
  - **Send message** to send the selected number a text message.
  - **Create contact** to add the new number to your Contacts. (See “Saving a Phone Number” on page 70.)
  - **Send email** to the entry an email using a previously entered address.
  - **Update existing** to add the current number to an existing Contacts entry.

– or –




- Tap an entry from the Call log list, and then press  and tap **View contact, Delete, Edit number before call** or **Send contact information**.

*Note:* The End-of-Call options are not displayed for calls identified as No ID, Restricted, or Unknown.

## Saving a Phone Number

The number of Contacts entries you can store in your device is limited only by available memory space. Your device automatically sorts the Contacts entries alphabetically. (For more information, see “2E. Contacts” on page 101.)

To save a new number from the Home screen:

1. Tap  >  Keypad and enter a number.
2. Press  and tap **Add to Contacts**.

– or –


Tap **Add to Contacts** (located just above the dialpad).



3. Tap  (**Add**).

4. Tap a destination for your new contact to be synchronized. With each new email account you create, the list of options grows.

- The new contact can be easily synchronized to either:
  - **Phone** (locally stored and are deleted when phone resets).
  - **Google** (Gmail account).
  - **Corporate** (Outlook-Exchange Server).

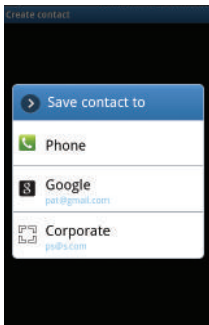

*Note:* You will not see the above option to select a destination unless you have previously established a Google or Corporate account on the device. (See “Synchronizing Accounts” on page 81.)

5. Tap the **First name** and **Last name** fields and use the onscreen or QWERTY keyboard to enter the new contact name.

6. Tap **Save** to store and update the new entry.


## *Finding a Phone Number*

---

You can search Contacts for entries by name.

1. Press  and tap .

– or –

From the Keypad screen, tap .


2. Slide open the QWERTY keyboard.

3. Enter the first letter or letters of an entry. (The more letters you enter, the more specific the search.)

4. To display contact details, tap an entry from the list green number field.

## Dialing From the Contacts List

1. Press  and tap .

**Shortcut:** From the Keypad screen, tap **Contacts** () to list entries.




2. Scroll through the list and tap the entry you want to call.
3. Tap a phone number.

## Speed Dialing

### Dialing From Favorites

You can quickly dial contacts you call frequently by adding them to your Favorites list. Although not assigned to a speed dial number, this is a quick and easy way to dial your favorite Contacts. (See “Adding Entries to Your Favorites” on page 111.)

To speed dial a contact from Favorites:

1. Press  and tap  > **Favorites** () .
2. Scroll through the list and tap the contact.
3. Tap **Call** to place a call or tap **Send message** to send a text to the contact.

Dialing a number from the **Favorites** tab is similar to dialing from the **Contacts** tab. (See “Dialing From the Contacts List” on page 72.)






### Assigning a Speed Dial Location


Only a Contacts entry can be assigned to an available Speed Dial location.

**Note:** Eight speed dial locations are available.





Location 1 is reserved for your voicemail.

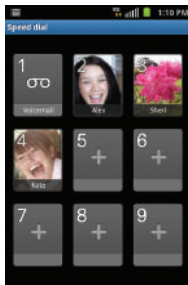
To assign a Contacts entry to a Speed Dial location:

1. Press  and tap .  
– or –  
Press  and tap  > **Contacts**.
2. Press  and tap **More > Speed dial**.
3. Tap an empty speed dial location (2-9).
4. Scroll through your Contacts list and touch an entry's phone number. Once complete, the entry's contact image and selected number are added to the selected Speed Dial location.







To call a speed dial number:

1. Press  and tap .
2. Press and hold a keypad number. The phone number is then dialed.  
– or –  
1. Press  and tap .

2. Press  and tap **More > Speed dial > [number]** (associated with the speed dial location).
3. Tap **Call**. The phone number is then dialed.

## Plus (+) Code Dialing



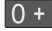



When placing international calls, Plus Code Dialing automatically enters the international access code for your location (for example, 011 for international calls made from the U.S.). (See “Activating Plus Code Dialing” on page 86.)

1. Press  and tap .
2. Touch and hold  until you see a “+” on the display screen. This is equivalent to manually entering a “011” for international dialing.
3. Dial the country code and phone number, and then tap . (The device automatically prepends the access code for international dialing, followed by the country code and phone number.)

## 2C. Settings

- ◆ Sound Settings (page 74)
- ◆ Display Settings (page 77)
- ◆ Language Settings (page 80)
- ◆ Location Settings (page 80)
- ◆ Synchronizing Accounts (page 81)
- ◆ Search Settings (page 85)
- ◆ Call Settings (page 86)
- ◆ Airplane Mode (page 86)
- ◆ TTY Use With Sprint Service (page 87)
- ◆ Security Settings (page 88)

The Settings menu can be accessed by one of two ways on the Epic 4G:

- Press  >  and tap .
- or –
- Press  and tap  > .

## Sound Settings




---

### Ringer Types

Ringer types help you identify incoming calls and messages. You can assign ringer types to individual Contacts entries, types of calls, and types of messages.



### Selecting Ringer Types for Voice Calls

Your device provides a variety of ringer options that allow you to customize your ring and volume settings.

1. Press  >  and tap  > **Sound** > **Voice call ringtone**.
2. Tap a ringtone from the available list. The ringtone briefly plays when selected.
3. Tap **OK** to assign a ringer.


## Selecting Ringer Types for Notifications

The notification area displays icons associated with user notifications such as email messages, missed calls, voicemail, upcoming events, USB connections, or Text/MMS messages. You can select the ringtone that plays when your device receives new notifications.

1. Press  >  and tap  > **Sound** > **Notification ringtone**.
2. Tap a notification ringtone from the available list. The ringtone briefly plays when selected.
3. Tap **OK** to assign a ringer.

## Activating Feature Sounds




You can select whether your device plays a sound when using the dialpad, when making an onscreen selection, and when an SD card notification occurs.

1. Press  >  and tap  > **Sound**.
2. Tap a feature to enable it. (If a green checkmark appears to the right of the feature, it is already enabled.)
  - **Audible touch tones** plays a tone while using the dialpad.

- **Audible selection** plays a sound when making any onscreen selection.
- **Screen lock sounds** plays a sound when locking or unlocking the screen.
- **Haptic feedback** causes the device to vibrate when pressing onscreen keys or with certain UI interactions.

## Adjusting the Volume Settings

Adjust the volume settings to suit your needs and your environment.

1. Press  >  and tap  > **Sound** > **Volume**.
2. Touch and drag the onscreen slider to assign the volume settings for any of the following volume levels.
  - **Incoming call volume, Media volume, System volume, or Notification volume.**
3. Tap **OK** to assign the volume levels.




*Tip:* You can adjust the ringer volume in standby mode (or the earpiece volume during a call) by using the volume button on the left side of your device.

## Vibrate




To set your device to vibrate for incoming calls and silent for notifications:

- ▶ Press the volume button down in standby mode until you will see  on the screen.



To set your device to always vibrate for incoming calls:

1. Press  >  and tap  > **Sound** > **Vibrate**.
2. Tap a feature to enable or disable it:
  - **Always**: your device vibrates for all incoming calls and notifications.
  - **Never**: your device uses sound only for all notifications and alerts.
  - **Only in silent mode**: your device vibrates for notifications and alerts when Silent mode is active.
  - **Only when not in Silent mode**: your device only vibrates for notifications and alerts when Silent mode is not active.

To set your device to vibrate while using the dialpad: and making onscreen selections

1. Press  >  and tap  > **Sound**.
2. Tap **Haptic feedback**. (If you have already checked the option, tapping it again deselects the option.)
  - This provides a physical feedback when interacting with the onscreen options.

To set the vibration intensity on your device:

1. Press  >  and tap  > **Sound**.
2. Tap **Vibration intensity**.
3. Touch and drag the onscreen slider to adjust the intensity level, and tap **OK**.

## Silence All

The Silence All option allows you to mute all sounds and stop vibrations without turning your device off (except for Media volume).





To activate Silence All:

- ▶ Press and hold the volume button down in standby mode until you see  on the screen.

To deactivate Silence All:

- ▶ Press the volume button up repeatedly to select a volume level.




To set your device to silent mode:

1. Press  >  and tap  > **Sound**.
2. Tap **Silent mode**. This option silences all audio on the device except for media and alarms. (If you have already checked the option, tapping it again deselects this option.)
3. Tap **Vibration** and select **Only when not in silent mode**. This also disables the device vibration while in silent mode. You will see  on the screen.

## Display Settings




### Changing the Screen Orientation

Although most screens will change orientation once the QWERTY keyboard is opened, this feature can be manually enabled to change the orientation for all screens when rotation is detected. (See “Changing the Screen Orientation” on page 42.)

1. Press  >  and tap  > **Display**.
2. Tap **Auto-rotate screen** (enabled by default). A green checkmark indicates the feature is enabled.
  - Clear the **Auto-rotate screen** checkmark to disable this automatic orientation adjustment.

### Window Animation

This feature provides the use of animation when onscreen windows are opened and closed. If deactivated, windows pop on and off and no transitions are applied.

1. Press  >  and tap  > **Display**.
2. Tap **Animation** and select **No animation**, **Some animations**, or **All animations**.

### Changing the Backlight Time Length




Select how long the display screen remains lit after you press any key.

1. Press  >  and tap  > **Display** > **Screen timeout**.
2. Tap a time setting (15 seconds - 10 minutes).

*Note:* Long screen backlight settings reduce the battery's talk and standby times.

## Changing the Keyboard Backlight Time Length

Select how long the keyboard stays lit after you press any key.

1. Press  >  and tap  > **Display** > **Keyboard timeout**.
2. Tap a time setting or select "**Same as Screen Timeout**".

*Note:* Long keyboard backlight settings reduce the battery's talk and standby times.

## Changing the Brightness

Adjust your screen's brightness to suit your surroundings.

1. Press  >  and tap  > **Display**.
2. Scroll down and tap **Brightness**.

3. Select the checkmark next to **Automatic brightness** to allow the device to adjust brightness automatically.

– or –

Clear the checkmark and then touch and drag the **Brightness** slider left or right to adjust the screen contrast and tap **OK**.

## Viewing Battery Use

Review which applications are draining your battery.




1. Press  >  and tap  > **About phone** > **Battery use**.
2. Tap an item to see more detailed information.

## Changing the Display Screen

Choose what you see on the Home screen (behind your shortcuts and widgets) while powering on or off the device, and when in standby mode.




*Note:* Using animated Live Wallpapers can deplete your battery faster than image wallpapers.



1. Press  >  and tap  (**Wallpaper**).
2. Tap **Gallery**, **ID wallpapers**, **Live wallpapers**, or **Wallpapers**.
  - **Gallery** lets you choose from pictures taken using the built-in camera or copied to your device as a wallpaper. You can crop the picture before setting it as a wallpaper. See “Assigning a Picture to an Entry” on page 110 to learn how to crop the picture.
  - **ID wallpapers** provides a selection of downloadable ID theme wallpapers.
  - **Live wallpapers** provides a selection of preloaded animated video wallpapers.
  - **Wallpapers** provides a selection of preloaded wallpaper images.
3. Scroll through available images and tap a selection to preview it.
4. Tap **Set wallpaper** to assign the new wallpaper.
  - or –
 Tap **Save** to assign a picture as a wallpaper.

## Horizontal Calibration

Calibrate your device by using the built-in accelerometer.





1. Press  >  and tap  > **Display** > **Horizontal calibration**.
2. Place the device on a level surface and tap **Calibrate**. The device adjusts the level of the accelerometer. During the calibration process a green circle appears onscreen and the center circle adjusts to the center position.

## Adjusting the Date and Time

Your device obtains its time and date information by using the network-provided date, time, and time zone. These values can be manually altered.

1. Press  >  and tap  > **Date and time**.
2. Tap **Automatic** to disable the feature.

**Note:** If enabled, you can not alter the date, time zone or time values.

3. Tap **Set date**. Adjust the date, month, and year by tapping  or . Tap **Set** when finished.
4. Tap **Select time zone**, and then select a time zone from the onscreen list. Scroll down the list to view additional time zones.
5. Tap **Set time**. Adjust the hour and minute by tapping  or . Tap the **am** or **pm** icon to change the value. Tap **Set** when finished.
6. Tap **Use 24-hour format** to toggle between using a 12-hour or a 24-hour format.
7. Tap **Select date format** to select how the date information is displayed on your device. The selected date format is also applied to the date displayed within the device's Alarm Clock.

## Language Settings

---

To assign the default language used by the Android operating system.

1. Press  >  and tap  > **Locale and text** > **Select locale**.
2. Tap either **English** or **Español**. All menus are then updated to the new language.

## Location Settings




---

Your device is equipped with a Location feature for use in connection with location-based services.




The Location feature allows the network to detect your position. Turning Location off will hide your location from everyone except 911.

**Note:** Turning Location on will allow the network to detect your position using GPS technology, making some Sprint applications and services easier to use. Turning Location off will disable the GPS location function for all purposes except 911, but will not hide your general location based on the cell site serving your call. No application or service may use your location without your request or permission. GPS-enhanced 911 is not available in all areas.

To enable your device's GPS Location feature:

1. Press  >  and tap  > **Location and security**.
2. Tap **Use GPS satellites**. A green checkmark indicates the GPS location feature is enabled.

To enable Location via wireless networks:

1. Press  >  and tap  > **Location and security**.
2. Tap **Use wireless networks**. A green checkmark indicates the feature is enabled.
  - This service uses available wireless networks to pinpoint your location within certain applications such as Google Maps (page 228).

3. Tap **Agree**. Enabling this feature allows Google to collect anonymous location data whether or not any location application or other related feature is active or in use.

- Tap **Use wireless networks** > **disagree** to disable the collection of data. Enabling this feature can utilize more resources and slow performance.

## Synchronizing Accounts

Your device provides the ability to synchronize data from a variety of different sources or sites. These accounts can range from Google, a Corporate Exchange Email Server, and other social sites such as Facebook, Twitter, and MySpace.

Corporate and Google accounts provide the ability to synchronize Calendar events and Contacts.

To enable the auto-sync feature:

1. Press  >  and tap  > **Accounts and sync**.

2. Tap **Auto-sync**. A green checkmark indicates the feature is enabled.
  - This feature enables the synchronization of data between your device and external sites or servers.
  - The two main components are Contacts and Calendar Events. Before these can be synchronized, they must be added to the managed accounts list.

*Important:* Any new email account should be managed and synchronized via the **Accounts and sync** menu. This process is not automatic for some accounts. If a new email account does not appear in this menu, it must be manually added and synchronized.

## Synchronizing Your Google Account

By default, there are no accounts managed by the device. These must be manually added.

To manage a new Google account:






1. Press  >  and tap  > **Accounts and sync**.
2. Tap **Add account > Google**.

3. Click **Next > Sign in**.

*Note:* If you do not already have a Google account, touch **Create** and follow the onscreen prompts to create your new account.

4. Touch the **Username** (@gmail.com) and **Password** fields and enter your information.
5. Tap **Sign in**. Your device then communicates with the Google servers to confirm your information. Your existing Gmail account then appears within the **Managed accounts** area of the screen.
  - Any changes or updates to your Gmail account are then automatically updated to your device.

To configure the Google management settings:




1. Press  >  and tap  > **Accounts and sync**.
2. Tap  within the Google account field to reveal the account's synchronization settings screen.
3. Tap the parameters you wish to synchronize (**Sync Contacts**, **Sync Gmail**, **Sync Calendar**). A green checkmark indicates the feature is enabled.
4. Press  to return to the previous screen.

## Synchronizing Your Corporate Account





By default, there are no Corporate Calendar events managed by the device. These must be manually added. (See “Synchronizing Corporate Calendar Events” on page 114.)


*Note:* Once a corporate email account is created, it is automatically added as a managed account.

To manage a new Corporate account:

1. Press  >  and tap  > **Accounts and sync.**
2. Tap **Add account > Corporate.**
3. Follow the onscreen prompts to create your new Corporate email account. (See “Corporate Email (Outlook)” on page 202.)
  - Any changes or updates to your Corporate/Outlook account are then automatically updated to your device.

To configure the Corporate management settings:

1. Press  >  and tap  > **Accounts and sync.**
2. Tap  within the Corporate account field to reveal the account's synchronization settings screen.
3. Tap the parameters you wish to synchronize.
  - **Account settings** allows you to configure:
    - **Account name** displays the name used by the device to track the account.
    - **Amount to synchronize** to assign the sync range for your incoming and outgoing emails between your device and your external exchange server. Choose how many days worth of emails should the device and server synchronize. Choose from: **1 day, 3 days, 1 week, 2 weeks, One month, or All emails.**
    - **Default account** assigns this account as the default used when sending out new emails.
    - **Empty delete items:** Allows you to delete your email account's server trash remotely.

- **Sync schedule:** Allows you to configure your email sync schedule.
- **Email size:** Configures the incoming email size allowed to pass through to your device automatically without user interaction. Larger emails will have to be retrieved manually.
- **Security policy list:** Displays a list of your current email account security policies.
- **Email notifications** enables the device to display a status bar icon  when new emails have been received.
- **Select ringtone** assigns an audible ringtone when a new or upcoming event is pending.
- **Vibrate** assigns a vibration when a new or upcoming event is pending.
- **Exchange server settings** provides access to the Domain, Password, and Exchange server parameter fields.
- **Sync Contacts** synchronizes the contacts between your device and the remote exchange server. A checkmark indicates the feature is enabled.
- **Sync Calendar** synchronizes your exchange calendar entries between your device and the remote exchange server. A checkmark indicates the feature is enabled.
- **Period to sync Calendar** assigns a period for your device to sync calendar events.
- **Add signature:** Activates the email signature feature.
- **Signature** allows you to create an outgoing email signature attached to new emails sent from your device.

4. Press  to return to the previous screen.





For more detailed Work/Corporate email information, see “Corporate Email (Outlook)” on page 202. For more information on Corporate Calendar synchronizing, see “Synchronizing Corporate Calendar Events” on page 114.

## Search Settings

---

You can use your device's search preferences to configure some aspects of Google Web search (for example, whether it makes suggestions below the Quick Search Box as you type), and what phone features you want to include in searches.

### Configuring the Search Settings

1. Press  >  and tap .
2. Press  and tap **Search settings**.
3. Tap any of the following search parameters to then alter the settings:
  - **Google search** opens a screen where you can set your Google search preferences.
    - **Show web suggestions** also includes search matches from Google's online search engine.
    - **Use My Location** uses your My Location information for Google search results and services.


- **Search history** determines whether you also wish to include personalized search history results in the list of matches.
- **Manage search history** helps to manage the personalized search history associated with your current registered Google account.
- **Searchable items** opens a screen where you can choose the search categories included in device searches.
  - Categories include: **Web, Apps, Contacts, Memo, Messaging, Music, Voice Search** or **Voicemail**.
- **Clear search shortcuts** erases the history of recently selected search results.

## Call Settings

---

Your device allows you to configure call settings such as Plus Code dialing, other international dialing options, and TTY configuration.



### Activating Plus Code Dialing



Plus Code dialing allows you to have the phone automatically dial the international access code for your location once you touch and hold . (See “Plus (+) Code Dialing” on page 73.)

1. Press  >  and tap  > **Call settings**.
2. Tap **North American dialing** to activate the feature (a green checkmark appears in the adjacent field).

### Changing the International Dialing Code

By default, the international dialing prefix (code) is set to 011. This code can not be changed until the feature is temporarily disabled. Once disabled, the field becomes accessible and can be altered.

1. Press  >  and tap  > **Call settings**.





2. Tap **North American dialing** to deactivate the feature. This enables the **International Dialing** field.
3. Tap **International Dialing**.
4. Tap the entry field and press  from the onscreen keyboard to delete the previous value.  
– or –  
Press and hold  on the QWERTY keyboard to delete the current prefix.
5. Enter a new value and tap **OK**.
6. Tap **North American dialing** to reactivate the feature. This disables the **International Dialing** field.


## Airplane Mode

---






Airplane Mode (Flight mode) allows you to use many of your device's features, such as Games, Memo, and Music, when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When you set your device to Airplane Mode, it cannot send or receive any calls or access online information.



1. Press and hold  to reveal the Phone options.
2. Tap  **Flight mode (Flight mode is OFF)**.  
– or –
  1. Press  >  and tap  > **Wireless and network**.
  2. Tap **Airplane mode** to place a checkmark in the adjacent field.

While in Airplane Mode, your device's Status area will display (.

To deactivate Airplane Mode:

1. Press and hold  to reveal the Phone options.
2. Tap  **Flight mode (Flight mode is ON)**.  
– or –
  1. Press  >  and tap  > **Wireless and network**.
  2. Tap **Airplane mode** to remove the checkmark.




## TTY Use With Sprint Service

A TTY (also known as a TDD or Text Telephone) is a telecommunications device that allows people who are deaf, hard of hearing, or who have speech or language disabilities, to communicate by telephone.

Your device is compatible with select TTY devices. Please check with the manufacturer of your TTY device to ensure that it is compatible with digital cell phones. Your device and TTY device will connect via a special cable that plugs into your phone's headset jack.

If this cable was not provided with your TTY device, contact your TTY device manufacturer to purchase the connector cable.

To turn TTY Mode on or off:

1. Press  >  and tap  > **Call settings** > **TTY**. (You will see an informational message.)
2. Read the onscreen disclaimer and tap **Yes**.

3. Tap **TTY Off** to turn TTY mode off.

– or –

Tap any of the following to enable the feature:

■ **TTY HCO**, **TTY VCO**, or **TTY Full**.

To access the state Telecommunications Relay Service (TRS) for assistance with TTY calls:

► Dial **7PQRS** **100** **100**  to reach an operator.

For additional information about Sprint Relay Services and TTY compatibility, call Sprint Relay Customer Service at **800-676-3777** or visit [www.sprintrelay.com](http://www.sprintrelay.com).

For additional technical support you may call **1-888-987-4357**, or access the following website: [www.samsung.com/us/consumer/learningresources/mobile/accessibility/pop\\_accessibility.html](http://www.samsung.com/us/consumer/learningresources/mobile/accessibility/pop_accessibility.html).

*Note:* In TTY Mode, your device will display the TTY access icon.

If TTY mode is enabled, the audio quality of non-TTY devices connected to the headset jack may be impaired.

#### **WARNING: 911 Emergency Calling**

Sprint recommends that TTY users make emergency calls by other means, including Telecommunications Relay Services (TRS), analog cellular, and landline communications. Wireless TTY calls to 911 may be corrupted when received by public safety answering points (PSAPs), rendering some communications unintelligible. The problem encountered appears related to software used by PSAPs. This matter has been brought to the attention of the FCC, and the wireless industry and the PSAP community are currently working to resolve this.

## *Security Settings*

### *Accessing the Security Menu*


All of your device's security settings are available through the Security menu. You can secure your data and limit phone access by requiring a screen unlock pattern every time your device is turned on or every time it wakes up from sleep mode (screen where the screen turns off).

- Press  >  and tap  > **Location and security.**


## *Your Device's Screen Lock Feature*

### Locking Your Device Screen

When your device is locked, you can only receive incoming calls or make calls to 911.

- Press . Locking the screen prevents accidental screen touches from activating phone functions.




### Unlocking Your Device Screen

1. Press  to awaken the device.
2. Touch and drag the lock icon up or slide the QWERTY keyboard out.

## *Your Device's Unlock Pattern Feature*

You can increase your device's security by creating a screen unlock pattern (disabled by default). When enabled, you must draw the correct unlock pattern on the screen to unlock and regain access to the device.

### Creating an Unlock Pattern

1. Press  >  and tap  > **Location and security.**
2. Scroll down to the menu list and tap **Set screen lock > Pattern.**
3. Read the information on the screen, and then tap **Next.**

4. Review the onscreen tutorial on pattern creation, and then tap **Next**.

5. Draw your pattern by touching your first onscreen point. Then, **without removing your finger from the screen**, drag your finger over adjacent points until the gray trace line overlaps each point and they are highlighted with a green circle.



**Important:** You must slide your finger on the screen to create the pattern and not touch individual dots. If you make a mistake or a point is not properly selected, a red circle will appear.

6. When you have connected at least four dots in a vertical, horizontal or diagonal direction, lift your finger from the screen.
7. Tap **Continue** to record the pattern.

8. Confirm the new pattern by redrawing it and then tapping **Confirm**.

Once the feature is enabled, additional unlock pattern options are then enabled from within the **Security and location** menu list.

## Configuring the Unlock Pattern Settings

To require the pattern for access:

1. Press > and tap > **Location and security**.
2. Place a checkmark adjacent to the **Use visible pattern** field.

To remove the visible unlock pattern from the Lock screen:

1. Press > and tap > **Location and security**.
2. Remove the checkmark adjacent to the **Use visible pattern** field.
  - Removing this checkmark prevents the unlock pattern from displaying on the unlock screen when you draw it to unlock the screen.

*Tip:* You can also enable or disable tactile feedback (vibration) for the unlock pattern with the **Use tactile feedback** option.

What to do if you have forgotten your pattern:

If you fail to draw the correct unlock pattern on the screen after five attempts, you are prompted to wait for 30 seconds before you can try again.

- ▶ If you have forgotten your screen unlock pattern, tap **Forgot pattern?**
  - Sign in using your Google account name and password, and create a new screen unlock pattern before regaining access to the Home screen.

## Changing the Unlock Pattern

1. Press  >  and tap  > **Location and security** > **Change screen lock**.
2. Draw the current pattern on the screen.
3. Draw and repeat a new pattern. (See “Creating an Unlock Pattern” on page 89.)

## Calling in Lock Mode

When your device is locked, you can only receive incoming calls or make calls to 911 or Sprint Customer Service.

1. Press  to reveal the lock screen.



*Note:* The Unlock Pattern applies if the **Require Pattern** setting is enabled.

2. Tap **Emergency call** to reveal the Emergency Keypad to place your emergency call.
  - Draw your unlock pattern to regain access to the full dialer and unlock the device.

## Using Visible Passwords

When enabled, this feature allows you to view the text being entered into a password field as you type it. So many times there are other applications that insert an asterisk (\*) as you type. This can be confusing and can cause issues. What if you mistyped the password or used the wrong case? When enabled, you can see what you are entering. This feature is enabled by default.




To disable visible passwords:

1. Press  >  and tap  > **Location and security**.
2. Tap **Visible passwords** (to remove the checkmark on the option).

## Managing Your Available Memory




You can manage the information and configuration related to both your microSD card and built-in device storage memory.

To view your device's total available memory:

1. Press  >  and tap  > **Storage**.
2. Review the two memory sections for available space information:
  - **SD card** displays the memory information specific to an installed microSD card. This amount of space can be altered by replacing the current microSD card.

- **System storage** displays the memory information specific to the built-in device memory. This memory amount can not be altered because it is part of the device hardware.

To view your microSD card storage information:

1. Press  >  and tap  > **Storage**.
2. Locate the **SD card** section.
3. Review the available fields:
  - **Total space** indicates the total size of the currently inserted microSD card. This includes both available and used space information.
    - To determine the amount of memory currently used on the card, take the total space and subtract the remaining available space.

*Note:* Not all of the microSD card is registered in the available space, as a small percentage of the storage is unread. A 16GB microSD card will show approximately 14.73GB of total space.

- **Available space** indicates the amount of remaining free memory space available on the microSD card.

- **Unmount SD card** allows you to “unmount” the microSD card from its communication to the device. This severs the connection so the card can be safely removed or reformatted.
- **Format SD card** allows you to format (erase data from) the microSD card. This can only be done after a card that has been properly unmounted.




To view your device's storage information:

1. Press  >  and tap  > **Storage**.
2. Locate the **System storage** section indicating the available storage space within the device's memory.

## Manage Running Services

This service is an efficient method for managing power consumption and processor/memory resources. Processes can be stopped until the device is restarted.

To stop a currently running service:

1. Press  >  and tap  > **Applications > Running services**.
2. Tap an onscreen process entry.

3. Read the **Stop service?** dialog and tap **Stop**.




*Note:* These stopped processes are restarted once the device is restarted (power cycled).

Third-party Task Manager applications are also available from the Google Marketplace.

## Manage Memory Usage

This service quickly displays a list of currently loaded applications and how much memory they currently occupy.

To view more information about the application:

1. Press  >  and tap  > **Applications > Memory usage**.
2. Tap an onscreen application name. The Storage area reveals the location of the application and its file size.

To rearrange the list:

1. Press  >  and tap  > **Applications > Memory usage**.
2. Press  and tap **Sort**. This sorts the list alphabetically by file name.

3. Read the **Stop service?** dialog and touch **Stop**.

## Viewing Battery Usage


This service displays both an onscreen graph and visual list to indicate the battery usage of the various device components.

- Press  >  and tap  > **Applications** > **Battery usage**.

## Using the Task Manager

Sometimes your device might seem to slow down over time, and the biggest reason for this are background applications. These are applications that were not properly closed or shutdown and are still active but minimized. The Task Manager not only lets you see which of these applications are still active in the background but also easily lets you choose which applications to leave running and which to close.

To shutdown a current application:

1. Press and hold .
2. Tap **Task Manager**. This screen contains the following tabs:





- **Active applications** display those currently active applications running on your device.
  - **Downloaded** displays any installed packages or applications from the Market that are taking up memory space. Tap **Uninstall** to remove them from your device.
  - **RAM**, which displays the amount of current RAM (Random Access Memory) currently being used and allow you to **Clear Memory** for either Level 1 or Level 2 (both Level memory locations).
  - **Storage** displays a visual graph indicating the available and used space within the **Internal phone storage** and **External SD card**.
  - **Help** provides additional battery saving techniques.
3. From the **Active applications** tab, tap **Exit** to close selected applications or tap **Exit all** to close all background running applications.



## Erasing Device Content

Use the Manage applications menu to quickly erase selected content and uninstall third-party applications stored in your device.

To clear an application's cache:

1. Press  >  and tap  > **Applications** > **Manage applications**.
2. Press  and tap **Sort by size**. This option sorts the current **Manage applications** listing to display those applications by amount of memory or cache usage.
3. Tap the application whose cache you wish to delete.
4. From the Application info screen, tap **Clear data**, **Clear cache**, and/or **Clear defaults**.

To uninstall third-party applications:

1. Press  >  and tap  > **Applications** > **Manage applications**.




*Important:* Only third-party applications can be uninstalled. Applications preinstalled on the device can not be removed.

2. Tap the third-party application, and from the **Application info** screen, tap **Uninstall**.

## Resetting Your Device

Resetting the device restores all the factory defaults, including the ringer types and display settings. All data, including downloaded applications are deleted.

*Important:* Back up your important data before you perform a factory reset of the device.

1. Press  >  and tap  > **Privacy** > **Factory data reset**. (You will see a disclaimer.)
2. Read the disclaimer and tap **Reset phone**.

*Note:* You also have the option to format the USB storage area by tapping the **Format USB storage** field.

3. If you are certain that you would like to restore all factory settings, tap **Erase everything**.



## 2D. Logs

- ◆ Viewing Call Logs (page 96)
- ◆ Logs Options (page 97)
- ◆ Making a Call From Logs (page 99)
- ◆ Saving a Number From Logs (page 99)
- ◆ Altering a Number From Logs (page 100)
- ◆ Erasing the Logs (page 100)




### Viewing Call Logs

Logs (Call History) is a list of the phone numbers (or Contacts entries) for calls you placed, accepted, or missed. Logs make redialing a number fast and easy. It is continually updated as your device automatically adds new numbers to the beginning of the list and removes the oldest entries from the bottom of the list.

The Notification area of the Home screen (upper-left) displays phone notifications, status, or alerts such as:




	<b>Call in progress:</b> Indicates there is a call currently active and in progress.
	<b>Missed Call:</b> Indicates an incoming call was missed.

To access the Logs screen:

1. Press  and tap  > .
2. Tap an entry to view available options.


**Note:** Logs record only calls that occur while the device is turned on. If a call is received while your device is turned off, it will not be included in history.


From within the Logs screen, each entry contains the phone number (if it is available) and Contacts entry name (if the number is in your Contacts).

	<b>Dialed:</b> Indicates all outgoing calls made from your device.
	<b>Received:</b> Indicates any received calls that were answered.
	<b>Missed:</b> Indicates any missed calls. These are routed to your voicemail.

## Accessing Logs From Notifications

You can also access the Logs screen from a Missed Call notification. (See “Using the Notifications Panel” on page 45.)

1. Locate  from the Notifications area of the Status bar.
2. Touch and hold the Status bar, and then slide your finger down the screen.
3. Tap the Missed call entry to open the Logs screen.

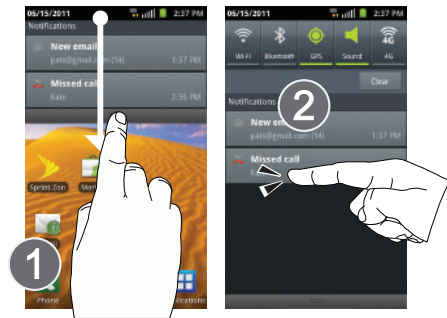


## Logs Options

This list provides easy access to redial an entry, or you can also choose to access two types of history entry lists depending on how they are touched.



- Tap an entry from the list and tap **Call** to quickly redial the selected entry. (See “Making a Call From Logs” on page 99.)

call options  
(tap)

Logs screen

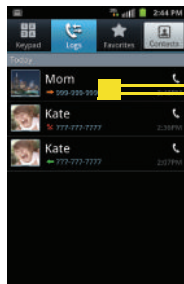

entry-specific context menu  
(touch and hold)

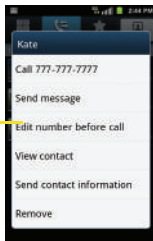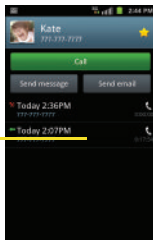

- Tap a contact entry name or number to reveal the **call options** screen:
  - **Call** allows you to redial the entry by name or number.




- **Send message** allows you to create a new text message to the selected entry.
- **Send email** allows you to create a new email that is then addressed to the entry's available email address.
- **Time** provides the time and date of the call and its duration.
- **Add to Contacts** to save the number if it is not already in your Contacts. (See "Saving a Number From Logs" on page 99.)

- Touch and hold an entry to display the **entry-specific** context menu:

- **Call [Number]** to redial the current phone number.
- **Send message** allows you to create a new text message to the selected entry.
- **Edit number before call** to make alterations to the current phone number prior to redial. (See "Altering a Number From Logs" on page 100.)
- **Add to Contacts** to save the number if it is not already in your Contacts. (See "Saving a Number From Logs" on page 99.)
- **View contact** to view the information for the currently stored Contacts entry.

- **Send contact information** to send the Log entry information via text message.
- **Remove** to delete the entry from the Logs list.


## Making a Call From Logs


1. Press  and tap  > .
2. Tap an entry, and then tap **Call**.  
– or –

Touch and hold an entry name/number from the list, and then tap **Call [Number]**.

**Note:** You cannot make calls from the Logs list to entries identified as **Unknown**, **No ID**, **Restricted** or **Private Number**.

## Saving a Number From Logs

1. Tap an entry > **Add to Contacts**.
2. From the top of the screen, tap  (**Add**).
3. Tap a destination type (**Phone**, **Google**, or **Corporate**).
4. Tap the **First name** and **Last name** fields and enter a name for the contact.
5. Tap **Save** when you have finished entering information for the contact.

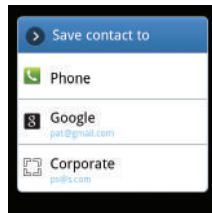

**Note:** The option to select a destination is only available if you have previously established a Google or Corporate account on the device.






After you have saved the number, your device displays the new Contacts entry in place of the previous number. (See “Contacts Entry Options” on page 107.)

**Note:** You cannot save phone numbers already in your Contacts or from calls identified as **Unknown**, **No ID**, **Restricted** or **Private Number**.

## Altering a Number From Logs

---

If you need to make a call from the Logs screen and you need to alter the number prior to dialing, you can add the appropriate prefix by prepending the number.

1. Press  and tap  > .
2. Touch and hold an entry to access the entry-specific options menu.
3. Tap **Edit number before call**.
4. Edit the number using the onscreen dialpad or delete digits by pressing  to erase the numbers.
5. Tap  once the number has been changed.




**Note:** To edit a number and save it to Contacts, tap **View contact** in step 2 above, and then edit the number and tap **Save**. (See “Editing a Contacts Entry” on page 108.)

## Erasing the Logs





---

You can delete either an individual call log entry or all current entries from the Logs list.

To clear a single entry from the Logs list:

1. Press  and tap  > .
2. Touch and hold an entry and tap **Remove**.

To clear all entries from the Logs list:

1. Press  and tap  > .
2. Press  and touch **Delete**.
3. Tap **Select all > Delete > OK**.


## 2E. Contacts

- ◆ Creating a New Contacts Entry (page 101)
- ◆ Saving a Phone Number (page 103)
- ◆ Confirming Contact Synchronization (page 103)
- ◆ Groups (page 105)
- ◆ Contacts Menu Options (page 106)
- ◆ Contacts Entry Options (page 107)
- ◆ Editing a Contacts Entry (page 108)
- ◆ Adding a Number to a Contacts Entry (page 108)
- ◆ Editing a Contacts Entry's Number (page 109)
- ◆ Sending Contacts (page 109)
- ◆ Assigning a Picture to an Entry (page 110)
- ◆ Deleting Entries (page 110)
- ◆ Adding Entries to Your Favorites (page 111)
- ◆ Adding Facebook Content to your Contacts (page 111)

**Important:** To verify your Contacts appear on your device, you must sync your email accounts after setup (**Settings > Accounts and sync**). (See “Confirming Contact Synchronization” on page 103.)

### Creating a New Contacts Entry

If existing Google and Corporate email accounts have been synchronized to your device, these will be made available to your device during the creation of new entries. These new Contacts entries can be assigned or saved to synced accounts such as Phone, Google, or Corporate.

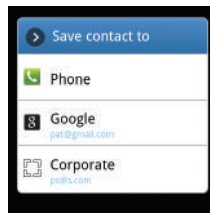




**Note:** The option to select a destination is only available once you have established a Google or Corporate account on the device.


Your device automatically sorts the Contacts entries alphabetically. You can create either a **Phone**, **Google** or **Corporate** contact.

- **Phone** contacts are stored locally on the device.

**WARNING:** If the device is ever reset to its factory default parameters, locally stored contacts can be lost.




- **Google** contacts are shared with your existing Google account and can also be imported to your device after you have created a Google Mail account.
- **Corporate** (also known as Work or Outlook) contacts are those contacts that are intended to be shared with either an Exchange Server or from within Microsoft® Outlook®.

1. Press  and tap .
2. From the top of the screen, tap  (to open the **Create contact** screen).

**Shortcut:** Enter a phone number from the keypad and tap **Add to Contacts** > . Proceed with steps 3–8.

3. Tap a destination type (**Phone**, **Google**, or **Corporate**).

**Note:** You will not see the option to select a destination unless you have previously established a Google or Corporate account on the device.

4. Tap the **First name** and **Last name** fields, and enter a name for the new entry.
5. Tap the label button (to the left of the **Phone number** field) to select a category such as **Mobile** (default), **Home**, **Work**, **Work Fax**, **Home Fax**, **Pager**, **Other**, **Custom**, or **Callback**.
6. Tap a phone number field and enter a phone number.
  - Tap  on the QWERTY keyboard to remove a previously entered phone number.
  - Tap  to enter an additional phone number
  - Tap  to remove a previously entered phone number.
7. Enter additional information such as: **Email**, **IM**, **Groups**, **Ringtone**, **Postal address**, **Organization** or **More** to input additional category information.
  - Use your finger to slide the page up or down to see additional fields and categories.
8. Tap **Save** to complete and store the new entry.








After saving the number, your device displays the new entry within the Contact list. (See “Contacts Entry Options” on page 107.)

**Tip: ICE – In Case of Emergency**

To make it easier for emergency personnel to identify important contacts, you can list your local emergency contacts under “ICE” in your device’s Contacts list. For example, if your mother is your primary emergency contact, list her as “ICE–Mom” in your Contacts. To list more than one emergency contact, use “ICE1–\_\_\_” “ICE2–\_\_\_” etc.

## Saving a Phone Number

To save a number from the keypad:

1. Press  and tap .
2. Enter a phone number using either the onscreen dialpad or QWERTY keyboard.
3. Tap **Add to Contacts** > .
  - or –
  - Press  and tap **Add to Contacts** > .
  - If you're updating an existing contact, proceed to step 6.

4. Tap a destination type (**Phone**, **Google**, or **Corporate**).

**Note:** You will not see the option to select a destination unless you have previously established a Google or Corporate account on the device.





5. Tap the **First name** and **Last name** fields, and enter a name for the new entry.
6. Tap the label button (to the left of the **Phone number** field) to select a category such as **Mobile** (default), **Home**, **Work**, **Work Fax**, **Home Fax**, **Pager**, **Other**, **Custom**, or **Callback**.
7. Tap **Save** to complete and store the new entry.

## Confirming Contact Synchronization

Syncing data from your managed accounts allows you to add and manage a new or existing contact from your online or remote accounts to your device. Prior to syncing, you must first have an active Google or Corporate account with current Contact entries, and be signed into your account via the device.

With syncing, any Contacts entries (with phone numbers, email addresses, pictures, etc.) are updated and synced with your Epic 4G.

For more information about syncing existing managed accounts, see “Synchronizing Accounts” on page 81.

1. Press  >  and tap  > **Accounts and sync.**
2. Locate the email account containing the contacts you wish to synchronize.
3. Tap  within the adjacent account field to reveal the account's synchronization settings screen.
4. To synchronize Gmail Contacts, tap **Sync Contacts**. A green checkmark indicates the feature is enabled.  
– or –

To synchronize Corporate Contacts, tap **Sync Contacts**. A green checkmark indicates the feature is enabled.


*Note:* Any change on either side (Phone, Gmail, or Corporate/Outlook Contacts), is reflected on the other side after a sync process.

The process of updating your Contacts tab can take several minutes. If after 10-20 minutes, your list has not been updated, repeat step 2-3.



5. Your **Contacts** tab then reflects any updated Contact information.
  - This update process works both ways. For example, any changes on the device are updated to your Gmail Contacts list after sync.

*Note:* Syncing of contacts requires you are logged into your Gmail and Corporate accounts via the device.

Contacts tab

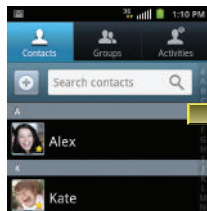

Contact entry's Overview page

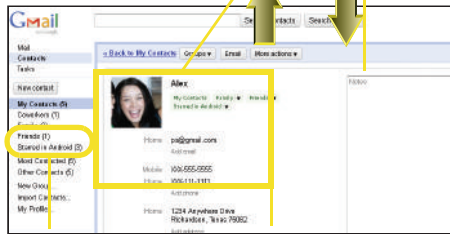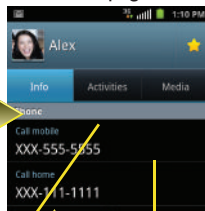




Contact Group

Contact Details




## Groups

This feature allows you to add a new or existing contact to a call group. This group can be one of the already present groups (Family, Friends, or Work) or a user-created group.

To create a new group:




1. Press  and tap  > **Groups**.
2. If prompted, select a type (**Phone**, **Google**, **Corporate**, etc.).
3. Press  and tap **Create**.
4. Tap the **Group** field, and enter a name for the new group.
5. Tap **Ringtone** and select a ringtone for the group.
6. Tap **Save** to store the newly created group.


To add an existing contact to a current group:

1. Press  and tap  > **Groups** > [type] (if prompted) > [name of group].
2. Tap .



3. From the list of contacts, tap the contact(s) you want to add or tap **Select all**. (A green check-mark appears next to the selected entries.)
4. Tap **Add** to add the contact(s) to your group.
5. Tap an existing group.


To send a message to a group:

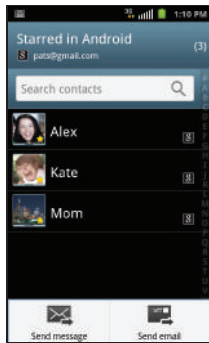1. Press  and tap  > **Groups**.
2. If prompted, select a type (**Phone**, **Google**, **Corporate**, etc.).
3. Tap an existing group, and press  > **Send message**.
4. Select the recipients of the new message (indicated by a green checkmark).
5. Tap **Send**.
6. Type your message, and tap **Send**.



## Contacts Menu Options

1. Press  and tap .
2. Tap and hold an entry and select from the available contact menu options:
  - **Edit** to edit the currently selected Contacts entry. (See “Editing a Contacts Entry” on page 108.)
  - **Delete** to erase the currently selected Contacts entry. (See “Deleting Entries” on page 110.)
  - **Join contact** to link the current contact to another current contact. Similar to a “see also” feature. If you can’t remember a contact’s information, linking entries can help you find the person you are looking for.
  - **Send contact information** to send the current entry info via text message.

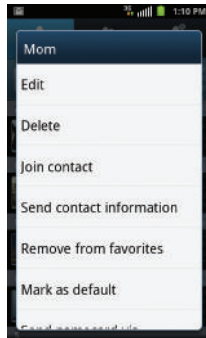




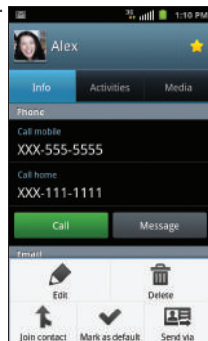
- **Add to favorites** to copy the current Contacts entry to the list within the Favorites tab (page 111).
- **Remove from favorites** to remove the current Contacts entry from the Favorites tab.
- **Add to group** to add the Contact to a group (page 105).
- **Mark as default** to assign one the entry's available numbers as the default (main) contact number.
- **Send namecard via** to send the current Contact entry's information to an external recipient via either **Bluetooth**, **Email** (Exchange or Internet), **Gmail** or **Messaging**. (See "Sending Contacts via Bluetooth" on page 156.)

*Note:* Prior to using the Bluetooth feature, it must first be enabled, and the recipient's device must be visible.

In addition to Contact's information, other file types (video, image, or audio) can be sent using Bluetooth.

## Contacts Entry Options


1. Press  and tap .
2. Tap an entry to display the Contact entry's overview screen. This screen contains Name, contact numbers, email, and linked contact information.
3. Press  to reveal the context menu specific to this entry.
4. Tap an available option. (See "Contacts Menu Options" on page 106 for descriptions.)



Entry's Overview screen

## Editing a Contacts Entry

---

1. From the Contact's overview screen, press  and tap **Edit**.
2. Tap an option, such as **First Name** or **Email address**, to begin editing.
  - **[image icon]** to assign a picture to the entry. (See "Assigning a Picture to an Entry" on page 110.)
  - **First name/Last name** to edit the current name.
  - **Phone** to add or delete a phone number. (See "Adding a Number to a Contacts Entry" on page 108.)
  - **Email** to add or delete an email address.
  - **IM** to assign an existing Google IM client contact name.
  - **Groups** to edit the group association.
  - **Ringtone** to assign a unique ringtone to the entry.
  - **Postal address** to enter a physical address for the contact. Choose from **Home**, **Work**, **Other**, or **Custom**.
  - **Organization** to enter business information such as company name.





- **More** to add additional categories such as **Notes**, **Nickname**, **Website**, **Internet call**, **Birthday**, and **Anniversary**.

*Note:* Some fields may appear in different order or within the **Add more fields** menu.

3. Tap **Save** to store your updates.


## Adding a Number to a Contacts Entry

---


1. From the Contact's overview screen, press  and tap **Edit**.
2. From the phone numbers area, tap  (**Add phone number**) to create a new **Phone number** field within the selected phone number category.
  - Tap  to enter an additional phone number.
  - Tap  to remove a previously entered phone number.

3. Tap the label button (to the left of the **Phone number** field) to select a category such as **Mobile** (default), **Home**, **Work**, **Work Fax**, **Home Fax**, **Pager**, **Other**, **Custom**, or **Callback**.
4. Tap the **Phone number** field to enter the new number.
5. Tap **Save** to update the new number to the existing Contacts entry.




## Editing a Contacts Entry's Number


1. From the Contact's overview screen, press  and tap **Edit**.
2. Tap an existing phone number field.

**Note:** Touch and hold the **Phone number** field to activate the Edit text menu.

3. Tap  to clear one digit at a time.
4. Re-enter or edit the number using the onscreen dialpad.
5. Tap **Save** to update the number to the existing Contacts entry.

## Sending Contacts

1. Press  and tap .
2. Tap an entry to open its overview page.
3. Press  and tap **Send via** to send the current Contact entry's information to an external recipient via either:
  - **Bluetooth** to transmit this contact to another bluetooth-compatible device.
  - **Email** to attach the contact card to a new outgoing email (Exchange or Internet).

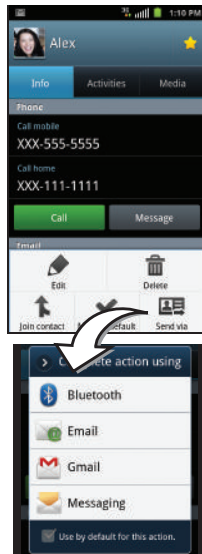



- **Gmail** to attach the contact card to a new outgoing Internet-based email.
- **Messaging** to attach the contact card to a new outgoing text message.

## Assigning a Picture to an Entry

---

Assign a picture to display each time a certain contact calls you.

Assigning a picture via the device:

1. From the Contact's overview screen, press  and tap **Edit**.
2. Tap a contact image (upper-left).
  - Open an image location (**Album** or **Take photo**) and tap an onscreen image to prepare it for use.
    - Press  to return to the **Select picture** page where you can now select the new image.
3. Touch and drag along the sides of the yellow border box to begin cropping the desired area, and then tap **Save** to assign selected picture.

Applying a picture to your Google Contact from within your online Gmail:

1. Log into your Gmail account and go to your Contacts page.
2. Select your Contacts entry (with a checkmark) and click the image area (**Change Picture**).
3. Click **Browse** to locate a local copy of your image.
  - You can also choose an image from other sources such as Picasa® Web.
4. Crop the visible area of your selected picture and click **Apply Changes**.
5. Sync your new contact from your online Gmail to your device. (See “Confirming Contact Synchronization” on page 103.)

## Deleting Entries



---

1. From the Contact's overview screen touch and hold an entry from the list.
2. From the **Contacts Entry** context menu, tap **Delete**.
3. Tap **OK** to confirm the deletion.



## Adding Entries to Your Favorites

The Favorites tab is a listing that can help you quickly access your most used or preferred Contacts entries.

1. Press  and tap .
2. Touch and hold the entry name from the Contacts tab listing.
3. From the **Contacts Entry** context menu, tap **Add to favorites**.

*Note:* Another method to add or remove an entry from your favorites is to toggle the state of the star icon on the Contact's details page (upper-right). Tap to add the entry to your favorites (star is lit), tap again to remove.






## Adding Facebook Content to your Contacts

You can now add your Facebook contacts' information, such as pictures, email, and phone numbers directly to your Contacts list. All of the current contacts' information is then migrated over to your phone.

*Note:* You must first have an active Facebook page populated with friends sharing their contact information.

If a Contacts entry already exists in with a slightly different name, separate entries are created and can later be linked (joined) together into a single entry.




### Log into Facebook

1. Press  and tap  >  (Facebook).
2. Tap **I agree** to accept the terms of the End-User License Agreement.
3. Enter your account's access **Email** and **Password** information. and tap **Login**.
4. Press  >  to confirm your current friends list.



### Adding Your Facebook Friends to Your Contacts

Before you can add your friends, you must add your Facebook account to the list of managed and synchronized accounts. This process is similar to synchronizing your email accounts.

This process not only synchronizes your contact information but also your status, events, and more.

1. Press  and tap .
2. From the Contact's tab, press  and tap **Get friends > Add account > Add account**.
3. Tap **Facebook** from the **Integrated contact accounts** section of the **Add an account** screen.
  - This process adds your Facebook account to the list of managed and synchronized accounts. In this case for the purpose of maintain your Facebook contacts synchronized with your device's Contacts list.
4. Tap Next and enter your account's **Email** and **Password** information.
5. Tap **Log in** to begin the synchronization process.
6. Select a sync interval (from **1non** to **Once a day**) and tap **Next**.
7. Tap those setting you wish to synchronize (all are enabled by default). A green checkmark indicates the feature is enabled.

- Choose from: **Sync Contacts**, **Add all friends**, or **Sync Calendar**.



8. Tap **Done** to save these settings and return to Accounts and sync screen.
9. Press  and tap  to confirm your Facebook contacts are now synchronized and appear in your Contacts list.

## *Linking Multiple Contact Entries*


Linking similar contact entries allows you consolidate listed entries. Multiple entries such as: Alex Home, Alex At Work, Alex S., can be consolidated or joined into a Single Alex entry listing.

When synchronizing Facebook friends to your existing Contacts list, some friend names may not match your current list names.




*Note:* If friends do not have a posted phone number, then only their email address will be added.

1. Press  and tap .
2. Tap an entry from the list you wish to use as your main source of contact information. This “duplicate” entry will be used as your primary Contacts entry. Its Contact image, phone and email address will be used as the primary for this contact.


*Note:* In the case of Facebook contacts, if you prefer to use their image, phone, email, and other personal information as your main source for the selected contact, it is recommended that you select this Facebook contact as your main Contacts entry in step 2.

3. From the Contact entry’s overview screen, press  and tap **Link contact > Show all contacts**.
4. Tap the duplicate Contacts entry.
  - This duplicate entry is then merged into the previous entry. The previous image, email, phone numbers, are kept as the primary and supplemented by your newly “joined” entry.

## Unlinking Contacts

1. Press  and tap .
2. Tap an entry from the Contacts list.
3. From the Contact entry’s overview screen, press  and tap the linked Contacts area.

*Note:* The number of linked contacts appear within the Linked Contacts area, ex: 2 linked contacts. The source of those contacts are also shown (ex: Google, Facebook, etc..)

4. Tap  to remove a selected contact source from the current entry. The removed entry then re-appears within the Contacts list.

## 2F. Calendar & Tools

- ◆ Before You Begin (page 114)
- ◆ Calendar (page 114)
- ◆ My Files (page 120)
- ◆ Memo (page 121)
- ◆ Clock (page 121)
- ◆ Calculator (page 124)
- ◆ Updating Your Device Firmware (page 125)
- ◆ Updating Your Android Operating System (page 128)
- ◆ Updating Your Profile (page 128)
- ◆ Updating Your PRL (page 128)

### Before You Begin

Prior to using Google applications such as Gmail and calendar, you will need to have an active Google account (page 63).

Google Calendar is an application that synchronizes new and existing entries between your device and your online Google account.

## Calendar


### Synchronizing Corporate Calendar Events

Corporate calendars are not synchronized to your device by default; this account type must be manually added. Although we previously described how to add a corporate account to your list of managed accounts, this only allows your device to track that account type's email.

Calendar events must be added and tracked by your device separately.





To add corporate calendar events to your device's managed account tracking:

1. Press  >  and tap  > **Accounts and sync.**




2. Locate the corporate email account within the Managed accounts area of the screen.
  - If not present, you will have to add this account (page 83).
3. Tap  within the Corporate account field to reveal the account's synchronization settings screen.
4. Tap **Sync Calendar** to activate the synchronization of calendar events between your device and the remote exchange server. A green checkmark indicates the feature is enabled.

*Note:* It might be necessary to toggle the feature on and off to force a re-sync.

To manually sync your calendar events to a managed corporate account:

1. Press  >  and tap  > **Accounts and sync.**
2. Tap  within the Corporate account field.
3. Tap the green checkmark to toggle it off then back on. (See “Synchronizing Your Corporate Account” on page 83.)



## Configuring Calendar Settings

1. Press  and tap  (**Calendar**).
2. Tap  > **Settings**.
3. Tap an onscreen option:
  - **Calendars** displays the currently managed accounts. Tap an entry to change the sync state of the account.
  - **Calendar sync** provides access to the sync settings screen where you can enable/disable the sync status of your managed accounts and add more accounts.
  - **Default calendar** allows you to choose the calendar account (exchange, gmail, etc..) used as the default calendar for new events.
  - **Default view** configures the current Calendar default view for events. **Month view** is the default. Choose from: **Month**, **Week**, **Day** or **List**.
  - **Day views** configures how the available events are displayed onscreen. Choose from **Time grid** or **Event list**.
  - **First day of week** sets the calendar week to start with either **Sunday** or **Monday**.

- **Hide declined events** hides (checked) or displays (unchecked) those events that have been declined via the calendar application.
- **Lock time zone** locks (checked) your scheduled event times and dates to the time zone selected within the Select time zone field. Times and dates will not be modified even if you physically move to another time zone. Uncheck to have the device adjust events based on your physical time zone.
- **Select time zone** assigns a time zone to your device.
- **Set alerts & notifications** assigns a function to the status bar notification. Choose from: **Alert**, **Status bar notification**, or **Off**.
- **Vibrate** configures the vibration settings for event notifications. **Never** is the default. Choose from: **Always**, **Only in Silent mode**, or **Never**.
- **Select ringtone** assigns a notification ringtone for event alerts.


## Adding an Event to the Calendar

Your Calendar helps you organize your time and reminds you of important events.





1. Press  and tap  (**Calendar**).

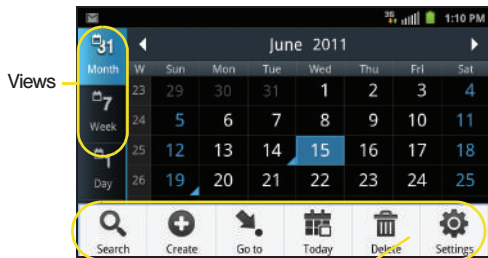*Note:* To synchronize calendar events among your Google and Corporate accounts, make sure they are being managed by your device (page 81).

- The default view for the Calendar is the **Month** view.
- To change the view, tap the available tabs along the top (in portrait view) or the left (in landscape view) of the Calendar screen. Choose from **Month**, **Week**, **Day**, and **List**.



Calendar Menu Options

2. Tap a day to which you would like to add an event to reveal the **Create event** screen.
3. Tap the **Tap to enter title** field and enter a title for the event.
4. Select a **From/To** date for the event by tapping the corresponding fields, and adjusting the month, day, and year by tapping  or .
  - Tap **Set** when finished.
5. Select a time for the event by tapping the time field and then adjusting the hour and minute by tapping  or .
  - Tap the **AM** or **PM** button to change the value.
  - Tap **Set** when finished.
6. Tap the **Time zone** field and select a time zone for the event.
7. Tap the **All day** field to assign this as an all day event. If assigned as an all day event, the time fields are removed as options.
8. Assign the new calendar event to a current account by tapping the **Calendar** field and then selecting an account. For this example we are choosing a Google account.
  - **My calendar** are calendar entries that are stored locally on the device and not part of an email account.
  - **Google/Gmail** are calendar entries that are synchronized between your device and your online Google account.
  - **Corporate** are calendar entries that are synchronized between your device and either an Exchange Server or available from within Microsoft® Outlook®.
  - **Important** are calendar entries that are synchronized between your device and assigned to an important category.
  - **default calendar** are calendar entries that are synchronized between your device and your default email account.

*Note:* Some of the previous options appear when compatible email accounts (such as Outlook) have been created and synced. If also supported, additional categories appear: **Business**, **Red Category+**, **Important**, and **Personal**.

- Tap **OK** when finished.

9. Enter a location for the event in the **Location** field.

10. Assign participants by either entering an email address directly into the participants field or selecting from one of the four available sources:
- **Contact** allows you to choose participants from your current pool of available contacts (local and managed accounts). Tap entries and tap **Add**.
  - **Group** allows you to choose participants by selecting the main group categories. Participants assigned to those groups are then automatically added and notified of your new event. Tap entries and tap **Add**.
  - **Search** allows you to search for recipients from within your available email contacts of the currently assigned email account (step 7). Tap entries and tap **Add**.

*Note:* The **Search** option appears when the calendar type is set to **Corporate**.

- **Recently** allows you to select from recent email recipients. Tap entries and tap **Add**.


*Note:* When you add participants to a Calendar event, an email invitation is sent to the participants' email when the event is saved.

11. Select an alarm time by tapping the **Alarm** field.
- Select **None**, **On time**, **5 mins before**, **15 mins before**, **1 hour before**, **1 day before**, **2 days before**, **1 week before**, or **Customize**.
  - **Customize** allows you to manually enter a desired number. Tap **Set** to complete the custom assignment.
12. Select a recurrence cycle for the event by tapping the **Repeat** field.
- Select **One-time event**, **Daily**, **Weekly (every [day])**, **Every 2 weeks (day)**, **Monthly (every second [day])**, **Monthly (on day [Number])**, and **Yearly (on [Month Day])**.
13. Enter a description for the event in the **Description** field.
14. Tap **Save** to store the new event and synchronize it with your selected account.




## Event Reminders



When your device is turned on and you have an event alarm scheduled, there are several ways your device alerts you to scheduled events:

- By playing a short beep.
- By illuminating the backlight.
- By indicating a  icon within the Status bar.

To view additional options:

1. Tap the Status bar, and then slide your finger down the screen to open the Notifications panel.
2. Tap the upcoming event name from the onscreen list to display the event within the Calendar notifications screen.
3. Tap an option.
  - **Snooze all** to snooze all event reminders for five minutes.
  - **Dismiss all** to dismiss all event reminders.
  - Press  to keep these reminders in place and close the Notifications panel.

## Viewing Events



1. Press  and tap . Once an event has been created, entries are shown in the default view.
2. To view a Calendar event farther out, tap either **Week** or **Month**.
3. Tap the day for which you would like to view events. (Your device lists events in chronological order.)
4. To display an event's details, tap it from the current screen.

## Going to the Current Day's Calendar Menu

- From Calendar view, press  and tap **Today**.




*Note:* If in the Month view (tab), days containing calendar events are indicated by a blue triangle. Tap a day from this view to display a list of event within the Day tab.

## Editing an Existing Event

1. Press  and tap .
2. Tap an event to reveal its details.
3. Press  and tap **Edit**.

4. Make your modifications (event name, location, participants, alarm, repetition, etc).
5. Tap **Save** to store the new updates and synchronize them with your assigned account.

## Erasing a Day's Events




1. Press  and tap .
2. Tap the **Day** tab on the Calendar screen.
3. Press  and tap **Delete**.
4. Tap **Select all** to delete all events on this day.

– or –

Place a checkmark only on those events you want deleted.

5. Tap **Delete** to erase the selected events and then synchronize this action with your managed account.

## Erasing All Events

1. Press  and tap .
2. From the main Calendar screen (Month tab view), press  and tap **Delete**.

3. Tap **Select all** to delete all events currently available for this managed account.

– or –

Place a checkmark only on those events you want deleted.

4. Tap **Delete** to erase the selected events and then synchronize this action with your managed account.

## My Files






My Files allows you to view a list from which you can launch a file if the associated application is already on your device (ex: MP4 and DivX).

*Note:* The best recoding setting for MP4 video playback on this device is H.264 for Android™ or PSP™.

## Accessing File Viewer

- Press  and tap  >  (**My Files**). Navigation in this viewer works on a hierarchy structure with folders, subfolders, etc.

## Opening Files in File Viewer

1. Press  and tap  >  (**My Files**).
2. Tap a folder and scroll down or up until you locate your selected file.
  - Tap the **Up** tab to back up into a higher directory.
  - Tap the **Home** tab to back up to the root directory.
  - Press  and tap the **View by** to change the way the files are displayed onscreen. Choose from: **List**, **List and details**, or **Thumbnail**.
  - Press  for these additional options: **Share**, **Create folder**, **Delete**, **View by**, **List by**, and **More** (**Move**, **Copy**, **Rename**, **Bluetooth visibility** and **Settings**).
3. Once you have located your file, tap the file name to launch the associated application.

## Memo

Your device comes with a memo application that you can use to compose and store reminders and notes to help keep you organized.

To compose a memo:

1. Press  and tap  >  (**Memo**).

*Note:* If there is already a previously stored memo on the device, touch the **Create memo** button to create a new memo.

2. Tap the onscreen text field and enter your desired text using either the QWERTY keyboard or onscreen keyboard.
3. Adjust the paper color by tapping one of the five available colors.
4. Tap **Save** to store the new memo.

## Clock

Your device comes with a built-in series of clock functions such as Alarm, World clock, Stopwatch, and Timer

### Alarm Clock


The alarm clock that has multiple alarm capabilities. There is no limit to the number of alarm events you can create.


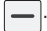
To create an Alarm event:

1. Press  and tap  >  (Clock) > **Alarm**.

*Note:* Upon your first launch of the Alarm Clock application, three alarm presets are set up by default and ready for you to customize. These alarms are turned off by default.

2. Tap  (**Create alarm**) to activate an alarm.

*Note:* A new alarm can also be created from the Alarm tab by pressing  > **Create**.

3. To edit an alarm, adjust the hour and minute by tapping either  or .
- Tap the **AM** or **PM** button to change the value.

*Note:* The number of hours and minutes left before the alarm goes off is briefly displayed onscreen after you set the new alarm time.

4. Tap the **Alarm repeat** field to select a repeating status for the alarm.- Place a checkmark adjacent to the desired repetition category: **One-time event**, **Daily**, **Every weekday (Mon-Fri)**, or **Weekly**.

- You can also select specific days by tapping the day entries **Monday**, **Tuesday**, **Wednesday**, **Thursday**, **Friday**, **Saturday** or **Sunday**.


- Tap **Save** to store your changes.

5. Select a unique name for this alarm event by tapping the **Alarm** field, entering a new label, and tapping **Save**.
6. Tap the **Snooze** field to enable the feature and select a snooze interval and repetition value.
7. Tap the **Smart alarm** field to enable the smart alarm feature and select an alarm duration and a smart alarm tone.
8. Tap **Alarm type** to select an audio playback type: **Melody**, **Vibration**, **Vibration and melody**, or **Voice**.- Tap a ringtone to hear an audio sample.
9. Tap **Alarm tone** to select an audio ringtone that will sound with the alarm.- Tap a ringtone to hear an audio sample.
10. Touch and slide the alarm volume slider to the desired level.
11. Tap **Save** to store the new alarm event.

To delete an Alarm event:

1. Press  and tap  > .
2. Touch and hold a desired alarm event, tap **Delete**.






To disable an Alarm event:

1. Press  and tap  > .
2. Touch and hold the active alarm event's green alarm icon. This turns the icon grey.

## World clock

This application allows you to view the time in other parts of the world. World clock displays time in hundreds of different cities, within all time zones around the world.

To add a new city entry:

1. Press  and tap  >  (**Clock**) > **World clock**.
2. Tap  (**Add city**) to add a city to the World clock list.  
– or –  
Press  and tap **Add**.





3. Scroll through the list of available major cities

– or –





Enter a city within the **Search cities** field.



4. Tap a city to add it to the list.

To remove a city from the list:

1. Press  and tap  >  > **World clock**.
2. Press  and tap **Delete**.
3. Place a check mark alongside those cities you wish to remove from the list.
4. Tap **Delete** to complete the deletion.




To assign Daylight Savings Time:

1. Press  and tap  >  > **World clock**.
2. Touch and hold an onscreen entry and tap **DST settings**.
3. Select an available DST setting: **Automatic**, **Off**, **1 hour**, or **2 hours**.
  - A  alongside those cities you wish to adjust for daylight savings time.

- Selecting **1 hour** adds an extra hour to the current city time and displays this icon .
- Selecting **2 hours** adds 2 hours to the current city time and displays this icon .




## Stopwatch

Your device comes with a built-in stopwatch.

1. Press  and tap  >  > **Stopwatch**.
2. Tap **Start** to turn on the timer.
3. Tap **Lap** to place a marker on the list. This helps you keep track on certain time segments.
  - or –
 Tap **Stop** to stop the process.
4. Tap **Restart** to continue the stopwatch function from its last paused time marker.
  - or –
 Tap **Reset** to stop the process and restart the counter back to zero.




## Timer

Use a timer to count down to an event based on a preset time length (hours, minutes, and seconds).

1. Press  and tap  >  > **Timer**.
2. Select a countdown time length for the alert by setting the **Hours**, **Minutes**, and **Seconds** value.
3. Tap one of these fields and use the onscreen keypad to assign a new value.
4. Tap **Start** to store the entry and start the countdown.

## Calculator

Your device comes with a built-in calculator.

1. Press  and tap  >  (**Calculator**).
2. Enter numbers using your keyboard or by tapping an onscreen key.

3. Press and hold  on the QWERTY keyboard to clear all numbers.

– or –

Touch and hold  to clear all numbers.

- Tap **C** (CLEAR) to clear all numbers.
- Orient the device into Landscape mode to view and use the **Advanced panel** (left) to access more advanced features such as **sin** (Sine), **cos** (Cosine), and **tan** (Tangent), indicated by blue onscreen buttons.

*Note:* These advanced panel features are also available when the keyboard is opened in Landscape mode.

## Updating Your Device Firmware




You can update your device's software using the **Update Firmware** option.


### Before Updating Your Firmware

**Updating your device firmware will erase all user data from your device.** You must back up all critical information before updating your device firmware.





### Back Up All Data Prior to Update

To back up your Gmail information:



1. Press  >  and tap  > **Accounts and sync**. (See “Synchronizing Accounts” on page 81.)
2. Tap the **Auto-sync** option to enable the feature (checkmark). (See “Configuring Data Synchronization Settings” on page 207.)
  - If the **Auto-sync** option is on, email, Calendar and Contacts automatically synchronize whenever a change is made.

- If the **Auto-sync** option is off, simply tap  within the account field to reveal the account's synchronization settings screen.

To back up your Exchange Mail information:

1. Press  >  and tap  > **Accounts and sync**. (See “Corporate Email (Outlook)” on page 202 and “Synchronizing Accounts” on page 81.)
2. Tap  within the Corporate account field to reveal the account's synchronization settings screen.
3. Toggle the onscreen checkmark to manually synchronize the desired parameters (Contacts or Calendar).

To back up stored text messages:




1. Press  and tap .
2. Select the text message from the list to view the message thread.
3. Touch and hold on a portion of the text message from the string. The **Message options** context menu appears.

*Note:* You can back up stored text messages by forwarding them to your own phone number. Open the messages after you have updated your firmware.

4. Tap **Forward**.
5. Enter the recipient's phone number and tap **Send**.

To back up your Google applications:

Your Google™ application purchases are reloaded remotely and can be re-installed after the update is applied. (See “Using the Android Market” on page 208.)






1. Log into your Google account via the device.
2. Press  and tap .
3. Press  and tap **My apps**.
4. Scroll through the list of previously downloaded Google applications and choose the one you wish to reinstall.
5. Follow the onscreen instructions.




As an added precaution, to preserve any data on your microSD card, please remove it from your device prior to starting the update process. (See “Removing the microSD Card” on page 133.)

## Updating Your Device Firmware




Once you have backed up all your data, use the **Update Firmware** option to update your device firmware.

1. Press  >  and tap  > **About phone** > **System updates**.
2. Tap **Update Firmware**. (Your device automatically downloads and installs any available updates. You may be required to power your device off and back on to complete the software upgrade.)  
– or –
1. Locate the System Update Available icon (  ) in Notifications.
2. Touch and hold the Status bar, and then slide your finger down the screen.
3. Tap  to open the **System Updates** screen.

4. Tap **Download** and follow the onscreen instructions. (  appears within the Status bar to indicate the device is downloading the necessary files.)
5. Touch **Restart and install** to complete the process.

*Note:* The Notifications panel can also be opened on the Home screen by pressing  and then tapping **Notifications**.





## Confirm Your Current Device Firmware

1. Press  >  and tap  > **About phone**.
2. Scroll to the bottom of the page and locate the **Baseband version** read-only field.

## Updating Your Android Operating System

---


This option allows you to update the Android Operating System (OS) on your device via an over-the-air connection.

1. Press  >  and tap  > **About phone** > **System updates** > **Update Android**.
2. Follow the onscreen instructions.
  - or –
1. Locate the Android OS Update Available icon () in Notifications.
2. Touch and hold the Status bar, and then slide your finger down the screen.
3. Tap the **Android update available** field.
4. Tap **Download** and follow the onscreen instructions.

## Updating Your Profile

---

This option allows you to automatically update your online user profile information. If you choose to change your user name and select a new one online, you must then update the user name on your device.

1. Press  >  and tap  > **About phone** > **System updates** > **Update Profile**.
2. Follow the onscreen instructions.

*Note:* If your data services or account syncing ever seems to go out unexpectedly, use this feature to reconnect with the network.

## Updating Your PRL

---

This option allows you to download and update the PRL (preferred roaming list) automatically.

1. Press  >  and tap  > **About phone** > **System updates** > **Update PRL**.
2. Follow the onscreen instructions.

## 2G. Voice Services

- ◆ Voice Dialing (page 129)
- ◆ Opening Menus With Voice Dialer (page 131)
- ◆ Text-to-Speech (page 131)
- ◆ Voice Search (page 132)

*Important:* The **Voice Control** (Speech to Action) feature will not launch if you are currently in an active menu.

### Voice Dialing

You can use your device's built-in automatic speech recognition (ASR) software, called **Voice Dialer**, to dial a phone number in your Contacts or to launch phone functions. All you have to do is to talk into the phone, and ASR will recognize your voice and complete tasks by itself.


### Activating Voice Dialer

- Press  and tap  >  (**Voice Dialer**).

The screen displays “**Listening**” and the phone prompts you to say the name of the command you want to use. To complete your task, simply follow the voice prompts or touch an onscreen option.

Available ASR commands include:

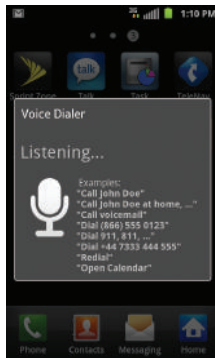


- **Call** <Name> to call an entry in your Contacts list. (See “Calling a Contact With Voice Dialer” on page 130.)
- **Dial** <Number> to call a spoken phone number.
- **Redial** to redial the last number dialed.



- **Open** <Menu> to jump directly to menu items or applications. (See “Opening Menus With Voice Dialer” on page 131.)




*Tip:* Use Voice Dialer in a quiet environment so it can accurately recognize your commands.

## Calling a Contact With Voice Dialer

1. Press  and tap  >  (**Voice Dialer**).
2. When you see “**Listening**,” say “**Call**” followed by the name and the label for the contact you wish to call. For example, say “**Call John Smith Mobile**.” The device dials the number stored for the contact “**John Smith**” with the label “**Mobile**.”
  - If the location is not recognized or the name does not have a phone number stored in Contacts, you will see an onscreen list of possible options.

- If a name has only a single number, or if you know the name but are not sure which number to call, say “**Call**” followed by the name only. For example, say “**Call John**.”
  - If the name is recognized and there is only one phone number for the name, your device immediately places the call.
  - If there are multiple numbers, you will see a list; tap a number to place the call.




## Calling a Phone Number With Voice Dialer

1. Press  and tap  >  (**Voice Dialer**).
2. When you see “**Listening**,” say “**Call**” followed immediately by a valid string of digits to be dialed, for example, say “**Call 555 555 5555**.”


Speak naturally and clearly and remember to speak one digit at a time—1-800 should be pronounced “One Eight Zero Zero.”

## Opening Menus With Voice Dialer

You can jump directly to many menu items or applications by saying “Go to” followed by a menu option.

1. Press  and tap  >  (Voice Dialer).
2. When you see “Listening,” say “Open.” A list of valid actions is displayed.
3. Tap an option to open the selected menu.

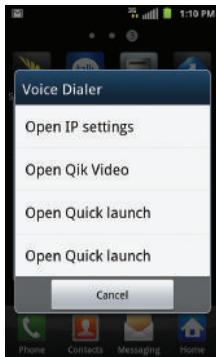


*Tip:* You can also say “Open” and the name of the item you want to open. You will see the item displayed. Tap **OK** to open it.



## Text-to-Speech


Allows the device to provide a verbal readout of onscreen data such as messages and incoming caller information (based on Caller ID).

### Text-to-Speech Settings

1. Press  >  and tap  > **Voice input and output > Text-to-speech settings.**
2. Configure the available options to alter the settings associated with this feature.
  - **Listen to an example** plays a short example of what the text-to-speech feature will sound like on your device when activated.

- **Always use my settings** overrides any conflicting application settings with those you set up within this text-to-speech settings screen. If enabled and available as a feature, your device will default to using the text-to-speech feature.
- **Default engine** sets the speech synthesis engine used for the spoken text. Default is **Pico TTS**.
- **Install voice data** confirms the installation of necessary data required for voice synthesis. Tap this to download and install the free app from Android market.


*Important:* Before initial use, activate the **Install voice data** function to properly activate and use the text-to-speech feature.

- **Speech rate** adjusts the rate at which onscreen text is spoken by the device. Choose from: **Very slow**, **Slow**, **Normal**, **Fast**, and **Very fast**.
  - **Language** assigns the language used by the verbal readout. Choose from **English (United States)** or **Spanish (Spain)**.
  - **PicoTTS** assigns the TTS settings. These settings must be obtained from the Android Market.
3. Press  to return to the previous screen.

## Voice Search

Voice Search works similarly to the Voice Dialer. It uses built-in voice recognition software to listen to your spoken words, convert those to text, and then launch a Google search using that text.

1. Press  and tap  >  (**Voice Search**).  
– or –

From the Home screen, tap  on the right side of the Google Search bar.

2. Speak clearly into the microphone. If an error occurs, tap **Speak again**.
3. From the onscreen Google search page, tap a matching entry.

## 2H. microSD Card

- ◆ Your Device's microSD Card and Adapter (page 133)
- ◆ Connecting Your Device to Your Computer (page 135)
- ◆ microSD Card Settings (page 139)
- ◆ Important Connection Information (page 140)

### Your Device's microSD Card and Adapter

#### The microSD Card


Your device is equipped with a preinstalled 16GB SDHC (Secure Digital High Capacity) memory card. It allows you to store images, videos, music, and voice data in your device.

**Important:** Camera, Camcorder, and Music playback features are dependant on having a memory card installed. Although the Epic 4G comes with a 16GB card (preinstalled), it can support cards of up to 32GB.

#### Removing the microSD Card

1. Remove the battery cover.
  - Grasp the device firmly and locate the cover release latch.
  - Place your fingernail in the opening and firmly “pop” the cover off the device (similar to a soda can).
2. Firmly press the card into the slot and release it. The card should pop partially out of the slot.
3. Remove the card from the slot.
4. Replace the battery cover.

**Note:** You can easily damage the microSD card and its adapter by improper operation. Please be careful when inserting, removing, or handling it.

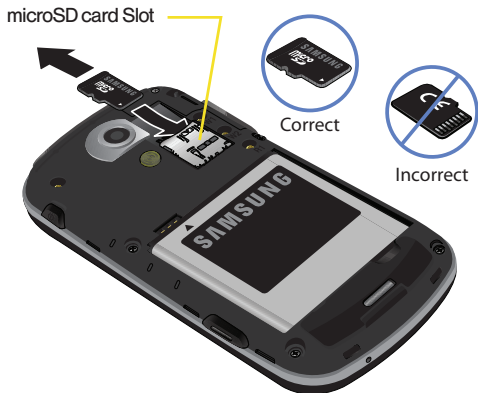

**WARNING:** Do not over-insert the card as this can damage the contact pins.

**Note:** Be sure to use only recommended microSD cards ( $\leq 32\text{GB}$ ). Using non-recommended microSD cards could cause data loss and damage your device.

## Re-inserting the microSD Card

1. Remove the battery cover.
  - Grasp the device firmly and locate the cover release latch.
  - Place your fingernail in the opening and firmly “pop” the cover off the device (similar to a soda can).
2. Orient the card with the gold strips facing down.
3. Firmly press the card into the slot and make sure that it catches with the push-click insertion.

**Note:** Make sure the microSD card's gold contacts are facing down.

## microSD Icon Indicators

The following icons show your microSD card connection status at a glance:



– card has been unmounted (released from use) from the device.



– card is being prepared for use and for mounting.



– card has been removed.



**WARNING:** **DO NOT** remove a microSD card while the device is accessing or transferring files. Doing so will result in loss or damage of data. Make sure your battery is fully charged before using the microSD card. Your data may become damaged or lost if the battery runs out while you are using the microSD card.

## *microSD Adapter*

The supplied microSD adapter allows you to use microSD cards in other SD-compatible devices, like computers, cameras, and printers. Before using the microSD card with an SD-compatible device, you will need to insert the microSD card into the microSD adapter.

To insert the microSD card into the microSD adapter:

- ▶ With the label side of the microSD card facing up, insert the card into the supplied microSD adapter, and gently slide the card until it is fully inserted.

To remove the microSD card from the microSD adapter:

- ▶ Hold the front edge of the microSD card, and gently pull it out to remove it from the adapter.

## Write Protection

The microSD adapter has a built-in Write Protection lock to prevent accidental overwriting or removal of your data when the microSD card and adapter are inserted in another device.

- ▶ Slide the Write Protection lock tab down into the “Lock” position to prevent overwriting of data. To allow data to be added or removed from the microSD card, slide the Write Protection lock tab up into the normal position.

## *Connecting Your Device to Your Computer*

Before using your device’s mass storage capabilities, you need to prepare your device’s data services to synchronize with your desktop or laptop computer. Once you have connected the device to the computer, you can transfer your data to or from the microSD card.

**Note:** If you experience a setup issue, refer to the “Troubleshooting the USB Connection” on page 137.

## Before You Begin

Here is what you will need to have before you can successfully establish a connection between your Epic 4G and a computer.



- microSD card (internally installed prior to start)
  - compatible USB cable (included)
1. With the microSD card installed, connect your device to your computer using a compatible USB cable. (Wait for the connection to be completed. When connected, the host computer will automatically detect your device.)
  2. The USB icon () now appears in the top left Notifications area on your device.
  3. Tap **Mass Storage** from the **Select USB mode** screen.
    - **Charging** uses the connected USB cable to charge the device via your computer's USB port.
    - **Mass Storage** uses the connected USB cable to provide data communication between the device and your computer. The device then appears as an external drive with its own drive letter.

- **Tethered Mode** allows your computer to obtain an external data connection by using the device's wireless data services and a wired USB connection. Choose from **3G tethered mode** or **4G tethered mode**.

*Note:* Tap the **Remember this choice** option to store this action as your new default. If enabled, you will not be prompted with this screen again.

*Important:* If you are using your device for Tethering, you may be prompted for additional drivers.  
The **Samsung Mobile Driver** for SPH-D700 contains the ADB, CDMA, & WiMAX drivers that are required for use of either Tethering (Phone as a Modem) or to utilize development tools.

- Go to [samsung.com](http://samsung.com) and visit the D700 Product page, where you can navigate to **Support** tab > **Downloads** to obtain this driver.
- The online [FAQ](#) also provide detailed information about this driver.
- A wireless data connection can be done by using the device's Sprint Hotspot feature (page 193).

4. Touch and drag down the Status screen to reveal the Notifications page (or from the Home screen press  and tap  **Notifications**).
5. Tap **USB connected > Mount** to join the card to your device. This “mounting” allows you to access and copy files between your computer and your device's microSD card.

***Important:*** The external microSD card **MUST BE MOUNTED** before your computer detects it and you are able to communicate with it.

6. Locate the newly created drive letter on your computer. You can now begin to use the microSD card as a storage device.

To remove the connection:

- When you have finished transferring data, click the USB device icon on your computer's taskbar, and follow the onscreen instructions to safely unplug the USB cable.

## Troubleshooting the USB Connection

If there is ever a circumstance where your setup of the device's USB connection has an issue, try these troubleshooting tips.

1. Verify your computer is able to access the Internet prior to connection and that this connection is not lost during these troubleshooting procedures.
  - Some system connection might require additional setup data available online.
2. Once the device is connected to the computer via USB, select **Connect to PC** to begin the USB connection setup.
  - Selecting the **Charge** option closes the USB data connection.
  - Verify the device screen shows **Connected to PC**.
3. From the **Found New Hardware Wizard**, select **Install the software automatically** and click **Next**.
4. Select a connection to the Internet and click **Next**.

5. If a **Cannot install this Hardware** screen appears, follow these steps:
  - Click **Finish**.
  - From your computer, right-click on the **My Computer** icon and select **Properties** (from the onscreen context menu).
  - Click the Hardware tab and select the **Device Manager**.
  - Open the **Other devices** section from the list. Confirm there is a **USB MMC Storage** item listed.
    - This entry indicates an error occurred during the USB driver installation process.
  - Using your mouse, right-click on **USB MMC Storage** and select **Update Driver....**
  - From the **Found New Hardware Wizard**, select **Install the software automatically** and click **Next > Finish**.

## Transferring data directly to and from the microSD

You can access the microSD card and use it just as easily as any other communicating storage device.

1. Connect the USB cable and on the phone screen, touch **Connect to PC**.
2. From your computer, double-click **My Computer > [device drive letter]** entry to display the folders and files currently available on the internal microSD card.
3. Open a folder on your computer and begin the transfer process of files from your computer to the internal card's target folder.

*Note:* This process can be reversed from copying data from the microSD card back to the connected computer.

To remove the connection:

1. When you have finished transferring data, click the USB device icon on your computer's taskbar, and follow the onscreen instructions to safely unplug the USB cable.
2. To complete the disconnect process, touch and drag the **Disconnect** slider.

## Creating Folders in the microSD Card





1. From your computer, double-click **My Computer** > **[device drive letter]**.
2. Right-click and select **New** > **Folder**.

**WARNING:** Do not alter or delete the four default folders. These are used by the phone to parse-out the different file formats and contents.

## microSD Card Settings





### Viewing Memory in the microSD Card

The Epic 4G allows you to review the memory allocation of both your device's internal storage and that of the microSD card.

1. Press  >  and tap  > **Storage**.
2. Review the available information.
  - The storage capacity page is divided into two sections: **SD card** and **System storage**.
3. Press  to return to the previous page.

## Formatting the microSD Card

Formatting a microSD card permanently removes all files stored on the card.

1. Press  >  and tap  > **Storage**.
2. Touch **Unmount SD card** to release the microSD card from its use by the device. The  icon appears within the Notifications area to indicate an unmounted internal microSD card.
3. Once released, tap **Format SD card** > **Format SD card** > **Erase everything**.
  - Once completely formatted, the card is automatically re-mounted (reconnected for use by the device).

**Important:** The formatting procedure erases all the data on the microSD card, after which the files **CANNOT** be retrieved. To prevent the loss of important data, please check the contents before you format the card.

## Important Connection Information

---

- To avoid loss of data, DO NOT remove the USB cable, the microSD card, or the battery while accessing or transferring files.
- DO NOT use your computer to change or edit folder or file names on the microSD card, and do not attempt to transfer large amounts of data from the computer to the microSD card. Doing so may cause the microSD card to fail.
- DO NOT turn off or restart your computer, or put it into standby mode, while using a mass storage device. Doing so will result in loss or damage of data.
- The microSD card can only be mounted for use by either the device or a connected computer. Prior to accessing the card via a different method, it must first be unmounted from its current device (phone or computer-USB).

*Important:* The microSD card can only share a connection with one device at a time, either your device or your computer (via its USB connection), not both. You can not browse the contents of the card via your device if they are currently being browsed via your PC.


## 2l. Camera

- ◆ Taking Pictures (page 141)
- ◆ Recording Videos (page 147)


**Note:** The storage card that comes installed on your device allows you to use the camera and camcorder features. All pictures and videos are stored on the external 16GB microSD card. The Epic 4G supports SDHC cards of up to 32GB.

### Taking Pictures

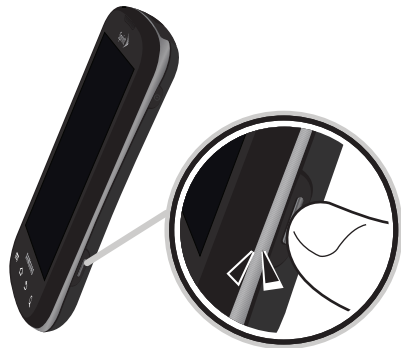


Taking pictures with your device's built-in camera is as simple as choosing a subject, pointing the lens, and pressing a button.





To take a picture:

1. Press and hold the camera key (  ) located on the side of the device.

– or –

Press  and tap  >  to activate the camera mode. (Additional camera options are available through the camera settings page. See “Camera Settings” on page 142 for more information.)

2. Holding the phone in landscape mode, use the display screen as a viewfinder and aim the camera lens at your subject.
3. Press  or tap  until the shutter sounds. (Your device automatically saves the picture to the **DCIM** folder on the microSD card.)

**Important:** Use the Up and Down Volume buttons to zoom in and out on your subject. Up to 4x zoom is available.

## Camera Settings


From camera mode (  ), touch the arrow (  ) on the left side panel to display settings options.

**Note:** Access a menu's multiple options by tapping the onscreen arrows.

- **Self-portrait mode** to activate the front camera and take a picture of yourself.



**Note:** **Self-portrait mode** uses the Epic 4G's front-facing camera lens, so you can still use the display screen to see what you're shooting.

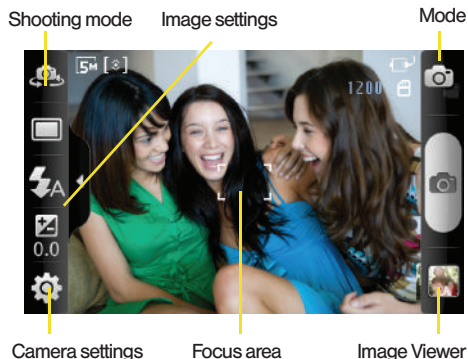- **Shooting mode** to select a mode for shooting pictures. This determines how many images are shot and if any effects are applied to them.
  - Choose from: **Single shot** (default), **Beauty**, **Smile shot**, **Continuous**, **Panorama**, **Vintage**, **Add me**, **Action shot** and **Cartoon**.



- **Flash** to select a flash setting. Choose from: **Auto flash** (default), **Off**, and **On**.



- **Exposure value** to adjust the overall image brightness. Use the onscreen slider to adjust the value.
- **Settings** to access the camera options and settings:
  - **Camera:** to configure the camera hardware parameters (page 143).
  - **Settings:** provides additional image shooting options.
- **Focus area** to force the camera to focus on a specific area on the display, even if it's not in the center of the frame. This is useful if you want to make sure that even though an object isn't in the center of the shot it will still be in focus.
- **Mode** to toggle between the camera and camcorder modes.
- **Shoot** to take the picture. Press  or tap  to capture the shot.
- **Image Viewer** to review the saved pictures. Tap the arrows to view additional pictures.
  - Additional features in the viewer include **Share**, **Set as**, **Delete** and magnify.


## Camera Options and Settings


Tap the settings icon  to access the options and settings screens where there are two available tabs.

- ▶ Tap **OK** to exit from a menu and return to the Settings tab.

– or –

Tap a setting option to reveal an onscreen description.






- **Camera**  for general camera settings:
  - **Outdoor visibility** to adjust the display screen for better viewing outdoors.
  - **Focus mode** to set the focal properties of the camera lens. Choose from **Auto focus** (default), **Macro** (close up images), or **Face detection** (focus is on people's faces in front of the camera).
  - **Scene mode** to select a camera setting for better image capture under different lighting environments. Choose from: **None** (default), **Portrait**, **Landscape**, **Night**, **Sports**, **Party/Indoor**, **Beach/Snow**, **Sunset**, **Dawn**, **Fall colour**, **Firework**, **Text**, **Candlelight** and **Backlight**.


- **Timer** to set a time delay before the camera remotely takes a picture (self-timer). Once a time is selected, and you click the shoot button, you will hear and see a countdown before the image is taken. Choose from: **Off**, **2 sec**, **5 sec**, or **10 sec**.
- **Resolution** to set the image resolution. Choose from: **5M** (2560x1920), **W4M** (2560x1536 widescreen), **3.2M** (2048x1536), **W2.4M** (2048x1232 widescreen), **2M** (1600x1200), **W1.5M** (1600x960 widescreen), **0.3M** (640x480), or **W0.4M** (800x480 widescreen).
- **White balance** to compensate for color differences found within different lighting conditions. Choose from: **Auto** (default), **Daylight**, **Cloudy**, **Incandescent**, or **Fluorescent**.
- **Effects** to apply different color effects onto images. Choose from: **Normal** (default), **Negative**, **Black and White** or **Sepia**.
- **ISO** to assign a shutter speed. Choose from: **Auto** (default), **100**, **200**, **400**, or **800**.
- **Metering** to determine the way in which the camera determines the exposure. Choose from: **Centre-weighted** (default), **Spot**, or **Matrix**.
- **Anti-Shake** to help prevent blurriness due to normal movements and shaking while taking the picture.
- **Auto contrast** to provide clear images even under backlight conditions where the light can vary the image.
- **Blink detection** to warn you of possible subject blinking before you shoot an image.
- **Image quality** to set the image quality for your image. Choose from: **Superfine** (default), **Fine**, or **Normal**.
- **Adjust** to manually adjust image contrast, color saturation levels, and sharpness.
- **Settings**  for additional image settings:
  - **Guidelines** to view image guidelines on your screen as you take a picture.
  - **Review** to display the recently shot image for review. Choose from: **Off**, **2 sec**, or **On**.
  - **GPS tag** to add GPS location information to your images.
  - **Shutter sound** to assign a sound when the image is taken. Choose from: **Sound 1** (default), **Sound 2**, **Sound 3**, or **Off**.

- **Reset** to reconfigure your camera settings back to their defaults.
- **Firmware Check** to manually detect if there is a new camera firmware update available.



## View Your Pictures

The Gallery is where you can access the Gallery of stored camera images.

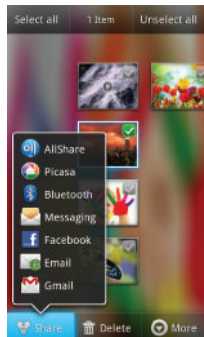


1. Press  and tap  > .
2. Select a folder location (ex: **Camera**) and tap an image to view your picture.
  - Pressing  from the main Gallery screen reveals gallery-specific options **Share**, **Delete**, and **More**.
  - From the image folder, touch and hold any desired images to select them (indicated by a green checkmark) and press  for



options such as **Share** (AllShare, Bluetooth, Email, Facebook, Messaging, Picasa, Email, and Gmail), **Delete**, and **More** (Details, Set as, Crop, Rotate left, or Rotate Right).

- Tap an image to open it, and press  for options such as **Share** (AllShare, Bluetooth, Facebook, Messaging, Picasa, Email, or Gmail), **Delete**, and **More** (Details, Set as, Crop, Rotate left, or Rotate Right).
- Press  to return to the previous screen.

## Camera Image Settings

1. Press  and tap  > .
2. From **Camera** gallery, tap an image icon to open the image.
  - Use the zoom buttons (upper-right of the image) to zoom in or out.

**Note:** **Picture options** can also be accessed by touching and holding the image from the gallery. These options include: **Share**, **Delete**, and **More**.

**Note:** Tap an onscreen image to display the available options (**Zoom**, **Slideshow**, or **Menu**).



3. Tap **Slideshow** to initiate an onscreen slideshow displaying every image in the current folder.

– or –




Tap **Menu** to display the following image menu options:

- **Share** to activate the picture share menu from which you can choose to share the current image via one of many options:
  - **AllShare** to use the AllShare application to share your image with other communicating devices (page 225).
  - **Bluetooth** to send the image to another device via Bluetooth.
  - **Facebook** to insert your image into your Facebook page.
  - **Messaging** to insert your image into a new outgoing MMS message (multimedia text message).
  - **Picasa** to upload your image to your Picasa account. Tap **Upload** to complete the process.
  - **Email** to attach your image to a new email message.

- **Gmail** to attach your image to a new Gmail email message.
- **Delete** to delete the image.
- **More** to open additional image options such as: **Details**, **Set as**, **Crop**, **Rotate Left**, and **Rotate Right**.
  - **Details** to display image details such as Title, Type, Date taken, Album, Location, Latitude, and Longitude.
  - **Set as** to assign the image as either the **Home screen wallpaper** (Home screen background) or to a current **Contact icon** (display image).
  - **Crop** to crop the image. Crop the image and tap **Save** to a new version of the original.
  - **Rotate** to rotate the image. Options include: **Rotate left** or **Rotate right**.

## Assigning Pictures





After taking a picture, assign it as a picture ID for a Contacts entry or as the Home screen background image (wallpaper).

1. Press  and tap  > .





2. From the **Camera** gallery (or other image folder), tap an image icon to open the image.
3. With the picture displayed, tap **Menu > More > Set as**, and select an option.
  - **Home screen wallpaper** to assign the picture as a background image. Crop the image by dragging the orange border box and tap **Save** to assign the picture.
  - **Contact icon** to assign the picture to a Contacts entry as a picture ID. Tap an entry from the Contacts tab, crop the image by dragging the orange border box and tap **Save** to assign the picture.

## Recording Videos



In addition to taking pictures, you can record, view, and send videos with your device's built-in video camera.

1. Press and hold the camera key () located on the side of the device.
  - or –
  - Press  and tap  >  to activate camera mode.

**Important:** Use the Up and Down Volume buttons to zoom in and out on your subject. Up to 4x zoom is available.

2. Tap  in the upper right corner to activate camcorder mode (  ).
3. Holding the phone in landscape mode, use the display screen as a viewfinder and aim the camera lens at your subject.
4. Select a recording mode:
  - **Normal:** the file size limit is determined by the available storage space remaining in your SDHC storage card.
  - **Limit for MMS:** the file size is limited by the restriction placed on video files that can be attached to MMS text messages. Depending on your settings, this can be up to 50 seconds.
5. Press  or tap  to begin recording.

6. Press  or tap  to pause recording.  
– or –

Press  or tap  to stop recording. (Your device automatically saves the video within the DCIM folder on the microSD card.)



## Camcorder Settings

From camcorder mode () , touch the arrow () on the left side panel to display settings options.

**Note:** Access a menus multiple options by tapping the onscreen arrows.

- **Recording mode** to set the image quality for your image. Choose from: **Normal** (for SDHC card storage) or **Limit for MMS** (sending the video in an MMS/video message).
- **Flash** set the flash on or off.
- **Exposure value** to adjust the overall image brightness. Use the onscreen slider to adjust the value.
- **Resolution** to set the video resolution. Choose from: **1280x720**, **720x480**, **640x480**, **320x240**, or **176x144**.
- **Settings** to access the camera options and settings:
  - **Camcorder:** to configure the camera hardware parameters (page 149).
  - **Settings:** provides additional image shooting options.

- **Mode** to toggle between the camcorder and camera modes.
- **Shoot** touch to begin shooting the video.
- **Video Viewer** to review the saved videos. Tap the onscreen arrows to view additional videos.
  - Additional features in the viewer include **Share**, **Play**, or **Delete**.


## Camcorder Options and Settings


Tap the settings icon () to access the options and settings screens where there are two available tabs.

- ▶ Tap **OK** to exit from a menu and return to the Settings tab.

– or –




Tap a setting option to reveal an onscreen description.

- **Camcorder**  for general camera settings:
  - **Outdoor visibility** to adjust the display screen for better viewing outdoors.

- **Timer** to set a time delay before the camcorder remotely shoots a video (self-timer). Once a time is selected, and you click the shoot button, you will hear and see a countdown before the video is shot. Choose from: **Off**, **2 sec**, **5 sec**, or **10 sec**.
- **White balance** to compensate for color differences found within different lighting conditions. Choose from: **Auto** (default), **Daylight**, **Cloudy**, **Incandescent**, or **Fluorescent**.
- **Effects** to apply different color effects onto videos. Choose from: **Normal** (default), **Negative**, **Black and White** or **Sepia**.
- **Video quality** to set the quality for your video. Choose from: **Superfine** (default), **Fine**, or **Normal**.
- **Adjust** to manually adjust video contrast, color saturation levels, and sharpness.
- **Settings**  for additional video settings:
  - **Guidelines** enable to view guidelines on your screen as you shoot the video.
  - **Audio recording** enable the recording of audio within your video. Remove the checkmark to turn off this feature and record only video.

- **Review** enable the display the recently shot image for review.
- **Reset** reconfigures your camcorder settings back to their default parameters.
- **Firmware Check** to manually detect if there is a new camera firmware update available.


## Video Settings

1. Press  and tap  > .
2. From **Camera** gallery, tap a video icon to begin video playback.

– or –

Touch and hold the video icon to select the video and display the following video menu context menu options:



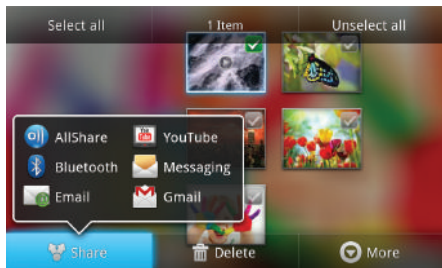

- **Select all** to place a checkmark on all files within the current folder.
- **Unselect all** to remove checkmarks on all files within the current folder.
- **Share** to share the selected video via one of many options:
  - **AllShare** to utilize the AllShare application to share your video with other communicating devices.
  - **Bluetooth** to send your selected videos to an external Bluetooth-compatible device.

- **Messaging** to attach your video to a new MMS message.
- **YouTube** to upload your selected video file to a YouTube page. Tap **Upload** to complete the process.
- **Email** to attach your video to a new email message.
- **Gmail** to attach your video to a new Gmail email message.
- **Delete** to delete the current video.
- **More** to open additional video options such as:
  - **Details** to display video details such as Title, Type, Date taken, Album, Location, Latitude, and Longitude.

## 2J. Bluetooth

- ♦ Turning Bluetooth On and Off (page 152)
- ♦ Using the Bluetooth Settings Menu (page 153)
- ♦ Pairing Bluetooth Devices (page 154)
- ♦ Sending Contacts via Bluetooth (page 156)
- ♦ Disconnecting Bluetooth Connection During an Active Call (page 157)

### About Bluetooth

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, computers, printers, and wireless devices. The Bluetooth communication range is usually up to approximately 30 feet.





## Turning Bluetooth On and Off

By default, your device's Bluetooth feature is set to **Off**. Turning Bluetooth on activates the internal Bluetooth antenna.

*Note:* Activating Bluetooth can drain your battery faster and reduce your available usage times. It is recommended that if you do not need it active, turn it off.

It is also recommended to turn off your Bluetooth within locations that prohibit its use.

To turn Bluetooth on:

1. Press  >  and tap  > **Wireless and network** > **Bluetooth settings**.
2. Tap **Bluetooth** to activate it (a green checkmark indicates it is active). When active,  appears within the Status area.

To turn Bluetooth off:

- ▶ Press  >  and tap  > **Wireless and network** > **Bluetooth settings**.
  - Tap to remove the green checkmark and deactivate Bluetooth.

## Bluetooth Status Indicators

The following icons show your Bluetooth connection status at a glance:



– Bluetooth is active



– Bluetooth is connected (paired) and communicating

[no icon] – Bluetooth is disabled (default status)


## Using the Bluetooth Settings Menu

The **Bluetooth settings** menu allows you to set up many of the characteristics of your device's Bluetooth service, including:

- Entering or changing the name your device uses for Bluetooth communication and description
- Setting your device's visibility (or "discoverability") for other Bluetooth devices
- Displaying your device's Bluetooth address

To access the Bluetooth Settings menu:

1. Press  >  and tap  > **Wireless and network > Bluetooth settings**.
2. Set your Bluetooth options: **Device name**, **Discoverable**, and **Scan devices**.

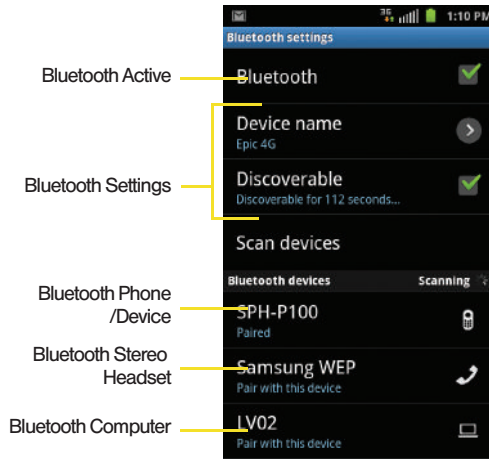

To change your Bluetooth name:

1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, tap **Device name**, and enter a new name.
3. Tap **OK** to complete the rename process.

To make your device visible:

1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, tap **Discoverable**.
  - Making your device visible allows it to be detected by other devices for pairing and communication.

*Note:* Your device is visible/discoverable for up to 120 seconds (2 minutes). This value appears as a countdown within this field.

To scan for Bluetooth devices:

1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, tap **Scan devices** to search for visible external Bluetooth-compatible devices such as headsets, devices, printers, and computers.

## *Pairing Bluetooth Devices*


---

### Paired Devices

The Bluetooth pairing process allows you to establish trusted connections between your device and another Bluetooth device. When you pair devices, they share a passkey, allowing for fast, secure connections while bypassing the discovery and authentication process.

To pair your device with another Bluetooth device:

1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, tap **Discoverable**. Your device must be visible to successfully pair with an external device.

3. Tap **Scan devices**. (Your device will display a list of discovered in-range Bluetooth devices.)
4. Tap a device from the list to initiate pairing.
5. Enter the passkey or PIN code and tap **OK**.
6. The external device will then have to also accept the connection and enter your device's PIN code.
  - Once successfully paired to an external device,  appears within the Status area.

*Note:* Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth-compatible devices.

*Note:* Pairing between two Bluetooth devices is a one-time process. Once a pairing has been created, the devices will continue to recognize their partnership and exchange information without having to re-enter a passcode again.

To disconnect a paired device:

Disconnecting a paired device breaks the connection between the device and your Epic 4G, but retains the knowledge of the pairing. At a later point when you wish to reconnect the device, there is no need to setup the connection information again.

1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, touch and hold the name of the previously paired device.
3. Tap **Unpair** to confirm disconnection.

*Note:* Disconnections are manually done but often occur automatically if the paired device goes out of range of your Epic 4G or it is powered off.




## Sending Contacts via Bluetooth

Depending on your paired devices' settings and capabilities, you may be able to send pictures, Contacts information, or other items using a Bluetooth connection.

*Note:* Prior to using this feature, Bluetooth must first be enabled, and the recipient's device must be visible.

In addition to Contact's information, other file types (video, image, or audio) can be sent using Bluetooth.

*Note:* If no devices are detected, tap **Scan devices** to begin a new search.



1. Press  and tap .
2. Tap an entry to open its overview page.
3. Press  and tap **Send via > Bluetooth**.

4. Tap a paired device.
  - The external Bluetooth device must be visible and communicating for the pairing to be successful.

See “Sending Contacts” on page 109.



## Disconnecting Bluetooth Connection During an Active Call

- ▶ During an active call, where the audio is being routed through a connected Bluetooth device (headset or hands-free connection), tap **Bluetooth** to route the device's audio through the connected Bluetooth headset (On) or through the speaker (Off).
  - When the call is routed to a Bluetooth headset, the current call area is surrounded by a blue box, the **Bluetooth** button indicates it's on, and shows the **Bluetooth** call icon ().
  - When turned off, the call is routed through either the earpiece or speaker, the call area is surrounded by a green box, the **Bluetooth** button indicates its off, and shows (.

**Note:** Communication can be toggled between the Bluetooth headset and the device speaker by tapping the **Headset** button On or Off.





*Section 3*  
***Sprint Service***



## 3A. Sprint Service: The Basics

- ◆ Visual Voicemail (page 160)
- ◆ Text Messaging (SMS) (page 166)
- ◆ Multimedia Messaging (MMS) (page 168)
- ◆ Caller ID (page 172)
- ◆ Call Waiting (page 173)
- ◆ Making a 3-Way Call (page 173)
- ◆ Call Forwarding (page 174)
- ◆ Roaming (page 175)

### Visual Voicemail



Visual Voicemail gives you a quick and easy way to access your voicemail. Now you can find exactly the message you are looking for without having to listen to every voicemail message first. This new feature periodically goes out to your voicemail, and gathers the caller information from all of the current voicemails.

It then populates a list with the caller name and number, along with the length of time and priority level of the voicemail message.

### Setting Up Your Visual Voicemail

Your device automatically transfers all unanswered calls to your voicemail, even if your device is in use or turned off. You should set up your Sprint voicemail and personal greeting as soon as your device is activated.

*Note:* To set up your traditional voicemail box, see “Setting Up Your Voicemail” on page 6.


1. Press  and tap .
2. Tap **Personalize now** and follow the system prompts to:
  - Create a password (part of standard voicemail).
  - Record your name announcement.
  - Record your greeting.
3. When prompted to enter information, tap **Dialpad** to bring up the onscreen dialpad to enter your numeric responses.


**Note: Voicemail Password**



Sprint strongly recommends that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your device is able to access your voicemail messages.

- Once you have completed the setup process, return to the voicemail page (see step 1).
- Tap the **Welcome to Voicemail** message on the screen to play a brief explanation of the voicemail services.

The following is a description of the features available while reviewing a voicemail message.

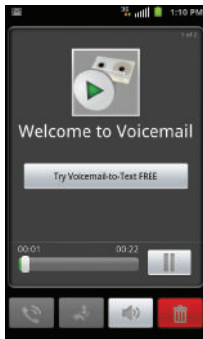**Note:** Press  > **Lock** to prevent the message from accidentally being deleted.



- **Timeline** provides a visual timeline for the current message. Touch and drag this bar to scrub through the message to different points.
  - Tap  to pause the playback, tap  to resume.
- **Call** to call the person who left the voicemail message.
- **Reply** to reply to the message. You can then reply to the sender or forward it to anyone with either an email or phone number. This allows you to send this voicemail message to several recipients at the same time. You can tag the reply message for both Urgency and Privacy.
  - Tap **Send** to deliver the new message.
- **Speaker Off/On** to turn the speakerphone on or off during playback. If the speakerphone feature was enabled within the Voicemail Settings menu, the speakerphone will always be automatically enabled during voicemail playback (page 163).
- **Delete** to delete the current voicemail message. Tap **OK** to confirm the deletion.

## Listening to Multiple Voicemail Messages




When you are done listening to a voicemail message you can easily access other voicemail messages without returning to the main voicemail screen.

1. Listen to the current voicemail message.
2. Swipe your finger left or right to display the next or previous message. (It will begin playing automatically.)

You can navigate through voicemail messages as frequently as you'd like. You can even move to the next or previous message before you're finished listening to the current one.




## Configuring Voicemail Options

To access the voicemail menu options:

1. Press  and tap .
2. Press  and select from the following:
  - **Compose** to compose a new voicemail message.
  - **Play all new** to listen to all new messages.
  - **Undelivered** to list all undelivered voicemail messages.




- **Delete** to delete selected messages from your current list of available voicemail messages.
- **Search** to search through voicemail messages for keywords.
- **Settings** to configure your voicemail application settings.

To access a voicemail message's options:



1. Press  and tap .
2. Tap a voicemail message and press  and select from the following:
  - **Lock/Unlock** to prevent deletion of the selected voicemail message.
  - **Text message** to create and deliver a new text message to the sender's phone number.
  - **Reply** to reply to the voicemail. You can then reply to the sender or forward it to anyone with either an email or phone number. This allows you to send this voicemail message to several recipients at the same time.
  - **Forward** to forward the voicemail to another recipient.

- **Add to contacts** to add the sender's phone number to your Contacts list.

## Configuring Voicemail Settings




1. Press  and tap .
2. Press  and tap **Settings**. From this menu, you can:
  - Tap **Voicemail-to-Text** to begin a free trial subscription service for transcribing new voicemail messages to text.
  - Tap **Personalize voicemail** to change your voicemail greeting for incoming calls and update your password (page 164).
  - Tap **Notifications** to determine how you are notified of new voicemails. Choose from: **Notifications**, **Select ringtone**, and **Vibrate**.
  - Tap **Pictures** to replace the default Visual Voicemail message icon with a specific Contacts entry's image. This image is pulled from the entry's Contacts details page (page 107).

- Tap **Transcription font size** to assign a font size to the text message being transcribed from a selected voicemail. Choose from: **Tiny**, **Small**, **Normal**, **Large**, or **Huge**.
- Tap **Speakerphone** to automatically activate the speakerphone when you review your Visual Voicemail (page 164).
- Tap **Display name** to enter a name or number that is attached to your outgoing voicemails as part of an identification string (page 164).
- Tap **Auto forward to email** to send copies of new messages to a selected email.
- Tap **Check for upgrade** to search for an upgrade to your Visual message software.
- Tap **About Voicemail** to view build information about the current visual voicemail application.

*Note:* Voicemail settings can also be accessed by pressing  >  and tapping **Settings > Call settings > Voicemail settings**.

## Automatically Enabling the Speakerphone

Every time you access a selected message from your Visual Voicemail list, you can configure the device to automatically launch the built-in speakerphone so that you can clearly hear the message.

1. Press  and tap .
2. Press  and tap **Settings** to make your alterations.
  - Tap **Speakerphone** to activate the feature. You will see a green checkmark on the right.
  - Tap **Speakerphone** again to deactivate the speakerphone. The checkmark will be grayed out.

## Changing Your Main Greeting via the Voicemail Menu




Your main greeting can be changed directly via the Visual Voicemail system. This direct access saves you from having to navigate within the voicemail menu.

1. Press  and tap .
2. Press  and tap **Settings > Change greeting**.

3. Tap **OK** to connect to the Sprint voicemail system and follow the prompts to change your current greeting.

## Editing the Display Name via the Voicemail Menu



From your Visual Voicemail menu, you can quickly change the name or number attached to your voice messages.


1. Press  and tap .
2. Press  and tap **Settings > Display name**.
3. Tap the existing identification field and enter a new identifying name or number (used to identify you to recipients of your voice messages).
4. Tap **OK** to save your information.

## Voicemail Notification

There are several ways your device alerts you to a new message:

- By sounding the assigned ringer type.

- By displaying  within the Notifications area of the Status bar when a single new unheard voicemail message is received.
- By displaying  within the Notifications area of the Status bar when multiple new unheard voicemail messages have been received.

**Note:** When you are roaming off the Nationwide Sprint Network, you may not receive notification of new voicemail messages. Sprint recommends that you periodically check your voicemail by dialing 1 + area code + your wireless phone number. When your voicemail answers, tap  and enter your password. Roaming rates apply when you access voicemail while roaming off the Nationwide Sprint Network.




Your device accepts messages even when it is turned off. However, your device notifies you of new messages only when it is turned on and you are in a Sprint service area.

## Retrieving Your Voicemail Messages



You can review your messages directly from your wireless device (using either traditional voicemail or Visual Voicemail) or from any other touch-tone phone.

To dial from your wireless device, either speed dial your voicemail or use the menu keys.

## Using Traditional Voicemail to Access Your Messages


1. Press  and tap .
2. Touch and hold . If prompted, enter your voicemail password.

## Using Visual Voicemail to Access Your Messages




1. Press  and tap .
2. Tap an entry to listen to the message.

**Note:** You are charged for airtime minutes when you are accessing your voicemail from your wireless device.

## Using Another Phone to Access Messages




1. Dial your wireless phone number.
2. When your voicemail answers, tap .
3. Enter your password.

## Using Visual Voicemail to Delete Your Messages

1. Press  and tap .
2. Touch and hold a voicemail entry from the list and tap **Delete this message > OK**.
  - or –Open a message and tap  **> OK** to delete it.


## Using Voicemail to Text

Although initially a free trial subscription, this feature allows you to transcribe new voicemail messages to text. You will be notified once the trial period is over.

1. Press  **>**  and tap  **> Call settings > Voicemail settings > Voicemail-to-Text**.
2. Read the onscreen information and tap **Start Trial > OK** to begin your trial period. Once you have received confirmation that the service is now activated, your new transcribed voicemail messages will appear as new text messages.

## Text Messaging (SMS)


With text messaging (SMS), you can send and receive instant text messages between your wireless device and another messaging-ready phone. When you receive a new message, it will automatically display on your device's screen.

Messaging is available via the Messaging application in your Applications screen. This icon () appears in Status bar area when a new text message is received.


*Note:* See your service plan for applicable charges for text messaging and SMS voice messaging.

## Viewing Notifications of Received Messages

When you receive a message, your device notifies you by displaying an icon within the Notification area at the top left of your Home screen.

-  indicates a new text or MMS messages were received.





1. Press  >  and tap  (**Notifications**).  
– or –

Touch and hold the Status bar, then slide your finger down the screen. (See “Using the Notifications Panel” on page 45.)

2. Tap a message entry to open the Messaging application.

## Composing Text Messages

1. Press  and tap  > **New message**.
2. Tap the **To** field and enter a Contacts name, a mobile phone number, or an email address using either the onscreen or QWERTY keyboards.

**Note:** If you are using an onscreen keyboard, you can switch between the default **Swype** to **Samsung keypad** text entry method. Touch and hold either the **To** or the **Type to compose** field, tap **Input method**, and select your preferred method.

- **Recent** to enter a wireless phone number from your recent calls list.

- **Contacts** as you enter either a phone number or email address, if the information matches a current contact's entry information, you will see a match. When you see a match, touch the associated name to complete the addressing.

- **Group** to enter the recipient's based on an available group.

3. If applicable, tap a matching entry from the onscreen drop-down list. This list is populated by matches found from your managed accounts.
4. Tap the **Type to compose** field and enter your message.
5. Review your message and tap **Send**.

## Accessing Text Messages


To read a text message:

- When you receive a text message, you will see it listed within the Messaging screen. Touch the message to open the message and then scroll down and view its entire content.


To reply to a text message:

1. While the message is open, tap the **Type to compose** field and then type your reply message.
2. Compose your reply or use the preset messages or icons.
3. Review your reply and tap **Send**.

– or –

You may select additional messaging options by pressing , and then tapping **Send**.

- Options include: **Add subject**, **Attach**, **Add text**, **Insert Smiley**, **Delete Message**, or **More (Discard, Call, and Add to Contacts)**.

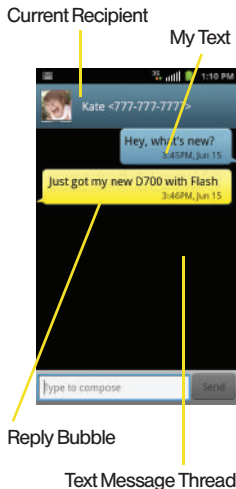

## Multimedia Messaging (MMS)

With multimedia messaging (MMS), you can send and receive instant text messages that contain text, pictures, audio, recorded voice, or a picture slideshow.

Messaging is available via the Messaging application in your Applications screen.


*Note:* See your service plan for applicable charges for text messaging and MMS voice messaging.

## Composing MMS Messages

Composing MMS messages is exactly the same as composing text messages, except that you attach a picture, a video, or an audio file to the message.

1. Press  and tap  > **New message**.

*Note:* From the Messages screen, you can also touch **New message** to begin creating a new outgoing message.

2. Tap the **To:** field and enter a Contact's name, a mobile phone number, or an email address. As you enter text and numbers, matching contacts appear onscreen.
  - If applicable, tap an available matching recipient or continue entering the phone number or email address.
3. Tap the **Type to compose** field and enter your message.
4. Press  and tap **Attach**.
5. Select a multimedia attachment type:
  - **Slideshow:** Opens the **Edit slideshow** menu.
    - Touch **Add slide** to create a new slide (this is a placeholder for new images to be added, similar to a playlist).
    - Touch the created slide (example, Slide 1), tap **Add picture**, and then select the picture you want to add to the slide.
    - Tap the text field below the image to enter a caption for the picture.





- When finished, tap  to attach the slideshow to your message.

**Note:** To remove or replace a picture or an audio attachment, on the Compose screen, tap the **Remove** button next to the attachment.

- **Pictures:** Opens the Gallery application. Use the onscreen navigation to select the picture you wish to send with the outgoing message.

- **Videos:** Opens the Gallery application. Use the onscreen navigation to select a video and attach it to your outgoing message.
- **Audio:** Opens the Select audio menu. Use the onscreen navigation to select an audio file and tap **OK**.
- **Capture picture:** Opens the camera application. Take a picture, and then tap **Save** to use this image in your message. (See “Taking Pictures” on page 141.)
- **Capture video:** Opens the camcorder application. Shoot a video, and then tap **Save** to use this video in your message. (See “Recording Videos” on page 147.)
- **Record audio:** Opens the message recorder (shown below).
  - **Record Duration:** length of the recorded voice message.
  - **Record:** starts recording your message.
  - **Play:** plays back the recording.

- **Stop:** stops the recording. Once stopped, tap either  > **Add** (attach it to your message), or tap  (delete the current recording and re-record).



6. When you are finished creating your new MMS message, tap **Send**.



To view and play a multimedia message:


1. Press  and tap .

2. From the message list, tap a multimedia message to open its contents.
3. While the message is open, tap the play icon (on a video or audio file) to play back the file or tap an image to view a picture.




*Tip:* The file attachment on the MMS message can be saved to the microSD card. To save the attachment, touch and hold the file and tap **Copy attached to SD card** from the Message options context menu.

To reply to a multimedia message:




1. Press  and tap .
2. From the message list, tap a multimedia message to open its contents.
3. While the message is open, tap the **Type to compose** field and then type your reply message.
4. Once complete, tap **Send**.

*Note:* When replying to a text message with an MMS message, first open the text message, press  and tap **Add subject** or **Attach**. The original text message is then automatically converted into a multimedia message.

## Deleting a Message or Message Thread

1. Press  and tap .
2. Touch and hold the message entry (from the Messaging list) to display the context menu.
3. Tap **Delete thread** and once prompted, tap **OK** to complete the process. (From within a message, you may need to press  > **More** to display the **Delete messages** option.)
  - Tap **Delete locked messages** to place a green checkmark and also include those messages that have been locked.

## Adjusting Message Settings

1. Press  and tap .
2. From within the **Messaging** screen, press  and tap **Settings**.
3. Adjust the following fields according to your needs:
  - **Delete old messages:** Enable this option to delete older text messages that exceed the defined maximum number of text messages limit set below.




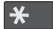



- **Text message limit:** Sets the maximum number of text messages that can be stored on the device (per conversation).
- **Multimedia message limit:** Sets the maximum number of multimedia messages that can be stored on the device (per conversation).
- **Auto-retrieve:** Enable this option to automatically retrieve the entire content of your MMS message. When checked, the MMS message header, message body, and any attachments will automatically download to your device.
  - If you disable this option, only the MMS message header will be retrieved and shown in the message list.
- **Roaming auto-retrieve:** Disable this option if you only desire the MMS message headers to download while roaming. Enable this option to automatically download your complete multimedia messages even while roaming.
- **Notifications:** Enable this option if you wish to receive a notification in the status bar when a new text or multimedia message arrives.

- **Select ringtone:** Allows you to select a ringer to sound when a new message is received. Tap this option, and then select a ring tone that is specific to new text and multimedia messages. A sample will briefly be played upon selection.
- **Vibrate:** Enable this option if you want the device to vibrate when a new text or multimedia message is received.

## Caller ID

---

Caller ID allows people to identify a caller before answering the phone by displaying the number of the incoming call. If you do not want your number displayed when you make a call, follow these steps.

1. Press  and tap  >  to access the onscreen dialer.
2. Tap   .
3. Enter a phone number and then press .


To permanently block your number, call Sprint Customer Service.

## Call Waiting

When you're on a call, Call Waiting alerts you to incoming calls by sounding two beeps. Your device's screen informs you that another call is coming in and displays the caller's phone number (if it is available and you are in digital mode).

To respond to an incoming call while you're on a call:

- ▶ Before accepting the incoming call, drag the onscreen caller ID to one of the following onscreen options:

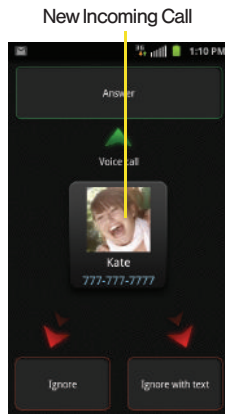

- **Answer** to answer the new call. The first caller is placed on hold.
- **Ignore** to send the call to your voicemail box.
- **Ignore with text** to send the call to your voicemail box and immediately send the caller a text message. These Ignore messages can be created and stored on the device.







To switch back to the first caller:


- ▶ From the In-Call options screen (shown here), tap **Swap**.

*Tip:* For those calls where you don't want to be interrupted, you can temporarily disable Call Waiting by pressing **\*7PQRS0+** before placing your call. Call Waiting is automatically reactivated once you end the call.

## Making a 3-Way Call

With 3-Way calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

1. Press  and tap  >  to access the onscreen dialer.
2. Make your call to the first recipient.
3. Once you have established the connection, tap **Add call** ().
  - It may take up to 20 seconds for the button to turn gray.
4. Enter the second caller's phone number and tap  or select a number from your Contacts (). (Your first call is automatically put on hold.) The first caller is put on hold.
5. When you're connected to the second party, tap **Merge** to combine both calls into a single 3-way call.

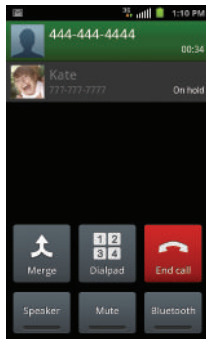








If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all callers are disconnected.

## Call Forwarding




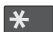




Call Forwarding lets you forward all your incoming calls to another phone number – even when your device is turned off. You can continue to make calls from your phone when you have activated Call Forwarding.

To activate Call Forwarding:

1. Press  and tap  >  to access the onscreen dialer.
2. Tap   .
3. Enter the area code and phone number to which you want your calls forwarded.
4. Tap .




To deactivate Call Forwarding:

1. Press  and tap  >  to access the onscreen dialer.
2. Tap     . (You will see a message and hear a tone to confirm the deactivation.)

*Note:* You are charged a higher rate for calls you have forwarded.

## Roaming

### Roaming Icon

Your display screen always lets you know when you're off the Nationwide Sprint Network. Anytime you are roaming, the phone displays the roaming icon (). If you are roaming on a digital system, you will see the roaming icon along with the text – **Digital Roam** – .



## Roaming on Other Digital Networks

When you're roaming on digital networks, your call quality and security is similar to the quality you receive when making calls on the Nationwide Sprint Network. However, you may not be able to access certain features, such as data services, depending on the available network.

*Note:* If you're on a call when you leave the Nationwide Sprint Network, and your call is dropped in an area where you think Sprint service is available, turn your phone off and on again to reconnect to the network.

### Checking for Voicemail Messages While Roaming

When you are roaming off the Nationwide Sprint Network, you may not receive on-phone notification of new voicemail messages. Callers can still leave messages, but you will need to periodically check your voicemail for new messages if you are in a roaming service area for an extended period of time.




1. Dial your ten-digit wireless phone number and tap .
2. When you hear your voicemail greeting, tap .

3. Enter your password at the prompt and follow the voice prompts.




When you return to the Nationwide Sprint Network, voicemail notification will resume as normal.

## *Adjusting Roam Settings*

Your device allows you to control your roaming capabilities. By adjusting the Roaming settings menu option, you can determine which signals (Voice or Data) your device accepts.

1. Press  >  and tap  > **Wireless and network** > **Roaming**.
2. Tap **Roaming settings** to configure both **Domestic** and **International** voice and data settings.
3. Tap **Voice** to toggle the active state of this function. When active, you are permitted to make outbound voice calls.
4. Tap **Data** to toggle the active state of this function. When active, you are permitted to connect to data services while roaming.

## *System Select*

1. Press  >  and tap  > **Wireless and network** > **Roaming mode**.
2. Tap an onscreen option to change the CDMA roaming mode.
  - **Sprint only** to access only the home area mobile network, which is the Nationwide Sprint Network. This option also prevents roaming on other networks.
  - **Automatic** to seek service on the Nationwide Sprint Network. When Sprint service is unavailable, the device searches for an alternate system.

## *Roaming Guard*




Depending on service availability and roaming agreements, your device may be able to access data services while roaming on certain digital systems.

You can set your device to alert you when you are roaming off the Nationwide Sprint Network and try to use either voice or data services such as messaging.

This guard applies to either domestic or international usage.

**Note:** The Roaming Guard is turned on by default on your device for both Domestic and International voice and data usage.


To set your Roaming Guard notification:

1. Press  >  and tap  > **Wireless and network** > **Mobile networks**.
2. Tap **Data Roaming Guard**.
3. Tap an onscreen option (**Voice** or **Data**) for either Domestic or International usage.
  - When Voice is active, you are notified that you are about to make an outbound call while roaming.
  - When Data is active, you are notified that you are about to connect to data services while roaming.


To use data services when Data Roam Guard is active:

- ▶ When a pop-up notification appears informing you that data roam charges may apply, tap **Connect** or **Always Connect** to connect.

To place roaming calls with Roaming guard on:




1. From standby mode, dial your ten-digit wireless number and tap .
2. Tap **OK**.

To answer incoming roaming calls with Roaming guard on:

1. Press . (A message is displayed notifying you that roaming charges will apply.)
2. Tap **OK**.

**Note:** If the Roaming guard feature is enable for **Voice**, you need to take extra steps (such as dialing 1 + area code) to make and receive roaming calls.

## *Mobile Network Settings*

1. Press  >  and tap  > **Wireless and network** > **Mobile networks**.
2. Tap **3G** to toggle the active state of this function.
3. When active, you permit data access over the 3G mobile network.
4. When deactivated, data access is prohibited over the 3G mobile network. This useful to further manage your data access and usage when using the 3G network.

## 3B. Web and Data Services

- ◆ Getting Started With Data Services (page 179)
- ◆ Navigating the Web (page 181)
- ◆ Wi-Fi (page 188)
- ◆ 4G Services (page 191)
- ◆ Email (page 194)
- ◆ Using the Android Market (page 208)
- ◆ Applications (page 209)

### Getting Started With Data Services

---

With your Sprint service, you are ready to start enjoying the advantages of data services. This section will help you learn the basics of using your data services, including managing your user name, launching a data connection, and navigating the Web with your device.

*Important:* Certain data services requests may require additional time to process. While your device is loading the requested service, the touchscreen or QWERTY keyboard may appear unresponsive when in fact they are functioning properly. Allow the device some time to process your data usage request.


### Your User Name

When you buy your device and sign up for service, you're automatically assigned a user name, which is typically based on your name and a number, followed by "@sprintpcs.com." (For example, the third John Smith to sign up for Sprint data services might have [jsmith003@sprintpcs.com](#) as his user name.)




When you use data services, your user name is submitted to identify you to the Nationwide Sprint Network. Your user name is automatically programmed into your device. You don't have to enter it.

## Updating Your User Name

If you choose to change your user name and select a new one online, or make any changes to your services, you must then update the profile on your device.

1. Press  >  and tap  > **About phone** > **System updates**.
2. Tap **Update Profile**.

## Launching a Web Connection

- Press  and tap  >  (**Internet**). (Your data connection starts and you see the home page.)

*Note:* Internet connections can be made either through the Sprint (3G or 4G) or via Wi-Fi (configured within the **Settings** > **Wireless and network** page).

While connecting, you may see an animation. Once complete, you are connected to the default home page.

*Tip:* To change the device's default launch page to your current page, press  and tap **More** > **Settings** > **Set home page**.

*Note:* The Browser automatically launches when a Web link is touched from within either an email or text message.

## Data Connection Status and Indicators

Your device displays the current status of your data connection through indicators at the top of the screen. The following symbols are used:



Your device is connected to the high-speed 4G Sprint Mobile Broadband Network. When the signal bands are animated, your device is scanning and connecting. During data transfer, the animated icon is not used (for example, when you are opening a Web page).



When the signal bands are gray, your device is connected to the network, signal is weak.



When both the bands and the 4G icon are gray, you there is no coverage and you are disconnected from the 4G network.



Your device is connected to the high-speed Sprint Mobile Broadband Network (EVDO).



When the signal bands are animated, your device is transferring data (for example, when you are opening a Web page); when the signal bands are gray, your device is connected to the network but is not currently transferring data (for example, when you are viewing a Web page that is completely open). In either state, you can receive incoming calls.

If you do not see an indicator, your phone does not have a current data connection. To launch a connection, see “Launching a Web Connection” on page 180.

## Navigating the Web

Navigating through menus and websites during a data session is easy once you have learned a few basics.

**Note:** Prior to gaining access to the SprintWeb home page, you may be asked to enter your 10-digit PCS phone number and tap **OK**. Entering your phone number is not required for access to other Web pages.

## Scrolling

As with other parts of your device’s menu, you’ll have to drag up and down to see everything on some websites.

To scroll through a website’s page:

- In a single motion, touch and drag across or up and down a page.

## Selecting

To select onscreen items or links:

- Drag across a page, and then touch or tap an onscreen link to select the link.

Links, which are displayed as underlined text, allow you to jump to Web pages, select special functions, or even place phone calls.

## Pinching and Zooming

Zooming in and out on a Web page can be done now without the need of an onscreen zoom tool. Just use your fingers to pinch in or spread out on the screen.

To zoom in:


1. Place your thumb and index finger on the screen.
2. Expand them outward (spread) to zoom in.


To zoom out:

1. Place your thumb and index finger on the screen.
2. Bring them together (pinch) to zoom out.

## Going Back

To go back one page:

- ▶ Press  on your device. Repeat this process to keep going back through your Web page history of recently visited pages.

*Note:* You can use  for deleting text (like a BACKSPACE key) when you are entering text onscreen

## Going to a Web Page

1. Tap the **Address** field (top of the browser window) and enter a new Web address.
  - As you enter the address, possible matches are displayed within an onscreen list. Tap an entry to launch the desired website.
2. Tap **Go** to launch the new page.


## Browser Menu


The browser menu offers additional options to expand your use of the Web on your device.

## Opening the Browser Menu

The browser menu may be opened anytime you have an active data session, from any page you are viewing.




- From any open Web page, press .
- (You will see the browser menu.)

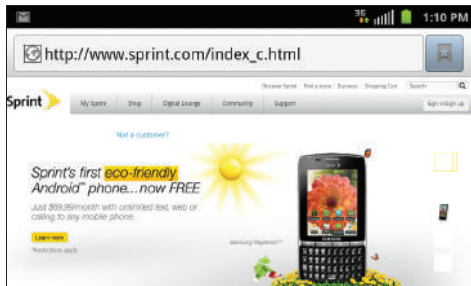


Options available within the browser menu include:

- **New window:** Launches a new Internet window while maintaining the current Web page active.
- **Windows:** Displays the currently active browser windows as an onscreen list. Tap a window entry to launch that window.
- **Brightness setting:** Lets you configure the screen brightness only for the browser application.

- **Refresh:** Reloads the current Web page.
- **Forward:** Returns you to a previously viewed page.
- **More:** Provide additional browser options:
  - **Add bookmark (Menu+a):** Assigns the current Web page as a new bookmark.
  - **Add shortcut to Home (Menu+h):** Adds a new bookmark to your Home screen.
  - **Add RSS feeds (Menu+m):** Adds an RSS feed.
  - **Find on page (Menu+f):** Searches the current Web page for a word.
  - **Page info (Menu+g):** Displays the Name and URL (website address) of the site you're currently viewing.
  - **Share page (Menu+s):** Allows you to send a URL via Gmail, SMS, or Work Email (Outlook).
  - **Downloads (Menu+d):** Keeps a list of previously downloaded content.
  - **Settings (Menu+p):** Lets you configure and manage your browser settings.

**Note:** These additional options can also be accessed via the QWERTY keyboard by using a combination of the Menu button (  ) and the specified key combination.

## Selecting Text on a Web Page

1. While on an active Web page, press  to open the browser menu.
2. Scroll to the area of the webpage containing the desired text.
3. Touch and hold the screen area containing the selected text.
4. Touch and drag across the screen and highlight the desired text. Any selected text will appear highlighted.



5. Select an onscreen option: **Copy text**, **Search** (Google, Google translate, Wikipedia), or **Share** (**Share** as text, **Share** as image).


## Going to a Specific Website

To go to a particular website by entering a URL (website address):

1. Tap the **URL** field and enter a website address.
  - As you type the address, if your desired website appears within the suggested sites list, tap the entry to begin surfing.
2. Tap **Go**.

**Note:** Not all websites are viewable on your device.


## Adjusting Browser Page Settings

1. Press  to open the browser menu.
2. Tap **More > Settings**.
3. Navigate to the **Page content settings** area and select from one of the following page settings:
  - **Default zoom:** Sets the default browser viewing size. Choose from: **Far**, **Medium**, or **Close**.


- **Open pages in overview:** Provides an overview of recently opened pages.
- **Text encoding:** Adjusts the current text encoding.
- **Block pop-up windows:** Prevents popup advertisement or windows from appearing onscreen. Remove the checkmark to disable this function.
- **Load images:** Allows Web page images to be loaded along with the other text components of a loaded website.
- **Auto-fit pages:** Allows web pages to be resized to fit as much of the screen as possible.
- **Landscape view only:** Displays pages only in the wider landscape screen orientation. Uncheck to view the page in Portrait mode.
- **Enable Javascript:** Enables javascript for the current Web page. Without this feature, some pages may not display properly. Remove the checkmark to disable this function.
- **Enable plug-ins:** Allows you to determine the way your device handles program enhancements. Select either **Always on**, **On demand** or **Off**.

- **Open in background:** New pages are launched in a separate page and displayed behind the current one. Remove the checkmark to disable this function.
- **Set home page:** Sets the current home page for the Web browser (page 187).
- **Default storage:** Sets the default storage location of downloaded content.


## Adjusting Browser Privacy Settings

1. Press  to open the browser menu.
2. Tap **More > Settings**.
3. Navigate to the **Privacy settings** area and select from one of the following privacy settings:
  - **Clear cache:** Deletes all currently cached data. Tap **OK** to complete the process.
  - **Clear history:** Clears the browser navigation history. Tap **OK** to complete the process.
  - **Accept cookies:** Allows sites that require cookies to save and read cookies from your device.
  - **Clear all cookie data:** Clears all current browser cookie files.

- **Remember form data:** Allows the device to store data from any previously filled-out forms. Remove the checkmark to disable this function.
- **Clear form data:** Deletes any stored data from previously filled out forms. Tap **OK** to complete the process.
- **Enable location:** Allows sites to request access to your current location (using the built-in GPS).
- **Clear location access:** Clears location access for all websites.

4. Press  to return to the browser.


### Adjusting Browser Security Settings

1. Press  to open the browser menu.
2. Tap **More > Settings**.
3. Navigate to the **Security settings** area and select from one of the following privacy settings:
  - **Remember passwords.** Stores usernames and passwords for visited sites. Remove the checkmark to disable this function.


- **Clear passwords.** Deletes any previously stored usernames or passwords. Tap **OK** to complete the process.
- **Show security warnings.** Notifies you if there is a security issue with the current website. Remove the checkmark to disable this function.

4. Press  to return to the browser.


### Selecting a Search Engine

1. Press  to open the browser menu.
2. Tap **More > Settings > Select search engine**.
3. Select an available search engine. Choose from Google, Yahoo!, or Bing.


### Creating Website Settings

1. Press  to open the browser menu.
2. Tap **More > Settings > Website settings**. These advanced settings can be configured for individual sites (e.g., Clear location access).
3. Tap **Clear location access** to complete the process.


## Resetting the Browser to Default

1. Press  to open the browser menu.
2. Tap **More > Settings > Reset to default**.
3. Tap **OK** to complete the process.

## Setting the Browser Home Page

1. Press  to open the browser menu.
2. Tap **More > Settings > Set home page**.
3. Delete the current address and enter a new web page.
4. Tap **OK** to complete the process.


## Creating Bookmarks

1. From any open Web page, tap  (**Bookmarks**). Three tabs are revealed:
  - **Bookmarks**: Displays a list of your current Web bookmarks.
  - **Most visited**: Displays a list of your most frequently visited websites. Tap an entry to launch the selected page.


- **History**: Displays a record of your browsing history. These records are organized into folders such as: **Today**, **Yesterday**, and **Last 7 days**.

2. Tap **Add** (first entry in the Bookmarks tab).
3. Enter a descriptive name for the new bookmark and tap **OK** to store the new entry to your Bookmarks list.


## Creating Bookmarks From Other Tabs

1. From any open Web page, tap  (**Bookmarks**).
2. Tap either the **Most visited** or **History** tab.
3. Touch and hold an entry from the list to display an onscreen popup menu.
4. Tap **Add bookmark** to add the selected entry to your current list of bookmarks.
  - or –
1. Repeat steps 1 and 2.
2. Tap the star icon adjacent to a website address. The star now turns gold. This adds the “starred” website to your current Bookmarks list.

## Creating a New Homepage

1. From any open Web page, tap  (**Bookmarks**).
2. Tap either **Most visited** or **History**.
3. Touch and hold an entry from the list to display an onscreen popup menu.
4. Tap **Set as homepage** to assign the selected entry as your new homepage.

## Adding Bookmarks to Your Home Screen

1. From any open Web page, tap  (**Bookmarks**).
2. Touch and hold an existing entry from the list to display an onscreen popup menu.
3. Tap **Add shortcut to Home** to add the selected entry to your Home screen.

## Wi-Fi

---

### About Wi-Fi

Wi-Fi (short for "wireless fidelity") is a term used for certain types of wireless local area networks (WLAN). These device types use an 802.11 wireless specification to transmit and receive wireless data.

Wi-Fi communication requires access to an existing and accessible Wireless Access Point (WAP). These WAPs can either be Open (unsecured) as within most Hot Spots, or Secured (requiring knowledge of the Router name and password).

The Epic 4G is capable of communication with devices using 802.11n speeds (802.11n connections should support data rates of over 100 Mbps). 802.11n also offers better communication ranges over earlier Wi-Fi standards due to increased signal intensity. The Epic 4G is backwards compatible with previous WAP technologies (802.11b and 802.11g).




## Turning Wi-Fi On and Off

By default, your device's Wi-Fi feature is turned off. Turning Wi-Fi on makes your device able to discover and connect to compatible in-range WAPs.

Turn Wi-Fi on:

1. Press  >  and tap  > **Wireless and network > Wi-Fi settings.**
2. Tap the **Wi-Fi** field to activate the feature (green checkmark indicates active). The device scans for available in-range wireless networks.

To turn Wi-Fi off:

1. Press  >  and tap  > **Wireless and network > Wi-Fi settings > Wi-Fi.**
2. Tap to remove the green checkmark and deactivate Wi-Fi.  
– or –
1. Touch and hold the Status bar, and then slide your finger down the screen.
2. Tap the onscreen Wi-Fi icon to turn off the Wi-Fi service (turns gray when disabled).

*Note:* Use of wireless data connections such as Wi-Fi and Bluetooth can cause an added drain to your battery and reduce your use times.

To connect to a Wi-Fi network:

1. Press  >  and tap  > **Wireless and network > Wi-Fi settings.**
  - The network names and security settings (Open network or Secured with xxx) of detected Wi-Fi networks are displayed in the Wi-Fi networks section.

*Note:* When you select an open network, you will be automatically connected to the network.

2. To manually add your new network connection:

- Tap **Add Wi-Fi network**.
- Enter the Network SSID. This is the name of your Wi-Fi network.
- Tap the **Security** field and select a security option. This must match the current security setting on your target network.
- If secured, you will also need to enter the wireless password. The **show password** option, reveals the password as you type it instead of showing only asterisks (\*\*\*\*).
- Tap **Save** to store the new information and connect to the Wi-Fi network.

*Note:* The next time your device connects to a previously accessed or secured wireless network, you are not prompted to enter the wireless password again, unless you reset your device back to its factory default settings.

To manually scan for a Wi-Fi network:

1. Press  >  and tap  > **Wireless and network > Wi-Fi settings**.
2. Press  and tap **Scanning**.

## Wi-Fi Status Indicators

The following icons show your Wi-Fi connection status at a glance:



– Wi-Fi is connected and active.



– Wi-Fi active but there is a communication issue with the target Wireless Access Point (WAP).

## Using the Wi-Fi Settings Menu

The **Wi-Fi settings - Advanced** menu allows you to set up many of your device's Wi-Fi service, including:

- Setting your Wi-Fi sleep policy
- Viewing your device's MAC Address
- Configuring use of either a DHCP or Static IP

To access the Wi-Fi Settings menu:

1. Press  >  and tap  > **Wireless and network > Wi-Fi settings**.
2. Press  and tap **Advanced**.



## 4G Services

### Understanding 4G and 3G Coverage










4G is a service that must be included in your service plan and also available within your area. 4G coverage is currently available in only certain markets. For more details on 4G availability go to: [www.sprint.com/4G](http://www.sprint.com/4G) and click the **See 4G Cities** link from the bottom of the page.

**Note:** If 4G service is not included in your service plan, the 4G icon will not appear in the Notifications area.



**Note:** 4G is up to 10x faster than 3G (based on download speed comparison of 3G's ~600 kbps vs. 4G's ~6 Mbps). (Actual speeds may vary.)

Sprint 4G is currently available in over 35 markets and counting, and on select devices such as the Epic 4G. See [www.sprint.com/4G](http://www.sprint.com/4G) for details. Not all services are available on 4G and coverage may default to 3G/ separate network where 4G unavailable.

Depending on which icons appear within the Notifications area, your services and features will change. The following table indicates what functions and features are available when combinations of these service icons appear:

<b>Notification Icons - Usage Case (4G/3G/Data)</b>			
			<b>3G Phone Coverage Available</b> – Phone coverage available only, no 3G/4G data available. 4G turned Off.
			<b>3G Phone and Data Available</b> – Sprint 3G data and voice service is available and active. 4G is turned Off.
			<b>3G Available - No 4G coverage</b> – Sprint 3G data and voice service is available and active. 4G is turned On but there is no 4G coverage (disconnected from network).
			<b>3G to 4G Transition</b> – 3G and 4G coverage is available. 4G service is turned on and available in your area. Data service is available and switching from 3G to 4G service.

### Notification Icons - Usage Case (4G/3G/Data)




		<b>3G unavailable - 4G Available</b> – No 3G data available. Sprint 4G is turned on and coverage is available, 4G signal strong.
--	---	--

## Turning 4G On and Off


By default, your device's 4G feature is turned off.

**Important:** 4G service must be added to your account before attempting a connection to the 4G network.

To turn 4G on:

1. Press  >  and tap  > **Wireless and network** > **4G settings**.
2. Tap the **4G** field to activate the feature (checkmark indicates active). The device scans for an available 4G network.  
– or –
1. Touch and hold the Status bar, and then slide your finger down the screen.

2. Tap the onscreen 4G icon to turn on the 4G service (turns green when enabled).

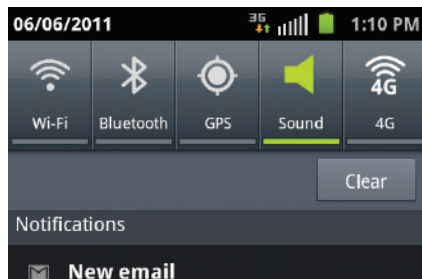

To turn 4G off:

1. Press  >  and tap  > **Wireless and network** > **4G settings**.
2. Tap **4G** to remove the green checkmark and deactivate 4G services.

**Note:** Use of 4G communication and Sprint Mobile Hot Spot service can cause an added drain to your battery and reduce your battery use times.




– or –

1. Touch and hold the Status bar, slide your finger down the screen.
2. Tap the onscreen 4G icon to turn off the service (turns gray when disabled).

## Sprint Mobile Hotspot

Sprint Mobile Hotspot allows you to turn your phone into a Wi-Fi hotspot. The feature works best when used in conjunction with 4G data services (although 3G service can also be used). (See “4G Services” on page 191.)

To set up your Sprint Mobile Hotspot:

1. Press  and tap  >  (**Sprint Hotspot**).
2. Tap **Sprint Hotspot** and place a checkmark in the adjacent field to activate the service.
  - Using both 4G service and Hotspot drains your device's battery at a much faster rate than when using any other feature combination.

**Note:** The best way to keep using the device as a hotspot is to have it connected to a power supply.

**Important:** Write down the passkey (password) for this WPA communication (shown onscreen).

To connect to the Sprint Mobile Hotspot:

1. Enable Wi-Fi (wireless) functionality on your target device (laptop, media device, etc.).
2. Scan for Wi-Fi networks from the device and select your Epic 4G hotspot from the network list.
  - The default name for your Epic 4G hotspot is **SPH-D7007CC**. You can change the name by tapping **Sprint Hotspot Settings > Router name** from the Sprint Hotspot screen.
3. Select this device and follow your onscreen instructions to enter the passkey (provided on the Sprint Hotspot page).
4. Launch your Web browser to confirm you have an Internet connection.

## Email

Your device's Email applications let you access and manage multiple email accounts simultaneously in one convenient location.

Although there is a separate Gmail application, the main email application can manage both Internet-based email services (Gmail™ and Yahoo™) and Corporate Work Email (Outlook®).

The device can also be manually configured to connect to other email systems.

*Note:* If you have multiple email accounts, you must configure each account with its own settings.

If you want to send and receive email messages through an ISP (Internet Service Provider) account (such as Outlook), or if you wish to use your device to access your corporate email through a VPN (Virtual Private Network), you will first need to set up an IMAP or POP account.

- **IMAP** (Internet Message Access Protocol) - This mail retrieval protocol is frequently used in large networks and commercial and institutional settings. IMAP4 is the current standard.

- **POP** (Post Office Protocol) - This protocol is supported by most ISPs and is currently more common among consumer applications. POP3 is the current standard.

*Note:* For more information, review your email carrier's literature or contact your IT administrator.

### Email Icons/Shortcuts



– IMAP/POP3 Mail shortcut (such as Yahoo™ and Outlook™)



– Gmail shortcut

### Status Bar - Notifications



– New email message received



– New Gmail message received

## Google Mail (Gmail)

This email client is Google's Web-based email service. A Gmail/Google Mail account is created once you sign-up for a new Google account online. (See "Creating a Google Account" on page 63.)




- From a computer, launch a Web browser and navigate to [www.google.com](http://www.google.com).

Depending on your synchronization settings, Google Mail, along with calendar events, phone numbers and other contact information on your device are automatically synchronized between your device and your Gmail/Google Mail account on the Web.

**Note:** You must have a valid and active Google account prior to using this email client.

**Important:** You must log into Google after every power cycle of your device. Logging into Gmail (via the device) does not sign you into your Google account. Gmail logging and access are separate from your main Google account.

## Setting Up a Gmail Account via the Device

1. Press  and tap  >  (Gmail).
2. Enter your Email address and Password.
3. Follow the onscreen prompts.
  - The first time you connect, you are asked to give this Internet mail account a unique onscreen name and enter From name (displayed in your outgoing emails within the **From** field).
  - The unique account name is used to differentiate this account from other email accounts accessed by your device.
  - See "Adding Additional Internet Email Accounts" on page 200.




**Note:** You must have a valid and active Google account (xxxxxx@gmail.com) prior to Gmail email setup and configuration.

---

Your Gmail address is then used to log into your account via the device.

**Note:** Signal interruptions or incorrect username or password information can cause completion issues.





## Opening Gmail

1. Press  and tap  > .
2. Tap an existing email message.

To refresh your Gmail messages:

- ▶ Press  and tap **Refresh**.

## Create and Send Gmail

1. Press  and tap  > .
2. Tap **Inbox** to open your inbox.
3. Press  and tap **Compose**.
4. Enter the message recipient's email address in the **To** field.
  - If you are sending the email to several recipients, separate the email addresses with a comma.
  - You can add as many message recipients as you want.



**Note:** To send a carbon copy (Cc) or a blind carbon copy (Bcc) of the current email to other recipients, press



and tap **Add Cc/Bcc**.

5. Tap the **Subject** field and enter the email subject.

6. Tap the **Compose Mail** field and compose your email.

- To add a picture attachment, press  and tap **Attach** (from the bottom of the screen).
- Tap  to delete a selected attachment from your current email.

7. Once complete, tap **Send**.



- Tap **Save as draft** to save the current email as a draft. To later view your draft email messages, from the Inbox, tap the **Drafts** folder.
- To delete the current email message, tap **Discard**.

## Creating a Gmail Signature

1. From a computer, launch your preferred Web browser and navigate to [www.google.com](http://www.google.com).
2. From within your Gmail Settings page, navigate to the **Settings > General** tab and enter your signature into the **Signature** field. By default, signature is turned off.

## Accessing Email Messages

Depending on your email type, account settings, Email notifications, ringtone notification, etc, the device displays the email message briefly in the status bar when you receive a new email.


A new Internet email message (  ) or Gmail message (  ) icon appears within the Notifications area of the Status bar to notify you of a new email.

To view a new email:

1. Press  >  and tap  .  
– or –

Touch and hold the Status bar, and then slide your finger down the screen. (See “Using the Notifications Panel” on page 45.)

2. Tap the new email from the **Notifications** list to launch the **Inbox** tab.
3. Scroll up and down the email by dragging your finger up and down the screen.

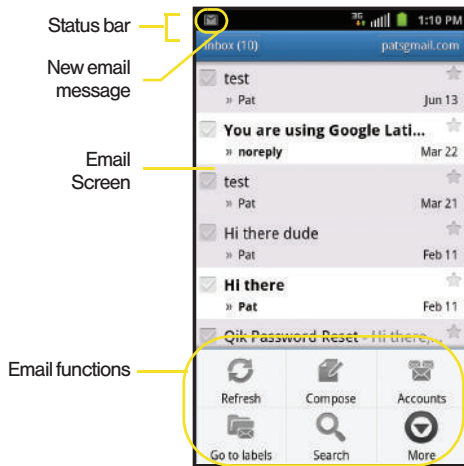





To reply to an email message:

1. With the email message displayed:
  - From within Gmail, tap the recipient name from the **To:** field and select an email application to begin replying to the sender. Choose from: **Compose** (Gmail) or **Email**.
  - From within Email, tap **Reply** or **Reply all**.
2. Enter a new message body and tap **Send**.

To delete an email message:

- With the email message displayed, tap **Delete**.

## Configuring Gmail Settings

1. Press  and tap  > .
2. Press  and tap **More** > **Settings**.

3. This menu provides both field information and settings:



- **Signature:** Allows you to create an email signature for your outgoing Gmail emails.
- **Confirm actions:** Shows a dialog whenever you perform selected actions.
- **Reply all:** Makes 'Reply all' the default response for outgoing messages.
- **Auto-advance:** Selects which screen to show after you delete or archive a conversation.
- **Message text size:** Allows you to choose the text size displayed within messages: **Tiny**, **Small**, **Normal**, **Large**, or **Huge**.
- **Batch operations:** Allows label operations.
- **Clear search history:** Removes all the searched you have performed.
- **Labels:** Selects which labels are synchronized.
- **Email notifications:** Activates the email notification icon to appear within the Notifications area of the Status bar when a new Internet mail (Gmail, etc..) is received.



- **Select ringtone:** Plays a selected ringtone once a new email message is received.
- **Vibrate:** Activates a vibration once a new email message is received.
- **Notify once:** Sets the device to notify you only once for new incoming emails and not for every new message.

## Email

### Setting Up an Email Account via the Device

1. Press  and tap  (**Email**).
2. Enter your account Email address and password.
3. Tap Next and follow the remaining procedures.
  - or –




Tap **Manual setup** to manually configure your connection settings (POP3 or IMAP). Follow the onscreen prompts and enter the information specific to your carrier.

- The first time you connect, you are asked to give this Internet mail account a unique onscreen name and enter From name (displayed in your outgoing emails within the **From** field).

- The unique account name is used to differentiate this account from other email accounts accessed by your device. (See “Adding Additional Internet Email Accounts” on page 200.)

**Note:** Signal interruptions or incorrect username or password information can cause completion issues.




### Opening Email


1. Press  and tap  (**Email**).
2. Press  and tap **Accounts**.
3. Select an email account.
4. Tap an existing email message.

To refresh your Email messages:


- Press  and tap **Refresh**.


### Create and Send Email

1. Press  and tap .
2. Press  and tap **Accounts**.
3. Select an email account.
4. Tap **Inbox** to open the contents of your inbox.


5. Press  and tap **Compose**.
6. Enter the message recipient's email address in the **To** field.
  - If you are sending the email to several recipients, separate the email addresses with a comma.
  - You can add as many message recipients as you want.





*Note:* To send a carbon copy (Cc) or a blind carbon copy (Bcc) of the current email to other recipients, tap the **Cc/Bcc** fields.

7. Tap the **Subject** field and enter the email subject.
8. Tap the **Compose Mail** field and compose your email.
  - To add a picture attachment, tap **Attach** (from the bottom of the screen).
  - Select the picture you want to attach (indicated by a green checkmark) and tap **OK**.
  - Tap  to delete a selected attachment from your current email.
9. Once complete, tap **Send**.




- Tap  > **Save as draft** to save the current email as a draft. To later view your draft email messages, from the Inbox, tap the **Drafts** folder.
- To delete the current email message, tap **Discard**.

## Adding Additional Internet Email Accounts

Using  only reveals all currently added Email accounts. To view additional email accounts within the main Email screen, they must first be added.

1. Press  and tap .
2. Press  and tap **Accounts**.
3. Press  and tap **Add account**.
4. Follow the onscreen prompts to add additional Internet-based email accounts such as Yahoo!, AOL, or other POP or IMAP accounts.

## Configuring Email Settings

1. Press  and tap .
2. Tap the email account from the Accounts area of the Email screen.
3. Tap **Inbox** to open the contents of your inbox.
4. Press  and tap **More > Account settings**.


*Note:* Press  and tap **More** to access additional setting options such as **Text size** and **View mode** (changes the background email page color)

5. This menu provides both field information and settings:
  - **Account name:** displays your uniquely created account display name.
  - **Your name:** displays the name used in the **From** field of your outgoing emails.
  - **Email check frequency:** Tap to adjust the time interval used by your device to check your email account for new emails.
    - Options include: **Never**, **Every 5 minutes**, **Every 10 minutes**, **Every 15 minutes**, **Every 30 minutes**, and **Every hour**.

- **Default account:** Assign this account as the default email used for outgoing messages.
- **Security policy list:** Lists the current email's security policy. These policies could restrict some functions from corporate servers.
- **Email notifications:** Activates the email notification icon to appear within the Notifications area of the Status bar when a new Internet mail (Gmail, etc..) is received.
- **Select ringtone:** Plays a selected ringtone once a new email message is received.
- **Vibrate:** Activates a vibration once a new email message is received.
- **Incoming settings:** Adjusts the incoming email parameters, such as username, password, and other incoming connection parameters (ex: IMAP server).
- **Outgoing settings:** Adjusts the outgoing parameters, such as username, password, and other incoming connection parameters (ex: SMTP server).






- **Recent messages:** Assign the number of onscreen displayed inbox messages. additional messages must be manually retrieved.
- **Forward with files:** Allows you to maintain any attachments while forwarding a current email.
- **Add signature:** Activates the email signature feature.
- **Signature:** Allows you to create an email signature for your outgoing Gmail emails.

## Corporate Email (Outlook)

The main Email application () also provides access to your Outlook Exchange server via your device. If your company uses Microsoft Exchange Server 2003 or 2007 as the corporate email system, you can use this email application to wirelessly synchronize your email, Contacts, and Task information directly with your company's Exchange server.

**Important:** This Outlook application does not utilize Microsoft® ActiveSync® to synchronize the device to your remote Exchange Server. This synchronization is done wirelessly over the air (OTA) and not via a direct connection.

## Setting Up a Corporate Email

1. Press  and tap  > .
2. Press  and tap **Accounts**.
3. Press  and tap **Add account**.
4. Enter your **Email address** and **Password** information, and then tap **Next**. Consult your Network Administrator for further details.
  - **Email address:** your Outlook work email address.
  - **Password:** typically your network access password (case-sensitive).
5. Tap **Manual setup**.
6. Tap **Microsoft Exchange ActiveSync** (from the add email account screen).
7. When prompted to provide additional detailed information, scroll down the screen and tap **Next**.
8. Enter a **Domain**, **Username**, and **Password**.
  - **Domain:** your network domain.
  - **Username:** your network domain\desktop login username.

**Important:** Key info here is the **Domain** information.

- **Password:** typically your network access password (case-sensitive).
- If your network requires SSL encryption, tap the **Use secure connection (SSL)** field to place a checkmark in the box and activate this additional level of security.
  - **If your exchange server requires this feature, leaving this field unchecked can prevent connection.**

**Note:** Signal interruptions or incorrect username or password information can cause completion issues.





9. If you receive an **Autodiscover failed** message, manually enter your Exchange server information. Delete the current contents of the **Exchange Server** field.
  - **Exchange Server:** your exchange server remote email address. Typically starts with **mail.XXX.com**. Obtain this information from your company network administrator. Do not accept the default entry as this is a guess based on returned information.

10. Confirm you have properly entered the server information and tap **Next**.
11. Read the onscreen information regarding activation, usage and service, then tap **Yes**.
12. Configure your **Account options**, activate any other email settings, and then tap **Next**.
13. Identify your new account with a unique name and provide the outgoing name text then tap **Done**.

**Important:** You can synchronize over the air (not directly) with an Exchange Server running Microsoft Exchange Server 2003 Service Pack 2 (SP2) or Microsoft Exchange Server 2007.

**Note:** You can have multiple Work Email (Microsoft Exchange ActiveSync) accounts active on your device.


## Opening Corporate Email

1. Press  and tap  > .
2. Tap a message to read, manage, and reply to your email messages.
  - From your Inbox screen, press  to select options, such as **Compose**, **Refresh**, **Search**,

**Accounts**, **List by**, or **More** (Account settings, Text size, and View mode).

- While in a message, use **Reply**, **Forward**, **Delete**, **Move to**, **Show pictures** or **More** (Display Mode [Original mode or Positive mode], Text size, Add to Contacts, Save in Calendar).

## Create and Send Email

1. From the Inbox, press  and tap **Compose**.
2. Enter the message recipient's email address in the **To** field.
  - Choose recipients from the following sources:
    - **Recent** to access your list of recent contacts.
    - **Contacts** to access your current Contacts page
    - **Group** to access any available Groups (within which are associated Contacts entries).
    - **Search** to search for email recipients by matching them against your exchange server.
  - To search to a recipient by name, tap **Search** and enter the first few letters of their name. The mail server then return with its best match for your


desired recipient. Tap the recipient's email address and tap **Done**.


- If you are sending the email to several recipients, separate the email addresses with a comma.
- You can add as many message recipients as you want.

*Note:* To send an additional carbon copy (Cc) or a blind carbon copy (Bcc) of the current email to other recipients, tap the **Cc/Bcc** fields.

3. Tap the **Subject** field and enter the email subject.
4. Tap the **Body** field and compose your email.
  - To add a picture attachment, tap **Attach** (from the bottom of the screen).
  - You can access the internal microSD card and navigate to the file you wish to attach.
  - Tap the file you wish to attach and tap **OK**.

To reply to an email message:

1. From the Inbox, tap an email message.
2. With the email message displayed, press  and then tap **Reply** (choose from either **Sender** or **All**).

- If you select **Forward** (press ) you must specify the message's recipients.

3. Enter a new message body and tap **Send**.

To delete an email message:





- ▶ Touch and hold an email (from your inbox list) and select **Delete** from the onscreen context menu.
- or –

With the email message displayed, tap **Delete**.

## Configuring Corporate Email Settings

After your initial setup, you are taken to the Settings menu for your new Work Email account.

**Account Settings:** configures send and receive settings, such as email signature, notifications, syncing, etc.

1. Press  >  and tap  > **Accounts and sync**.
2. Tap  within the Corporate account field to reveal the account's synchronization settings screen.


3. Toggle either the **Sync Contacts** or **Sync Calendar** fields to force the device to manually resync either the exchange Contacts or Calendar entries.

– or –

Tap **Account settings** and configure any other email parameters you wish to synchronize. (See “Synchronizing Accounts” on page 81.)

To configure Corporate Email settings:

1. Press  >  and tap  > **More > Account settings**.

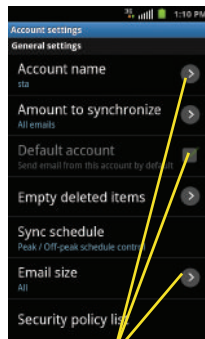


Setting Options

2. Tap the parameters you wish to synchronize.

■ **Account settings** allows you to configure:

- **Account name** displays the name used by the device to track the account.
- **Amount to synchronize** to assign the sync range for your incoming and outgoing emails between your device and your external exchange server. How many days worth of emails should the device and server synchronize. Choose from: **1 day, 3 days, 1 week, 2 weeks, 1 month, or All emails.**
- **Default account** assigns this account as the default used when sending out new emails.
- **Empty deleted items:** Allows you to delete your email account's trash bin remotely.
- **Sync schedule:** Allows you to configure your email sync schedule.
- **Email size:** Configures the incoming email size allowed to pass through to your device automatically without user interaction. Larger emails will have to be retrieved manually.

- **Security policy list:** Lists the current email's security policy. These policies could restrict some functions from corporate servers.
- **Email notifications** enables the device to display a status bar icon  when new emails have been received.
- **Select ringtone** assigns an audible ringtone when a new or upcoming event is pending.
- **Vibrate** assigns a vibration when a new or upcoming event is pending.
- **Exchange server settings** provides access to the Domain, password, and exchange server parameter fields.
- **Sync Contacts** synchronizes the contacts between your device and the remote exchange server. A checkmark indicates the feature is enabled.
- **Sync Calendar** synchronizes your exchange calendar entries between your device and the remote exchange server. A checkmark indicates the feature is enabled.
- **Period to sync Calendar** assigns a period for your device to sync calendar events.






- **Add signature:** Activates the email signature feature.
- **Signature** allows you to create an outgoing email signature attached to new emails sent from your device.

3. Press  to return to the previous screen.

For more detailed Corporate email information, see “Corporate Email (Outlook)” on page 202. For more information on Corporate Calendar synchronizing, see Synchronizing Corporate Calendar Events (page 114).





To create a Corporate Email Signature:

This signature can differ from any current Email signature on your local Outlook client. This signature is applied to any outgoing emails originating on your device.

1. Press  >  and tap  > **More > Account settings.**
2. Scroll to the bottom of the list and tap **Add signature.**
3. Delete the current default text and enter your new email signature.
4. Tap **OK** to store the new signature.

## Configuring Data Synchronization Settings



This feature allows you to determine which current applications are synchronized with external server and at what intervals.

1. Press  >  and tap  > **Accounts and sync.** These settings can affect data minute usage, please refer to your current data plan for more details.
2. Tap any of the following options:
  - **Background data:** Allows data synchronization to occur as a background function. It allows this to occur behind the scenes and does not affect any current use of the device.
  - **Auto-sync:** Requires the device to maintain synchronization with the remote server providing data to your selected applications.
3. Press  to store your changes and return to the Home screen.



## Using the Android Market

The Android Market provides direct access to a large selection of applications which you can download and install on your device.



### Accessing the Market

1. Press  and tap  (**Market**).
2. If not already logged in with your Google account, tap **Next**.
3. Tap **Sign in** and enter your Google account information.
4. Tap **Accept** to agree to the Android Market terms of service.



### Selecting and Installing a Google Application

1. Press  and tap .
2. Browse through the categories (**Apps**, **Games**, or **Sprint**), find an application you're interested in, and tap the name.
3. Read the application descriptions.
4. Tap **Install**.

*Note:* Use caution with applications which request access to any personal data, functions, or significant amounts of data usage times.

5. If prompted, follow the onscreen instructions to pay for the application.
6. Check the progress of the current download by opening the Notifications panel.
7. After the item is downloaded and installed on your device, the content download icon  appears in the notification area of the status bar.
8. On the Android Market screen, tap  > **Downloads** > (the installed application) > **Open**.

### Launching an Installed Google Application




1. Press  and tap .
2. Tap the newly installed application.

*Tip:* You can also access recent apps from the Google Market. Tap  > **Downloads** and tap the application.

## Reinstalling a Google Application

If the Android operating system is ever updated, any data contained on the device will be erased. The only data stored on the device are Google applications available via the Android Market.

*Note:* Pictures and music are stored on the microSD card. Contacts and Calendars are stored remotely on with your remote Google or Outlook servers.

1. Log into your Google account via the device.
2. Press  and tap  >  > **My apps**.
3. Scroll through the list of previously downloaded Google applications and choose the one you wish to reinstall.
4. Follow the onscreen instructions.

## Applications

You can access a wide variety of applications in many different categories with your phone and data service. Your phone comes preloaded with links to the following applications:

- Google
- NASCAR Sprint Cup Mobile
- Sprint Football Live
- Sprint TV
- Sprint Zone
- Sprint Mobile Hotspot (see page 193)
- Qik

To get started with applications:





- ▶ Press  and tap  > [**application**]. (The browser will start and take you to the download menu for the application.)

**Important Privacy Message** – Sprint's policies often do not apply to third-party applications. Third-party applications may access your personal information or require Sprint to disclose your customer information to the third-party application provider. To find out how a third-party application will collect, access, use, or disclose your personal information, check the application provider's policies, which can usually be found on their website. If you aren't comfortable with the third-party application's policies, don't use the application.

*Note:* Some Sprint data applications may not work with a Wi-Fi connection present. If prompted, disable your device's Wi-Fi feature while using these applications.

## NASCAR Sprint Cup Mobile

Now you have the ability to get every bit of NASCAR coverage, news, and stats right on your device.

1. Press  and tap  >  (**NASCAR Sprint Cup Mobile**).
2. If prompted, read the permission check disclaimer, make a selection and tap **OK**. Follow the onscreen instructions until you reach the main NASCAR Sprint Cup Mobile page.
3. If prompted, select your favorite driver.
4. Navigate the main page by scrolling around using the touchscreen.
5. Tap an onscreen option to activate features that include:
  - **Home** is the main NASCAR homepage where you can view stats on a current race, choose to follow a specific driver, view special NASCAR promotions and other NASCAR-specific multimedia content.
    - Press  to return to the main NASCAR page. This applies to each of these options.




- **Race Recap** provides overviews of the current races, pictures, commentary, additional photos, and race stats.
- **SPEED** displays a list of selectable multimedia video clips from the SPEED channel that are specific to NASCAR.
- **Point Standings** displays point standing information for a particular driver, and RSS feed of driver stat information, and a listing of position information.
- **My Driver** to customize your NASCAR experience by following specific drivers. Information includes driver-specific stats and NASCAR RSS feeds. You can also get additional stats, review other driver info, or change drivers.
- **Stats & Schedule** lets you track race information such as: **NSCS Recap**, **NNS Recap**, **Point Standings**, **Season Stats**, and **Schedule**.
- **Miss Sprint Cup** is your insider to NASCAR by providing news, information, blogs and twitter updates to the goings-on within NASCAR.

- **Videos** displays a list of selectable multimedia content. Other features include streaming multimedia content from NASCAR radio stations or other racing radio shows.
- **News & Alerts** provides you with quick access to NASCAR-specific news, photos, and driver stats. You can also customize alerts for new information such as ALL NASCAR News, Sprint Cup News, etc.
- **Twitter** provides updated tweets and other Twitter updates.
- **Fantasy** lets you connect with other NASCAR enthusiasts. You will have to login using a NASCAR.COM Community login. If you do not have this information, visit [community.nascar.com](http://community.nascar.com) to get an account.
- **FanZone** displays a list of selectable content available to Sprint subscribers such as Sweepstakes, Video clips (footage and music) and Screensavers.
- **Settings & Help** displays help information for usage of the NASCAR application and features.

- **Exit** to quit the NASCAR application.
  - Press  and tap **Exit**.


## *Sprint Football Live*

Get the Football live on your phone. It lets you be right in the middle of your favorite game by being a part of previews, blogs, discussions groups, fantasy football, etc.

1. Press  and tap  >  (**Sprint Football Live**).
2. Select a category (**PRO** or **COLLEGE**) and follow the onscreen instructions to customize your football experience by choosing your favorite team.
3. Access any of the following features:




*Note:* Use the directional keys to move around the application's menu features.

- **My Team** launches a team-specific page with content such as top stories, RSS feeds, Rumor information, Schedules, Team Alerts, and the ability to change your favorite team selection.

- **Draft Central** provides current Professional and college draft information and news. Additional content includes: **News & Insights**, **Draft Results**, **Prospect Profiles**, and **Tweets**.
- **Scores and Schedules** provides final scores and future game schedules. The content can be viewed **By Week** or **By Team**.
- **News and Analysis** provides AP league news, Rumor and News, PFTV, Injury Info, Transactions, Legal, and other football related information, photos and videos.
- **Team Pages** allows you select from wither the AFC or NFC conferences, and then display content such as top stories, RSS feeds, Rumor information, Schedules, Team Alerts, and the ability to change your favorite team selection.
- **Standings** provides regular season team standings by conference (NFC or AFC).
- **Statistics** provides regular season rundowns. You can view them by **Weekly Leaders**, **League Leaders**, **Team League Leaders**, **Player Stats** and **Team Stats**.
- **Twitter** launches an onscreen Twitter page specific to the NFL. Also included onscreen is a real-time RSS new feed.
- **Odds** launches a spreadsheet of game outcome predictions.
- **Fantasy** allows you to choose from a list of applications associated with fantasy football leagues.
- **Videos and Photos** provides images, highlights, previews, and commentaries about your favorite football news.
- **Settings/Help** displays help information for Sprint Football Live topics such as: Choose Favorite Team, About, and Help.
- **Exit** allows you to exit the Sprint Football Live application. Tap  > **EXIT** to exit.



## Sprint TV

The Sprint TV application offers a wide variety of accessible channels. Subscription options include comprehensive basic packages as well as a full menu of “a la carte” channels. Visit [www.sprint.com/tvguide](http://www.sprint.com/tvguide) for more information on channels and pricing.

1. Press  and tap  >  (**Sprint TV**).
2. If prompted, read the permission check disclaimer, make a selection and tap **OK**.
3. Navigate the main page by scrolling around using the touchscreen.

## Sprint Zone

A free application that lets you stay connected to all the latest news and information from Sprint. Included here are Sprint customer promotions, news, feedback, featured apps, and tips/tricks for your device.

1. Press  and tap  (**SprintZone**).
2. Navigate through the list to find your relevant topics.
3. Tap a topic link to continue to that page.

## Qik

Qik is a mobile video sharing service that lets you record and share experiences with your friends, family, and your favorite social networks.


1. Press  and tap  >  (**Qik Video**) > **Log in**.

*Note:* If you do not already have a Qik account, touch **Create** and follow the onscreen prompts to create your new account.

2. Tap the **Username** and **Password** fields and enter your information.
3. Tap **Log in**. Your device then communicates with the Qik servers to confirm your information.
4. Follow the onscreen instructions. For more information, visit: <http://qik.com/>.

## Recording Video

1. Tap **Record & Share** from the main Qik menu (shown above).
2. Tap **Record** to begin recording.
3. Tap **Stop** to stop recording.
4. Enter a title for your video segment and select those services you wish to use to distribute your video.
  - Services such as Twitter, Facebook, SMS, and E-mail ask that you select a recipient for your video segment.

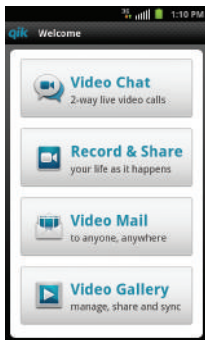



## 3C. Entertainment: TV and Music

- ◆ DivX (page 215)
- ◆ Media Hub (page 218)
- ◆ Sprint TV (page 221)
- ◆ Music (page 222)
- ◆ Streaming Music (page 224)
- ◆ YouTube (page 225)
- ◆ AllShare (page 225)

**Sprint TV** gives you the ability to listen to audio clips and to view video clips right from your device's display. Watch live TV and catch up on episodes of your favorite shows – anywhere on the Nationwide Sprint Network.\*

*Note:* The best recording setting for MP4 video playback on this device is H.264 for Android™ or PSP™.

\* Sprint TV coverage not available everywhere. Content and lineup subject to change. Select channels also available for casual usage. Visit [www.sprint.com/tvguide](http://www.sprint.com/tvguide) for more information.

**Amazon MP3** lets you preview, purchase, download, and listen to over a million songs right on your device. You can even add songs from your own library to round out your on-the-go playlist.

### DivX

The Epic 4G recognizes DivX® encoded media files.

DivX®, DivX Certified® and associated logos are trademarks of DivX, Inc. and are used under license.



**ABOUT DIVX VIDEO:** DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit [www.divx.com](http://www.divx.com) for more information and software tools to convert your files into DivX video.

*Note:* Pat. 7,295,673; 7,460,668; 7,515,710; 7,519,274

**ABOUT DIVX VIDEO-ON-DEMAND:** This DivX® Certified device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in the device setup menu.

Go to [vod.divx.com](http://vod.divx.com) with this code to complete the registration process and learn more about DivX VOD.




DivX Certified® to play DivX® video up to HD 720p, including premium content.

[Important: DivX VOD content is protected by a DivX DRM (Digital Rights Management) system that restricts playback to only registered DivX Certified devices.

If you try to play DivX VOD content not authorized for your device, the message "Authorization Error" will be displayed and your content will not play.] Learn more at [www.divx.com/vod](http://www.divx.com/vod).

*Note:* DivX VOD content is protected by a DivX DRM (Digital Rights Management) system that restricts playback to only registered DivX Certified devices.


## Locating Your VOD Registration Number




1. Press  >  and tap  > **About phone** > **Legal information** > **License settings** > **DivX® VOD** > **Register**.
2. Write down your Registration code.
3. Tap **OK**.

## Register your DivX Device for VOD Playback of Purchased Movies

To play purchased DivX movies on your Samsung Epic device, you will first need to complete a one-time registration using both your device and your computer.

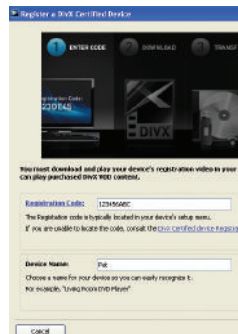1. Write down the DivX registration code that appears onscreen. Copy this 8 or 10-digit number down.






2. Verify you have the latest DivX software running on your computer. Download the free player (for your computer) from [www.divx.com](http://www.divx.com).
  3. Open the DivX Player on your computer and from within the **VOD** menu, select **Register a DivX Certified Device...**
    - You are prompted to log in or create a DivX account if your account information has not already been saved in DivX Player.
  4. Follow the instructions in DivX Player to enter the registration code from step 2 and create a device nickname (ex: "Pat or D700").
  5. Choose a location on your computer to download the DivX registration video with the same title as your device nickname (ex: Pat.divx).
  6. Follow the onscreen instructions to download the file and initiate the transfer process.
  7. Connect your Samsung Epic to the computer via USB and transfer this video. (See "Connecting Your Device to Your Computer" on page 135.)
  8. From the **Registration** screen (Transfer), select **USB** (the device) as the target destination for the registration video (created in step 6) and click **Start**.
  9. Press  and tap  >  (**My Files**). (See "My Files" on page 120.)
  10. Tap a folder and scroll down or up until you locate your registration DivX video file.
  11. Tap the file to play it. Once you play the registration file on your device, your registration is complete!
- Return to the DivX VOD Manager screen (from within your computer's DivX Player) and confirm both your computer and your new device appears in the list of registered DivX devices.

*Note:* There is no special registration or configuration necessary to playback DRM-free DivX movies.

Registration of your device is only required for playback of protected DivX material.

## Playback Media Files

1. Press  and tap  >  (**My Files**).
2. Tap a folder and scroll down or up until you locate your selected file.
3. Tap the desired movie or music file.

## Media Hub

Samsung Media Hub™ is your one stop for the hottest movie and TV content. With hundreds of titles available at your fingertips, entertaining yourself or your kids on the go has never been easier.

You can rent or purchase your favorite content and watch from the convenience of anywhere. Featuring the stunning viewing quality Samsung is known for, Samsung Media Hub is your gateway to mobile video like you've never experienced it before.

**Note:** The Media Hub service and usage is based on service availability.




**Important:** You must be using an active Wi-Fi/4G connection to preview and download a media file.

**You must have a microSD card installed** prior to initiating the service. This card acts as a storage location for your downloaded rental or purchase.

## Start Using Media Hub





1. Sign into your Google account. (See “Signing In to Your Google Account” on page 63.)

**Note:** After tapping the **Media Hub** application, you may also be prompted to log into your Google account if you are not already signed in.




2. Verify an active Wi-Fi or 4G connection.
3. Press  and tap  >  (**Media Hub**).
4. Read the End-User License Agreement (EULA) and tap **Accept** to continue or **Decline** to exit.

## Create a New Media Hub Account

Before you can rent or buy media, you must first create an account. Enter the required information.

1. Press  and tap  >  (**Media Hub**).
2. Press  and tap **My Account > Create Account**.
3. Use the keypad to enter the required information, activate the **I agree to the Terms and Conditions** field, then tap **Create Account**.
4. From the **My Account** screen, you can edit parameters such as: **My Details**, **My Purchases**, **My Payment Methods**, **Manage My Devices**, **Log out**, or **Reset Media Hub**.

## Navigating Media Hub

1. Press  and tap  >  (**Media Hub**).
2. Access any of the following onscreen features:
  - **What's new**: shows recently added media that is available for rent or purchase.

- **My Media**: allows you to view all of the media you have previously purchased or rented. Tap a media entry to view it.
  - **Movie Store**: displays movies that are available for rent or purchase. Scroll through the movie categories at the top of the screen.
    - Touch a category and then movies of that type will be displayed below.
  - **TV Store**: displays TV shows that are available for purchase. Scroll through the movie categories at the top of the screen.
    - Tap a category and then TV shows of that type will be displayed below.
3. Scroll through the media listings and tap on an item you would like to purchase or rent. Information concerning the selected is displayed.
  4. Tap **WATCH PREVIEW** to watch a short preview.
    - or –
    - Tap either **Rent** or **Own**.

*Note:* Previews are buffered into temporary memory on the device, only rentals and media purchases are stored within an internal microSD card.

5. Choose a payment method and then follow the on-screen instructions.
6. The media is then stored on your microSD card within a **SamsungMediaHub** folder.

*Important:* Please review the notices information for detailed purchase and usage information.

## *Media Hub Notices*

- Any media item (Media Content) may be rented or purchased after you create an account in Media Hub.
- Media Content that is downloaded may be viewed concurrently on up to five (5) devices with Media Hub that are also registered to the same account.
- You may choose to remove a device from your account no more than once every 30 days.
- You may remove Media Content from a device as many times as you'd like. You will have the ability to re-download the Media Content at a later point in time subject to content re-download availability and studio permissions.
- You **MUST** be in network coverage to license Media Content you have acquired through the Service.
- You must have WiFi or 4G connectivity in order to download Media Content.
- Unlike purchased Media Content, rented Media Content will be viewable on only 1 device in your account.
- For Sprint Epic 4G, Media Content is downloaded and saved onto the SD card.
- Your Media Content may pause/stop or not download in networks where there is a weak signal.
- You may begin watching downloaded Media Content as soon as a) license acquisition has occurred and b) sufficient amount of the Media Content has been buffered.
- You must finish watching rented Media Content within 24 consecutive hours of start of playback.
  - Stopping, pausing or restarting rented Media Content does not extend the available viewing time.
  - In no event will rented Media Content be available for a period of more than thirty (30) days (or shorter on a title-by-title basis) after the Media Content has been rented (e.g., if you begin viewing rented Media Content on the 29th day

after the rental transaction, but do not finish viewing the entire title, that rented Media Content may not be available for the entire twenty-four (24) consecutive hour period if such period would extend the viewable time beyond the thirty (30) day rental window).

- You cannot play any media content downloaded from Media Hub through any output on your mobile phone, including All Share.




## Sprint TV

### Your Sprint TV Channel Options

The Sprint TV application offers a wide variety of accessible channels. Subscription options include comprehensive basic packages as well as a full menu of “a la carte” channels. Visit [www.sprint.com/tvguide](http://www.sprint.com/tvguide) for more information on channels and pricing.

*Note:* Available categories and content are subject to change.

## Watching TV

1. Press  and tap  >  (**SprintTV**). Depending on your settings, your device may prompt you to accept a data connection.

*Note:* SprintTV can only be viewed over a cellular connection. Turn off your Wi-Fi communication prior to using this application. If prompted, tap **Disable Wi-Fi** to continue.

2. Select **TV**, **Radio**, **Favs**, or **More** to display channel options.
3. Tap an entry to select a channel from the Sprint TV listings or to select an available category.

*Note:* The first time you access a channel, the system will prompt you to purchase access (unless the channel doesn't have a monthly fee). Tap **Subscribe** to purchase access, or tap **Preview** to view a preview of the selected channel.

4. Tap a desired clip to view the program. The clip will automatically load and begin playing.



*Tip:* Scroll through the channels to view more selections. Once you find a channel that you want to watch or listen to, simply touch it and wait approximately three seconds, and the channel begins loading.

## Music

---

The Amazon MP3 store lets you purchase and download digital music files to play on your device or computer. (You must have an amazon.com account to purchase and download music from Amazon MP3.)




### *Purchasing and Downloading Music from Amazon*

1. Press  and tap  (Amazon MP3).
2. Select an onscreen category (**Bestselling Albums**, **Bestselling Songs**, **Browse By Genre**, or **Search**).
3. Follow the onscreen instructions to locate the desired track or album.
4. Tap the song title to listen to an audio preview. Tap the song title again to stop playback.
  - **Preview** allows you to play an audio clip of the selected song.
5. Once you have located a desired song title or album, tap **[price] > Buy**.




- Pressing **BUY** allows you to purchase the song and download it to your device's microSD card.
  - When you select **Buy**, you will need to log into your Amazon account. (If there is no microSD card installed or if there is not enough free memory space on the card, you will see an alert.)
  - Once the song has been downloaded to your microSD card, you can use the Music application to playback the file.






## Accessing the Music Player

1. Press  and tap  >  (**Music**).
2. From the Music display, select an option:
  - **All** to browse through all of your downloaded music and any additional songs you have loaded onto your microSD card from your computer.
  - **Playlists** to select a customized playlist you've created to organize your music.
  - **Albums** to display your current local music files sorted by album.
  - **Artists** to display your current local music files sorted by artist.
3. Once you've displayed a list of songs, you can browse through your available titles.
  - To play a song, tap it to display the title and track information.
  - To listen to a song or playlist, tap it to begin playing from the selected song. (You can also highlight the playlist to begin listening.)

## Creating a Playlist

1. Press  and tap  >  > **All**. Your device searches through your device and microSD card for compatible music files and then displays them onscreen.
2. Touch and hold a song you'd like to add to a playlist. This action reveals an onscreen context menu.
3. Tap **Add to playlist** and select either a **Current playlist** or select **Create Playlist** (to create a new playlist).
  - If you select **Create Playlist**, delete the current default name, enter a name for your new playlist, and tap **Save**.

## Assigning a Song as a Ringtone

1. Press  and tap  >  > **All**.
2. Touch and hold a song you'd like to use as your new ringtone. This action reveals an onscreen popup menu.
3. Tap **Set as phone ringtone** to store the selected song as your new default ringtone.

4. Confirm the song has been successfully assigned by navigating to your Phone ringtone menu.

■ Press  >  and tap  > **Sound** > **Phone ringtone** > **Voice call ringtone**.

5. Confirm the new song is selected.

## *Backing Up Your Downloaded Music Files*

Sprint recommends you back up your downloaded music files to your computer. (See “Connecting Your Device to Your Computer” on page 135.)

1. Connect your phone using a USB cable or the built-in connection on Bluetooth-enabled phones.
2. Use your computer to navigate to the microSD card's **Music** folder.
3. Select and copy the music files to a folder on your computer's hard drive.

## *Streaming Music*

---

Sprint offers a variety of musical options through the Radio category in the Sprint TV menu, including SIRIUS Music, Music Choice, VH1, and many others. Choose from rock, pop, hip-hop, and R&B, and access exclusive video clips, music industry news, performances, and interviews with your favorite artists.

1. Press  and tap  >  > **Radio** > **[selection]**.

2. Select **Preview** to see and hear a preview of your selected channel (if available).

– or –





Select **Subscribe** to purchase a monthly subscription to your selected channel.

Once you have purchased access to a music or radio channel, you can select from a variety of stations to listen to your favorite music or get caught up on what's new in music.

## YouTube

YouTube™ is a video sharing website on which users can upload and share videos. The site is used to display a wide variety of user-generated video content, including movie clips, TV clips, and music videos, as well as video content such as video blogging, informational shorts and other original videos.

*Note:* YouTube is a data-intensive feature. Sprint recommends that you upgrade to an unlimited data plan to avoid additional data charges.

1. Press  and tap  (**YouTube**).
2. Read the disclaimer regarding data usage and touch **Accept**.
3. Press  to open the onscreen keyboard, or open the Qwerty keyboard and tap the **Search** field to search for specific videos, scroll down to browse through the main page thumbnails, or scroll to the bottom to explore additional options.
4. To view a video, touch an available preview thumbnail or touch the title link.
5. Press  to return to the previous page.

*Note:* It is not necessary to sign in to the YouTube site to view content. However, if you wish to sign in to access additional options, access the page via the Web browser and tap **Sign in** at the top right corner, enter your YouTube or Google username and password, and tap **Sign in**.

## AllShare

Allows users to share their in-device media content with other external devices using DLNA certified™ (Digital Living Network Alliance) Devices. These external devices must also be DLNA-compliant. Wi-Fi capability can be provided to TVs via a device like the **WMG-160** HD Digital Multimedia Streamer.

*Note:* Wi-Fi will need to be enabled and active on your Epic 4G to use this feature.




The application contains three separate streaming media options:

- **Play file from my phone on another player** allows you to play local device content on a Wi-Fi capable TV or playback device. The Epic 4G can then be used as a remote to control playback.

- **Play file from server on my phone** allows you to receive and playback media stored externally (server, laptop, etc.) directly on your device.
- **Play file from server on another player via my phone** allows you to “piggy-back” content playback on an external Wi-Fi TV/receiver. Your Epic 4G retrieves content from an external wireless source (e.g., server) and pushes it through to an external wireless destination (e.g., TV). The Epic 4G acts to both route the media and control its playback (as a remote).

## Configure the AllShare Settings

The AllShare™ application must first be configured prior to its initial use. You must setup parameters such as connected Wi-Fi, Items to share, source server address, and external device acceptance rights.

1. Press  and tap  >  (**AllShare**).
2. Tap **Settings** and configure the following settings as desired:
  - **Media server name** allows you to enter the name of the server transmitting the media files, e.g., MyServer. Once you enter the name tap **Save**.





- **Share media** to configure which media types will be shared. Choose from **Share video**, **Share image**, or **Share sound**.
- **Access point network** allows you to turn on your Wi-Fi functionality and connect to an available Wi-Fi Access Point.

*Note:* It is recommended that if you are not already communicating with an external WAP, you configure those settings here first.

- **Upload from other devices** allows you to setup an acceptance rule of incoming media from other external devices. Choose from **Always accept**, **Always ask**, or **Always reject** and tap **OK**.





3. Press  to return to the previous page.

## Selecting the Media You will Transmit

1. Press  and tap  > .
2. Tap  adjacent to one of the selected transmission methods. (This procedure assumes selection of the first option).

3. If transmitting local media to an external device, scroll through your microSD card folders to locate the file(s) you wish to transmit. A green checkmark indicates the file has been selected.
4. Tap **Add to playlist**. The Epic 4G then begins to search to compatible Wi-Fi devices.
5. Tap a destination device from the onscreen list. If you desired device does not appear, tap **Refresh**.

### *Receiving Media From a Server*

1. Press  and tap  > .
2. Tap  adjacent to one of the selected transmission methods. (This procedure assumes selection of the second option.)
3. Tap a source media server from the onscreen list. If you server does not appear, tap **Refresh**.

## 3D. GPS Navigation

- ◆ GPS Services (page 228)
- ◆ Google Maps (page 228)
- ◆ TeleNav GPS (page 230)
- ◆ Navigation (page 231)

### GPS Services

---

Your device's built-in GPS capability gives you access to a number of location-based services, including **Google Maps** and **Sprint Navigation**.

#### Activating Location Mode




Before using any of the location-based services, you must turn on your device's location mode.

- ▶ Press  >  and tap  > **Location and security** > **Use GPS satellites**.

*Note:* Enabling the GPS hardware can drain your battery faster.

#### Activating Using Wireless Networks

This additional location feature uses open Wi-Fi and mobile network connections to assist in providing additional location accuracy.

1. Press  >  and tap  > **Location and security** > **Use wireless networks**.
  - Since this feature is based on Google's location service, you will need to agree to allow Google to collect anonymous information.
2. Tap **Agree** to accept the terms of service.






### Google Maps

---

Use this application to find directions, location information, business addresses, etc., all right from your Epic 4G. Determine your current location with or without GPS, get driving and transit directions and get phone numbers and addresses for local businesses.

Before you begin using this feature you must activate your GPS hardware and agree to share location information with Google.





To enable your device's GPS Location feature:


1. Press  >  and tap  > **Location and security**.
2. Tap **Use GPS satellites**. A green checkmark indicates the GPS location feature is enabled. (For additional location information, see "Location Settings" on page 80.)
  -  appears in the Notification area when the GPS is active.
  -  appears in the Notification area when the GPS is communicating.

To launch the Google Maps application:





- Press  and tap  >  (**Maps**).

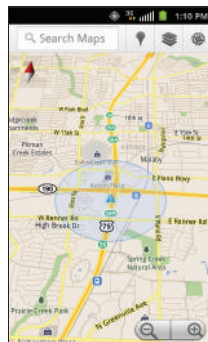

To use Google Maps:

1. Press  and tap  >  .
  - If prompted, read the "What's new" message and tap **OK**.
2. Tap the magnification icons to zoom in or out of the current map view.
  - or –
  - Press  to use other Google Map features.
    - Choose from: **Search**, **Directions**, **Starred Places**, **Clear Map**, **Join Latitude**, and **More (Labs, Cache Settings, Help, Terms, Privacy & Notices, and About)**.



To search for a keyword:

1. Press  and tap  >  .
2. Press  and tap **Search**.

3. Tap the search field (at the top of the screen), enter a keyword, and tap .
  - This keyword can be a category name (such as pizza, steak, burger), a business name (Samsung, Sprint), or a Google friend who is sharing their location.
4. Tap  (bottom left) to reveal a detailed list of information corresponding to those matches now displayed on your screen with lettered pins.

## TeleNav GPS

TeleNav GPS Navigator gives you turn-by-turn directions onscreen and over speakerphone. In order to use this application, you must first turn on the Enable GPS Satellites setting.




**Note:** Depending on your service plan, TeleNav may require a monthly subscription. Contact Sprint for information and pricing.

**Note:** Some features may be available only with a subscription to TeleNav GPS Navigator Premium.

**Important:** It is recommended that before using GPS-enabled apps such as Navigation and TeleNav, you first enable your **My Location settings: Use Wireless networks** and **Use GPS satellites**. See “Location Settings” on page 80.

## Registering TeleNav GPS Navigator

Before you can use the TeleNav GPS Navigator, your device and service must be registered.

1. Press  and tap  > .

**Note:** If prompted to update your GPS settings, tap **GPS Settings** and activate the required fields.




2. Read the disclaimer and tap **Accept** to acknowledge the terms of use.
3. Confirm your phone number appears in the identification field.
4. Tap **Submit** to register your information.

**Note:** Upon your initial launch, the application downloads required files for first-time use. This may take a few minutes.

5. Select to either **Continue in Free Mode** or **Upgrade to Premium**.



## Using TeleNav GPS Navigator

1. Press  and tap  > .
2. Select an option and follow the onscreen instructions to take advantage of TeleNav's full suite of features.
  - **Drive To** lets you get driving directions from wherever you are to wherever you're going. Choices include:
    - **Set Up Home:** default starting location for all driving directions.
    - **My Favorites:** user-defined favorite locations.
    - **Recent Places:** recently entered locations.
    - **Address:** manually entered street addresses.
    - **Contacts:** those local addresses assigned to previously entered Contacts.
    - **Places:** locations by names or category.
    - **Airports:** local airports based on current GPS location.




- **Places** lets you search for locations from dozens of names or category options such as **ATM, Food/ Coffee, Gas, Grocery, Lodging, Theaters, Nightlife, Parking, Shopping, Transportation, Wi-Fi, or More (Community & Business)**.
- **Maps & Traffic** provides access to a 2D map of your current location, access to real-time traffic information, and other additional features.
- **Local Apps** allows you to search for **Movies** by title, location and time.

*Note:* For more information about Sprint Navigation powered by TeleNav, visit [www.sprint.com/navigation](http://www.sprint.com/navigation).

## Navigation

Another Google Maps navigation application is available on your device. It uses your current location (provided by GPS communication to your device) to provide various location-based services.

**Important:** It is recommended that before using GPS-enabled apps such as Navigation and TeleNav, you first enable your **My Location settings: Use Wireless networks** and **Use GPS satellites**. See “Location Settings” on page 80.

1. Press  and tap  >  (**Navigation**).
2. Read the onscreen disclaimer and tap **Accept**.
3. Choose from the following onscreen options:
  - **Speak Destination** to use the voice recognition feature to search for matching locations in your area.
  - **Type Destination** to manually enter a destination address (via either QWERTY or onscreen keyboard).
  - **Contacts** to receive turn-by-turn directions to the address stored for a selected Contacts entry.
  - **Starred Places** to obtain directions to locations that have been starred within Google maps ([maps.google.com](https://maps.google.com)).

*Section 4*

***Safety and Warranty  
Information***



## 4A. Important Safety Information

- ◆ General Precautions (page 234)
- ◆ Maintaining Safe Use of and Access to Your Phone (page 235)
- ◆ Using Your Phone With a Hearing Aid Device (page 236)
- ◆ Caring for the Battery (page 238)
- ◆ Radio Frequency (RF) Energy (page 239)
- ◆ Samsung Mobile Products and Recycling (page 241)
- ◆ Owner's Record (page 242)
- ◆ User Guide Proprietary Notice (page 242)

**This phone guide contains important operational and safety information that will help you safely use your phone.** Failure to read and follow the information provided in this phone guide may result in serious bodily injury, death, or property damage.

## General Precautions

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- To maximize performance, do not touch the bottom portion of your phone where the internal antenna is located while using the phone.
- Speak directly into the mouthpiece.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery.
- Do not expose your phone to direct sunlight for extended periods of time (such as on the dashboard of a car).
- Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending, or sitting on it.
- Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment.

*Note:* For the best care of your phone, only Sprint-authorized personnel should service your phone and accessories. Failure to do so may be dangerous and void your warranty.

## Maintaining Safe Use of and Access to Your Phone

### Do Not Rely on Your Phone for Emergency Calls

Mobile phones operate using radio signals, which cannot guarantee connection in all conditions. Therefore you should never rely solely upon any mobile phone for essential communication (e.g., medical emergencies). Emergency calls may not be possible on all cellular networks or when certain network services or mobile phone features are in use. Check with your local service provider for details.

### Using Your Phone While Driving

Talking on your phone while driving (or operating the phone without a hands-free device) is prohibited in some jurisdictions. Laws vary as to specific restrictions. Remember that safety always comes first.

**Tip:** Purchase an optional hands-free accessory at your local Sprint Store, or call Sprint at 1-866-866-7509. You can also dial # 2 2 2 on your phone.

### Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

### Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

**Note:** Always turn off the phone in healthcare facilities, and request permission before using the phone near medical equipment.

### Turning Off Your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

## Turning Off Your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn your phone off when in a blasting area or in other areas with signs indicating two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Turn your phone off when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone and accessories could generate sparks. Sparks can cause an explosion or fire, resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- Fueling areas such as gas stations.
- Below deck on boats.
- Fuel or chemical transfer or storage facilities.
- Areas where the air contains chemicals or particles such as grain, dust, or metal powders.
- Any other area where you would normally be advised to turn off your vehicle's engine.

*Note:* Never transport or store flammable gas, flammable liquids, or explosives in the compartment of your vehicle that contains your phone or accessories.

## Restricting Children's Access to Your Phone

Your phone is not a toy. Do not allow children to play with it as they could hurt themselves and others, damage the phone or make calls that increase your Sprint invoice.

## Please Note the Following Information When Using Your Handset

### 1. WARNING REGARDING DISPLAY

- The display on your handset is made of glass or acrylic and could break if your handset is dropped or if it receives significant impact. Do not use if screen is broken or cracked as this could cause injury to you.

### 2. WARRANTY DISCLAIMER: PROPER USE OF A TOUCHSCREEN HANDSET

- If your handset has a touchscreen display, please note that a touchscreen responds best to a light touch from the pad of your finger. Using excessive force or a metallic object when pressing on the touchscreen may damage the tempered glass surface and void the warranty. For more information, please refer to the "4B. Manufacturer's Warranty" on page 243.

## Using Your Phone With a Hearing Aid Device

A number of Sprint phones have been tested for hearing aid device compatibility. When some wireless phones are used with certain hearing devices (including hearing aids and cochlear implants), users may detect a noise which can interfere with the effectiveness of the hearing device.

Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference noise they may generate. ANSI standard C63.19 was developed to provide a standardized means of measuring both wireless phone and hearing devices to determine usability rating categories for both.

Ratings have been developed for mobile phones to assist hearing device users find phones that may be compatible with their hearing device. Not all phones have been rated for compatibility with hearing devices. Phones that have been rated have a label located on the box. **Your SPH-D700 has an M4 and T3 rating.**

These ratings are not guarantees. Results will vary depending on the user's hearing device and individual type and degree of hearing loss. If a hearing device is particularly vulnerable to interference noise; even a phone with a higher rating may still cause unacceptable noise levels in the hearing device. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

**M-Ratings:** Phones rated M3 or M4 meet FCC requirements for hearing aid compatibility and are likely to generate less interference to hearing devices than unrated phones. (M4 is the better/higher of the two ratings.)

**T-Ratings:** Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. (T4 is the better/higher of the two ratings. Note that not all hearing devices have telecoils in them.)

**Note: New Technologies, Including Wi-Fi**

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

Hearing aid devices may also be measured for immunity to interference noise from wireless phones and should have ratings similar to phones. Ask your hearing healthcare professional for the rating of your hearing aid. Add the rating of your hearing aid and your phone to determine probable usability:



- Any combined rating equal to or greater than six offers excellent use.
- Any combined rating equal to five is considered normal use.
- Any combined rating equal to four is considered usable.

Thus, if you pair an M3 hearing aid with an M3 phone, you will have a combined rating of six for “excellent use.” This is synonymous for T ratings.

Sprint further suggests you experiment with multiple phones (even those not labeled M3/T3 or M4/T4) while in the store to find the one that works best with your hearing aid device. Should you experience interference or find the quality of service unsatisfactory after purchasing your phone, promptly return it to the store within 30 days of purchase. (A restocking fee may be applied to exchanges. Visit [www.sprint.com/returns](http://www.sprint.com/returns) for details.) More information about hearing aid compatibility may be found at: [www.fcc.gov](http://www.fcc.gov), [www.fda.gov](http://www.fda.gov), and [www.accesswireless.org](http://www.accesswireless.org).

## Getting the Best Hearing Device Experience With Your Phone

To further minimize interference:

- Set the phone's display and keypad backlight settings to ensure the minimum time intervals.
  1. Press  >  and tap **Settings > Display > Brightness**, or **Screen timeout**.
  2. Touch the minimum time interval setting.
- Position the phone so the internal antenna is farthest from your hearing aid.

- Move the phone around to find the point with least interference.

## Caring for the Battery

### Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

- Recently there have been some public reports of wireless phone batteries overheating, catching fire, or exploding. It appears that many, if not all, of these reports involve counterfeit or inexpensive, aftermarket-brand batteries with unknown or questionable manufacturing standards. Sprint is not aware of similar problems with Sprint phones resulting from the proper use of batteries and accessories approved by Sprint or the manufacturer of your phone. Use only Sprint-approved or manufacturer-approved batteries and accessories found at Sprint Stores or through your phone's manufacturer, or call 1-866-866-7509 to order. They're also available at [www.sprint.com](http://www.sprint.com) — click **Accessories**. Buying the right batteries and accessories is the best way to ensure they're genuine and safe.
- In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).
- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.
- Don't attempt to disassemble or short-circuit the battery.



- The battery may need recharging if it has not been used for a long period of time.
- It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.
- Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:
  - Less than one month:  
-4° F to 140° F (-20° C to 60° C)
  - More than one month:  
-4° F to 113° F (-20° C to 45° C)

### Disposal of Lithium Ion (Li-Ion) Batteries

Do not handle a damaged or leaking Li-Ion battery as you can be burned.

For safe disposal options of your Li-Ion batteries, contact your nearest Sprint authorized service center.

**Special Note:** Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

## Radio Frequency (RF) Energy

### Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your

call controls the power level. This power can range from 0.006 watt to 0.2 watt in digital mode.

### Knowing Radio Frequency Safety

The design of your phone complies with updated NCRP standards described below.

In 1991–92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

### Body-Worn Operation

To maintain compliance with FCC RF exposure guidelines, if you wear a handset on your body, use a Sprint-supplied or Sprint-approved carrying case, holster or other body-worn accessory. If you do not use a body-worn accessory, ensure the antenna is at least **7/16 inch (1.5 centimeters)** from your body when transmitting. Use of non-Sprint-approved accessories may violate FCC RF exposure guidelines.

For more information about RF exposure, visit the FCC website at [www.fcc.gov](http://www.fcc.gov).

## Specific Absorption Rates (SAR) for Wireless Phones

The SAR value corresponds to the relative amount of RF energy absorbed into the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

The highest reported SAR values of the SPH-D700 are:

### **Cellular CDMA mode (Part 22):**

Head: 0.68 W/kg; Body-worn: 0.99 W/kg

### **PCS mode (Part 24):**

Head: 0.44 W/kg; Body-worn: 0.77 W/kg

### **4G:**

Body-worn: 0.53 W/kg

## FCC Radio Frequency Emission

This phone meets the FCC Radio Frequency Emission Guidelines.

FCC ID number: A3LSPHD700.

More information on the phone's SAR can be found from the following FCC website: <http://www.fcc.gov/oet/ea/>.

## FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient the direction of the internal antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Samsung Mobile Products and Recycling

Samsung cares for the environment and encourages its customers to recycle Samsung mobile devices and genuine Samsung accessories, and other unwanted electronics, in accordance with local regulations and through an approved recycler. Proper disposal of your mobile device and its battery is not only important for safety, it benefits the environment. Batteries must be recycled or disposed of properly.

Dispose unwanted electronics through an approved recycler.

**To find the nearest recycling location, go to:**

**[www.samsung.com/recyclingdirect](http://www.samsung.com/recyclingdirect)** or call, **1-877-278-0799**.

**Note:** Never dispose of batteries in a fire because they may explode.

## *Owner's Record*

---

The model, regulatory, and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This is helpful if you need to contact us about your phone in the future.

Model: Epic 4G™

Serial No.:

## *User Guide Proprietary Notice*

---

Nuance®, VSuite™, and the Nuance logo are trademarks or registered trademarks of Nuance Communications, Inc., or its affiliates in the United States and/or other countries.

User Guide template version 11a\_FM (September 2010)

## 4B. Manufacturer's Warranty

### ◆ Manufacturer's Warranty (page 243)

Your phone has been designed to provide you with reliable, worry-free service. If for any reason you have a problem with your equipment, please refer to the manufacturer's warranty in this section.

For information regarding the terms and conditions of service for your phone, please visit [www.sprint.com](http://www.sprint.com) or call Sprint Customer Service at **1-888-211-4727**.

**Note:** In addition to the warranty provided by your phone's manufacturer, which is detailed on the following pages, Sprint offers a number of optional plans to cover your equipment for non-warranty claims. **Sprint Total Equipment Protection** provides the combined coverage of the **Sprint Equipment Replacement Program** and the **Sprint Equipment Service and Repair Program**, both of which are available separately. Each of these programs may be signed up for within 30 days of activating your phone. For more details, please visit your nearest Sprint Store or call Sprint at **1-800-584-3666**.

## Manufacturer's Warranty

### STANDARD LIMITED WARRANTY

#### What is Covered and For How Long?

SAMSUNG TELECOMMUNICATIONS AMERICA, LLC ("SAMSUNG") warrants that SAMSUNG's handsets and accessories ("Products") are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase by the first consumer purchaser and continuing for the following specified period of time after that date:

Phone	1 Year
Batteries	1 Year
Case/Pouch/Holster	90 Days
Other Phone Accessories	1 Year

#### What is Not Covered?

This Limited Warranty is conditioned upon proper use of the Product. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abnormal use, abnormal conditions, improper storage, exposure to liquid, moisture, dampness, sand or dirt, neglect, or unusual physical, electrical or electromechanical stress; (b) scratches, dents and cosmetic damage, unless caused by SAMSUNG; (c) defects or damage resulting from excessive force or use of a metallic object when pressing on a touch screen; (d) equipment that

has the serial number or the enhancement data code removed, defaced, damaged, altered or made illegible; (e) ordinary wear and tear; (f) defects or damage resulting from the use of Product in conjunction or connection with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (g) defects or damage resulting from improper testing, operation, maintenance, installation, service, or adjustment not furnished or approved by SAMSUNG; (h) defects or damage resulting from external causes such as collision with an object, fire, flooding, dirt, windstorm, lightning, earthquake, exposure to weather conditions, theft, blown fuse, or improper use of any electrical source; (i) defects or damage resulting from cellular signal reception or transmission, or viruses or other software problems introduced into the Product; or (j) Product used or purchased outside the United States. This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery; (ii) any of the seals on the battery are broken or show evidence of tampering; or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

#### **What are SAMSUNG's Obligations?**

This Limited Warranty is conditioned upon proper use of the Product. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abnormal use, abnormal conditions, improper storage, exposure to liquid, moisture, dampness, sand or dirt, neglect, or unusual physical, electrical or electromechanical stress; (b) scratches, dents and cosmetic damage, unless caused by SAMSUNG; (c) defects or damage resulting from excessive force or use of a metallic object when pressing on a touch screen; (d) equipment that has the serial number or the enhancement data code removed, defaced, damaged, altered or made illegible; (e) ordinary wear and tear; (f) defects or damage resulting from the use of Product in conjunction or connection with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (g) defects or damage resulting from improper testing, operation, maintenance, installation, service, or adjustment not furnished or approved by SAMSUNG; (h) defects or damage resulting from external causes such as collision with an object, fire, flooding, dirt, windstorm, lightning, earthquake, exposure to weather conditions, theft, blown fuse, or improper use of any electrical source; (i) defects or damage resulting from cellular signal reception or transmission, or viruses or other software problems introduced into the Product; or (j) Product used or purchased outside the United States. This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or

approved by SAMSUNG for charging the battery; (ii) any of the seals on the battery are broken or show evidence of tampering; or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

#### **What must you do to obtain warranty service?**

To obtain service under this Limited Warranty, you must return the Product to an authorized phone service facility in an adequate container for shipping, accompanied by the sales receipt or comparable proof of sale showing the original date of purchase, the serial number of the Product and the seller's name and address. To obtain assistance on where to deliver the Product, please call SAMSUNG Customer Care at 1-888-987-4357. If SAMSUNG determines that any Product is not covered by this Limited Warranty, you must pay all parts, shipping, and labor charges for the repair or return of such Product.

You should keep a separate backup copy of any contents of the Product before delivering the Product to SAMSUNG for warranty service, as some or all of the contents may be deleted or reformatted during the course of warranty service.

#### **What Are The Limits On Samsung's liability?**

THIS LIMITED WARRANTY SETS OUT THE FULL EXTENT OF SAMSUNG'S RESPONSIBILITIES, AND THE EXCLUSIVE REMEDY REGARDING THE PRODUCTS. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SAMSUNG

BE LIABLE FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR FOR, WITHOUT LIMITATION, COMMERCIAL LOSS OF ANY SORT; LOSS OF USE, TIME, DATA, REPUTATION, OPPORTUNITY, GOODWILL, PROFITS OR SAVINGS; INCONVENIENCE; INCIDENTAL, SPECIAL, CONSEQUENTIAL OR PUNITIVE DAMAGES; OR DAMAGES ARISING FROM THE USE OR INABILITY TO USE THE PRODUCT. SOME STATES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, OR THE DISCLAIMER OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND DISCLAIMERS MAY NOT APPLY TO YOU.

SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRD-PARTY SOFTWARE OR EQUIPMENT USED IN CONJUNCTION WITH THE PRODUCT, OR THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE. RESPONSIBILITY FOR THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT RESTS SOLELY WITH THE USER AND THE DIRECT VENDOR, OWNER

## OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT.

Nothing in the Product instructions or information shall be construed to create an express warranty of any kind with respect to the Products. No agent, employee, dealer, representative or reseller is authorized to modify or extend this Limited Warranty or to make binding representations or claims, whether in advertising, presentations or otherwise, on behalf of SAMSUNG regarding the Products or this Limited Warranty.

This Limited Warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

### **What is the procedure for resolving disputes?**

ALL DISPUTES WITH SAMSUNG ARISING IN ANY WAY FROM THIS LIMITED WARRANTY OR THE SALE, CONDITION OR PERFORMANCE OF THE PRODUCTS SHALL BE RESOLVED EXCLUSIVELY THROUGH FINAL AND BINDING ARBITRATION, AND NOT BY A COURT OR JURY. Any such dispute shall not be combined or consolidated with a dispute involving any other person's or entity's Product or claim, and specifically, without limitation of the foregoing, shall not under any circumstances proceed as part of a class action. The arbitration shall be conducted before a single arbitrator, whose award may not exceed, in form or amount, the relief allowed by the applicable law. The arbitration shall be conducted according to the American Arbitration Association (AAA) Commercial Arbitration Rules applicable to consumer disputes. This arbitration provision is entered pursuant to the Federal Arbitration Act. The laws of the State of Texas, without

reference to its choice of laws principles, shall govern the interpretation of the Limited Warranty and all disputes that are subject to this arbitration provision. The arbitrator shall decide all issues of interpretation and application of this arbitration provision and the Limited Warranty.

For any arbitration in which your total damage claims, exclusive of attorney fees and expert witness fees, are \$5,000.00 or less ("Small Claim"), the arbitrator may, if you prevail, award your reasonable attorney fees, expert witness fees and costs as part of any award, but may not grant SAMSUNG its attorney fees, expert witness fees or costs unless it is determined that the claim was brought in bad faith. In a Small Claim case, you shall be required to pay no more than half of the total administrative, facility and arbitrator fees, or \$50.00 of such fees, whichever is less, and SAMSUNG shall pay the remainder of such fees. Administrative, facility and arbitrator fees for arbitrations in which your total damage claims, exclusive of attorney fees and expert witness fees, exceed \$5,000.00 ("Large Claim") shall be determined according to AAA rules. In a Large Claim case, the arbitrator may grant to the prevailing party, or apportion among the parties, reasonable attorney fees, expert witness fees and costs. Judgment may be entered on the arbitrator's award in any court of competent jurisdiction.

This arbitration provision also applies to claims against SAMSUNG'S employees, representatives and affiliates if any such claim arises from the Product's sale, condition or performance.



**You may opt out of this dispute resolution procedure by providing notice to SAMSUNG no later than 30 calendar days from the date of the first consumer purchaser's purchase of the Product. To opt out, you must send notice by e-mail to [optout@sta.samsung.com](mailto:optout@sta.samsung.com), with the subject line: "Arbitration Opt Out." You must include in the opt out e-mail (a) your name and address; (b) the date on which the Product was purchased; (c) the Product model name or model number; and (d) the IMEI or MEID or Serial Number, as applicable, if you have it (the IMEI or MEID or Serial Number can be found (i) on the Product box; (ii) on the Product information screen, which can be found under "Settings;" (iii) on a label on the back of the Product beneath the battery, if the battery is removable; and (iv) on the outside of the Product if the battery is not removable). Alternatively, you may opt out by calling 1-888-987-4357 no later than 30 calendar days from the date of the first consumer purchaser's purchase of the Product and providing the same information. These are the only two forms of notice that will be effective to opt out of this dispute resolution procedure. Opting out of this dispute resolution procedure will not affect the coverage of the Limited Warranty in any way, and you will continue to enjoy the benefits of the Limited Warranty.**

#### **Severability.**

If any portion of this Limited Warranty is held to be illegal or unenforceable, such partial illegality or unenforceability shall not affect the enforceability of the remainder of the Limited Warranty.

Samsung Telecommunications America, LLC  
1301 E. Lookout Drive  
Richardson, Texas 75082  
Phone: 1-800-SAMSUNG  
Phone: 1-888-987-HELP (4357)

©2011 Samsung Telecommunications America, LLC. All rights reserved.

No reproduction in whole or in part allowed without prior written approval.

Specifications and availability subject to change without notice.  
[060111]

## End User License Agreement for Software

**IMPORTANT. READ CAREFULLY:** This End User License Agreement ("EULA") is a legal agreement between you (either an individual or a single entity) and Samsung Electronics Co., Ltd. for software owned by Samsung Electronics Co., Ltd. and its affiliated companies and its third party suppliers and licensors that accompanies this EULA, which includes computer software and may include associated media, printed materials, "online" or electronic documentation ("Software"). BY CLICKING THE "I ACCEPT" BUTTON (OR IF YOU BYPASS OR OTHERWISE DISABLE THE "I ACCEPT", AND STILL INSTALL, COPY, DOWNLOAD, ACCESS OR OTHERWISE USE THE SOFTWARE), YOU AGREE TO BE BOUND BY THE TERMS OF THIS EULA. IF YOU DO NOT ACCEPT THE TERMS

IN THIS EULA, YOU MUST CLICK THE "DECLINE" BUTTON, DISCONTINUE USE OF THE SOFTWARE.

1. GRANT OF LICENSE. Samsung grants you the following rights provided that you comply with all terms and conditions of this EULA: You may install, use, access, display and run one copy of the Software on the local hard disk(s) or other permanent storage media of one computer and use the Software on a single computer or a mobile device at a time, and you may not make the Software available over a network where it could be used by multiple computers at the same time. You may make one copy of the Software in machine-readable form for backup purposes only; provided that the backup copy must include all copyright or other proprietary notices contained on the original.

2. RESERVATION OF RIGHTS AND OWNERSHIP. Samsung reserves all rights not expressly granted to you in this EULA. The Software is protected by copyright and other intellectual property laws and treaties. Samsung or its suppliers own the title, copyright and other intellectual property rights in the Software. The Software is licensed, not sold.

3. LIMITATIONS ON END USER RIGHTS. You may not reverse engineer, decompile, disassemble, or otherwise attempt to discover the source code or algorithms of, the Software (except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation), or modify, or disable any features of, the Software, or create derivative works based on the Software. You may not rent, lease, lend,

sublicense or provide commercial hosting services with the Software.

4. CONSENT TO USE OF DATA. You agree that Samsung and its affiliates may collect and use technical information gathered as part of the product support services related to the Software provided to you, if any, related to the Software. Samsung may use this information solely to improve its products or to provide customized services or technologies to you and will not disclose this information in a form that personally identifies you.

5. UPGRADES. This EULA applies to updates, supplements and add-on components (if any) of the Software that Samsung may provide to you or make available to you after the date you obtain your initial copy of the Software, unless we provide other terms along with such upgrade. To use Software identified as an upgrade, you must first be licensed for the Software identified by Samsung as eligible for the upgrade. After upgrading, you may no longer use the Software that formed the basis for your upgrade eligibility.

6. SOFTWARE TRANSFER. You may not transfer this EULA or the rights to the Software granted herein to any third party unless it is in connection with the sale of the mobile device which the Software accompanied. In such event, the transfer must include all of the Software (including all component parts, the media and printed materials, any upgrades, this EULA) and you may not retain any copies of the Software. The transfer may not be an indirect transfer, such as a consignment. Prior to the transfer, the end user receiving the Software must agree to all the EULA terms.

7. EXPORT RESTRICTIONS. You acknowledge that the Software is subject to export restrictions of various countries. You agree to comply with all applicable international and national laws that apply to the Software, including the U.S. Export Administration Regulations, as well as end user, end use, and destination restrictions issued by U.S. and other governments.

8. TERMINATION. This EULA is effective until terminated. Your rights under this License will terminate automatically without notice from Samsung if you fail to comply with any of the terms and conditions of this EULA. Upon termination of this EULA, you shall cease all use of the Software and destroy all copies, full or partial, of the Software.

9. DISCLAIMER OF WARRANTIES. You expressly acknowledge and agree that use of the Software is at your sole risk and that the entire risk as to satisfactory quality, performance, accuracy and effort is with you. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE SOFTWARE IS PROVIDED "AS IS" AND WITH ALL FAULTS AND WITHOUT WARRANTY OF ANY KIND, AND SAMSUNG AND ITS LICENSORS (COLLECTIVELY REFERRED TO AS "SAMSUNG" FOR THE PURPOSES OF SECTIONS 9, 10 and 11) HEREBY DISCLAIM ALL WARRANTIES AND CONDITIONS WITH RESPECT TO THE SOFTWARE, EITHER EXPRESS, IMPLIED OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES AND/OR CONDITIONS OF MERCHANTABILITY, OF SATISFACTORY QUALITY OR WORKMANLIKE EFFORT, OF FITNESS FOR A PARTICULAR PURPOSE, OF RELIABILITY OR AVAILABILITY, OF ACCURACY, OF LACK OF VIRUSES, OF

QUIET ENJOYMENT, AND NON-INFRINGEMENT OF THIRD PARTY RIGHTS. SAMSUNG DOES NOT WARRANT AGAINST INTERFERENCE WITH YOUR ENJOYMENT OF THE SOFTWARE, THAT THE FUNCTIONS CONTAINED IN THE SOFTWARE WILL MEET YOUR REQUIREMENTS, THAT THE OPERATION OF THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE, OR THAT DEFECTS IN THE SOFTWARE WILL BE CORRECTED. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY SAMSUNG OR A SAMSUNG AUTHORIZED REPRESENTATIVE SHALL CREATE A WARRANTY. SHOULD THE SOFTWARE PROVE DEFECTIVE, YOU ASSUME THE ENTIRE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES OR LIMITATIONS ON APPLICABLE STATUTORY RIGHTS OF A CONSUMER, SO THESE EXCLUSIONS AND LIMITATIONS MAY NOT APPLY TO YOU.

10. EXCLUSION OF INCIDENTAL, CONSEQUENTIAL AND CERTAIN OTHER DAMAGES. TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT SHALL SAMSUNG BE LIABLE FOR PERSONAL INJURY, OR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES WHATSOEVER, OR FOR LOSS OF PROFITS, LOSS OF DATA, BUSINESS INTERRUPTION, OR FOR ANY PECUNIARY DAMAGES OR LOSSES, ARISING OUT OF OR RELATED TO YOUR USE OR INABILITY TO USE THE SOFTWARE, THE PROVISION OF OR FAILURE TO PROVIDE SUPPORT OR OTHER SERVICES, INFORMATION, SOFTWARE, AND

RELATED CONTENT THROUGH THE SOFTWARE OR OTHERWISE ARISING OUT OF THE USE OF THE SOFTWARE, OR OTHERWISE UNDER OR IN CONNECTION WITH ANY PROVISION OF THIS EULA, HOWEVER CAUSED, REGARDLESS OF THE THEORY OF LIABILITY (CONTRACT, TORT OR OTHERWISE) AND EVEN IF SAMSUNG HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME JURISDICTIONS DO NOT ALLOW THE LIMITATION OF LIABILITY FOR PERSONAL INJURY, OR OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THIS LIMITATION MAY NOT APPLY TO YOU.

11. LIMITATION OF LIABILITY. Notwithstanding any damages that you might incur for any reason whatsoever (including, without limitation, all damages referenced herein and all direct or general damages in contract or anything else), the entire liability of Samsung under any provision of this EULA and your exclusive remedy hereunder shall be limited to the greater of the actual damages you incur in reasonable reliance on the Software up to the amount actually paid by you for the Software or US\$5.00. The foregoing limitations, exclusions and disclaimers (including Sections 9, 10 and 11) shall apply to the maximum extent permitted by applicable law, even if any remedy fails its essential purpose.

12. U.S. GOVERNMENT END USERS. The Software is licensed only with "restricted rights" and as "commercial items" consisting of "commercial software" and "commercial software documentation" with only those rights as are granted to all other end users pursuant to the terms and conditions herein.

13. APPLICABLE LAW. This EULA is governed by the laws of TEXAS, without regard to conflicts of laws principles. This EULA shall not be governed by the UN Convention on Contracts for the International Sale of Goods, the application of which is expressly excluded. If a dispute, controversy or difference is not amicably settled, it shall be finally resolved by arbitration in Seoul, Korea in accordance with the Arbitration Rules of the Korean Commercial Arbitration Board. The award of arbitration shall be final and binding upon the parties.

14. ENTIRE AGREEMENT; SEVERABILITY. This EULA is the entire agreement between you and Samsung relating to the Software and supersedes all prior or contemporaneous oral or written communications, proposals and representations with respect to the Software or any other subject matter covered by this EULA. If any provision of this EULA is held to be void, invalid, unenforceable or illegal, the other provisions shall continue in full force and effect.

## Precautions for Transfer and Disposal

If data stored on this device is deleted or reformatted using the standard methods, the data only appears to be removed on a superficial level, and it may be possible for someone to retrieve and reuse the data by means of special software.

To avoid unintended information leaks and other problems of this sort, it is recommended that the device be returned to Samsung's Customer Care Center for an Extended File System (EFS) Clear which will eliminate all user memory and return all

settings to default settings. Please contact the **Samsung Customer Care Center** for details.

**Important:** Please provide warranty information (proof of purchase) to Samsung's Customer Care Center in order to provide this service at no charge. If the warranty has expired on the device, charges may apply.

Customer Care Center:

1000 Klein Rd.

Plano, TX 75074

Toll Free Tel: 1.888.987.HELP (4357)

Samsung Telecommunications America, LLC:

1301 East Lookout Drive

Richardson, Texas 75082

Phone: 1-800-SAMSUNG (726-7864)

Phone: 1-888-987-HELP (4357)

**Important:** If you are using a handset other than a standard numeric dialpad, dial the numbers listed in brackets.

©2011 Samsung Telecommunications America. All rights reserved.

No reproduction in whole or in part allowed without prior written approval. Specifications and availability subject to change without notice.

# Index

---

## Symbols

114

## Numerics

3-Way Call 68, 173

4G

Overview 191

Turning Off 192

Turning On 192

Understanding the Icons 191

4G Hotspot 193

## A

Activation 5

Adapter

microSD Card 135

Add 2 Sec Pause 65

Add Account 83

Add to Home screen 39

Add Wait 65

Airplane Mode 86

Activating 87

Deactivating 87

see also Flight Mode 86

Alarm

Creating an Alarm 122

Delete an Existing Alarm 123

Disable an Existing Alarm

123

Alarm Clock 121

Creating a New Alarm 121

AllShare 145

Configure Settings 226

Receiving Media from Server

227

Transmitting Media 226

Amazon

Purchasing and

Downloading Music 222

Amount to Synchronize 83, 206

Android Market 208

Accessing 208

Installing a Google

Application 208

Launching a Google

Application 208

My Apps 209

My apps 126

My Downloads 208

Reinstalling a Google

Application 209

Selecting a Google

Application 208

Android OS

Update 128

Animation 77

Answering Calls 66

Applications 34, 209

Applications Screens

Using 33

Assigning Pictures 147

Audible Touch Notifications 75

Audible selection 75

Audible touch tones 75

- Haptic feedback 75
- Screen lock sounds 75

- Auto-Rotate Feature 43

- Auto-Rotate Screen 77

- Auto-rotate Screen 43

- Auto-sync 207

- Enabling 81

## B

- Back Key 24

- Back Up All Data 125

- Backing Up Text Messages 126

- Backlight 77

- Keyboard 78

- Battery 19–22

- Capacity 19

- Charging 20

- Disposal 239

- Extending Battery Life 21

- Installing 19

- Battery Usage

- Viewing 94

- Battery Use 22

- Viewing 78

- Bluetooth 152–157

- Changing Your Bluetooth Name 154

- Disconnecting Paired Devices 155

- Discoverable 154

- Making Your Device Visible/Discoverable 154

- Pairing 154

- Scanning for Bluetooth Devices 154

- Sending Items 156

- Settings 153

- Brightness 78

- Browser

- Adding Bookmarks to Home Screen 188

- Clear cache 185

- Clear history 185

- Clear Location Access 186

- Clear Passwords 186

- Cookies 185

- Creating Bookmarks 187

- Creating Bookmarks from other Tabs 187

- Creating Website Settings 186

- Default zoom 184

- Enable Javascript 185

- Home Page 187

- Landscape-Only Display 185

- Navigation 184

- Page Settings 184

- Pop-up Windows 185

- Privacy Settings 185

- Remember Passwords 186

- Resetting to Default 187

- Security Settings 186

- Selecting a Search Engine 186

- Selecting Onscreen Text 184

- Browser Menu 182–188

## C

- Calculator 124
  - Advanced panel 125
- Calendar 114–120
  - Adding Corporate Events 114
  - Adding Events 116
  - Event Reminders 119
- Calibrate 79
- Call
  - Add call 68
  - Conference 68
  - Merge 68
  - Three-way call 68
- Call Forwarding 174
- Call Waiting 173
- Caller ID 172
- Calling in Lock Mode 91
- Camcorder
  - Audio recording 150
  - Bluetooth 151
  - Delete 151
  - Messaging 151
  - Recording mode 149
  - Resolution 149
  - Settings 149
  - Share 151
  - Timer 150
  - Video Quality 150
  - Video Viewer 149
  - YouTube 151
- Camcroder
  - Email 151
  - Gmail 151
- Camera 141–151
  - see also Pictures
  - Face Detection 143
  - Focus Area 143
  - Gallery 145
  - Image Quality 144
  - Image Settings 145
  - Resolution 144
  - Scene Mode 143
  - Settings 142, 143
  - Share 146
  - Taking Pictures 141
  - Timer 144
- Cannot install this Hardware 138
- Clear Cache 95
- Clear Data 95
- Clear Default 95
- Clear Location Access 186
- Clear Memory 94
- Clock 121
- Connection
  - Troubleshooting 137
- Contact Icon 147
- Contacts 101–113
  - Adding a Number 108
  - Adding an Entry 101
  - Adding Entries to Your Favorites 111
  - Adding Your Facebook Friends 111
  - Assigning a Picture 110



- Assigning a Picture from Device 110
- Assigning a Picture from online Gmail 110
- Contact Menu Options 106
- Deleting Entries 110
- Dialing From 72
- Editing 108
- Editing a Number 109
- Entry Options 107
- Linking 112
- Saving a Phone Number 103
- Sending via Bluetooth 109, 156
- Sending via Email 109
- Sending via Gmail 110
- Sending via Messaging 110
- Unlinking 113
- Context Menus 45
- Corporate Email 202
- Account Management Settings 83
- Account Settings 205
- Account Synchronization 83
- ActiveSync Settings 205
- Add Account 83
- Adding a Sync Account 83
- Back up 126
- Celendar Event Synchronization 114
- Configuration 205
- Configuring Settings 205
- Create and Send 204
- Creating a Signature 207
- Creation 202
- Deleting 205
- Opening 203
- Replying 204
- Signature 84, 207
- D**
- Data Services 179–214
  - see also Web
- Launching the Web 180
- Password 7
- User Name 179
- Data Synchronization
  - Configuring 207
- Date and Time 79
  - Automatic 79
- Device (illus.) 11
- Device Lock 89
- Device Settings 74–95
  - Airplane Mode 86
  - Display Settings 77–80
  - Location Settings 80
  - Messaging Settings 166–172
  - Sound Settings 74–77
  - TTY Use 87
- Device Updates 125, 128
- Dialing Options 65
- Disconnecting a Bluetooth
  - Device 155
- Display Screen 15, 78

- DivX 120, 215
  - DivX Player 217
  - DRM-Free 217
  - Protected Content 217
  - Registration 216
  - VOD Registration Number 216
- Downloads 208, 209
- Drag 28

## E

- Edit Sync Groups
  - Assigning a Picture to Device 110
- Edit text menu 109
- Email 194
  - Account Settings 201
  - Add Signature 84, 202, 207
  - Create and Send 199
  - Creation 199
  - Forward with files 202
  - Icons/Shortcuts 194
  - Notifications 194

- Opening 199
- Refresh 199
- Signature 202
- Text Size 201, 204
- View Mode 201
- Emergency call 91
- Emergency Numbers 67
- Emoticons 14, 60
- End-of-Call Options 69
- Enhanced 911 (E911) 67
- Entering Text 47–63
  - 123ABC Mode 57
  - ABC Mode 50
  - Additional QWERTY Text Options 59
- Emoticons 63
- Numbers 50, 57, 62
- Onscreen Keyboard 47
- QWERTY Keyboard 59
- Samsung Keyboard 48
- Selecting Mode 48
- Selecting Mode in Swype 56

- Smileys 62, 63
- Symbols 50, 57, 62
- Erasing Device Content 95
- Event Reminders 119
- Events
  - Erasing a Day's 120
  - Erasing All Events 120
- Exchange Mail
  - Back up 126
- Extended Screens
  - Adding and Removing 33
  - Assigning a New Home Screen 33
- Extending Battery Life 21

## F

- Facebook 145, 146
  - Adding Your Friends to your Contacts 111
  - Get Friends 112
  - Logging In 111
  - Sync Friends 112

Factory data reset 95

Favorites 72, 111

FCC Notice 241

File Viewer

Accessing 120

Flickr 27

Flight Mode

see Airplane Mode 86

Folders

Creating and Managing 41

Forgot My Unlock Pattern 91

## G

Gallery 79, 145

Getting Around Your Device

Drag 28

Flick 27

Pinch 29

Press and Hold 27

Rotate 29

Spread 29

Swipe or Slide 28

Tap 27

Gmail 104

Accessing Email Messages

197

Account Settings 198

Assigning a Contacts Image

110

Back up 125

Create and Send 196

Creation 195

Deleting 198

Opening 196

Refresh 196

Replying 198

Signature 196, 198

Text Size 198

Viewing a New Email 197

Google

Account Management

Settings 82

Account Signin 63

Account Synchronization 82

Add Account 82

Adding a Sync Account 82

Creating an Account 63

Synchronizing an Account

81

Google Applications

Back up 126

Google Contact

Updating Images 110

Google Maps 228

Enabling the GPS 229

Launching 229

Searching 229

Google Search 24, 30

Using Text 25, 26

Google Talk 36

Google Translate 184

GPS Satellites

Usage 81

GPS Services 228

GPS Tag 144

Group

Creating a New Group 105

## H

- Haptic Feedback 76
- History 96
- Home Key 24
- Home Screen 30
  - Adding Web Bookmarks 188
  - Customizing 37
  - Extended Screens 30
  - New 33
  - Overview 29
- Home Screen Wallpaper 147
- Homepage
  - Creating 188

## I

- ID Wallpapers 79
- Image
  - GPS Tag 144
- Image Viewer 143
- In-Call Options 68
- Incoming Call Volume 75

## Input Method 48

- Changing 48
- International Dialing 86
- International Dialing Code
  - Changing 86
- Internet
  - see Web
- Internet Call 108
- Internet Email
  - Adding Additional Accounts 200

## K

- Key Functions 11
- Keyboard Backlight 78
- Keyboard Timeout 78

## L

- Language
  - Settings 80
- Live Wallpapers 79
- Location Mode
  - Activating 228
- Location Settings 80

## Lock Mode

- Calling 91
- Locking Your Device 89
- Locking Your Device Screen 89
- Logs 96–100
  - Accessing From Notifications 97
  - Altering a Number 100
  - Erasing 100
  - Making a Call 99
  - Options 97
  - Saving a Number 99

## M

- Making Calls 64
- Market
  - Downloads 208
  - My Apps 209
- Media Hub
  - Create New Account 219
  - Logout 219
  - Manage My Devices 219

- My Account 219
- My Payment Methods 219
- My Purchases 219
- Notices 220
- Overview 218
- Reset Media Hub 219
- Start Using 218
- Media Volume 75
- Memory
  - Clearing Application Cache 95
  - Management 92
  - SD card 92
  - System storage 92
  - Uninstalling Third-Party Applications 95
- Memory Usage
  - Sorting 93
  - Viewing 93
- Menu i
  - Navigation 27
- Menu Key 23
  - Add 23
  - Edit 23
  - Notifications 23
  - Search 23
  - Settings 24
  - Wallpaper 23
- Menu Navigation 43
  - Using Your Fingers 43
  - Using your Keyboard 44
- Message
  - Settings 171
- Message Threads
  - Deleting 171
- Messaging
  - Email 194
  - Multimedia Messaging 168
  - Notification 166
  - Text Messaging 166
  - Visual Voicemail 160
- microSD 133, 134
  - Available space 92
  - Before You Begin 136
  - Formatting 93
  - Total space 92
  - Troubleshooting Connection 137
  - Umount 93
- microSD Card 133–140
  - Adapter 135
  - Formatting 139
  - My Files 120
  - Re-insertion 134
  - Removal 133
  - Write Protection 135
- Microsoft Exchange
  - ActiveSync 202
- Missed Calls 66
- MMS
  - Attaching Audio 170
  - Attaching Pictures 169
  - Attaching Slideshow 169

- Attaching Videos 170
- Capture Video 170
- Record Audio 170
- MMS Text Messaging 168
- Mobile Network Settings 178
- Mobile Networks
  - Settings 178
- Multimedia Messaging 168
  - Composing 168
  - Opening 170
  - Replying to 171
  - Settings 171
- Music 222–224
  - Assigning a New Ringtone 223
  - Creating a Playlist 223
  - Player 223
  - Playlist 223
  - Purchasing and
    - Downloading from Amazon 222
  - Streaming Music 224

- Using a Song as a Ringtone 223
- My Driver 210
- My Files 120

**N**

- NASCAR
  - Exit 211
  - Fantasy 211
  - FanZone 211
  - Leaderboard 210
  - Miss Sprint 210
  - News & Alerts 211
  - Point Standings 210
  - Race Recap 210
  - Settings & Help 211
  - SPEED 210
  - Stats & Schedule 210
  - Twitter 211
  - Videos 211
- NASCAR Sprint Cup Mobile 209
- Navigating the Menus 27

- Navigating the Web 181
- Navigation 232
- North American Dialing 86
- Notification Volume 75

**O**

- Outlook
  - Account Management
    - Settings 83
  - Synchronizing 83
- Outlook Email 202
- Owner's Record 242

**P**

- Pairing Bluetooth Devices 154
- Phone Book
  - see Contacts
- Phone Number
  - Displaying 47
  - Finding 71
  - Saving 70, 103
- Picasa 146
- Pico TTS 132
- Picture ID 147

- Pictures
  - Sending via Bluetooth 156
  - Taking Pictures 141
- Pinch 29
- Plus Code Dialing 73, 86
- Portrait Keypad Types 51
- Predictive Text 52
- Press and Hold 27
- Primary Shortcuts 31
- PRL Updates
  - Downloading 128
- Profile Updates
  - Downloading 128

**Q**

- Qik 13, 209
  - Recording Video 214
- Quick Screen Access 32

**R**

- RAM
  - Manage 94
- RAM Manager
  - Clear Memory 94

- Recently-Used Applications
  - Accessing 42
- Resetting Your Device 95
- Ringers
  - Setting Audible Touch Tones 75
  - Setting for Messages 75
  - Setting for Notifications 75
  - Setting for Voice Calls 74
  - Silence All 76
  - Types 74
  - Vibrate 76
- Roaming 175–178
  - Domestic 176
  - International 176
  - Roam Settings 176
  - Roaming Guard 176
- Roaming Guard 176
  - Making and Receiving Calls 177
  - Notification 177
- Rotate 29

- Running Services
  - Managing 93
  - Stop Service 93, 94

**S**

- Safety Information 234–242
- Samsung Keypad
  - ABC Mode 50
  - Auto-Append 53
  - Auto-Substitution 53
  - Configuring 51
  - Enabling 51
  - Entering Number and Symbols 50
  - Next Word Prediction 53
  - Numbers 50
  - Overview 49
  - Predictive Text 52
  - Recapture 53
  - Regional Correction 53
  - Settings 51, 52
  - Spelling Correction 53
  - Symbols 50

- Voice Input 52
- Word Completion 52
- Word Completion Point 52
- XT9 Auto-Substitution 53
- XT9 My Words 53
- Samsung Mobile Driver 136
- Saving a Phone Number 70, 103
- Screen Lock 89
- Screen Orientation 77
- Screen Timeout 77
- Screens
  - Adding and Removing 33
- Search
  - Searchable Items 85
  - Settings 85
- Search Engine
  - Selecting 186
- Search Key 24
- Searchable Items 85
- Searching
  - Using Voice 26

- Security 88–92
  - Menu 88
- Select Input Method v, 48
- Select Locale 80
- Set Wallpaper 79
- Setting the Language
  - English 80
  - Español 80
- Settings 74–95
- Share
  - AllShare 146, 151
  - Bluetooth 146
  - Email 146
  - Facebook 146
  - Gmail 147
  - Messaging (MMS) 146
- Shortcuts
  - Adding via Home screen 39
  - Creating 38
  - Deleting 40
  - Via Applications Screens 38

- Signature 84, 198, 202, 207
  - Add 207
- Silence All 76
- Silent mode 77
- Slide 28
- Smiley 14
- Smileys 60
- SMS Text Messaging 166
- Software Updates
  - Downloading 125
  - Firmware 125
- Speed Dial
  - Assigning 72
  - Calling 73
  - Setting 65
- Speed Dialing 72
  - Favorites 72
- Spell Checker 53
- Spread 29
- Sprint Football Live 209
  - Draft 211
  - Draft Central 212



- Exit 212
  - Fantasy 212
  - My Team 211
  - News and Analysis 212
  - Odds 212
  - Scores and Schedules 212
  - Settings/Help 212
  - Standings 212
  - Statistics 212
  - Team Pages 212
  - Twitter 212
  - Videos and Photos 212
  - Sprint ID
    - Changing 32
    - Samsung Theme 32
    - Using 32
  - Sprint Mobile Hotspot 193, 209
    - Passkey 193
  - Sprint Service
    - Account Passwords 6
    - Activation 5
    - Operator Services 8
  - Sprint 411 8
  - Sprint TV 221
  - Sprint Zone 209
  - Status bar 29
  - Stop 93, 94
  - Stop Service 93, 94
  - Stopwatch 124
  - Storage
    - Manage Memory 92
  - Streaming Music 224
  - Swipe or slide 28
  - Swype
    - Configuring 54
    - Enabling 54
    - Entering Numbers 58
    - Entering Symbols 58
    - Help 55
    - Selecting a Text Input Mode 56
    - Settings 54
    - Text Entry Tips 55
    - Tips 58
  - Tutorial 55, 58
  - Synchronizing Accounts 81
  - System Select 176
  - System Update 127
  - System Volume 75
- T**
- Taking Pictures 141
  - Talk 36
  - Tap 27
  - Task Manager 94
    - Active Applications 94
    - Downloaded 94
    - Storage 94
  - TeleNav GPS
    - Overview 230
    - Registering 230
    - Using 231
  - Tethered Mode 136
  - Tethering 136
  - Text
    - Selecting on Web Page 184

- Text Entry
  - see Entering Text 59
- Text Message
  - Back up 126
- Text Messaging 166
  - Settings 171
- Text-to-Speech 131
  - Language 132
  - Settings 131
- Third-Party Applications
  - Uninstalling 95
- Three-Way Calling 173
- Timer 124
- Transcribing
  - Voicemail to Text 166
- TRS 88
- TTY Use 87
- Turning Your Device On and Off 18
- TV 221

## U

- Unlock Pattern 89
  - Changing the Pattern 91
  - Configuring Settings 90
  - Creating 89
  - Forgotten Your Pattern 91
  - Use visible pattern 90
- Unlocking Your Device Screen 89
- Update Android 128
- Update Firmware 125
- Updating Firmware
  - OTA 127
- Updating Your Device
  - Firmware 125
- Updating Your PRL 128
- Updating Your Profile 128
- Use GPS Satellites 228
- Use GPS satellites 229
- Use Wireless Networks
  - Activating 228

- User Name 179
  - Updating 180

## V

- Vibrate 76
  - Haptic Feedback 76
- Vibration Intensity 76
- Video
  - Encoding Settings 120, 215
- Videos
  - Recording 147
  - Settings 150
- Visible Passwords 91
  - Disable 92
- Visual Voicemail
  - Changing your Main Greeting 164
  - Editing the Display Name 164
  - Enabling the Speakerphone 164
  - Listening to Multiple Messages 162

- Options 162
- Setting Up 160
- Settings 163
- Voice Dialer 129
  - Activation 129
  - Calling a Contact 130
  - Calling a Number 130
- Voice Dialing 130
- Voice Search 12, 24, 25, 26
  - Additional Functions 26
- Voicemail
  - Notification 164
  - Retrieving 165
  - Setting Up 6
- Voicemail to Text 166
- Volume
  - Incoming call volume 75
  - Media 75
  - Media volume 75
  - Notification volume 75
  - Ringer 75
  - System volume 75

## W

- Wallpaper 78
  - Gallery 79
  - Home Screen 147
  - Home screen 147
  - ID Wallpapers 79
  - Live wallpapers 79
- Wallpaper Gallery 79
- Warranty 243
- Web 179–188
  - see also Data Services
  - Browser Menu 182–188
  - Email 194
  - Going to a Web page 182
  - Launching 180
  - Navigating 181
  - User Name 179
  - Zooming In and Out 182
- Web Bookmarks 187
- Wi-Fi
  - Connecting to a Network 189

- Manually Scanning 190
- Settings 189, 190
- Status Indicators 190
- Turning Off 189
- Turning On 189
- Wi-Fi Hotspot 193
- Wikipedia 184
- Window Animation 77
- Wireless Networks 81
  - Location 81
- Word Prediction 53
- World Clock 123
  - Add City 123
  - Remove City 123
- Write Protection 135

## X

- XT9 51
  - Advanced Settings 51, 52
  - Predictive Text 52

## Y

- YouTube 225

## **Z**

Zooming 142, 148