



Copyright

All mobile products by GIGA-BYTE COMMUNICATIONS INC. mentioned in this document, including the device, accessories, software, text, music, and pictures, are owned by, or authorized by original manufacturers to GIGA-BYTE COMMUNICATIONS INC. Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of GIGA-BYTE COMMUNICATIONS INC. is prohibited.

GIGA-BYTE Group, GIGA-BYTE COMMUNICATIONS INC.

Safety Information

This section contains important information on safe and efficient operation. Please read this information before using the device.

- Use only the batteries and power adapter provided by the manufacturer. Use of unauthorized accessories may void your warranty.
- · Do not remove the battery while the phone is charging.
- · Avoid using the phone near electromagnetic sources such as TVs, radios, and microwave ovens.
- · Unplug the power adapter from the wall outlet during lightning storms to avoid electric shock or fire.
- Do not expose the phone or the battery to direct sunlight.
- Do not store your phone in temperatures higher than 60°C or 140°F.
- Do not use harsh chemicals or detergents to clean your phone.
- Do not handle the phone with wet hands while it is being charged. This may cause an electric shock or serious damage to the phone.

SAFETY PRECAUTIONS FOR BATTERY USE

- · Use only approved battery.
- Keep the battery dry and away from any liquid since this may cause a short circuit.
- Keep the battery away from metal objects since this may cause a short circuit.
- · Do not use damaged or deformed batteries.
- If the battery emits a foul odor, discontinue use.
- · Keep the battery away from babies and small children.
- · If the battery leaks:
 - Do not allow the leaking fluid to come in contact with your skin, eyes or clothing. If already in contact, rinse
 with clean water immediately and seek medical advice.
 - Keep the battery away from fire since this may cause the battery to explode.
 - · Do not attempt to open or service the battery yourself.
 - · Do not dispose battery in fire or water.
- Recycle or dispose used batteries according to the local regulations.
- Prevent to place the battery in extreme temperature condition, it maybe influence the battery efficiency.

ROAD AND ENVIRONMENTAL SAFETY

- Turn off the phone in areas with a potentially explosive atmosphere or where flammable objects exist such as gas stations, fuel depots, and chemical plants among others. Sparks from these areas could cause explosion or fire and result in injury or even death.
- Do not use hand-held phones while driving a vehicle. Use hands-free devices as an alternative.

SAFETY IN AIRCRAFT

Do not use the phone on board an aircraft. The phone's network signals may cause interference to the navigation system. As a safety measurement, it is against the law in most countries to use the phone on board an aircraft.

Copyright © 2012. All Rights Reserved.

Android is a trademark of Google Inc. Use of this trademark is subject to Google Permissions. Bluetooth and the Bluetooth logo are trademarks owned by Bluetooth SIG, Inc. Java, JME and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries

SAR Information

THIS MOBILE DEVICE MEETS GUIDELINES FOR EXPOSURE TO RADIO WAVES, Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health. The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the ICNIRP guidelines is 2 W/kg averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The actual SAR level of fan operating device can be below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station. The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 0.396 W/kg. Use of device accessories and enhancements may result in different SAR values. SAR values may vary depending on national reporting and testing requirements and the network band. Additional SAR information can be found on the Cellular Telecommunications Industry Association (CTIA) website at www.wow-com.com.

- The standard value of SAR is 2.0W/Kg: the maximum SAR of the device is 0.54 W/Kg.
- For decreasing the influence of the electromagnetic wave, please use the device carefully.

WFFF Notice

The WEEE logo on the product or on its box indicates that this product must not be disposed of or dumped with your other household waste. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste. Isolated collection and proper recovery of your electronic and electrical waste equipment at the time of disposal will allow us to help conserve natural resources. Moreover, proper recycling of the electronic and electrical waste equipment will ensure safety of human health and environment. For more information about electronic and electrical waste equipment disposal, recovery, and collection points, please contact your local city center, household waste disposal service, shop from where you purchased the equipment, or manufacturer of the equipment.

RoHS Compliance

This product is in compliance with Directive 2002/95/EC of the European Parliament and of the Council of 27 January 2003, on the restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS) and its amendments.

European Union Regulatory Conformance

The equipment complies with the RF Exposure Requirement 1999/519/EC, Council Recommendation of 12 July 1999 on the limitation of exposure of the general public to electromagnetic fields (0–300 GHz). This equipment meets the following conformance standards: EN 300 328, EN 301489-1, EN 301489-3, EN 301489-7, EN 301489-17, EN 301489-24, EN 301 511, EN 301 908-1/2, EN 50360, EN62209-1, EN 300440-1/-2, EN 50332-1/-2 and EN 60950-1. Changes or modifications to this product not authorized by the manufacturer could void the EMC compliance and negate your authority to operate the product. This product has demonstrated EMC compliance under conditions that included the use of compliant peripheral devices and shielded cables between system components. It is important that you use compliant peripheral devices and shielded cables between system components to reduce the possibility of causing interference to radios, televisions, and other electronic devices. We, hereby, declare that this cellular, Wi-Fi, & Bluetooth radio is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Intellectual Property Right Information

Right to all technologies and products that comprise this device are the property of their respective owners: This product has an Android platform based on Linux, which can be expanded by a variety of Java-Script-based application SW. Google, the Google logo, Android, the Android logo, Gmail, and YouTube are trademarks of Google Inc. Bluetooth and the Bluetooth logo are trademarks owned by Bluetooth SIG, Inc. Wi-Fi, the Wi-Fi CERTIFIED log, and the Wi-Fi logo are registered trademarks of the Wireless Fidelity Alliance. Java, JME and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries. microSD is a trademark of SD Card Association.

General Information

This section contains important information on safe and efficient operation. Please read this information before using the device, Ignorance of the following notices may lead to violations of the law.

- Before using the device, please make sure you have fully charged the battery.
- · Do NOT remove the battery from the device during charging.
- · Before inserting SIM card into the device, make sure that the device is switched off.
- Do NOT attempt to dissemble the device on your own. This should be done by an authorized person.
- Use the device in accordance to instructions when in public facilities.
- In some countries, it is a violation against the law to record phone conversations. Always ask permission of the other party when you are going to record a conversation.
- · To protect your ears, turn down the volume before you use stereo headsets or other audio devices.
- To avoid damaging the touch screen and the device, do NOT apply excessive pressure on them, and remove the device from your pants' pocket before you sit down. It is also recommended that you only use the stylus or your finger to interact with the touch screen. It is not covered by the warranty that you crack the touch screen because of the improper usage.
- When you use the device for a long time, such as talking on the phone, browsing online, or charging the battery, the device may become warm. In most cases, this condition is normal.
- Refer servicing to the provider, or an authorized technician under the following conditions: 1. The device
 has been damaged. 2. When you follow the instructions to use your device, it does not operate normally. 3.
 The device has been exposed to water. 4. Liquid has been spilled or an object has fallen onto the device.
- Do Not push unauthorized objects into slots and openings in your device.
- The device should be placed away from heat sources such as stoves, radiators, heat registers, or other products that produce heat.
- Condensation may form on or within your device, when you move your device between environments with very different temperature and/or humidity ranges. To avoid damaging your device, make the moisture to evaporate before you use the device.
- To avoid damaging your device, do Not put your device on an unstable table, stand, bracket, or other places.
- Before you clean your device, unplug it, please. Use a damp cloth for cleaning, but do Not use water, liquid cleaners, or aerosol cleaners to clean the touch screen.



Table of Contents

Copyright	
Safety Information	
General Information	0-5
Chapter 1 Getting Started	1-1
1.1 Your Phone	
1.2 Installing or uninstalling the SIM Card, Battery, and Memory Card	
1.3 Charging the Battery.	
1.4 Turning the Phone On or Off	
1.5 Lock / Unlock	1-6
1.6 Notification LED.	
1.7 Initial Settings	1-7
1.8 Using Headset	
1.9 Adjusting the Volume	
1.10 People	
1.11The Home Screen	1-10
Chapter 2 Phone Functions & Input	2-1
2.1 Voice Calls	2-1
2.2 Using On-Screen Keyboard.	2-2
•	
Chapter 3 Email & Messaging	
3.1 Creating and sending a text message	
3.2 Multimedia Message	
3.3 Voice Message	
3.4 E-mail Accounts. 3.5 Using E-mail	
· ·	
Chapter 4 Using the Internet	
4.1 Connecting to the Internet	4-1
4.2 Bluetooth modes	4-2
OL 4	
Chapter 5 Multimedia Applications	
5.1 Photos and Videos	
5.3 Music	
J.J IVIUSIC	5-4
Chapter 6 Programs	6-1
6.1 Pre-installed programs introduction	

6.2 Browser	
6.3 Calculator	6-5
6.4 Calendar	6-5
6.5 Gmail	6-6
6.6 Maps	
6.7 Latitude	6-7
6.8 Places	6-7
6.9 Navigation	6-7
6.10 Google Search	6-8
6.11 Talk	
6.12 YouTube	6-8
6.13 Play Store	
6.14 News and Weather	6-8
6.15 Best Choice	
6.16 FM Radio	
6.17 Sound Recorder	6-9
6.18 File Manager	6-10
6.19 Downloads	6-10
6.20 Google+	6-10
6.21 Screen Capture	6-10
Chapter 7 Managing Your Phone	
7.1 Phone Settings	
7.2 Managing Basic Settings	
7.3 Protecting Your Phone	
7.4 Resetting Your Phone	7-6
7.5 Specifications	7-6


1.1 Your Phone

This section introduces you to the hardware of the device.



No.	Items	Functions	
1	Earphone jack	Use a headset for hands-free conversation or listening to music.	
2	Power	Press and hold for several seconds to turn the phone on or off. To set your phone to the sleep mode, press the power button briefly. Press again to turn on the display.	
3	Receiver	The source of voice.	
4	Touch screen	Display screen.	
5	LED	Power status notification. Other notification. (New message / Missed call).	
6	P-sensor / Light sensor	P Sensor: The screen will turn off automatically when the device is close to the face during a phone call. Light Sensor: Adjust the brightness of the screen according to the environment.	
7	Menu	Press to view the options of the menu.	
8	Home	 Go back to Home Screen. Press and hold to bring up recent activities. 	
9	Search	Connect to the website or find features in the phone.	
10	Return	Return to the previous page.	

No.	Items	Functions		
11	MIC	Sound Receiver.		
12	Micro-USB port	Connect USB cable and the AC adapter to charge the battery. USB tethering: Share your phone's mobile data connection via USB cable.		
13	Volume	Press upward or downward to turn louder or down volume. Press down key fully to enter vibrate mode.		
14	microSD Slot	You can insert your microSD card.		
15	Camera key	Tap to activate the camera. In Camera/Camcorder mode, press to take a photo or video.		
16	Flash LED	Help photo shooting.		
17	5 Megapixels Camera	The camera on the back of the device supports 5 megapixels photo and high-quality video.		
18	Back cover	You need to open the cover to install or uninstall the battery and the SIM card.		
19	Speaker	The source of music and voice.		

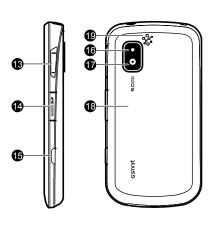


1.2 Installing or uninstalling the SIM Card, Battery, and Memory Card

To remove the back cover

 Please turn over your phone with the back cover facing up.



2. Please move your fingertip into the slot.

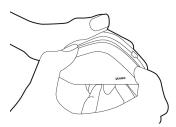

Pull the back cover with your fingertip and remove it.



SIM card

The SIM card contains your phone number, memory storage, and details of network service.

To install the SIM card

There are two slots for SIM cards. Upper slot is for SIM2, the gold contacts are facing down. SIM1 slot is on the underside, the gold contacts are facing up. And the cut-off corner is facing toward the battery slot.

1 Getting Started To install the SIM1 card



To install the SIM2 card

To remove the SIM card

- 1. First, remove the battery.
- Use your finger to slide the SIM card out of card slot.

Battery

Your phone comes with a rechargeable battery. Battery life varies depending on the network, used applications, and the type of connections attached to your phone.

To install the battery

Make sure the contact of the battery is close to connectors in the battery slot.



To remove the battery

Use your fingertip to lift the battery, then remove it.

NOTE:

- •To ensure battery performance and avoid risk from fire.
- Use only the original battery designated for the phone.
- Do not store the battery in temperature lower than -10°C or higher than 45°C.

To replace the back cover

 Please insert the hook on the bottom of back cover into the slot.

Then, press four points of back cover fully until hear clicks.



Memory card

You may need a microSD card to store photos, music, videos and other data.

To install the memory card

- Insert the memory card with the gold contact facing down.
- 2. Push the memory card until it clicks into slot.



To remove the memory card

- For safe removal, tap Application Drawer > APPS > Settings > Storage > Unmount SD card.
- 2. Push the memory card to eject it from the slot.

1.3 Charging the Battery

When you take your phone out of box for the first time, the battery isn't at full of power. Please charge the battery fully before using.

- Connect the USB cable to the AC adapter, and then, connect to the device via the USB cable.
- 2. Plug the AC adapter to a socket to start the charge.



NOTE:

 To ensure safety, do not remove the battery from the phone while the AC adapter is connected or while it is being charged.

1.4 Turning the Phone On or Off

After installing the SIM card and charging the battery, you are now ready to turn your phone on.

To turn on your phone

Press and hold the power button until the phone shortly vibrates.

To turn off your phone

- Press and hold the power button for several seconds.
- 2. A pop-up window appears, then tap "Power off".
- 3. Select "OK" to confirm.

To set your phone to the sleep mode

To set your phone to the sleep mode, press the power button briefly. It will turn the display off. To turn the display on, press the power button briefly again.

1.5 Lock/Unlock

There are two functions you may use when you

just turning it on or coming back from sleep mode.



Unlock the device

Drag the G icon on screen and slide to unlock icon for unlocking the device.



Taking pictures

Drag the G icon to Camera icon to taking some pictures.



1.6 Notification LED

Types	Descriptions
Solid red light	Battery is charging.
Solid green light	Battery is full.
Flashing red light	Battery is low.
Flashing green light	Notification (New message / Missed call / New email)
Flashing blue light once	Turning the device on while charging.

1.7 Initial Settings

Before initializing your device, please remember to insert your SIM card first. When turning on your

phone for the first time or resetting your phone, you need to follow the steps as below:

- On the "Welcome" screen, you could change the default language, or tap "Start" to continue the setting. In this step, you can tap "Emergency Call" to make an emergency call.
- 2. In the screen of Set up your Google Account, you can tap "Get an account" to create a new account, tap "Sign in" to sign in the Google account, or tap "Not now" to do it later. Please follow the on-screen instruction to log in.
- In the screen of Use Google location, you can allow or disallow Google's location service to collect anonymous location data. You can also allow or disallow Google to use My Location for Google search results and other Google services. Then. tao "Next".
- Set up your name to personalize some apps. Then, tap "Next".
- 5. Tap "Finish" to complete the whole initial settings.

NOTE:

Some applications and functions needed to connect to the Internet such as location-based services and the automatic synchronization of your online accounts may incur the fees of the connection from your service provider. You may enable or disable the Internet later.

1.8 Using Headset

For hands-free conversation or listening to music, plug a headset into the headset jack.

NOTE:

- When using a headset, your ability to hear outside sounds may be limited. Do not use the headset if it will endanger you.
- . Do not set the volume to its maximum with a

headset as it may damage your hearing.

The following instructions are only provided with the original headset of the original manufacturer:

Types	Descriptions
Press the button on the headset	When you receive an incoming call, press the button to answer the call. If you are having a call conversation, press the button to mute, and press again to un-mute. In music mode, press the button to play, and press again to pause music. When you are listening to music, press twice quickly, forward to next music.
Press and hold the button on the headset	If you are having a call, press and hold the button to end the call. If there is an incoming call, press and hold the button to end the call. Press and hold the button to launch music player. When you are listening to music, press and hold the button back to Playlist.

1.9 Adjusting the Volume

To adjust the volume of ringtone, media, and alarm

- Tap Application Drawer > APPS > Settings > Sound > Volumes.
- Slide the volume bar to adjust each volume. Do as the following:

- a. Drag the slider towards the left to decrease the volume, or drag the slider towards the right to increase the volume. Tap "OK" to save your settings.
- b. Tap Application Drawer > APPS > Settings > Sound > Silent mode to set the phone to the silent mode.

NOTE:

When the phone is set to the silent mode, all sounds are turned off except media and alarm.

1.10 People

"People" is your phonebook that lets you store names, phone numbers, e-mail addresses and other information.

Adding a Contact

- 1. Tap Application Drawer > APPS > People.
- 2. Tap | tab > | add new contact.
- 3. The new contact screen appears.
- You can select one of accounts to save the contact.
- 5. Tap each field to fill out the contact information.
- 6. Tap "DONE" to save.

NOTE:

To add picture, tap Contact name > menu > edit > picture icon, and then you could choose "Take photo" or "Choose photo from Gallery".

Searching for Contacts

On People Screen, do any of the following to easily search for contacts:

 Tap
 Type the first few letters of the contact name to search. The list is filtered when typing.

 When finish searching, you could tap to go back to the contacts.



Contact groups

If you want to categorize the contacts, please follow the steps as below:

To add Contact groups in local groups

- 1. Tap Application Drawer > APPS > People.
- 2. Tap tab. You can tap or to switch the group of sorts.3. On local groups screen, tap to add a new
- On local groups screen, tap to add a new group. Please follow the on-screen steps to set.
- 4. Tap the group name into the group settings.
- 5. Tap "Add members" to select new members. Tap "Ok" to save your settings.
- 6. Members of the group are displayed below.

To add Contact groups in remote groups

- 1. Tap Application Drawer > APPS > People.
- 2. Tap tab. You can tap or to switch the group of sorts.
- On remote groups screen, tap to add a new group.

- Select an account to add the group (If you have two more accounts).
- 5. Enter the group name.
- Type persons' name to add members. Members of the group are displayed below.
- 7. Tap "DONE" to finish settings.

Manage Accounts

- 1. Tap Application Drawer > APPS > People.
- 2. Tap Menu > Accounts.
- You could turn "Accounts & sync " on . If so, Applications can sync, send, and receive data automatically.

Import / Export Contacts

Import Contacts from SIM card. 1. Tap Application Drawer > APPS > People.

- 2. Tap Menu > Import/Export > Import from SIM card
- 3. You can select SIM1 or SIM2 (If SIM2 card inserted). Then tap "OK".
- You can also select an account to save the import contacts.
- Select contacts you want, or check "All". Then tap "Ok".
- You can view the import situation in the status bar.

Import Contacts from storage

- 1. Tap Application Drawer > APPS > People.
- 2. Tap Menu > Import/Export > Import from storage.
- 3. You can select an account to save the import contacts.
- Select the vCard files. Please follow the steps in the submenu.
- 5. You can view the import situation in the status bar.

Back up Contacts

Export Contacts to SIM card

- 1. Tap Application Drawer > APPS > People.
 2. Tap Menu > Import/Export > Export to SIM
- 2. Tap Menu > Import/Export > Export to SIM card
- You can select SIM1 or SIM2 (If SIM2 card inserted). Then tap "OK".
- 4. Select contacts you want, or check "All". Then tap "Ok".

Export Contacts to storage

- 1. Tap Application Drawer > APPS > People.
- 2. Tap Menu > Import/Export > Export to storage.
- 3. Tap "OK" to confirm.

Favorite Contacts

You can add the most frequently called contacts to the favorite contact list which helps you to find contacts quickly and easily.

Add to Favorites

- 1. Tap Application Drawer > APPS > People.
- On tab, tap the desired contact into the information screen.
- 3. Tap star icon to add to Favorites.
- 4. When you tap tab, you will find the contact in the favorite list

Remove from Favorites

- 1. Tap Application Drawer > APPS > People.
- Tap tab, the favorite contacts are displayed.
- Tap the desired contact into the information screen
- 4. Tap star icon to remove from Favorites.

1.11 The Home Screen

On Home Screen, you can quickly access common features and view notifications of missed

calls, received messages, battery, and the status of the connection.

Default Home Screen: Main functions...



You can slide the Home Screen from the left side to the right side or from the right side to the left side to switch it. The icons located at the bottom of the home page have different functions:

Icons	Descriptions
L (1) (11)	Favorites Tray can keeps your most important shortcuts and folders.
	Tap to launch Application Drawer.

Settings Home Screen: Shortcuts for settings.



Icons	Functions
	Enable/disable Wi-Fi.
*	Enable/disable Bluetooth.
	Enable/disable GPS.
C	Enable/disable Data Synchronization.
	Tap to adjust the brightness.

Multimedia Home Screen: Multimedia settings.



Self-defined Home Screen: You can add the shortcuts and widgets.



How to Navigate

Tap: You can tap the icon on the screen to activate the application.

Press and Hold: Press and hold the icon on the Home Screen to make it movable. Press and hold an icon in the Application Drawer to add it to the Home Screen you want.

Slide: Slide the Home Screen from the left side to the right side or from the right side to the left side to change different pages.

Drag: After pressing and holding the icon on the Home Screen, you can arrange it. Drag it to anywhere you like on the screen or to remove.

Status Icons

The icons of the status bar indicate different types of information. Tap the status bar and scroll down to view notifications or view system information.

Types	Icons	Descriptions
	₽	Mute the call.
	D,	Vibration is on.
Volume	\cap	Wired headset connected.
	Ŋ	Wired microphone headset connected.
	٥	Speaker is on.
Battery		Battery is full.
		Battery is low.
	i	Battery is very low.

	7	Battery is charging.
	1 & * *	No network signal / No SIM card inserted.
	₩1₩2	Maximum signal strength. Fewer bars indicate lower signal strength.
	G/E 3G/H	Shows that your carrier's GPRS/ EDGE/ 3G/ HSDPA network is available.
Network		Data network is in progress.
and Connection	(()	Wi-Fi is connected.
	♦	Wi-Fi is in progress.
	₹	Wi-Fi Network is activated.
	ጽ	Airplane mode.
	J	Call is in progress.
	:	Your call is on hold.
		Portable Wi-Fi hotspot is activated.
	0	Both USB tethering and Portable Wi-Fi hotspot are activated.
	•	GPS is on.

	8	Bluetooth is on.
	Ψ	The device is connected to PC via the USB cable.
),	New text message.
	Σ	New e-mail.
	Σ	New Gmail
Notification	0	Alam.
	F	Event notification.
	کر	Missed call.
	(3)	USB debugging is connected.
	4	General notification.
		FM radio is on.
	▶	Playing a song.
	<u>+</u>	Downloading an application.

Bring up Recent activities

Recent activities provide an efficient way of switching between recently used applications. Switch to an app by touching it.



- 1. Press and hold Home key.
- 2. The Recent activities screen will appear.
- 3. Remove an item by swiping left or right.

Using Widgets

You may add and customize widgets on the Home Screen as you like.

To add widgets

- 1. Tap Application Drawer > WIDGETS.
- Select a widget you want. Then, tap and hold the widget icon to a Home Screen thumbnail where you want to add it.
- 3. Drag the widget icon to move it on the Home Screen

To delete widgets

- Tap and hold the widget icon of Home Screen.
 The icon will enlarge and "Remove" will appear at the top of Home Screen.
- 2. Drag the widget icon to the "Remove" to delete.

Folders

You can also add / delete folders to your Home Screen or Favorites Tray.

To create folders

- Tap and hold an app icon, then drag it over to another app icon to automatically create a folder. You can also drag other apps to add to the folder.
- 2. Tap the folder to open it.
- Tap "Unnamed Folder" to enter the folder's name.

To delete folders

- Tap and hold a folder of Home Screen. The folder will enlarge and "Remove" will appear at the top of Home Screen.
- 2. Drag the folder to the "Remove" to delete.

Setting the wallpaper

Customize the wallpaper of your Home Screen with default wallpapers or with pictures in your phone.



Set wallpaper from Live wallpapers or Wallpapers

- Long press any place on the Home Screens.
 There is a menu that will pop up.
- Tap "Wallpapers" or "Live Wallpapers".
- All system wallpapers are displayed. You can tap to preview it.
- 4. Tap "Set wallpaper" to set up your selection.

Set wallpaper from Pictures

- 1. Long press anywhere on the Home Screens.
 There is a menu that will pop up.
- 2. Tap "Gallery". You can view pictures from the files
- 3. Tap to select a picture you want to use.
- Iap to select a picture you want to use.
 Use your finger to select the crop area.
- 5. Tap "CROP" and the cropped image will be your wallpaper on the Home Screen.



2. Phone Functions & Input

Phone Functions

Tap Application Drawer > APPS > Phone.

2.1 Voice Calls

Making a call

To make a call from the Phone screen

- 1. Go to the Phone screen.
- 2. Use the keypad to input phone number.
- 3. Tap 📞
- If SIM2 inserted, there is a menu will pop up. You may select "SIM1" or "SIM2" to make a phone call.



NOTE:

Tap

to delete a number. Tap and hold

to erase entire numbers.

Tap and hold

■

To make a call from Contacts

- 1. Tap Application Drawer > APPS > Phone.
- 2. Tap
- 3. Tap a contact you want to make a phone call.
- If SIM2 inserted, there is a menu will pop up. You may select "SIM1" or "SIM2" to make a phone call.

To make emergency calls

You have to unlock your device before making an emergency call.

Enter the international emergency number 112, and tap to dial.

To make international calls

- 1. Go to the Phone screen.
- 2. Tap and hold 0 until the "+" is displayed which is international prefix code.
- Enter the country code, area code, and phone number.
- If SIM2 inserted, there is a menu will pop up. You may select "SIM1" or "SIM2" to make a phone call.

Answering a call

When there is an incoming call:

- The phone will ring if the ring volume is turned on
- A notification message will appear on the screen.

To accept or reject an incoming call

- To accept a call, slide to Talk icon on the screen.
- To reject a call, slide to End icon on the screen.



Quick response an incoming call

When there is an incoming call, you can quick response with message. To answer a call, slide to Messaging icon on the screen.

To put a call on hold

If you are having a call conversation, you can tap to put the call on hold.

To switch between calls

If you are having a call conversation, and there is another incoming call, slide the Talk icon to put the first call on hold and answer the second call.

Tap **2** to switch between calls.

To set up conference calls

- When you are already having a call conversation, tap to enter another phone number.
- 2. When someone answer your phone call, tap Merge calls to set up the conference call.

If you are having a call conversation, and there is another incoming call, you can tap to set up the conference calls also

NOTE:

Conference call is a network service. Please check with your network carrier for this function.

To manage other voice call features When you are having a call conversation

- Tap to activate speakerphone, or tap again to cancel it.
- Tap to mute microphone, or tap again to un-mute it.

Ending a call

Tap End icon to end a call.

2.2 Using On-Screen Keyboard

On-screen keyboard appears in portrait mode when an application requires text input, such as messaging and writing e-mails. The keyboard input method is activated by the default settings.

Using on-screen keyboard

- · Use the keys on the on-screen keyboard.
- · Tap the keys to enter the characters.

Setting the Input Method

Your phone supports several text input methods, and you could select which one you prefer.

- Tap Application Drawer > APPS > Settings > Language & input.
- Tap "Default" .There is a pop-up window will show
- 3. Select an input method you want.





Basic input settings

Tap Application Drawer > APPS > Settings > Language & input.

- Language settings:
 - Select language
 - Personal dictionary
- 2. Keyboard & input settings:
 - Android keyboard
 - TouchPal keyboard
 - Google voice typing
- Speech settings:
 - Voice Search
 - · Text-to-speech output
- 4. Mouse/Trackpad
- Pointer speed

Personal dictionary

On the personal dictionary screen, tap to add the self-defined words in the personal dictionary. When you compose, you can use them. Tap the self-defined word in the personal dictionary to edit and tap X to delete.

TouchPal Input Method



General settings

· Keypress sound:

You can adjust keypress sound here.

- Keypress vibration:
- You can adjust keypress vibration here. · Resize keyboard height:
- You could adjust keyboard height here.
- Keypress popup: Enable or disable popup effect for keypress.
- · Alternative symbols:
 - Show alternative symbol on buttons. You could slide-down or long-press the keyboard to input these symbols.
- · Skin:

Customize your own skin.

Kevboard lavout:

Set portrait or landscape layout and some other functions.

Smart input:

Keyboard intelligence for western languages. Languages

Set up Multilanguage keyboard.



Dictionary management:

You can choose backup or restore your dictionary.

Help & About

Check update, see what recommended application in the market, or about the version.

Android keyboard

· Input languages:

You can change input language.

· Auto-capitalization:

The first letter of sentences to be capitalized.

Vibrate on keypress:

Phone vibrates when user presses any key on the on-screen keyboard.

Sound on keypress:

Phone sounds when user presses any key on the on-screen keyboard.

Popup on keypress:

Checking this option will enable the letters to popup when the user presses them on the keyboard.

· Show settings key:

Automatic/Always show/Always hide.

Voice Input key:

Voice input on main keyboard, on symbols keyboard, and off.

Add-on dictionaries:

You can install Multilanguage dictionaries.

Auto correction:

Spacebar and punctuation automatically correct mistyped words.

Show correction suggestions:

Display suggested words while typing.

 Advanced settings: Options for expert users.

Using TouchPal Input Method



Icons	Functions
Ö.	Tap to activate settings.
	Tap to copy, cut or paste words.
9	Tap to activate voice input.
*	Tap to active Capital letter mode.
×	Tap to delete words.
EN	Switch different language inputs and methods.
12#	Tap to activate the symbols and numerical keyboard.
Next	Tap to move to the next text zone.

Using Android keyboard

• To toggle between upper and lower case letter display, tap



• To display the numerical and symbols keyboard,





3. Email & Messaging

Use Messaging to access text and MMS messages. Use Email to send and receive e-mail messages via your Internet e-mail accounts.

3.1 Creating and sending a text message

Your phone offers several ways to create and send a new text message.

From Messaging screen

- 1. Tap Application Drawer > APPS > Messaging.
- Tap to create new message.
- 3. In the "To" field, enter the recipient's phone number or tap to add from your contacts.
- 4. Type your message in the "Type message" field.
- Tap to send your message. You may select SIM1 or SIM2 (If SIM2 inserted).

From People screen

- 1. Tap Application Drawer > APPS > People.
- 2. Tap a contact to display the contact information.
- 3. Tap the Text Icon =.
- 4. Compose your message.
- Tap to send your message. You may select SIM1 or SIM2 (If SIM2 inserted).

From Phone screen

- 1. Tap Application Drawer > APPS > Phone.
- 2. Tap tab to view all call history.
- 3. Tap a call contact from the call log.
- 4. Tap El Icon.
- 5. Compose your message.
- 6. Tap > to send your message. You may select

SIM1 or SIM2 (If SIM2 inserted).

NOTE:

If you exit Messaging before sending, unsent message will be saved as a draft automatically.

Receiving and Managing Messages

When you send and receive messages from a contact, these messages are grouped as a message thread. A message thread looks like an exchanged conversation.

To reply to a text message

- Tap Application Drawer > APPS > Messaging.
- 2. Tap a contact sends message to you.
- 3. Tap "Type message" and enter your message.
- Tap ➤ to send your message.

To forward a text message

- 1. Tap Application Drawer > APPS > Messaging.
- Tap the contact sends message to you to view a message thread.
- 3. Tap and hold a message to display the message options.
- 4. Tap "Forward".
- 5. In the "To" field, and then enter the recipient's phone number.
- Tap ➤ to send your message. You can select SIM1 or SIM2 (If SIM2 inserted).

To delete all messages

- 1. Tap Application Drawer > APPS > Messaging.
- 2. Tap Menu > Delete all threads.
- 3. Tap "Delete" to delete all messages in the



message box.

To delete a message thread

- 1. Tap Application Drawer > APPS > Messaging.
- Tap and hold a message thread you want to delete.
- 3. Tap 📋 to delete the message thread.

To delete a message within a thread

- 1. Tap Application Drawer > APPS > Messaging.
- 2. Tap the contact sends message to you.
- 3. Tap and hold the message you want to delete.
- 4. Tap "Delete" to delete the message.

3.2 Multimedia Message

A Multimedia message or MMS can contain letters, an image, an audio, or a video file.

Creating and sending an MMS message

Your phone offers several ways to create and send a MMS message.

From Messaging screen

- 1. Tap Application Drawer > APPS > Messaging.
- Tap I new message.
- In the "To" field, and enter the recipient's phone number.
- 4. Tap to attach pictures, capture picture, video, capture video, audio, record audio, or slideshow file. The message converts to a MMS message automatically.
- Tap "Type message", and then, enter your message with the on-screen keyboard.
- Tap to send your message.

From People screen

- 1. Tap Application Drawer > APPS > People.
- 2. Tap a contact.

- Tap the Text Icon . The message window is displayed.
- In the "To" field, and enter the recipient's phone number.
- Tap to attach pictures, capture picture, video, capture video, audio, record audio, or slideshow file. The message converts to a MMS message automatically.
- Tap "Type message", and then, enter your message with the on-screen keyboard.
- 7. Tap > to send your message.

From Phone screen

- 1. Tap Application Drawer > APPS > Phone.
- 2. Tap 🛈 tab.
- Tap a call in the list of the tab.
- Tap icon.
 In the "To" field
- In the "To" field, and enter the recipient's phone number.
- 6. Tap to attach pictures, capture picture, video, capture video, audio, record audio, or slideshow file. The message converts to a MMS message automatically.
- Tap "Type message", and then, enter your message with the on-screen keyboard.
- 8. Tap to send your message.

3.3 Voice Message

Your phone can send Voice message.

To create a voice message

- 1. Tap Application Drawer > APPS > Messaging.
- Tap to create a new message.
- In the "To" field, and enter the recipient's phone number.
- 4. Tap > Record audio.



- Tap to record an audio file.
- 6. Tap to stop recording.7. Tap to listen to your recording.
- Iap to listen to your recording.
 Tap "Done" to proceed, or tap "Discard" to return
- Tap "Done" to proceed, or tap "Discard" to return to the compose message screen.
- Tap "Play" to listen to your recording again, Tap "Replace" to replace the file, or tap "Remove" to delete your recording from the MMS message.
- To insert text, tap "Type message", and then enter your message with the on-screen keyboard.
- 11. Tap > to send your message.

3.4 Email Accounts

All your received email messages are delivered to your phone.

Setting up an Internet e-mail account

- Tap Application Drawer > APPS > Email.
- 2. Enter your e-mail address and Password. Tap "Next".
- Select the e-mail account of types.
- The phone will retrieve the e-mail settings automatically.
 - If the e-mail settings are pre-configured, the e-mail setup wizard displays a successful message.
 - If the e-mail settings are not found, manual setup is in process automatically. You can follow the instructions to complete the settings.
- Enter Account name and then, tap "Next" to finish the settings.

NOTE:

The Account name is the name shown on the Fmail screen.

To open Email

Tap Application Drawer > APPS > Email to open your e-mail.

To add the second e-mail account

- 1. Tap Application Drawer > APPS > Email.
- 2. Tap Menu > Settings > ADD ACCOUNT.
- 3. Please follow the "Setting up an Internet e-mail account" steps to finish the settings

To delete an e-mail account

- 1. Tap Application Drawer > APPS > Email.
- 2. Tap Menu > Settings.
- Tap one of your accounts (If you have two more e-mail accounts).
- Tap "Remove account".
- 5. Tap "OK" to confirm.

Customizing Account settings

You can configure the account settings of your e-mail accounts such as Account name, Email check frequency, and Default account, etc.

To set up your name and account name

- 1. Tap Application Drawer > APPS > Email.
- 2. Tap Menu > Settings.
- Tap one of your accounts (If you have two more e-mail accounts).
- 4. Tap "Account name" or "Your name" to change.
- 5. Tap "OK" to confirm.

To set up the e-mail check frequency

- 1. Tap Application Drawer > APPS > Email.
- Tap Menu > Settings.
- Tap one of your accounts (If you have two more e-mail accounts).
- Tap "Inbox check frequency". You can set the phone to check for new e-mail Automatic, every 5 minutes, every 10 minutes, every 15 minutes, every 30 minutes, and every hour. You can also



check Never.

To set up default account

- 1. Tap Application Drawer > APPS > Email.
- 2. Tap Menu > Settings.
- Tap one of your accounts. (If you have two more e-mail accounts)
- Check "Default account" to send e-mail from this account by the default settings.

To select an account

- Tap Application Drawer > APPS > Email to open your e-mail.
- Tap Account name spinner to view all e-mail accounts.
- 3. Tap a e-mail account you want to access.



To configure Email settings

On Email screen, Tap Menu > Settings > General to adjust the settings of your e-mail application.

3.5 Using E-mail

Composing and sending an E-mail

- Tap Application Drawer > APPS > Email, and then, tap Account name spinner to select an account.
- 2. Tap 🖳
- In the "To" field, enter the recipient's e-mail address or tap to add from your contacts.
 Enter the Subject.
- 5. Compose your e-mail.
- 6. Tap to send your e-mail.

Sending an E-mail from People screen

You can send an e-mail to a contact with an e-mail address stored in People.

- 1. Tap Application Drawer > APPS > People.
- 2. Tap a contact's name.
- 3. Tap the contact's Email . Tap "Email" in the submenu.
- 4. Enter the Subject and compose your e-mail.
- 5. Tap to send your e-mail.

Adding attachments to an e-mail message

Before sending your message, tap Menu > Attach file, and then, choose an attachment you want to attach.

Receiving e-mails

E-mails are received in your Inbox automatically when your phone connects to wireless networks.

Reading e-mails

The Inbox displays the e-mail headers. When you open the e-mail, it shows the message of text, unless the attachments. Please download the e-mail attachments to view.



To reply or forward an e-mail 1. Open an e-mail.

- 2. Do any of the following:
 - Reply: Tap to reply the e-mail.
 - Reply all: Tap == > Reply all.
 - Forward: Tap 📘 > Forward.
- 3. Then enter the recipient in the "To" field.
- 4. Compose your message.
- Tap > to send your e-mail.

Managing E-mail folders To delete an e-mail

- 1. Tap Application Drawer > APPS > Email.
- 2. In your mailbox screen, you can view the e-mails.
- 3. Check the e-mails, and then, tap to delete the e-mail.



4. Using the Internet

4.1 Connecting to the Internet

Your phone connects to the Internet via:

- Wi-Fi
- GPRS / EDGE / 3G / 3.5G

NOTE:

If you connect to the Internet, you may be charged. If you want to stop the connection, you need to tap Application Drawer > APPS > Settings > More > Mobile networks > to unmark Data enabled.

Wi-Fi

Your device can connect to the detected network through Wi-Fi.

- Tap Application Drawer > APPS > Settings > Wi-Fi.
- 2. Switch to turn "Wi-Fi" on or off.

To connect to a Wi-Fi network

- Tap "Wi-Fi", check Wi-Fi function and turn it on. Begin to search the Wi-Fi networks.
- Detected networks are displayed below. Tap a network connection, and then, tap "Connect".
- If you select an open network, the connection is established automatically.
- To connect a secured connection, you will be prompted for the password. Enter the password, and then, tap "Connect". When Wi-Fi is connected, the connection icon is displayed on the status bar.

To add Wi-Fi network

Tap Application Drawer > APPS > Settings > Wi-Fi.

- 2. Tap "Wi-Fi".
- In Wi-Fi screen, tap "ADD NETWORK". A new window is pop-up.
- Follow the on-screen instructions and enter the necessary information, and then, tap "Save" to store settings.



To configure Wi-Fi settings

- 1. Tap Application Drawer > Settings > Wi-Fi.
- 2. Tap "Wi-Fi".
- Tap Menu > Advanced to check the Wi-Fi settings.

Tethering & portable hotspot

Share your phone's mobile data connection via USB, Bluetooth, or as a portable Wi-Fi hotspot.

- Tap Application Drawer > APPS > Settings > More > Tethering & portable hotspot.
- 2. You can turn on/off USB tethering, Portable

4 Using the Internet

Wi-Fi hotspot, Bluetooth tethering and configure the portable Wi-Fi hotspot settings.

VPN settings

Set up & manage Virtual Private Networks (VPNs.)

- Tap Application Drawer > APPS > Settings > More > VPN.
- You must set a lock screen PIN or password first. Please select one way to lock screen.
- Tap "Add VPN network" to add VPNs.
- 4. Tap "Save" to finish the settings.

To start a data connection

If you set up multiple data connections, select the connection you want to use.

- Tap Application Drawer >APPS > Settings > More > Mobile networks.
- Check "Data enabled" to enable data access over Mobile network.
- If you would like to use network when roaming, please check "Data roaming".

4.2 Bluetooth modes

Bluetooth on your phone operates in three different modes:

- On: Bluetooth is turned on. Your phone detects other Bluetooth devices, but your phone is not visible to others.
- Discoverable: Bluetooth is turned on, but your phone is not visible to other Bluetooth devices.
- Off: Bluetooth is turned off.

To turn Bluetooth on or off

- Tap Application Drawer > APPS > Settings > Bluetooth.
- Switch to turn Bluetooth on.
- 3. Tap "Bluetooth" to view the menu options.
- 4. Make your phone visible to others. Tap the

device's name to make this phone visible to other devices.

Connecting to Bluetooth Devices

A connection to a Bluetooth device is called a partnership. You need to pair and create a partnership with a Bluetooth device to exchange information.

- Tap Application Drawer > APPS > Settings > Bluetooth.
- 2. Tap "Bluetooth" to view the menu options.
- 3. To search for a new device, tap "SEARCH FOR DEVICES".
- 4. Detected Bluetooth devices are displayed below .Tap the device to connect.
- 5. Start to pair, enter the password, and then tap "OK" to finish pairing.

NOTE:

- The password enter on your phone must be the same one be entered on the device which you want to pair with. The password is required at the first time, once a partnership has been created, the password will no longer require again.
- 2. If you want to view the received files, you can tap Menu > Show received files.



5. Multimedia Applications

5.1 Photos and Videos

Your phone is equipped with a 5.0 megapixels camera to take photos and videos.

Taking a photo



Icon	Function
	Displays the last image. Tap to go to Review Screen. You need to insert your SD card first.
Õ	Indicates capture mode. Tap to switch between video and camera mode.

•	Tap to take a photo.
럌	Tap to configure camera settings.
₽	Display the flash mode.
-O +	Tap to zoom the image in or out.

- Tap Application Drawer > APPS > Camera. The screen switches to landscape view automatically.
- 2. Tap to take a shot.

Recording Video



5 Multimedia Applications

lcon	Function
00:06	Indicates the recording time.
re.	Displays the last video. Tap to go to Review Screen. You need to insert your SD card first.
	Indicates capture mode.Swipe to switch between video and camera mode.
•	Press to record video.
丰	Tap to configure Camcorder settings.
-O +	Tap to zoom the image in or out.

- 1. Tap Application Drawer > APPS > Camcorder.
- 2. Aim the phone at the subject.
- 3. Start to record tap
- Stop recording tap

Reviewing a photo

After taking a shot, the function of reviewing a photo:



Icon	Function
👱 🙆 🖇 💁 🙋	Tap to share your picture.
	Tap to Gallery view the picture.

Reviewing a video

After recording video, the function of reviewing video:



Icon	Function
<	Tap to share your video.
	Tap to play or pause the video.
00:01 - 0 00:07	Slide to go forward or backward.

Configuring camera and camcorder settings

On the camera or camcorder screen, tap **s** to view and set up your camera or camcorder.

Mode	Setting	Available options
	Flash mode	Auto, On and Off
	White Balance	Auto, Incandescent, Daylight, and Cloudy
	Exposure	+2 \ +1 \ 0 \ -1 \ -2
Camera	Store location	Turn on/off the Geo-tagging function.
	Picture size	5M Pixels, 3M Pixels, 2M Pixels, 1M Pixels, and VGA.

	Picture quality	Super fine, Fine, Normal, Jpeg 100%, Jpeg 95%, Jpeg 85%, Jpeg75 %, Jpeg 65%, Jpeg 55%.
	Color effect	None, Sepia, Negative.
	Anti Banding	50Hz, 60Hz, and Auto
	Flash mode	On and Off
Camcorder	White Balance	Auto, Incandescent, Daylight, and Cloudy
	Time lapse interval	Off,1s,1.5s,2s,2.5s, 3s,5s, and 10s
	Video quality	FWVGA, WQVGA, CIF, and QCIF.
	Store location	Turn on/off the Geo-tagging function.
	Video Encoder	H263, H264, and MPEG4.
	Audio Encoder	AMRNB and AAC.
	Video duration	30 minutes, 10 minutes and 30 minutes.
	Color effect	None, Negative and Sepia.
·	·	·

5.2 Viewing Photos and Videos

To view photos in the album

- 1. Tap Application Drawer > APPS> Gallery.
- 2. Tap one of picture folders to view the images in thumbnails.
- 3. Tap an image to view.

 Slide the screen from left side to right side or from right side to left side to view all the photos in this album.

To play slideshow

- 1. While viewing an image, tap Menu > Slideshow.
- 2. Tap screen again to stop the slide show.

To set the image as Wallpaper

- 1. While viewing the image, tap Menu > Set picture as > Wallpaper.
- 2. Drag your finger to select the crop area.
- 3. Tap "CROP" to set the image as the wallpaper.

To save a image to Contact photo

- While viewing the image, tap Menu > Set picture as > Contact photo.
- 2. Choose a contact to add image.
- 3. Drag your finger to select the crop area.
- Tap "CROP" to save the image as the contact photo.

To edit an image

While viewing the image, to edit an image:

- To rotate image, tap Menu > Rotate left or Rotate right.
- To crop, tap Menu > Crop.
 - Drag your finger to select the crop area.
 - Tap "CROP" to save the image.
- To add effects, tap Menu > Edit.
 - 1. Tap an effect to apply to the image.
 - 2. Tap "Save" to save the image.

To view file properties

- 1. While viewing the image, tap Menu > Details.
- 2. The file information is displayed.
- 3. Tap "Close" to return to the image.

Play video from the video file

1. Tap Application Drawer > APPS > Gallery >

- select a video file
- The videos will be displayed, and then, tap to play.

Play video from Videos

 
- 1. Tap Application Drawer > APPS > Videos.
- The videos will be displayed, and then, tap one to play.

5.3 Music

You have to copy your audio files to the storage card before playing music, because the music player only plays audio files saved in the storage card of your phone. Tap Application Drawer > APPS > Music.


Music Screen

 Playback screen: Displays the playback area with the playback controls.






  Library screen: Displays folder categories which make searching for media files quickly and easily.



 Now playing screen: Tap is to go to now playing list. Tap and hold the icons on the left of each media file to arrange the sequence of play list.



To play music

- 1. Tap Application Drawer > APPS > Music.
- In Library, tap Songs, and all songs on the phone will be displayed.
- 3. Tap to select a song, and then it will play automatically.

Changing Playback options

While in player screen, tap Menu.

- Tap "Library" to see all playlists.
- Tap "Party shuffle" to play all songs in shuffle order.
- Tap "Add to playlist" to add the song to the preferred playlist.
- Tap "Use as phone ringtone1" or "Use as phone ringtone2" to set up your ringtone.
- Tap More > Delete to delete the song you playing.



To edit your music

While in player screen, you could add effects, tap Menu > More > Sound effects.

- 1. Drag to turn on "Equalizer"
- 2. Tap to select an effect and adjust items.

Creating a Playlist

Add songs to a specific playlist or create a playlist.

1. Tap Application Drawer > APPS > Music.

- In Songs tab, tap and hold a song you want to
- add. Then, tap "Add to playlist" in the pop-up submenu.
- Select the playlist you want. Or, tap "New" to create a new playlist. Input a name for the created playlist, and then, tap "Save". The song will be added to the new playlist automatically.

To remove a music file from the playlist

- 1. Tap Application Drawer > APPS > Music.
- In Songs tab, tap and hold the song you want to delete. Then, tap "Delete" in the pop-up submenu.
- Tap "OK", and then, the song will be deleted from the list.



6. Programs

6.1Pre-installed programs introduction

Icons	Programs	Description
	Best Choice	Allows you to use the phone easily, we recommend and provide you the best software and functionality.
	Browser	Browses the web and download files from the Internet.
II +	Calculator	Performs arithmetic functions, such as addition, subtraction, multiplication, and division, etc.
	Calendar	Creates and tracks schedule or appointments.
	Camcorder	Records videos.
	Camera	Captures still images.
	Clock	Sets up alarm clock.
	Downloads	To view files, and other items you've downloaded from

		mail or other
		sources.
	_	Sends and
Email	receives e-mail	
		messages.
S	File Manager	Manages all files.
		Listen to
90.9	FM Radio	music/news on
		the FM Radio.
		Views and edits
6	Gallery	photos and
		videos.
		Google's
Gmail	Gmail	web-based e-mail
		service.
Google+	You can check	
	friends' updates	
	Googie .	and post updates
		of your own.
		You can share
		your location with
	Latitude	your friends and
		view your friends'
		locations on the
		map.
		Google's mapping
(O)	Maps	service help you
	•	search for the
		places you want.
		Sends and
Messaging	receives all types	
	wessaging	of messages, such as text
		message and



		MMS.
T T	Messenger	Google's instant messaging program.
	Music	Plays and manages the music and audio files on your phone.
	Navigation	Help you get the destination.
Google Scus	News & Weather	Google's news and weather services.
	People	Stores names, numbers, e-mail, and other information.
S	Phone	Makes and receives phone calls.
•	Places	Search places that you want to find near your current location.
()	Play Store	Find applications and fun games which you can download and install on your phone.
8	Search	Google's search service.
	Settings	Configures the phone settings, wireless settings and call settings

		of your phone.
	Sound Recorder	Record a voice note.
3 ,	SIM Toolkit	Directly connects to and use services provided by your mobile service provider.
talk	Talk	Google's instant messaging program.
	Videos	Play videos.
You	YouTube	It is online video streaming service that allows you to view, search, and upload videos.

6.2 Browser

Open the Browser to view web pages.

- 1. Tap Application Drawer > APPS > Browser.
- An address bar appears on screen at the upper side, and you can type the URL there.
- You can open several web pages at the same time. Tap to view all of web pages that you are opening.
 - Tap to open a new web page.
 - Tap to close a web page.









To set the Home page

- While viewing a web page, tap Menu > Settings
 General > Set homepage.
- 2. Tap "Other" to enter the URL of the page that you want to set as your home page.
- 3. Tap "OK" to save your settings.

To add the Bookmarks

- While viewing a web page, tap Menu > Save to bookmarks.
- Edit the bookmark label and other information if needed.
- 3. Tap "Add to" to save the bookmark to Home screen. Bookmarks, or Other Folder.
- 4. Tap "OK" to save your settings.

Managing Bookmarks

 While viewing a web page, tap Menu > Bookmarks. You can view bookmarks, saved pages, and the viewing history.

Managing a Web Page

The following table lists the Menu options. Depending on the function, some options may be unavailable. While viewing a web page, tap Menu:

Homepage	Tap to go back homepage.
Refresh	Tap to refresh web page.
Forward	Forward to the next webpage.
Bookmarks	Tap to select from the list of the saved favorite web pages to visit.
Save to bookmarks	Add the web page to Bookmarks.
Share page	Tap to share the web page.
Find on page	Tap to find the text on the web page.
Save for offline reading	Tap to save the web page to view in offline mode.
History	Tap to view the history.
Exit	Tap to close the Browser program.
Settings	Tap to set up some functions.
General	Set homepage: Enters the URL and sets as your home page. Form auto-fill: Fill out web forms with a single touch. Auto-fill text: Set up text to auto-fill in web forms.
Privacy & security	Tap to configure privacy

Accessibility	settings:	Advanced

	 Force enable zoom:
	Override a website's
	request to control
	zoom behavior.
	Text size: Adjusts the
	text size.
	Inverted screen
	rendering: Black
	become white and
	vice versa.
	Set search engine:
	Select a search
	engine.
	Open in background:
	Open new tabs
	behind the current
	tab.
	 Enable JavaScript:
	Enables/disables
	JavaScript on web
	page.
	 Enable plug-ins:
	Always on, On
	demand, and Off.
Advanced	Website settings:
,	Advanced settings for
	individual websites.
	 Default zoom: Set up
	zooming functions.
	 Open pages in
	overview: Show
	overview of newly-
	opened pages.
	Auto-fit pages:
	Enable/disable the
	webpage to fit the
	screen.
	Block pop-ups:
	Blocks the pop-up
	windows when

	browsing web page. Text encoding: Sets up text encoding. Reset to default: Restore default settings.
Bandwidth management	Search result preloading: Allow browser to preload high confidence search results in the background. Load images: Display images on web pages.
Labs	Quick controls: Slide thumb from the left or right edge to open quick controls and hide app and URL bars. Fullscreen: Use fullscreen mode to hide the status bar. Slide Tab Transitions: Swipe from the edge to reveal the next/previous tab in the list.

6.3 Calculator

With Calculator, you can perform basic arithmetic functions on your phone.

- 1. Tap Application Drawer > APPS > Calculator.
- In Calculator screen, tap "Menu" to select the advanced panel.

6.4 Calendar

Calendar helps you schedule and sound alarms for appointments, meetings, and events.

- 1. Tap Application Drawer > APPS > Calendar.
- If you do not log in your Google Account, tap "NEW" to create an account, or tap "Existing" to sign in the Google account. Please follow the on-screen instruction to log in.
- Tap Calendar spinner > Day, Week, Month, or Agenda to change the displays of your events.
- 4. Tap ito go back to today's events.
- 5. Tap Menu > Settings to check more settings.



To view a event

- 1. Tap Application Drawer > APPS > Calendar.
- Tap Calendar spinner > Agenda to display the events

To add and schedule an event

1. Tap Application Drawer > APPS > Calendar.

- 2. Tap Menu > New event.
- Enter the details of the event.
- Select the dates in the fields of "From" and "To". For an all-day event, check "ALL DAY".
- 5. To set up the "repetition", select one of the options from the list.
- 6. To set up a reminder, select the time from the
- When finished, tap "DONE" to return to the calendar.

NOTE:

The added and scheduled events will be showed in the status bar.

6.5 Gmail

Gmail is Google's web-based email service. Gmail can be configured when you set up your phone for the first time. Depending on your settings of the synchronization, Gmail on your phone may be synchronized with your Gmail account on the web automatically.

- 1. Tap Application Drawer > APPS > Gmail.
- If you do not log in your Google Account, tap "NEW" to create an account, or tap "Existing" to sign in the Google account. Please follow the on-screen instruction to log in.
- Once logged in, you can begin reading and sending emails from your Gmail account.

6.6 Maps

Google's mapping service help you search for the places you want.

NOTE:

If you connect to the Internet and turn on the GPS, you may be charged.

To open Map

- 1. Tap Application Drawer > APPS > Maps.
- 2. Do any of the following:
- My location: Tap to go back to my location.
- Search maps: Tap to search for a place you want. You need type in a keyword to begin to search.
- To get the direction: Tap Input your start point and your destination, and then, Maps will direct you to attend the destination. You can select Car, Bus, or Walk mode.
- Find place: Tap to find restaurants, cafes, bars, attractions.
- Check layers: Tap , and then, you can select different layers and functions.

Tap Menu to set more options as below:

- To clear the map: Tap Menu > Clear Map.
- To view terms, privacy, and notices: Tap Menu
 Settings > Terms, Privacy & Notices.
- To view information about Maps: Tap Menu > Settings > About.



6.7 Latitude

You can share your location with your friends and view your friends' locations on the map.

NOTE:

- 1. If you connect to the Internet and turn on the GPS, you may be charged.
- 2. Google's GPS positioning might occur some inaccuracy, which depends on the surroundings and weather status.

Log in Latitude

- 1. Tap Application Drawer > APPS > Latitude.
- If you do not log in your Google Account, tap "NEW" to create an account, or tap "Existing" to sign in the Google account. Please follow the on-screen instruction to log in.
- Once logged in, tap your account to change your photo, send location to others, check in, view your location history, or edit privacy settings.

Add your friends

- 1. Tap Application Drawer > APPS > Latitude.
- 2. Tap A, and then, follow the instructions.

Chink in your location

- 1. Tap Application Drawer > APPS > Latitude.
- 2. Tap to search nearby places.
- 3. Tap a place to check in your location.

6.8 Places

Use Google maps to search places that you want to find near your current location and the details about the location you select displays on the screen

NOTE:

If you connect to the Internet and turn on the GPS, you may be charged.

- Tap Application Drawer > APPS > Places, or tap Places when using Google maps.
- 2. To search: Tap and enter the places you want, or tap the category in the list.
- 3. The system will display the locations you want, tap one of them to check the detailed information. Tap the star at the upper-right corner of the screen to add it to Maps. Helps you find the place quickly. Tap to go back to Maps. Tap to get the direction. Tap to make a phone call to this place.

6.9 Navigation

Navigation is an Internet-connected GPS navigation system with voice guidance. Helps you get to the destination. Tap Application Drawer > APPS > Navigation.

NOTE:

- If you connect to the Internet and turn on the GPS, you may be charged.
- 2. In some locations and regions, Navigation may not be available.

6.10 Google Search

Search for the information in the Internet and on the phone. Tap Application Drawer > APPS > Search. You can also see the search bar on the Home screen

Add the searchable items in your device

- 1. Tap Application Drawer > APPS > Search.
- Tap Menu > Settings > Searchable items. Choose what to search on the phone.

6.11 Talk

Talk is Google's instant messaging program.

To sign in Talk

- 1. Tap Application Drawer > APPS > Talk.
- If you do not log in your Google Account, tap "NEW" to create an account, or tap "Existing" to sign in the Google account. Please follow the on-screen instruction to log in.
- 3. Once logged in, you can begin to use Talk and do any of the following:
- Select one of your accounts.(If you have two more accounts)
- To configure Talk settings: Tap Menu > Settings.
- To view the blocked friends: Tap Menu > Settings > your account > Blocked friends.
- To invite a person to your chat: In the chat screen, tap Menu > Add to chat.
- To end a chat: In the chat screen, tap Menu > End chat.

- To view terms and privacy: Tap Menu > Settings > your account > Terms & privacy.
- To Sign out: Tap Menu > Sign out.

6.12 YouTube

YouTube is an online video streaming service that allows you to view, search, and upload videos.

To Play YouTube

- 1. Tap Application Drawer > APPS > YouTube.
- Videos are grouped into categories, tap "BROWSE" tab. Tap a category to watch the available videos.
- 3. Tap a video to play.

To upload your video

- 1. Tap Application Drawer > APPS > YouTube.
- Tap "ACCOUNT" tab, and then sign in your account.
- 3. Tap 1 to choose a video to upload.

6.13 Play Store

Play Store allows you to find and download applications and fun games to your phone.

- 1. Tap Application Drawer > APPS > Play Store.
- If you do not log in your Google Account, tap "NEW" to create an account, or tap "Existing" to sign in the Google account. Please follow the on-screen instruction to log in.
- Once logged in, you can search and download programs from the market. Slide the screen to switch the pages of play store.
- You can also tap Menu > My apps to view the programs you have downloaded.

6.14 News and Weather

News and Weather will show the weather and



news of your city automatically.

- Tap Application Drawer > APPS > News & Weather. Slide the screen to switch between the pages of weather and news.
- Tap Menu > Refresh to update the information.
- Tap Menu > Settings. You can adjust the settings of the weather and news.

NOTE:

If you connect to the Internet, you may be charged.



6.15 Best Choice

For easy to use, we recommend you the best software and functionality. With this function, you can find the web links to the services you need easily.

- 1. Tap Application Drawer > APPS > Best Choice.
- Tap the desired function, and then, download it online.

6.16 FM Radio

You can listen to music/news on the FM Radio. Before use, please insert the headset.

- Tap Application Drawer > APPS > FM Radio.
- Tap to switch voice source between your headset and speaker.
- 3. Tap to save to the new station.
- 4. Slide to search the FM stations tap or to go to the available station
- 5. Tap to close FM Radio program.



6.17 Sound Recorder

To Record a voice note

- Tap Application Drawer > APPS > Sound Recorder.
- 2. In the recording screen, tap \square to record a

voice note. Tap	to stop the recording. Tap
to play the rec	ording.

Tap "OK" to save or tap "Discard" to exit.

To play a voice note

After recording, the file will be stored in the memory card. Please use Music to play it.

1. Tap Application Drawer > APPS > Music >

- Tap Application Drawer > APPS > Music > Playlists > My recordings.
- Displays the list of the voice note, and then, tap the voice note you want, and then play it.

6.18 File Manager

File manager helps you manage the files in your phone and in your SD card.

- Tap Application Drawer > APPS > File Manager.
- Tap to arrange your folder.
- 3. Tap the folder you want to browse.

6.19 Downloads

Files and other items you downloaded in Email or Browser are stored on your SD card. You can view, reopen or delete what you've downloaded.

- 1. Tap Application Drawer > APPS > Downloads.
- 2. Tap "Sort by size" or "Sort by time".

6.20 Google+

You can check your friends' updates, post updates of your own and chat with your friends in Google+. Tap Application Drawer > APPS > Google+.

- Stream: To check friends' updates and share your messages, locations, pictures with your friends.
- Photo: To view pictures from your circles and upload pictures from your phone.

- Circles: To add new friends and create new circles.
- Messenger: to send messages for your friends.
- Profile: To view your personal information, posts and photos.

6.21 Screenshots

You could use this function to capture any screen from the device. Please press and hold Volume Key down and Power Key at the same time. The screenshots will be saved in Issaedraf Pictures/screenshots and you may view screenshots in Gallery.



7. Managing Your Phone

7.1 Phone SettingsTap Application Drawer > APPS > Settings to view and adjust the settings of your phone.

Wireless & networks settings

Application	Description
Wi-Fi	Enable/disable Wi-Fi. And set up and manage wireless access points.
Bluetooth	Enable/disable Bluetooth. And manage connections, set up the name of the device and the discoverability of the device.
Data usage	Enable/disable mobile network data. Measure mobile network and Wi-Fi data by your phone and display on chart.
More:	
Airplane mode	Enable/disable all wireless connections.
VPN	Set up & manage Virtual Private Networks (VPNs).
Tethering & potable hotspot	Share your phone's mobile data connection via USB or as portable Wi-Fi hotspot.
Wi-Fi direct	Enable/disable Wi-Fi direct
Wi-Fi direct settings	Set up peer-to-peer connectivity.
Mobile networks	Set options for roaming,

networks, APNs.	

г,	/1	^	

DEVICE			
Application	Description		
Dual SIM Settings:			
Configure dual SIM	Set SIM name, turn on/off SIM card, mobile network setting and call settings,etc.		
Preferred SIM settings	Choose which SIM card uses for Voice/UUSD/MMI, data call, SMS. And set up count down time, preferred callback.		
Sound:			
Volumes	Set up the volume of ringtone, media, and alarm.		
Silent mode	Silence all sounds except media & alarms.		
Phone ringtone	Set up your default ringtone (SIM1 and SIM2) of incoming calls.		
Default notification	Set up your default ringtone of notifications.		
Vibrate on ring	Set up the vibrate mode on ring.		
System	Check to turn on/off dial pad touch tones, touch sounds, screen lock sound, and		

7 Managing Your Phone

	vibrate on touch.	
Display:		
Brightness	Adjust the brightness of the screen.	
Wallpaper	Set up the wallpaper from gallery, live wallpaper, and wallpapers.	
Auto-rotate screen	Enable/disable the screen direction automatically.	
Sleep	Set up the screen shut down when your phone is inactivity.	
Font size	Select the font size from the list.	
Storage	View the storage usage of phone.	
Battery	View the battery usage of phone.	
Apps:		
Manage apps	Manage and remove the installed applications.	
Preferred install location	Change the preferred installation location for new apps.	

PERSONAL

Application	Description
Account & sync	Allow/disallow applications to sync data automatically. And add new accounts.
Location services:	
Google's location service	Let apps use data from sources such as

	Wi-Fi and mobile
	networks to determine
	your approximate
	location.
GPS satellites	Let apps use GPS to
	pinpoint your location.
	Let Google use your
Location & Google	location to improve
search	search results and
	other services.
Security:	
l	Lock screen with a
Screen lock	slide, pattern, PIN, or
	password.
Owner info	Type text to display on
	the lock screen.
Set up SIM/RUIM	Lock SIM card and
card lock	change the PIN of
	your SIM card.
Make passwords	Enable/disable to
visible	show the password as
	you type.
Device	View or deactivate
administrators	device administrators.
Unknown sources	Allow installation of
	non-Market apps.
Trusted credentials	Display trusted CA
	certificates.
Install from SD card	Install certificates form
	SD card.
Clear credentials	Remove all
	certificates.
Language & input:	
language	Select a language for
	your phone.
	Allow/disallow text to
Spelling correction	correct spelling
	automatically.

7 Managing Your Phone

Personal dictionary	You can add, edit, and delete the self-defined words.
Default	Select an input method.
Android keyboard	Settings for Android keyboard.
Google voice typing	Settings for Google voice typing.
TouchPal keyboard	Settings for TouchPal keyboard.
Voice Search	Set up language, safe search, and black offensive words.
Text-to-speech output	Text-to-speech settings.
Pointer speed	Adjusts the pointer speed.
Backup & reset:	
Back up my data	Back up app data, Wi-Fi passwords, and other settings to Google services.
Backup account	Backing up to debug-only private cache.
Automatic restore	When reinstalling an app, restore backed up settings and data.
Factory data reset	Erases all data on phone.

SYSTEM

Application	Description
Data & time:	
Automatic data & time	Check to use the provided values of the network.

Set date Set up the date for your phone. Set time Set up the time for your phone. Set up the time for your phone. Set up the time for your phone. Set up the time zone for your phone. Set up the time zone for your phone. Set up the clock to 24-hour format. Select date format Accessibility: Connect to PC USB Manager default action settings. To view the accessibility installed application. Large text Adjusts the text size. During a call, pressing Power ends the call instead of turning off the screen. Set up the screen direction automatically. Allow/disallow speak password. Speak passwords Touch & hold delay Install web scripts Install scripts from Google that make their web content more accessible. Developer options: USB debugging Debug mode when USB is connected.	Automatic time zone	Use network-provided
Set time Set time Set up the time for your phone. Set up the time for your phone. Set up the time zone for your phone. Set up the time zone for your phone. Set up the clock to 24-hour format. Select date format Accessibility: Connect to PC USB Manager default action settings. To view the accessibility installed application. Large text Adjusts the text size. During a call, pressing Power ends the call instead of turning off the screen. Set up the screen direction automatically. Allow/disallow speak password. Touch & hold delay Install web scripts Developer options: USB debugging Set up the screen forection automatically. Allow/disallow speak password. Developer options: USB debugging Debug mode when USB is connected.	Automatic time zone	
Set time Set time Select time zone Select time zone Set up the time for your phone. Set up the clock to 24-hour format Select date format Select date format Accessibility: Connect to PC USB Manager default action settings. To view the accessibility installed application. Large text Adjusts the text size. During a call, pressing Power ends the call instead of turning off the screen. Set up the screen direction automatically. Allow/disallow speak password. Touch & hold delay Install web scripts Set up the screen Google that make their web content more accessible. Developer options: USB debugging Debug mode when USB is connected.	Set date	
Set time your phone. Set up the time zone for your phone. Set up the clock to 24-hour format Select date format Accessibility: Connect to PC Use Manager default action settings. To view the accessibility installed application. Large text Adjusts the text size. During a call, pressing Power ends the call instead of turning off the screen. Auto-rotate screen Auto-rotate screen Auto-rotate screen Install web scripts Developer options: USB debugging Set up the clock to 24-hour format. Action settings. To view the accessibility installed application. Adjusts the text size. During a call, pressing Power ends the call instead of turning off the screen. Set up the screen direction automatically. Slect short, medium, and long time. Install scripts from Google that make their web content more accessible. Developer options: USB debugging Debug mode when USB is connected.		
Select time zone Use 24-hour format Select date format Select date format Accessibility: Connect to PC Set up the clock to 24-hour format. Services Serv	Set time	
Select time zone Use 24-hour format Set up the clock to 24-hour format. Select date format Accessibility: Connect to PC USB Manager default action settings. To view the accessibility installed application. Large text Adjusts the text size. During a call, pressing Power ends the call instead of turning off the screen. Set up the screen direction automatically. Allow/disallow speak password. Touch & hold delay Install web scripts Developer options: USB debugging Set up the screen Google that make their web content more accessible. Developer options: USB debugging Debug mode when USB is connected.		
Use 24-hour format Select date format Select date format Accessibility: Connect to PC Services Services Services Power button ends call Auto-rotate screen Auto-rotate screen Install web scripts Developer options: Select date format. Set up the preferred date format. USB Manager default action settings. To view the accessibility installed application. Large text Adjusts the text size. During a call, pressing Power ends the call instead of turning off the screen. Set up the screen direction automatically. Allow/disallow speak password. Select short, medium, and long time. Install scripts from Google that make their web content more accessible. Developer options: USB debugging USB debugging Debug mode when USB is connected.	Select time zone	
Select date format Select date format Accessibility: Connect to PC Services Services Large text Power button ends call Auto-rotate screen Touch & hold delay Install web scripts Developer options: USB Manager default action settings. USB Manager default action settings. To view the accessibility installed application. Adjusts the text size. During a call, pressing Power ends the call instead of turning off the screen. Set up the screen direction automatically. Allow/disallow speak password. Select short, medium, and long time. Install web scripts Developer options: USB debugging USB debugging USB debugging Debug mode when USB is connected.		
Select date format Accessibility: Connect to PC Services Services Large text Auto-rotate screen Auto-rotate screen Install web scripts Install web scripts Developer options: Set up the preferred date format. Set up the preferred date format. Set up the screen direction automatically. Allow/disallow speak password. Install scripts from Google that make their web content more accessible. Debug mode when USB debugging Set up the screen direction automatically. Allow/disallow speak password. Developer options: Debug mode when USB is connected.	Use 24-hour format	
Accessibility: Connect to PC Services Services Large text Power button ends call Auto-rotate screen Auto-rotate screen Touch & hold delay Install web scripts Accessibile, accessible. Accessibility installed application. Adjusts the text size. During a call, pressing Power ends the call instead of turning off the screen. Set up the screen direction automatically. Allow/disallow speak password. Fouch & hold delay Install scripts from Google that make their web content more accessible. Developer options: USB debugging USB debugging USB Manager default action settings. Disable format. Adjust Sendings. During a call, pressing Power ends the call instead of turning off the screen. Set up the screen direction automatically. Allow/disallow speak password. Fouch & hold delay Install scripts from Google that make their web content more accessible. Debug mode when USB is connected.		
Accessibility: Connect to PC Services Services Large text Power button ends call Auto-rotate screen Touch & hold delay Install web scripts Developer options: USB Manager default action settings. USB Manager default action settings. To view the accessibility installed application. Adjusts the text size. During a call, pressing Power ends the call instead of turning off the screen. Set up the screen direction automatically. Allow/disallow speak password. Select short, medium, and long time. Install scripts from Google that make their web content more accessible. Developer options: USB debugging Debug mode when USB is connected.	Select date format	
Connect to PC USB Manager default action settings. To view the accessibility installed application. Large text Adjusts the text size. During a call, pressing Power ends the call instead of turning off the screen. Auto-rotate screen Auto-rotate screen Set up the screen direction automatically. Speak passwords Touch & hold delay Install web scripts Select short, medium, and long time. Install scripts from Google that make their web content more accessible. Developer options: USB debugging Debug mode when USB is connected.	Accessibility:	aato formati
Connect to PC action settings. To view the accessibility installed application. Large text Adjusts the text size. During a call, pressing Power ends the call instead of turning off the screen. Set up the screen direction automatically. Speak passwords Touch & hold delay Install web scripts Developer options: USB debugging To view the x size. During a call, pressing Power ends the call instead of turning off the screen. Set up the screen direction automatically. Allow/disallow speak password. Select short, medium, and long time. Install scripts from Google that make their web content more accessible. Debug mode when USB is connected.	,	USB Manager default
Services accessibility installed application. Large text Adjusts the text size. During a call, pressing Power ends the call instead of turning off the screen. Auto-rotate screen Auto-rotate screen Auto-rotate screen Set up the screen direction automatically. Allow/disallow speak password. Touch & hold delay Install web scripts Select short, medium, and long time. Install scripts from Google that make their web content more accessible. Developer options: USB debugging Debug mode when USB is connected.	Connect to PC	
Services accessibility installed application. Large text Adjusts the text size. During a call, pressing Power ends the call instead of turning off the screen. Auto-rotate screen Auto-rotate screen Auto-rotate screen Set up the screen direction automatically. Allow/disallow speak password. Touch & hold delay Install web scripts Select short, medium, and long time. Install scripts from Google that make their web content more accessible. Developer options: USB debugging Debug mode when USB is connected.		To view the
application. Large text Adjusts the text size. During a call, pressing Power button ends call Power ends the call instead of turning off the screen. Set up the screen direction automatically. Allow/disallow speak password. Touch & hold delay Install web scripts Select short, medium, and long time. Install scripts from Google that make their web content more accessible. Developer options: USB debugging Debug mode when USB is connected.	Services	
Power button ends call During a call, pressing Power ends the call instead of turning off the screen. Auto-rotate screen Set up the screen direction automatically. Speak passwords Allow/disallow speak password. Touch & hold delay Select short, medium, and long time. Install web scripts Google that make their web content more accessible. Developer options: USB debugging Debug mode when USB is connected.		
Power button ends call instead of turning off the screen. Auto-rotate screen Set up the screen direction automatically. Speak passwords Allow/disallow speak password. Touch & hold delay Select short, medium, and long time. Install web scripts Google that make their web content more accessible. Developer options: USB debugging Debug mode when USB is connected.	Large text	Adjusts the text size.
call instead of turning off the screen. Set up the screen direction automatically. Speak passwords Allow/disallow speak password. Touch & hold delay Select short, medium, and long time. Install web scripts Google that make their web content more accessible. Developer options: USB debugging Debug mode when USB is connected.		During a call, pressing
the screen. Set up the screen direction automatically. Speak passwords Touch & hold delay Install web scripts Developer options: USB debugging Set up the screen direction automatically. Allow/disallow speak password. Select short, medium, and long time. Install scripts from Google that make their web content more accessible. Debug mode when USB is connected.	Power button ends	Power ends the call
Auto-rotate screen direction automatically. Speak passwords Allow/disallow speak password. Touch & hold delay Select short, medium, and long time. Install web scripts Google that make their web content more accessible. Developer options: USB debugging Debug mode when USB is connected.	call	instead of turning off
Auto-rotate screen direction automatically. Speak passwords Allow/disallow speak password. Touch & hold delay Select short, medium, and long time. Install scripts from Google that make their web content more accessible. Developer options: USB debugging Debug mode when USB is connected.		
automatically. Speak passwords Touch & hold delay Install web scripts Developer options: USB debugging automatically. Allow/disallow speak password. Select short, medium, and long time. Install scripts from Google that make their web content more accessible. Developer options: USB debugging Debug mode when USB is connected.		
Speak passwords Touch & hold delay Touch & hold delay Select short, medium, and long time. Install web scripts Install web scripts Developer options: USB debugging Allow/disallow speak password. Select short, medium, and long time. Install scripts from Google that make their web content more accessible. Debug mode when USB is connected.	Auto-rotate screen	
password password password password password Select short, medium, and long time. Install web scripts Install scripts from Google that make their web content more accessible. Developer options: Debug mode when USB is connected.		
Touch & hold delay Select short, medium, and long time. Install web scripts Install web scripts Developer options: USB debugging Select short, medium, and long time. Install scripts from Google that make their web content more accessible. Developer options: USB debugging Debug mode when USB is connected.	Speak passwords	
Install web scripts and long time. Install web scripts Google that make their web content more accessible. Developer options: USB debugging Debug mode when USB is connected.		
Install web scripts Google that make their web content more accessible. Developer options: USB debugging Debug mode when USB is connected.	Touch & hold delay	
Install web scripts Google that make their web content more accessible. Developer options: USB debugging Debug mode when USB is connected.	-	
web content more accessible. Developer options: USB debugging Debug mode when USB is connected.		
accessible. Developer options: USB debugging Debug mode when USB is connected.	Install web scripts	web content more
USB debugging Debug mode when USB is connected.		
USB debugging Debug mode when USB is connected.	Developer options:	
USB is connected.		Debug mode when
Development device Display your phone's	USB debugging	
	Development device	Display your phone's

7 Managing Your Phone

ID	device ID.
Stay awake	Screen will never sleep while charging.
Allow mock locations	Allow mock locations.
Desktop backup password	Desktop full backups aren't currently protected.
Strict mode enabled	Flash screen when apps do long operations on main thread.
Pointer location	Screen overlay showing current touch data.
Show touches	Show visual feedback for touches.
Show screen updates	Flash areas of screen when they update.
Show CPU usage	Screen overlay showing current CPU usage.
Force GPU rendering	Use 2D hardware acceleration in applications.
Window animation scale	Set up of windows "inside windows" that come in and out of view.
Transition animation scale	Set up speed of windows come in and out of view such as opening settings.
Don't keep activities	Destroy every activity as soon as the user leaves it.
Background process limit	Set up to Control apps running in the background.

Show all ANRs	Show App not
	responding dialog for
	background apps.
About phone:	
	Update your phone
System update	and display the last
	check time.
Status	Battery status, battery
Status	level, etc.
Logal information	To view the legal
Legal information	information of phone.
Model name	Display your phone of
Wiodel Hairie	model name.
Android version	Display your phone of
Android version	Android version.
Radio version	Display your phone of
Raulo version	radio version.
Kernel version	Display your phone of
Kerner version	kernel version.
Software version	Display your phone of
Software version	software version.

7.2 Managing Basic Settings

Date and Time

You can set up the date and the time on your phone.

To set up the date and time

- Tap Application Drawer > APPS > Settings > Date & time.
- If you check "Automatic data & time", the system will get the information of the current date and time automatically. You can set up the date and the time manually also.
- If you check "Automatic time zone", the system will get the information of time zone automatically. You can tap "Select the time zone" to select a time zone from the list also.



- Tap "Set date". Please adjust the month, the day, and the year. Tap "Set" to save the settings.
 Tap "Set Time". Please adjust the hour and the
- minute. You can switch AM/PM. Tap "Set" to save the settings.
- 6. Check "Use 24-hour format" if you want.
- Tap "Select date format" to select the date format you want.

Setting Alarms

You can set up many alarms on your phone.

To set the alarm

- Tap Application Drawer > APPS > Clock.
- 2. Tap "Set alarm" to set up a new alarm.
- 3. Tap "Add alarm".
- 4. Check "Turn alarm on".
- Tap "Set Time". Please adjust the hour and the minute. You can switch AM/PM. Tap "Set" to save the settings.
- Tap "Repeat" to select a day to sound the alarm. Tap "OK" to save the settings.
- Tap "Ringtone" to set up the preferred ringtone when your alarm sounds. Tap "OK" to save the settings.
- 8. Check "Vibrate" to enable/disable the vibration when the alarm sounds.
- 9. Tap "Label" to enter the description for the alarm.
- 10. Tap "OK" to save the settings of the alarm.

Activate an alarm

Select an alarm, and then, activate it.

To turn off the backlight when the phone is idle

- Tap Application Drawer > APPS > Settings > Display > Sleep.
- Select from the list of screen timeout. Your setting is saved automatically.

To adjust the brightness

- Tap Application Drawer > APPS > Settings > Display > Brightness.
- Tap "Choose Brightness Setting", and then choose "Normal" or "Enhanced".
- Tap "Brightness" or "Enhanced", and then drag the slider of brightness to the left to decrease the brightness, or to the right to increase the brightness. Tap "OK" to finish.

To change the screen orientation

- Tap Application Drawer > APPS > Settings > Display.
- Check "Auto-rotate screen" to adjust the screen automatically.

To display the screen when your device is charging

- Tap Application Drawer > APPS > Settings > Developer options.
- Check "Stay awake" to display the screen when your device is charging.

To change the ringtone of an incoming call

- Tap Application Drawer > APPS > Settings > Sound
- Tap "Phone ringtone" .On "SIM1" or "SIM2" tab (If SIM2 inserted), tap "Phone ringtone".
- 3. Select a ringtone from the list.
- 4. Tap "OK" to finish.

To change ringtones of events

- Tap Application Drawer > APPS > Settings > Sound.
- 2. Tap "Default notification".
- 3. Select a ringtone from the list.
- 4. Tap "OK" to finish.

7.3 Protecting Your Phone

You can protect your phone from unauthorized users



by requiring the PIN or entering a password.

Enable the PIN of the SIM/RUIM card

When the PIN is enabled, you are required to enter the PIN before making a call.

- Tap Application Drawer > APPS > Settings > Security > Set up SIM/RUIM card lock.
- 2. Tap "SIM1" or "SIM2" tab. (If SIM2 inserted).
- Check "Lock SIM card". Input the PIN, and then, tap "OK".

Change the PIN of the SIM/RUIM card

- Tap Application Drawer > APPS > Settings > Security > Set up SIM/RUIM card lock.
- 2. Tap "SIM1" or "SIM2" tab. (If SIM2 inserted).
- 3. Tap "Change SIM PIN". Type the old PIN. Then tap "OK".
- 4. Type the new PIN. Then tap "OK".
- Re-type the new PIN. Then tap "OK" to change the PIN.

Set up Password Protection

- Tap Application Drawer > APPS > Settings > Security > Screen lock > Password.
- Enter your password, and then, tap "Continue". Confirm your password, then, tap "OK".
- If you want to disable screen lock security, please tap Application Drawer > Settings > APPS > Security > Screen lock. Confirm your password, and then, tap "Continue". Tap "None" to disable it.

Set up unlock pattern

You can further secure your data by locking the screen and requiring a screen unlock pattern every time after your phone is turned on or it wakes up from the sleep mode every time (screen is off).

- Tap Application Drawer > APPS > Settings > Security > Screen lock > Pattern.
- Draw the unlock pattern by connecting at least four dots. Then tap "Continue".

- Draw the unlock pattern again, and then, tap "Confirm".
- If you want to disable the function, please tap Application Drawer > APPS > Settings > Security > Screen lock. Confirm the saved pattern, and then. tao "None" to disable it.

7.4 Resetting Your Phone

With Clean Boot, you can reset your phone to its factory defaults. When you reset your phone, the data stored in your phone may be erased.

- Tap Application Drawer > APPS > Settings > Backup & reset.
- Tap Factory data reset > Reset phone > Erase everything to reset the phone.

NOTE:

Before reset your device, please remember to back up all your data and information.

7.5 Specifications

1.5 Specifications	
System Information	
Platform	Android 4.0
Processor	Qualcomm 7225A at 800 MHz
Memory	ROM 1 GB RAM 512 MB
Display	
Size	3.5"
Resolutions	320 x 480 pixels
Size	
Dimensions (L x W x H)	121x62.5x12.5 mm
Weight	127 grams with battery
Power	
Battery Rechargeable	Li-ion pack 1300 mAh
Power Adapter AC	100-240V, 50 / 60Hz,



input	0.3A max.
DC output	5V, 1A
Standby time	Up to 144 hours (It may vary depending on the availability of local networks and the individual usage.)
Talk time	Up to 4.8 hours (It may vary depending on the availability of local networks and the individual usage.)
Radio Band & Standard	
GSM/GPRS/EDGE	850 / 900 / 1800 /1900 MHz
WCDMA/HSDPA	900 / 2100 MHz
Connectivity	
GPS	GPS
Wi-Fi	IEEE 802.11 b/g/n
Bluetooth	Bluetooth 3.0
USB	Micro USB
Audio Jack	3.5 mm stereo audio jack
Digital Camera	
Digital Camera	5.0 Megapixel Color Camera with AF and Video Recording
External Memory	
Memory Card	microSD supports up to 32GB
Temperature	
Operating	-15°C to 55°C
SIM Card Slot	
Dual SIM card slot.	

NOTE:

1. Specifications are subject to change without the prior notice. They may vary in some

- regions also.
- 2. Mobile data interruption, unexpected error in CPU and high power consumption could be caused by in-app AD in Android phone. We suggest you try to remove those apps with AD which had been installed in your device for preventing any abnormal situation happens and saving more power as well.

If this document is modified, please download the latest version on GSmart's official website.

GIGA-BYTE COMMUNICATIONS INC. B2, No. 207, Sec. 3, Pai-Hsin Road, Hsin-Tien Dist., New Taipei City 231, Taiwan +886-2-89132220 www.gigabytecm.com