

# **i601 User Manual**

**Thank you for purchasing the i601 mobile phone**

## **Thank you for purchasing this mobile phone**

Please read all safety precautions and this manual carefully before using your device to ensure safe and proper use.

Content, images and screenshots used in this manual may differ in appearance from the actual product.

No part of this manual may be reproduced, distributed, translated, or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or storing in any information storage and retrieval system, without the prior written permission.

**Copyright © 2013 All rights are reserved**

# Contents

|   |          |
|---|----------|
| <b>1. Getting to know your phone.....</b> | <b>1</b> |
| 1.1 Your Phone.....                       | 1        |
| 1.2 Status icons.....                     | 1        |
| 1.3 Installing SIM card and battery.....  | 1        |
| 1.4 Installing Storage card.....          | 1        |
| 1.5 Battery charging.....                 | 1        |
| 1.6 Power on/ off.....                    | 2        |
| 1.6.1 Power on.....                       | 2        |
| 1.6.2 Power off.....                      | 2        |
| 1.7 Using shortcut keys.....              | 2        |
| <b>2. Using Call Function.....</b>        | <b>3</b> |
| 2.1 Making a call.....                    | 3        |
| 2.2 Answering or rejecting a call.....    | 3        |
| 2.2.1 Answer a call.....                  | 3        |
| 2.2.2 Reject a call.....                  | 3        |
| 2.3 Adjusting call volume.....            | 3        |
| 2.4 Ending a call.....                    | 3        |
| <b>3. Phonebook.....</b>                  | <b>3</b> |
| 3.1 View a contact.....                   | 3        |
| 3.2 Adding a new contact .....            | 3        |
| <b>4. Message.....</b>                    | <b>4</b> |
| 4.1 Write message.....                    | 4        |
| 4.2 Inbox.....                            | 4        |
| 4.3 Outbox.....                           | 4        |
| 4.4 Drafts.....                           | 4        |
| 4.5 Sentbox.....                          | 4        |
| 4.6 Message setting.....                  | 4        |
| 4.6.1 Templates.....                      | 5        |
| 4.6.2 Voice mail server.....              | 5        |

|  |                 |
|--|-----------------|
| 4.6.3 Settings.....                            | 5               |
| 4.7.4 Message capacity.....                    | 6               |
| <b><u>5. Call logs.....</u></b>                | <b><u>6</u></b> |
| 5.1 Dialed calls.....                          | 6               |
| 5.2 Received calls.....                        | 6               |
| 5.3 Missed calls.....                          | 6               |
| 5.4 Rejected calls.....                        | 6               |
| 5.5 Delete all.....                            | 7               |
| 5.6 Call timers.....                           | 7               |
| 5.7 Call cost (need the network support).....  | 7               |
| <b><u>6. Settings.....</u></b>                 | <b><u>7</u></b> |
| 6.1 Call settings.....                         | 7               |
| 6.1.1 Network selection.....                   | 7               |
| 6.1.2 Call divert.....                         | 7               |
| 6.1.3 Call barred.....                         | 7               |
| 6.1.4 Call waiting (Need network support)..... | 8               |
| 6.1.5 Hide ID (Need network support).....      | 8               |
| 6.1.6 Select line.....                         | 8               |
| 6.1.7 Flight mode.....                         | 9               |
| 6.1.8 Others.....                              | 9               |
| 6.2 Phone settings.....                        | 9               |
| 6.2.1 Time & date.....                         | 9               |
| 6.2.2 Select language.....                     | 9               |
| 6.2.4 Auto power on/off.....                   | 10              |
| 6.2.5 Power management .....                   | 10              |
| 6.2.6 Restore factory settings .....           | 10              |
| 6.3 Display settings.....                      | 10              |
| 6.3.1 Wallpaper settings.....                  | 10              |
| 6.3.2 Idle display settings.....               | 10              |
| 6.3.3 Contrast.....                            | 10              |
| 6.3.4 Backlight.....                           | 10              |

|                                     |                  |
|-------------------------------------|------------------|
| 6.3.5 Keypad backlight time.....    | 10               |
| 6.3.6 Animation effect.....         | 11               |
| 6.4 Security settings.....          | 11               |
| 6.4.1 PIN.....                      | 11               |
| 6.4.3 Privacy.....                  | 12               |
| 6.4.4 Auto keypad lock.....         | 12               |
| 6.4.5 Lock screen by end- key ..... | 13               |
| 6.4.6 Power-on password.....        | 13               |
| 6.5 Connection management.....      | 13               |
| 6.5.1 Network account.....          | 13               |
| <b><u>7. Entertainment.....</u></b> | <b><u>13</u></b> |
| 7.1 Camera.....                     | 13               |
| 7.2 Video recorder.....             | 14               |
| 7.3 Images.....                     | 14               |
| 7.4 Audio player.....               | 14               |
| 7.5 Video player.....               | 14               |
| 7.6 Recorder.....                   | 15               |
| 7.7 FM Radio.....                   | 15               |
| <b><u>8. File manager.....</u></b>  | <b><u>16</u></b> |
| <b><u>9. Application.....</u></b>   | <b><u>16</u></b> |
| <b><u>10. Profiles.....</u></b>     | <b><u>16</u></b> |
| 10.1 Normal.....                    | 16               |
| 10.2 Silent.....                    | 16               |
| 10.3 Meeting .....                  | 16               |
| 10.4 Indoor.....                    | 16               |
| 10.5 Outdoor.....                   | 17               |
| 10.6 Earphone.....                  | 17               |
| 10.7 Bluetooth.....                 | 17               |
| <b><u>11. Tools.....</u></b>        | <b><u>17</u></b> |
| 11.1Alarm.....                      | 17               |
| 11.2Calendar.....                   | 17               |

|  |                  |
|--|------------------|
| 11.3 World clock.....  | 17               |
| 11.4 Torch.....  | 17               |
| <b><u>12. WAP.....</u></b>                                       | <b><u>17</u></b> |
| 12.1 Input URL.....  | 17               |
| 12.2 Bookmarks.....  | 18               |
| 12.3 History.....  | 18               |
| 12.4 Offline pages.....  | 18               |
| <b><u>13. Extra.....</u></b>                                     | <b><u>18</u></b> |
| 13.1 Calculator.....   | 18               |
| 13.2 Bluetooth.....  | 18               |
| <b><u>14. Shortcut.....</u></b>                                  | <b><u>19</u></b> |
| <b><u>15. Other Functions.....</u></b>                           | <b><u>19</u></b> |
| <b><u>16. Common Questions.....</u></b>                          | <b><u>19</u></b> |
| <b><u>17. Maintenance Guideline.....</u></b>                     | <b><u>21</u></b> |
| <b><u>18. FCC RF Exposure Information and Statement.....</u></b> | <b><u>21</u></b> |

# 1. Getting to know your phone









## 1.1 Your Phone



| Functions Description      |                     |
|----------------------------|---------------------|
| 1. Left soft key (LSK)     | 7. Keypad           |
| 2. Right soft key (RSK)    | 8. Receiver         |
| 3. Send key (Snd)          | 9. USB/Headset jack |
| 4. End key (End)/Power key | 10. Torch           |
| 5. Navigation key          | 11. Camera          |
| 6. OK key                  | 12. Speaker         |

## 1.2 Status icons

| Icon | Function description  |
|------|---|
|      | Represent current SIM network signal.<br>The more bars, the stronger the signal |

|   |   |
|---|---|
|  | Flight mode   |
|  | Battery status, more bars indicate more battery capacity left |
|  | Unread SMS  |
|  | Clock has been set  |
|  | Profile has been set as Silent Mode                           |
|  | Profile has been set as Indoor Mode                           |
|  | Profile has been set as Outdoor Mode                          |
|  | Profile has been set as Meeting Mode                          |



### **1.3 Installing SIM card and battery**

1. Hold on **【End Key】** for about three seconds to switch off the phone.
2. Remove the battery cover.
3. Remove the battery.
4. Follow the sign for SIM on the phone to install SIM. Please make sure that the golden contacts of the card face into the phone and the notched corner has the same direction with the card slot, then push the other side of the card gently until it fixes itself in the card slot.
5. Replace the battery with its golden contact part facing the set phone battery contact piece, and then replace the battery cover.

### **1.4 Installing Storage card**

1. Hold on **【End Key】** for about three seconds to switch off the phone.
2. Remove the battery cover.
3. Remove the battery.
4. Follow the arrow direction on the T-Card slot cover, open card slot cover, put the T-Card into the slot vertically, and make sure that the gold contacts of the card face upwards, until the card fixes itself in the card slot.
5. Follow the arrow direction on the T-Card slot cover, pull card slot cover to lock the card slot.

### **1.5 Battery charging**

#### **Charged by the travel charger**

1. Install the battery correctly into the phone.

2. Insert the lead of the travel charger to connecting slot of the phone, and then connect the charger to a standard power socket.

When charging is complete, unplug the charger from the standard power socket first, and then disconnect the phone and charger.

## **1.6 Power on/ off**

### **1.6.1 Power on**

Hold on **【End Key】** for three seconds to switch on the phone.

### **1.6.2 Power off**

Hold on **【End Key】** for three seconds to switch off the phone.



**Warning:**

Don't switch the phone on in areas where wireless phone usage is prohibited or where it may cause interference or danger, and also make sure that you haven't activated the function "Auto power on/off".

## **1.7 Using shortcut keys**

Pressing some keys directly from the Home Screen provides direct access to common phone functions.

| Key      | Operation     | Function            |
|----------|---------------|---------------------|
| Call key | press briefly | Enter Call History  |
| 1 Key    | hold on       | Enter voicemail box |

## **2. Using Call Function**

### **2.1 Making a call**

On the Home Screen, input the area code and phone number.

Press Send key to dial.

### **2.2 Answering or rejecting a call**

#### **2.2.1 Answer a call**

When there is an incoming call, you can press **【Call Key】** to answer.

#### **2.2.2 Reject a call**

When there is an incoming call, you can press **【End Key】** to reject it.

### **2.3 Adjusting call volume**

During a call, you can press **【+ Key/- Key】** to adjust the earphone volume.

### **2.4 Ending a call**

Press **【End Key】** to end the call.

## **3. Phonebook**

### **3.1 View a contact**

Enter the contacts, the phone is defaulted to show contact list with all entries. Press **【Left Key/Right Key】** to switch between different groups.

### **3.2 Adding a new contact**

On the Contacts list, select **<Options→New>** to create a new contact.

<sup>1</sup><sub>15750</sub> **Phone:** You can input the contact name, mobile phone, home phone, etc. You can also set special image and ring for the contact entry.

<sup>1</sup><sub>15750</sub> **SIM:** The input record will be saved to SIM, with each name one phone number.

## 4. Message

### 4.1 Write message

In the main menu, select [**Message**→**Write message**] to edit a new SMS directly. After writing an SMS, select <**Send**> to send the message.

### 4.2 Inbox

Store all received SMS.

### 4.3 Outbox

Store all SMS failed to be sent.

### 4.4 Drafts

Save edited SMS haven't sent.

### 4.5 Sentbox

Store all the SMS successfully sent out. If you want the sent messages be saved automatically, please select [**Message**→**Options**], then select [**Settings**→**SMS**→**Save sent messages**→**Save**].

### 4.6 Message setting

On the Home Screen, press [**Send Key**] to enter the main menu, then select [**Message**→**Options**] to enter the message setting menu.

### 4.6.1 Templates

While editing messages, you can directly cite the preset common phrases. Select <Edit> to set the common phrases by yourselves.

### 4.6.2 Voice mail server

This function works like an answering machine, which can transfer a missed call to your personal voice mail, allowing the caller to leave a voice message and notify you by an SMS. Voice Mail is a part of the bundled software provided by network operator, therefore, you need to register to active this function, and manually set the phone. Please contact with your network operator for more details.



Caution:

It's workable to transfer the voice call into the voice mail (The number the call will leave a message) by setting "Divert calls".

### 4.6.3 Settings

$\frac{1}{15750}$

#### SMS

- **SIM msg center:** While sending messages, you must set the service center number provided by network operator. Most SIM cards defaulted contain the service center number. You can also gain this number directly from the network operator.



Caution:

If you modify or delete the service center number, an SMS might not be sent successfully.

- **Message validity period:** Allows you to set the length of time during which your SMS will be stored in the message center. The validity period depends on the network operator.
- **Status report:** Select **[On]**, then the text message center will inform you when you successfully sent a message.
- **Save sent messages:** You can select whether to save the sent message or not.
- **Preferred storage:** You can select to save the SMS to the SIM card or the phone first.
- **SMS Backup:** You can export SMS from phone or import SMS to phone.

#### 4.7.4 Message capacity

You can view memory capacity status for SMS via this function.

### 5. Call logs

Enter the main menu, and then select **[Call logs]** to enter the call list.

#### 5.1 Dialed calls

Display recent calls dialed.

#### 5.2 Received calls

Display recent calls received.

#### 5.3 Missed calls

Display recent calls unpicked up.

#### 5.4 Rejected calls

Display recent calls rejected.

## 5.5 Delete all

Delete all the call entries.

## 5.6 Call timers

Select the desired SIM Card, and then you can view all relevant information about the SIM Card.

## 5.7 Call cost (need the network support)

$\frac{1}{15750}$  **Total cost:** Record total call charges for SIM.

$\frac{1}{15750}$  **Max cost:** You can set the desired upper limit for call costs.

$\frac{1}{15750}$  **Price per unit:** Record the cost rate for SIM.

$\frac{1}{15750}$  **Reset cost:** Reset the total call charges as zero.

# 6. Settings

## 6.1 Call settings

### 6.1.1 Network selection

$\frac{1}{15750}$  **Auto select:** The phone can automatically search and register available networks.

$\frac{1}{15750}$  **Manual select:** Enable this function, the phone will search for the network, and list all searched networks, then you need to choose the one needed to register.

### 6.1.2 Call divert

Based the set diverting conditions, incoming calls will be forwarded into voicemail or other numbers.

### 6.1.3 Call barred

This function helps you to restrict the incoming and outgoing calls.

Select the desired call and press <OK>, then you can select

[**Activated**], [**Off**] or [**Query status**]. Select [**Activated**], the phone will need network support current setting.



Caution :

- 1 · Some network operators forbid the function. For more details, please contact your network service provider.
2. The network operator will provide you the initial network password while you apply for this service.

#### 6.1.4 Call waiting (Need network support)

<sup>1</sup><sub>15750</sub> **Activated**: If you set the function on, the network will alert you that there is an incoming call. You can keep current call and answer another one.

<sup>1</sup><sub>15750</sub> **Off**: Cancel call waiting function, then the new incoming calls won't be answered while you're on the phone already.

<sup>1</sup><sub>15750</sub> **Query status**: Select it to view current status of this function.

#### 6.1.5 Hide ID (Need network support)

<sup>1</sup><sub>15750</sub> **Hide ID**: While calling, the recipient won't see your phone number.

<sup>1</sup><sub>15750</sub> **Display own ID**: While calling, your phone number will be visible for the recipient.

<sup>1</sup><sub>15750</sub> **Display ID by network**: While calling, whether your phone number will be visible or not for the receiver depends on the network presetting.

#### 6.1.6 Select line

You can choose Line 1 or Line 2 as you need.



## 6.1.7 Flight mode

<sup>1</sup><sub>15750</sub> **Activate:** Activate flight mode, then all network service won't be available.

<sup>1</sup><sub>15750</sub> **Select when power on:** You can select whether to activate flight mode when power on.

## 6.1.8 Others

<sup>1</sup><sub>15750</sub> **50 secs warning**

If you activate the function, an elapsed time reminder will be heard at the 50<sup>th</sup> second of every minute during your call, so that you may end the call timely to save the phone fare.

<sup>1</sup><sub>15750</sub> **Answer/Reject mode**

- **Reply SMS after reject:** You can select whether to reply an SMS after rejecting a call.
- **Any-key answer:** If you set this function on, you can answer the call by pressing any-key.

<sup>1</sup><sub>15750</sub> **Auto redial**

If you set this function on, the phone will redial the number after an unsuccessful call.

## 6.2 Phone settings

### 6.2.1 Time & date

<sup>1</sup><sub>15750</sub> **Set time:** Directly input the time or press **【Up /Down Key】** to set it.

<sup>1</sup><sub>15750</sub> **Set date:** Directly input the date or press **【Up /Down Key】** to set it.

### 6.2.2 Select language

You can select the language you want.

#### **6.2.4 Auto power on/off**

You can set the phone to switch on/off at a scheduled time.

#### **6.2.5 Power management**

Display the battery capacity.

#### **6.2.6 Restore factory settings**

Reset all parameter values into default status. Please enter the privacy preserving password (Initial password is 0000) to resume factory setting.

### **6.3 Display settings**

#### **6.3.1 Wallpaper settings**

Select the default or other pictures as the wallpaper of the phone.

#### **6.3.2 Idle display settings**

You can choose that which item will be displayed on the standby screen.

#### **6.3.3 Contrast**

Press 【Left /Right Key】 to adjust the contrast.

#### **6.3.4 Backlight**

Select the desired backlight time.

#### **6.3.5 Keypad backlight time**

Select the desired keypad light time.

### 6.3.6 Animation effect

<sup>1</sup><sub>15750</sub> **Power on display:** You can select the preset animation or others as the Power on animation for your phone.

<sup>1</sup><sub>15750</sub> **Power off display:** You can select the preset animation or others as the Power off animation for your phone.

## 6.4 Security settings

In order to secure the information, you can set PIN code, PIN2 code, power-on password and Mobile tracker function.

### 6.4.1 PIN

PIN code is the personal identification number for SIM card. It never be modified, the initial password set by network operator should be 1234 or 0000. If activated the power-on PIN code, then you have to input the PIN password each time you switch the phone on. You can modify the PIN code to prevent your SIM card being used by others.



Caution :

If you input your PIN code incorrectly three times in succession, the SIM card will be locked automatically, and prompting to enter PUK code to unlock it. Therefore, please do remember the PIN code, if you modify it.

PUK code (PUK1) is made up by 8 digits, unmodifiable. When the phone is locked by PIN code, please enter correct PUK code to unlock the phone. If you incorrectly input the PUK code ten times in succession, then the SIM card cannot be used any more. Some PUK codes are provided together with the SIM card, some should be gained from the network

service provider. If you don't know the PUK code while your PIN code is locked, please never input the code casually. In this case, please call the hotline of the service provider for your SIM card, after simply checking about the user identity, you can gain the PUK code for free to unlock your phone.



**Caution :**

Please be careful when use this function. If you forget PUK code, please consult your network operator. If you incorrectly input the PUK code ten times in succession, the SIM card will be scrap.

Select the desired SIM type and have the following options:

<sup>1</sup><sub>15750</sub> **Activated:** You should input PIN code each time switching the phone on.

<sup>1</sup><sub>15750</sub> **Modify:** You should activate PIN code before modifying it.

<sup>1</sup><sub>15750</sub> **Off:** You should input the correct PIN code before deactivating it.

### 6.4.3 Privacy

Secured by phone password, the phone will be protected from other unauthorized users. When password function has been activated for call logs or message, you have to enter correct password on corresponding main menu or sub-menu. The defaulted password is "0000".

### 6.4.4 Auto keypad lock

After activating this function, the phone will be locked automatically if the time you set is arrived, so as to avoid error

operations.

<sup>1</sup><sub>15750</sub> **Manual lock keypad:** On the Home screen, hold on 【 \* Key】 for three seconds to lock the keypad manually.

<sup>1</sup><sub>15750</sub> **Manual unlock keypad:** On the Home screen, hold on 【 \* Key】 for three seconds to unlock the keypad manually.

### **6.4.5 Lock screen by end- key**

Once activated this function, On Home Screen, when the backlight is on, press 【End Key】 to turn off the backlight and auto lock the keypad.

### **6.4.6 Power-on password**

You should set the power on password when you use this function for the first time. After activated this function, you should input password each time you switch the phone on.



**Caution:**

Power-on password doesn't have the limitation for wrongly inputting. Please remember carefully about the Power on PWD, otherwise, the phone won't be switched on normally once password forgotten.

## **6.5 Connection management**

### **6.5.1 Network account**

You can select the desired network account, and you can add the desired account by yourself as well.

## **7. Entertainment**

### **7.1 Camera**

Enter the main menu, and select [Camera] to enter the

camera preview screen, press **【OK Key】** to take a photo.

## 7.2 Video recorder

Enter the main menu, and select **[Entertainment→Video recorder]** to enter the video preview screen, and press **【OK Key】** to start recording the video.




## 7.3 Images

This function allows you to quickly browse photos and pictures.

## 7.4 Audio player

Enter the main menu, and select **[Entertainment→Audio player]** to enter the Audio Player screen.

The below table shows the icons on the Player screen:

| Icon  | Description  |
|---|--|
|  | Press <b>【OK Key】</b> to play or pause                               |
|  | Press <b>【Left/Right Key】</b> to skip to last /next one              |
|  | Show the playing volume, press <b>【+/- Key】</b> to adjust the volume |





### Background audio player

While playing a song, press **【End Key】** to quit the Playing screen to enter the background playing mode.

## 7.5 Video player

Enter the main menu, and click **[Entertainment→Video player]**.

**Icon description:**

| Icon  | Description  |
|---|--|
|  | Play or pause  |
|  | Skip to the last/next file   |
|  | Stop playing   |
|  | Show the playing volume, press <b>[+/- Key]</b> to adjust the volume |




## 7.6 Recorder


Enter the main menu, select **[Entertainment→Recorder]**, and choose **<Options→Start recording>** to start recording. Select **<Pause>** to have the recording pause for a while, select **<Stop>** to cease recording. After ceasing the recording, the recorded file will be automatically save in the folder **[Audio]**, select **<Options→Record file list>** to check.

## 7.7 FM Radio

Enter the main menu, then select **[Entertainment→FM radio]**.

Icon description:

| Icon  | Description  |
|---|--|
|   | Press <b>[Down Key]</b> to activate or deactivate the radio                    |
|  | Frequency scrolling bar, press <b>[Left/Right Key]</b> to adjust the frequency |
|  | Press <b>[Left /Right Key]</b> to  |

|   |  |
|---|--|
|   | adjust the radio frequency.                                      |
|  | Display the player volume,<br>Press <b>【+/-Key】</b> to adjust it |

## 8. File manager

This menu allows you to manage files stored in the storage card.

## 9. Application

For richness your entertainment life, the mobile phone provides you the interesting application. Please get more information in the instructions of the phone.

## 10. Profiles

### 10.1 Normal

 **Activate:** Activate the chosen profile.

 **Customize:** Set the options as required.

 **Rename:** Modify the name of the selected profile.

### 10.2 Silent

For the settings, please refer to "Normal".

### 10.3 Meeting

For the settings, please refer to "Normal".

### 10.4 Indoor

For the settings, please refer to "Normal".



## **10.5 Outdoor**

For the settings, please refer to "Normal".

## **10.6 Earphone**

For the settings, please refer to "Normal".

## **10.7 Bluetooth**

For the settings, please refer to "Normal".

# **11. Tools**

## **11.1 Alarm**

On the Home Screen, press **【OK Key】** to enter the main menu, and select **[Tools→Alarm]**, then you can set the alarm name, time, ring and mode.

## **11.2 Calendar**

Enter the main menu, and select **[Tools→Calendar]** to enter the Calendar screen.

## **11.3 World clock**

This function allows you to check the standard time in different areas of the world.

## **11.4 Torch**

You can press the OK key to activate the flashlight.

# **12. WAP**

## **12.1 Input URL**

Enter the wanted website, and click to connect it.

## 12.2 Bookmarks

Save the common visited website into the Favorites, and marked by simple names. Select one saved name, then the corresponding web will be connected.

## 12.3 History

Record the websites you visited before.

## 12.4 Offline pages

After saving a website as snapshot, you can browse the website while offline.



Caution :

- 1 · Your network service provider may not support some functions. In order to ensure the browser work normally, please confirm first that your SIM card supports and have the Internet function activated.
2. If you browse the web page, flowrate fee will be charged.

## 13. Extra

### 13.1 Calculator

Directly input numbers, press **【Navigation Key】** to select your desired operation symbols (+, -, /, X). Press **【OK Key】** to get the answer.

### 13.2 Bluetooth

<sup>1</sup><sub>15750</sub> **Open/Close Bluetooth:** This function allows you to switch the Bluetooth on or off.

<sup>1</sup><sub>15750</sub> **Bluetooth visibility:** Set to show or hide the Bluetooth of your phone. If you select to hide the phone, other devices

cannot detect the Bluetooth device of your phone, even you activated your Bluetooth function.

<sup>1</sup>  
15750 **Paired device:** You can search for the nearby Bluetooth-enabled devices

<sup>1</sup>  
15750 **My Bluetooth name:** If Bluetooth function activated, while other devices search for Bluetooth signal, the corresponding name represents your phone.

## 14. **Shortcut**

Enter the chosen shortcut menu. You can change the responsible shortcuts for 【Navigation Key】 under standby mode.

## 15. **Other Functions**

**Mass storage:** this function is used to read and write files from PC to the storage.

## 16. **Common Questions**

### **Unable to make some calls**

- Call barring has been set and barred utilization of the mobile phone. Please check and cancel call barring.

### **Other person is answering my call**

- The mobile phone has been set into divert your calls to another phone number. Please check and cancel call divert.

### **The mobile phone cannot search for the network**

- The mobile phone is outside of the network coverage area (or there are physical obstructions between the mobile phone and the transmitter), and calls cannot be made or answered. If you are in one room, please move close to the window.
- In the operation process, the mobile phone may display the following operating tips:

#### **“Emergency”**

- You are outside the network coverage area of the service provider. But another network area where you locate allows you to make emergency call according to the signal strength.

#### **“Invalid SIM”**

- The SIM card of the mobile phone is locked and the inserted SIM card is unable to be accepted. Please insert the correct SIM card or contact with the vendor.

#### **“Please Enter PUK”**

- The SIM card has been locked since the wrong PIN code has been inputted for three times. You must consult your network provider for special PUK code with eight numbers to unlock the SIM card (The PUK code may have been provided with your PIN code at the same time).

#### **Warning:**

**The SIM card will be permanently locked if you input the wrong PUK code for ten consecutive times and you must apply for a new SIM card from your network provider.**

## **17. Maintenance Guideline**

Welcome to use i601. If there is a problem when you using the phone, please contact with the vender or consult the local maintenance center. If your mobile phone is in need of repair, you can take your phone to local maintenance center, if there is no local maintenance center, please pass your phone and the purchasing invoice to the vendor.

## **18. FCC RF Exposure Information and Statement**

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types i601(FCC ID: WA6i601) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 1.010W/kg and when properly worn on the body is 1.040W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

### **FCC WARNING**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE 3: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.