



# User Guide

ENACT™ by  **LG**

ENACT™ by  **LG**



User Guide

MF167853801 (1.0) WM



Guía del  
Usuario

ENACT™ by  **LG**

 This booklet is made from 98% post-consumer recycled paper. Printed in Mexico.  This booklet is printed with soy ink.

BC

*Copyright©2013 LG Electronics, Inc. **All rights reserved.**  
LG and the LG logo are registered trademarks of LG Group  
and its related entities are registered. Enact is a trademark  
of LG Electronics, Inc. All other trademarks are the  
property of their respective owners.*

## Before you begin

Before reading this user guide and getting started, please review the separate Product Safety and Warranty Information guide for important product safety and warranty information about your device.

Important Customer Information.....	1
Table of Contents .....	2
The Basics .....	5
Phone Overview.....	5
Help .....	9
Setting Up Your Phone .....	9
Removing the Battery and SIM Card .....	12
Inserting and Removing a Memory Card.....	13
Optimizing Battery Life .....	14
Phone's Status Icons .....	20
Touchscreen .....	22
To turn the phone sounds off .....	24
Getting to Know the Home Screen .....	24
Languages.....	31
Applications: How to View, Open and Switch.....	33
Working with Menus .....	38
Managing Notifications .....	39
Searching Your Phone and the Web.....	44
Locking the Screen .....	46
Customizing the Home Screen .....	50
QuickMemo™ .....	53
Connecting Quickly With Your Contacts.....	55
Connecting to Wi-Fi Networks .....	57
Connecting to Networks and Devices .....	57
Connecting to Mobile Networks .....	58
microSD Card .....	61
microSD Card .....	61
Sending data from your phone using Bluetooth.....	62
Calls .....	64
Placing and Ending Calls .....	64
Answering or Rejecting Calls .....	67
Working With the Recent tab .....	69
Calling Your Contacts.....	70

Voice Dialer .....	72
Options During a Call .....	72
Managing Multiple Calls .....	74
Listening to Your Voicemail .....	75
<b>Web .....</b>	<b>76</b>
Chrome .....	76
<b>Maps .....</b>	<b>86</b>
Maps .....	86
Checking the Weather .....	89
<b>Weather .....</b>	<b>89</b>
Changing Weather Settings .....	90
Contacts .....	91
<b>Communication .....</b>	<b>91</b>
Email .....	101
Visual Voicemail .....	106
Messaging .....	107
Talk .....	114
Voice Dialer .....	117
<b>Entertainment .....</b>	<b>118</b>
Camera .....	118
Video Camera .....	123
Gallery .....	126
The Video Wiz application .....	133
Play Store .....	135
Music .....	138
Videos .....	144
YouTube™ .....	146
FileShare .....	148
SmartShare .....	148
Voice Recorder .....	151
<b>Tools .....</b>	<b>153</b>
Calendar .....	153

Calculator.....	160
Alarm/Clock.....	162
Polaris Office 4 .....	165
File Manager.....	167
Tasks.....	168
<b>Settings .....</b>	<b>170</b>
Settings.....	170
<b>Safety.....</b>	<b>193</b>
Consumer Information About Radio Frequency Emissions.....	195
Consumer Information on SAR .....	199
FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices.....	201
Caution:	
Avoid potential hearing loss.....	203
TIA Safety Information.....	204
Safety Information .....	208
FDA Consumer Update .....	212
<b>Specifications .....</b>	<b>223</b>
<b>LIMITED WARRANTY STATEMENT .....</b>	<b>224</b>
<b>Index .....</b>	<b>228</b>

## Phone Overview

### Front View



- NOTES**
- All screen shots in this guide are simulated. Actual displays may vary.
  - Instructions to perform tasks in this guide are based on the Standard mode settings and may change depending on the mode and software version on your phone.

1. **Proximity Sensor** Senses proximity toward other objects (such as your head) so that tap commands are not accidentally activated during a call.

- NOTES**
- Do not block the sensor to avoid problems with the touchscreen.
  - The use of a screen protector produced by manufacturers other than LG can cause a disturbance in touch operation, the display, etc.

2. **LED Indicator** The blue LED blinks to indicate new message notifications. When the device is charging, it is lit solid blue. The LED turns off when the screen is on.
3. **Front Camera Lens** Use to take pictures and record videos of yourself. You can also use this for video chatting. Keep it clean for optimal performance.
4. **Quick Keys** Provides quick, one-touch access to your most used applications. The icons in the Quick Keys bar can be modified. To reposition, add, or remove an icon, see page 24.
5. **Back Key** Returns to the previous screen. Also closes pop-up items, such as menus, dialog boxes, and the on-screen keyboard.
6. **Home Key** Returns to the Home screen. If you're already viewing one of the Home screen extension canvases, it navigates you to the central Home screen canvas. Touch and hold to access Google Search and Google Now.
7. **Recent Apps Key** Opens the list of recently used applications and provides access to the Task Manager application.
8. **Menu Key** Opens an Options menu with options that affect the current screen or app. This only applies when available, depending on the screen or app.
9. **Home Screen** Displays all of the information needed to operate your phone, such as applications, call status, date, time, signal status, and battery strength.
10. **Earpiece** Lets you hear callers and automated prompts.
11. **Search Key** Opens the Quick Search Box, from the Home screen, to search the phone and the web. In many applications, pressing this key within the application searches within the application itself.
12. **Write and Share Key** Type and enter information using the slide-out QWERTY keyboard and share it via Calendar, Tasks, Email, Bluetooth, Gmail, Google, Google+, or Messaging.
13. **Function Key** Lets you enter alternate characters or symbols.



14. **Directional Keys** Scroll through menu items. You can highlight a specific field or object by pressing up, down, left or right.

### Rear View



15. **LED Flash** Brightens up the captured image or recorded video when you turn on the flash.
16. **Speaker** Sound comes from the rear speaker instead of the earpiece (e.g., the speakerphone function, music player function, etc.).
17. **Back Cover** Encloses the battery compartment. The SIM and microSD slots are located under here.
18. **Rear Camera Lens** Use to take photos and record videos. Keep it clean for optimal performance.

## Side Views



19. **Power/Lock Key** Press to lock/unlock the screen. Press and hold to turn the phone on/off, restart it, activate/deactivate airplane mode, or change the sound settings.
20. **USB/Charger Port** Allows you to connect the phone and the USB Cable for use with the charger adapter, or other compatible accessories.
21. **Volume Keys** Allow you to adjust the ringer, media volumes, or the volume during a call.

## Top and Bottom Views



22. **3.5mm Headset Jack** Allows you to plug in an optional headset for convenient, hands-free conversations. You can also plug in headphones to listen to music.
23. **Microphone** Transmits your voice to the other caller and is used for voice-activated functions.

## Help

The **Help** application allows you to quickly and conveniently view information about your phone, including an icon glossary, how-to videos, My Verizon video, and additional guides.

To access Help, from the Home screen, tap the **Apps Key**  > **Help** .

## Setting Up Your Phone


### Step 1. Remove the Back Cover

Place your fingernail in the cutout at the bottom of the phone and pop the back cover off the phone.




### Step 2. Insert the SIM Card

Slide the SIM Card into the SIM Card slot, located under the back cover.

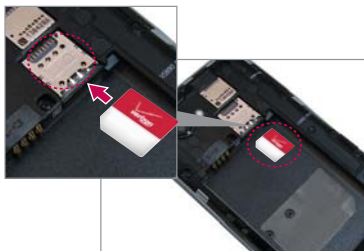

### Step 3. Insert the Battery

Insert the battery, making sure to align the gold contacts. Press down gently to secure the battery.

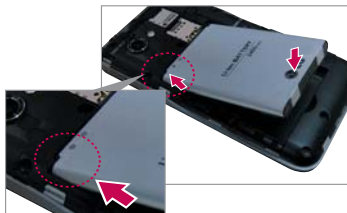

### Step 4. Replace the Back Cover

Place the cover over the back of the phone, then press down along the edges to secure the cover.



### Step 5. Charge the Phone

Before turning on your phone, charge it fully. Be sure to use the charger that came with your phone.



Your device comes with a USB Cable and an adapter which connect together to charge your phone. To charge your phone:

**NOTE** Improper handling of the USB/Charger Port, as well as the use of an incompatible charger, may cause damage to your phone and void the warranty.

1. Correctly orient the USB Cable with the adapter, and connect them. As shown below, both the USB logo on the USB Cable and the LG logo on the adapter will face toward you.



2. The USB/Charger Port is located on the left side of the phone. Correctly orient the cable with the port before plugging it in. As shown below, the USB logo on the cable will face upward.
3. Plug into an electrical outlet to begin charging.

## Charging with USB



You can use your computer to charge your phone. To be able to charge with the USB Cable, you need to have the necessary USB drivers installed on your PC first. Connect one end of the USB Cable to the USB/Charger Port on your phone (as shown above) and connect the other end to a USB port on your PC. It is best to use the rear USB port when connecting to a desktop PC. The USB hub should be powered by an external power source.

## Removing the Battery and SIM Card

**WARNING!** Your device includes a heat sensor activated by the battery temperature. A pop-up message will be displayed if the device turned itself off or stopped charging as in the following cases:

- Your phone may turn itself off when the battery temperature becomes too high (above 60°C) during use.
- Charging may stop temporarily when the battery temperature becomes too high (above 55°C) or too low (-10°C).

### Removing the battery

1. Turn the phone off and insert your fingernail in the cutout at the bottom of the phone and gently pop the back cover off to remove it.



2. Use the fingertip cutout at the bottom of the battery compartment to lift the battery out.



## Removing the SIM card

1. Turn the phone off, then remove the back cover and the battery (as demonstrated in the previous instructions).
2. Locate the SIM card slot and gently slide the SIM card out to remove it.

**CAUTION** If you switch to a new SIM card, the device will display a message advising you that all email accounts will be deleted. You will not have the option to enter your password to keep all of your existing device accounts when you change SIM cards.



## Inserting and Removing a Memory Card

### Inserting a microSD card

1. Turn the phone off, then remove the back cover (as demonstrated in the previous instructions) and locate the microSD card slot (microSD is inscribed near the slot opening).
2. Position the microSD card (sold separately) with the label side facing up and slide it into place until it is fully inserted and locked in place.

**NOTE** The microSD card can be easily damaged by improper operation. Please be careful when inserting, removing, or handling it.



### To remove the microSD card



Unmount the microSD card prior to removing it (see the section below).

1. Turn the phone off, then remove the back cover and locate the microSD card slot.
2. Carefully pull the microSD card out to remove it.





### To unmount the microSD card

It is important to unmount the microSD card to avoid damage to it or the data saved on the card.


1. From the Home screen, tap the **Apps Key** .
2. Tap **Settings**  > **Storage**.
3. Tap **Unmount SD card** > **OK**.

### Powering your phone on/off

 To turn your phone on, press and hold the **Power/Lock Key** for a couple of seconds until the screen lights up.

 To turn off your phone, press and hold the **Power/Lock Key** until the Phone options are displayed. Tap **Power off** > **OK**.

### Lock Screen

1. Press the **Power/Lock Key** to turn on your screen. Your Lock Screen will appear.
2. Drag the lock icon  in any direction to unlock it.
  - ▶ To use a shortcut, drag the shortcut icon at the bottom of the Lock Screen in any direction. The screen will unlock and launch the application.



### Optimizing Battery Life

You can extend your battery's life between charges by turning off features that run in the background. You can also monitor how applications and system resources consume battery power.

#### Tips to extend the life of your battery

- ▶ Turn off automatic syncing for Gmail, Calendar, Contacts, and other applications if you don't need it.
- ▶ Use the Power saver feature (accessed in the Settings menu or the My Settings widget) to control data activity, Wi-Fi connection, Bluetooth



connection, and power used for the device such as screen brightness and phone ringtone.

**NOTE** Allowing other devices to use your phone's mobile hotspot connection will drain your battery more quickly.



## To check the battery charge level

From the Home screen, tap the **Apps Key**  > **Settings**  > **Battery**.

- ▶ The battery level (as a percentage of fully charged) and the battery status (Charging or Discharging) is displayed at the top of the screen.
- ▶ Tap the **Battery percentage** checkbox to display the percentage of remaining battery charge on the Status Bar next to the battery icon.
- ▶ Tap **Power saver** to view and/or modify your Power saver settings.

## To monitor and control what uses the battery




The Battery screen allows you to see which applications are consuming the most battery power. Information on this screen allows you to identify downloaded applications you may want to turn off when not being used, so you can get the most out of your battery power.

- ▶ From the Home screen, tap the **Apps Key**  > **Settings**  > **Battery**. Tap the battery image to view usage information. The top of the screen displays a usage graph and below it lists all of the applications or services using battery power from the greatest amount of energy used to the least amount.
- ▶ Tap an application or service in the Battery use screen to see the details about its power consumption, including either how long since last connected to a power source or how long you were last running on battery power. Different applications or services offer different kinds of information, and they may even include options to modify the settings so you can reduce power consumption by that application.

## Power saver mode

If the battery charge level drops to low levels, the phone automatically activates Power saver mode (if set to On) to conserve battery power until

you can recharge it.

- ▶ From the Home screen, tap the **Apps Key**  > **Settings**  > **Battery**. Tap  next to **Power Saver** to turn this feature on, then tap **Power Saver** to access the menu. Tap **Turn Power saver on** to set the desired option.
- ▶ You can set the phone to activate Power saver mode immediately, when the charge drops to 10%, 20%, 30%, or 50%. If you turn off Power saver mode, when the battery charge becomes low, a notification prompts you to turn it on.
- ▶ You can also modify settings that affect battery life from the Power saver screen: Auto-sync, Wi-Fi, Bluetooth, Vibrate on touch, Brightness, Screen timeout, and Touch key light.

## Setting Up Your Device

Follow the on-screen instructions to quickly set up your phone and email accounts.

### To set up your device, follow the steps below:


1. Select your language, then tap **Next** at the bottom of the screen.
2. If you've already inserted the SIM card, the device will automatically be activated. Tap **Next** to continue.
3. On the Welcome screen, read the information, then tap **Next** to set up your device.
4. Read the Privacy caution, set your share location information setting, then tap **Next**.

**NOTE** Tap the **I agree to share my location** checkbox to share your location information. Otherwise, leave it blank.


5. If you want to sync contacts from the cloud, make sure **Sync contacts** is checkmarked, then tap **Next**. Otherwise, remove the checkmark, then tap **Next**.
6. Tap an email account type, then enter the information necessary to configure it. Repeat for all email types you want to set up on this device.

Tap **Done with Email** at the bottom of the screen when all accounts are configured.

7. Configure your Google Account.

- ▶ Tap **Yes** if you have an existing Google Account, then enter your email and password.
- ▶ Tap **No** to create an account (tap **Get an account** and follow the on-screen instructions) or skip this step (tap **Not now**).
  - 1) Enter your username and password or any other necessary information (if creating an account), then tap the **Continue** icon . Tap **OK** to agree to your Google Account terms and conditions.

**NOTE** Tap the **Back Key**  to close the on-screen keyboard, if necessary.


- 2) Choose to join Google+ which makes sharing on the web more like real-life sharing. You can choose Circles, Instant Upload, and Messenger. Tap Join Google+ or Not Now.
- 3) Choose whether or not to set up your credit card information for Play Store purchases.
- 4) Complete the Backup and restore screen to allow your Google Account to back up your apps, settings, and other data, then tap the Continue icon .
- 5) Now your Gmail, Google Contacts, and Google Calendar events will all be loaded to your phone automatically.


**NOTE** This is automatic for the first Google Account you add. When adding additional Google accounts, you have to select which options to synchronize.

You can use the area below to record your Google Account information for future reference.

Username: \_\_\_\_\_@gmail.com

Password: \_\_\_\_\_


8. Tap the **Continue** icon  to continue your Google Account login, then tap **OK** to agree to the Google Account terms and conditions.
9. Set up your Join Google+ features to complete your successful sign in.

- ▶ Tap **Join Google+** or **Not now**.
  - ▶ Tap **Set up credit card** or **Not now**.
10. Confirm your Google and location settings, then tap the **Continue** icon .
  11. On the My Verizon Mobile account screen, read the information, then tap **Next**.
  12. Read the mode change information and tap **Starter mode\*** or **Standard mode\***, then tap **Next**.
  - NOTE** You can preview each mode by tapping **Preview the selected mode**.
  13. Setup is complete. Tap **Done** to begin using your phone.

\* During the initial setup, you have the option to select from two different modes. If you did not make a selection, the default mode is set to Standard.

### Starter mode

Starter mode is a simplified smartphone software version to help ease the novice user into the Android experience. When selected, your Home screen will look like this:

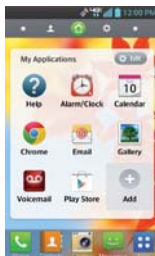

## Standard mode

Standard mode employs the full smartphone software for users who are already familiar with using an Android device. When selected, your Home screen will look like this:



The instructions in this guide are written based on Standard mode.

## Your Google Account


You must sign into a Google Account to use Gmail, Google Talk, Google Calendar, and other Google Applications; to download applications from the Play Store; to back up your settings to Google servers; and to take advantage of other Google services on your phone.


### IMPORTANT

- If you don't have a Google Account, you're prompted to create one.
- If you don't sign into a Google Account during setup, you are prompted to sign in or to create a Google Account the first time you start an application that requires one, such as Gmail or Play Store.
- After you sign in, your contacts, Gmail messages, Calendar events, and other information from these applications and services on the web are synchronized with your phone.

## Phone's Status Icons







The Status Bar appears at the top of the screen. It displays icons indicating that you've received notifications (on the left) and icons indicating the phone's status (on the right), along with the current time.




If you have more notifications than can fit in the Status Bar, the More icon  is displayed as an indicator to open the Notifications panel to view them all.

The following icons may appear in the Status Bar.












### Call icons

	Microphone is muted during a call		Missed call
	In call		In call using Bluetooth device
	Speaker is on		Privacy call

### Calendar and Alarm icons

	Alarm set		Calendar event
---	-----------	---	----------------






















### Email and Messaging icons

	Other Email event received		Sending other Email failed
	New text or multimedia message received		High priority message received
	New voicemail received		Sending text or multimedia message failed
	New visual voicemail received		Visual voicemail playing
	Google Talk message received		Choose input method
	Gmail message received		










## Sound icons

	Music playing		Silent mode is on
	Vibrate mode is on		Phone jack connected














## Network icons

	4G network connected		4G network in use
	Downloading data through 4G network		Uploading data through 4G network
	3G network connected		3G network in use
	Downloading data through 3G network		Uploading data through 3G network
	Downloading data		Uploading data
	GPS is on		Searching the current location via GPS
	No service		Weak network signal
	Strong network signal		Connected to network extender service
	Airplane mode is on		Roaming
	Location service is on		Location service is off
	Download complete		

## Connectivity icons

	Weak Wi-Fi signal		Strong Wi-Fi signal
	USB debugging connected		USB connected
	Bluetooth is on		Bluetooth device connected
	USB tethering is on		Mobile Hotspot is on
	Wi-Fi Direct is on		

## System icons

	SmartShare is on		More notifications available
	System error		Preparing and scanning the microSD card
	microSD card error		No SIM card
	Unknown SIM card		Sync in process
	Sync error		Battery is empty
	Battery is full		Battery is charging
	Battery is not charging		

## Touchscreen

Your touchscreen provides an excellent way to interact with and use your phone. With the touch of your finger, you can download and use available applications, make menu selections, and access data saved to your phone.

The following terms are used for describing the different available actions using the touchscreen:

**Touch or tap** A single finger touch selects items. For example, tap an icon (e.g., an application, widget, or folder), tap words (e.g., menu selection or to answer an on-screen question), or touch letters and numbers to type.

**Touch and hold** Touch and hold an item on the screen by touching it and not lifting your finger until an action occurs. For example, to open a Context menu for editing a contact, touch and hold a contact entry until the menu pops up.

**Drag** Touch and hold an item for a moment and then, without lifting your finger, move your finger across the screen until you reach the target position. For example, you can drag items on the Home screen to reposition them.

**Swipe, slide, or flick** Move your finger quickly across the surface of the screen, without pausing when you first touch it (so you don't drag an item



instead). For example, you can slide the screen up or down to scroll through a list, browse through the different Home screens by swiping from left to right (and vice versa), or remove an application from the Recent apps screen by flicking its graphic off the screen.

**Double-tap** Double-tap to zoom in or out on a screen. For example, quickly double-tap a section of a web page to zoom that section to fit the width of the screen. You can also double-tap to control the zoom in Maps and in other applications.

**Pinch-to-Zoom** Use your index finger and thumb in a pinch motion (to zoom out) or spread motion (to zoom in) when using Chrome, a map, photos, etc. Spread your fingers apart to make screen information larger (easier to see and read), or pinch together to view more area and information. The pinch in gesture also changes the Home screen to mini canvas view and the spread apart gesture returns to the normal Home screen view.

**Rotate the screen** From many applications, the orientation of the screen rotates with the phone as you turn it from portrait to landscape and back again.



Rotate the phone sideways for landscape orientation.

Rotate the phone upright for portrait orientation.

**NOTE** The screen will not rotate while the slide-out QWERTY Keyboard is open.

**Capturing the screen** Press and hold the down **Volume Key** and the **Power/Lock Key** at the same time to capture the current image on the screen. You can find the captured image in the **Gallery** application.

**NOTE** You cannot capture an image from some videos and applications. You can capture the screen using QuickMemo. For more information about QuickMemo, go to the page 53.

## To turn the phone sounds off

If you're in a place where your phone sounds may disturb others, you can quickly silence your phone.


Press and hold the **Power/Lock Key**  on the right side of the phone, then tap the **Silent mode** icon .

**NOTE** Only one mode can be selected at a time. The currently activated mode (Silent, Vibration, or Sounds) is underlined in blue. Tap any of the sound mode icons to switch to that mode.

**OR**

Press the down **Volume Key**  on the left side of the phone until Silent mode  is displayed.

**OR**

Open the Notifications panel and tap the Sound icon until **Silent**  is displayed.

## Getting to Know the Home Screen

The Home screen is your starting point to access all of the features on your phone. It displays application shortcuts, icons, widgets, and other features.

### Status Bar

Shows device status information, including the time, signal strength, battery status, and notification icons.

### Application Icon

Tap an icon (application, widget, folder, etc.) to open and use it.

### Quick Keys


Provide easy, one-touch access to the functions used most often.




## Quick Keys


The Quick Keys are located in a bar at the bottom of the Home screen.


**NOTE** Five icons are displayed, but the Quick Keys bar can hold up to six icons. You can modify the icons in this bar to suit your needs.

: Opens the **Phone** application which displays the dialpad so you can dial a number not stored in your phone's memory. It also provides additional tabs at the top of the screen to access your Recent calls, Contacts, Favorites, and Groups.

: Opens the **Contacts** application which displays the names and numbers stored in your Contacts. It also provides additional tabs at the top of the screen to access the dialpad, your Recent calls, Favorites, and Groups.


: Opens the **Camera** application.

: Opens the **Messaging** application so you can send and receive text and multimedia messages.



: Opens the **Applications** screen which displays phone options and applications. You can also access Downloads and Widgets by tapping the tabs across the top of the screen.

## Modifying the Quick Keys Bar

You can modify the icons in the Quick Keys bar to suit your needs.

- ▶ **Rearrange:** Touch and hold the icon to move, then drag it to another position in the Quick Keys bar.
- ▶ **Add:** Open the Applications screen, then drag the icon you want onto the Quick Keys bar.
- ▶ **Delete:** Touch and hold the icon to delete, then drag it to the Remove icon  that appears at the top of the screen.

## To return to the Home screen

- ▶ Tap the **Home Key**  at the bottom of the device at any time, from any application.
- ▶ Press the **Home Key**  on the Slide out Keyboard at any time, from any application.

## To view other Home screen canvases

- ▶ Swipe (or flick) your finger left or right across the Home screen. The Home screen spans up to seven screen widths, allowing more space for icons, widgets, shortcuts, and other items.




**Home Screen Canvas Indicator**  
The white line above the Quick Keys indicates which Home screen canvas you are viewing.

## Mini canvas view

Mini canvas view allows direct access to any of the Home screen canvases and also allows you to manage them. You can add, delete, and rearrange the canvas order to suit your needs.

Pinch in on any of the Home screen canvases to change from full screen view to mini canvas view. From mini canvas view you have the following options:

- ▶ To go directly to any canvas, simply tap the one you want.
- ▶ To add another canvas, tap the **Add canvas** icon .
- ▶ To delete a canvas, touch and hold the canvas to delete, drag it to the Remove icon at the top of the screen, then lift your finger.
- ▶ To rearrange your canvases, touch and hold the canvas to move, drag it on top of the canvas position where you want it, then lift your finger. The moved canvas takes that position and the remaining canvases shift accordingly.
- ▶ To set another canvas as the default Home screen, tap **Set default Home screen** at the bottom of the screen, then tap the screen you want to set as the default.

- Pinch in on the Home screen to display the mini canvas view, then tap the Home screen canvas you want to view.



Full screen view





Mini canvas view

Tap here to add another canvas.

Tap here to set the default Home screen.

## Hiding items on the Home screen

Place two fingers on the screen, then spread them apart to hide the items on your Home screen so that only your wallpaper and the Status Bar are displayed. To redisplay your normal Home screen with all of its applications and widgets, pinch in on the screen, or touch the **Back Key**  (or press the **Back Key**  on the Slide out Keyboard).


**NOTE** The device automatically reverts to the normal Home screen view after screen timeout.

## Using Dual View

Dual view allows you to easily add items to any of the Home screen canvases. Touch and hold an empty spot on any of the Home screen canvases to view your Home screen on top and the Applications screen on the bottom. Flick sideways to scroll through the Home screen canvases to display the canvas you want. At the bottom of the screen, tap the type of item you want to add (Apps, Downloads, Widgets, or Wallpapers), then flick sideways to scroll through the available choices. Simply tap the item you want to automatically add it to the canvas viewed at the top of the screen.


**NOTE** The Quick Keys are not accessible while in Dual view.

To return to the full screen view, touch the **Back Key**  at the bottom

front of the device (or press the **Back Key**  on the Slide out Keyboard). You can also tap one of the Home screen canvases. The device automatically reverts to full screen view after screen timeout.

## The Smart screen feature

The Smart screen feature keeps the device from activating screen timeout when it detects your eyes looking at the screen. When you turn this feature on, you can set a shorter screen timeout setting to conserve your battery power, but still allow you to view a screen for a longer period of time without having to touch it to keep it activated.

To turn Smart Screen on, from the Home screen, tap (or press) the **Menu Key**  > **Settings** > **Display** > checkmark the **Smart screen** checkbox.

**NOTE** The following situations may prevent the Smart screen feature from functioning properly:

- When the device is in the dark or against bright light.
- When the front camera cannot detect the location of your eyes.
- When the front camera is used at the same time with other applications.

## Text Input Methods

### QWERTY Keyboard

Your device has a slide-out QWERTY Keyboard which you can use instead of the on-screen keyboard. It functions like a standard keyboard, but also includes additional keys to help you use your device.




**NOTE** The touchscreen automatically unlocks when you slide the QWERTY Keyboard open.

### On-screen Keyboard

The on-screen keyboard displays automatically on the screen when you need to enter text. To manually display this keyboard, simply tap a text field where you want to enter text.


Toggles between different languages (only available when multiple input languages are selected).

Toggles between 123/SYM mode and ABC mode.

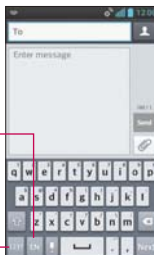




### On-screen keyboard typing tips

Enter other characters	Tap the <b>Numbers/Symbols Key</b> to display the numbers and symbols keyboard. Tap the <b>Arrow Keys</b> on the left side of the keyboard to view additional symbols.
Enter one capital letter	Tap the <b>Shift Key</b> to capitalize the next letter. The key changes to .
Enter all capital letters	Tap the <b>Shift Key</b> twice until  is displayed. Tap again to revert to lowercase.
Highlight text	Double-tap a word to highlight it. To highlight a range of text, double-tap a word, then drag the blue highlight markers  to highlight the text you want.
Cut or copy selected text	Highlight the desired text, then tap <b>Cut</b> or <b>Copy</b> in the action box displayed above the highlighted text.
Paste cut or copied text	Tap the location where you want to paste the text, then tap the cursor . Tap <b>Paste</b> in the action box that appears.
Delete a character	Tap the <b>Delete Key</b> . To delete entire words or sentences, press and hold the <b>Delete Key</b> .

Language toggle	<p>Tap the <b>Language Key</b>  to toggle between the languages you set in the Input language and type menu. Touch and hold this key to modify your language settings.</p> <p><b>NOTE</b> This key is only available when multiple languages have been enabled for text entry.</p>
-----------------	---

## Text input settings


To change your text entry settings and see the dictionary of terms you've used, from the Home screen, tap the **Apps Key**  > **Settings**  > **Language & input**. The following options are available in the KEYBOARD & INPUT METHODS section.

- ▶ **Default** - Allows you to choose the default keyboard to use when entering text using the on-screen keyboard.
- ▶ **Google voice typing** - Checkmark to select Google voice typing to enter text. Tap **Settings**  to change the Google voice typing settings.

**Choose input languages:** Allows you to select the languages to support with Google voice typing.

**Block offensive words:** Checkmark to hide recognized offensive text.

**Download offline speech recognition:** Enables voice input while offline.

- ▶ **LG Keyboard** - Checkmark to select the LG Keyboard to enter text. Tap **Settings**  to change the following settings.


**Input language and type:** Allows you to select the keyboard language and type. You can select multiple languages as well as which keyboard it is used on (on-screen or QWERTY).

**Word suggestion:** Allows you to set word prediction, auto correction, suggest next word, and clear prediction history.


**Auto capitalize:** Checkmark to automatically capitalize the first letter of each new sentence.



**Auto punctuation:** Checkmark to automatically insert a period when you double-tap the **Space Key**.

**Voice typing key:** Checkmark to display the **Voice typing key**  on the on-screen keyboard.

**Touch feedback:** Allows you to set key preview, sound feedback, and vibrate feedback when typing using the on-screen keyboard.

**Handwriting:** Tap **Settings**  to set the pen type (width), color, and delay time used when your handwriting is translated to text on the device.

**Path keyboard:** Checkmark to enter a word by drawing a path through of the the letters when using the on-screen keyboard.

**Hide keyboard:** Checkmark to hide the keyboard when you swipe downward.



**Fuzzy pinyin:** Checkmark to automatically correct common pinyin mistakes.

**Software version:** Displays the LG Keyboard software version.




## Languages

You can set only one default language for your device, but you can set multiple languages used for the on-screen keyboard and QWERTY Keyboard.

### To change the default language

- ▶ From the Home screen, tap the **Apps Key**  > **Settings**  > **Language and input** > **Language** > tap the language you want.

### To add additional languages for your keyboard(s)




- ▶ From the Home screen, tap the **Apps Key**  > **Settings**  > **Language and input**. Tap **Settings**  to the right of LG Keyboard, tap **Input language and type**, then checkmark the languages you want the keyboard(s) to be able to use.

## Keyboard use for input

### Interchangeable input


You can use either the on-screen keyboard with the QWERTY Keyboard retracted, or Slide out the QWERTY Keyboard and use it to enter your input. While the QWERTY Keyboard is open, you can use both touchscreen input and QWERTY Keyboard input. The touchscreen remains in landscape view while the QWERTY Keyboard is open.

### Interchangeable keys

The **Back Key** , the **Home Key** , and the **Menu Key**  are touch keys on the front of the device which are tapped to activate. These same keys are included on the slide-out QWERTY Keyboard which are pressed to activate. In the user guide text that follows, when using these keys you will see “Tap (or press)” to indicate that either one can be used.



## Applications: How to View, Open and Switch

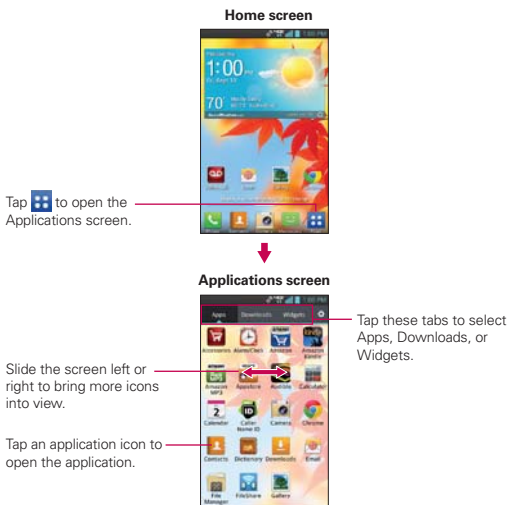All of the applications on your phone, including any applications that you downloaded and installed from Play Store or other sources, are grouped together on the Applications screen, which you access from your Home screen. If you have more applications than can fit on the Applications screen, you can slide the screen left or right to view more.





## Opening and Closing the Applications screen

### Opening the Applications screen

It's easy to access the Applications screen no matter what feature you're currently using. Simply tap (or press) the **Home Key** , then tap the **Apps Key**  in the Quick Keys bar.

## Closing the Applications screen

To manually close the Applications screen, tap (or press) the **Home Key** . You can also tap (or press) the **Back Key**  to close it.



**NOTE** The Applications screen closes automatically when you tap an icon to open its application. Dragging an icon onto your Home screen also closes the Applications screen automatically.

## Customizing the Applications screen

The phone includes a wide variety of applications and you can download even more applications to your device. You can customize these items on the Applications screen for faster, more convenient access (less scrolling) to the applications you use most often.




### Applications screen options

You can change the look of your Applications screen.

1. From the Home screen, tap the **Apps Key**  in the Quick Keys bar.
2. Tap (or press) the **Menu Key**  to access the following options:
  - ▶ **Search:** Tap to quickly search for an application.
  - ▶ **Sort by:** Tap to sort your applications either in alphabetical order or by downloaded date.
  - ▶ **Show small/large icons:** Tap to change the application icons to either small or large, then tap **Yes** to set your choice.
  - ▶ **Apps wallpaper:** Tap to change the wallpaper background. Scroll horizontally to view all of your choices, tap the one you want, then tap **Apply**.
  - ▶ **Hide/Show Apps:** Tap to set which application icons will be displayed in your Applications screen. Checkmark the icons you want to hide, then tap **OK**.

## Rearranging the Applications screen icons




You can rearrange the order of the icons on the Applications screen to provide more convenient access to the applications you use the most.

1. From the Home screen, tap the **Apps Key** .
2. Tap the **Apps** tab at the top of the screen (if necessary), then tap **Settings**  at the top right of the tab bar. The **Settings icon** changes to a checkmark .
3. Touch and hold the Application icon you want to move, drag it to its new position, then lift your finger. The remaining icons shift to the right.

**NOTE** If you drag the application icon onto another application icon, it creates a folder with both of the applications in it.

## Checking application information

To check on an application's detail information from the Applications screen:

1. From the Home screen, tap the **Apps Key** .
2. Tap the **Apps** tab (if necessary), then tap the **Settings icon**  at the top right of the tab bar. The **Settings icon** changes to a checkmark .
3. Tap any of the Application icons to display an information dialog box.
4. Tap **OK** to exit.

## Opening and Switching Applications


Multi-tasking is easy with Android™ because open applications keep running even when you open another application. There's no need to quit an application before opening another. You can use and switch among several open applications. Android™ manages each application, stopping and starting them as needed, to ensure that idle applications don't consume resources unnecessarily.

### Opening an application


- Open an application simply by tapping its icon on the screen.

**TIP** You can customize your Home screen with the application icons you use most often. Applications are located on the Applications screen, but you can copy any application icon to your Home screen for faster, more convenient access. No matter where the icon is, on the Applications screen or your Home screen, just tap it to open and use it.



## Opening multiple applications

1. Tap an application icon to open it.
2. Tap (or press) the **Home Key** .

**NOTE** If the application icon you want is on your Home screen, simply tap the icon to open and use it.

3. From the Home screen, tap the **Apps Key**  in the Quick Keys bar.
4. Tap the icon for the other application you want to open.

## Switching between multiple applications

1. Tap the **Recent Apps Key** . A screen opens and displays a vertically scrolling list of all of the applications that are currently open.
2. Tap the application preview of the application you want to use to open it or tap (or press) the **Back Key**  to return to the current screen.

Swipe up or down to view the entire list of open applications.



Click an application icon to the right or left to remove it from the list.

Tap an icon to use it. You can also tap the screen background to return to the Home screen.

## Adding items to the Home screen

Customize your Home screen with the applications you use most often.

## Applications screen

1. From the Home screen, tap the **Apps Key**  in the Quick Keys bar.


**NOTE** You can tap the tabs at the top of the screen to place a download or widget icon on the Home screen.


2. Touch and hold the icon you want to add to your Home screen. The Applications screen will close so that you can place the icon on the Home screen.

3. Drag the icon to where you want it on the screen, then lift your finger.

### Customizing an application icon on your Home screen

You can create your own custom application icon(s) using the images in your Gallery.

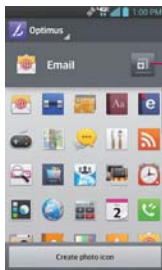

1. Touch and hold the icon you want to customize, then release the icon. An editing icon  appears at the upper right side of the application icon.
2. Tap the application icon.
3. Tap the icon design you want from the available choices.

OR

- ▶ Tap **Create photo icon**, tap **Select from Gallery**, tap the album, then tap the image you want to use for the application. Crop the image, then tap **OK**.

OR

- ▶ Tap **Create photo icon**, tap **Take photo** to open the Camera application, then capture the image you want. Crop the image, then tap **OK**.

**NOTE** The icon image change only affects your Home screen.

**TIP** If an icon you placed can be resized, you will see a blue box around the icon after you touch, hold and release it. Drag the edges of the box to resize it.

## Changing an icon into a widget


Some application icons can be changed into a convenient widget to use on your Home screen.

1. Touch and hold an app icon on the Home screen, then release it.
  - ▶ A blue frame appears around the icon if it can be resized and changed into a widget (if it can't, only the Edit icon is displayed).
2. Drag the corners of the frame to make it larger and change it into a widget.
  - ▶ Touch and hold the widget, then release it again to change its size if necessary.
  - ▶ You can also change it back into a normal icon by dragging the corners of the resizing frame back in.

## Moving items to other Home screen canvases

You can place items on any of the Home screen canvases.



- ▶ **Drag** Touch and hold, then drag the item to the left or right edge of the screen to advance to the other screen canvases before lifting your finger.
- ▶ **Tilt** Touch and hold an item, then tilt the device to move it to one of the Home screen canvases in that direction, then lift your finger.

**NOTE** To be able to use the Tilt method, the **Move Home screen items** checkbox needs to be checkmarked. From the Home screen, tap (or press) the **Menu Key**  > **Settings** > **Gestures** > **Move Home screen items** checkbox.

## Working with Menus

There are two kinds of Android menus: Options menus and Context menus.

### Options menus


Options menus contain tools that apply to the activities of the current screen or application, not to any specific item on the screen. To open the available Options menu, tap (or press) the **Menu Key** . Not all applications have Options menus; if you tap (or press) the **Menu Key**  on a screen that has no Options menu, nothing will happen.





## Context menus

Context menus contain options that apply to a specific item on the screen. To open a Context menu, touch and hold an item on the screen. Not all items have Context menus. If you touch and hold an item that has no Context menu, nothing will happen.

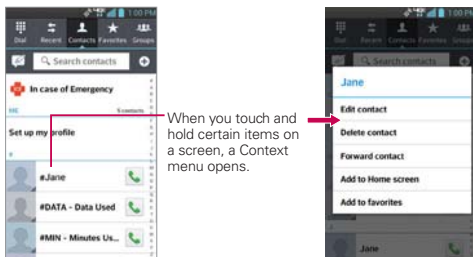

## Managing Notifications


Notification icons report the arrival of new messages, calendar events, alarms, as well as ongoing events, such as when you are on a call. When you receive a notification, the notification icon will be displayed in the Status Bar. You can open the Notifications panel to view a list of all of your recent notifications. Depending on your settings, you may hear a notification sound and/or the phone may vibrate.

## To open the Notifications panel

Touch and drag the Status Bar to the bottom of the screen.

The Notifications panel displays a list of your current notifications, organized into ongoing and event-based notifications. It also includes two icon bars. The Quick Settings bar allows you to quickly and easily change commonly used settings. The QSlide apps bar allows you to view an application in a small, moveable window similar to picture-in-picture on a TV over an open window.

**NOTE** You can also access the complete Settings menu from this panel by tapping the **Settings** icon .

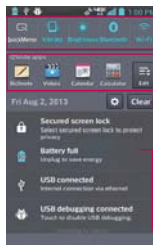

**Quick Settings Bar**  
Displays up to 15 Quick settings icons. Flick right or left to scroll through the list.

**QSlide Apps Bar**  
Displays up to 4 QSlide applications. Tap an icon to open it in a small window.

**Clear button**  
Tap here to clear your list of event-based notifications.


Tap a notification to open it.

## To respond to a notification

1. Open the Notifications panel. Your current notifications are listed in the panel, each with a brief description.
2. Tap a notification to view it.



The Notifications panel will close and the application that corresponds to your response will open. For example, new voicemail notifications dial your voicemail box and Gmail notifications open the Gmail application so you can read your new messages.

## To clear all notifications

1. Open the Notifications panel.
2. Tap the **Clear** button  on the right side of the screen.

All event-based notifications will be cleared; ongoing notifications will remain in the list.

## To close the Notifications panel

Touch and drag the Notification Bar handle  at the bottom of the Notifications panel to the top of the screen or just tap (or press) the **Back Key** . The panel will also close when you touch a notification.


























**NOTE** The Notifications Bar handle at the bottom of screen is sensitive to the drag motion so just beginning the upward drag will close the panel.

## Quick Settings on the Notifications panel



The top of the Notifications panel includes a Quick Settings bar. The icons in this bar provide a quick, convenient way to change settings without accessing any applications. If you set more than four icons on the bar, swipe left and right to scroll through the list.

### Using the Quick Settings

Tap any of the Quick Settings icons to toggle through the available settings:




- ▶ QuickMemo activates the ability to screen capture and then write on the image.
- ▶ Sound , Vibrate , and Silent .
- ▶ Bluetooth On  and Bluetooth Off .
- ▶ GPS On  and GPS Off .
- ▶ Rotation On  and Rotation Off .
- ▶ Airplane mode On  and Airplane mode Off .
- ▶ Brightness Full , Half , Off , and Manual .
- ▶ Wi-Fi On  and Wi-Fi Off .
- ▶ Quiet mode On  and Quiet mode Off .
- ▶ Screen timeout 30 seconds , 5 minutes  or 15 minutes .
- ▶ QSlide On  and QSlide Off .
- ▶ Wireless storage .

**NOTE** If necessary, scroll horizontally to see all of the available icons.

**NOTE** Tap the **Settings** icon  (on the left side of the **Clear** button ) to access the complete Settings menu. You can also touch and hold a setting to directly access its menu.

## Customizing the Quick Settings bar

You can set the order of the icons displayed in the Quick Settings bar as well as which icons are displayed.

1. Open the Notifications panel, then tap the **Edit** icon  in the Quick Settings bar.
  - ▶ Drag one of the icon handles  at the right side of the screen to move its icon to another position in the Quick Settings bar.
  - ▶ Tap **More**  in the upper right-hand corner of the screen to view all of the available icons. Checkmark each of the items you want to appear in the Quick Settings bar.

**NOTE** Changing the checkmarks reorganizes the icons in the Quick Settings bar.



2. Tap (or press) the **Back Key**  to return to the Notifications panel.




## QSlide apps on the Notifications panel

The QSlide apps bar is displayed in a bar on the Notifications panel below the Quick Settings bar. These icons provide a quick, convenient way to multi-task on the same screen (similar to picture-in-picture on a TV). QSlide displays a small application window on the screen that can be moved, resized, or made transparent.


### Using the QSlide apps

Tap any of the QSlide apps in the bar to activate it. When activated, the QSlide feature opens the application in a window in the foreground, allowing you to access other applications in the background.

- ▶ Drag the QSlide title bar to move it to another position on the screen.
- ▶  Drag a corner of the QSlide window to resize it.
- ▶  Move the circle on the slider bar to the left to make it transparent. This will allow you to interact with items beneath the transparent QSlide window. Move the slider back to the right to use the QSlide window again.




- ▶ Tap the **QSlide** icon  at the upper-left corner of the title bar to open the application in full screen view. To go back to QSlide view from portrait view, tap the **Menu Key** , then tap **QSlide** or the **QSlide** icon  at the top of the screen.

**NOTE** You can also tap the application anywhere in the QSlide window to automatically display the application in full screen view.

- ▶ Tap  at the upper-right corner of the title bar to close the QSlide window.

## Customizing the QSlide apps bar

You can set the order of the icons displayed in the QSlide apps bar, as well as which icons are displayed.

1. Open the Notifications panel, then tap the **Edit** icon  on the right side of the QSlide apps bar.
  - ▶ Drag one of the icon handles  at the right side of the screen to move its icon to another position in the QSlide apps bar.
  - ▶ Tap **More**  in the upper right corner of the screen to view the available QSlide apps. Checkmark the ones you want to display and remove the checkmark for the ones you want to remove.

**NOTE** Changing the checkmarks automatically reorganizes the icons. When a removed icon is reactivated, it's placed at the bottom of the available list.

2. Tap (or press) the **Back Key**  to return to the Notifications panel.



## Searching Your Phone and the Web

You can search for information on your phone and on the web by using the Google search application.

Some applications, such as Gmail, Contacts, and Chrome have the ability to search for contents within those specific applications.

You can conduct the search by typing in the search terms or saying what you're looking for. As you enter text, the search application can provide suggestions so you don't necessarily have to type out your full request.

### Phone and Web search using text entry

1. Touch and hold the Home Key  or tap the **Search Widget**  on your Home screen.

Google Search will open automatically.





**Voice Search**

Tap here to search by voice.

2. Enter the text you're searching for in the search field.




As you type, search results from your phone, previous search terms, and web search suggestions appear. Tap an item to activate that search result.

3. Tap the **Search Key**  on the on-screen keyboard (or press the **Return Key**  on the QWERTY Keyboard) to use the Google application to search for the text you entered in the search field.

### Search preference settings



You can use the Search preference settings to configure some aspects of web search (for example, whether it makes suggestions below the search field as you type) and what phone features you want to include in your searches. To access these settings:

1. From the Search application, tap (or press) the **Menu Key**  > **Settings**.
2. Tap **Phone search**.
3. Tap an item to checkmark and enable it (or remove the checkmark) to set your search preferences.

## Locking the Screen

You can lock your screen so that only you can unlock it to make calls, access your data, buy applications, and prevent unauthorized use.

### Setting a Screen Lock for the First Time

1. From the Home screen, tap the **Apps Key**  > **Settings**  > **Lock screen**.

**NOTE** From this screen you can also select the **Wallpaper**, **Clocks & shortcuts**, and/or **Screen effect** for your Lock screen. The Clocks & shortcuts and Screen effect only apply to the Swipe Lock screen.

2. Tap **Select screen lock**.
3. Tap **None**, **Touch and hold**, **Swipe**, **Face Unlock**, **Pattern**, **PIN**, or **Password**.

**None:** No lock screen is enabled so the screen will never be locked from use.

**Touch and hold:** Unlocks the screen when you touch and hold the unlock button in the center of the Lock screen.

**Swipe:** A swipe motion in any direction on the touchscreen will unlock the screen. This is the default Lock screen.

**Face Unlock:** Unlocks the screen using face recognition. The phone captures your image to identify you. Keep in mind that Face Unlock is less secure than a pattern, PIN or password because it uses generalized shape and dimension to verify your face.

**Pattern:** Unlocks the screen using a pattern you draw with your finger. The first time you set an unlock pattern, you will see a tutorial with instructions on how to create it. Read the tutorial and tap **Next**. Draw your pattern (connect at least 4 dots) and tap **Continue**. Then redraw your pattern and tap **Confirm**.

**NOTE** Follow the on-screen instructions to create a backup PIN number in case you forget your pattern.

**PIN** Unlocks the screen with a number sequence. Enter a PIN (at least 4 digits) and tap **Continue**. Re-enter your PIN and tap **OK** to confirm it.





**Password** Unlocks the screen with an alphanumeric sequence. Enter a password (at least 4 characters) and tap **Continue**. Re-enter your password and tap **OK** to confirm it.

From then on, any time you want to turn the phone on or unlock the screen, you will need to perform the unlock action you set (touch and hold, swipe, face recognition, pattern, PIN, or password) to gain access to it.



- NOTES**
- You have 5 opportunities to enter your unlock pattern, PIN or password. If you used all of the opportunities, you can try again after 30 seconds.
  - When you can't recall your unlock pattern:
    - If you've created a Google Account on the phone, tap **Forgot pattern?** at the bottom of the screen. Then you are required to sign in with your Google Account or enter your backup PIN to unlock your phone.
    - If you can't remember the backup PIN and you haven't created a Google Account on the phone, you need to perform a factory reset. Refer to the Hard Reset (Factory Reset) section on page 52 (Caution: If you perform a factory reset, all user applications and user data will be deleted. Please remember to back up any important data before performing a factory reset).

## Disabling the screen lock

If you change your mind about using a lock sequence to secure your phone, you can disable it.



1. From the Home screen, tap the **Apps Key**  > **Settings**  > **Lock screen**.
2. Tap **Select screen lock**.
3. Tap **None**.

## Changing your pattern

1. From the Home screen, tap the **Apps Key**  > **Settings**  > **Lock screen**.
2. Tap **Select screen lock**.
3. Draw your current unlock pattern.
4. Tap **Pattern** to change it.
5. You're prompted to draw and redraw your new pattern.

6. Enter a Backup PIN and tap **Continue**. Then confirm your Backup PIN and tap **OK**.

### Changing your Lock Screen PIN or Password

1. From the Home screen, tap the **Apps Key**  > **Settings**  > **Lock screen**.
2. Tap **Select screen lock**.
3. Enter your current unlock sequence, then tap **Next**.
4. Tap **PIN** to change your number lock sequence or tap **Password** to change your alphanumeric lock sequence.
5. You're prompted to enter and reenter your new lock sequence.


From then on, you will need to enter that sequence and tap **OK** to unlock the screen.

- NOTES**
- You have 5 opportunities to enter your unlock PIN or password. If you used all of the opportunities, you can try again after 30 seconds.
  - If you have set up a Microsoft Exchange account, you might only be able to use a password for your screen lock.

### Lock timer



If a security lock is enabled, touch **Security lock timer** to set the delay time after the screen darkens due to inactivity before the screen automatically locks and requires you to enter your unlock sequence.

### Power button instantly locks

If a security lock is enabled, checkmark the **Power button instantly locks** checkbox to enable this function. This will override the Security lock timer setting and lock the screen as soon as the **Power/Lock Key**  is pressed.






### The Lock screen wallpaper

You can set the Lock screen wallpaper separately from your Home screen wallpaper.



1. From the Home screen, tap the **Apps Key**  > **Settings**  > **Lock screen**.
2. Tap **Wallpaper**.

- ▶ Tap **Gallery** to select an image from your Gallery.
- ▶ Tap **Wallpaper gallery** to select one of the available wallpaper images.

## The default Lock screen


The default Lock screen is **Swipe**. Press the **Power/Lock Key**  to illuminate the touchscreen if it has timed-out. The **Swipe** default Lock screen is displayed, but you can still conveniently check the date, time, and Status Bar icons. You can drag the Status Bar down to open the Notifications Panel without unlocking the screen. In addition, you can also quickly access four applications (the **Phone** application , the **Messaging** application , the **Google** application , and the **Camera** application ) without fully unlocking the screen. Simply swipe the icon upward to open and use it.





## Changing the items on the default Lock Screen

1. From the Home screen, tap the **Apps Key**  > **Settings**  > **Lock screen**.
2. Tap **Clocks & shortcuts**.
  - ▶ To change the Quick access icons, tap one of the icons at the bottom of the screen, then tap the application you want to replace it with.
  - ▶ To change the date and time format, swipe left or right until the one you want is displayed.
3. Tap **Save** to save these settings.

## Shortcut icons when using a Pattern

Similar to the Swipe screen unlock option, the Pattern unlock screen option also allows access to four application shortcuts.







1. Press the **Power/Lock Key** , then draw your unlock pattern but pause on the last dot in the pattern.


2. Tap one of the application shortcuts displayed (the **Phone** icon , the **Messaging** icon , the **Google** icon , or the **Camera** icon ) to open and use it.

## Hard Reset (Factory Reset)

If you forget your lock sequence and backup PIN, you will have to perform a hard reset to gain access to your phone.

**WARNING** Performing a hard reset deletes all of your user data, which includes pictures, videos, and music saved to your internal memory. Please make sure to back up your information prior to performing a hard reset.

1. Turn the phone off.
2. Press and hold the following keys at the same time: **Volume Down Key**  + **Power/Lock Key** .
3. Release the keys when the **FACTORY HARD RESET** screen is displayed.
4. Press the **Power/Lock Key**  to continue or one of the **Volume Keys**  to cancel.
5. Press the **Power/Lock Key**  once more to confirm or one of the **Volume Keys**  to cancel.

**NOTE** You can access the Factory data reset menu via the UI through the Settings menu. From the Home screen, tap the **Menu Key**  > **Settings** > **Backup & reset** > **Factory data reset**.

## Customizing the Home Screen

You can personalize your Home screen by adding application icons, shortcuts, widgets, and other items to any Home screen canvas. You can also change the wallpaper.

### To add an item to the Home screen

1. Go to the Home screen canvas where you want to add the item.
2. Touch and hold an empty spot on the Home screen to split the screen to display your Home screen canvases on top and the Applications screen on the bottom.

**NOTE** If the canvas you've selected is full, make space by deleting or moving items, or switch to another canvas where there is space for new items.

3. The following category tabs appear at the bottom of the screen: **Apps**, **Downloads**, **Widgets** and **Wallpapers**. Tap the one that corresponds to the item you want to add.



Slide the screen right or left to view different Home screen canvases.

#### Item List

Touch and hold an icon, then drag it onto the canvas where you want it.

#### Category Tabs

Tap one of the item categories you want to add to a Home screen canvas.



4. Swipe left and right to scroll through the available choices in the category tab you selected. Touch and hold the item you want, then drag it onto the Home screen canvas, or simply tap it to automatically place it on the canvas.

## To move an item on the Home screen


1. Touch and hold the item.
2. Drag the item to a new location on the screen.  
Pause at the left or right edge of the screen to drag the item onto the next available Home screen canvas.
3. When the item is where you want it, lift your finger.

**NOTE** If **Move Home screen items** is enabled in the Gestures settings, simply tilt the device in the direction you want to move the item and it will slide to the canvases in that direction. Lift your finger when it arrives at the canvas you want.

## To remove an item from the Home screen

1. Touch and hold the item.
2. Drag the item to the **Remove** icon  at the top of the screen.
3. When the **Remove** icon changes to , lift your finger.

### To change the look of your Home screen


From the Home screen, tap (or press) the **Menu Key**  > **Home screen settings** to access the following settings to personalize your Home screen.

- ▶ **Theme:** Sets the overall ambiance of the Home screen. Choose from Optimus, Biz, Cozywall, and Marshmallow.
- ▶ **Screen swipe effect:** Sets how the items on the Home screen canvases slide from one to the next. Choose from Basic, Breeze, Accordion, Panorama, Carousel, Layer, and Domino.
- ▶ **Wallpaper:** Sets the wallpaper. Choose from Gallery, Live Wallpapers, and Wallpaper gallery.
- ▶ **Allow Home screen looping:** Checkmark this setting so that the Home screen canvases rotate continuously (not stopping at the far left or right canvas).
- ▶ **Allow apps list looping:** Checkmark this setting so that the Application screen canvases rotate continuously (not stopping at the far left or right canvas).
- ▶ **Help:** Provides tips on how to customize the Home screen and manage it.


## QuickMemo™

The QuickMemo™ feature allows you to create memos and capture screen shots. You can use QuickMemo to easily and efficiently create memos during a call, with a saved picture or on the current phone screen.

### To create a QuickMemo

- ▶ Drag the Status Bar downward, then tap the QuickMemo icon  in the Quick Settings bar.




1. Drag the Status Bar downward then tap the QuickMemo icon .



2. Tap an option at the top of the screen (e.g., pen type and color) to create your memo.




3. When your memo is complete, tap **Save**  to save it to your Gallery.

**SHORTCUT** You can also access QuickMemo by pressing and holding both Volume Keys at the same time for one second.


**NOTE** Please use a fingertip while using the QuickMemo feature. Do not use your fingernail (or any other rigid object).


### Using QuickMemo options


The QuickMemo options bar at the top of the screen allows you to easily create memos. Tap the options bar tab  to access the QuickMemo option icons, and tap it again to hide them.




**Overlay** - Tap to keep the memo on top and continue using other phone features.


**NOTE** Tap the front touch keys icon  in the bottom left corner of the screen to enable or disable the front touch keys at the bottom of the device while using the QuickMemo feature.


 **Sticky note** - Tap to toggle between the current background screen or a blank page.

 **Undo** - Tap to undo the most recent action.

 **Redo** - Tap to redo the most recently deleted action.

 **Pen** - Tap to select the pen type and color. Tap the memo background to close the pen selection.

 **Erase** - Tap to use the eraser to erase any part of the memo that you created.



 **Share** - Tap to share the memo with others via any of the available applications.

 **Save** - Tap to save the memo you've created to your Gallery.

- ▶ Tap (or press) the **Back Key**  to exit the QuickMemo feature.

## Viewing saved QuickMemos

QuickMemos are saved in the Gallery application.

From the Home screen, tap the **Apps Key**  > **Gallery** , then tap the **QuickMemo** album.




## Connecting Quickly With Your Contacts

As you build up your list of contacts on your phone, you can use the Quick Contact for Android feature to quickly chat, email, text message, place a call, or locate your contacts. Quick Contact for Android is a special set of icons that you can use to quickly and easily connect with a contact.



- Open your Contacts list and tap the contact's picture.

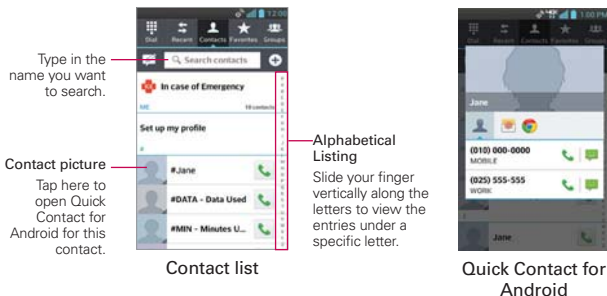Tapping the contact's picture opens a Quick Contact dialog box displayed directly below the contact's name. It displays icons for all of the ways you can communicate with that contact. The available icons depend on the information you have saved for that contact.



- Tap a Quick Contact icon to communicate with the contact. Depending on the icon you've tapped, a different application will open.


**TIP** Adding a shortcut for a contact to your Home screen allows you to open Quick Contact for that contact without opening the **Contacts** application. You can also add a shortcut to your Home screen for Direct dial or Direct message for a contact.

- To create a contact shortcut, touch and hold the contact entry, then tap **Add to Home screen** in the Context menu that appears.
- To create a Direct dial shortcut, tap the contact entry, tap (or press) the Menu Key , tap **Add to Home screen** in the Options menu, then tap **Direct dial**.
- To create a Direct message shortcut, tap the contact entry, tap (or press) the Menu Key , tap **Add to Home screen** in the Options menu, then tap **Direct message**.

## Connecting with VuTalk


VuTalk is another way to chat with your friends in realtime using notes, pictures, and video.

### Register VuTalk Before Use

1. Open the **Contacts** application.
2. Tap .
3. Checkmark the boxes to agree to the terms and conditions, then tap **OK**.

**NOTE** Both parties need to be registered in VuTalk to use this feature.

### To access VuTalk

1. Open the **Contacts** application.
2. Tap the **VuTalk** icon  (to the left of the search box) to display your list of VuTalk contacts.
3. Tap the VuTalk contact you want to chat with, then draw or handwrite as you want.



## Connecting to Wi-Fi Networks

Wi-Fi is a wireless networking technology that can provide Internet access at distances of up to 100 meters, depending on the Wi-Fi router and your surroundings.

To use Wi-Fi on your phone, you must connect to a wireless access point. Some access points are open and you can simply connect to them. Others are hidden or implement other security features, so you must configure your phone so it can connect to them.

Turn off Wi-Fi when you're not using it, to extend the life of your battery.



The following Status Bar icons indicate your Wi-Fi status.

	Connected to a Wi-Fi network (waves indicate connection strength).
	Wi-Fi Direct is on

When you connect to a Wi-Fi network, the phone obtains a network address and other information it needs from the network, using the DHCP protocol. To configure the phone with a static IP address and other advanced settings, from the Wi-Fi settings screen, touch and hold the connected network. Tap **Modify network** in the Context menu that appears, then checkmark the **Show advanced options**.

### To turn Wi-Fi on and connect to a Wi-Fi network

1. From the Home screen, tap the **Apps Key**  > **Settings**  > **Wi-Fi**.

If the Wi-Fi button  is on the left and the icon is grey-colored, drag the button to the right  to turn on Wi-Fi. Your device scans for available Wi-Fi networks.

2. Tap a network, then tap **Connect** to connect to it.
  - If the network is open, you can connect to the network directly by tapping the network name.
  - If the network is secured, you will be prompted to enter a password (Ask your network administrator for details).





## Connecting to Mobile Networks

When you buy your phone and sign up for service, your phone is configured to use your provider's mobile networks for voice calls and for transmitting data.

Different locations may have different mobile networks available.

Initially, your phone is configured to use the fastest mobile network available for data. You can also configure your phone to access a different set of networks entirely, or to behave in specific ways when roaming.



The following icons in the Status Bar indicate which kind of data network you're connected to and the network signal strength.

	Connected to the 4G network (LTE).
	Connected to the EVDO network (eHRPD/EVDO revA).
	Signal strength - more bars that are lit, the stronger the wireless signal.
	Connected to another wireless service provider's network (roaming).

When connected to slower networks, you may want to postpone using your phone for data-intensive tasks until you are connected to a faster network again or find a Wi-Fi network to connect to.

### To disable data when roaming

You can prevent your phone from transmitting data over other carriers' mobile networks when you leave an area that is covered by your carrier's networks. This is useful for controlling expenses if your cell plan doesn't include data roaming.

1. From the Home screen, tap the **Apps Key**  > **Settings**  > **Tethering & Networks** > **Mobile networks** > **Global data roaming access**.
2. Tap **Global data roaming** to remove the checkmark from the box. You can still transmit data with a Wi-Fi connection when **Global data roaming** is disabled.

- When you're connected to a network, you can tap the network name in the Wi-Fi settings screen for details about the speed, security, address, and related settings.

### To add a Wi-Fi network

You can add a Wi-Fi network so the phone will remember it, along with any security credentials, and connect to it automatically when it is in range. You can also add a Wi-Fi network manually if it does not broadcast its name (SSID) or if you want to add a Wi-Fi network when you are out of its range. To add a secured network, you need to contact the network's administrator to obtain the password or other required security credentials.

1. Turn on Wi-Fi, if it's not already on, then tap **Wi-Fi** in the Settings menu.
2. From the Wi-Fi settings screen, tap **ADD NETWORK** at the bottom right corner of the screen.
3. Enter the **Network SSID** (name) of the network. If the network is secured, tap **Security** and tap the type of security deployed on the network.
4. Enter the required passwords and security credentials.
5. Tap **Save** to save the information.

The phone will connect to the wireless network. Any credentials that you entered are saved, so you are connected automatically the next time you come within range of this network.

### To forget a Wi-Fi network

You can make the phone forget about the details of a Wi-Fi network that you added. For example, if you don't want the phone to connect to it automatically or if it's a network that you no longer use.



1. Turn on Wi-Fi, if it's not already on, then tap **Wi-Fi** in the Settings menu.
2. In the Wi-Fi settings screen, touch and hold the name of the network that you want to forget.
3. Tap **Forget network** in the Context menu that appears.

## USB connection

USB connection is a feature that allows your device to connect to a PC using a USB Cable.

- ▶ Allows the phone to be used as mass storage when a microSD card (sold separately) is present in the device. It also allows you to transfer unprotected content from the phone to the PC and vice versa.

### To select a USB mode for a connection

1. From the Home screen, tap the **Apps Key**  > **Settings**  > **PC connection** > **USB connection type**.
2. Tap **Media sync (MTP)**, **Internet connection**, or **Camera (PTP)** to connect to the PC.
  - ▶ Tap **Charge only** to use only the charging function and not the USB function.

### Prompt for connection mode

You can choose to be asked to confirm the USB connection when connecting to a computer.

Checkmark the **Ask on connection** checkbox in the USB connection settings to display the USB selection window each time you connect your device to a PC.

### Using the Status Bar to change the connection mode setting

The Status Bar displays the current USB connection mode so you can easily change the setting as needed.



When connected via USB, the current USB connection mode also appears on the Notifications panel. Touch the connection setting to display a screen where you can change the USB connection mode.

**NOTE** If the **Ask on connection** checkbox is marked, the pop-up message is only provided during USB connection, but is not provided in the notification area.

## microSD Card



A microSD card can be used to provide additional file storage for your device. It is an optional accessory that is sold separately. This device supports microSD cards up to 64GB.

### Viewing Memory in the microSD Card

1. From the Home screen, tap the **Apps Key**  > **Settings**  > **Storage**.
2. Review the available information.
  - The storage capacity page is divided into two sections: Internal Storage and SD Card.

### Formatting the microSD Card

Formatting a microSD card permanently removes all of the files stored on the card.

1. From the Home screen, tap the **Apps Key**  > **Settings**  > **Storage**.
2. Tap **Unmount SD card**, then tap **OK** to confirm and release the microSD card from device use. SD card icon appears briefly on the Status Bar to indicate an unmounted microSD card.
3. Once released, touch **Erase SD card** (twice) > **Erase everything**.
  - Once completely formatted, the card is automatically re-mounted (reconnected for use by the device).

**NOTE** The formatting procedure erases all of the data on the microSD card, after which the files CANNOT be retrieved. To prevent the loss of important data, please check the contents before you format the card.

### Connecting Your Device to Your Computer

Before using your device's mass storage capabilities, you need to prepare your device's data services to synchronize with your desktop or laptop computer. Once you have connected the device to the computer, you can transfer your data to or from the device memory.

#### To connect your device to a computer via USB

1. Use the USB Cable that came with your phone to connect the phone to a USB port on your computer.

2. Open the Notifications panel, then tap **USB connected**.
3. Tap the connection mode you want to use to connect to the PC. Choose from the following options: **Charge only**, **Media sync (MTP)**, **Internet connection**, and **Camera (PTP)**.




### **Using Media sync (MTP) or Camera (PTP) mode**

When you connect the phone and PC using a USB Cable and set your device's USB connection mode to Media sync (MTP) or Camera (PTP) mode, you will see one portable device for MTP or imaging device for PTP on the PC. You can copy files to/from the removable microSD card.




## **Sending data from your phone using Bluetooth**

### **Sending data using Bluetooth**

You can use Bluetooth to send data by opening a corresponding application. Your device automatically accesses the Bluetooth function without you having to access the Bluetooth menu as on most other mobile phones.

- ▶ **Sending pictures:** Open the **Gallery** application, then open the picture. Tap the **Share icon**  at the top of the screen, then tap **Bluetooth**. When Bluetooth is turned on, your device automatically searches for available devices. Tap **Search for devices**, if necessary. Tap the device you want to send data to from the list.
- ▶ **Exporting contacts:** Open the **Contacts** application, then tap the Contact you want to export. Tap (or press) the **Menu Key**  > **Share** > **Bluetooth**. Check if Bluetooth is turned on, your device automatically searches for available devices. Tap **Search for devices**, if necessary. Tap the device you want to send data to from the list.
- ▶ **Sending multiple contacts:** Open the **Contacts** application. Tap (or press) the **Menu Key**  > **Share**. Tap the corresponding checkbox for each of the entries to send (or tap the **Select all** checkbox at the top of the screen), then tap **Attach** > **Bluetooth**. When Bluetooth is turned on, your device automatically searches for available devices. Tap **Search for devices**, if necessary. Tap the device you want to send data to from the list.



If you want to search for this phone from other devices, from the Home screen, tap the **Apps Key**  > **Settings**  > **Bluetooth**. Drag the switch  to the right and tap the checkbox to the right of your device's name. Your device will be able to be detected by other devices for 120 seconds.






## Placing and Ending Calls




You can place and end calls using the **Phone** application. Manually dial calls using the **Dial** tab. Dial from your phone's memory using the **Recent** calls tab, the **Contacts** tab, the **Favorites** tab, or the **Groups** tab.

### To open the Phone application






- ▶ From the Home screen, tap the **Phone Key**  in the Quick Keys bar.

### Phone application tabs


The **Phone** application tabs (**Dial** , **Recent** , **Contacts** , **Favorites** , and **Groups** ) at the top of the screen can be changed to suit your needs. You can rearrange the order or delete Favorites or Groups.

1. From the Home screen, tap the **Phone Key**  in the Quick Keys bar.
2. Tap (or press) the **Menu Key**  > **Edit tabs**.
  - ▶ Drag a tab handle  to move it to the position where you want it in the list.
  - ▶ Tap the Favorites or Groups checkbox to remove the checkmark and delete it from the Phone application tabs list. Checkmark it to display it in the tab list again.
3. When you're finished making changes, tap **Save**.

### Moving between the Phone application tabs

Tap any of the **Phone** application tabs (**Dial** , **Recent** , **Contacts** , **Favorites** , and **Groups** ) at the top of the screen to view that tab. You can also flick horizontally on the screen to scroll to the other tabs. The blue slide triangle on the tab bar indicates the current tab.

## To place a call by dialing

1. From the Home screen, tap the **Phone Key**  in the Quick Key bar to open the **Dial** tab of the **Phone** application.

### Dial Tab

Displays the dialpad.

### Call Key

Tap here to dial the number that you entered manually.

### Voice Dialer Key

Tap here to dial by saying the number.



### Delete Key

Tap here to delete incorrect number(s) (appears after you begin entering numbers).

Touch and hold **0 +** to enter the plus (+) symbol to dial an international number.



### Message Key

Tap here to send a message to the number that you entered.


### Voicemail Key




Tap here to access your voicemail feature.

2. Enter the number you want to call on the dialpad.

- If you enter a wrong number, tap the **Delete Key**  to erase digits one by one.
- To erase the entire number, touch and hold the **Delete Key** .
- To dial an international number, touch and hold **0 +** to enter the plus (+) symbol. Then enter the international prefix for the country, followed by the full phone number.

3. Tap the **Call Key**  to dial the number that you entered.







- Press the **Volume Keys** to adjust the call volume.
- Use the on-screen buttons to enter additional numbers, place the call on hold and take an incoming call, add another call, use the speakerphone, end the call, and other options.
- You can use other phone features while the call is underway. If you open another application, the **Call icon**  appears in the Status Bar for the duration of the call.


**NOTE** If you opened other applications while on a call, you'll need to return to the Call screen to end the call. To return to the Call screen, you can tap (or press) the **Home Key** , then the **Phone Key**  or drag the Notifications panel down and tap **End call** . You can also tap the Contact's name or number at the top right corner of the Home screen.

## To end a call

- ▶ Simply tap the **End Key**  on the Call screen to end the call.


If you accessed other device functions while the call was in progress, there are several ways to return to the Call screen to end the call.

- ▶ Tap (or press) the **Home Key** , tap the **Phone Key**  in the Quick Keys bar, then tap the **End Key**  on the Call screen.
- ▶ Tap(or press) the **Home Key** , tap the Contact's name or number at the top right corner of the Home screen, then tap the **End Key**  on the Call screen.
- ▶ Drag the Notifications panel down, then tap **End call** .

**NOTE** You can also press the **Power/Lock Key**  on the right side of the phone if you activated this feature in the settings.

## Airplane mode

Some locations may require you to turn off your phone's wireless connections by placing your phone in Airplane mode.




1. Press and hold the **Power/Lock Key** .
2. Tap **Turn on Airplane mode** in the dialog box that appears.

**NOTE** The Wireless & networks settings menu also has a switch to enable or disable Airplane mode. Airplane mode can also be toggled on or off in the Notifications panel.


## Answering or Rejecting Calls

When you receive a phone call, the Incoming call screen opens with the caller ID and any additional information about the caller that you have saved in the Contacts list. All incoming calls are recorded in the Recent tab.



### To answer a call


- ▶ If the screen is unlocked, simply tap the **Answer Key** .
- ▶ If the screen is locked, swipe the **Answer** icon  in any direction to answer the call.
- ▶ If you were already on a call, tap the **Answer Key**  to place the first call on hold while you answer the new call.

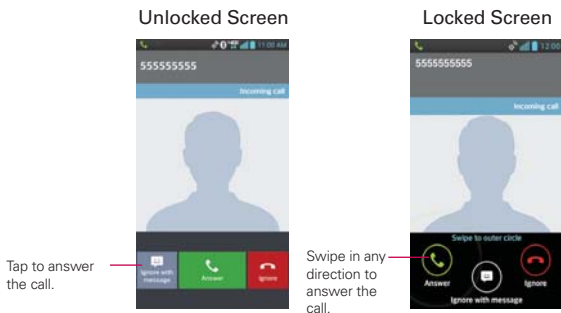**NOTE** To silence the incoming call ringer, press either of the **Volume Keys**.




### To ignore a call and divert it to voicemail

- ▶ If the screen is unlocked, simply tap the **Ignore Key** .
- ▶ If the screen is locked, swipe the **Ignore** icon  in any direction to ignore the call.
- ▶ The caller is sent directly to your voicemail box to leave a message.

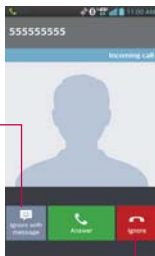**Unlocked Screen**

Tap to send a quick message to the caller and forward them to your voicemail.

Tap to ignore the call and send the caller directly to your voicemail box to leave a message.

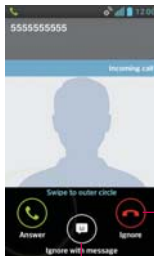

**Locked Screen**

Swipe in any direction to ignore the call.

Swipe in any direction to send a quick message to the caller and forward them to your voicemail.

**NOTE** To silence the ringer, press either of the **Volume Keys**.

**To ignore a call and send a text message**



1. When you receive an incoming call and the screen is unlocked, tap the **Ignore with message Key** . If the screen is locked, swipe the **Ignore with message icon**  in any direction.
2. Tap the text message you want to send in place of answering the call.





**NOTE** This feature can only be used to send a message to another mobile phone. It is not applicable to incoming landline calls.

## Working With the Recent tab

The Recent tab lists all of the calls you've dialed, received, or missed. It offers a convenient way to redial a number, return a call, or add a number to your Contacts.

### To open the Recent tab



- ▶ From the Home screen, tap the **Phone Key**  then tap the **Recent** tab  at the top of the screen.

Calls are listed chronologically in the **Recent** tab with the most recent calls at the top of the screen. It's a combined list of all call types (received , dialed , and missed ). To view a specific call list, from the **Recent** tab, tap (or press) the **Menu Key**  > **Filter** > then select the call type you want to view. You also have the option to perform advanced filtering with specific parameters including time and date.

The Recent tab displays the history of all of your calls.



### To dial a number in the Recent tab


- ▶ From the **Recent** tab, tap the **Call Key**  at the right of the call entry.
- ▶ From the **Recent** tab, tap the image to the left of the entry to call any of the contact's other numbers saved in your phone's memory.
- ▶ You can edit a phone number in the **Recent** tab before you place the call (e.g., to insert an area code). Touch and hold the entry, then tap **Edit number before call** in the Context menu. Edit the number as necessary, then tap the **Call Key** .

### To add a number from the Recent tab to your Contacts

1. Touch and hold the call entry.
2. Tap **Add to Contacts** in the Context menu.
3. Tap **New contact** or **Update contact** and save it as necessary.

### Clearing your Recent calls

You can delete the entire list of Recent calls at once or selectively delete entries.

1. Open the **Recent** tab.
2. Tap (or press) the **Menu Key** .
  - ▶ Tap **Clear** to select entries to remove from the list. Checkmark the entries to delete, tap **Clear**, then **Yes**.
  - ▶ Tap **Clear all** to remove all of the entries from the list. Tap **Yes** to confirm you want to clear the entire list.


**NOTE** You can also select a specific number to be deleted. Touch and hold an entry in the **Recent** list to open the Context menu. Tap **Clear all logs of this number**, then tap **Yes** to confirm.

## Calling Your Contacts

Instead of manually dialing phone numbers using the dialpad, you can use your Contacts list to dial quickly and easily. You can also quickly call a contact using Quick Contact or Direct dial icons that you placed on your Home screen.



If you have contacts on the web, they're synchronized with your phone when you first synchronize with your Google™ Account.

### To call a contact

1. From the Home screen, tap the **Contacts Key**  in the Quick Keys bar.
2. Tap the contact you want to call.
3. Tap the contact's phone number you want to call.




## To call a favorite contact

1. From the Home screen, tap the **Contacts Key**  in the Quick Keys bar, then tap the **Favorites** tab .
2. Tap the contact you want to call.
3. Tap the contact's phone number you want to call.


## Instant List

Instant list is displayed on the **Dial** tab to help you use the information stored in your phone without needing to search for it first. Once you enter three or more numbers, Instant list displays entries from your Contacts list or Recent calls that match the sequence you entered.

### Sequence matches

Your phone searches for the entered sequence anywhere in the number; beginning, end, or anywhere in-between. The matching number sequence is displayed within the number in blue text. The name and type of number (i.e., Mobile, Work, etc.) associated with the number you entered is displayed above the dialpad. When there are multiple matches, the Instant list displays the number of matches in your phone's memory. Tap the Instant list icon  to view the entire list of matching entries. Tap the Instant list icon again to close the list.



### Selecting an Instant list entry

Tap an entry in the Instant list to insert it on the dialpad and tap the **Call Key**  to dial it.

## Voice Dialer


You can use the Voice Dialer application to place a phone call by speaking the name of a contact or a phone number.

### To place a call by speaking

1. From the Home screen, tap the **Apps Key**  > **Voice Dialer** .  
If you have a Bluetooth headset that supports “voice-recognition” or “voice dialing,” you may be able to open Voice Dialer by pressing your headset’s main button or in some other way, and dial by voice using your headset. For details, see the documentation that came with your headset.
2. Say “**Call**” followed by the name of the contact or say “**Dial**” followed by a phone number.

**NOTE** If a dialog box with possible matches is displayed, tap the one you intended to voice dial.


## Options During a Call

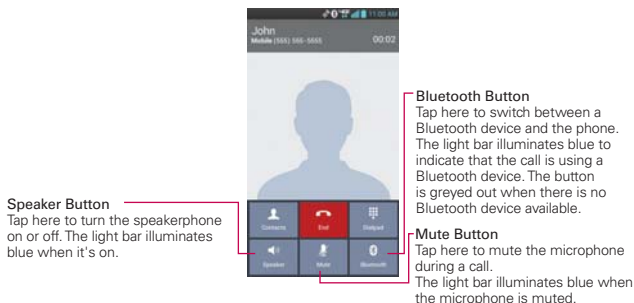

### To mute the microphone

- ▶ Tap the **Mute** button .

The light bar on the **Mute** button illuminates blue to indicate that the microphone is muted.


When viewing the in-call screen, you can unmute the microphone by tapping the **Mute** button  again.

The microphone is unmuted automatically when the call ends.

### To turn the speakerphone on or off

- ▶ Tap the **Speaker** button .

The light bar on the **Speaker** button illuminates blue up to indicate that the speakerphone is on.

When viewing the Call screen, you can turn the speakerphone off by tapping the **Speaker** button  again.

The speaker is turned off automatically when the call ends.


#### **WARNING!**

To avoid damage to your hearing, do not hold the phone against your ear when the speakerphone is turned on.

### To switch between a Bluetooth headset and the phone

When a Bluetooth headset is paired and connected to your phone, you can conduct calls on the headset for hands-free conversation. During a call, you can opt to use the Bluetooth headset or just the phone.


When using the Bluetooth headset during a call, the Ongoing Call notification icon is blue in the Status Bar (the icon is green when using the phone).

- ▶ Tap the **Bluetooth** button  to switch the call from the phone to the Bluetooth device, or vice versa.

## Managing Multiple Calls

Contact your wireless service provider to find out which call services are supported.




### To switch between current calls

- ▶ When you are connected to more than one caller, tap the **Swap calls** button .

The current call will be placed on hold and you will be connected with the other call.

### To set up a conference call

Contact your wireless service provider to find out whether they support conference calls and how many participants you can include.

1. Place a call to the first participant.
2. When you're connected, tap the **Add call** button .
3. Use the dialpad to manually enter a phone number, then tap the **Call Key** .
4. After you're connected, tap the **Merge calls** button . The participant is added to the conference call.

#### Merge calls Button

Tap here to merge the separate calls into a conference call.

#### Speaker Button


Tap here to turn the speakerphone on (or off). The light bar illuminates blue when the speakerphone is on.

#### Dialpad Button

Tap here to dial another number to participate in the conference call.

#### Bluetooth Button


Tap here to switch between a Bluetooth device and the phone. The light bar illuminates blue to indicate that the call is using a Bluetooth device. The button is greyed out when there is no Bluetooth device available.

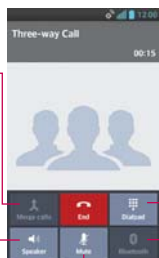

#### Mute Button

Tap here to mute the microphone during a call. The light bar illuminates blue when the microphone is muted.

## Listening to Your Voicemail

When you have a new voicemail message, the **Voicemail notification** icon  appears in the Status Bar. If you have not set up your voicemail number, or if you need to change it, you can do that in the Call settings.



### To listen to your Voicemail

- ▶ Open the Notifications panel and tap **New voicemail**.




OR

- ▶ Tap the **Voicemail** icon  on the Home screen.

OR

- ▶ From the Home screen, tap the **Phone Key**  in the Quick Keys bar, then tap the **Voicemail Key** . Typically, your carrier's voicemail system guides you through the process of listening to and managing your voicemail. The first time you call your voicemail, it also guides you through the process of recording greetings, setting a password, etc.

### To set up your Voicemail





1. From the Home screen, tap the **Phone Key**  in the Quick Keys bar.
2. Tap the **Voicemail Key**  to dial your voice mailbox.
3. If you hear a system greeting, tap the **Pound Key**  to interrupt it, if applicable.
4. Follow the setup tutorial.
5. Enter a password.
6. Record a voice signature and greetings for your voice mailbox.

## Chrome

The **Chrome** application allows you to access the internet from your device. Access and selections within this feature are dependent upon your service provider. For specific information on internet access through your phone, contact your service provider.

- NOTES**
- You may incur additional charges for accessing the web and downloading media. For details, contact your service provider.
  - Chrome may differ from this user guide due to updates via Play Store.

### Browse web pages

1. From the Home screen, tap the **Apps Key**  > **Chrome**  or tap the **Chrome** icon on the Home screen.
2. Tap the URL input field to access a specific web page. Enter the web address (URL) of the web page, then tap **Go** on the on-screen keyboard (or press the **Return Key**  if you're using the QWERTY Keyboard).
3. Tap (or press) the **Menu Key**  to access Chrome options.

URL Input Field  
(address bar)

Tap here to enter a web address for the web page you want to access.







Tabs Swap Icon

Tap here to view your open webpage tabs.




## Search the web

When you begin entering text in the URL input field at the top of the screen to search the web or access a web address, suggestions appear below the address bar. Each address suggestion displays one of the following icons:

- ▶ The Search icon  appears next to searches.
- ▶ The Bookmark icon  appears next to bookmarked sites.
- ▶ The History icon  appears next to sites from your browsing history.
- ▶ The Globe icon  appears next to related sites.

You can set the default search engine for the address bar by tapping (or pressing) the **Menu Key**  > **Settings** > **Search engine**.

## Search within a webpage


1. Tap (or press) the **Menu Key**  > **Find in page**.
2. Type the text you're looking for in the find bar at the top of the screen. Matches are highlighted on the page. (exact matches in orange and partial matches in yellow).
  - ▶ The find bar displays the total number of matches. Tap the  and  arrows to the right of the find bar to go to each match.
  - ▶ Found matches are also indicated in the scroll column along the right side of the screen. Tap any of the highlights to jump directly to that match.

## Sign in to Chrome


When you sign in to Chrome with your Google Account, you can take advantage of several time-saving services:

- ▶ **Sync** lets you access your Chrome bookmarks, browsing history, and open tabs from other devices where you're also signed in.
- ▶ **Chrome to Mobile** lets you send webpages from your computer to your mobile device with one click.


- ▶ **Auto sign-in** helps you sign in to Google services with a touch of a button. No need to type your username and password.

To sign in, open **Chrome** and tap (or press) the **Menu Key**  > **Settings** > **SIGN IN TO CHROME** (at the bottom of the screen).

## Browse with tabs




Your device displays webpages in a tab format allowing you to browse several webpages simultaneously. Create multiple tabs for the sites you want, then tap the **Open tabs** icon  (in the upper-right corner of the screen) to quickly and easily access them.

### Create a new tab

From the **Chrome** application, tap (or press) the **Menu Key**  > **New tab**.

### The New Tab page

The following options are available when you create a new tab. These options, located at the bottom of the screen, help you open the page that you want quickly.


- ▶ **Most Visited**  Snapshots of the webpages that you visit the most are shown here. Just tap a snapshot to visit the site using the new tab you created. Touch and hold a snapshot to open a Context menu to access **Open in new tab**, **Open in incognito tab**, or **Remove**.
- ▶ **Bookmarks**  Icons for sites that you've bookmarked are listed here. Tap a bookmark icon to visit the site using the new tab you created. Touch and hold a bookmark to open a Context menu to access **Open in new tab**, **Open in incognito tab**, **Edit bookmark**, **Delete bookmark**, or **Add to home screen**.
- ▶ **Other devices**  Chrome tabs that are opened on other devices are shown here. Tap a page icon to open the same tab on your device. You must be signed in to Chrome to sync your open tabs across devices.

**NOTE** When you edit items in the Most Visited and Bookmarks options, it can take up to 15 seconds for open tabs to refresh on other devices.




## Working with tabs


### Open an Incognito tab (browse in private)

From the **Chrome** application, tap (or press) the **Menu Key**  > **New incognito tab**. When browsing in incognito mode, your browsing history, cookies, and cache are automatically cleared once you've closed all of your incognito tabs. You still have access to your usual bookmarks and omnibox predictions. Changes that you've made to your bookmarks are saved.

### Switch in and out of Incognito mode

1. From the **Chrome** application, tap the **Open tabs** icon  at the top right of the screen.
2. Drag from right to left to bring Incognito tabs to the front.  
Drag from left to right to return to your standard tabs.




### Switch to another tab

1. From the **Chrome** application, tap the **Open tabs** icon  at the top right of the screen.
2. Scroll up or down (the tabs are stacked vertically), then tap the tab that you want to switch to.

You can also swipe to switch tabs. While viewing an open tab:

- ▶ Swipe from the right-hand edge of the screen to the left to go to the next tab in the list.
- ▶ Swipe from the left-hand edge of the screen to the right to go to the previous tab in the list.


### Close your tabs



- ▶ **Close a single tab:** Tap the **Open tabs** icon  then tap the X in the upper right-hand corner of the tab. Or swipe the tab to the left or right off the screen to close it.
- ▶ **Close all tabs:** Tap the **Open tabs** icon , then tap (or press) the **Menu Key**  > **Close all tabs**.

## Download files

1. Touch and hold a download link.
2. In the Context menu that appears, tap **Save link**.

### To view downloaded files:




From the Applications screen (or the Home screen), tap the **Downloads** icon .

- ▶ To open an a downloaded file, tap it.
- ▶ To view earlier downloads, tap the heading date you want to view.
- ▶ To share downloads, tap the **Share** icon  at the top of the screen, checkmark the ones to share, then tap **Share** and choose a sharing method from the list.
- ▶ To delete downloads, tap the **Delete** icon  at the top of the screen, checkmark the ones to delete, tap **Delete**, then **Yes** to confirm.
- ▶ Tap **Size** or **Date**, at the top left of the screen, to switch the download file sort criteria.


## Use bookmarks

Bookmarks let you revisit your favorite webpages with one touch.

### Create a bookmark


1. While viewing the page you want to set as a Favorite, tap (or press) the **Menu Key** , then tap the **Favorites** icon  at the top of the Options menu.
2. Edit the bookmark's name and address, if necessary.
3. By default it will be saved to your mobile bookmarks folder. Tap the **In** field  to change the location (or create a new folder for it).
4. Tap **Save** to save the bookmark.

## Open a bookmark

1. From the **Chrome** application, tap (or press) the **Menu Key**  > **Bookmarks** (or open a new tab and tap ★ at the bottom of the screen).
2. Tap the bookmark you want to visit.

**NOTE** If you don't see the bookmark, tap the folder you saved it in, or tap the filepath to go to the location where it was saved.


## Edit or delete bookmark

1. From the **Chrome** application, tap (or press) the **Menu Key**  > **Bookmarks** (or open a new tab and tap ★ at the bottom of the screen).
2. Touch and hold the bookmark you want to edit or delete.
  - ▶ Tap **Edit bookmark**. Once you're finished editing, tap **Save**.
  - ▶ Tap **Delete bookmark**.

**TIP** Sign in to Chrome to sync your bookmarks to your Google Account. Then you can then access them from any device.

## Add a bookmark to your Home screen


Save time by adding bookmarks you use frequently to your Home screen as shortcuts.

1. From the **Chrome** application, tap (or press) the **Menu Key**  > **Bookmarks** (or open a new tab and tap ★ at the bottom of the screen).
2. Touch and hold the bookmark until a Context menu appears.
3. Tap **Add to home screen**.

## Chrome Settings

### Preload webpages



Chrome helps you open webpages faster by predicting where you might go next on the page. The browser preloads the page's data in the background, so the page can open immediately if you tap its link. Keep in mind this feature may use a large amount of data on your mobile device. But you can always control when Chrome uses this feature:

1. From the **Chrome** application, tap (or press) the **Menu Key**  > **Settings** > **Bandwidth management**.
2. Tap **Preload webpages**.
3. Select an option:
  - ▶ **Always:** Chrome will preload webpages no matter how you are connected (e.g., mobile data, Wi-Fi, etc.). mobile data.
  - ▶ **Only on Wi-Fi:** Chrome will preload webpages only if you're not using mobile data.
  - ▶ **Never:** Chrome won't preload webpages.


### Autofill forms

Use the autofill feature to fill in web forms with a single tap.

#### Enable or disable autofill

1. From the **Chrome** application, tap (or press) the **Menu Key**  > **Settings** > **Autofill forms**.
2. Slide the **Autofill forms** switch  at the top of the screen to either On (blue) or Off (grey).


#### Manage your autofill entries

From the **Chrome** application, tap (or press) the **Menu Key**  > **Settings** > **Autofill forms**.

- ▶ Tap **Add profile** to add your personal information such as company, address, etc.

- ▶ Tap **Add credit card** to add a new credit card.
- ▶ **Edit an entry** by tapping the profile in the list. Tap **Save** at the bottom of the screen when you've finished updating.
- ▶ **Delete an entry** by tapping the profile in the list. Tap **Delete** at the bottom of the screen to remove the entry.



### Clear all of your autofill entries

1. From the **Chrome** application, tap (or press) the **Menu Key**  > **Settings**.
2. Under the Advanced section, tap **Privacy**.
3. Tap **Clear browsing data**.
4. Checkmark the **Clear autofill data** checkbox.
5. Tap **Clear**.

### Save passwords

You can let Chrome remember your passwords for the sites you use.

#### Enable or disable saving passwords

1. From the **Chrome** application, tap (or press) the **Menu Key**  > **Settings** > **Save passwords**.
2. Slide the switch  at the top of the screen to either On (blue) or Off (grey).


#### Manage password prompts

If you enable Chrome to save your passwords, you'll get a prompt every time when you sign in to a new website.


- ▶ Tap **Yes** if you want Chrome to remember your sign-in credentials for that site. Chrome will automatically complete the sign-in fields for you when you visit the websites again.
- ▶ Tap **Never** if you don't want Chrome to save your username and password for the website you're on.

The information below applies to Chrome for Android only.

### Delete a saved password


1. From the **Chrome** application, tap (or press) the **Menu Key**  > **Settings** > **Save passwords**.
2. Tap the password that you want to remove.
3. Tap **Delete**.

### Delete a site

1. From the **Chrome** application, tap (or press) the **Menu Key**  > **Settings** > **Save passwords**.
2. Tap the site that you want to remove from the **Never saved** list.
3. Tap **Delete**.

## Manage content settings


Adjust the type of content that websites can show and the information they can use to enhance your web experience.

1. From the **Chrome** application, tap (or press) the **Menu Key**  > **Settings**.
2. Tap **Content settings**.
  - ▶ **Accept cookies** Checkmark to enable websites to store small files on your device in order to save your preferences on websites or keep you signed in. Remove the checkmark to prevent webpages from storing cookies on your mobile device.
  - ▶ **Enable JavaScript** Checkmark to enable JavaScript. Many web developers use JavaScript to make their websites more interactive. Sites may function correctly only if they can run JavaScript on your mobile device.
  - ▶ **Block pop-ups** Checkmark to prevent websites from showing additional windows automatically.


- ▶ **Google location settings** Turn on to allow sites with location specific content to ask whether you want to share your location using your mobile device's location information.
- ▶ **Website settings** Tap this option to clear location permissions or local data stored on your device for a specific site.

## Accessibility

### Adjust text size on webpages


1. From the **Chrome** application, tap (or press) the **Menu Key**  > **Settings** > **Accessibility**.
2. Drag the **Text scaling** slider along the bar to adjust the text size scaling. The Preview box displays how it will appear on webpages.

### Force enable zoom

1. From the **Chrome** application, tap (or press) the **Menu Key**  > **Settings** > **Accessibility**.
2. Checkmark the **Force enable zoom** checkbox to override a site's zoom functionality and allow zooming in or out.

### Clear browsing data

You can clear your browsing data, like browsing history, site data, and autofill data, in a few easy steps.

1. From the **Chrome** application, tap (or press) the **Menu Key**  > **Settings**.
2. Tap **Privacy**.
3. Tap **CLEAR BROWSING DATA**.
4. Checkmark the items to clear, then tap **Clear**.

## Maps

### Maps Menu


Tap here to access Map, Local, Navigation, Offers, My Places, Join Latitude, and Location history.

### Directions Icon

Tap here to get directions to a destination.

### Search Icon

Tap here to open the keyboard to enter your search.

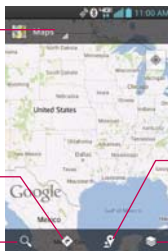






### Local Icon

Tap here to find types of places near your location.

### Layers Icon

Tap here to select the type of map you want to view.




## To search for a location

1. From the Home screen, tap the **Apps Key**  > **Maps** .
2. Tap the **Search** icon .
3. In the search box, enter the place you're looking for. You can enter an address, a city, or a type of business or establishment. For example, "theater in New York".
4. Tap the **Search Key**  on the on-screen keyboard (or press the Return Key  on the QWERTY Keyboard).

Red markers indicate search matches on the map.

You can tap a marker to open a balloon that contains a label. Tap the balloon to open a screen with more information about the location, as well as options for obtaining directions.

## To get directions

1. From the Home screen, tap the **Apps Key**  > **Maps** .
2. Tap the **Directions** icon .
3. Enter a starting point in the first box and your destination in the second box.








The starting point and destination can be entered manually using the



keyboard or you can select places using their drop-down menus.

- ▶ The starting point pop-up menu includes **My current location**, **Contacts**, **Point on map**, and **My Places**.
- ▶ The destination pop-up menu includes **Contacts**, **Point on map**, and **My Places**.


**NOTE** When you search for a location in the **Maps** application, your current location is automatically entered as the starting point and a dialog box displays your recent searches allowing you to tap one to select it as the destination.






4. Tap the **Car** icon  for driving directions, the **Transit** icon  for transit directions, the **Cycling** icon  for cycling directions, or the **Walking** icon  for walking directions.
5. Tap **GET DIRECTIONS**.
6. Your route is displayed on a map.
  - ▶ Tap a white circle marker on the map to see direction change indicators.
  - ▶ Tap  at the bottom of the screen (or the top of the screen if the QWERTY Keyboard is open) display each direction instruction sequentially in a bubble at each juncture. You can tap  to step backward through the direction instructions.
  - ▶ To view the directions in text format, tap **DIRECTIONS LIST**.
  - ▶ Tap (or press) the **Back Key**  to return to map view.

**NOTE** To reverse the directions, from the Directions list, tap (or press) the **Menu Key**  > **Reverse**.


## Switching between common features

The **Maps** application has icons for easy access to many common features used when searching for the places you want to go.

- ▶ Tap the **Maps menu**  at the top left corner of the screen to access **Map**, **Local**, **Navigation**, **Offers**, **My Places**, **Join Latitude**, and **Location history**.

- ▶ Tap the **Layers** icon  in the Maps toolbar to access **Traffic**, **Satellite**, **Terrain**, **Transit Lines**, **Latitude**, **My Maps**, **Bicycling**, **Wikipedia**, and your search history.
- ▶ Tap the **Local** icon  in the Maps toolbar to search for places near your location or your destination.
- ▶ Tap the **Directions** icon  icon in the Maps toolbar to get directions.
- ▶ Tap the **Search** icon  in the Maps toolbar to conduct a new search.
- ▶ Tap the **My Location** icon  to display your current location on the map.

### Maps settings

Access the Maps application, then tap (or press) the **Menu Key**  > **Settings**.


## Checking the Weather

The **Weather** application provides weather forecasts and other weather information. You can place a Weather widget on your Home screen for a summary of your local weather. Access the Weather application for more detailed weather information.


**NOTE** The Weather widget on your Home screen allows you to quickly view information for each city in your City list. Flick up or down within the widget to cycle through each city to see the date, time, and weather.

### To get details about the weather


From the Home screen, tap the **Apps Key**  > **Weather** .

- ▶ Swipe right or left to scroll through the weather information for each of the cities in your list.
- ▶ Tap the **Refresh** icon  at the bottom of the Weather application screen to update the current weather of the city displayed on the weather application screen.


### To add a city or update current location




To add a new city or update your current location, tap **Add**  in the upper right corner of the screen.

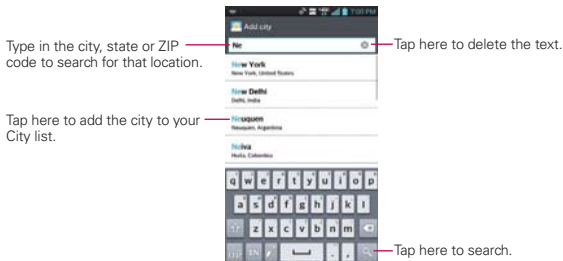- ▶ Enter a location in the Search field, then tap the city you want to add.
- ▶ Tap **Current location** to update your current location.



## Managing your City list


The City list screen allows you to manage a list of cities that you want to monitor. From the Weather application, tap (or press) the **Menu Key**  > **Settings** > **Edit city list**.

- ▶ Tap the **Add** icon  in the upper-right corner of the screen to add another location.
- ▶ Tap the **Delete** icon  at the top of the screen to delete a city from your list. Checkmark the city, tap **Delete**, then tap **Yes**.
- ▶ Touch and drag the handle icon  (on the right side of the screen) to move a city to a new position in your city list. This affects the order viewed when you swipe across the **Weather** application screen.

## Changing Weather Settings

You can configure a number of settings for the **Weather** application.

The location and related settings also affect the display of the Weather widget application.

- ▶ To open the Weather settings screen, from the **Weather** application, tap (or press) the **Menu Key**  > **Settings**.

You can configure a number of Weather application settings.

### List Settings

**Edit city list:** Opens a list of the cities you set to monitor.

### Data & Synchronization

**Update data:** Checkmark this setting to automatically update the weather data for the cities in your City list.

**Update interval:** Allows you to set the schedule to update the weather data for the cities in your City list.

### General Settings

**Temperature unit:** Allows you to set degrees to be displayed in Celsius or Fahrenheit.

**Wind speed unit:** Allows you to set wind speed unit MPH or m/s.

## Contacts

The **Contacts** application allows you to store names, phone numbers, and other information in your phone's memory.


### Using Your Contacts

Use the **Contacts** application to add, view, and communicate with your friends and acquaintances.

#### To open your Contacts application

- ▶ From the Home screen, tap the **Apps Key**  > **Contacts** .

OR



- ▶ Tap (or press) the **Home Key**  > the **Contacts Key**  in the Quick Keys bar.

All of your contacts are displayed alphabetically in a list. If you have a new phone and haven't added any contacts yet, the **Contacts** application will display hints on how to start adding contacts to your phone.

### Contacts list

When you open the **Contacts** application, your contacts list is displayed for you to view or use it. **In case of Emergency (ICE)** is displayed above your list of contacts. Add up to 5 ICE entries from your contacts list. These are entries that someone can contact on your behalf in the event of an emergency, whether or not the phone is locked.

#### To add ICE entries

1. From the Home screen, tap the **Contact icon**  (in the Quick Keys bar).
2. Tap **In case of Emergency**.
3. Tap the **Add icon**  in the lower left corner of the screen.
4. Checkmark the entry (or entries) to add to your ICE list, then tap **Done**.

## ICE Contacts

You can select up to 5 contacts to include in this list. In addition, you can enter personal information about you (such as medical record number, allergies, medications, special instructions, etc.) that can be accessed in case of an emergency. To add your personal information, tap the **Information** icon ⓘ at the bottom center of the screen. Tap the plus icon, enter your information, then tap **Save**.

## Resizing the entries

While viewing your contacts list, place two fingers on the screen, then spread them apart to increase the size of the entries for easier viewing. Pinch in to decrease the size and see more entries without scrolling the screen.

## To open a list of your favorite contacts


- Open your **Contacts** application and tap the **Favorites** tab ★ at the top of the screen.






**Favorites** lists the contacts you've added to the list.

**NOTE** Similar to your Contacts list, you can also pinch in (or spread apart) on your Favorites list to resize the entries.
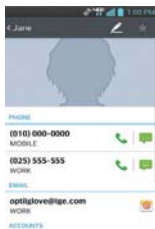
## To view details about a contact

1. Open your **Contacts** application.
2. Tap the contact whose details you want to view.






3. The Contact's information will be displayed. The following options are available.
- ▶ The **Dial icon**  places a call to the number.
  - ▶ The **Message icon**  starts a message.
  - ▶ The **Email icon**  starts an email.
  - ▶ The **Chat icon**  starts a chat.
  - ▶ Tap (or press) the **Menu Key**  for the following menu options: **Delete, Share, Join, Set as default, Export, Add to Home screen, and All calls to voicemail.**

## Adding Contacts


You can add contacts on your phone and synchronize them with the contacts in your Google™ Account, Microsoft Exchange account, or other accounts that support syncing contacts.

Since your contacts can come from a variety of sources, the **Contacts** application attempts to join new information with existing similar contact entries, to create a single entry. You can also manage that process manually by joining or splitting entries.


### To add a new contact

1. Open the **Contacts** application.
2. Tap the **New contact icon**  to the right of the Search field.
3. If you have more than one account with contacts, select the account where you want to save the contact. You can change this later by tapping  at the top of the screen and choosing the account to which you want to add the contact.
4. Enter the contact's name.
5. Tap a category of contact information, such as phone number or email address, to enter that kind of information about your contact.
6. Tap a category's **Add new icon**  to add more than one entry for that category. For example, in the phone number category, enter a work number and add a home number. Tap the label field to the right of the

entered information to open a drop-down menu of preset labels. For example, **WORK** or **HOME** for a phone number.

7. Tap the **Picture frame** icon  to select a picture to display next to the name in your list of contacts and in other applications.
8. When you're finished, tap **Save**.

## Editing a Contact entry

1. Open the **Contacts** application and tap the contact entry you want to edit.
2. Tap the **Edit** icon  at the top of the screen.
3. Edit the entry as needed, then tap **Save** at the bottom of the screen.

## Setting the default phone number

When you save more than one phone number in a contact entry, you can set one of them as the default number.

1. Open the **Contacts** application and tap the contact entry you want.
2. Touch and hold the number you want to set as the default number.
3. Tap **Set as default number** in the context menu that appears. A red checkmark indicates the default number.

## Importing, Exporting, and Sharing Contacts

If you have contacts stored in vCard format on a microSD card you can import them into your Contacts application on your phone. You can also export contacts in vCard format onto a microSD card.


Export to back them up to a computer or other device or so you can send a contact via email.

### To import contacts from your microSD card

You can copy contacts, in vCard format, onto a microSD card then import them into your phone.


1. Insert the microSD card (that contains the vCard files) into your phone and mount it (in the Storage settings menu).



2. Open the **Contacts** application.
3. Tap (or press) the **Menu Key**  > **Import/Export**.
4. Tap **Import from SD card**.
5. If you have more than one account on your phone, tap the account into which you want to import the contacts.
6. Tap to checkmark the contacts you want to import from the microSD card. Then tap **Import** and **Yes** to confirm.


### To export contacts to your microSD card

You can export all of the contacts on your phone to your microSD card, as vCard files. You can then copy this file to a computer or another device that is compatible with this format, such as an address book application.

1. Insert a microSD card into your phone and mount it (in the Storage settings menu).
2. Open the **Contacts** application.
3. Tap (or press) the **Menu Key**  > **Import/Export**.
4. Tap **Export to SD card**.
5. Tap the contacts you want to export to the microSD card. To export all contacts, tap **Select all** in the top left corner of the screen.
6. Tap **Export** and then **Yes** to confirm.
7. Enter the file name and tap **OK**.

### Transfer type

When you want to send your contact entries, you can combine them all into one file, or you can send separate vCard files.


To set the transfer type, from the **Contacts** application, tap (or press) the **Menu Key**  > **Settings** > **Transfer type**.

- **Send as one file** - This setting combines all of your contacts into one file. It allows a faster transfer, but some devices can't receive contact information sent using this option.

- **Send separately** - This setting sends each contact as a separate vCard file. It allows all devices to receive your files.

### To share a contact

You can share a contact with someone by sending it to them as a vCard file.

1. Open the **Contacts** application.
2. Tap the contact you want to share to view the contact details.
3. Tap (or press) the **Menu Key**  > **Share**.
4. Choose the desired contact(s) > **Attach** then tap the method for sending.
5. Enter the necessary information and share it.


### Adding a Contact to Your Favorites

The **Favorites** section contains a short list of the contacts you communicate with most often.




#### To add a contact to your Favorites list

1. Open the **Contacts** application.
2. Tap a contact to view its details.
3. Tap the star in the upper-right corner of the screen.  
When the contact is added to your Favorites list, the star will be gold-colored.

#### To remove a contact from your Favorites list

1. Open the **Contacts** application and tap the **Favorites** tab .
2. Tap a Favorites contact entry to view its details.
3. Tap the gold star in the upper-right corner of the screen.  
The grey-colored star will indicate that the contact was removed from your Favorites list.

## Communicating with Your Contacts

From the **Contacts** , **Favorites** , or **Recent**  tab, you can quickly call or send a text (SMS) or multimedia message (MMS) to a contact's default phone number. You can also open a list of all of the ways you can communicate with that contact.


This section describes ways to initiate communication when viewing your list of contacts. The **Contacts** application shares your contacts with many other applications, such as Gmail™ and Messaging.

### To connect using Quick Contact for Android™

1. Open the **Contacts** application, then tap a contact's picture to open Quick Contact for Android.

Type the name you want to search.

Contact picture  
Tap here to open Quick Contact for Android for this contact.

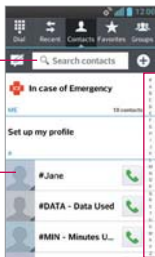

Contact list

Alphabetical Listing

Slide your finger vertically along the letters to view the entries under a specific letter.







Quick Contact for Android

**NOTE** Tapping the contact's picture in the **Favorites** tab or the **Recent** tab also accesses Quick Contact for Android.

2. Tap the icon corresponding to the type of communication you want to start.


The communication icons displayed depend on the types of information you saved in the contact information.

### To communicate with a contact

1. Open the **Contacts** application.
2. Tap the contact with whom you want to communicate.
3. In the contact's details screen, tap the way to start communicating with the contact.
  - ▶ The **Dial icon**  places a call to the number.
  - ▶ The **Message icon**  starts a message.
  - ▶ The **Email icon**  starts an email.
  - ▶ The **Chat icon**  starts a chat.

**NOTE** These same icons are also displayed when you tap an entry in the Favorites tab and the Recent tab.

### To call a contact's default number


1. Open the **Contacts** application.
2. Tap the **Dial icon**  next to the contact entry you want to call.

**NOTE** If the entry has multiple numbers and no default number is set, a pop-up dialog box is displayed for you to select the number to call.

## Selecting Which Contacts are Displayed

You can hide contacts that don't have phone numbers. You can also configure which groups of contacts you want to display in the Contacts list.

### To change which groups are displayed

1. Open the **Contacts** application.
2. Tap (or press) the **Menu Key**  > **Settings** > **Display options**.
3. Under CHOOSE CONTACTS TO DISPLAY, tap **All contacts** to display contacts from all of your sync'd accounts, tap a single account, or tap **Customize** to select more than one (but not all) account types to display their contacts.


The following options are also available on the Display options setting screen:

- ▶ **Only contacts with phones:** Display only contacts that have a saved phone number.
- ▶ **Sort search result by:** Allows you to sort search results by Frequency of contact or Alphabetical order.
- ▶ **Sort list by:** Allows you to sort the list by First name or Last name.
- ▶ **View contact names as:** Allows you to view contact names as First name first or Last name first.
- ▶ **Group view style:** Allows you to view groups in Grid view or List view.
- ▶ **Favorites view style:** Allows you to view your favorites in Grid view or List view.

## Joining Contacts

When you add an account or add contacts in other ways, such as by exchanging emails, the **Contacts** application attempts to avoid duplication by joining contact information automatically. You can also join contacts manually.


### To join contacts

1. Open the **Contacts** application.
2. Tap the contact entry to which you want to add information. The contact name for this entry will remain unchanged after you join with another contact.
3. Tap (or press) the **Menu Key**  > **Join**.
4. Tap the contact whose information you want to join with the first contact. The information from the two contacts will be merged and displayed under the name from the first contact.


## Separating Contact Information

Each contact entry in your phone may contain 'joined' information from a variety of sources. If contact information from different sources was joined in error, you can separate the information back into individual contact entries in your phone.

### To separate contact information


1. Open the **Contacts** application.
2. Tap the contact entry whose information you want to separate.
3. Tap (or press) the **Menu Key**  > **Separate**.
4. Tap **Yes** to confirm you want to separate the entries. The contact information will be separated into individual contact entries in the Contacts list.

## Viewing Join contacts

1. Open the **Contacts** application.
2. Tap (or press) the **Menu Key** .
3. Tap **Join contacts**.
  - ▶ Tap the **Join suggestion** tab to view similar entries, then tap the **Join** button if you want to join them.
  - ▶ Tap the **Joined contacts** tab to view joined entries, then tap the **Separate** button if you want to separate them.

## Searching your online contacts simultaneously















You can search for your contacts simultaneously from all of your online accounts.

To set your device to search simultaneously, from the Contacts application, tap (or press) the **Menu Key**  > **Settings** > checkmark the **Online search** checkbox.




## Email




The **Email** application allows you to read email from services other than Gmail™. The following account types are supported: Microsoft Exchange, Windows Live Hotmail, Yahoo! Mail, AOL Mail, Verizon and other accounts.


### Email icons

	Exchange mail message received		Exchange mail message sending or receiving failed
	AOL mail message received		AOL mail message sending or receiving failed
	Yahoo! mail message received		Yahoo! mail message sending or receiving failed
	Gmail message received		Gmail message sending or receiving failed
	Hotmail received		Hotmail message sending or receiving failed
	Verizon.net mail received		Verizon.net mail message sending or receiving failed
	Other mail received		Other mail message sending or receiving failed

### To open the Email application





From the Home screen, tap the **Apps Key**  > **Email**  or tap the **Email** icon  directly from the Home screen.

- ▶ Tap the **Compose** icon  in the upper right-hand corner to compose a new message.
- ▶ Tap the Accounts drop-down list icon  to switch between your email accounts.
- ▶ Tap the **Select all** icon  in the upper left-hand corner to select all of your messages. Then you can tap **Mark unread**, **Move to**, or **Delete** at the bottom of the screen.
- ▶ Tap the checkbox next to a message, then you can tap **Mark unread**, **Move to**, or **Delete** at the bottom of the screen.

- ▶ Tap the **Favorite** icon  next to an email message to designate it as an important or favorite message.


The first time you open the **Email** application, a setup wizard opens to help you add an email account. After the initial setup, the **Email** application displays the contents of your Inbox.

### Message search

- ▶ If the QWERTY Keyboard is closed, tap the **Menu Key** , tap **Search**, enter the text you are looking for, then tap the **Search** icon  on the on-screen keyboard.
- ▶ With the QWERTY Keyboard open, press the **Menu Key** , tap the **Search** icon  at the top of the screen, then enter the text you are looking for.

### The Accounts list

The Accounts list displays all of your email accounts.

- ▶ Open the **Email** application. Tap the Accounts drop-down list icon  at the top of the screen.

Each account in the Accounts list displays the number of unread mail.

Tap an account to view its Inbox.

The account from which you send email by default is indicated by a red vertical line on the left side of the account.

**NOTE** While viewing the combined list of your email messages, default email account messages are indicated by a vertical red line along the left side of the list.


### Reading Your Email

You can read your email from the Inbox, or from other folders within each individual account.

#### To read an email


From the Accounts list, simply tap any account to display that account's folders and contents.



You can also go to the folder list of the account by tapping (or pressing) the **Menu Key**  > **Folders** from the Inbox.

**NOTE** When new email arrives, a notification appears in the Status Bar. Drag the Notifications panel downward and tap the email notification.

## Email settings

To access the Email settings, from the Inbox, tap (or press) the **Menu Key**  > **Settings**.

### General settings

- ▶ Tap **Set default account** to select which email account to designate as your default account.
- ▶ Tap **Storage** to select to save email to **Internal storage** or **SD card**.
- ▶ Tap **Roaming** to checkmark this setting to automatically retrieve email while roaming outside your home network. Data fees will be charged.
- ▶ Tap **Email preview** to set how many lines of email text to download on your device for preview.
- ▶ Tap **Load linked images** to set when to show images.
- ▶ Tap **Ask before deleting** to checkmark this setting if you want to be asked before deleting email.
- ▶ Tap **Screen after deleting** to select which screen to display after deleting an email.
- ▶ Tap **Geotagging notification** to checkmark this setting to display a notification pop-up when sharing pictures with location information.
- ▶ Tap **Share pictures** to set whether location information is included in the picture file.

### Account settings


Tap an account to access settings specific to that email account including:

#### DISPLAY NAMES

- ▶ Tap **Account name** to change the general account name.
- ▶ Tap **Your name** to change your name displayed when an email is sent.

- ▶ Tap **Use signature** to checkmark this setting to send a signature with your emails.
- ▶ Tap **Signature** to change the signature sent with your emails.

### **SYNC, SEND & RECEIVE**

- ▶ Tap **Retrieve interval** to set how often email is retrieved from the server.
- ▶ Tap **Number of email to show** to set how many emails to show on your device.
- ▶ Tap **Update schedule** to choose the schedule for updating email.
- ▶ Tap **Folders to sync** to select what folders you want to sync.
- ▶ Tap **Days to sync** to select how many days you want to sync email for.
- ▶ Tap **Message format** to set what format you wish to receive email in.
- ▶ Tap **Message size limit** if you want to limit the size of messages to receive on your device. When you access your email, you can tap **Load full message** to receive the rest of the message.
- ▶ Tap **Download over Wi-Fi** to set to download large attachments when Wi-Fi is connected.
- ▶ Tap **File size to download over Wi-Fi** to set the size of files you want to download only over Wi-Fi.
- ▶ Tap **Accounts** to view synchronization. Tap (or press) the **Menu Key**  to remove the account or sync now.
- ▶ Tap **SMS sync** (only available for over Exchange 2010 account) to synchronize email message for every SMS.
- ▶ Tap **Calendar events to sync** (only available for Exchange account) to select how long you want to sync your Exchange Calendar events.
- ▶ Tap **Auto resend times** to set the number of times to automatically try to resend a failed email message.

- ▶ Tap **Always Cc/Bcc myself** to automatically insert your mail address in the Cc field or the Bcc field (or select Off) when you compose an email.
- ▶ Tap **Out of office settings** (only available for Exchange account) to configure your out of office message.
- ▶ Tap **Security settings** to set Signature, digital signatures and encryption to secure email.
- ▶ Tap **Corporate directory** (only available for Exchange account) to search online directory for recipients.
- ▶ Tap **Server policy** (only available for Exchange account) to view the current server policy.

## NOTIFICATIONS

- ▶ Tap **Notifications** to checkmark this setting to display new email notifications.
- ▶ Tap **Notification sound** to set the sound when you receive new email notifications.
- ▶ Tap **Vibrate** to set when the device will vibrate for a new email notification.


## SERVER SETTINGS

- ▶ Tap **Incoming server settings** to manually change your incoming server settings.
- ▶ Tap **Outgoing server settings** to manually change your outgoing server settings.
- ▶ Tap **Exchange server settings** (only available for Exchange account) to manually change your Exchange server settings.

## REMOVE ACCOUNT

- ▶ Tap **Remove account** to remove your email account.

### To add an account




- ▶ From your email Inbox, tap (or press) the **Menu Key**  > **Settings** > **Add account**. Then, configure the new email account settings as necessary.


## Visual Voicemail

The **Voicemail** application allows the management of voicemail directly from the device rather than accessing voicemail via traditional methods.


Voicemail can display a list of your messages allowing you to choose which message(s) to listen to or delete, without having to dial into your mailbox and listen to voice instructions or prior messages.


### To be able to use Voicemail

1. From the Home screen, tap the **Apps Key**  > **Voicemail**  or tap the **Voicemail Icon**  directly on the Home screen.

**NOTE** Listening to voicemail and setting up your voicemail service depends on subscription to the visual mail service. When you tap the **Voicemail Key**  on the dialpad, and you have subscribed to the visual mail service, the Visual Voicemail application will be launched. If you are not subscribed, you will be dialed into your traditional voicemail box.

2. The first time you access the **Voicemail** application, you will have to subscribe to the Visual Voicemail service to be able to use it.
3. After subscription to the Visual Voicemail service, you will be prompted to enter the password.
4. After entering the password, your voicemail entries will be displayed in your Inbox.


While viewing the voicemail list, you can select an entry (see step 5). For additional options, tap (or press) the **Menu Key** . The following options are available: **Search**, **Delete**, **Save as**, **Mark as heard**, **Sort by**, **Saved voicemails**, **Refresh**, **Settings**, **Logout**, and **Unsubscribe**.

5. Tap a voicemail entry to listen to it. Then you can tap **Call back**, **Save**, **Delete**, or **Speaker**. To forward or reply to a message, tap (or press) the **Menu Key**  > **Forward** or **Reply**.


6. If you decide to reply with a voicemail or forward it, record a message. The buttons at the bottom of the screen allow you to record, stop, re-record, or cancel the message.

## Messaging

### To open the Messaging application

- ▶ From the Home screen, tap the **Messaging Key**  in the Quick Keys bar.

### Using the Messaging application

- ▶ Tap the **New message** icon  to start a new text or multimedia message.



Tap here to create a new message.


- ▶ Tap an existing message thread to open it.

**NOTE** Pinch in (or spread apart) on your list of messages to resize it for easier viewing or navigation.

### To delete a message thread from the Messaging window



1. Touch and hold the message thread.
2. Tap **Delete** in the Context menu that opens.
3. Tap **Yes** to confirm you want to delete the message thread.

### To send a text message

1. On the Messaging screen, tap the **New message** icon .
2. Enter a mobile phone number (or a name saved in your Contacts) in the **To** field.


As you enter the numbers or characters, matching Contacts entry name(s) and number(s) appear. The match can be anywhere in the entry. You can tap a suggested recipient to insert it in the **To** field, or continue

entering the phone number.

**NOTE** If you previously started a message to a recipient, then tapped (or pressed) the **Back Key**  that draft message is automatically displayed for you to continue the message when you start a new message to that recipient. The Draft icon  on the right side of the message thread indicates a pending draft message to the recipient.

3. Tap the text field to start entering your message.

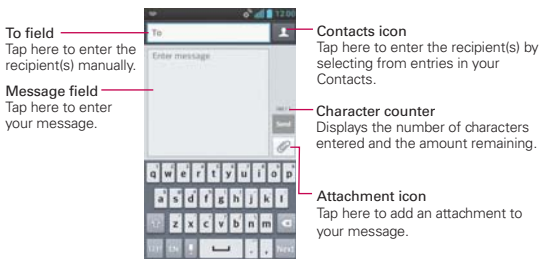


A character counter is displayed to the right of the message field to let you know how many more characters you can type and also the number of pages in the message.



If you tap (or press) the **Back Key**  while composing a message, it's saved as a draft. Tap the message to resume composing it.

4. Tap the **Send** button to send the message.  
Your message is displayed and responses appear in the same window, creating a message thread with that contact.

### To create and send a multimedia message


1. On the Messaging screen, tap the **New message** icon  at the top right corner of the screen.
2. Enter a mobile phone number, email address, or Contact name in the **To** field. As you type, matching contacts appear. You can tap a suggested contact or continue typing.
3. Tap the text field to start entering your message.
4. Tap (or press) the **Menu Key**  > **Add subject** to add a message subject. The subject text appears above the body text in bold letters.
5. Tap the **Attachment** icon  to open a dialog box where you can choose the type of media file to attach to the message.
  - ▶ Tap **Picture** to select a picture from your Gallery.
  - ▶ Tap **Take photo** to take a photo and attach it.
  - ▶ Tap **Video** to select a video from your Gallery.

- ▶ If you tap **Record video** to record a video and attach it.
- ▶ Tap **Audio** to select an audio file.
- ▶ Tap **Record voice** to record an audio message and attach it.
- ▶ Tap **Location** to select a map location to send.
- ▶ Tap **Contact** to select either vCard or text to attach.
- ▶ Tap **Slide** to assemble photos, audio file(s), videos, texts into a slide (up to 10 slides) to attach to the message.

**NOTE** To delete an attachment, simply tap the **Delete** icon  to the right of the attached file.

6. Tap the **Send MMS** button to send the message.


### To send a group message

1. On the Messaging screen, tap the **New message** icon  in the upper right corner of the screen.
2. Add the recipients.
3. When you enter more than one recipient, the **Group Conversation** button and the **Individual Messages** button appear below the message recipients.
  - ▶ Tap the **Group Conversation** button to allow all of the recipients to be viewed by each other so they can respond to you and the group. The message is sent as a multimedia message (MMS).
  - ▶ Tap the **Individual Message** button so that none of the recipients can see the other recipients (similar to BCC). Each individual can only respond to your message.

**NOTE** Tap the **Help** icon  to view information regarding using these buttons.

4. Complete the message as necessary, then tap the **Send to all** button.

### To respond to messages you receive

If you're working in a message window, messages that you receive from that contact are displayed. Otherwise, you receive a new message notification and a new message icon  appears in the Status Bar. When



you tap the new message notification, the Message screen opens where you can reply to the message.

**NOTE** The message pop-up box appears on any screen so that you can instantly reply to the message without closing the application.


If the Auto-retrieve setting is not checkmarked, you must tap the **Download** button to view the message.

If the message contains a media file, tap the **Play** button to view, watch, or listen to it. Touch and hold the media file to open a Context menu with additional options.

### To view details about a message

1. Touch and hold a message in a message window.
2. Tap **View message details** in the Context menu that opens.

## Changing Messaging Settings

- ▶ To change Messaging settings, open the **Messaging** application, tap (or press) the **Menu Key**  > **Settings**.

### Storage

**Delete old messages:** Checkmark this setting to allow the phone to delete older messages in a thread when the **Text message limit** or **Multimedia message limit** is reached. Uncheckmark this setting to keep all messages.

**Text message limit:** Tap to set the number of text messages to save per thread.

**Multimedia message limit:** Tap to set the number of multimedia messages to save per thread.

**Attachment storage:** Tap to select where to store message attachments. Choose from **Internal storage** or **SD card**.

**Signature:** Tap to enter a signature to automatically send with your messages. Checkmark appears after a signature is entered.

**Callback number:** Tap to view or edit the callback number sent with your

messages. Checkmark appears after the dialog box is closed.

### **Text message**

**Delivery reports:** Checkmark this setting to allow your phone to receive delivery reports for the text messages you send.

**Manage SIM card messages:** Tap to manage messages stored on your SIM card.

**Priority:** Tap you to set the default priority for your text messages.

### **Multimedia message**

**Delivery reports:** Checkmark this setting to allow your phone to receive delivery reports for the multimedia messages you send.

**Allow delivery reports:** Checkmark this setting to send a delivery report when it is requested.

**Auto-retrieve:** Uncheckmark this setting to download only the heading of multimedia messages, allowing you to manually download the whole message when you're ready. This is useful for controlling how much data you download.

**Roaming auto-retrieve:** Checkmark this setting to automatically retrieve messages while roaming.

**Priority:** Tap to set the default priority for your multimedia messages.

### **Group Conversation**

**Group Conversation:** Checkmark this setting to allow everyone to reply to everyone in the group conversation.

**Help:** Information for group conversation settings.

### **Conversation theme**

Allows you to change the conversation display style. Tap the **Wallpaper** tab to choose the conversation background. Choose from the 6 options provided, a photo from your Gallery, or take a picture to use. Tap the **Bubble** tab to choose the conversation style. Choose from the 6 options provided.

## Notification

**Notifications:** Checkmark this setting to allow your phone to receive a notification in the Status Bar whenever you receive a new message.

**New message pop-up:** Checkmark to show a pop-up when new messages are received.



**Preview:** Checkmark this setting to preview message contents when a new message is received.

**Notification sound:** Tap to select the ringtone to sound when you receive a new message notification.

**Vibrate:** Tap to set when the phone will vibrate for a new message notification.

**Repeat alert:** Checkmark to be reminded of unread messages. Choose from **Never**, **Every 2 minutes**, or **Every 5 minutes**.

## Send a message using the Enter key

Checkmark to allow the **Enter Key**  on the on-screen keyboard and the **Return Key**  on the slide-out QWERTY Keyboard to send your composed message.

## Receive emergency alerts

Turn emergency alerts types on or off and set alert reminder. These are the settings associated with Commercial Mobile Alert System.

**Presidential alert:** This setting allows presidential alert to be always presented. This setting is greyed-out because it cannot be changed.

**Extreme alert:** Checkmark this setting so that you will always be notified of an Extreme alert.

**Severe alert:** Checkmark this setting so that you will always be notified of a Severe alert.

**AMBER alert:** Checkmark this setting so that you will always be notified of an AMBER alert.

**Alert reminder:** Tap to set how often you want to be reminded when notified of an alert.

## Talk

### To open Google Talk and sign in

- ▶ From the Home screen, tap the **Apps Key**  > **Talk** .

When you first open Google Talk, your Accounts list screen will be displayed. This list includes all of the Google Accounts you've added. Tap an account to sign in (if necessary) and see the Friends list for that account.



Accounts List Screen

Tap here to add account.




Friends List

### To sign out of Google Talk

You can sign out of Google Talk. For example, if you want to limit Google Talk conversations to your computer. Also, signing out can extend your battery life.




- ▶ From your Friends list, tap (or press) the **Menu Key**  > **Sign out**.

You will no longer receive chat notifications or see others' Google Talk status in other applications, such as Gmail™.

**NOTE** You can also tap (or press) the **Menu Key**  from the Status screen to sign out of Google Talk.

## Chatting with Friends

### To chat with a friend

1. From the Home screen, tap the **Apps Key**  > **Talk** .
2. From your Friends list, tap the friend you want to chat with.
3. Enter your message then tap the **Send** icon .

### To accept an invitation to chat

When a friend sends you a Google Talk message, you will receive a notification. The friend's name in the Friends list turns white and displays the message.

- ▶ Tap the name of the person in your Friends list.


**OR**

- ▶ Open the Notifications panel then tap the chat notification.  
A chat window will open where you can exchange messages with your friend.


### Options from your Friends list

From the Friends list, tap (or press) the **Menu Key**  to choose from **Display options**, **End all chats**, **Sign out**, **Settings**, **Help**, and **Send feedback**.

### Options while chatting

While chatting, tap (or press) the **Menu Key**  to choose from **End chat**, **Go off the record**, **Friend info**, **Add to chat**, **Clear chat history**, **Settings**, **Help**, and **Send feedback**.

## Changing and Monitoring Online Status

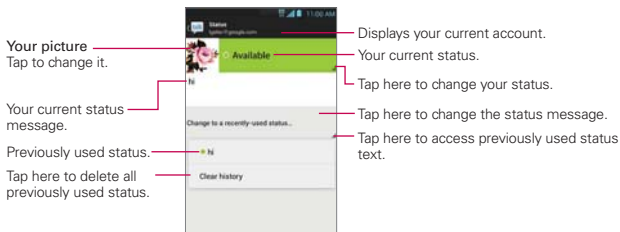

## Status Icons

Icons in Google Talk, Gmail, and other applications indicate the Google Talk status for you and your friends.

	Available: Signed into Google Talk and available to chat
	Away: Signed into Google Talk but not active
	Busy: Signed into Google Talk but too busy to chat
	Signed out of Google Talk
	Invisible: Signed into Google Talk but appear signed out to others
	Video Chat: Video chat is available.
	Voice Chat: Voice chat is available.

## Changing Google Talk Settings


To change the Google Talk settings, tap (or press) the **Menu Key** from the Friends list and tap **Settings**.

**NOTE** Each Google account uses its own settings. If you use more than one Google account on your device, tap the account you want to modify.

## To block (or remove) a friend

To block a friend from exchanging messages with you, tap the friend in the Chat screen. Tap (or press) the **Menu Key** , then tap **Friend info**. Tap **Block** (or **Remove**) at the bottom of the screen.

### Viewing your blocked friends list

To view your list of blocked friends, from the Friends list, tap (or press) the **Menu Key** . Tap **Settings**, tap the account, then tap **Blocked friends**.



### To unblock a friend

To remove the block, access the blocked friends list, then tap the friend's name in the list. Tap **OK** to unblock the friend.



## Voice Dialer

### Call a Contact by Voice Dialing




You can call numbers directly by saying the contact's name or number.


1. From the Home screen, tap the **Apps Key**  > **Voice Dialer** .
2. Say "Call" or "Dial" then a name or a phone number.  
Or you can say "Redial" to redial the last number dialed.
3. If a list of results is displayed, tap the one you want to use.

### Open an Application using Voice Dialer

1. From the Home screen, tap the **Apps Key**  > **Voice Dialer** .
2. Say "Open" and then an application name.
3. If a list of results is displayed, tap the one you want to use.  
The device opens the corresponding application.



## Camera

To open the Camera application, from the Home screen tap the **Apps Key**  > **Camera** . You can also access it by tapping the **Camera icon**  from the Home screen.

**TIP** If you've set your phone to use the Swipe unlock method, from the locked screen, simply drag the **Camera icon**  upward to open the Camera application. Or, if using the Pattern screen unlock method, you can tap the Camera icon after pausing on the last dot in your pattern when unlocking the screen.


## Getting to know the viewfinder


**Scene mode** – Tap to adjust a better image capture in different environments. Select from **Normal**, **Portrait**, **Landscape**, **Sports**, **Sunset**, **Night**, and **Action**.


**Cheese Shutter** – Tap to activate the camera shutter by voice command.  is off and  is on.

**Swap Camera** – Tap to swap between the rear camera lens and the front camera lens.

Indicates the number of pictures that can be taken and stored based on the current image size and storage location.

If  is displayed, the flash setting is on.

If  is displayed, a microSD card is inserted.

 indicates the current battery charge level.

**Mode Switch** – Slide up (or down) to toggle between Camera mode and Video mode.


**Capture** – Tap to take a photo.


**Gallery** – Tap to access your saved photos from within Camera mode. Simply tap this icon and your Gallery will appear on the screen.

**Settings** – Tap to open the Camera settings menu.

**Shot Mode** – Defines how the shot will be taken. Select from **Normal**, **HDR**, **Panorama**, **VR panorama**, **Continuous shot**, or **Beauty shot**.







## Rear camera lens options

You can make adjustments to optimize your shot. The following options are available when you tap **Settings**  on the viewfinder screen for the rear camera lens:







- **Edit quick menu** : Allows you to edit the quick menus (icons on the left side of the viewfinder) for quick access to your favorite options. Tap




the option icon to change, then tap the option you want.

- **Time catch shot**  : Allows the camera to capture missing moments by taking five sequential pictures at once before the shutter key is tapped. Access your Gallery to save or delete these images. Choose **Off** or **On**.
- **Flash**  : Tap to set the Flash to **Off**, **On**, or **Auto**.
- **Brightness**  : Defines and controls of the amount of light entering the lens. Slide the brightness indicator along the bar toward “-” for a lower brightness image or toward “+” for a higher brightness image.
- **Focus**  : Defines the focus of the shot.
  - **Auto**: Sets the camera to focus automatically on the object you tap on the screen before tapping the **Capture** icon .
  - **Manual**: Sets the camera to manually focus on an object (versus the overall scene) using the focus slide bar.
  - **Face tracking**: Sets the camera to automatically detect and focus on human faces.
- **Image size**  : Defines the resolution for the photo. Choose from **5M** (2560x1920), **W4M** (2560x1536), **3M** (2048x1536), **W3M** (2240x1344), **1M** (1280x960), **W1M** (1280x768).

**NOTE** The default resolution is **W4M** (2560x1536).








- **ISO**  : Defines and controls the camera’s sensitivity to light. Choose from **Auto**, **800**, **400**, **200**, and **100**.
- **White balance**  : Defines the ambient lighting to improve the color qualities of the photo under different lighting conditions. Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent**, and **Cloudy**.
- **Color effect**  : Applies artistic effects to pictures. Choose from **None**, **Mono**, **Sepia**, and **Negative**.
- **Timer**  : Sets a timer to delay taking the picture. Choose from **Off**, **3 sec**, **5 sec**, and **10 sec**.
- **Geotagging**  : Sets the camera to select if you want to save the location information for the pictures you take. Choose **Off** or **On**.
- **Shutter sound**  : Sets the shutter sound. Choose from **Off**, **Tone 1**,


Tone 2, Tone 3, and Tone 4.








- **Storage**  : Sets where your pictures are saved. Choose **SD card** or **Internal storage**.

### Front camera lens options




When using the front camera lens, the quick menus on the left side of the screen are:

- **Camera swap**  : Swaps between the rear camera lens and front camera lens.
- **Cheese shutter**  : Sets the shutter to activate by voice command. Choose **On**  or **Off** .
- **Beauty shot**  : Sets an effect to make skin look brighter and smoother. Use the slider bar to increase or decrease this effect.
- **Brightness**  : Defines and controls the amount of light entering the lens. Use the slider bar to increase or decrease image brightness.
- **Settings**  : Opens the camera settings menu.


The following options are available when you tap **Settings**  on the viewfinder screen for the front camera lens:

- **Edit quick menu**  : Allows you to edit the quick menus for access to your favorite options. Tap the option icon to change, then tap the option you want.
- **Image size**  : Defines the resolution for the photo as **VGA(640x480)**.
- **Scene mode**  : Adjusts for better image capture in different environments. Choose **Normal** or **Night**.
- **White balance**  : Defines the ambient lighting to improve the color qualities of the photo under different lighting conditions. Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent**, and **Cloudy**.
- **Color effect**  : Applies artistic effects to pictures. Choose from **None**, **Mono**, **Sepia**, and **Negative**.
- **Timer**  : Sets a delay timer for the camera. Choose from **Off**, **3 sec**, **5 sec**, and **10 sec**.
- **Geotagging**  : Sets the camera to add location information to the


picture. Choose **Off** or **On**.

- **Save as flipped**  : Sets the camera to save the image in the orientation it was taken (landscape or portrait). Choose **Off** or **On**.
- **Shutter sound**  : Sets the shutter sound for the camera. Choose from **Off**, **Tone 1**, **Tone 2**, **Tone 3**, and **Tone 4**.
- **Storage**  : Sets where your pictures are saved. Choose **SD card** or **Internal storage**.

### Reverting to the Default settings

To reset to the default settings, from the **Camera** application, tap (or press) the **Menu Key** , tap **Reset**, then **Yes**.





### Taking a quick photo


1. Open the **Camera** application.
2. Hold the phone horizontally and point the lens toward the subject you want to photograph.
3. Touch the subject on the screen and a focus box will appear in the viewfinder. When the focus box turns green, the camera has focused on your subject.
4. Tap the **Capture** button  to take the picture.

### Viewing your saved photos

You can access your saved photos from Camera mode. Just tap the image thumbnail at the bottom of the Camera screen, then flick left or right to scroll through your photos.

While viewing a photo, tap the screen to access the following options:

-  Tap to share the photo using SmartShare (turn on Wi-Fi if it's not already on).
-  Tap to return to camera mode to take a new photo (or record a video).
-  Tap to select which application to use to share the photo.
-  Tap to delete the photo.

While viewing a photo, tap (or press) the **Menu Key**  to access the following additional options.




- ▶ **Add location:** Tap to set a location tag where the photo was taken.
- ▶ **Set image as:** Tap to set the photo as the icon identifying a contact or set it as your Home screen wallpaper or Lock screen wallpaper.
- ▶ **Move:** Tap to move the picture to another album or folder.
- ▶ **Copy:** Tap to copy the picture to another album you select.
- ▶ **Rename:** Tap to open the keyboard to rename the photo for easy identification.
- ▶ **Rotate left:** Tap to rotate the photo counter-clockwise.
- ▶ **Rotate right:** Tap to rotate the photo clockwise.
- ▶ **Crop:** Tap to open a cropping box tool that allows you to manually crop the photo. Use your finger to move or resize the cropping box to encompass only the part of the photo you want to see, then tap **OK**.
- ▶ **Edit:** Tap to edit the photo with special effects.
- ▶ **Slideshow:** Tap to see your photos played in a slideshow.
- ▶ **Details:** Tap to display information about the photo (e.g., file type, file size, etc.).

### Gallery views


- ▶ Open the Camera application, then tap the image thumbnail at the bottom of the screen.
- ▶ Your photos are displayed in full size. Swipe or flick your finger left or right to scroll through your photos (or videos).
- ▶ For quicker, direct access, you can tap the screen to display smaller film-like images of your photos across the bottom of the screen. Swipe or flick horizontally to quickly scroll through them, then tap the one you want to view.

- ▶ The pinch-to-zoom gesture allows you to easily zoom in and out of the displayed picture. Spread your fingers to zoom in and pinch your fingers to zoom out.
- ▶ Continue the pinch in gesture on an image to display your photos in reduced size which allows you to swipe an image up, off the screen to quickly delete it.


## Video Camera



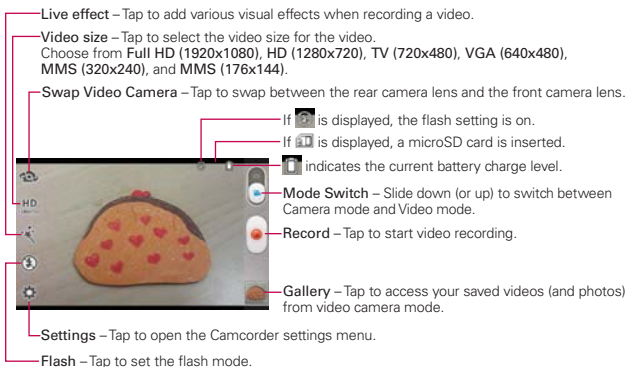


To open the Video Camera, from the Home screen tap the **Apps Key**  > **Camera** . Then slide the **Mode Switch** icon  to toggle from Camera to Video camera mode.







### Getting to know the viewfinder




### Video options

You can make adjustments to optimize your video. The following options are available when you tap the **Settings** icon  on the viewfinder screen:








**NOTE** When using the front camera lens, the quick menus on the left side of the screen are **Camera swap** , **Video size** , **Live effect** , **Brightness** , and **Settings** . There is no flash setting when using the front camera lens to record video.



- ▶ **Edit quick menu**  : Allows you to edit the quick menus (icons on the left side of the viewfinder) for quick access to your favorite options. Tap the option icon to change, then tap the option you want.
- ▶ **Brightness**  : Defines and controls of the amount of light entering the lens. Slide the brightness indicator along the bar toward “-” for a lower brightness image or toward “+” for a higher brightness image.
- ▶ **White balance**  : Defines the ambient lighting to improve the color qualities of the video under different lighting conditions. Choose from **Auto**, **Incandescent**, **Sunny**, **Florescent**, and **Cloudy**.
- ▶ **Color effect**  : Applies artistic effects to videos. Choose from **None**, **Mono**, **Sepia**, and **Negative**.
- ▶ **Geotagging**  : Sets the camcorder to add location information to the video. This is ideal for geotagging purposes. Choose **Off** or **On**.
- ▶ **Storage**  : Sets where to store your videos. Choose from **SD card** or **Internal storage**.

## Reverting to the Default settings


To reset to the default settings, from the **Video camera** application, tap (or press) the **Menu Key** , tap **Reset**, then **Yes**.

## Recording a quick video

1. Open the **Camera** application.
2. Slide the **Mode switch** icon  down to toggle it to Video mode. The camera **Mode switch** icon changes to  and the Capture icon changes to .
3. Hold the phone horizontally and point the lens toward the subject of the video.
4. Tap the **Record** icon  once to start recording.
5. The video length timer begins counting. You can tap the **Pause** icon  to pause the recording, then tap the **Record** icon  to resume the same recording file.
6. Tap the **Stop** icon  to stop recording.

**NOTE** Tapping (or pressing) the **Back Key**  also stops the recording. Tap  to capture a picture while recording video.


## Watching your saved videos

1. In the viewfinder, tap the video thumbnail at the bottom of the Camera application.
2. Your Gallery will appear on the screen.
3. Tap the **Play** icon  in the middle of the still image of the video to play it automatically.


## Adjusting the volume when viewing a video





To adjust the volume of a video while it is playing, use the **Volume Keys** (at the bottom edge of the phone while held horizontally to view your videos).


## Viewing your videos list

You can access your videos from Video camera mode. Just tap the video thumbnail at the bottom of the Camera screen, then flick left or right to scroll through your videos (and photos). Tap the **Play** icon  in the middle of the image to play the video recording.


## Video Options

Open the Video camera application, then tap the video thumbnail  at the bottom of the screen. While viewing a still image of a video, tap the screen to access the following options:

- ▶  Tap to share the video using SmartShare (turn on Wi-Fi if it's not already on).
- ▶  Tap to return to video camera mode to record a new video (or take a new photo).
- ▶  Tap to select which application to use to share the video.
- ▶  Tap to delete the video.

Tap (or press) the **Menu Key**  to select **Move**, **Copy**, **Rename**, or **Details**.

## Gallery views

Open the **Video camera** application, then tap the video thumbnail  at the bottom of the screen.




- ▶ Your video images are displayed in full size. Swipe or flick your finger left or right to scroll through your videos (or photos).
- ▶ For quicker, direct access, you can tap the screen to display smaller film-like images of your videos across the bottom of the screen. Swipe or flick horizontally to quickly scroll through them, then tap the one you want to view.
- ▶ The pinch-to-zoom gesture allows you to easily zoom in and out of the displayed video image. Spread your fingers to zoom in and pinch your fingers to zoom out.
- ▶ Continue the pinch in gesture on the video image to display your videos in reduced size which allows you to swipe a video image up, off the screen to quickly delete it.

## Gallery

### Opening the Gallery application and Viewing Your Albums

Open the **Gallery** application to view albums of your pictures and videos.

#### To open the Gallery application



- ▶ From the Home screen, tap the **Apps Key**  > **Gallery** . You can also access it by tapping **Gallery**  from the Home screen.

#### Viewing your albums

The **Gallery** application presents the pictures and videos saved in your phone, including those you've taken with the **Camera** application and those you downloaded from the web or other locations.



- ▶ Tap an album to open it and view its contents.
- ▶ Tap a picture or video in an album to view it.




- ▶ Return to the main Gallery screen at any time by tapping  at the top left of the screen.
- ▶ Tap (or press) the **Menu Key**  to access **Search nearby devices**, **New album**, **Delete**, **Hide/Show album**, **Settings**, and **Help**.

## To share an album

You can share the entire contents of one or more albums or individual images or videos from an album.

1. From the Home screen, tap the **Apps Key**  > **Gallery** .
2. Touch and hold the desired album, tap **Share**, select the application to use to share your images, then complete the sending method as necessary.



## Gallery views


You can view your Gallery by albums or in a grid format. Tap the **Grid icon**  in the upper right corner of the screen to change from Album to Grid view. To view by album, tap **All** in the upper left corner of the screen.


## Working with photos

Use the **Gallery** application to view pictures that you've taken with the **Camera** application, downloaded, copied onto a microSD card (sold separately), or that are stored in Picasa web albums.


## To view and browse photos


1. From the Home screen, tap the **Apps Key**  > **Gallery** .
2. Open an album and tap a picture.

3. Tap (or press) the **Menu Key**  to access **Add/Remove location, Set image as, Move, Copy, Rename, Rotate left, Rotate right, Crop, Edit, Slideshow, or Details.**

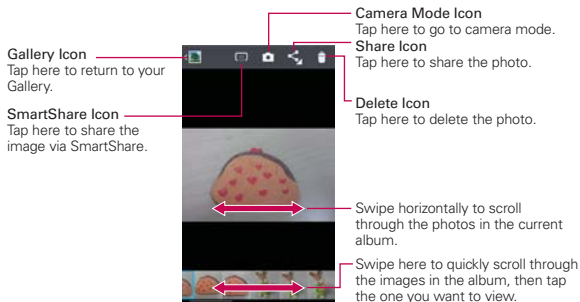




## To edit pictures

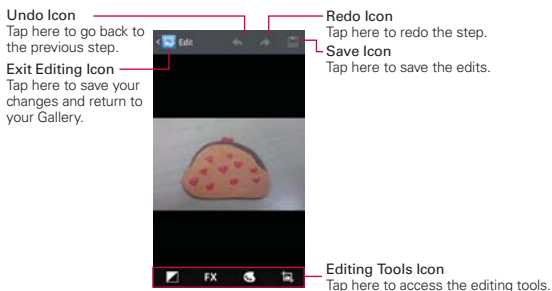

You can edit a photo by selecting the photo, tapping (or pressing) the **Menu Key** , then tapping **Edit** in the Options menu.



The following edits can be used on the photo:

- ▶ **Exposure**  - Choose from Auto-fix, Fill Light, Highlights, and Shadows.



- ▶ **Artistic effects**  - Choose from Cross-process, Posterize, Lomo, Documentary, Vignette, Film Grain, and Fisheye.
- ▶ **Color**  - Choose from Doodle, Warmth, Saturation, B&W, Sepia, Negative, Tint, and Duo-tone.
- ▶ **Adjustment**  - Choose from Crop, Red Eye, Face Glow, Straighten, Rotate, Flip, and Sharpen.

Tap the Exit editing icon  in the upper left corner of the screen to save and exit. You can also tap (or press) the **Back Key**  to exit and save your changes as a copy in your Gallery.

## Working with Videos

Use the **Gallery** application to play videos that you've taken with the **Camera** application and to share them with friends.


### To play videos

1. From the Home screen, tap the **Apps Key**  > **Gallery** .
2. Open an album and tap a video. The video plays in the orientation you recorded it in.





- ▶ Tap the screen while the video is playing to view the playback controls.

### Video Options

- ▶ While a video is playing, tap (or press) the **Menu Key**  to access Subtitle, Share, Trim, Delete, Settings, Details, and Help.




### QSlide while playing videos

You can play videos in a QSlide window allowing you to use other applications while the video is playing.




1. Open the **Gallery** application and begin playing the video.
2. Tap the **QSlide** icon  at the top of the screen to activate the QSlide feature to play the video in a QSlide window.
3. To close the QSlide window, tap  in the upper-right corner of its title bar.

### To share a video

You can share your videos in a variety of ways, including sending it by email or multimedia message (MMS), or via SmartShare or a Bluetooth device. You even have the option to share your videos publicly by uploading it to the YouTube™ website.

1. From the Home screen, tap the **Apps Key**  > **Gallery** , then tap an album.
2. While viewing an album, tap the **Share** icon  at the top of the screen.
3. Checkmark the desired videos, then tap **Share**.
4. In the dialog box that opens, tap the application you would like to use to share the selected videos.
5. Enter the necessary information and share it.

### To delete a video

1. From the Home screen, tap the **Apps Key**  > **Gallery** , then tap an album.
2. While viewing an album, tap the **Delete** icon  at the top right corner of the screen.
3. Tap to checkmark the video(s) you want to delete.
4. Tap **Delete** at the bottom of the screen.
5. Tap **Yes** to confirm.

**NOTE** Touch and hold a video file to delete a single video. Tap **Delete**, then tap **Yes** to confirm.

## The Video Editor application


The **Video Editor** application allows you to create and edit video files using the videos (and photos) stored on the phone.

**NOTE** The Video Editor application supports only photos or videos which were recorded using this device.






### Opening the Video Editor application

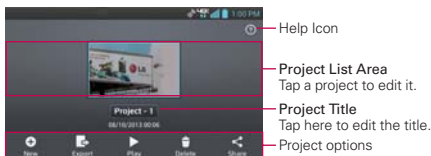- From the Home screen, tap the **Apps Key**  > **Video Editor** .

### Project list screen



### Project Options


- **New** : Tap to create a new project.
- **Export** : Tap to export the finished project to play in other applications.
- **Play** : Tap to play your video project.
- **Delete** : Tap to delete the video project.
- **Share** : Tap to share the video project with other applications, such as YouTube.








## Project edit screen

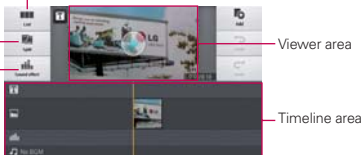**List Icon**  
Tap to view the Project list screen.

**Split Icon**  
Tap to split the current clip.



**Sound Effect Icon**  
Tap to add a sound effect to the selected clip.



- ▶ **List** : Tap to exit the Project edit screen and access the project list screen. The current project is saved automatically.
- ▶ **Split** : Tap to split the selected video clip into two portions.
- ▶ **Sound effect** : Tap to add a sound effect.
- ▶ **Add** : Tap to add additional video, images, or audio clips.
- ▶ **Undo** : Tap to undo the last action.
- ▶ **Redo** : Tap to redo the previously removed action.
- ▶ **Add text** : Tap to add text to a video or image clip.

## QSlide while playing videos in the Video Editor application

You can play videos in a QSlide window allowing you to use other applications while you are watching a video in the **Video Editor** application.

1. Open the **Video Editor** application and begin playing the video.
2. Tap the **QSlide** icon  at the top of the screen to activate the QSlide feature to play the video in a QSlide window.
3. To close the QSlide window, tap  in the upper-right corner of its title bar.

## Using the Video editor

### Zoom in or out of the timeline

Use the pinch-to-zoom gesture to change the timeline view. Pinch out to zoom in or pinch in to zoom out within the timeline.

### Move or delete a clip

Touch and hold clip, then drag it to a new location (or to the trash can to delete it).

### Trim a clip

Tap a clip to display the trim bars. Drag the trim bars to shorten or lengthen the clip.

### Transitions between clips


Tap the transition effect icon  between clips to select a transition effect and duration to insert.




## The Video Wiz application



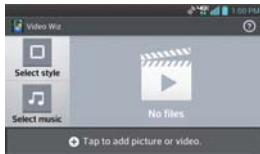


You can make your own movie using your images, videos, and music.


### Opening and using the Video Wiz application

1. From the Home screen, tap the Apps Key  > Video Wiz .





2. Tap the **Add** icon  to add images and/or video for your movie.
3. Tap the images and/or videos you want to make a video with, then tap the **Done** icon  at the top of the screen. Your added clips are displayed at the bottom of the screen.
  - ▶ To remove images or videos, touch and hold the image or video, then drag it to the **Delete** icon  at the center of the screen.
  - ▶ To rearrange the files, touch and hold an image/video, then drag and drop it to the desired position.
4. Tap **Select style** to select the desired movie style.

- ▶ Scroll through and tap the style you want. A preview of the style is displayed when you tap it. Tap **OK** to select it.
- 5. Tap **Select music** to set the background music.
  - ▶ Select **Default for this style**, **Music track**, or **None**.
- 6. Tap the **Play** icon  to play your movie.
- 7. Tap the **Edit** icon  to edit the video clips using **Text**, **Sticker**, or **Trim**.
  - ▶ After editing the video clips, tap the **Done** icon .
- 8. Tap the **Save** icon  to save your movie.
- 9. Tap the **Revert** icon  to remove all of the edits previously applied to the images.

**NOTE** Tap the **Help** icon  if you want to see Help information about Video Wiz.

### QSlide while playing videos in the Video Wiz application

You can play videos in a QSlide window allowing you to use other applications while you are viewing a video in the **Video Wiz** application.

1. Open the **Video Wiz** application and begin playing the video.
2. Tap the **QSlide** icon  at the top of the video to activate the QSlide feature to play the video in a QSlide window.
3. To close the QSlide window, tap the  in the upper-right corner of its title bar.



## Play Store

Play Store allows you to browse and search for free and paid applications.

### To open the Play Store application

- ▶ From the Home screen, tap the **Apps Key**  > **Play Store** .



Tap here to search for apps.

### To get help with Play Store

Play Store Help web pages are available from all Play Store screens.

- ▶ Tap (or press) the **Menu Key**  > **Help**.

The **Chrome** application opens to the Play Store Help page, with links to many help topics.

### To open a screen with details about an application

- ▶ At any time while browsing in Play Store, tap an application to open its details screen.


The Application details screens include a description, ratings, comments, and related information about the application. From this screen, you can download, install, uninstall, rate the application, and more.

### To return to the Play Store home screen


You can return directly to the Play Store home screen from most other screens in Play Store.

- Tap the **Play Store** icon  at the top left corner the screen.

### Play Store menu options

Tap (or press) the **Menu Key**  to access **My apps**, **My wishlist**, **Redeem**, **Accounts**, **Settings**, and **Help**.

### Your Wishlist

While viewing an app (or music, games, etc.), tap the **Wishlist** icon  at the top of the screen to add it to your wishlist for future reference.

## Downloading and Installing Applications

When you find an application you want, you can install it on your phone.

### To download and install an application

**NOTE** Before you can download a paid application, you must set up a billing arrangement.

1. Find an application you want and open its details screen.

In the application's details screen, you can read more about the application, including its cost, overall rating, and comments by users. Scroll down to the **Developer Info** section to view more applications by this developer, visit the developer's website, or send the developer an email message.



**Price/Install button**  
Indicates the cost or install for free.

2. Tap the **Price** button (for paid applications) or the **Install** button (for free applications). The screen will display what the application can access, such as your data and device functions, if you continue with the download.

If the application requires access to your data or control of any functions on your phone, Play Store tells you what the application can access.

**WARNING!**

Read this screen carefully. Be especially cautious with applications that have access to many functions or to a significant amount of your data. Once you accept the application download on this screen, you are responsible for the results of using this item on your phone.

3. If you agree to the application's access requirements, tap **ACCEPT**.
  - ▶ If you selected a paid application, you're redirected to the Google™ Checkout screen to pay for the application before it's downloaded to your phone.
  - ▶ After accepting the application's access requirements, you receive a series of notifications as the application is downloaded and then installed on your phone.

When the application is installed, you can tap the notification to open the application or open it by tapping its icon in the Applications screen.

You have 15 minutes to try out an application and, if you decide you don't want it, to uninstall it for a refund.

If you have another Android™ phone, you can download a paid application to that phone using the same Play Store account, at no additional charge.

## To create a Google Checkout account

You must have a Google Checkout account associated with your Google Account to purchase items from Play Store.

- ▶ On your computer, go to <http://checkout.google.com> to establish a Google Checkout account.

**OR**

- ▶ The first time you use your phone to buy an item from Play Store, you're prompted to enter your billing information to set up a Google Checkout account.

**WARNING!**

When you've used Google Checkout once to purchase an application from Play Store, the phone remembers your password, so you don't need to enter it the next time. For this reason, you should secure your phone to prevent others from using it without your permission.

## Music

### Transferring Music Files to Your Phone

The **Music** application plays audio files that are stored in your phone's internal memory or on a microSD card (sold separately). Copy audio files from your computer to your phone (or microSD card) before you open the **Music** application.

**NOTE** The LG USB driver needs to be installed on your PC before connecting your phone to transfer music.

#### To copy music files into your phone

1. Connect the phone to your computer with a USB Cable. If the default connection mode is not set to Media sync (MTP), open the Notifications panel and tap **USB connected > Media sync (MTP)**. Your computer will prompt you with different actions to take. Choose to open the folder to view files.
  - ▶ Use the computer to organize your audio files then create a music folder. You can use subfolders to organize your music files, or you can simply copy the audio files into your phone's memory.
2. Use the computer to copy music and other audio files into the music folder (or subfolders) that you created.
3. To disconnect your phone, open the **Notifications panel** and tap **USB connected > Charge only**. Then disconnect the USB Cable from the phone.

### Opening Music and Working with Your Library

After you've copied some music into your phone, you can open the **Music** application and view your library of music files. Your music files are sorted and displayed based on the tab you select.

## To open Music and view your music library

- From the Home screen, tap the **Apps Key**  > **Music** .

The **Music** application searches for music files you copied into your phone, then builds a catalog of your music based on the information contained in each music file. This can take from a few seconds to several minutes, depending on how many files you've copied into the phone. When the catalog is complete, the Music Library screen opens.

The Music Library displays your music organized by **Songs, Albums, Artists, Genres, Playlists, Folders**, or accessed via **SmartShare**. The Music Library functions the same whether the phone is in portrait (upright) or landscape (sideways) orientation (your music is listed in alphabetical order and you tap an entry to play it), but the screens look a little different.


- When held upright, the Music tabs are at the top of the screen. Swipe sideways on the screen to scroll through the Music tabs. The Playback screen is displayed at the bottom of the screen and the current song is displayed to its right. An alphabetical search directory is displayed along the right side of the screen.
- When held sideways, the Music tabs are displayed in a drop-down list at the top left of the screen to tap and select. You can also swipe sideways on the screen to scroll through the Music tabs. The Music Playback screen is displayed at the top right of the screen.

To switch views, simply select a Music tab.

### Music Tab

Tap here to select a different tab.

Music is listed in alphabetical order.

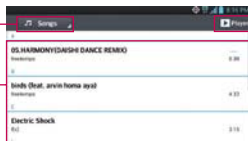


### Music Player Icon

Tap here to open the Music Player.

Tap one of the entries to play it.

Sideways Music Library Screen


### To search for music in your library

1. Open the main Music Library screen, then tap (or press) the **Menu Key**  > **Search**.
2. Start typing the name of the artist, album, or track you're looking for. Matching songs are displayed in the list below the search box.
3. Tap a matching song to play it or tap a matching album or artist to view a list of associated songs.

### To delete a song


- ▶ Touch and hold a song in a Music Library list. In the Context menu that opens, tap **Delete**, then tap **Yes**.


#### OR

- ▶ On the Playback screen, tap (or press) the **Menu Key**  > **Delete** > **Yes**.

You can also delete music files from your phone (or the microSD card) when your phone is connected to the computer. To do this, browse for the music files you want to delete then delete them from the folder.

### To delete multiple songs

- ▶ Open the Music Library screen, tap the **Songs** tab, tap (or press) the **Menu Key** , then tap **Delete**. Checkmark each of the songs you want to delete, tap **Delete** at the bottom of the screen, then tap **Yes** to confirm.

**NOTE** Tap (or press) the **Menu Key**  from another Music tab to delete one or more of the items in that selected tab.


### Playing Music


You can listen to music using the phone's built-in speaker, through a wired headset, or through a wireless Bluetooth stereo headset that supports the A2DP profile.

## To play music

- ▶ Tap a song in your Music Library to listen to it.

OR

- ▶ While viewing a list of tracks in an album, tap (or press) the **Menu Key**  > **Select to play**. Choose the songs you wish to play, then tap **Play**.

The Playback screen opens and the song you tapped or the first song in the album or other playlist starts to play. Your music continues to play even when you switch applications or receive a phone call. The tracks in the current playlist play in order until it reaches the end, then stops. If you choose a repeat option (using the Repeat icon ) , playback only stops when you stop it.



Playback Screen













Tap here to restart, pause, play, or skip.

You can return to the Playback screen from most other screens in the **Music** application by tapping the currently playing song at the bottom of the screen (when held upright), or tapping the Music icon at the top right corner of the screen (when held sideways).

You can return to the Playback screen from any other application by opening the Notifications panel and tapping the ongoing music notification.


## To control playback

The Playback screen contains several icons that you can tap to control the playback of songs, albums, and playlists:


	Tap to pause playback.
	Tap to resume playback.
	Tap to skip to the next track in the album, playlist, or shuffle. Touch and hold to fast forward.
	Tap to restart the current track or skip to the previous track in the album, playlist, or shuffle. Touch and hold to rewind.
	Tap to open the current playlist.
	Tap to play the current playlist in shuffle mode (tracks are played in random order).
	Tap to toggle through the repeat modes to repeat all songs, repeat current song, or repeat off.
	Tap to set the Dolby Mobile setting, which enhances your music listening experience when listening with a connected headset.
	Tap the <b>Volume</b> icon to display the Volume slider bar, then adjust the playback volume on the slider bar.
	Tap to add the song to your Favorites playlist
	Tap to share the song via SmartShare.
	Tap to find the song on YouTube.

## To control playback volume

In addition to the techniques for setting media volume in the Sounds settings, you can control the volume of music in the **Music** application.


- ▶ Press the phone's up/down **Volume Keys**.  
A panel opens to show the current media volume.
- ▶ Tap the **Volume** icon  to display a volume slider bar to set the playback volume.

## To stop music playback and exit the Music Player

Tap the **Recent Apps Key** , tap **Task Manager** at the bottom of the screen, then tap **Stop**.



## To customize settings in the Playback or a Library screen

Tap (or press) the **Menu Key**  > **Settings** in the Music Library or the Playback screen.


- ▶ **Show notification:** Checkmark this setting to show the controller on the notification bar.
- ▶ **Sleep timer:** Turns off the player automatically. Choose from the following options to activate the sleep timer: **Off**, **After 10 min**, **After 20 min**, **After 30 min**, **After 1 h**, **After 2 h**.
- ▶ **Dolby Mobile:** Applies the following sound effect options (when using a headset): **Off**, **Neutral**, **Expansive**, **Bass Boost**, **Treble Boost**, **Vocal Boost**.

## To use a song as a ringtone

You can use a song as your phone ringtone, in place of one of the ringtones that come with the phone.

- ▶ Touch and hold a song in the Music Library list. In the Context menu that opens, tap **Set as ringtone**.


**OR**

- ▶ On the Playback screen, tap (or press) the **Menu Key**  > **Set as ringtone**.

## Working with Playlists

You can create playlists to organize your music files into sets of songs, which you can play in the order you set or in a shuffle.

### To create a playlist

1. From the Music Library, select the **Playlists** tab.
2. Tap (or press) the **Menu Key**  > **New playlist**.
3. Enter a name for the playlist and tap **OK**. The new playlist is added to the Playlist tab.

### To add a song to a playlist

1. From the Music Library, touch and hold the song you want to add to a playlist.

2. In the context menu that opens, tap **Add to playlist**, then tap the name of the playlist you want to add it to.

### To remove a song from a playlist

1. Open a playlist.
2. Touch and hold the song you want to remove, then tap **Remove from playlist** in the Context menu that appears.

### To delete a playlist

1. Open the **Playlists** library.
2. Touch and hold the playlist, then tap **Delete** in the Context menu that appears.
3. Tap **Yes** to confirm.

### To rename a playlist

1. Open the **Playlists** library.
2. Touch and hold the playlist, then tap **Rename** in the Context menu that appears.
3. Enter a name, then tap **OK**.

## Videos



You can play a wide variety of videos using the **Videos** application.

**NOTE** Supported file formats are dependent on the software version of the phone.


### To open the Videos application

- ▶ From the Home screen, tap the **Apps Key**  > **Videos** .

### Using the Videos application






- ▶ Tap the **Display** icon  to access a drop-down list to set how to display your video files. Choose from **List**, **Grid**, and **Folder**.
- ▶ Tap the **Sort** icon  to access a drop-down list to set how to sort your video files. Choose from **Title**, **Date**, **Size**, and **Type**.

- ▶ Tap the **Share** icon  to select video files to share.





**NOTE** A memory card icon  on the video image indicates that it is stored on the microSD card (not the in phone's internal memory).

## Playing Videos

1. Open the **Videos** application.
2. Tap the video you want to play.
  - ▶ Hold the phone in the orientation it was recorded in for correct playback sizing.
  - ▶ Tap the screen to display the playback controls. The following options allow you to control the video playback:



	Tap to pause playback.
	Tap to play the video file.
	Tap to fast-forward playback in 3 second increments. Tap once to fast-forward in 10 second increments.
	Tap to rewind playback in 3 second increments. Tap once to rewind in 10 second increments.
	Tap to display a sliding scale to adjust the volume of the video.

## Video playback icons

In addition to the video playback controls, while viewing a video, use the icons at the top of the screen to access **QSlide** , **SmartShare** , and **Screen lock/unlock** . Tap the **View** icon  to cycle through the available screen views (original size, best fit, and full screen).



## Videos options

The following options are available from the Videos Options menu.

From the Home screen, tap the **Apps Key**  > **Videos** , then tap (or press) the **Menu Key** .

- ▶ **Auto play next:** The **On** setting automatically plays the next video in the list after the video ends. The **Off** setting displays your video list after the video ends.
- ▶ **Delete:** Tap to select the video(s) to delete. Checkmark each video to delete, tap **Delete** at the bottom of the screen, then tap **Yes** to confirm.
- ▶ **DivX® VOD:** Tap to display a pop-up window with the DivX registration code. Register your device with DivX before using this video-on-demand feature.

## SmartShare

Tap **Videos**  at the top of the screen, then tap **SmartShare** to connect to a device to view your video(s). Tap **SmartShare**  at the top of the screen, then tap **Videos** to return to your videos list.


## YouTube™

### Opening YouTube and Watching Videos

You can browse, search for, view, upload, and rank YouTube videos on your phone with the **YouTube** application.



#### To open the YouTube application

- ▶ From the Home screen, tap the **Apps Key**  > **YouTube** .

Tap a video to watch it or tap (or press) the **Menu Key**  for other YouTube options (**Settings**, **Feedback**, and **Help**).







## To watch and interact with YouTube videos

- ▶ Tap a video to play it.
- ▶ Tap the screen to view the Playback controls. You can pause and play the video or drag the slider to the point in the video you want to watch.
- ▶ Tap (or press) the **Back Key**  to stop playback and return to the videos list.
- ▶ Tap (or press) the **Menu Key**  for the following options: **Add to, Share, Like, Dislike, Copy URL, Flag, Settings, Feedback, and Help.**

For details about these features, visit the YouTube website.





## To search for videos


1. At the top of the main YouTube screen, tap the **Search icon** .
2. Enter the text to search for or tap the **Microphone icon**  to search by voice.
3. Tap a suggestion below the search box or tap the **Search Key**  on the on-screen keyboard (or press the **Return Key**  on the QWERTY Keyboard).
4. Scroll through the search results and tap a video to watch it.

## To share your videos on YouTube

You can share a video using the **YouTube** application. First, you must create a YouTube account and sign into it on your phone.




You can also share the videos you record with the **Camera** application by uploading them to YouTube.

1. From the Home screen, tap the **Apps Key**  > **YouTube** .
2. Tap  and tap your account.
3. Tap the **Upload icon**  and select the video.
4. Enter a title, description, and tags for your video.

5. If you want to share the video with everyone, tap the **Privacy** field and then tap **Public**. If not, tap **Private** or **Unlisted**.
6. Tap the **Upload** icon  to upload the video.

## FileShare

The **FileShare** application allows you to share files from your phone. It allows you to share multimedia files and documents with other devices via Wi-Fi Direct.

1. To access this application, from the Home screen, tap the **Apps Key**  > **FileShare** .
2. Choose the types of content you would like to share. Tap **Images**, **Videos**, **Music**, or **Documents**.
3. Tap the **Send file** icon  in the upper right corner of the screen, then checkmark the file(s) you want to share.
4. Tap **Send** at the bottom of the screen to begin scanning for available devices, then select the device you want from the list.
5. Tap **Send** at the bottom of the screen to use the selected device to send your file(s).


## SmartShare

**SmartShare** uses DLNA (Digital Living Network Alliance) technology to share digital content through a wireless network. Both devices must be DLNA certified to support this feature.

### To turn SmartShare on and allow sharing contents

1. From the Home screen, tap the **Apps Key**  > **SmartShare** .

**NOTE** Make sure that you are connected to a Wi-Fi network.

2. Tap (or press) the **Menu Key**  > **Settings**.
3. Set your sharing settings.
  - ▶ Remove the checkmark from the **Contents share** box if you don't want to share contents with other devices.

- ▶ Tap **Shared contents** to checkmark the types of content you would like to share. Choose from **Photos**, **Videos**, and **Music**.
- ▶ Checkmark **Receive files** if you would like to allow the other devices to upload media files to your phone.
- ▶ Tap **Sharing requests** if you would like to select how to accept sharing requests from other devices. Choose from **Always accept**, **Always ask**, and **Always deny**. You can change the options only if **Contents share** is disabled.






**NOTE** Make sure that the microSD card is correctly mounted and the Receive files option in the Settings menu is checkmarked.

4. SmartShare is now activated and ready to share contents.




### To control your renderer devices

Let your renderer device (e.g., TV) play multimedia contents from your remote content library (e.g., PC).

**NOTE** Make sure that the DLNA functionality of your devices is properly configured (e.g., TV and PC).

1. From the Home screen, tap the **Apps Key**  > **SmartShare** .
2. Tap the **Player** icon  at the top right of the screen, then tap the device you want to use from the renderer device list.
3. Tap the **Library** icon  at the top left of the screen, then tap the device that has your remote content library.
  - ▶ Browse through the content library to find the content(s) you want.
4. Touch and hold a content thumbnail and tap **Play** or tap (or press) the **Menu Key**  > **Play**.

### To share contents from your phone to your renderer device (e.g., TV)

1. While watching your photos or videos using the **Gallery** application, tap the SmartShare icon  /  /  that is displayed at the top of the screen.

 : Need to connect to a network. Allows you to connect.

 : Allows you to select a device on the network.





 : Content is currently being shared through SmartShare.

2. Select the device from the renderer device list to play the files.

**NOTE** Videos, Music, and Polaris Office 4 use similar steps to share contents.





**NOTICE** Check that your device is connected with your home network using a Wi-Fi connection to use this application. Some DLNA enabled devices (e.g., TV) support only the DMP feature of DLNA and will not appear in the renderer device list. Your device might not be able to play some contents.

### To download contents from the remote content library

1. From the Home screen, tap the **Apps Key**  > **SmartShare** .
2. Tap the **Library** icon  at the top left of the screen, then tap the device that has your remote content library.
  - ▶ Browse through the content library to find the content(s) you want.
3. Touch and hold a content thumbnail, then tap **Download** or tap (or press) the **Menu Key**  > **Download**.

**NOTICE** Some content types are not supported.

### To upload contents to the remote content library

1. From the Home screen, tap the **Apps Key**  > **SmartShare** .
2. Tap the **Library** icon  at the top left of the screen, then tap **My phone**.
  - ▶ Browse through the local content library to find the content(s) you want.
3. Touch and hold a content thumbnail, then tap **Upload** or tap (or press) the **Menu Key**  > **Upload**.
4. Select the device from the remote content library to be uploaded.

**NOTICE** • Some DLNA enabled devices do not support the DMS upload functionality and will not upload files.





• Some content types are not supported.




## Voice Recorder

The **Voice Recorder** application records audible files for you to use in a variety of ways. Use them simply to remind you about something you don't want to forget (like a grocery list) or record sound effects that you can attach to a message.







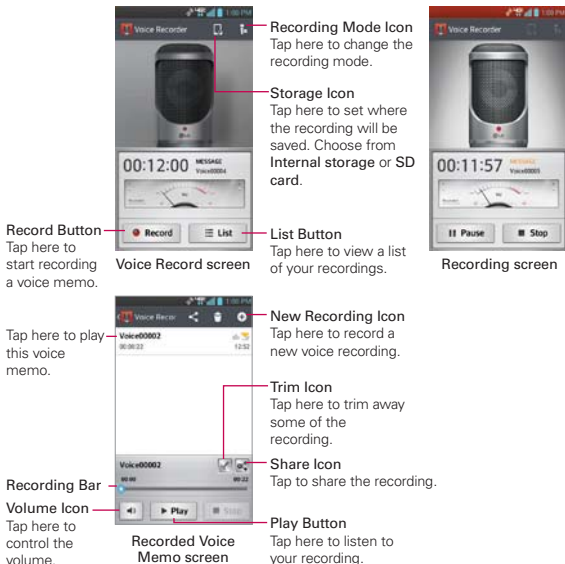

### Record a Voice Memo

1. From the Home screen, tap the **Apps Key**  > **Voice Recorder** .
2. Tap the **Record** button  to start recording.
3. Speak into the microphone.
4. When you're finished, tap the **Stop** button .







The recording is automatically saved to your recordings list.



## Play a Voice Memo

1. From the Home screen, tap the **Apps Key**  > **Voice Recorder** .
2. Tap the **List** button .
3. Tap the voice memo you want to play.
4. Use the following options while listening to a voice memo.
  - ▶ Tap the **Pause** button  to pause the recording.
  - ▶ Tap the **Stop** button  to end the playback and return to the List screen.
  - ▶ Tap the **Volume** icon  to increase or decrease the volume.
  - ▶ Move the slider on the recording bar to listen to a specific part of the voice memo.
  - ▶ Tap the **Trim** icon  to trim away segments at the beginning or end of the recording.
  - ▶ Tap the **Share** icon  to share the voice memo via Bluetooth, Email, FileShare, Gmail, Messaging, or Richnote.

## Managing your Voice Memos

1. From the Home screen, tap the **Apps Key**  > **Voice Recorder** .
2. Tap the **List** button .
3. Use the following options in the quick action bar at the top of the screen.
  - ▶ Tap the **New** icon  to return to the Voice Record screen to record a new audio file.
  - ▶ Tap the **Share** icon  to send (one or more) voice memos via **Bluetooth**, **Email**, **Gmail**, **FileShare**, **Messaging**, **Richnote**, or other compatible applications you have downloaded. Checkmark the voice memo(s) to share, then complete the sharing method as necessary.
  - ▶ Tap the **Delete** icon  to delete (one or more) voice memos. Checkmark the voice memo(s) to delete, tap **Delete** at the bottom of the screen, then tap **Yes** to confirm.

**NOTE** You can also touch and hold an audio file in the list to select **Share**, **Delete**, **Rename**, **Trim**, or **Details** in the Context menu that appears.

## Calendar

### Viewing Your Calendar and Events

Open the **Calendar** application to view events you've created or that others have invited you to.

When you first set up your phone, you configured it to use an existing Google Account or you created a new account. The first time you open the **Calendar** application on your phone, it displays any existing calendar events from your Google Account on the web.


### To open the Calendar application

- ▶ From the Home screen, tap the **Apps Key**  > **Calendar** .

Events from each account you've added to your phone and configured to synchronize calendars is displayed in your Calendar.



Events from each calendar account are displayed in a different color.

### Calendar Options menu

Tap (or press) the **Menu Key**  to access the following options: **QSlide**, **Go to date**, **Search**, **Sync now**, **Calendars to display**, **Delete**, and **Settings**.

### QSlide for the Calendar application

You can view your calendars in a QSlide window allowing you to easily check dates, obligations, etc. while using other applications at the same time.

1. Open the **Calendar** application.
2. Activate the QSlide feature to display the Calendar application in a QSlide window.
  - ▶ Tap the **QSlide** icon  at the top of the screen (when the phone is held horizontally).
  - ▶ Tap the **Menu Key** , then tap **QSlide** (when the phone is held vertically).

- ▶ To close the QSlide window, tap  in the upper-right corner of its title bar.

### To change your calendar view

No matter where you are in the Calendar application, you can easily switch calendar views. Simply tap the date in the upper left corner of the screen to display a drop-down menu of calendar views. Tap **Day**, **Week**, **Month**, or **Agenda**.

- ▶ To view more information about an event in the Agenda, Day, or Week view, tap the event.
- ▶ To view the events of a day in Month view, tap a day. The event will be displayed below the month calendar in one of the other views. Tap the event to view its details.

### Dual Calendar Views

There is a calendar handle near the top center of the screen in Day, Week, and Agenda view. It allows you to open the Month view calendar at the top of the screen and another calendar view at the bottom. Drag the calendar handle downward to open the month calendar above the currently selected calendar type. Drag it back up to close it.

### Working in Day View


Day view displays a list of the events of one day, in a table of one-hour rows. The current time is indicated by a horizontal black line with grey shading in the timeslots that have passed above it. All-day and multi-day events are displayed at the top of the screen before the time slots. Part of the title of each event is displayed in the row that corresponds to when it occurs.

To view other days, simply swipe left to see future days and right to see past days.

## To switch to Day view

- ▶ Tap the date in the top left corner above the calendar, then tap **Day** in the drop-down menu.

Tap here to switch to Week, Month, or Agenda view.

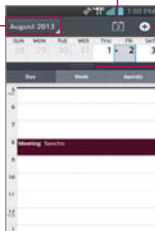

### Return to Current Date

Tap here to jump back to the current date in the Day calendar.

### New Event Icon

Tap here to create a new event.

### Month Calendar Handle

Drag this handle downward to display (or upward to hide) the Month dual view.

## To learn more about events in Day view

- ▶ Tap an event to view its details.

## To add an event in Day view

- ▶ Tap and hold a timeslot in the day to open a Context menu then tap **New event** to create a new event at that time.

OR

- ▶ Tap the **New event** icon .

**NOTE** You can create a new event in the same timeslot allowing you to juggle multiple events within the same timeframe.


## Working in Week View

Week view displays a chart of the events of one week. The current time is indicated by a horizontal black line with grey shading in the timeslots that have already passed. All-day and multi-day events are displayed at the top of the calendar. To view other weeks, simply swipe left to see future weeks and right to see past weeks.

## To switch to Week view

- ▶ Tap the date in the top left corner above the calendar, then tap **Week** in the drop-down menu.

Tap here to switch to Day, Month, or Agenda view.

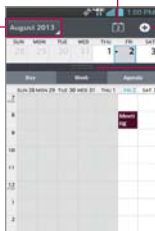

### Return to Current Date

Tap here to jump back to the current date in the Week calendar.

### New Event Icon

Tap here to create a new event.

### Month Calendar Handle

Drag this handle downward to display (or upward to hide) the Month dual view.

## To learn more about events in Week view

- ▶ Tap an event to view its details.

## To add an event in Week view

- ▶ Touch and hold a timeslot in the week to open a Context menu then tap **New event** to create a new event at that time.

OR




- ▶ Tap the **New event** icon .

**NOTE** You can create a new event in the same timeslot allowing you to juggle multiple events within the same timeframe.

## Working in Month View

Month view displays a chart of the events of the month. Segments of each day with scheduled events are blue in the day's vertical bar. To view other months, simply swipe upward to see future months and downward to see past months.

## To choose Month view style


- ▶ From the Home screen, tap the **Apps Key**  > **Calendar**  > **Menu Key**  > **Settings** > **Calendar view settings** > **Month view style**.

**Event brief** displays a brief description of the event in the timeslot on the calendar.

**Timeline** displays a line to indicate a calendar event occurs in the timeslot.

## To switch to Month view

- ▶ Tap the date in the top left corner above the calendar, then tap **Month** in the drop-down menu.

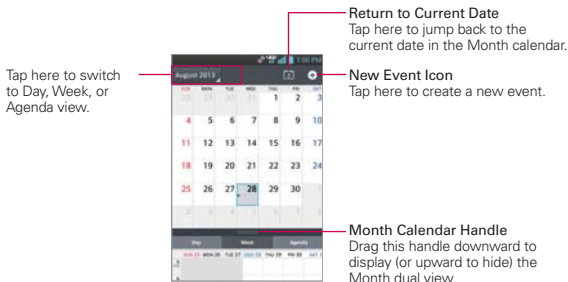

## To view more information about events in Month view

- ▶ Tap a day to display the events for that day at the bottom of the screen. You can then tap an event to view more information about it.

## To add an event in Month view

- ▶ Touch and hold a timeslot in the month to create a new event on that day.

**OR**

- ▶ Tap a day in the month, then tap the **New event** icon .

**NOTE** You can create a new event in the same timeslot allowing you juggle multiple events within the same timeframe.


## Working in Agenda View

Agenda view is a list of your events in chronological order by day. A month's worth of events is displayed. To show earlier Agenda events, tap **Touch to view events before** at the top of your Agenda list. To show later Agenda events tap **Touch to view events after** at the bottom of your Agenda list. All-day and multi-day events are listed at the start of each day.

### To switch to Agenda view

- ▶ Tap the date in the top left corner above the calendar, then tap **Agenda** in the drop-down menu.

Tap here to switch to Day, Week, or Month view.

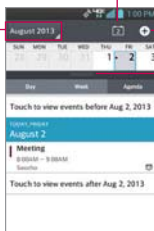

#### Return to Current Date

Tap here to jump back to the current date in the Agenda calendar.

#### New Event Icon

Tap here to create a new event.

#### Month Calendar Handle

Drag this handle downward to display (or upward to hide) the Month dual view.

### To learn more about events in Agenda view

- ▶ Tap an event to view its details.

## Viewing Event Details


You can view more information about an event in a number of ways, depending on the current view.

### To view information about an event

- ▶ In Agenda, Day, or Week view, tap an event to view its details.
- ▶ In Month view, tap a day to display the event(s) at the bottom of the screen in Day, Week, or Agenda calendar view. Then tap an event to view its details.



**Calendar Icon**  
Tap here to go back to Calendar view.

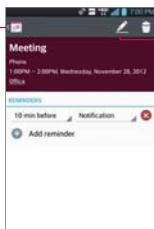

**Delete Icon**  
Tap here to delete the event.

**Edit Icon**  
Tap here to edit the event.

## While viewing an event's details

Tap the **Reminders** fields to change them (time and notification). Tap **Add reminder** to add another reminder, or tap the **Remove reminder** icon to remove the reminder.

If you have permission to change the event, you can tap the **Edit** icon (at the top of the screen) to edit the event or tap the **Delete** icon (at the top right corner of the screen) to delete the event.

## Event details options menu

- ▶ Tap (or press) the **Menu Key** , then tap **Share** or **Add to Tasks**.

## Setting an Event Reminder

You can set one or more reminders for an event, whether or not you created the event or have permission to edit its other details.


### To set an event reminder

3. Tap an event to view its details.
4. Tap **Add reminder** to automatically add a reminder for 10 minutes before the event. Tap it again to add additional reminders.
5. Tap the **Time** field to set the length of time before the event that you want to be reminded of it. Tap the **Notification** field to set how you want to be reminded (by Notification or by email).

When the time comes, you receive a notification about the event.


You can use Google Calendar on the web to configure additional reminder settings.

### To edit an event reminder

1. Tap an event to view its details.
2. Tap the existing **Time** field, then tap when you want to be notified.
3. Tap the corresponding **Notification** field, then tap how you want to be notified.
4. Tap the **Calendar** icon  in the upper left corner of the screen to save your changes and return to the Calendar application.

**NOTE** You can also tap (or press) the **Back Key**  to exit and save your changes.

### To delete an event reminder

1. Tap an event to view its details.
2. Tap the **Remove reminder** icon  next to the reminder field.

## Calculator

The **Calculator** application allows you to perform simple mathematical calculations.

### To open and use the Calculator

- From the Home screen, tap the **Apps Key**  > **Calculator** .

**QSlide Icon**  
Tap here to display the Calculator in QSlide format.



**History Key**  
Tap here to view your past calculations.








Basic Panel



Advanced Panel



- ▶ Enter numbers and arithmetic operators on the Basic panel.
- ▶ Drag the Basic panel to the left to open the Advanced panel, then drag to the right to go back to the Basic panel.
- ▶ When a calculation is displayed, you can touch and hold the Calculator's display to open a Context menu where you can copy (or cut) what you've entered to use it in other tools that you access.
- ▶ Tap the **Clear Key**  to delete the last number or operator you entered. Touch and hold the **Clear Key**  to delete all of the entered information.


**NOTE** Once a calculation is completed, the **Clear Key** changes from  that deletes individual digits to  which clears the displayed calculation.

- ▶ Tap the **History Key**  to view your calculator history. You can tap an entry to automatically reenter it on the display to recalculate it, or edit it.
- ▶ Tap (or press) the **Menu Key**  to open an Options menu to clear your calculation(s) history or change panels between Advanced and Basic.
- ▶ Tap the QSlide icon  in the upper left corner to display the calculator panel using QSlide.

## Using the Calculator in QSlide

The QSlide feature displays the calculator panel in a moveable window in the foreground while allowing you to access other phone features in the background.

- ▶ Tap  in the upper right corner to close QSlide.
- ▶ Tap the QSlide icon  in the upper left corner to return to the **Calculator** application.
- ▶ Drag the bottom right corner to resize the Calculator QSlide panel.
- ▶ Touch and hold the title bar to move it to another position on the screen.

- ▶ Drag the circle on the transparency bar to the left to make the QSlide calculator window transparent allowing you to access the screen functions underneath it. Drag it back to the right to use the QSlide window again.
- ▶ To close the QSlide window, tap  in the upper-right corner of its title bar.


## Alarm/Clock






You use the **Alarm/Clock** application to access the Alarms, Timer, World clock, and Stopwatch functions. These functions are accessed by tapping the tabs across the top of the screen, or swiping horizontally across the screen.

### To open the Alarm/Clock application



- ▶ From the Home screen, tap the **Apps Key**  > **Alarm/Clock** .


### Setting and Activating Alarms

The **Alarms** tab allows you to set varying alarm clocks. You can set an alarm by modifying an existing alarm or by adding a new one. After you've created one or more alarms, you can easily activate or deactivate an alarm by tapping its Alarm icon  to toggle it on (blue) or off (grey).

1. On the Home screen, tap the **Apps Key**  > **Alarm/Clock** .
2. Tap the **Alarms** tab  at the top of the screen, if necessary.
3. Tap the **New alarm** icon  at the bottom of the screen to add a new alarm or tap a current alarm icon  on the right side of the screen to activate an existing alarm (when the icon is blue, the alarm is set).

### To set an alarm

1. Open the **Alarm/Clock** application, then tap the **Alarms** tab  in the upper left corner of the screen.
2. Tap the **New alarm** icon  in the lower left corner of the screen to create an alarm, or tap an existing alarm to modify and set it.

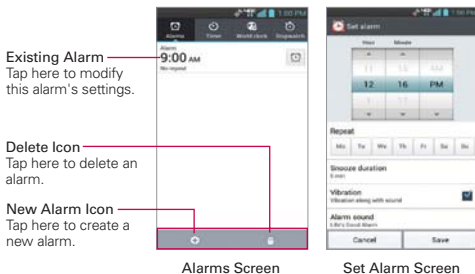


3. Scroll the time wheel to set the alarm time (**Hour** and **Minute**) and the time of day (**AM** or **PM**).
4. Tap the day(s) when you want the alarm to sound in the **Repeat** field. If you don't tap the Repeat setting, the alarm sounds only the one day you set it.
5. Tap **Snooze duration** to open a dialog box to set the amount of time to wait before sounding the alarm again if it is not dismissed. You can set the alarm to ring repeatedly from 5 minutes up to 1 hour.
6. Tap **Vibration** to checkmark the setting and have the phone vibrate, in addition to playing the alarm sound.
7. Tap **Alarm sound** to select a sound (tap **Alarm tone** or **Music**) for the alarm, then tap **OK**. The ringtone plays briefly when you select it.
8. Slide the button on the **Alarm volume** slider to the right to increase the alarm volume and to the left to decrease it. The alarm sound plays to help you determine the volume you want.
9. Tap **Auto app starter** to set the application you want to automatically open when you stop the alarm, then tap **OK**.
10. Tap **Puzzle lock** to checkmark the setting, which requires you to wake up enough to solve a simple puzzle to dismiss the alarm.
11. Tap **Memo** to enter information about the alarm. For example, to identify when to use it (e.g., class day).
12. When you're finished, tap **Save** at the bottom of the screen.

## When the alarm sounds

- ▶ Tap **Dismiss** or, if set, use the gesture feature of simply flipping the device over to stop the alarm.
- ▶ Tap **Snooze** to stop the alarm for the snooze duration you set.


**NOTE** If **Puzzle lock** is set to On, using the gesture feature of flipping the device over will snooze the alarm instead of turning it off.

## Alarm Settings

To access the Alarm settings, from the Alarms tab, tap (or press) the **Menu Key** , then tap **Settings**. The Alarm settings include **Alarm in silent mode**, **Side button behavior**, and **Puzzle lock**.



## Setting the Timer

The **Timer** tab can be used to alert you with an audible signal when a set amount of time has passed.




1. Open the **Alarm/Clock** application, then select the **Timer** tab .
2. Set the time on the digital timer. Tap the **Hour**, **Minute** and/or **Second** field(s) and enter the numbers as necessary.
3. Tap **Vibration** to checkmark the setting to have the phone vibrate when the set time expires.
4. Tap **Alert sound** to select an alert sound (tap **Alert tone** or **Music**) for the timer, then tap **OK**. Adjust the alert volume on the **Alert volume** slider bar, if necessary.
5. Tap **Start** at the bottom of the screen to begin the time countdown.
6. Once the alarm sounds, tap **Stop** to stop the timer.

## Setting the World Clock

The **World clock** tab allows you to set up a list of cities to easily check current times in other time zones with a quick glance.


1. Open the **Alarm/Clock** application, then select the **World clock** tab .
2. Tap the **New City** icon  at the bottom of the screen then search through the available cities for the one you want.

## Managing the World Clock Cities

- ▶ Tap the **New City** icon  at the bottom left corner of the screen to select another city for your list.
- ▶ Tap the **Delete** icon  at the bottom right corner of the screen to select one or more cities to delete from your list.
- ▶ Tap (or press) the **Menu Key**  to delete all of the cities in your World Clock list.
- ▶ Touch and hold an entry in the list to open a Context menu to select **Set daylight saving** or **Delete**.

## Using the Stopwatch

The **Stopwatch** tab allows you to use your phone as a Stopwatch.






1. Open the **Alarm/Clock** application, then select the **Stopwatch** tab .
2. Tap **Start** at the bottom of the screen to start timing and tap **Stop** to stop the time.  
You can use the Lap function by tapping **Lap** to record lap times.
3. Tap **Reset** to reset the Stopwatch or tap **Resume** to continue monitoring time.

## Polaris Office 4



With Polaris Office 4 you can view, create, and edit document files on your device. Files can be accessed from your phone's internal memory, a microSD card mounted on your device, or from downloaded email attachments.

The Polaris Office 4 application supports the following file formats: txt, doc, docx, xls, xlsx, ppt, pptx, pdf.

### Create a New Document




1. From the Home screen, tap the **Apps Key**  > **Polaris Office 4** .
2. Register your email address on the Registration page (when you first access Polaris Office 4).
3. Tap the **New file** icon  at the top right of the screen to start a new document.
4. Tap a document type.
5. Enter contents in the document using the tools at the top of the screen and the keyboard (on-screen or slide-out QWERTY).
6. When you're done working on the document, tap the **File** icon  > **Save** (or **Save as** to enter a new document name) to save.
7. Enter the document name and tap **Save** in the top right corner of the screen.
8. Tap (or press) the **Back Key**  to exit.

### View and edit a document on your device

1. From the Home screen, tap the **Apps Key**  > **Polaris Office 4** .
2. Tap **List view**, **Grid view**, or **Favorites** at the bottom of the screen to search for documents in your phone's internal memory (or on a microSD card if inserted and mounted).
3. Tap the document that you want to view or edit.



**NOTE** You can also open an attachment in an email by tapping the attachment in the message.
4. The document opens for you to view. If you want to edit it, tap anywhere on the document.
  - ▶ To move between pages or pan through the document, scroll in the corresponding direction.
  - ▶ To change the zoom level, simply pinch-to-zoom to achieve the zoom level you want.





- ▶ Use the toolbar at the top of the screen to edit the document (Word, Excel, or PowerPoint file).
  - ▶ Tap the **File** icon  for the following additional options: **Save**, **Save as**, **PDF Export**, **Find & Replace**, **Page layout**, **Full width view**, **Reflow text**, **Text-to-speech**, and **Share**.
5. When you're finished editing, tap the **File** icon  > **Save**. Then tap (or press) the **Back Key**  to exit.

### Polaris Office 4 toolbar

The **Polaris Office 4** application has a toolbar that appears automatically when you create a document.

1. To display the toolbar in an existing document, tap the **Tools** icon .
2. Tap the **Font**, **Paragraph**, or **Style** tab and choose the desired options.
3. To hide the tools, tap the **Tools** icon  again.

### Polaris Office 4 Options Menu

- ▶ Tap (or press) the **Menu Key**  from the Polaris Office main screen to access **Help** and **Settings**.
- ▶ Tap (or press) the **Menu Key**  while viewing a document to access **Details**, **Help**, and **Settings**.

## File Manager





The **File Manager** application allows you to manage the files in your phone's internal memory (or external storage).

### To open the File Manager application

From the Home screen, tap the **Apps Key**  > **File Manager** .

### File Manager Options

While viewing a file path, you have access to the following File Manager options:

- ▶ : Allows you to create a new folder.
- ▶ : Allows you to move files and folders to another folder.
- ▶ : Allows you to delete files and folders.
- ▶ : Allows you to search for files.


Tap (or press) the **Menu Key**  to access the following options.

- ▶ **Sort by:** Allows you to sort files and folders by Name, Size, Date, and Type.
- ▶ **View by:** Allows you to display your files as a List or in a Grid.
- ▶ **Copy:** Allows you to copy files and folders and paste them in another location.
- ▶ **Share:** Allows you to select files and folders to share with others.
- ▶ **Zip:** Allows you to select files and folders to compress into a .zip file.
- ▶ **Exit:** Exits the application.





## Tasks

The **Tasks** application can be synchronized with your MS Exchange account. You can create a task, revise it, and delete it in MS Outlook or MS Office Outlook Web Access.

### To open the Tasks application

From the Home screen, tap the **Apps Key**  > **Tasks** .

### Tasks options

- ▶ : Tap to view All tasks, Overdue tasks, and Due today tasks.
- ▶ : Tap to refresh your task list.
- ▶ : Tap to search for tasks.
- ▶ : Tap to create a new task.

Tap (or press) the **Menu Key**  to access the following options:

- ▶ **Sort by:** Allows you to sort your tasks by Creation order, Due date, Subject, or Priority.
- ▶ **Accounts and Lists:** Allows you to select which accounts and lists to display.
- ▶ **Import/Export:** Allows you to import or export tasks to a microSD card or your phone's internal storage.
- ▶ **Settings:** Allows you to set the following settings.

### TASKS VIEW SETTINGS

- **Set default account:** Allows you to set the default tasks account.
- **Hide completed tasks:** Allows you to set when to hide completed tasks.

### REMINDER SETTINGS

- **Notifications:** Checkmark this setting to enable reminder notifications.
- **Notification sound:** Allows you to set the reminder notification sound.
- **Vibrate:** Allows you to set the vibrate setting for reminder notifications.
- **Pop-up notification:** Checkmark this setting to display a pop-up reminder of your Task notification(s).

The following options are available when you touch and hold a task in the tasks list.

- ▶ **Edit:** Allows you to edit the task.
- ▶ **Move:** Allows you to move the task to another list.
- ▶ **Delete:** Allows you to delete the task.
- ▶ **Share:** Allows you to share the task with others via Email or Gmail.



## Settings

The **Settings** application contains most of the tools for customizing and configuring your phone. All of the settings in the **Settings** application are described in this section. For settings specific to the **Chrome** application, see the Chrome section and for settings specific to the Google account, see the Gmail section.

### To open the Settings application

- ▶ From the Home screen, tap (or press) the **Menu Key**  > **Settings**.



OR

- ▶ From the Home screen, tap the **Apps Key**  > **Settings** .

### To switch to tab view

The settings are grouped into categories.

- ▶ List view displays each category (5) in blue capital letters followed by its related settings. Scroll up and down through the screen.
- ▶ Tab view displays each category (4) in tabs (at the top of the screen) that include its related settings. Swipe to the left or right to switch between tabs or tap a tab to select it.


1. From the Home screen, tap (or press) the **Menu Key**  > **Settings**.
2. Tap (or press) the **Menu Key**  > **Switch to tab view**.
3. Tap **OK** to confirm.

**NOTE** Instructions to perform tasks in this guide are based on the default list view.


## WIRELESS & NETWORKS

The Wireless and Networks category allows you to configure and manage your device's wireless radio communications.

### Airplane mode

Tap the **Airplane mode** switch  to toggle between On and Off. **On** disables all wireless connections.

## Wi-Fi

Tap the **Wi-Fi** switch  to toggle between On and Off. Tap **Wi-Fi** to access the following Wi-Fi settings:

**Notify Me:** Checkmark to be notified when a Wi-Fi network is in range when you launch an application.

**Wi-Fi settings:** Opens a dialog box to set automatic connection to VZW Wi-Fi network, Audio notification, and Vibration notification.

### WI-FI NETWORKS

The list of all of the Wi-Fi networks that are within access range. Tap one to access it.

**NOTE** Tap **SEARCH** at the bottom of the screen to scan for available Wi-Fi networks. Tap **ADD NETWORK** at the bottom of the screen to add a new network.

Tap (or press) the **Menu Key**  in the Wi-Fi menu to access the following options.

**WPS Push Button:** Information to connect to a secured Wi-Fi network with a WPS button.

**WPS Pin Entry:** Information to connect to a secured Wi-Fi network with a WPS PIN.

**Wi-Fi Direct:** Allows direct connection with Wi-Fi devices without any access point.

**Advanced:** Accesses the following advanced Wi-Fi settings.

**Keep Wi-Fi on during sleep:** Opens a dialog box to set Wi-Fi during sleep.


**Avoid poor connections:** Checkmark to only use a Wi-Fi network that it has a good Internet connection.

**MAC address:** Displays the MAC address.

**IP address:** Displays the IP address.

**Manage networks:** Opens a screen to specify the order in which the available networks will be detected.


## Bluetooth

Tap the **Bluetooth** switch  to toggle between On and Off. Turn it on and tap **Bluetooth** to access the following settings:

**VS890 4G:** Checkmark to allow other Bluetooth devices to see your phone for pairing and connection.

### AVAILABLE DEVICES

The list of all of the available in-range Bluetooth devices.

Tap (or press) the **Menu Key**  in the Bluetooth menu to access the following options.

**Rename phone:** Changes your phone name for easier identification. Enter your new phone name, then tap **Save**.

**Visibility timeout:** Opens a dialog box to set the amount of time other Bluetooth devices can see your phone for pairing and connection. Choose from **2 minutes**, **5 minutes**, **1 hour**, or **Never time out**.


**Show received files:** Displays a list of your Bluetooth received files.

**Device search option:** Opens a dialog box to select the type of Bluetooth device(s) you want to search for. Choose from **All devices**, **Headset**, **Mobile phone**, **PC**, or **Input device (keyboard, mouse, etc.)**. The default setting is **All devices**.

**Help:** Displays information about Bluetooth features including **What is Bluetooth?**, **Pair and connect to devices**, **How to make phone visible**, **Search for devices**, and **Configure Bluetooth device**.


**NOTE** Tap **Search for devices** at the bottom of the screen to search for in-range Bluetooth devices.

## Mobile data

This menu allows you to manage your mobile data usage. Tap the **Mobile data** switch  to toggle between On and Off.

**Limit mobile data usage:** Checkmark to limit your mobile data. Your mobile data connection will be disabled when you reach the limit you set. Set your data usage limit by dragging the red line on the graph provided.

**Alert me about data usage:** Checkmark to allow your phone to alert you when your mobile data usage reaches the warning amount you have set. Set your warning amount by dragging the yellow line on the graph provided.

**Data usage cycle:** Displays your current data usage cycle. Tap the drop-down menu icon  to change the cycle date.

**Data usage graph:** Displays your data usage on a graph.

**Data usage applications:** Applications are displayed with their data usage on a bar graph. Tap one to see more detailed information.

To access advanced options, tap (or press) the **Menu Key** .

**Data roaming:** Checkmark to allow you to use data connections when you are roaming.

**Restrict background data:** Checkmark to disable sync in the background while using a mobile network.

**Auto-sync data:** Checkmark to set the device to sync contact, calendar, email, bookmark, and social network image data automatically.

**Show Wi-Fi usage:** Checkmark to view your data usage via Wi-Fi.

**Mobile hotspots:** Sets Wi-Fi networks that may be used as mobile hotspots for mobile data usage.

## Call

This menu allows you to manage various call settings.

**Voicemail:** Tap to set your standard voicemail details, including the following:

**Service:** Changes your voicemail service. The default is **My carrier**.




**Setup:** Changes your voicemail access (e.g., the number that dials your voicemail service).

**Notification sound:** Sets the sound for notifications.


**Vibrate:** Sets the vibrate mode for new voicemail notifications. Choose from **Always**, **While in vibrate only mode**, and **Never**.

**Incoming call popup:** Checkmark to display an incoming call popup when using the Camera and/or the Videos applications.

**Call forwarding:** Enables or disables call forwarding.

**Ignore with message:** Checkmark to enable the Quick text message feature. It allows you to use the **Ignore with message** option to ignore an incoming call and respond to the caller with a specified text message instead. Tap the **Settings** icon  to manage your Quick messages. Tap the **New** icon  to create a new quick message, tap a message to edit it, or tap the **Delete** icon  to delete a message.

**Privacy keeper:** Sets whether the phone displays the caller's information when you receive a call. Choose from **Hide all information**, **Show number only**, or **Disable**.

**Power button ends call:** Checkmark to allow you to end voice calls by pressing the **Power/Lock Key**  (instead of returning to the Call screen to end the call).

**Show dialpad:** Sets which types of calls will automatically display the dialpad. Choose from **Voicemail / Toll-Free**, **All calls**, or **Customized number**.

**Auto retry:** Sets the amount of time to wait before automatically redialing a call that failed to connect. Choose from **Off**, **10 seconds**, **30 seconds**, or **60 seconds**.

**TTY mode:** Sets the TTY mode to communicate with other TTY devices.

**DTMF tones:** Sets the length of the DTMF tones. Choose **Normal** or **Long**.

**Assisted dialing:** Configures the Assisted dialing options when you are traveling outside of your home country.

**Voice privacy:** Checkmark to enable enhanced privacy mode.

**Auto answer:** Sets the time before a connected hands-free device automatically answers an incoming call.




## Wireless storage

This menu allows you to share files with your phone and computer. Tap the Wireless storage switch in the top right corner of the screen to toggle between On and Off. Connect to a network, then select the devices to allow connection.

## Tethering & Networks

This menu allows you to manage other network and wireless settings.

### TETHERING

**Mobile Broadband Connect:** Tap the **Mobile Broadband Connect** switch  to toggle between On and Off. **On** allows you to share the phone's mobile data connection using a USB connection. This setting is greyed out if not connected via USB.


**Mobile Hotspot:** Sets up your mobile hotspot feature.

**Mobile Hotspot:** Checkmark to turn your phone into a mobile hotspot to share your phone's internet connection with up to ten Wi-Fi capable devices. As other devices are connected via Mobile Hotspot on this device, it may cause your device battery to drain more quickly.

**Configure:** Sets the SSID and key for your mobile hotspot.

**Manage device:** Sets the devices allowed to use this hotspot connection.

**Help:** Displays hotspot help information. Connected devices are listed at the bottom of the screen.

**Bluetooth tethering:** Tap the **Bluetooth tethering** switch  to toggle between On and Off. **On** shares the phone's internet connection with other Bluetooth devices.

**Help:** Displays information regarding mobile broadband connection, mobile hotspot, and Bluetooth tethering.

### NETWORK SETTINGS

**VPN:** Sets up and manages Virtual Private Networks (VPNs).

**Mobile networks:** Sets up options for data, roaming, networks, and APNs (Access Point Names).

## DEVICE

The Device category allows you to configure and manage the general device functions such as sound and display options.


### Mode change

Changes the mode used to operate the phone. Starter mode helps new smartphone users become accustomed to using the device. Standard mode is recommended for experienced smartphone users.

### Sound

This menu allows you to manage your device's sound settings.

#### SOUND PROFILE


**Quiet mode:** Tap the **Quiet mode** switch  to toggle between On and Off. Tap **Quiet mode** to set the days and times to automatically turn off all sounds except alarms and media. You can also set call exceptions.


**Silent mode:** Sets the Silent mode to **Off**, **Vibrate**, or **On**.

**Volumes:** Sets individual volume levels for Phone ringtone, Notification sound, Touch feedback & system, and Music, video, games, and other media. Move the slider button on each volume bar to set the volume.

#### RINGTONE & NOTIFICATIONS

**Ringtone with vibration:** Checkmark to set the phone to vibrate in addition to the ringtone when you receive calls.

**Phone ringtone:** Sets the ringtone for calls. You can also add a ringtone by tapping the **New** icon  at the top right corner of the screen.

**Notification sound:** Sets the sound for notifications. You can also add a sound by tapping the **New** icon  at the top right corner of the screen.

## FEEDBACK & VIBRATE

**Gentle vibration:** Checkmark to gradually increase the vibration strength up to the full vibration set.

**Vibrate strength:** Sets the vibration strength for Incoming calls and Notifications.

**Incoming call vibration:** Sets the the type of vibration for incoming calls. Choose from **Long Lasting**, **Rapid**, **Short repeated**, **Standard**, or **Ticktock**.

**Dial pad touch tones:** Checkmark to set the phone to make a sound when you tap the dialpad.

**Touch sounds:** Checkmark to set the phone to make a sound when you tap an item to activate it (e.g., tapping a checkbox).

**Screen lock sound:** Checkmark to set the phone to make a sound when the screen is locked using the **Power/Lock Key** and also when it is unlocked.

**Sound when roaming:** Checkmark to enable Enhanced Roaming Indication.

**Emergency tone:** Sets the device's behavior when an emergency call is placed.

**Vibrate on touch:** Checkmark to set the phone to vibrate when you tap the touch key lights on the front of the device.

## Display

This menu allows you to manage your phone's display settings.

### SCREEN

**Brightness:** Adjusts the brightness of the screen. For best battery performance, use the dimmest comfortable brightness.

**Screen timeout:** Sets the amount of time before the screen times out.

**Auto-rotate screen:** Checkmark to set the phone to automatically rotate the screen based on the phone orientation (portrait or landscape).

## FONT

**Font type:** Sets the type of font used for the phone and menus.

**Font size:** Sets the size of the font displayed in the phone and menus.

## SMART ON

**Smart screen:** Checkmark to keep the screen from timing out when the device detects your eyes looking at the screen.

## ADVANCED SETTINGS

**Touch key light:** Sets whether or not the front keys are illuminated and how long they will stay lit.

**Notification flash:** Sets which notifications will flash the LED light.

**Motion sensor calibration:** Calibrates the device to improve the tilt accuracy.

## Home screen

This menu allows you to manage your Home screen settings.

**Theme:** Sets the screen theme for your device. Choose from **Optimus**, **Biz**, **Cozywall**, and **Marshmallow**.

**Screen swipe effect:** Sets the effect when you swipe to change screens. Choose from **Basic**, **Breeze**, **Accordion**, **Panorama**, **Carousel**, **Layer**, and **Domino**.

**Wallpaper:** Sets the wallpaper to use on your Home screen. Select it from **Gallery**, **Live Wallpapers**, or **Wallpaper gallery**.

**Allow Home screen looping:** Checkmark to set the Home screens to scroll continuously, eliminating the need to scroll back in the opposite direction when you reach either end.

**Allow apps list looping:** Checkmark to set the Applications screen items to scroll continuously, eliminating the need to scroll back in the opposite direction when you reach either end.

**Help:** Displays information regarding the Home screen items and functions.

## Lock screen

This menu allows you to manage your Lock screen settings.

### SCREEN


**Select screen lock:** Sets how to secure your phone from unintentional and/or unauthorized use. Choose from **None**, **Touch and hold**, **Swipe**, **Face Unlock**, **Pattern**, **PIN**, and **Password**.

**Wallpaper:** Sets your Lock screen wallpaper. Select it from **Gallery** or **Wallpaper gallery**.

**Clocks & shortcuts:** Sets the clock widget displayed on the Lock screen. Also allows you to change the shortcuts on the Lock screen when the unlock method is set to **Swipe** or **Pattern**.

**NOTE** To display the shortcuts from the Pattern Lock screen, pause at the final dot in your unlock pattern. Tap a shortcut to open and use it.

**Screen effect:** Sets the screen effect when unlocking the device. Choose from **Basic**, **Ripple**, **Spreading ink**, **Dewdrop**, **White hole**, and **Hula-hoops**.

**Owner info:** Checkmark to set the device owner's name to be displayed on the Lock screen. Tap the **Settings** icon  to enter the text to be displayed as the Owner info.

### LOCK TIME

**Security lock timer:** Sets the amount of time before the screen automatically locks after the screen has timed-out.

**Power button instantly locks:** Checkmark to instantly lock the screen when the **Power/Lock Key** is pressed. This setting overrides the Security lock timer setting.

### FEEDBACK

**Vibrate on touch:** Checkmark to turn on touch feedback when unlocking the screen.

## Gestures

This menu allows you to manage various gesture settings.

**Move Home screen items:** Checkmark to be able to move items within the Home screen or applications by touching and holding an item, then tilting the device in the direction you want to move it.

**Tilt sensitivity:** Allows you to test and adjust the sensitivity of the tilt sensors used for the Home screens and applications. To adjust the sensitivity, remove the checkmark from the **Default sensitivity** checkbox, then move the slider along the bar toward slow or fast to suit your preference.

**Silence incoming calls:** Checkmark to enable you to simply flip the device to mute an incoming call ringtone.

**Snooze or stop alarm:** Checkmark to enable you to simply flip the device to snooze or stop the alarm.

**Pause video:** Checkmark to enable you to simply flip the device to pause the currently playing video.

**Help:** Opens a help guide on how to use the Gestures features of your device.

## Storage

Use the Storage menu to monitor the used and available space in your phone and on your microSD card (if installed). You can also manage your microSD card and, if necessary, erase all of your personal information on it.

### INTERNAL STORAGE

**Total space:** Displays the total amount of space in the phone's memory. It's listed in Gigabytes and also on a colored bar graph with a color-coordinated list of the applications as well as the amount of space they use. Remaining memory space is grey-colored.

### SD CARD

**Total space:** Displays the total amount of memory space on the microSD card. It's listed on a colored bar graph and in Gigabytes.

**Mount/Unmount SD card:** Mounts and unmounts the microSD card from your phone so that you can format the card or safely remove it. This setting is dimmed if there's no microSD card installed, if you've already unmounted it, or if you've mounted the microSD card on your computer.

**Erase SD card:** Permanently erases everything on the microSD card and prepares it for use with your phone.

## Battery


### BATTERY INFORMATION

The Battery charge information is displayed on a battery graphic along with the percentage of the remaining charge and its status.

Touch the Battery charge icon to display the Battery use screen to see battery usage level and battery use details. It displays which components and applications are using the most battery power. Tap one of the entries to see more detailed information.

**Battery percentage:** Checkmark to display the battery level percentage on the Status Bar next to the battery icon.

### POWER SAVER

Tap the **Power saver** switch  to toggle between On and Off. Tap **Power saver** to access the following settings:

**Turn Power saver on:** Sets the battery charge percent level to automatically turn on Power saver.


### POWER SAVING ITEMS


**Auto-sync:** Checkmark to turn off Auto-sync when Power saver is activated.


**Wi-Fi:** Checkmark to turn Wi-Fi off when data is not being used while Power saver is activated.

**Bluetooth:** Checkmark to turn Bluetooth off when not connected while Power saver is activated.

**Vibrate on touch:** Checkmark to turn off touch feedback when Power saver is activated.

**Brightness:** Checkmark to set the screen brightness when Power saver is activated. Tap the **Settings** icon  to change the setting.

**Screen timeout:** Checkmark to set the screen timeout when Power saver is activated. Tap the **Settings** icon  to change the setting.

**Touch key light:** Checkmark to set how long the touch key lights illuminate when Power saver is activated. Tap the **Settings** icon  to change the settings.

**Power saver tips:** Displays tips for using the Power saver function.

## Application manager

Use the Application manager menu to view details about the applications installed on your phone, manage their data, and force them to stop.


Swipe left and right to select one of the three tabs across the top of the screen to view detailed information for **Downloaded**, **Running**, and **All** applications. Tap an entry to view more information, tap **Stop** (or **Force stop**), then **OK** to stop it from running.

## PERSONAL

The Personal category allows you to configure and manage your personal information.

### Location access

Use the Location access menu to set your preferences for using and sharing your location when you search for information and use location-based applications, such as Maps.

**Access to my location:** Tap the **Access to my location** switch  to toggle between On and Off. **On** allows applications that have asked your permission use your location information.

### LOCATION SOURCES

**GPS satellites:** Checkmark to let applications use GPS to pinpoint your location.

**Wi-Fi & mobile network location:** Checkmark to use information from Wi-Fi and mobile networks to determine your approximate location that is used while searching in Google Maps and other applications. When you checkmark this option, you're asked whether you consent to sharing your location anonymously with Google's location service.



## Security

Use the Security menu to configure how to help secure your phone and its data.

### ENCRYPTION

**Encrypt phone:** Allows you to encrypt the phone to keep it secure. After encryption, a PIN or password needs to be entered each time you power the phone on.

### STORAGE ENCRYPTION

**Encrypt SD card:** Enables microSD card encryption and synchronization with previously encrypted data. You can encrypt the data stored on the microSD card.

### SIM CARD LOCK

**Set up SIM card lock:** Allows you to set if you want to require a PIN to be able to access the SIM card. And, if set, allows you to change the PIN.

### PASSWORDS

**Password typing visible:** Checkmark to briefly show each character of the password as you type so that you can see what you enter.

### PHONE ADMINISTRATION

**Phone administrators:** Displays the list of administrators, allowing you to deactivate device administrators.

**Unknown sources:** Checkmark to allow installation of non-Play Store applications.

### CREDENTIAL STORAGE

**Trusted credentials:** Allows applications to access your phone's encrypted store of secure certificates, related passwords and other credentials. The screen has a **System** tab and a **User** tab. Credential storage is used to establish some kinds of VPN and Wi-Fi connections. This setting is dimmed if you have not set a password to secure your credential storage.

**Install from storage:** Allows you to install a secure certificate from a microSD card.

**Clear credentials:** Deletes all secure certificates and related credentials and erases the secure storage's own password. You are prompted to confirm you want to clear this data.

## Language & input


Use the Language & input menu to select the language for the text on your phone and for configuring the on-screen keyboard. You can also manage your language dictionary for personal words that you've added.

**Language:** Sets the language to use on your device.

**Personal dictionary:** Displays a list of the personal words that you've added that are not in the standard dictionaries.

## KEYBOARD & INPUT METHODS


**Default:** Sets the default on-screen keyboard to use when entering text.

**Google voice typing:** Checkmark to select Google voice typing to enter data. Tap the **Settings** icon  to change the Google voice settings.

**Choose input languages:** Sets the languages supported with Google voice typing.

**Block offensive words:** Checkmark to hide recognized offensive text.

**Download offline speech recognition:** Enables voice input while offline.

**LG Keyboard:** Checkmark to select the LG Keyboard to enter data. Tap the **Settings** icon  to change the following settings:

**Input language and type:** Sets the keyboard language and characters.

## COMMON SETTINGS


**Word suggestion:** Sets word prediction and auto word correction.

**Auto capitalize:** Checkmark to automatically capitalize the first letter of each sentence.

**Auto punctuation:** Checkmark to insert a period when the space key is double-tapped.

**Voice typing key:** Checkmark to display the Voice typing key on the keyboard.

**Touch feedback:** Sets key preview, sound feedback, and vibrate feedback when typing.


**Handwriting:** Checkmark to set the handwriting style. Tap the **Settings** icon  to set the pen thickness, color, and delay time.

**Path keyboard:** Checkmark to enter a word by drawing a path through all of the letters when using the on-screen keyboard.

## ADVANCED SETTINGS

**Hide keyboard:** Checkmark to allow the on-screen keyboard to be hidden by swiping it downward.

## CHINESE

**Fuzzy pinyin:** Checkmark to automatically correct common pinyin mistakes. Tap the **Settings** icon  to view common mistakes.

## ABOUT

**Software version:** Displays the LG Keyboard software version.

## SPEECH

**Voice Search:** Sets voice search options.

**Language:** Sets the Google search by voice language.

**Speech output:** Sets when to use speech output. Choose from **Always**, **Informative only**, or **Hands-free only**. To turn on speech output only when you've got a headset attached to your phone, select **Hands-free only**.

**Block offensive words:** Checkmark to hide offensive voice results.

**Hotword detection:** Checkmark to allow you to say "Google" when viewing the Google Now screen rather than touching the Microphone icon to initiate a voice search or action.

**Download offline speech recognition:** Sets one or more additional languages for speech recognition when you don't have a network connection.

**Personalized recognition:** Checkmark to improve speech recognition accuracy.

**Google Account dashboard:** Allows you to manage your collected data.

**Bluetooth headset:** Checkmark to record audio through your Bluetooth headset, if available.

**Text-to-speech output:** Sets the preferred speech engine and speech rate (slow vs. fast). Also plays a short demonstration of speech synthesis.

## **MOUSE/TRACKPAD**

**Pointer speed:** Sets the pointer speed using a slide bar to select it.

## **Backup & reset**

This menu allows you to back up and erase your data.

### **BACKUP & RESTORE**

**Backup my data:** Checkmark to backup application data, Wi-Fi passwords, and other settings to Google servers.

**Backup account:** Sets the account to backup.

**Automatic restore:** Checkmark to allow the device to automatically restore backed up settings and data when an application is reinstalled on the device.

### **PERSONAL DATA**

**Factory data reset:** Allows you to erase all of the data on the phone. Read the warning, tap **Reset phone** at the bottom of the screen, then tap **Erase everything** to confirm.

## **ACCOUNTS**

The Accounts category allows you to manage your Google™ and other supported accounts. From here you can add new accounts, control data synchronization, and adjust account settings.

### **Backup Assistant Plus**

This menu allows you to manage the Backup Assistant Plus application.

**Last backup status:** Displays the status of the last backup attempt.

**Daily backup schedule:** Sets the daily backup schedule.

**About:** Displays information about the Backup Assistant Plus application.

**Back up now:** Tap this button at the bottom of the screen to immediately begin backing up your files.

## Email

This menu is available when you set up an email account and displays your accounts and settings. Refer to the Email settings section on page 105.

## Google

This menu is available when you set up a Google account and displays your accounts and allows you to manage their settings. Refer to the Gmail settings section on page 115.

## Add account

This menu allows you to add additional accounts to your device.

## SYSTEM

The System category allows you to manage various system settings.

### Date & time

This menu allows you to manage your date and time formats.

**Automatic date & time:** Checkmark for your device to use the network provided date and time.

**Automatic time zone:** Checkmark for your device to use the network provided time zone.

**Set date:** Tap to manually set the date to use for your device. This setting is greyed-out when the **Automatic date & time** setting is checkmarked.

**Set time:** Tap to manually set the time to use for your device. This setting is greyed-out when the **Automatic date & time** setting is checkmarked.

**Select time zone:** Tap to select a time zone other than the one provided by the network. This setting is greyed-out when the **Automatic time zone** setting is checkmarked.


**Use 24-hour format:** Checkmark to display the time using the 24-hour time format (for example, 13:00 instead of 1:00 pm).

**Select date format:** Sets the format for displaying dates.

## Accessibility

Use the Accessibility menu to configure any accessibility plug-ins you have installed on your phone.


### SERVICES

**TalkBack:** Allows you to set up the TalkBack function which assists people with impaired vision by providing verbal feedback. Tap the switch  at the top right corner of the screen to turn it on. Tap **SETTINGS** at the bottom of the screen to adjust the TalkBack settings.

### VISION

**Install web scripts:** Allows you to enable (or disable) installation of web scripts.

**Large text:** Checkmark to increase the size of the text.

**Invert color:** Sets the color contrast for better screen viewing. Tap the switch  at the top right corner of the screen to turn it on. Then, tap the screen and drag across the screen in any direction until you see the color contrast you want to use.



**Shades:** Sets the screen to a darker contrast (a darker shade).

### HEARING

**Mono audio:** Checkmark to route the sound through both the right and left channel when a headset is connected. To manually set the audio route, move the slider on the audio slide bar.

### PHYSICAL AND MOTOR

**Touch & hold delay:** Sets the touch and hold delay. Choose from **Short**, **Medium**, or **Long**.


**Universal touch:** Tap the switch  to toggle it On or Off. Turn this feature on to replace the hardware keys with a Universal touch button . Tap the button to be able to access **Volume down**, **Volume up**, **Power**,


**Home**, and **Pinch**. Draw a "C" ("call") on the screen when the Universal touch panel is displayed to automatically display the Dial tab. Draw an "M" on the board to automatically display the Messaging application. Draw a "W" ("web") on the board to automatically launch the Chrome application.

## SYSTEM

**Auto-rotate screen:** Checkmark to allow the device to rotate the screen depending on the device orientation (portrait or landscape).

**Speak passwords:** Checkmark so that you can say your log in passwords (instead of typing your passwords).

**Power button ends call:** Checkmark so that you can end voice calls by pressing the **Power/Lock Key** . When is enabled, pressing the **Power/Lock Key** during a call does not lock the screen.

**Easy access:** Sets quick, easy access to selected features when you triple-tap (or triple-press) the **Home Key** . Choose **Off**, **Show all**, **TalkBack**, **Invert color**, **Universal touch**, or **Accessibility settings**.

**Text-to-speech output:** Sets the text-to-speech preferred engine and speech rate setting. Also plays a short demonstration of speech synthesis. Text-to-speech output provides an audible readout of text, for example, the contents of text messages, and the Caller ID for incoming calls.

## PC connection

This menu allows you to manage the default USB connection type and other connection functions.

### USB CONNECTION

**USB connection type:** Sets the default mode when connecting your phone to a PC using a USB Cable. Choose from **Charge only**, **Media sync (MTP)**, **Internet connection**, and **Camera (PTP)**.

**Ask on connection:** Checkmark to confirm the USB connection type when you connect to a PC.

**Help:** Displays connection settings information.

## Auto-launch

**Car Home:** Checkmark to automatically set the phone to the Car Home mode when it's mounted in the car cradle.

## Developer options

Keep in mind that turning on these developer settings may result in irregular device behavior.

**Take bug report:** This will collect information about your current device state, to send as an email message.

**Desktop backup password:** Sets a password to back up the desktop.

**Stay awake:** Checkmark to set the screen to never timeout while charging.

**Protect SD card:** Checkmark to protect the microSD card. When the microSD card is protected, applications must request permission to read data from external storage.

## DEBUGGING

**USB debugging:** Checkmark to turn on debug mode when USB is connected.

**Allow mock locations:** Checkmark to set the device to a mock location.

**Select debug app:** Allows you to select the debugging application.

**Wait for debugger:** Checkmark to wait for debugger. Debugged application waits for debugger to attach before executing.

## INPUT

**Show touches:** Checkmark to show visual feedback when the screen is tapped.

**Show touch data:** Checkmark to make tap data visible on the screen.

## DRAWING

**Show layout bounds:** Checkmark to show clip bounds, margins, etc.

**Show GPU view updates:** Checkmark to flash views inside windows when drawn with the GPU.



**Show screen updates:** Checkmark to flash areas of the screen when they are updated.

**Window animation scale:** Allows you to set the window animation scale.

**Transition animation scale:** Allows you to set the transition animation scale.

**Animator duration scale:** Allows you to set the animator duration scale.

**Disable HW overlays:** Checkmark to use the GPU for screen compositing.

**Force GPU rendering:** Checkmark to use the 2D hardware acceleration in applications.

## MONITORING

**Enable strict mode:** Checkmark to flash the screen when applications operate for a long period of time on the main thread.

**Show CPU usage:** Checkmark to overlay the current CPU usage on the screen.

**Profile GPU rendering:** Checkmark to measure rendering time in adb shell `dumpsys gfxinfo`.

**Enable traces:** Allows you to select enabled traces.

## APPS

**Don't keep activities:** Checkmark to force stop every activity as soon as the user leaves it.

**Background process limit:** Allows you to set the background process limit.

**Show all ANRs:** Checkmark to show a dialog box when applications running in the background are not responding.

## About phone

This menu allows you to manage your software updates and view various information relating to your device.

**Software update:** Allows you to check for Android system software updates and other current information.

**Network:** Allows you to view your network, network type and strength, service state, roaming status, mobile network state, IP address, and IMS registration status.

**Phone identity:** Allows you to view My phone number, PRL Version, ERI version, IMEI, IMEI SVN, ICCID, Up time, Lifetime calls, Warranty Date Code, Rooting status, and Model number.

**Battery:** Allows you to view battery status, battery level, and battery use.

**Hardware information:** Allows you to view Wi-Fi MAC address, Bluetooth address, and Hardware version.

**Software information:** Allows you to view Android version, Baseband version, Kernel version, Build number, and Software version.

**Legal information:** Allows you to view open source licenses and Google legal information.

**Patent information:** Displays LG patent information.

**WARNING:** This product contains chemicals known to the State of California to cause cancer and birth defects or reproductive harm. *Wash hands after handling.*

## HAC

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

Any changes or modifications not expressly approved in this user guide could void your warranty for this equipment. Use only the supplied antenna.

Use of unauthorized antennas (or modifications to the antenna) could impair call quality, damage the phone, void your warranty and/or violate FCC regulations.

Don't use the phone with a damaged antenna. A damaged antenna could cause a minor skin burn. Contact your local dealer for a replacement antenna.

## FCC RF Exposure Information

**WARNING!** Read this information before operating the phone.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to Radio Frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

## **Bodily Contact During Operation**

This device was tested for typical use with the back of the phone kept 0.39 inches (1.0 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.39 inches (1.0 cm) must be maintained between the user's body and the back of the phone.

Third-party belt-clips, holsters, and similar accessories containing metallic components may not be used. Avoid the use of accessories that cannot maintain 0.39 inches (1.0 cm) distance between the user's body and the back of the phone and have not been tested for compliance with FCC RF exposure limits.

## **FCC Notice and Cautions**

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that causes undesired operation.

Any changes or modifications not expressly approved in this user guide could void your warranty for this equipment. Use only the supplied antenna. Use of unauthorized antennas (or modifications to the antenna) could impair call quality, damage the phone, void your warranty and/or violate FCC regulations.

Don't use the phone with a damaged antenna. A damaged antenna could cause a minor skin burn. Contact your local dealer for a replacement antenna.

## **Part 15.19 statement**

This device complies with part 15 of FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

**Part 15.21 statement**

Changes or modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment.

**Part 15.105 statement**

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **Consumer Information About Radio Frequency Emissions**

Your wireless phone, which contains a radio transmitter and receiver, emits radio frequency energy during use. The following consumer information addresses commonly asked questions about the health effects of wireless phones.

**Are wireless phones safe?**

Scientific research on the subject of wireless phones and radio frequency ("RF") energy has been conducted worldwide for many years, and

continues. In the United States, the Food and Drug Administration ("FDA") and the Federal Communications Commission ("FCC") set policies and procedures for wireless phones. The FDA issued a website publication on health issues related to cell phone usage where it states, "The scientific community at large ... believes that the weight of scientific evidence does not show an association between exposure to radiofrequency (RF) from cell phones and adverse health outcomes. Still the scientific community does recommend conducting additional research to address gaps in knowledge. That research is being conducted around the world and FDA continues to monitor developments in this field. You can access the joint FDA/FCC website at <http://www.fda.gov> (under "c" in the subject index, select Cell Phones > Research). You can also contact the FDA toll-free at (888) 463-6332 or (888) INFO-FDA. In June 2000, the FDA entered into a cooperative research and development agreement through which additional scientific research is being conducted. The FCC issued its own website publication stating that "there is no scientific evidence that proves that wireless phone usage can lead to cancer or a variety of other problems, including headaches, dizziness or memory loss." This publication is available at <http://www.fcc.gov/cgb/cellular.html> or through the FCC at (888) 225-5322 or (888) CALL-FCC.

### **What does "SAR" mean?**

In 1996, the FCC, working with the FDA, the U.S. Environmental Protection Agency, and other agencies, established RF exposure safety guidelines for wireless phones in the United States. Before a wireless phone model is available for sale to the public, it must be tested by the manufacturer and certified to the FCC that it does not exceed limits established by the FCC. One of these limits is expressed as a Specific Absorption Rate, or "SAR." SAR is a measure of the rate of absorption of RF energy in the body. Tests for SAR are conducted with the phone transmitting at its highest power level in all tested frequency bands. Since 1996, the FCC has required that the SAR of handheld wireless phones not exceed 1.6 watts per kilogram, averaged over one gram of tissue.

Although the SAR is determined at the highest power level, the actual SAR value of a wireless phone while operating can be less than the reported

SAR value. This is because the SAR value may vary from call to call, depending on factors such as proximity to a cell site, the proximity of the phone to the body while in use, and the use of hands-free devices. For more information about SARs, see the FCC's OET Bulletins 56 and 65 at [http://www.fcc.gov/Bureaus/Engineering\\_Technology/Documents/bulletins](http://www.fcc.gov/Bureaus/Engineering_Technology/Documents/bulletins) or visit the Cellular Telecommunications Industry Association website at [http://www.ctia.org/consumer\\_info/index.cfm/AID/10371](http://www.ctia.org/consumer_info/index.cfm/AID/10371). You may also wish to contact the manufacturer of your phone.

### **Can I minimize my RF exposure?**

If you are concerned about RF, there are several simple steps you can take to minimize your RF exposure. You can, of course, reduce your talk time. You can place more distance between your body and the source of the RF, as the exposure level drops off dramatically with distance. The FDA/FCC website states that "hands-free kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in the head because the phone, which is the source of the RF emissions, will not be placed against the head. On the other hand, if the phone is mounted against the waist or other part of the body during use, then that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety requirements regardless of whether they are used against the head or against the body. Either configuration should result in compliance with the safety limit." Also, if you use your wireless phone while in a car, you can use a phone with an antenna on the outside of the vehicle. You should also read and follow your wireless phone manufacturer's instructions for the safe operation of your phone.

### **Do wireless phones pose any special risks to children?**

The FDA/FCC website states that "the scientific evidence does not show a danger to users of wireless communication devices, including children." The FDA/FCC website further states that "some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all." For example, the Stewart Report from the United Kingdom ["UK"] made such a recommendation in December 2000. In this report a group of independent experts noted that no evidence exists

that using a cell phone causes brain tumors or other ill effects. [The UK's] recommendation to limit cell phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists. A copy of the UK's leaflet is available at <http://www.dh.gov.uk> (search "mobile"), or you can write to: NRPB, Chilton, Didcot, Oxon OX11 0RQ, United Kingdom. Copies of the UK's annual reports on mobile phones and RF are available online at [www.iegmp.org.uk](http://www.iegmp.org.uk) and <http://www.hpa.org.uk/radiation/> (search "mobile"). Parents who wish to reduce their children's RF exposure may choose to restrict their children's wireless phone use.

### **Where can I get further information about RF emissions?**

For further information, see the following additional resources (websites current as of April 2005):

#### **U.S. Food and Drug Administration**

FDA Consumer magazine November-December 2000

Telephone: (888) INFO-FDA

<http://www.fda.gov> (Under "c" in the subject index, select Cell Phones > Research.)

#### **U.S. Federal Communications Commission**

445 12th Street, S.W. Washington, D.C. 20554

Telephone: (888) 225-5322

<http://www.fcc.gov/oet/rfsafety>

#### **Independent Expert Group on Mobile Phones**

<http://www.iegmp.org.uk>

#### **Royal Society of Canada Expert Panels on Potential Health Risks of Radio Frequency Fields from Wireless Telecommunication Devices**

283 Sparks Street Ottawa, Ontario K1R 7X9 Canada

Telephone: (613) 991-6990

[http://www.rsc.ca/index.php?page=Expert\\_Panels\\_RF&Lang\\_id=120](http://www.rsc.ca/index.php?page=Expert_Panels_RF&Lang_id=120)

#### **World Health Organization**



Avenue Appia 20 1211 Geneva 27 Switzerland

Telephone: 011 41 22 791 21 11

<http://www.who.int/mediacentre/factsheets/fs193/en/>

### **International Commission on Non-Ionizing Radiation Protection**

c/o Bundesamt für Strahlenschutz Ingolstaedter Landstr. 1 85764  
Oberschleissheim Germany

Telephone: 011 49 1888 333 2156

<http://www.icnirp.de>

### **American National Standards Institute**

1819 L Street, N.W., 6th Floor Washington, D.C. 20036 Telephone: (202)  
293-8020

<http://www.ansi.org>

### **National Council on Radiation Protection and Measurements**

7910 Woodmont Avenue, Suite 800 Bethesda, MD 20814-3095

Telephone: (301) 657-2652

<http://www.ncrponline.org>

### **Engineering in Medicine and Biology Society, Committee on Man and Radiation (COMAR) of the Institute of Electrical and Electronics Engineers**

<http://ewh.ieee.org/soc/embs/comar/>

## **Consumer Information on SAR**

### **(Specific Absorption Rate)**

This model phone meets the government's requirements for exposure to radio waves. Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to Radio Frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for

the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model.

The highest SAR value for this model phone when tested for use at the ear is 0.79 W/kg and when worn on the body, as described in this user guide, is 1.17 W/kg (body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID ZNFVS890. Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://>

[www.ctia.org/](http://www.ctia.org/).

\* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

## **FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices**

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless phones be compatible with hearing-aids. The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities.

While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users to find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box.


The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not

labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. T4 is the better/ higher of the two ratings.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and wireless phone rating values are then added together. A sum of 5 is considered acceptable for normal use. A sum of 6 is considered for best use.



In the above example, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This should provide the hearing aid user with “normal usage” while using their hearing aid with the particular wireless phone. “Normal usage” in this context is defined as a signal quality that’s acceptable for normal operation.

The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules. The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

When you’re talking over the cell phone, it’s recommended you’d turn the BT (Bluetooth) or WLAN mode off for HAC.

#### **FCC Hearing Aid Compatibility and Volume Control**

[http://www.fcc.gov/cgb/consumerfacts/hac\\_wireless.html](http://www.fcc.gov/cgb/consumerfacts/hac_wireless.html)

## **Caution:**

### **Avoid potential hearing loss.**

Prolonged exposure to loud sounds (including music) is the most common cause of preventable hearing loss. Some scientific research suggests that using portable audio devices, such as portable music players and cellular telephones, at high volume settings for long durations may lead to permanent noise-induced hearing loss. This includes the use of headphones (including headsets, earbuds and Bluetooth® or other wireless devices). Exposure to very loud sound has also been associated in some studies with tinnitus (a ringing in the ear), hypersensitivity to sound and distorted hearing. Individual susceptibility to noise-induced hearing loss and other potential hearing problems varies.

The amount of sound produced by a portable audio device varies depending on the nature of the sound, the device, the device settings and the headphones. You should follow some commonsense recommendations when using any portable audio device:

- Set the volume in a quiet environment and select the lowest volume at which you can hear adequately.
- When using headphones, turn the volume down if you cannot hear the people speaking near you or if the person sitting next to you can hear what you are listening to.
- Do not turn the volume up to block out noisy surroundings. If you choose to listen to your portable device in a noisy environment, use noise-cancelling headphones to block out background environmental noise.
- Limit the amount of time you listen. As the volume increases, less time is required before your hearing could be affected.
- Avoid using headphones after exposure to extremely loud noises, such as concerts, that might cause temporary hearing loss. Temporary hearing loss might cause unsafe volumes to sound normal.
- Do not listen at any volume that causes you discomfort. If you experience ringing in your ears, hear muffled speech or experience any temporary

hearing difficulty after listening to your portable audio device, discontinue use and consult your doctor.

## **TIA Safety Information**

The following is the complete TIA Safety Information for wireless handheld phones.

### **Exposure to Radio Frequency Signal**

Your wireless handheld portable phone is a low power radio transmitter and receiver. When ON, it receives and sends out Radio Frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones.

Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) \*

NCRP Report 86 (1986)

ICNIRP (1996)

\* American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing Radiation Protection

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of your phone complies with the FCC guidelines (and those standards).

### **Antenna Care**

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

## Phone Operation

**NORMAL POSITION:** Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

## Tips on Efficient Operation

For your phone to operate most efficiently:

Don't touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

## Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

## Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6) inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers:

- Should ALWAYS keep the phone more than six (6) inches from their pacemaker when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference;
- Should turn the phone OFF immediately if there is any reason to suspect that interference is taking place.

## Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives).

## **Other Medical Devices**

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

## **Health Care Facilities**

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may use equipment that could be sensitive to external RF energy.

## **Vehicles**

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

## **Posted Facilities**

Turn your phone OFF in any facility where posted notices so require.

## **Aircraft**

FCC regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

## **Blasting Areas**

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “Turn off two-way radio.” Obey all signs and instructions.

## **Potentially Explosive Atmosphere**

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always marked clearly. Potential areas may include: fueling areas (such as gasoline stations); below deck on boats; fuel or chemical transfer or storage



facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

**For Vehicles Equipped with an Air Bag**

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

## Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage.

### Caution

**Violation of the instructions may cause minor or serious damage to the product.**

- Do not disassemble or open crush, bend or deform, puncture or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard. Such conditions may present the risk of fire or explosion.
- Only use the battery for the system for which it is specified.
- Only use the battery with a charging system that has been approved and qualified with the system per IEEE-Std-1725-2006. Use of an unqualified and non-approved battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
- Replace the battery only with another battery that has been approved and qualified with the system per this standard, IEEE-Std-1725-2006. Use of an unqualified and non-approved battery may present a risk of fire, explosion, leakage or other hazard.
- Promptly dispose of used batteries in accordance with local regulations.
- Battery usage by children should be supervised.
- Avoid dropping the phone, battery or exposing the phone or battery to a liquid. If the phone or battery is dropped, especially on a hard surface, or is exposed to a liquid or comes into contact with a sharp object take it to a service center for inspection.
- At least, one of the Authentication methods may be implemented. (e.g. H/W, S/W, Mechanical, Hologram, etc.)

- Improper battery use may result in a fire, explosion or other hazard.

### **Charger and Adapter Safety**

- The charger and adapter are intended for indoor use only.
- Insert the battery pack charger vertically into the wall power socket.
- Only use the approved battery charger. Otherwise, you may cause serious damage to your phone.
- Use the correct adapter for your phone when using the battery pack charger abroad.

### **Battery Information and Care**

- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Please read the manual of proper installation and removal of the battery.
- Do not damage the power cord by bending, twisting, or heating. Do not use the plug if it is loose as it may cause electric shock or fire.
- Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause electric shock or fire.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it's dirty. When using the power plug, ensure that it's firmly connected. If not, it may cause excessive heat or fire. If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.
- Recharge the battery after long periods of non-use to maximize battery life. Battery life will vary due to usage pattern and environmental conditions.
- Please use only an approved charging accessory to charge your LG phone. Improper handling of the charging port, as well as the use of an incompatible charger, may cause damage to your phone and void the warranty.
- Never store your phone in temperature less than -4°F or greater than 122°F. Charge the battery in range of 0°C ~ 45°C.

- Charging temperature range is regulated between 0°C and 45°C. Do not charge the battery out of recommended temperature range. Charging out of recommended range might cause the generating heat or serious damage of battery. And also, it might cause the deterioration of battery's characteristics and cycle life.
- Do not use or leave the battery under the blazing sun or in heated car by sunshine. The battery may generate heat, smoke or flame. And also, it might cause the deterioration of battery's characteristics or cycle life.
- The battery pack has a protection circuit to prevent danger. Do not use anywhere near a place that generates static electricity more than 100V which could damage the protection circuit. If the protection circuit were to be broken, the battery could potentially smoke, rupture or flame.
- When there is rust on the battery or if it gives off a bad or unusual odor the first time you use it, do not use the equipment and bring the battery to the shop where it was purchased.
- If your skin or clothing comes into contact with liquid from the battery, wash your skin or clothing off with water, as the liquid may cause skin inflammation. Remove the battery from the device and do not use it.
- Do not handle the phone with wet hands while charging. It may cause an electric shock or seriously damage your phone.
- Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.
- The charger and adapter are intended for indoor use only.
- Insert the battery pack charger vertically into the wall power socket.
- Talking on your phone for an extended period of time may reduce call quality due to heat generated during use.
- Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone as this could cause a fire.
- Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.

- Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) and may damage the battery and cause an explosion.
- Never use an unapproved battery since this could potentially damage the phone and/or battery and cause the battery to explode. Only use the batteries and chargers provided by LG. The warranty will not be applied to products provided by other suppliers. Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.

### **Explosion, Shock, and Fire Hazards**

- Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it's dirty.
- When using the power plug, ensure that it's firmly connected. If not, it may cause excessive heat or fire.
- If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip, or pen) may short-circuit the phone and may cause an explosion. Always cover the receptacle when not in use.
- Don't short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag or contact with sharp objects including animal bites may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.

### **General Notice**

- Using a damaged battery or placing a battery in your mouth or animal's mouth may cause serious injury including a fire or explosion.
- Do not place items containing magnetic components such as a credit card, phone card, bank book, or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic

strip.

- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Center to replace the damaged antenna.
- Do not immerse your phone in water, liquid, or expose to high humidity. If this happens, turn it off immediately and remove the battery. Immediately, take it to an LG Authorized Service Center.
- Do not paint your phone.
- The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone numbers. (Ringtones, text messages, voice messages, pictures, and videos could also be deleted.) The manufacturer is not liable for damage due to the loss of data.
- When you use the phone in public places, set the ringtone to vibration so you don't disturb others.
- Do not turn your phone on or off when putting it to your ear.
- Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.

## **FDA Consumer Update**



The U.S. Food and Drug Administration's Center for Devices and Radiological Health Consumer Update on Mobile Phones:

### **1. Do wireless phones pose a health hazard?**

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of Radio Frequency (RF) energy in the microwave range while being used. They also emit very low levels of RF when in standby mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

## **2. What is the FDA's role concerning the safety of wireless phones?**

Under the law, the FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit Radio Frequency (RF) energy at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies

that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. The FCC relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

### **3. What kinds of phones are the subject of this update?**

The term “wireless phone” refers here to handheld wireless phones with built-in antennas, often called “cell,” “mobile,” or “PCS” phones. These types of wireless phones can expose the user to measurable Radio Frequency (RF) energy because of the short distance between the phone and the user’s head.

These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person’s RF exposure decreases rapidly with increasing distance from the source. The so-called



“cordless phones,” which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

#### **4. What are the results of the research done already?**

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of Radio Frequency (RF) energy exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we do not know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

#### **5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?**

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations,

but ten or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop — if they do — may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

#### **6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?**

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to Radio Frequency (RF) energy.

The FDA has been a leading participant in the World Health Organization International Electro Magnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The project has also helped develop a series of public information documents on EMF issues.

The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research And Development Agreement (CRADA) to do research on wireless phone safety. The FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts with independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

#### **7. How can I find out how much Radio Frequency energy exposure I can get by using my wireless phone?**

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit Radio Frequency

(RF) energy exposures. The FCC established these guidelines in consultation with the FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless phones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

#### **8. What has the FDA done to measure the Radio Frequency energy coming from wireless phones?**

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the Radio Frequency (RF) energy exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques," sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

#### **9. What steps can I take to reduce my exposure to Radio Frequency energy from my wireless phone?**

If there is a risk from these products — and at this point we do not know that there is — it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to Radio Frequency (RF) energy. Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna. Again, the scientific data does not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

#### **10. What about children using wireless phones?**

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to Radio Frequency (RF) energy, the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

#### **11. What about wireless phone interference with medical equipment?**

Radio Frequency (RF) energy from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method to measure Electro Magnetic Interference (EMI) of implanted

cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI.

The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a “compatible” phone and a “compatible” hearing aid at the same time. This standard was approved by the IEEE in 2000.

The FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

## **12. Where can I find additional information?**

For additional information, please refer to the following resources:

FDA web page on wireless phones  
(<http://www.fda.gov/cellphones/>)

Federal Communications Commission (FCC) RF Safety Program  
(<http://www.fcc.gov/oet/rfsafety>)

International Commission on Non-Ionizing Radiation Protection  
(<http://www.icnirp.de>)

World Health Organization (WHO) International EMF Project  
(<http://www.who.int/emf>)

National Radiological Protection Board (UK)  
(<http://www.hpa.org.uk/radiation/>)

## Driving

Check the laws and regulations on the use of wireless phones in the areas where you drive and always obey them. Also, if using your phone while driving, please observe the following:

- Give full attention to driving – driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call if driving conditions or the law require it.

## 10 Driver Safety Tips

Your wireless phone gives you the powerful ability to communicate by voice almost anywhere, anytime. An important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When operating a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.
2. When available, use a hands-free device. A number of hands-free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.
3. Make sure you place your wireless phone within easy reach and where you can reach it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.
4. Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain,

sleet, snow, and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.

5. Don't take notes or look up phone numbers while driving. If you are reading an address book or business card, or writing a "to-do" list while driving a car, you are not watching where you are going. It is common sense. Do not get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light, or otherwise stationary. But if you need to dial while driving, follow this simple tip – dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix; they are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations – with your phone at your side, help is only three numbers away. Dial 911 or other local emergency number in the case of fire, traffic accident, road hazard, or medical emergency. Remember, it's a free call on your wireless phone!
9. Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a "Good Samaritan" in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special wireless non-emergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But you can still use your wireless phone to lend a

hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

The above tips are meant as general guidelines. Before deciding to use your mobile device while operating a vehicle, it is recommended that you consult your applicable jurisdiction's local laws or other regulations regarding such use. Such laws or other regulations may prohibit or otherwise restrict the manner in which a driver may use his or her phone while operating a vehicle.

## **Cautions**

- ▶ The user interface of Google applications (Google Search, Google Maps, Navigation, etc.) can vary depending on its software version.
- ▶ Locations are inaccurate when GPS and Wi-Fi are not set.
- ▶ With the Android operating system, some available Play Store applications only operate correctly with phones that have a specific screen resolution.  
Please be advised that some of the applications on the Play Store may not be available for your phone due to LCD resolution requirement that does not match your phone. In addition, please be aware that third party applications with programming defects may cause issues with your phone, including lock ups and resets.
- ▶ All of the contents, including content which you create or download, will be deleted after a factory reset.



## DivX Mobile

**ABOUT DIVX VIDEO:** DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit [divx.com](http://divx.com) for more information and software tools to convert your files into DivX videos.

**ABOUT DIVX VIDEO-ON-DEMAND:** This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to [vod.divx.com](http://vod.divx.com) for more information on how to complete your registration.

DivX Certified® to play DivX® video up to HD 720p, including premium content.

DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.

## Dolby Digital Plus License notice



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

## 1. WHAT THIS WARRANTY COVERS:

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the product extends for TWELVE (12) MONTHS beginning on the date of purchase of the product with valid proof of purchase, or absent valid proof of purchase, FIFTEEN (15) MONTHS from date of manufacture as determined by the unit's manufacture date code.
- (2) The limited warranty extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser/end user.
- (3) This warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S., including Alaska, Hawaii, U.S. Territories and Canada.
- (4) The external housing and cosmetic parts shall be free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
- (5) Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
- (6) The customer shall bear the cost of shipping the product to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

## 2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.
- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) That the Customer Service Department at LG was not notified by consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.

- (5) Products which have had the serial number removed or made illegible.
- (6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of marketability or fitness for a particular use.
- (7) Damage resulting from use of non LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).

### **3. WHAT LG WILL DO:**

LG will, at its sole option, either repair, replace or refund the purchase price of any unit that does not conform to this limited warranty. LG may choose at its option to use functionally equivalent re-conditioned, refurbished or new units or parts or any units. In addition, LG will not re-install or back-up any data, applications or software that you have added to your phone. It is therefore recommended that you back-up any such data or information prior to sending the unit to LG to avoid the permanent loss of such information.

### **4. STATE LAW RIGHTS:**

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusive limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

## **5. HOW TO GET WARRANTY SERVICE:**

If you experience any problems with either the Bluetooth headset or the mobile handset, in each case as may be covered by this limited warranty, you need only return the affected device. For example, if a problem exists with the Bluetooth headset, please **DO NOT** return your mobile handset with the headset. Likewise, if a problem exists with the mobile handset, please **DO NOT** return the Bluetooth Headset with the handset.

To obtain warranty service, please call or fax to the following telephone numbers from anywhere in the continental United States:

**Tel. 1-800-793-8896 or Fax. 1-800-448-4026**

Or visit <http://us.lgservice.com>. Correspondence may also be mailed to:

LG Electronics Service- Mobile Handsets, P.O. Box 240007, Huntsville, AL 35824

## **DO NOT RETURN YOUR PRODUCT TO THE ABOVE ADDRESS.**

Please call or write for the location of the LG authorized service center nearest you and for the procedures for obtaining warranty claims.

### 7.11 Warranty Laws

The following laws govern warranties that arise in retail sales of consumer goods:

- The California Song-Beverly Consumer Warranty Act [CC §§1790 et seq],
- The California Uniform Commercial Code, Division Two [Com C §§2101 et seq], and
- The federal Magnuson-Moss Warranty Federal Trade Commission Improvement Act [15 USC §§2301 et seq; 16 CFR Parts 701– 703]. A typical Magnuson-Moss Act warranty is a written promise that the product is free of defects or a written promise to refund, repair, or replace defective goods. [See 15 USC §2301(6).] Remedies include damages for failing to honor a written warranty or service contract or for violating disclosure provisions. [See 15 USC §2310(d).] Except for some labeling and disclosure requirements, the federal Act does not preempt state law. [See 15 USC §2311.]

The Consumer Warranty Act does not affect the rights and obligations of parties under the state Uniform Commercial Code, except the provisions of the Act prevail over provisions of the Commercial Code when they conflict. [CC §1790.3.]

For purposes of small claims actions, this course will focus on rights and duties under the state laws.

**Numbers**

10 Driver Safety Tips 220

**A**

Adding a Contact to Your Favorites 96

Adding Contacts 93

Alarm/Clock 162

Answering or Rejecting Calls 67

Applications: How to View Open and Switch 33

Avoid potential hearing loss. 203

**B**

Browse with tabs 78

**C**

Calculator 160

Calendar 153

Call a Contact by Voice Dialing 117

Calling Your Contacts 70

Calls 64

Camera 118

Changing and Monitoring Online Status 116

Changing Google Talk Settings 116

Changing Messaging Settings 111

Changing Weather Settings 90

Chatting with Friends 115

Checking the Weather 89

Chrome 76

Chrome Settings 82

Communication 91

Connecting Quickly With Your Contacts 55

Connecting to Mobile Networks 58

Connecting to Networks and Devices 57

Connecting to Wi-Fi Networks 57

Connecting with VuTalk 56

Consumer Information About Radio Frequency Emissions 195

Consumer Information on SAR 199

Contacts 91

Customizing the Home Screen 50

**D**

Download files 80

Driving 220

**E**

Email 101

Entertainment 118

**F**

FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices 201

FDA Consumer Update 212

File Manager 167

FileShare 148

**G**

Gallery 126

Getting to Know the Home Screen 24

**H**

Help 9

**I**

Important Customer Information 1

Importing Exporting and Sharing Contacts 94

Inserting and Removing the Memory Card 13

**J**

Joining Contacts 99

**L**

LIMITED WARRANTY STATEMENT 224

Listening to Your Voicemail 75

Locking the Screen 46

Lock Screen 14

**M**

Managing Multiple Calls 74

Managing Notifications 39

Managing the World Clock Cities 165

Maps 86  
 Messaging 107  
 microSD Card 61  
 Mini canvas view 26  
 Music 138

## O

Open an Application using Voice Dialer 117  
 Opening Email and the Accounts Screen 101  
 Opening Music and Working with Your Library 138  
 Opening the Gallery application and Viewing Your Albums 126  
 Opening YouTube and Watching Videos 146  
 Optimizing Battery Life 14  
 Options During a Call 72

## P

Phone Overview 5  
 Phone's Status Icons 20  
 Placing and Ending Calls 64  
 Playing Music 140  
 Play Store 135  
 Polaris Office 4 165  
 Powering your phone on/off 14

## Q

QuickMemo™ 53

## R

Reading Your Messages 102  
 Removing the Battery and SIM Card 12

## S

Safety 193  
 Safety Information 208  
 Searching Your Phone and the Web 44  
 Selecting Which Contacts are Displayed 98  
 Sending data from your phone using Bluetooth 62  
 Separating Contact Information 100  
 Setting Alarms 162  
 Setting an Event Reminder 159  
 Settings 170  
 Setting the Timer 164  
 Setting the World Clock 165  
 Setting Up Your Device 16  
 Setting Up Your Phone 9  
 Specifications 223

## T

Table of Contents 2  
 Talk 114  
 Tasks 168  
 Text Input Methods 28  
 The Basics 5  
 The Video Editor application 131

The Video Wiz application 133  
 TIA Safety Information 204  
 Tools 153  
 Touchscreen 22  
 Transferring Music Files to Your Phone 138

## U

USB connection 60  
 Use bookmarks 80  
 Using SmartShare 148  
 Using the Stopwatch 165

## V

Video Camera 123  
 Videos 144  
 Viewing Event Details 158  
 Viewing Your Calendar and Events 153  
 Visual Voicemail 106  
 Voice Dialer 72, 117  
 Voice Recorder 151

## W

Weather 89  
 Web 76  
 WIRELESS & NETWORKS 170  
 Working in Agenda View 158  
 Working in Day View 154  
 Working in Month View 156  
 Working in Week View 155

Working with Menus 38  
Working with photos 127  
Working with Playlists 143  
Working with tabs 79  
Working with the Recent 69  
Working with Videos 129  
Writing Your Messages 103

**Y**

YouTube™ 146



---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---