

your guide to
San Francisco II
from Orange

LEGAL INFORMATION

Copyright © 2011 ZTE CORPORATION.

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

Trademarks

Orange and the Orange logo are trademarks of Orange.

The *Bluetooth*® trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such trademarks by ZTE Corporation is under license. Other trademarks and trade names are the property of their respective owners.

Version No.: R1.0

Edition Time : 20110917

Manual No. : 079584503786

Notice

The information contained in this manual is subject to change without notice. This manual has been designed with the utmost care to ensure the accuracy of its content. However, all statements, information and recommendations contained therein do not constitute a warranty of any kind, either expressed or implied. Please refer to chapter 'the boring safety section you really should read' to be sure to use your phone properly and safely.

Disclaimer

All content and services accessible through this device belong to third parties and are protected by copyright, patents, trademarks and/or other intellectual property laws. Such content and services are provided solely for your personal use and not for commercial use. You may not use them without the expressed permission of the content owner or service provider. Although this does not limit the foregoing, unless expressly authorised by the content owner or service provider concerned, you may not modify, copy, republish, upload, post, transmit, translate, sell, create derivative works, distribute or exploit in any manner or medium any content or services displayed through this device.

THE CONTENT AND SERVICES OF THIRD PARTIES ARE PROVIDED 'AS IS'. TO THE FULLEST EXTENT PERMITTED BY LOCAL LAW, ZTE CORPORATION DOES NOT WARRANT THE CONTENT OR SERVICES PROVIDED, EITHER EXPRESSED OR IMPLIED, FOR ANY PURPOSE. ZTE CORPORATION EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO, THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. ZTE CORPORATION DOES NOT GUARANTEE THE ACCURACY, VALIDITY, TIMELINESS, LEGALITY, OR COMPLETENESS OF THE CONTENT OR SERVICES PROVIDED THROUGH THIS DEVICE AND UNDER NO CIRCUMSTANCES SHALL ZTE CORPORATION BE LIABLE, INCLUDING NEGLIGENCE, WHETHER UNDER CONTRACT OR TORT, FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, ATTORNEY FEES, EXPENSES, OR ANY OTHER DAMAGES ARISING FROM, OR IN CONNECTION WITH, THE INFORMATION CONTAINED IN, OR AS A RESULT OF THE USE OF ANY CONTENT OR SERVICE BY YOU OR ANY THIRD PARTY, EVEN IF ZTE CORPORATION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. TO THE EXTENT SOME STATES DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES OR THE LIMITATION OF LEGAL RIGHTS OF THE CONSUMER, IT IS POSSIBLE THAT THESE EXCLUSIONS AND LIMITATIONS DO NOT APPLY.

The services of third parties may be suspended or discontinued at any time, and ZTE CORPORATION does not guarantee that any content or service will remain available for a certain period. The content and services are provided by others via networks and transmission equipment outside the control of ZTE CORPORATION. Without limiting the generality of this disclaimer, ZTE CORPORATION expressly disclaims liability for any interruption or suspension of any content or service provided through this device. ZTE CORPORATION is not responsible for customer service related to content and services. Any question or request for service on the content or services must be addressed directly to the respective content and services providers.

Downloading content without permission may infringe copyright and/or intellectual property right of the artist. ZTE CORPORATION shall not be held liable for offences committed on copyright and intellectual property right resulting from downloading by the user.

what's in it for you...

let's get started	15
the boring safety section you really should read... ..	16
general safety	16
radio frequency (RF) exposure.....	17
understanding 'Specific Absorption Rate' (SAR).....	18
limiting your exposure to radio Frequency (RF)	18
antennae and radio waves.....	19
National Restrictions on Wi-Fi Usage	20
regulatory information.....	21
driving and operating machinery: avoiding distraction	22
warning: air bag danger.....	22
looking after your phone – and yourself.....	22
keep children safe.....	23
avoid demagnetization.....	24
prevent electrostatic discharge	24
warning: seizures and blackouts	24
avoid repetitive strain injury (RSI)	24
making emergency calls	25
don't damage your hearing	25

phone getting warm?	25
electrical safety	25
using the right accessories	25
installing in a car	26
faulty or damaged equipment.....	26
interference	26
pacemakers	26
hearing aids	27
medical devices	27
hospitals	27
aircraft.....	27
vehicles	28
explosive environments	28
petrol stations and other explosive atmospheres.....	28
blasting areas.....	28
getting to know your phone	29
the keys explained	31
starting up	31
installing the SIM/microSD card and battery.....	32
charging the battery.....	34

switching your phone on/off	34
selecting your phone settings	35
switching to sleep mode	36
waking up your phone	36
getting around San Francisco II	36
let your fingers take you anywhere	37
welcome to your home screen	37
removing things from your Home Screen	41
status symbols: icons explained	42
applications and settings - what does what?	46
how to make calls	53
calling from the dialler	53
calling from your contacts.....	53
calling from your call history	54
calling from a text	54
using speed dial	54
how to receive calls	55
answering a call	55
rejecting a call	56
muting a call	56

putting a call on hold	56
turning the speakerphone on/off	56
ending a call.....	57
adjusting your call settings.....	57
making and using contacts.....	59
importing and exporting contacts	59
Sharing Contacts Information.....	60
creating a contact	60
adding a contact to favourites.....	61
searching for a contact.....	61
creating a new group	61
entering text.....	63
android keyboard	63
XT9 text input	65
choosing touch input settings.....	68
sending and receiving messages	69
sending a text.....	69
sending an MMS	70
managing messages and their 'threads'	71

message settings	71
emailing.....	74
creating an email account	74
receiving emails.....	75
writing and sending emails	75
replying to and forwarding emails	76
choosing your email settings	77
getting connected to the Internet	78
adding a new GPRS/EDGE/3G connection	78
turning on Wi-Fi	79
adding a Wi-Fi network	80
checking the Wi-Fi network status	80
using the phone as a modem	81
enabling the phone as a modem	81
disabling the modem function	82
using the phone as a wi-fi hotspot.....	82
enabling the wi-fi hotspot.....	83
disabling the wi-fi hotspot.....	83
browsing the Internet	84

browsing options	84
browser settings	85
opening links in web pages	87
using bookmarks	88
edit a bookmark	88
delete a bookmark.....	88
going wireless with Bluetooth®	89
turning Bluetooth on/off	89
making your phone visible	89
change your phone's name	90
hook up with another Bluetooth device	91
making the most of multimedia	92
taking pictures with your camera.....	92
adjusting camera settings	92
shooting video with your camcorder.....	93
adjusting your video settings	93
listening to your FM radio.....	94
playing your music	95
creating playlists	96
managing playlists	97

setting a song as ringtone	97
playing your videos	98
opening your gallery	98
making memorable memos	99
using your Google™ applications.....	101
Gmail	101
Using Google Calendar.....	102
Using Google Talk	102
Opening Google Talk	102
Adding a New Friend.....	103
Changing Your Online Status.....	103
Starting a Chat.....	103
Places.....	104
Latitude	105
sorting out your phone settings.....	106
setting time and date	106
changing display settings.....	106
sound settings	107
language settings	108
mobile network services.....	109

getting data services while abroad	109
disabling data services	109
switching network modes	109
enabling always-on data services	110
switching networks	110
setting Access Point Names	110
security settings	111
protecting your phone with a screen unlock pattern	111
protecting your phone with a PIN or password	112
disabling screen unlock security	113
protecting your SIM with a PIN	113
setting up credential storage	115
managing your device memory	116
privacy: reset to factory settings	116
managing applications and their settings	116
installing an application	117
managing other settings... ..	118
search settings	118
voice interaction	118
other applications... ..	119

alarms.....	119
Docs To Go	119
task manager	119
note pad	120
calculator	120
Orange Plus	120
stopwatch	121
specifications.....	122
Declaration of RoHS Compliance	123
Disposal of Your Old Appliance.....	124
Limited warranty statement.....	125
Cleaning and Maintenance	129
EC DECLARATION OF CONFORMITY	131

let's get started

Thanks for choosing the San Francisco II from Orange. If you'd like your new phone to live a long and fruitful life, please read this guide carefully and keep it for future reference. You never know when you might need it.

And don't worry if the pictures we use to demonstrate your phone's functions look a little different from what you see on its screen. It's the functions they show that really matter.

and get in touch with your phone

Another thing you'll notice is that we talk about 'tapping' a lot. That's because your San Francisco II has a touchscreen, which means a simple tap with your finger can both select and open a file. Indeed, you can 'slide' switches on the screen, 'hold' files until a list of shortcuts pops up, casually 'flick' from page to page, 'drag' items into the bin with a well-aimed index finger, or even pinch with two fingers to zoom in to a web page or a photo. It's a pleasure to use.

And that's exactly what this guide is about: making sure the relationship with your new phone is a pleasure from day one. So please read on and enjoy...

the boring safety section you really should read...

general safety

It may not be the most exciting read but it's for your safety, and the safety of those around you. There are certain things you shouldn't do with you phone and some of them might come as a bit of surprise. So please have a look at the following list dos and don'ts...

	Don't make or receive handheld calls while driving. And never text while driving.		Don't use at petrol stations.
	Keep your phone at least 15mm away from your ear or body while making calls.		Your phone may produce a bright or flashing light.
	Small parts are a choking hazard.		Don't dispose of your phone in fire.
	Your phone can produce a loud sound.		Avoid contact with anything magnetic.

	Keep away from pacemakers and other electronic medical devices.		Avoid extreme temperatures.
	Switch off when asked to in hospitals and medical facilities.		Avoid contact with liquids. Keep your phone dry.
	Switch off when told to in planes and at airports.		Don't take your phone apart.
	Switch off when near explosive materials or liquids.		Only use approved accessories.
	Don't rely on your phone for emergency communications.		

radio frequency (RF) exposure

Your phone is a radio transmitter and a receiver. When switched on, it receives and transmits RF energy. When you make or receive a call, the phone controls the RF energy level – using only as much as it needs to make a connection to the network.

understanding 'Specific Absorption Rate' (SAR)

The San Francisco II is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by ICNIRP, an independent body of scientific experts. The guidelines include safety margins so that nobody, regardless of age and health, is at risk.

The guidelines use a unit of measurement known as Specific Absorption Rate (SAR). The SAR limit for mobile devices is 2W/kg and the highest SAR value for the San Francisco II when tested (in accordance with EN 50360, EN 62209-1 and EN 62209-2) by the ear was 1.10 W/kg.

SAR is measured when the phone is at its highest transmitting power. However, the actual SAR of your phone is usually below the test level. This is because your phone is designed to use the minimum power necessary to make and receive calls.

limiting your exposure to radio Frequency (RF)

Please remember that, however you use your phone, **RF exposure guidelines say that you should keep it 15mm away from your body while using the phone.** Otherwise your RF exposure could exceed recommended limits.


If you want to limit your exposure to RF, the World Health Organization (WHO) gives the following advice:

'Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using hands-free devices to keep mobile phones away from the head and body.'

You can find more information about this from the WHO fact sheet N°193 on the WHO home page at <http://www.who.int/mediacentre/factsheets/fs193/en>.


antennae and radio waves

Radio waves are sent and received via antennae. The main antenna in the San Francisco II is low down in the phone, near the microphone into which you speak...

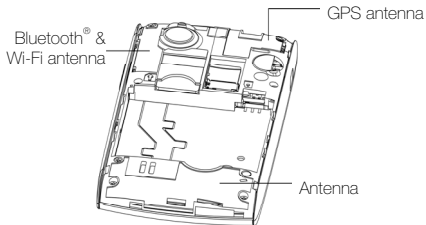

Don't touch the antenna unnecessarily.

So here's how to hold your phone...

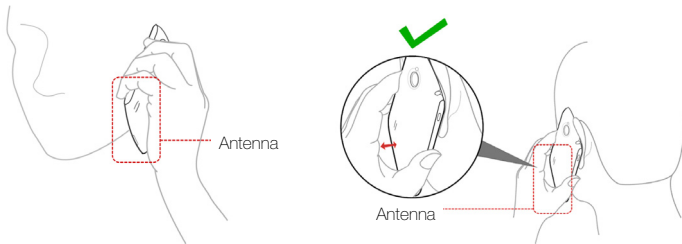

national restrictions on Wi-Fi usage

2400.0-2483.5 MHz

Country	Restrictions	Reason/remark
Bulgaria		General authorisation required for outdoor use and public service
France	Outdoor use limited to 10mW e.i.r.p. within	Military Radiolocation use. Refarming of the 2.4 GHz band has been ongoing in recent years to allow

Country	Restrictions	Reason/remark
	the band 2454-2483.5 MHz	current relaxed regulation. Full implementation planned 2012.
Italy		If used outside of own premises, general authorisation is required.
Luxembourg	None	General authorisation required for network and service supply (not for spectrum).
Norway	Implemented	This subsection does not apply for the geographical area within a radius of 20 km from the centre of Ny-Ålesund.
Russian Federation		Only for indoor applications.

Note: Please don't use the product outdoors in France.

regulatory information

For all regulatory information, please refer to the Declaration of RoHS Compliance and the EC Declaration of Conformity at the end of this guide.

driving and operating machinery: avoiding distraction

Using your phone while driving or operating machinery (even with a legal hands-free kit) can cause distraction and accidents.

Make sure you obey local laws and regulations on the use of wireless devices while driving or operating machinery.

warning: air bag danger

When driving, don't place your phone on anywhere in or on the air bag deployment area.

Put it somewhere safe before setting off.

looking after your phone – and yourself

You're responsible for how you use your phone and any consequences of that use.

Most of the following are common sense, but it's really important to read these dos and don'ts, just in case there's something you didn't know...

- Switch off your phone wherever its use is prohibited.
- Treat your phone and its accessories with care – keeping them in a clean, dust-free place.

- Don't expose your phone or accessories to open flames or lit tobacco products.
- Don't expose your phone or its accessories to liquid, moisture or high humidity.
- Don't drop, throw or try to bend your phone or its accessories.
- Don't use harsh chemicals, cleaning solvents, or aerosols to clean your phone or its accessories.
- Don't paint your phone or its accessories.
- Don't try to mend or take apart your phone. That's a job for qualified technicians.
- Don't expose your phone or its accessories to extreme temperatures of less than -5 and more than 50 degrees celsius.
- Don't put your phone in a back pocket as it could break when you sit down.
- Please check local laws and regulations before disposing of electronic products.

keep children safe

Your phone contains small parts with sharp edges that could cause an injury or may become detached and create a choking hazard.

So don't leave your phone and its accessories within the reach of small children or allow them to play with them. They could hurt themselves, others, or damage the phone.

avoid demagnetization

If your phone is close to – or placed on – electronic devices or magnetic media for a long time, it could get damaged by being demagnetized.

prevent electrostatic discharge

When the phone's back cover is off (for example, when you're inserting your SIM) don't touch the SIM card's metal connectors. And try not to touch the antenna either.

warning: seizures and blackouts

The phone can produce a bright or flashing light which can cause seizures or blackouts in some people.

avoid repetitive strain injury (RSI)

To reduce the risk of RSI when texting or playing games on your phone:

- Don't grip the phone too tightly.
- Press buttons lightly.
- Use the special features, such as message templates and predictive text that reduce the need to press buttons.
- Give yourself – and your fingers – regular breaks.

making emergency calls

This phone operates using radio signals and cannot guarantee connection in all conditions. Therefore, you must never rely solely on your phone for emergency communications.

don't damage your hearing

Your phone can produce loud noises which could damage your hearing. In particular, remember to lower the volume before using headphones, Bluetooth® stereo headsets or other audio devices.

phone getting warm?

Your phone may become warm (but should not become hot) while charging or being used. Don't worry as this is normal.

electrical safety

using the right accessories

Only use approved accessories for the San Francisco II. Connecting it with incompatible products or accessories is likely to damage it. And when the back cover is off, take care not to touch or allow metal objects, such as coins or key rings, to contact the battery terminals. It could cause a short circuit.

installing in a car

Seek professional advice when connecting your phone to a vehicle's electrical system.

faulty or damaged equipment

Don't try to mend or take apart your phone or its accessories. Leave that to the professionals. Only qualified technicians from an authorised service centre should service or repair them.

If your phone (or its accessories) has been submerged in water, punctured, or dropped from a height, don't use it. Take it to an authorised service centre.

interference

Care must be taken when using your phone in close proximity to medical devices, such as pacemakers and hearing aids. It can also interfere with navigational systems in planes and even car electronics...

pacemakers

Pacemaker manufacturers recommend a minimum distance of 15cm between phone and pacemaker. So, if you've got a pacemaker, use your phone on the ear furthest from your pacemaker (usually the right ear). And don't carry your phone in a breast pocket.

hearing aids

Your phone might interfere with hearing aids. The level of interference depends on the type of hearing aid and the distance between it and your phone. So increasing the distance between the two may help. If interference continues to be an issue for you or someone you know, a hearing aid manufacturer might be able to offer a solution.

medical devices

Please consult your doctor and the device manufacturer to determine if the operation of your phone may interfere with the operation of your medical device.

hospitals

To prevent possible interference with sensitive medical equipment, switch off your phone when asked to do so in hospitals, clinics or healthcare facilities.

aircraft

Switch off your phone whenever you are instructed to do so by airport or airline staff. Or, if allowed, switch your phone to 'Airplane mode' before boarding.

vehicles

Because of possible interference with electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a hands-free kit with an external antenna is fitted.

explosive environments

petrol stations and other explosive atmospheres

One tiny spark can cause an explosion. So please obey all signs and requests to turn off wireless devices, such as your phone.


Areas with potentially volatile or explosive atmospheres include fuelling areas, below deck on boats, chemical transfer/storage facilities, and places where the air contains chemicals or particles, such as grain, dust, or metal powders.


blasting areas

Switch off your mobile phone or wireless device when in or near blasting areas, such as quarries. Not just because of the danger from explosives, but also because of the interference your phone may cause with blasting operations.

getting to know your phone

First, find out where everything is...

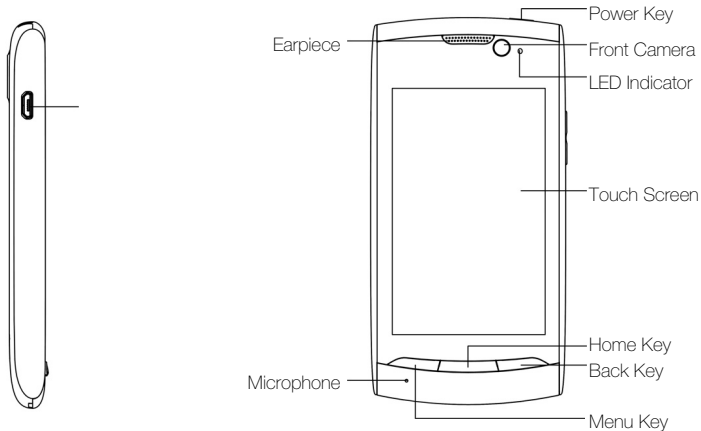

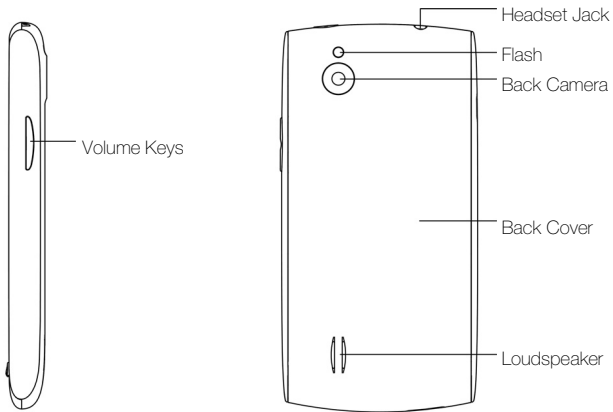

the keys explained

Next, see what everything does...

Key	Function
Power Key	• Hold to switch the phone to Silent or Airplane mode, or power off. • Press to switch your phone to Sleep mode. • Press to wake up your phone.
Home Key	• Press to return to the home screen from any application or screen. • Hold to see recently used applications.
Menu Key	Press to get the options on the current screen.
Back Key	Press to go to the previous screen.
Volume Keys	Press higher end of the key to turn the volume up and the lower end of the key to turn it down.


starting up

Now you're ready to get your new phone working. Here's how...

installing the SIM/microSD card and battery

Switch off your phone before installing or replacing the battery, SIM, or memory card.


1. Remove the back cover like so...

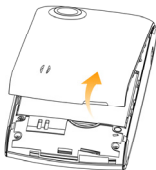

2. Hold the SIM and slip it into the card holder.




3. Hold your microSD card and slide it in.

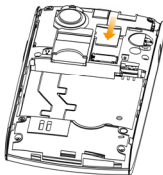

microSD logo  is a trade mark of the SD Card Association.

4. Insert the battery by aligning the gold contacts on the battery with the gold contacts in the battery compartment. Gently push down on the battery until it clicks into place.

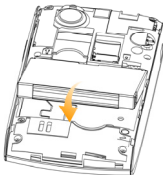


5. Press the cover gently back into place until you hear a click.

charging the battery

When you first get your new phone you'll need to charge the battery like this...

1. Connect the adapter to the charger jack.

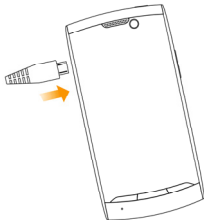

2. Connect the charger to a standard AC wall outlet.
3. Disconnect the charger when the battery is fully charged.

switching your phone on/off

1. Make sure the SIM is in your phone and the battery is charged.
2. Hold **Power Key** to switch on your phone.
3. To switch it off, hold **Power Key** to get the phone options. Select **Power off**, and then tap **OK**.

selecting your phone settings

When you first switch on your new San Francisco II (or if you've reset it to Factory Settings – as explained in *sorting out your phone settings* in this guide) you need to select some settings before you can use it.

1. In the welcome screen, change the display language if necessary and tap **get started**.
2. Configure the date & time settings and tap **next**.
3. Learn the functions of important buttons on your phone. Then tap **next**.
4. Learn how to use the touch screen with different finger gestures. Try them out and tap **next**.
5. Learn how to use the touch screen keyboard. Tap **skip** or try the keyboards out and then tap **next**.
6. Tap **skip** or set up email on your phone and then tap **next**.
7. Select how your phone accesses the Internet and tap **next**.
8. Tap **set up a Wi-Fi network** to connect your phone to a Wi-Fi network, or tap **skip**.
9. Tap **finish**.

switching to sleep mode

To save battery power, Sleep Mode suspends your device to a low-power consumption state while the display is off. Your phone also goes into Sleep Mode after a given period of inactivity. You can set how long that period is in **Settings > Display > Screen timeout**.

Press **Power Key** to switch to Sleep Mode.

waking up your phone

If your phone is in Sleep Mode, you can wake it up by...

1. Pressing **Power Key** to activate your screen display.
2. Drag the  icon to the right.

NOTE: If you have set an 'unlock pattern', or a PIN/password for your phone (see *sorting out your phone settings – security settings* in this guide) you'll need to draw the pattern or enter the PIN/password to unlock your screen.

getting around San Francisco II

Like the city it's named after, this is an exciting phone – so much to do and see, so much fun to be had. It's great for both work and play – especially when you know how to use it properly. Let us take you on a tour, so you can get the very best out of your San Francisco II...

let your fingers take you anywhere

You can use finger gestures to control your phone. The controls on your touch screen change dynamically depending on the tasks you're performing.

1. Tap the buttons, icons, or applications to select items or to open applications.
2. Keep your finger on an item to see the available options.
3. Flick the screen to scroll up, down, left or right.
4. Point, drag and drop to move particular items across the screen – into files etc.
5. Pinch with two fingers, or double-tap the screen, to zoom in/out on a web page or an image.

TOUCHPOINT: You can view the phone screen in portrait or landscape simply by holding it upright or turning it on its side.

welcome to your home screen


Your San Francisco II offers two types of home screen: Orange Homescreen and Launcher. You can freely choose either one, set your own wallpaper, add the widgets or application shortcuts you need, or remove them as you like.

Orange Homescreen

Orange Homescreen, shown below, is the default home screen.



Launcher

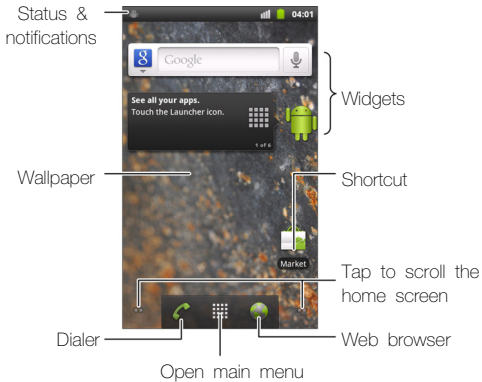

switching home screen style

Orange Homescreen is your default home screen. Here's how to switch to Launcher.

1. Press **Home Key** > **Menu Key** and tap **Settings** > **Applications** > **Manage applications**.
2. Tap the **All** tab and scroll to select **Orange Homescreen**.
3. Tap **Clear defaults**.

TOUCHPOINT: If you want to change back to Orange Homescreen, use the same steps above, except select **Launcher** instead of **Orange Homescreen**.

Now every time you press **Home Key**, the phone will prompt you to choose a home screen type. If you want to use one type permanently, tap **use by default for this action** before selecting the home screen type.

enjoy more space with the screen extension

The home screen extends beyond the screen width, giving you loads more space to play with. Simply slide your finger to the left or right to see the extended home screen.

choose your wallpaper

1. Press **Home Key** to return to the home screen.
2. Press **Menu Key** and select **Wallpaper**.

3. Select the wallpaper you want to use from **Gallery**, **Live wallpaper**, or **Wallpaper**.
4. Tap **Save** or **Set wallpaper**.

adding things to your home screen

1. Tap **Home Key** to return to the home screen.
2. Slide left or right to find a free space.
3. Tap **Menu Key** and select .
4. You can also tap and hold the blank area of the home screen to get the **Add to Homescreen** menu.
5. Select a category and then the item you want to add to the home screen.

removing things from your home screen

1. Tap **Home Key** to return to the home screen.
2. Tap and hold the item you want to delete until  appears on the screen.
3. Drag the item to .



status symbols: icons explained

Your San Francisco II will tell you exactly what's going on by showing you simple icons. Here's what they mean...

	GPRS connected		No signal
	GPRS in use		Signal strength
	EDGE connected		Phone speaker off
	EDGE in use		Phone microphone off
	3G connected		No SIM installed
	3G in use		GPS on
	Battery flat		USB connected
	Battery very low		Recording phone call / New voicemail
	Battery low		microSD card safe to remove
	Battery partially drained		microSD card removed
	Battery full		Preparing microSD card
	Battery charging		Connected to a Wi-Fi network

	Syncing		Alarm set
	Vibrate mode		Wired microphone headset
	Airplane mode		Bluetooth® on
	New mail		Speaker on
	New SMS/MMS		Problem with SMS/MMS delivery
	New WAP push message		New instant message
	New Gmail message		Upcoming event
	Missed call		Music is playing
	Call in progress		Downloading data
	Call on hold		application installed successfully
	Call forwarding		Sending data

	More (not displayed) notifications		USB tethering is on
	Error or warning		Portable Wi-Fi hotspot is on
	New Wi-Fi network detected		

using the notification panel

From the notification panel, you can see your calendar events, new messages, and current settings – such as call forwarding or call status. From here you can also open messages, reminders, etc. And this is how you do it...

Click the status bar downwards.



TOUCHPOINT: You can also open the notification panel from the home screen by tapping **Menu Key > Notifications**.

applications and settings - what does what?

Your San Francisco II has lots of functions. Tap  to see the following. (Note: they may not be identical to your phone.)

Applications	Benefit
Alarm	Set alarms.
App Shop	Easily find, download and buy applications, games and tones to use on your phone from Orange App Shop.
Backup	Back up your contacts from your phone and SIM card.
Calculator	Do basic calculation.
Calendar	Schedule appointments and events.
Call log	Check information of calls made, received, and missed.
Camcorder	Shoot video clips.
Camera	Take some great pictures.
Contacts	Keep contact details of friends and colleagues.
Dialer	Dial a number.
Docs To Go	View your documents.

Applications	Benefit
Downloads	Access your downloaded files.
Email	Send and receive emails on your phone.
Files	Manage files on your microSD card.
FM Radio	Search, listen to and save radio channels.
Gallery	Manage multimedia files.
Games	Find, download, or buy games from Orange App Shop.
Gestures	Open applications by drawing designated gestures on the home screen.
Gmail	Access your Gmail account and check email on your phone.
Google Search	Search for information on the Internet, on your phone, or on the Android Market.
Internet	Browse the Internet.
Latitude	See friends' locations and share yours with them via Google Maps Latitude.

Applications	Benefit
Lookout	Protect your device from malicious software and spyware, back up your data, and locate your device remotely when it is missing.
Mail	Use the mail function offered by Orange.
Maps	Track your current location, view real-time traffic, and receive detailed directions to your destination.
Maps	Always find your way with Orange.
Market	Access useful applications and fun games to download.
Messages	Open the Messages screen, where you can send and receive SMS and MMS messages.
Music	Browse your audio files and listen to them in music player.
Navigation	Find your way with Google Maps Navigation.
News & Weather	Check out the latest news and weather forecast.
Note pad	Create text notes.
Orange Plus	Only appears on the screen if your SIM provides this function. Please contact Orange for more information.

Applications	Benefit
Orange Wednesdays	Get 2 for 1 cinema ticket vouchers, 2 for 1 pizzas at Pizza Express, plus free movie trailers, cinema locations and the latest film reviews.
Orange Wi-Fi	Help you connect to public Wi-Fi hotspots wherever you are.
Places	Find restaurants, ATMs, and other businesses or attractions near you.
Ringtones	Find, download, or buy ringtones from Orange App Shop.
Settings	Adjust phone settings.
Signal Boost	Boost your mobile signal indoors.
Sound Recorder	Capture audio clips.
Stopwatch	Measure exactly how long it takes ...whatever 'it' may be.
Talk	Use Google Talk.
Task Manager	Manage all the programs running on your phone.
Tetris	Play the game on your phone.
Videos	Browse and watch video files.

Applications	Benefit
Voice Search	Use voice commands to search/control your phone.
Weather	Get weather reports from Orange.
Your Orange	Self-service and support in the palm of your hand.
YouTube	Watch YouTube videos.

check your settings

To change or view your phone's settings, tap **Home Key** >  > **Settings**.

Or from the home screen tap **Menu Key** > **Settings**.


Wireless & networks	Configure and manage wireless connections, such as Wi-Fi, Bluetooth®, mobile networks, mobile data connection sharing, and virtual private networks. You can also select Airplane mode from here.
Call settings	Set up fixed dialling numbers, voicemail, speed dial, call barring, call forwarding, call waiting, caller ID, and Internet call settings.
Sound	Set sound settings, such as ringtones and notifications.
Display	Set display settings, such as screen brightness.

Location & security	Create your screen locks, set the SIM lock, change password visibility, or manage the phone's administrators and credential storage. You can also select the sources to use when determining locations from My Location .
Applications	Manage your installed and running apps as well as the installation of new ones, view storage and battery use, and set options for application development.
Accounts & sync	Manage your accounts and configure synchronisation settings.
Privacy	Configure privacy settings, such as back-up and restoration, as well as personal data.
Storage	Check available memory on the external card and the internal phone storage.
Language & keyboard	Set the system language and region, plus text input options.
Voice input & output	Set up voice recognition and text-to-speech options.
Accessibility	Choose accessibility options after you have installed accessibility-related applications.

Date & time	Set the date, time, time zone, and date/time format.
About phone	View phone status, battery use, and legal information. You can also check for system updates.

open recently used applications

1. Hold **Home Key** from any screen until the following recently used applications screen appears.

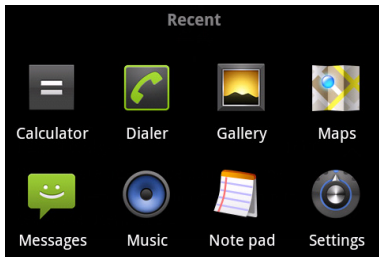

2. Tap the application you want to open.

how to make calls

There are many ways to make a call with your San Francisco II. And they're all easy to do...

calling from dialer

1. Tap  > **Dialer** from the home screen.

2. Enter the phone number or the contact name you want to call.

If you make a mistake, tap  to erase a wrong entry, or hold this key to clear all digits. Your phone automatically lists the matching contacts. You can tap  to hide the keypad and to see if there are more matching numbers or contacts.

3. Tap .

TOUCHPOINT: To make international calls, hold  to enter the “+”.

calling from your contacts

1. Tap **Home Key** >  > **Contacts**.

2. Slide your finger to scroll through the contacts list. Tap the contact you want to call. You can search for a contact by tapping  at the bottom of the contact list.

3. Tap  to make the call.

calling from your call history

1. Tap **Home Key** >  > **Call log**.

TOUCHPOINT: You can also open call history by tapping the **Call log** tab from the **Contacts Screen**.

2. Tap  next to the number you want to call.

calling from a text

If a text message contains a phone number that you want to call, you can make the call while viewing the text message.

1. Tap **Home Key** >  > **Messages** and tap the conversation and then the message that contains the phone number you need.
2. Tap the number.
3. Tap .

using speed dial

Press and hold 1 ~ 9 key from the Dialer to call the corresponding speed dial number.

The number key 1 is reserved to speed dial your voicemail.

Assigning a speed dial key:


1. Tap **Menu Key > Settings > Call settings > Speed dial** from the home screen.
2. Tap a speed dial key.
3. Enter a phone number or tap  to select one from your contacts.
4. Tap **OK**.

how to receive calls

When there's an incoming call, your phone will display all the information it has on the caller on its screen. There are different ways to respond to incoming calls – depending on who's calling and what you're doing at the time. Here are your options...

answering a call

Drag  to the right to answer the call.



rejecting a call

Drag  to the left to reject the call.

muting a call

During a call, you can mute your microphone so that the person you are speaking to cannot hear you, but you can still hear them:

Tap **Mute** to turn your microphone off.  will appear on the screen. To turn your microphone back on, tap **Mute** again.

putting a call on hold

During a call, you can put it on hold by tapping **Menu Key > Hold**.

 will appear on the screen.

TOUCHPOINT: If **you** accept an incoming call while you're on another one, the first call automatically goes on hold. Just tap **Menu Key > Swap calls** to switch between the two callers.

turning the speakerphone on/off

Tap **Speaker** during a call to turn the speakerphone on.  will appear in the status bar. Tap **Speaker** again to turn it off.

ending a call

Just tap  to finish a call.

adjusting your call settings

From the home screen, you can open the call settings menu by going from **Menu Key > Settings > Call settings**. This is what the settings do...

Fixed dialling numbers	Restrict outgoing calls to a fixed set of numbers. To do this you must contact Orange to get your SIM's PIN2 code.	
Voicemail service	Select a voicemail service provider.	
Voicemail settings	Specify a voicemail number.	
Speed dial	Set speed dialling keys and numbers.	
Call barring settings	Forbid certain types of calls.	
Call forwarding	Forward your incoming calls to a different number. And choose when to forward: always forward ; forward when busy ; forward when unanswered , or forward when unreachable .	
Additional settings	Caller ID	Choose whether people you call can see your number.

	Call waiting	See new incoming calls while you're on another call.
Accounts	Set up Internet calling (SIP) accounts.	
Use Internet calling	Choose when to use the Internet calling function.	

making and using contacts

You can add contacts on your phone and synchronise them with the contacts in your Google account or other accounts that support contact syncing.

To go to your contacts, tap **Home Key** >  > **Contacts**.

From there, you can tap the tabs on the top to quickly switch to Dialer, Call log, Favourite contacts, or Contact groups.

importing and exporting contacts

You can import/export contacts from/to your SIM (or microSD card). First, let's do it for the SIM...

1. Tap **Menu Key** > **Import/Export** from the Contacts Screen.
2. Choose to import or export contacts. Your San Francisco II will automatically read the contacts.
3. Select the contacts you want to import/export. To select all contacts, tap **Menu Key** > **Select all**.
4. Tap **OK**.

And this is how you import/export contacts from/to a microSD card...

1. Tap **Menu Key > Import/Export** from the Contacts Screen.
2. Choose to import or export contacts.
 - For importing contacts, you should have vCard files saved in the microSD card. If there's more than one vCard file, you need to select the one you want and tap **OK**.
 - For exporting contacts, the phone will prompt you with the name of the vCard file. Tap **OK** to save the file to the microSD card.

sharing contacts information

1. Tap **Menu Key > Import/Export > Share visible contacts** from the Contacts Screen. Your phone will export all the contact information in the Contact Screen to a temporary vCard file.
2. Choose how you want to send the vCard file. You can either send it via Bluetooth to another device, or as an attachment in an email.

creating a contact

1. Tap  from the Contacts Screen.
2. Tap **Contact type** to choose where you want to save the new contact.

3. Enter the contact name, phone number, and other information.
4. Tap **Done** to save the contact.

adding a contact to favourites

1. Tap and hold from the Contacts Screen the contact you want to add to **Favourites**.
2. Tap **Add to favourites** from the pop-up menu.

TOUCHPOINT: You can also tap a contact and then tap  next to the contact's name to add it to **Favourites**.

searching for a contact

1. Tap  at the bottom of the Contacts Screen.
 2. Input the contact name you want to search for.
- The contacts matched will be listed.

creating a new group

1. Tap the **Groups** tab from the Contacts Screen.
2. Tap the  icon at the bottom of the screen.

3. Enter the group name and tap **Done**.
4. Tap the new group and tap  to add group members.
5. Tick the boxes next to the contacts you want. Then tap **OK**.

To send messages to the group members, you can tap  next to the group and choose who you want to send it to from the listed group members.

entering text


Two fingers, five fingers or even 10 fingers – everyone has a different way (and ability) when it comes to typing. The San Francisco II recognises that fact by offering a choice of keyboards. You choose what suits...

TOUCHPOINT: The keyboard automatically appears on the screen when you enter a field that needs text. You can hide it by holding **Menu Key** or pressing **Back Key**.

android keyboard

The Android Keyboard provides a layout similar to a desktop computer keyboard. To make it even more like a normal keyboard, turn the phone sideways and the screen will change from portrait to landscape.

To use the landscape keyboard, just tick the box for **Auto-rotate screen** in **Settings > Display**. (The landscape QWERTY keyboard is not supported in all applications.)

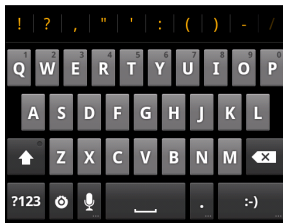

- Tap the alphabetic keys to enter letters. Tap and hold the keys to enter associated accented letters or numbers. For example, to enter È, tap and hold  and the available accented letters and number 3 appear. Then slide to choose È.
- Tap  to use uppercase or lowercase. This key also changes to indicate the current case you are using:  for lowercase,  for uppercase, and  when locked in uppercase.
- Tap  to delete any text you have entered.
- Tap  to select numbers and symbols. You can then tap  to find more. Also, popular symbols are displayed on top of the keyboard. Flick left or right to find the one you need, then tap to enter.

- Tap  to enter a smiley face; hold the key and swipe to choose more emoticons.
- Tap  to change input method or set up Android keyboard.
- Tap  to use Google's networked voice input.

XT9 text input

XT9 Text Input supports tracing gestures where you move your finger from letter to letter without lifting the finger until you reach the end of a word.

XT9 offers three keyboard layouts: Keyboard, Reduced keyboard, and Phone keypad.

- Keyboard

Tap to switch between uppercase and lowercase. Tap twice to lock on uppercase.

Tap to select digits and symbols.




Delete text before the cursor.

Tap or hold to input emoticons.


Move your finger from letter to letter to trace a word without lifting the finger until you reach the end of the word.

The trace feature is also available in both the Reduced keyboard layout and Phone keypad layout.

Move your finger over the letters without lifting it up.

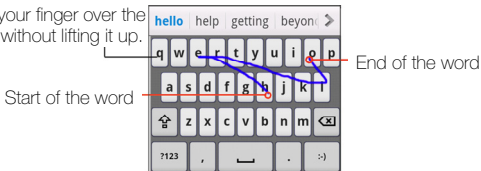

- Reduced keyboard

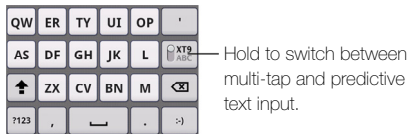


- Phone keypad



Hold to switch between multi-tap and predictive text input.

Using the toolbar

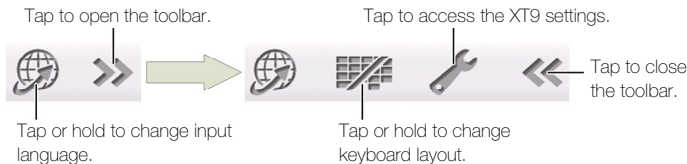

NOTE:  is available when more than one language is activated. You can select input languages by tapping **Menu Key > Settings > Language & keyboard > XT9 Text Input > Languages and settings** from the home screen.

Tips for using XT9's trace feature:

- Ignore double letters – XT9 Text Input will automatically figure those out for you.
- Lift your finger at the end of the word. A space is added automatically when you begin to trace the next word.

choosing touch input settings

Choose the touch input settings by tapping **Menu Key > Settings > Language & keyboard** from the home screen.

In the **Keyboard settings** section, you can choose the settings for android keyboard and XT9 Text Input.

sending and receiving messages

Your SMS (text message) and MMS (multimedia messaging service) files are located in **Messages**.

To access your message files, tap **Home Key** >  > **Messages**.

From **Messages**, you can receive and send a text or MMS.

When you receive a new message, you can open it from the Notifications Panel, or from the Messages Screen. Simply tap on the new message to read it.

Your phone will tell you when message(s) arrive by showing  in the status bar.

sending a text

1. Tap **Home Key** >  > **Messages**.
2. Tap **New message**.
3. Tap the **To** field and enter the recipient's number. You can also enter the contact name. As you type, matching contacts will appear. Tap a suggested contact to add as a recipient.
4. Tap **Type to compose** and type your message.
5. Tap **Send** to send your text.

sending an MMS

1. Tap **Home Key** >  > **Messages**.
2. Tap **New message**.
3. Tap **To** field and enter the recipient's number. You can also enter the contact name. As you type, matching contacts will appear. When you see the one you want, just tap it..
4. Tap **Menu Key** > **Add subject** to enter the subject of your MMS.
5. If needed, tap **Type to compose** and type your message.
6. Tap **Menu Key** > **Attach** if you want to add an attachment to your MMS...
 - Pictures:** Select a picture to add to your MMS.
 - Capture picture:** Take a photo to attach to your MMS.
 - Videos:** Select a video clip to attach to your MMS.
 - Capture video:** Shoot a video clip and attach to your MMS.
 - Audio:** Select an audio file to attach to your MMS.
 - Record audio:** Record an audio file to attach to your MMS.
 - Slideshow:** Edit a slideshow to attach to your MMS.
7. Tap **Send** when you've finished.

TOUCHPOINT: Add an attachment to text message and it will be converted into an MMS without you having to do a thing. Likewise if you remove all attachments and the subject from an MMS, it'll automatically become a text.

managing messages and their 'threads'

Text and MMS messages sent to and received from a contact (or a number) are grouped into a message thread in your Messages Screen. That way you can see the history of the conversation you've had with someone – like a chat program. These message threads are arranged in chronological order, with the latest one on top.

message settings

To configure your message settings, tap **Menu Key > Settings** in the Messages Screen.

Storage settings:

- **Delete old messages:** select to delete old messages when your storage limits are reached.
- **Text message limit:** set the maximum number of text messages allowed in a single thread.

- **Multimedia message limit:** set the maximum number of multimedia messages allowed in a single thread.

Text message (SMS) settings:

- **Delivery reports:** request a delivery report for every text message you send.
- **Manage SIM card messages:** manage the messages saved to your SIM.
- **SMS validity:** set the time limit for sending text messages.
- **SMS priority:** set the priority of outgoing messages.
- **Service Center:** Enables you to view and edit the service centre number.

Multimedia message (MMS) settings:

- **Delivery reports:** request a delivery report for every MMS message you send.
- **Read reports:** request a read report for every MMS message you send.
- **Auto-retrieve:** automatically retrieve MMS messages.
- **Roaming auto-retrieve:** automatically retrieve MMS messages when you're roaming.
- **MMS validity:** set a time limit for sending multimedia messages.
- **MMS creation mode:** select MMS creation restrictions. An MMS created under restricted mode is more likely to be displayed properly on other devices than those created under free mode.

Notification settings:

- **Notifications:** show message notifications in the status bar.
- **Select ringtone:** choose a ringtone for your incoming messages.

Signature settings:

- **Edit signature:** Edit the signature that can be added automatically to outgoing messages.
- **Add signature:** Add a signature to all outgoing messages.

NOTE: Tap **Menu Key > Restore default settings** in the message Settings Screen to change all the message settings back to the original.

emailing

Go to the Email Screen to set up your email account and exchange emails:

Tap **Home Key** >  > **Email**.

creating an email account

1. Enter your email address and password, and then tap **Next** when you enter the Email Screen for the first time.

NOTE: Your San Francisco II knows the client settings for lots of email service providers. If the email service you use is from those providers, the phone will automatically check the incoming/outgoing settings and proceed to step 4 after you enter your email address and password.

2. Select the type of email account, edit the incoming server settings, and then tap **Next** or **Next [Check]**.

Press **Next [Check]**, and your phone will connect to the Internet and verify the settings before proceeding to the next step.

Problems? If you get a message saying setup couldn't be finished, you'll need to correct/check your settings. If there's still a problem, you may need to contact Orange and/or your email service provider for help.

3. Edit the outgoing server settings and tap **Next** or **Next [Check]**.

After you press **Next [Check]**, your phone will check the outgoing server settings.

4. Set the email checking frequency, download options, account name and other settings. Tap **Done** when you finish.

Your phone will show the inbox of the email account and start to download email messages.

TOUCHPOINT: To add more email accounts, open **Email** to get the Inbox screen. Then tap **Menu Key > More > Accounts > Menu Key > Add account**.

receiving emails

Press **Menu Key > Refresh** to download recent emails. You can select **Load more messages** at the bottom of the email list to download earlier messages.

writing and sending emails

After creating your email account, you're ready to write and send emails...

1. From the Inbox Screen tap **Menu Key > Compose**.
2. Tap **To** and enter the recipient's email address.

When you enter the address, any matching addresses saved in your Contacts will be displayed. You can choose a recipient from the list.

You can also tap  to select a recipient from Contacts.

3. Enter the subject and the content of your email. If necessary, change the email priority.
4. Tap **Menu Key > Add attachment** to add files to the email.
5. Tap **Send**.

TOUCHPOINT: Want to send an email to more than one person? Simply tap **Menu Key > Add Cc/Bcc** and input their email addresses.

replying to and forwarding emails

1. From the Email Screen open the email you want to reply to/forward.
2. Tap **Reply** or **Menu Key > Reply/ Forward**.

You can also tap **Reply all** or **Menu Key > Reply all** if you want to include everybody who got the original email. If forwarding, enter the email address(es) you want to include.

3. Type your email.
4. Tap **Send**.

choosing your email settings

Tap the account you want to set from the Accounts Screen and tap **Menu Key > More > Account settings**. You can get the settings for the email account. You can also tap **Menu Key > More > System setting** to set up storage, exchange and other settings.

getting connected to the Internet

The San Francisco II's impressive networking capabilities will get you onto the Internet or a corporate network (intranet) with ease.

You can use default connection settings to connect to the web via your mobile network (GPRS/EDGE/3G), or Wi-Fi.

To get connected via GPRS/EDGE/3G you need an Orange data plan. Also if the GPRS/EDGE/3G settings are not pre-configured on your phone, please contact Orange. Changing the settings without talking to your service provider could stop your phone from working.

adding a new GPRS/EDGE/3G connection

Before you begin, please get the following information from Orange:

- Access Point Name (APN).
 - Your user name and password if needed.
 - Server IP and the port number, if the network uses a proxy server.
1. Tap **Home Key** >  > **Settings** > **Wireless & networks** > **Mobile networks** > **Access Point Names**.
 2. Tap **Menu Key** > **New APN**.

3. Tap **Name** to enter your APN name (it can be whatever you fancy).
4. Tap **APN** to enter the APN you want to add.
5. Tap **Proxy** and **Port** to enter the Server IP and port, if the network uses a proxy server.
6. Tap and enter **Username** and **Password**. But if there's no user name or password, leave them blank.
7. If needed, tap and enter **APN type**.
8. Tap **Menu Key > Save** to complete.

TOUCHPOINT: To set the APN to default settings, tap **Menu Key > Reset to default**.

turning on Wi-Fi

Your Wi-Fi provides wireless Internet access over distances of up to 300 feet (about 100 metres).

1. Tap **Home Key >  > Settings > Wireless & networks**.
2. Tick the **Wi-Fi** box to turn it on.

adding a Wi-Fi network

1. Tap **Home Key** >  > **Settings** > **Wireless & networks** > **Wi-Fi settings**.

The Wi-Fi network names and security settings (open or secured) that your phone has detected are shown in **Wi-Fi networks**.


2. Tap a network to connect to it.

If you attempt to connect to a secured network, you'll need to give a wireless password to get access.

checking the Wi-Fi network status

Check the Wi-Fi network by looking at  in the status bar.

Or tap **Home Key** >  > **Settings** > **Wireless & networks** > **Wi-Fi settings**. Next, tap the wireless network that the phone is currently connected to. You can check the network status from the pop-up window.

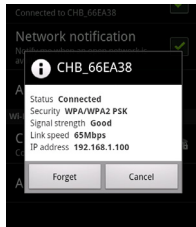

using the phone as a modem

Access the Internet on your PC via your phone as a modem. (This function will usually incur data charges. Please contact Orange for detail.)

enabling the phone as a modem

If you want your PC to access the Internet via your phone's mobile network, the first thing to do is set up the GPRS/EDGE/3G connection correctly.

Also, make sure that USB storage is turned off first. If the USB storage is already turned on, flick down the notification panel and tap **Turn off USB storage > Turn off USB storage**.

1. When you first connect your phone to your PC with the USB cable that comes with it, a window will pop up and prompt you to install the driver.
2. Double click the executable file (.exe) in the window and follow the prompts to finish the driver installation.

NOTE: If the window doesn't pop up automatically for some reason, please open the new CD-ROM drive on your PC manually, and then find the executable file to run it.

3. Select **Home Key > Menu Key > Settings > Wireless & networks > Tethering & portable hotspot** and tick the **USB tethering** box. A new network connection will be created on your PC.

4. Go to **Control Panel > Network** on your PC to enable the new network connection.

... Now you can launch the Internet browser on your PC and start surfing.

disabling the modem function

Tap **Home Key > Menu Key > Settings > Wireless & networks > Tethering & portable hotspot**. Then clear the **USB tethering** tick box.

... Or just pull out the USB cable.

using the phone as a Wi-Fi hotspot

You can use the phone as a portable WLAN router, providing Wi-Fi connection for one or more PCs, or other devices. This function needs data connection on a mobile network and will incur data charges.

TOUCHPOINT:

- You need to set up the GPRS/EDGE/3G connection correctly, when you want your PC to access the Internet and use the phone as a Wi-Fi hotspot via the mobile network,
- When the portable Wi-Fi hotspot function is on, you can't access the Internet with any application on your phone via its Wi-Fi connection.

enabling the Wi-Fi hotspot

1. Tap **Home Key > Menu Key > Settings > Wireless & networks > Tethering & portable hotspot** and tick the **Portable Wi-Fi hotspot** box.
2. Tap **Portable Wi-Fi hotspot settings > Configure Wi-Fi hotspot**.
3. Change the name of the hotspot and its security setting, if necessary.
The default hotspot is set as an open one. You can tap **Open** and choose **WPA2 PSK** to set up a password. The password must have at least 8 characters.
4. Tap **Save**. Now you can find the hotspot on other devices and connect to it.

disabling the Wi-Fi hotspot

Tap **Home Key > Menu Key > Settings > Wireless & networks > Tethering & portable hotspot** and clear the **Portable Wi-Fi hotspot** tick box.

browsing the Internet

You can use your phone to get on the www via a GPRS, EDGE, 3G, or Wi-Fi connection. Tap **Home Key** >  > **Internet**.

There are different ways to open www pages...

- Tap the address bar to enter the website you want to browse. Then tap **Go**.
- Tap  beside the address bar or tap **Menu Key** > **Bookmarks** and select an item to open.
- Go to the Bookmarks Screen to choose an item from the **Most visited** tab/**History** tab.

browsing options

- **Refresh:** **Menu Key** > **Refresh**.
- **Go to the next page:** **Menu Key** > **More** > **Forward**.
- **Search:** **Menu Key** > **More** > **Find on page** and enter the search item.
- **Copy:** **Menu Key** > **More** > **Select text** and slide your finger across the text you want to copy. Tap the selected text and your phone automatically copies it to the clipboard.

- **Share pages:** Menu Key > More > Share page to send a page by mail, Messages, or Bluetooth.
- **Download/page info:** Menu Key > More > Downloads/Page info.
- **Open new browser window:** Menu Key > New window. Then tap the address bar to enter the website you want to browse.
- **Switch browser windows:** If you have more than one browser window open, you can switch between them by tapping Menu Key > Windows. Then tap the one you want to browse. You can also tap  to close a window.

browser settings

Set the browser text size, homepage etc. by tapping Menu Key > More > Settings from a browser window.

Page content settings

- Text size
- Default zoom
- Open pages in overview
- Text encoding
- Block pop-up windows

- Load images.
- Auto-fit pages
- Landscape-only display
- Enable JavaScript
- Enable plug-ins
- Open in background
- Set homepage

Privacy settings

- **Clear cache:** delete all cached page contents.
- **Clear history:** clear the browser navigation history.
- **Accept cookies:** allow websites to use cookies.
- **Clear all cookie data:** clear the browser cookies – deleting all history data.
- **Remember form data:** remember the data you type in forms for later use.
- **Clear form data:** clear all the saved form data.
- **Enable location:** allow sites to request access to your location.
- **Clear location access:** clear location access for all websites.

Security settings

- **Remember passwords:** save usernames and passwords for websites.
- **Clear passwords:** clear saved passwords.
- **Show security warnings:** warn if there's a problem with a site's security.

Advanced settings

- **Set search engine:** set the search service you use when entering key words in the address bar.
- **Website settings:** view advanced settings for individual websites. (Only available for some websites.)
- **Reset to default:** clear all browser data and reset all settings to default.

opening links in web pages

When you're on a web page with a link to another page, either tap the link to open the page, or hold on the link to open the shortcut menu. You'll be given these options:

- Open
- Open in new window
- Bookmark link

- Save link
- Share link (by mail, Messages, or Bluetooth.)
- Copy link URL

using bookmarks

To bookmark a web page, open it and tap  or **Menu Key > Bookmarks**. Then tap **Add/Add bookmark**. Give the bookmark a name and select **OK**.

TOUCHPOINT: To change how you view bookmarks on your phone screen, tap **Menu Key > List view/Thumbnail view**.

edit a bookmark

Open a browser window. Tap **Menu Key > Bookmarks**. Select the bookmark you want to edit – holding on it until the shortcut menu pops up and select **Edit bookmark**. Edit the name or location, and then tap **OK** to save.

delete a bookmark

Open a browser window. Tap **Menu Key > Bookmarks**. Choose the bookmark you want to delete by holding on it until the shortcut menu pops up. Then select **Delete bookmark** and tap **OK** to confirm.

going wireless with Bluetooth®

Bluetooth® gives you short-range wireless communication. Phones or other devices with Bluetooth can exchange information at a maximum range of about 10 metres. They must wirelessly 'see' each other before this can be done – which is why guides like this talk about making your phone 'visible'.

turning Bluetooth on/off

Tap **Home Key** >  > **Settings** > **Wireless & networks** and tap the box by **Bluetooth** to tick it. The fact that Bluetooth is on will be confirmed by the appearance of  in the status bar. If you want to turn Bluetooth off, just clear the **Bluetooth** tick box.

TOUCHPOINT: The default setting for Bluetooth is off, but you can change that. Turn Bluetooth on, and then turn off your phone. When you turn on your phone again, Bluetooth will automatically switch it self on too.

making your phone visible

In order to work with other phones or devices that have Bluetooth, you need to make your phone visible to them. Here's how...

1. Tap Home Key >  > Settings > Wireless & networks > Bluetooth settings.
 2. Select the **Bluetooth** tick box if it isn't already.
 3. Tick the **Discoverable** box to make your device visible for two minutes.
- To make your phone 'invisible', simply remove the tick from the **Discoverable** box by selecting it again.

change your phone's name

When your phone is visible to other Bluetooth devices it will be seen by its name. You can make that anything you want – like 'Ben's San Francisco II'.

1. Tap Home Key >  > Settings > Wireless & networks > Bluetooth settings.
2. Select the **Bluetooth** box if it is not already ticked.
3. Tap **Device name**.
4. Enter the name and tap **OK**.

hook up with another Bluetooth device

Pairing your phone with another phone or device that has Bluetooth, means they can exchange information from then on without being visible to each other. However, they both must have Bluetooth turned on to do this. Here's how you pair up...

1. Tap **Home Key** >  > **Settings** > **Wireless & networks** > **Bluetooth settings**.
2. Tap **Scan for devices**. Your phone will show all visible Bluetooth devices (in range) in **Bluetooth devices**.
3. Select the device you want to pair with.
4. If required, enter your PIN and tap **OK**.

If a PIN is required, the same PIN should be entered on the other device.

making the most of multimedia

Taking pictures, making and watching videos, recording memos and playing your favourite tunes, or maybe just listening to the radio while looking at your holiday snaps... Whatever you fancy doing, the San Francisco II is a little multimedia marvel. Here's how to make the very most of it.

taking pictures with your camera

Your phone has a 5 megapixel back camera with a LED flash and a 0.3 megapixel front camera. Open it by tapping **Home Key** >  > **Camera**.

Aim the camera at the subject and then tap  to take a shot. To view it, just tap the thumbnail in the right corner of the screen. Or select **Menu Key** > **Gallery** to view all your pictures.

adjusting camera settings

From the viewfinder screen tap  to set up focus mode, exposure, picture size/quality, colour effect, ISO, anti-banding, saturation, contrast, sharpness, and camera reset.

Tap  or  to choose whether to save your photo's geographic location.

Tap  to change white balance.

Tap  or  to turn on or off flash.

Tap **1x** to zoom in or out.

Tap  or  to switch between the front and the back camera.

TOUCHPOINT: To quickly switch from camera to camcorder or vice-versa, flick between  . Also, use  to adjust brightness.

shooting video with your camcorder

Open the camcorder by tapping **Home Key** >  > **Camcorder**. Then select  to start shooting, and  to stop. Select the picture in the right corner of the screen to view the video you've just shot. Or tap **Menu Key** > **Gallery** to see all your video clips.

adjusting your video settings

From the viewfinder screen, tap  to adjust colour effect, video quality, video/audio encoder, video duration, and camera reset.

Tap  to change the white balance setting.


Tap **High/Low/MMS/YouTube** or  to change video quality, video/audio encoder, and video duration.

Tap  or  to switch between the front and back lens.

listening to your FM radio

The FM Radio on your phone lets you search for, listen to and save radio channels. And when you get a call, the radio will automatically switch off for the duration of the call.

To tune in, plug your headset into your phone. Tap **Home Key** >  > **FM Radio**. Tap  or  to scan for available FM channels. You can also swipe across the frequency scale to locate a channel. If you need to fine-tune the radio's reception, tap  or  to make the frequency go up or down by ± 0.1 MHz.



Once you're happy that you've got the best reception possible, tap **CH 1** to **CH 10** to save the channel. You can press **Home Key** to use other applications while the radio continues in the background, and  will pop up in the status bar.

IMPORTANT: The quality of your radio's reception depends on the coverage of the radio station where you are. The wired headset that comes with the San Francisco II works as an antenna, so always connect the headset when using the FM Radio.


- Press **Volume Keys** to adjust the volume.
- Tap  to mute the FM radio. Tap  to turn it back on.
- Press **Menu Key** to set the FM radio settings.
- Tap  to switch off the radio.

playing your music

You can play digital audio files from your phone's memory card in **Music**.

That means you need to copy the audio files you want to play to your memory card first. Once that's done...

1. Tap **Home Key** >  > **Music** to open the Music Screen.
2. Select **Artists/Albums/Songs/Playlists** to see the songs you want to play.
3. Tap a song from the list to start playing.
4. Adjust the **Volume Keys** up or down.

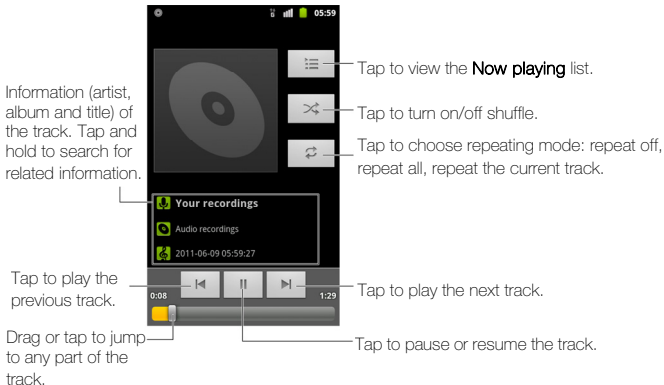

creating playlists

Playlists help you organise your music files:

1. Open Music and select a music file you want to add to a new playlist.
2. Tap and hold on the file until a shortcut menu pops up.

3. Tap **Add to playlist**.
4. Tap **New**.
5. Type the playlist name and tap **Save**.

managing playlists

1. From the Music Screen tap **Playlists** to see them all.
2. Hold on the playlist you want to play or edit until a shortcut menu pops up.
3. Tap **Play**, **Delete** or **Rename**.

adding a song to a playlist

1. Open the folder where the song is.
2. Hold on the song until a shortcut menu pops up.
3. Select **Add to playlist**.
4. Select a playlist.

setting a song as ringtone

1. Open the folder where the song is.
2. Hold on the song until a shortcut menu pops up.
3. Select **Use as phone ringtone**.

TOUCHPOINT: Listening to a song that you'd like as a ringtone? Just tap **Menu Key** > **Use as ringtone**.


playing your videos

First, you need to copy video files to your memory card. Then, to play a video file, tap **Home Key** >  > **Videos**. This will open the Videos Screen and show the video files saved to your memory card.

Choose a video file and the video player will open. Tap on the screen and the control bar will appear as below. So now you can play, pause, fast forward, etc.

opening your gallery

Gallery helps you view pictures and play videos. You can also do some basic editing of your pictures – such as setting them as wallpaper or contact icons, and sharing with friends.

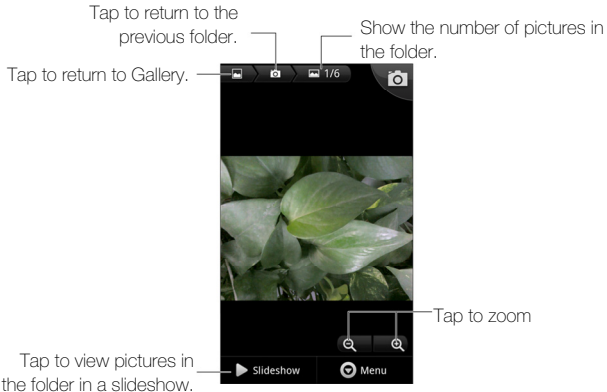

making memorable memos

With **Sound Recorder** you can record voice memos – or, if you're feeling creative, make your own ringtones... just as long as you've put a memory card in your San Francisco II.

1. Tap **Home Key** >  > **Sound Recorder**.
2. Make sure your mouth is near the phone's microphone.
3. Tap  to start recording... and say something. Or get someone – or something else – to make some sounds worth recording.
4. Tap  to stop recording.
5. Tap  to play back the voice recording.
6. Tap **OK** to save the voice recording, or tap **Discard** if it's not up to your high standards and you want to try again.

TOUCHPOINT: Where are your recordings? You'll find them by going to **Home Key** >  > **Music** > **Playlists** > **My recordings**. And if you'd like to use a recording as a ringtone, hold the recording and when the shortcut menu pops up, select **Use as phone ringtone**.

using your Google™ applications

Signing in to your Google Account lets you synchronise Gmail, Picasa web album, Calendar, and Contacts between your phone and the web. And if you don't have an account, you can easily create one...

1. Tap any Google application that needs a Google account, such as **Market**.
2. Read the instructions and select **Next**.
3. If you've got a Google account, tap **Sign in**. Enter your user name and password. Then tap **Sign in**. Or tap **Create** if you don't have a Google account.

Gmail

Gmail is a web-based email service that's ready and waiting for you when you sign in to your Google account. Depending on your synchronisation settings, the Gmail on your phone automatically synchronises with your Gmail account on the web.

This is how you create and send a Gmail email:

1. Open **Gmail** by tapping **Home Key** >  > **Gmail**.
2. Press **Menu Key**. Then select **Compose**.
3. Enter the email address of the person you're contacting in the **'To'** field.

If you're sending the email to several people, separate the email addresses with a comma. You can add as many recipients as you want.

4. Enter the email subject, and then write your email.
5. ...All ready to go? Then press **Menu Key** and tap **Send**.

using Google Calendar

Tap **Home Key** >  > **Calendar**. It's Google's time management application that schedules your appointments, meetings, etc. Your appointments will be displayed on the screen and can be synchronised with your Google account, so you can manage your schedule online via your PC.

using Google Talk

Google Talk is Google's instant messaging program, which enables you to communicate with other people who also use it.

opening Google Talk

Tap **Home Key** >  > **Talk**.

adding a new friend

You can only add people who have a Google Account.

1. In the Friends list, press **Menu Key > Add friend**.
2. Enter the Google account of the friend you want to add.

Your friend will receive an invitation from Google. Press **Menu Key > More > Invites** to see the pending invitation.

changing your online status

1. Tap the Talk status bar above the Friends list.
2. Tap  to change status and then enter your status message in the text box.

starting a chat

1. Tap on a friend in the list.
2. Chat with your friend by entering text in the message box.
3. Tap **Send**.

Places

Google Places helps you find all kinds of businesses near you.

1. Tap **Home Key** >  > **Settings** > **Location & security** and tick the box by **Use GPS satellites** or **Use wireless networks**.
2. Tap **Home Key** >  > **Places**. Wait while you're being located. Your location, when found, is shown at the bottom of the screen.
3. Select a business category the type of business you want to find near your location.

You can also use the **Find places** search box on the top to find the business you need.

NOTE: Tap **Add** to add new business categories.

4. Tap a result you're interested in and check out its details and reviews. You can also see it on Google Maps, find out how to get there, and give that business a call.

Latitude

Google's Latitude service is a social tool: you show friends where you are and friends show you where they are.

Tap **Home Key** >  > **Latitude** to enable Latitude service.

Each time you launch the Maps application, your location will be determined via GPS or the phone network, and your Latitude status will be updated. You can tap **Menu Key** > **Latitude** in Maps or **Home Key** >  > **Latitude** to see your status as well as that of your selected friends.

In Latitude, tap **Menu Key** to refresh friends' status, see them on Maps, add new friends, show/hide stale friends, or change Latitude settings.

And if you don't want people to know where you are, just tap **Sign out of Latitude** in its settings.

sorting out your phone settings

setting time and date

1. Tap **Home Key > Menu Key > Settings > Date & time.**
2. Clear the **Automatic** tick box if you want to set the time and date by yourself.
3. Tap **Set date.** Adjust the date, and tap **Set** to save it.
4. Tap **Select time zone** and where you are in the world.
5. Tap **Set time.** Adjust the time, and tap **Set** to save it.
6. If you want to change the time format, tap the tick box behind **Use 24-hour format.**
7. Tap **Select date format** to select the one you prefer.

changing display settings

By selecting **Home Key > Menu Key > Settings > Display**, you can adjust the display settings as you like:

- **Brightness:** adjust brightness of the screen.
- **Auto-rotate screen:** rotate the screen display as you rotate the phone.

- **Animation:** choose window animation.
- **Screen timeout:** set the time delay – after the phone hasn't been used – for the screen to automatically turn off.

sound settings

By tapping **Home Key > Menu Key > Settings > Sound**, you can adjust the sound settings, such as ringtones and alerts...

- **Silent mode:** tick the box to mute all sounds except media and alarms.
- **Silence Ringer When Face Down:** when this is switched on, you can mute the incoming call ringtone by flipping the phone over.
- **Vibrate:** choose when you want the phone to vibrate.
- **Volume:** tap to adjust volume levels for ringtone, media, alarm, and notification.
- **Phone ringtone:** select the default ringtone for incoming calls.
- **Notification ringtone:** select the default ringtone for notifications.
- **Audible touch tones:** tick the box and the phone will play tones as you tap the dial pad.
- **Audible selection:** tick this box and the phone will play a sound when you touch the screen to make a selection.

- **Screen lock sounds:** tick this box and the phone will play a sound when you lock or unlock the screen.
- **Haptic feedback:** tick this box and your phone will vibrate when you press keys and on certain commands.

TOUCHPOINT: To quickly switch to silent mode, hold down the minus end of the **Volume Key** or, if the screen is locked, drag  to the left.



language settings

You can change the language of your phone's operating system in two simple steps...

1. Tap **Home Key > Menu Key > Settings > Language & keyboard > Select language.**
2. Select a language and region from the list given.

mobile network services

Both GSM and WCDMA are supported by your phone. You can configure the network settings according to your phone service.

getting data services while abroad

1. Tap Home Key > Menu Key > Settings > Wireless & networks > Mobile networks.
2. Tick the Data roaming box.

IMPORTANT: Data roaming may incur significant roaming charges.

disabling data services

1. Tap Home Key > Menu Key > Settings > Wireless & networks > Mobile networks.
2. Clear the Data enabled tick box.

switching network modes

1. Tap Home Key > Menu Key > Settings > Wireless & networks > Mobile networks > Network Mode.
2. Select one of the following: GSM/WCDMA auto, WCDMA only, or GSM only.

enabling always-on data services

1. Tap **Home Key > Menu Key > Settings > Wireless & networks > Mobile networks**.
2. Tick the **Enable always-on mobile data** box to allow applications to update data automatically.

IMPORTANT: When you enable this option, more data traffic will be generated for automatic updates of applications data. And your phone will consume more power.

switching networks

1. Tap **Home Key > Menu Key > Settings > Wireless & networks > Mobile Networks > Network operators**. The phone will automatically search for all available networks.
2. Tap a network to register manually, or tap **Select automatically**.

setting Access Point Names

To connect to the Internet you can use the default Access Point Names (APNs). And if you want to add a new APN, please contact Orange to find out more.

1. Tap **Home Key > Menu Key > Settings > Wireless & networks > Mobile networks > Access Point Names**.

2. Tap **Menu Key > New APN**.
3. Set the necessary parameters. (See how to add a GPRS/EDGE/3G connection in *getting connected to the Internet* in this guide.)
4. Tap **Menu Key > Save**.

security settings

You'd be wise to think about protecting your phone and SIM from unauthorised use. It's not only sensible, it's really rather clever too. Here's how to do it...

protecting your phone with a screen unlock pattern

creating your screen unlock pattern

1. Tap **Home Key > Menu Key > Settings > Location & security > Set up screen lock > Pattern**.
2. Read the instructions and tap **Next**.
3. Watch the example pattern and tap **Next**.
4. With your finger, draw your own 'signature' pattern and tap **Continue**.
5. Draw the pattern again and tap **Confirm**.
6. Press the **Power Key** to lock the screen.

TOUCHPOINT: Clear the **Use visible pattern** box if you want to hide the pattern as you draw it on the screen.

unlocking the screen with your pattern

1. Press the **Power Key**.
 2. Draw the pattern you set to unlock the screen.
- If you make a mistake, your phone will ask you to try again.

can't recall your screen unlock pattern?

You have up to five attempts to unlock your phone. If you still can't recall the screen unlock pattern, tap **Forgotten pattern?** and enter your Google account user name and password to reset the screen unlock pattern.

IMPORTANT: You must sign in or create a Google account on your phone before using the above method to reset the pattern.

protecting your phone with a PIN or password

creating a PIN or password

1. Tap **Home Key > Menu Key > Settings > Location & security > Set up screen lock**.
2. Tap **PIN** or **Password**.

3. Enter the numeric PIN or any password you like, and tap **Continue**.
4. Enter it again and tap **OK** to confirm.

unlocking the screen with your PIN or password

1. Press **Power Key** to wake up the phone.
2. Drag  to the right.
3. Enter your PIN or password.
4. Tap **OK**.

disabling screen unlock security

If you have created an unlock pattern, PIN or password, you can disable it.

1. Tap **Home Key > Menu Key > Settings > Location & security > Change screen lock**.
2. Draw the screen unlock pattern or enter your PIN/ password.
3. Tap **None**.

protecting your SIM with a PIN

Every SIM comes with a PIN. Your SIM is unlocked when you first get it from Orange, but it's best to lock your SIM as soon as you can:

1. Tap **Home Key > Menu Key > Settings > Location & security > Set up SIM card lock**.
2. Select the **Lock SIM card** check box.
3. Enter the PIN you've been given and tap **OK**.

changing your SIM PIN

You can change the PIN you've been given to one easier for you to remember and harder for others to guess:

1. Tap **Home Key > Menu Key > Settings > Location & security > Set up SIM card lock**.
2. Tap **Change SIM PIN**.
3. Enter the old PIN and tap **OK**.
4. Enter your new PIN and tap **OK**.
5. Enter the new PIN again and tap **OK**.

TOUCHPOINT: Clear the **Visible passwords** box if you want to hide any PIN or password as you enter it on the screen.

restoring a locked SIM card

Put all your confidential passwords in a safe place for future use. If you enter the wrong SIM PIN more times than allowed, your SIM card will be locked and you cannot access the mobile phone network. Contact your operator for a PIN Unlock Key (PUK) to restore the SIM.

setting up credential storage

This lets you select applications to access secure certificates and other credentials.

enabling secure credentials

1. Tap **Home Key > Menu Key > Settings > Location & security**.
2. Tap **Set password** and follow the instructions.
3. Tick the **Use secure credentials** box.

TOUCHPOINT: You can also install encrypted certificates from your microSD card by tapping **Install from SD card**.

deleting secure credentials

1. Tap **Home Key > Menu Key > Settings > Location & security**.
2. Tap **Clear storage** to clear credentials.

managing your device memory

Tap **Home Key > Menu Key > Settings > Storage**. Here you can see how much space you've got left on the microSD card and on the phone memory.

- **Unmount SD card:** You can unmount the card safely without switching the phone off.
- **Erase SD card:** Erase all data on the memory card.

privacy: reset to factory settings

Tap **Home Key > Menu Key > Settings > Privacy > Factory data reset > Reset phone > Erase everything**.

WARNING: All the personal information and downloaded applications on your phone will be erased after resetting.

managing applications and their settings

Tap **Home Key > Menu Key > Settings > Applications**. Your options are...

- **Manage applications:** Manage or remove installed applications.
- **Running services:** Check currently running services and stop them if needed.

- **Storage use:** View storage used by applications.
- **Battery use:** See what has been using the battery.
- **Development:** Set options for application development.

Tick the **Unknown sources** box if you want to install applications from sources other than the Android Market. Note that you may risk your phone and personal data by installing such applications.

installing an application

To install an application from the Android Market (**Home Key** >  > **Market**) select the application you want to download and tap **Install**.

You can also install a non-market application (if you've allowed that on your phone). But make sure you select an application developed for your device and processor type before installing it.

1. Copy the application file to the microSD memory card and install the card on your phone.
2. Tap **Home Key** >  > **Files**, and open the folder where the application file is.
3. Tap the application file to start installation.
4. Follow the installation instructions that come with the application to complete the set-up.

managing other settings...

search settings

You can manage search settings and search history by opening the **Google Search** application and tapping **Menu Key > Search settings**.

- **Google search**: adjust Google search settings.
- **Searchable items**: choose what to search for on the phone.

You can also clear the shortcuts to recently chosen search suggestions.

voice interaction

Set the text-to-speech and voice recognition options by tapping **Home Key > Menu Key > Settings > Voice input & output**.

NOTE: You need to download voice data in order to use the text-to-speech function. Just tap **Install voice data** in **Text-to-speech settings**.

other applications...

alarms

1. Tap Home Key >  > Alarm.
2. Tap the default alarm set to configure it. Or, to create a new alarm, tap **Menu Key > Add alarm**.
3. Tick the **Turn on alarm** box and set up **Name**, **Time**, **Repeat**, **Snooze**, **Duration**, **Vibrate**, **Ringtone**, **Volume**, **Volume crescendo**, and **Delay**.

TOUCHPOINT: Just tap **Quick Snooze** to set up one-time alarm that will ring within 60 minutes.

Docs To Go

This is a handy application suite that'll open Word, Excel, Powerpoint, or PDF files. Read the on-screen instructions for detailed information.

task manager

Go to **Task Manager** to view or stop applications.

note pad

Note pad is for your memos. Tap **Menu Key** to add or delete them, or to export the text to a txt file in the microSD memory card. Hold an existing note to edit, delete, share or export, or to change its title.

calculator

This is a basic calculator for day-to-day sums: tap **Home Key** >  > **Calculator**.

TOUCHPOINT: Got some seriously fiddly formulae to sort out? Tap **Menu Key** > **Advanced panel** to use scientific calculation.

Orange Plus

Orange Plus will only appear on the screen if your SIM provides this function. To use SIM services, make sure your SIM is inserted in the phone.

Tap **Home Key** >  > **Orange Plus**.

stopwatch

1. Tap Home Key >  > Stopwatch.
2. Tap **Start** to start timing, **Pause** to pause time, and **Resume** to continue.
3. **Reset** will take the stopwatch back to 00:00.0

specifications

Dimensions		Approx. 117mm x 58.5mm x 10.6mm
Weight		Approx. 120g (with battery)
Bearer		GSM/WCDMA support
Main display dimension & resolution		3.5 inches 800*480
Cameras	Front camera	CMOS, 0.3M pixels
	Back camera	5M pixels with flash
Removable memory card		Support microSD card
Maximum capacity of memory card		32 GB
Battery	Capacity	1200 mAh
	Standby time	Approx. 250 hours (subject to network status)
	Voice talk time	Approx. 280 min (subject to network status)
WAP browser version		WAP2.0

Declaration of RoHS Compliance

To minimize the environmental impacts and take more responsibilities to the earth we live on, this document shall serve as a formal declaration that the San Francisco II manufactured by ZTE CORPORATION is in compliance with the Directive 2002/95/EC of the European Parliament - RoHS (Restriction of Hazardous Substances) with respect to the following substances:

1. Lead (Pb)
2. Mercury (Hg)
3. Cadmium (Cd)
4. Hexavalent Chromium (Cr (VI))
5. Polybrominated biphenyls (PBBs)
6. Polybrominated diphenyl ethers (PBDEs)

The San Francisco II manufactured by ZTE CORPORATION, meets the requirements of EU 2002/95/EC.

Disposal of Your Old Appliance



1. When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.

For this product's recycling information based on WEEE directive, please send an email to weee@zte.com.cn

Limited warranty statement

Article 1

The guarantee for the Orange device (continued as: Device) amounts to 12 (twelve) months from the date the Device was bought.

Six (6) months for the following consumable parts and accessories: batteries, chargers, desk stands, headsets, cables and covers.

The manufacturer guarantees that the Device will properly function with proper usage and maintenance according to the instructions of the manufacturer. The guarantee is applied for all Device faults which arise because of errors in the material and/or the manufacturing of the Device. The guarantee can be used against presentation of a verified guarantee certificate and invoice. The guarantee does not affect other rights belonging to the buyer on other legal remedies. The guarantee is valid in the United Kingdom.

Article 2

The guarantee does not cover: faults occurring because of unauthorised modifications of the software, mechanical damages, improper handling, and other actions (lightning, fire, unsuitable voltage and polarities, traffic accidents, humidity, water and alike), to the batteries and consumable material including*:

- a) Damages caused by using the Device outside the instructions of the manufacturer and other documentation which is enclosed with the Device as well as damages caused by using with other products of another non-approved manufacturer;
- b) Damages caused by accidents, improper and wrong usage, floods, fire, earthquakes and superficial damages which include but are not limited to scratches, dents, broken plastic and alike;
- c) Damages caused by servicing (including upgrading and extension) by an unauthorised person as well as a fault of the Device or any part of it if they are altered because of the change of the functionality or other properties without prior written authorisation of the manufacturer;
- d) Consumable parts other than in the case of damage brought on because of faults in the material or manufacturing;
- e) Impossibility of partial and/or complete usage of the Device because of unauthorised modification of the software.

Article 3

Orange is obliged during the guarantee, in a reasonable time period, to remove all reported faults and defects of the Device covered with this guarantee certificate which have come to be with the proper and regular use of the Device, to repair the Device in an authorised service or a replacement of the faulty Device with the

same but properly working Device if a repair is not possible.

Part(s) repaired or replacement product during the Warranty Period will be warranted for the remainder of the original Warranty Period or for sixty (60) days from the date of repair or replacement, whichever is longer.

Article 4

The guarantee stops being valid if:

- the information from the invoice and/or the guarantee is erased or altered;
- the information on the Device (type, and serial number of the manufacturer) is erased or altered;
- it is established that the Device was opened by an unauthorised person.

Note: customers can report faults and establish the guarantee with the salesman or authorised services

* Concrete cases of faults or damages which are not covered by the guarantee include:

- Damages caused by intentional separation, opening or disassembling the enclosure;
- Damages or faults with the operation caused by the removal and insertion of exterior and interior parts of the Device;
- Damages caused by holes in the enclosure;

- Cracked glass or LCD because of outside factors;
- Damages or faults caused by an outside force;
- Damages or faults caused by liquids;
- Damages or faults caused by liquid or dry chemical substances (such as gasoline, acids, corrosive material), dust, dirt and other foreign objects;
- Damages or faults caused by outside heat or fire (damage by interior heat is covered if it did not occur through an outside reason);
- Superficial damages occurring through external reasons, including dents, shabbiness, scratches on the enclosure, discoloration, cracks, peeling or metal or plastic parts of the enclosure.

** The customer is advised to regularly make copies of his information and other contents on the Device and to erase the same from the memory of the Device before handing the Device over to the service. In case the customer does not do this, Orange is not responsible for the information in the memory of the Device to the customer or a third party.

cleaning and maintenance

Your phone is a delicate device, so please treat it with care – as the following tips advise – so you can give it a long life and avoid invalidating your warranty...

Clean your phone, battery and charger with a soft dry cloth. Don't clean it with alcohol, dilution agent or benzene.

Keep your phone dry. Rain, moisture or any kind of liquid can damage it.

If you touch the phone with wet hands, you might get an electric shock.

From time to time, carefully clean the charger/USB jack socket in the side of the phone. A dusty socket might cause disconnection or power/charging failure.

Don't use or put your mobile phone in a dusty or dirty environment.

Don't press the keys or the screen with needles, pen points or other sharp objects.

Keep away from small metal objects like pins. The phone's speaker is magnetic and attracts metal, which could hurt you or damage the phone.

Avoid extremes of heat. Too hot and it could damage the battery or melt plastic parts. Too cold and water vapour can form inside the phone, damaging the circuitry when it returns to normal temperature.

Don't put your phone in or on any heating devices (such as a microwave oven, toaster or radiator). Overheating could cause an explosion.

Please send your phone to the nearest service centre for inspection if there's anything wrong with it, the battery, the charger or the accessories.

EC DECLARATION OF CONFORMITY

It is hereby declared that following designated product:

Product Type: WCDMA/GSM (GPRS) Dual-Mode Digital Mobile Phone

Model No: San Francisco II

Complies with the essential protection requirements of the Radio and Telecommunication Terminal Equipment Directive (EC Directive 1999/5/EC) and the Electromagnetic Compatibility Directive (2004/108/EC)

This declaration applies to all specimens manufactured identical to the samples submitted for testing/evaluation.

Assessment of compliance of the product with the requirements relating to the Radio and Telecommunication Terminal Equipment Directive (EC Directive 1999/5/EC) was performed by American TCB (Notified Body No.1588), based on the following standards:

Safety	EN 60950-1:2006/A11:2009
EMC	EN 301 489-1 V1.8.1; EN 301 489-7 V1.3.1; EN 301 489-17 V2.1.1; EN 301 489-24 V1.5.1; EN 55013:2001+A2:2006; EN 55020:2007;

Radio	EN 301 511 V9.0.2; EN 301 908-1 V3.2.1; EN 301 908-2 V3.2.1; EN 300 328 V1.7.1; EN 300 487 A1:1997
Health	EN 50360:2001; EN 62209-1:2006; EN 62209-2:2010; EN 50332-1:2000; EN 50332-2:2003

This declaration is the responsibility of the manufacturer:

ZTE Corporation

ZTE Plaza, Keji Road South, Hi-Tech, Industrial Park,
Nanshan District, Shenzhen, Guangdong, 518057, P.R.China

Authorised person signing for the company:

Xu Feng

Quality Director Of ZTE Corporation

Name in block letters & position in the company

Shenzhen, 22nd June 2011

Place & date

徐鋒

Legally valid signature

C € 1588 !