

HUAWEI MediaPad T2 7.0 Pro

User Guide



EMUI 3.1

1 About this document	1
2 Getting started	2
Card insertion.....	2
Dual-card settings	2
Enrolling a fingerprint	3
Fingerprint recognition.....	3
Fingerprint gestures	3
Locking and unlocking the screen	4
Notification and status icons.....	4
Common keys	4
Home screen operations	5
Enabling dual windows.....	6
Opening two apps on the same screen	7
3 Text input	10
Editing Text.....	10
Selecting an input method.....	10
4 Network connection	11
Connecting to a Wi-Fi network	11
Connecting to a Wi-Fi network using WPS.....	11
Turning on your mobile data connection.....	11
Multi-screen display.....	12
5 Network sharing	13
Sharing your data connection using a Wi-Fi hotspot	13
Sharing your data connection through USB tethering	13
6 Contacts	14
Creating a contact	14
Synchronizing contacts	14
Importing contacts	14
Backing up contacts	15
Sharing contacts.....	15
7 Calls.....	16
Making an emergency call.....	16
Making a conference call.....	16
Adding an unknown number to your contacts.....	16
Clearing call logs	16

8 Messaging	18
Searching for a message	18
Customizing message settings	18
9 Managing applications	19
Installing an application	19
Uninstalling and sharing an application	19
10 Multimedia	20
Perfect selfie	20
Time-lapse mode	20
Taking an all-focus photo	20
Taking a panoramic photo	21
Importing photos	21
Viewing photos or videos	22
Sharing photos or videos	22
Scanning a QR code using the camera	22
Scanning a QR code using Gallery	22
11 Customized settings	23
Changing the theme	23
Adding a widget to the home screen	23
Managing home screens	23
Setting the ringtone	24
Setting the font size	24
Adjusting the screen brightness	24
Setting the file safe	24
Setting privacy protection	25
12 File sharing	26
Sharing files using Wi-Fi Direct	26
Sharing files using Bluetooth	26
Copying files from a computer	27
13 Settings	28
Motion control	28
Setting the screen timeout period	28
Setting a screen lock	28
Adjusting the volume	28
Enabling power saving mode	28
Checking the memory status	29

Setting the date and time	29
Formatting a microSD card	29
Restoring factory settings.....	29
Updating your HUAWEI MediaPad T2 7.0 Pro	29
14 Personal Information and Data Security	31
15 Safety information.....	32
16 Legal Notice.....	36

1 About this document

Thank you for choosing the HUAWEI MediaPad T2 7.0 Pro.

This document is intended for HUAWEI MediaPad T2 7.0 Pro that runs EMUI 3.1.

Figures in this document are screenshots taken under the **Spectrum(magazine)** theme.

Switch to the **Spectrum(magazine)** theme to better understand this guide. For details, see [Changing the theme](#).




- The pictures in this user guide are for reference only. See the product for details.
- Certain functions may vary with models and regions.

2 Getting started

Card insertion

Follow the instructions in the figure during installation. Power off your device before installing or removing the SIM card.

- ⚠ Use the eject tool to pop the card slot out. Exercise caution when using the tool to avoid injuries. Keep the eject tool out of reach of children.

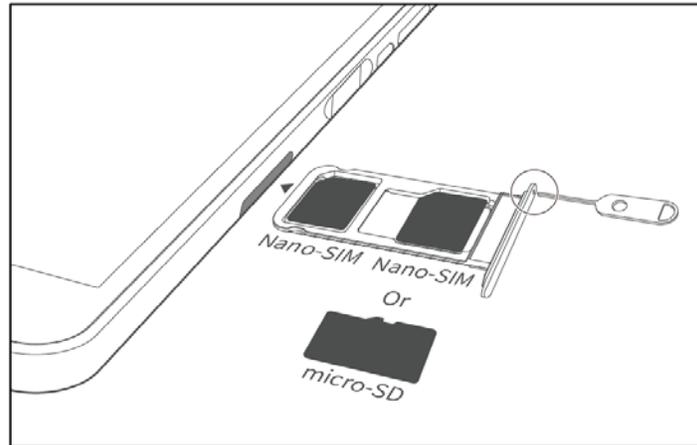

- i** ● Hand-cut SIM cards may damage your device. Use standard nano-SIM cards purchased from your carrier's customer counter.
- Device damage resulting from failure to follow the operation guides will void the warranty.
- The battery is not user-removable. To replace it, contact an authorized Huawei service center.
- To forcibly restart your device, press and hold the power key until your device vibrates.

Dual-card settings

When you are using two Nano-SIM cards, the **SIM1** card slot is set as the primary card slot by default, supporting 2G, 3G, and 4G networks, while the **SIM2** card slot is set as the secondary card slot, supporting 2G networks.

To switch the primary and secondary card slots, touch **Settings > Dual card management**, and set **Card 2** as the 4G/3G card slot.


- i** ● If you are using only one Nano-SIM card, the card slot you insert your SIM card into will be set as the primary card slot.

Enrolling a fingerprint

After your fingerprint is enrolled, it can do a lot for you, including unlocking the screen, accessing encrypted files and protected apps.

 To better protect your privacy, you can use the fingerprint screen unlock feature only when the unlocking method is set to **PIN** or **Password**.

1. Go to  **Settings > Fingerprint ID > Fingerprint management**.
2. Select **PIN** or **Password**, and then follow the onscreen instructions to set a password.
3. Touch **Enroll** and place your fingertip on the fingerprint sensor. The fingerprint enroll progress is shown on the screen as a percentage. Repeat this step using different parts of your fingertip until your phone has successfully enrolled your fingerprint.

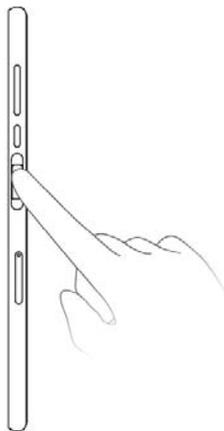

4. Touch **Rename** to name the fingerprint or touch **OK** to directly save it.

On the **Fingerprint management** screen, you can rename or delete an enrolled fingerprint or touch **New fingerprint** to enroll a new fingerprint.

Fingerprint recognition

You can use your fingerprint to unlock the screen, access encrypted files and protected apps.

1. Go to  **Settings > Fingerprint ID > Fingerprint management**.
2. Enable **Access safe**, **Access app lock** as required, and follow the onscreen instructions.

To access encrypted files and protected apps, simply place your finger on the fingerprint sensor.

Fingerprint gestures

Your HUAWEI MediaPad T2 7.0 Pro supports multiple fingerprint gestures. For example: Touch and hold the fingerprint sensor to answer calls, take photos, or silence alarms. Swipe down on the fingerprint sensor to view the notification panel.

1. Go to  **Settings > Fingerprint ID**.
2. Enable the desired fingerprint gestures.

Locking and unlocking the screen

- **Locking the screen:** If your HUAWEI MediaPad T2 7.0 Pro has been idle for a specified period of time, the screen locks itself automatically. You can also press the power button to lock the screen.



On the home screen, touch  **Settings > Display > Sleep** and choose a time.

- **Unlocking the screen:** Press the power button to turn on the screen. Slide your finger toward any direction to unlock the screen.



If you have already enrolled your fingerprint, touch the fingerprint sensor lightly to unlock the screen.

Notification and status icons

The notification and status bars may display the following icons to inform you of your HUAWEI MediaPad T2 7.0 Pro's status.

	Airplane mode		Bluetooth on
	GPS in use		Charging
	Battery full		Battery extremely low
	New email		Wi-Fi hotspot on
	SIM card not inserted		Preparing the microSD card
	Upcoming event		Alarms enabled
	Uploading or sending files		Downloading or receiving files
	Memory full		System exception
	Synchronizing data		Synchronization failed
	Connected to a VPN		USB tethering on
	Wi-Fi networks available		Connected to a Wi-Fi network
	USB debugging on		Headset connected

Common keys

	More		Share
	Completed		Add
	Search		Delete data
	Refresh		Save

	Favorites		Call
---	-----------	---	------

Home screen operations

- To open an application: On the home screen, touch the application.
- To switch between the home screen and its extensions: On the home screen, flick your finger left or right.
- Personalizing the home screen: Touch and hold a blank area on the home screen or pinch two fingers together to set the wallpaper, widgets, and more.



- On the home screen, pinch three fingers together to display the home screen thumbnails, where you will be able to manage your home screens. For details, see [Managing home screens](#).



- Opening the notification and shortcut panels: Slide down from the status bar to open the notification panel. Flick left or right to switch between the notifications and shortcuts tabs.



1	Touch a notification to view its details and flick left or right across a notification to dismiss it.
2	Touch  to delete all notifications.
3	Drag the slider to adjust the screen brightness. You can also enable or disable automatic brightness.
4	Touch the shortcut switches on the notification panel to turn on or off the functions. Touch and hold a switch to enter the settings screen of the corresponding function. Slide down the shortcut switches, you can then touch Edit to customize the list.

Enabling dual windows

You can enable dual windows on your HUAWEI MediaPad T2 7.0 Pro to conveniently multitask.


1. On the home screen, touch  **Settings** > **Dual windows**.
2. Turn on **Dual windows**.
3. From any screen, slide two fingers upward from the bottom of the screen or touch and hold the recent key to enable dual windows.

Opening two apps on the same screen

This feature enables you to do two things simultaneously, such as watching a movie and making shopping choices. Multiple windows can be opened for two apps on the same screen.

Use the following method to open multiple windows:

- Swipe up with two fingers from the bottom of the virtual navigator bar.

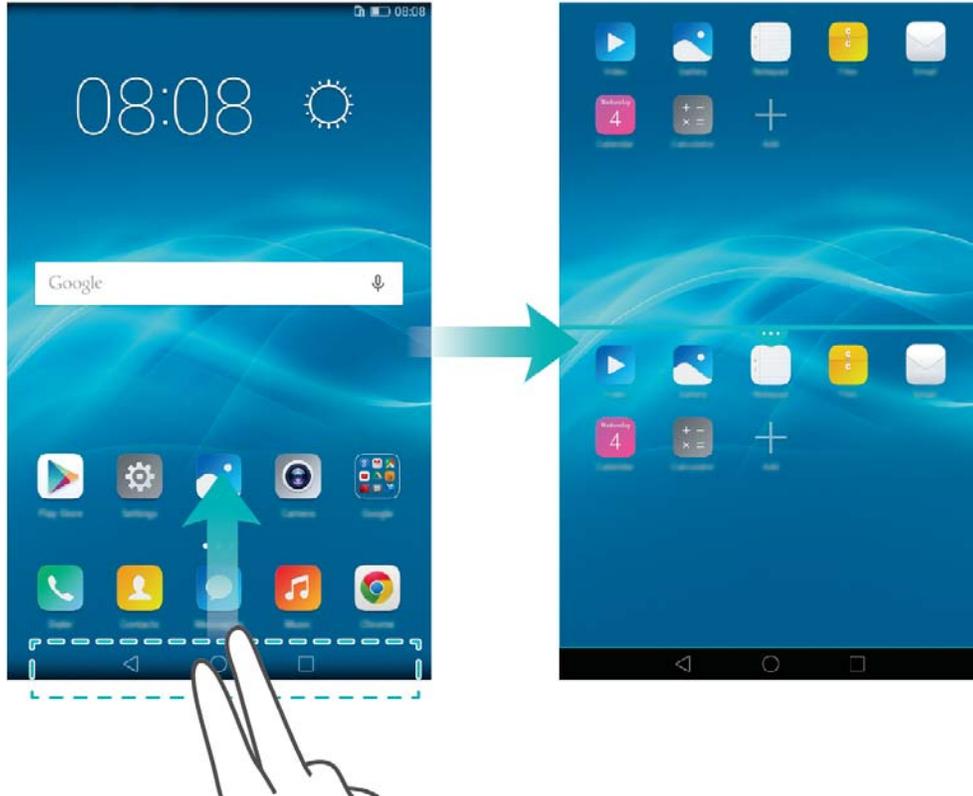


- Touch and hold .



Go to the multiple windows options to separate the screen into two windows. An app can be opened in each window.

Drag the frame to adjust the size of the window. Touch  to open the menu for multiple windows.

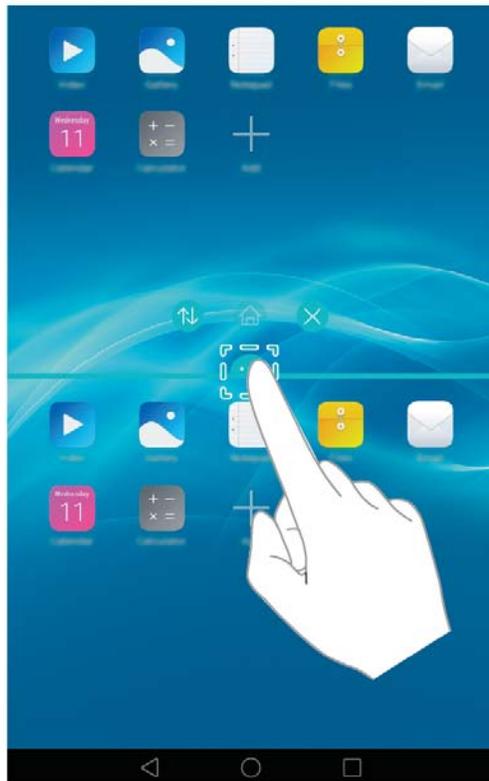

- Touch  to swap the position of the two windows.

- Touch  to view multiple window options.
- Touch  to close multiple window options.

3 Text input

Your HUAWEI MediaPad T2 7.0 Pro comes with multiple input methods. You can quickly enter text using the onscreen keyboard.

- Touch a text input field to bring up the onscreen keyboard.
- When you are done, touch  to hide the onscreen keyboard.

Editing Text

You can copy, cut, and paste text.

- **Select text:** Touch and hold the text field until  and  appear. Drag  and  to select the text you want to edit, or touch **Select all** to select all text.
- **Copy text:** After selecting text, touch **Copy**.
- **Cut text:** After selecting text, touch **Cut**.
- **Paste text:** Touch where you want to insert the text (to move the insertion point, drag ) and touch **Paste** to paste the text you copied or cut.

Selecting an input method

The HUAWEI MediaPad T2 7.0 Pro provides multiple ways to text input. You can select the input method you like.

1. On the text editing screen, touch a text field to bring up the onscreen keyboard.
2. Flick down from the notification bar to display the notification panel.
3. On the notification panel, touch **Select input method**.
4. On the displayed option menu, select the desired input method.

4 Network connection

Connecting to a Wi-Fi network

 When both a Wi-Fi network and a mobile network are available simultaneously, the HUAWEI MediaPad T2 7.0 Pro connects to the Wi-Fi network by default. If the Wi-Fi network disconnects, the HUAWEI MediaPad T2 7.0 Pro then automatically connects to the mobile network.

1. On the home screen, touch  **Settings** > **Wi-Fi**.
2. Toggle the switch of **Wi-Fi** to  to turn on Wi-Fi. Your HUAWEI MediaPad T2 7.0 Pro then scans for available Wi-Fi networks.
3. Select the desired Wi-Fi network and follow the onscreen instructions.

 To connect to a Wi-Fi network that has a hidden SSID, touch **Add network** under the Wi-Fi network list, and then follow the onscreen instructions to enter the required information and connect to that network.

Your HUAWEI MediaPad T2 7.0 Pro consumes more power when Wi-Fi is turned on. To save battery power, turn off Wi-Fi when it is not in use.

Connecting to a Wi-Fi network using WPS

If the wireless router being used supports the Wi-Fi protected setup (WPS) function, you can quickly connect to a Wi-Fi network using WPS.

1. On the home screen, touch  **Settings** > **Wi-Fi**.
2. Toggle the switch of **Wi-Fi** to  to turn on Wi-Fi.
3. Touch  **Advanced settings** > **WPS connection** or **WPS PIN connection**, and follow the onscreen instructions for operations to perform on the wireless router.

Turning on your mobile data connection

Using mobile data services may incur data usage charges. For details, contact your service provider.

1. On the home screen, touch  **Settings**.
2. Touch **More** > **Mobile network** under **Wireless & networks**.
3. Toggle the **Mobile data** switch to  to enable mobile data.

Multi-screen display

Multi-screen display allows you to push photos, videos, or games on your HUAWEI MediaPad T2 7.0 Pro to a larger screen, such as a TV for easy viewing.

If your TV supports HDMI, you can use it with an Android TV box or similar wireless transmission device for multi-screen display.

Swipe down from the status bar to open the notification panel. On the switches tab, turn on **Multi-screen**. Select the receiving device to start the multi-screen display.



For more functions, see the TV box user guide.

5 Network sharing

You can use various methods to share your HUAWEI MediaPad T2 7.0 Pro's data connection with other wireless devices.

Sharing your data connection using a Wi-Fi hotspot

By setting up your HUAWEI MediaPad T2 7.0 Pro as a Wi-Fi hotspot, you can share your mobile network with other devices.

Before sharing your data connection, turn on mobile data on your HUAWEI MediaPad T2 7.0 Pro. For details, see [Turning on your mobile data connection](#).

When other devices access the Internet using your HUAWEI MediaPad T2 7.0 Pro's data connection, the data usage of your HUAWEI MediaPad T2 7.0 Pro will be consumed.

1. On the home screen, touch  **Settings**.
2. Under **Wireless & networks**, touch **More** > **Tethering & portable hotspot**.
3. Touch **Portable Wi-Fi hotspot**.
4. Toggle the switch to  to turn on your Wi-Fi hotspot.
5. Touch **Configure Wi-Fi hotspot** and follow the onscreen instructions to set the required information, such as your Wi-Fi network name and password.

Once the Wi-Fi hotspot settings are complete, other Wi-Fi enabled devices can search for and connect to the Wi-Fi hotspot provided by your HUAWEI MediaPad T2 7.0 Pro.

Sharing your data connection through USB tethering

You can share your HUAWEI MediaPad T2 7.0 Pro's network with a computer using a single USB cable.

1. Connect your HUAWEI MediaPad T2 7.0 Pro to a computer using the USB cable provided with the HUAWEI MediaPad T2 7.0 Pro.
2. On the home screen, touch  **Settings**.
3. Under **Wireless & networks**, touch **More** > **Tethering & portable hotspot**.
4. Touch **USB tethering** to share your mobile data connection.

After the connection is set up, you can access the Internet from the computer.



When using the USB tethering function, you cannot simultaneously use your HUAWEI MediaPad T2 7.0 Pro as a USB storage device.

6 Contacts

Creating a contact

1. On the home screen, touch  **Contacts** to display your contacts list.
2. Touch .

 If you are creating contacts for the first time, your HUAWEI MediaPad T2 7.0 Pro prompts you to select a storage location. When you create contacts next time, the new contacts are stored in the same storage location by default. In addition, the storage location is displayed on the new contacts screen, and you can touch the storage location to select a new one.

3. Enter the related information, such as the contact's name, phone number, and email address.
4. Touch **Add another field** to add more information.
5. Touch .

Synchronizing contacts

You can synchronize the contacts stored in your Gmail and Exchange accounts to your HUAWEI MediaPad T2 7.0 Pro and vice versa.

1. On the home screen, touch  **Settings**.
2. Under **Accounts**, touch the type of account you want to synchronize.
3. Touch the account you want to synchronize.
4. Toggle the **Sync contacts** switch to .

If the account you want to synchronize has not been added to your HUAWEI MediaPad T2 7.0 Pro, touch **Add account** and follow the onscreen instructions to add the account. When it is added, your HUAWEI MediaPad T2 7.0 Pro automatically synchronizes with it.

Importing contacts

You can import contacts from a micro-SIM or microSD card to your HUAWEI MediaPad T2 7.0 Pro, or use Wi-Fi Direct to import the contacts from other devices to your HUAWEI MediaPad T2 7.0 Pro.

1. On the home screen, touch  **Contacts** to display your contacts list.
2. Touch  > **Import/Export**.
3. Select an import method and follow the onscreen instructions.

Backing up contacts

You can back up your contacts to a microSD card in case your contacts are accidentally deleted or lost.

1. On the home screen, touch  **Contacts** to display your contacts list.
2. Touch  > **Import/Export**.
3. Touch **Export to storage**.

Sharing contacts

You can share contacts in your HUAWEI MediaPad T2 7.0 Pro with your friends using email, Bluetooth, and more.

1. On the home screen, touch  **Contacts**.
2. From the contacts list, you can:
 - Touch the contact you want to share, and then touch .
 - Touch  > **Import/Export** > **Share contact**, select the contacts you want to share, and touch .
3. In the displayed dialog box, choose a sharing mode and follow the onscreen instructions to share the contacts.

7 Calls

Making an emergency call

In the event of an emergency, you can make emergency calls without a SIM card. However, you must still be within the coverage area.

1. On the home screen, touch  **Dialer**.
2. Enter a local emergency number and touch .

 Emergency calls are subject to the quality of the cellular network, use environment, service provider policies, and local laws and regulations. Never rely solely on your HUAWEI MediaPad T2 7.0 Pro for critical communications when emergencies occur.

Making a conference call

Making conference calls with your friends, family, and co-workers is easy with your HUAWEI MediaPad T2 7.0 Pro.

 Before you make a conference call, be sure you have subscribed to the conference call service. For details, contact your service provider.

1. Call the first participant.
2. When the call is connected, touch  and call the second participant. The call with the first participant is put on hold.
3. When the second call is connected, touch  to start a conference call.
4. To add more participants, repeat steps 2 and 3.

When the call is complete, touch  to end it.

Adding an unknown number to your contacts

1. On the home screen, touch  **Dialer**.
2. From the call log, touch  next to the unknown number.
3. Touch  or .

 You can also touch and hold the number you want to add, and then touch **Create new contact** or **Save to existing contact**.

Clearing call logs

To delete a single call log entry: On the **Dialer** screen, touch and hold the call log entry. On the displayed option menu, touch **Delete entry**.

To delete all or multiple call log entries: On the **Dialer** screen, touch  > **Delete call log**.

- Select the **Select all** check box and touch  to delete all call log entries.
- Select one or more call logs and touch  to delete them.

8 Messaging

Searching for a message

If you are having trouble finding a specific message in a pile of messages, this function can come to your rescue.

1. On the home screen, touch  **Messaging**.
2. Enter a keyword in the search box.
3. Touch .
4. In the results list, select the desired message to open it.

Customizing message settings

To customize text and multimedia message settings, message notification tones, and more, from the message list, touch  > **Settings**.

9 Managing applications

Installing an application



When you install an application, the "**Install blocked**" message may be displayed. Read the message carefully. If you want to continue with the installation, follow the onscreen instructions.

You can obtain and install an application using any of the following methods:

- Download it from an online app store or by using a browser. After the application is downloaded, follow the onscreen instructions to install it.



Some third-party applications may not be compatible with your HUAWEI MediaPad T2 7.0 Pro. They may not run properly and your HUAWEI MediaPad T2 7.0 Pro may shut down. It is recommended that you download applications from trusted sources only.

- Connect your HUAWEI MediaPad T2 7.0 Pro to a computer. Then use the HiSuite or third-party software to download the application. After the application is downloaded, follow the onscreen instructions to install it.
- Use Bluetooth or Wi-Fi Direct to send the application on another device, such as a phone or tablet, to your HUAWEI MediaPad T2 7.0 Pro. After the transmission is complete, touch the application to install it.
- Download the application from a computer. Then copy the application to your HUAWEI

MediaPad T2 7.0 Pro. Once copied, touch  **Files** on your HUAWEI MediaPad T2 7.0 Pro's home screen. Touch **Applications** > **Apps** under **Categories**, select the application and then follow the onscreen instructions to complete the installation.

Uninstalling and sharing an application

On the home screen, touch and hold the application you want to uninstall or share.

- Drag it to  to uninstall the application.
- Drag it to  to share the application.



Some pre-installed applications cannot be uninstalled.

10 Multimedia

Perfect selfie

Set your own custom beauty settings for facial enhancement and beautifying effects when you take photos in **Beauty** mode.

1. Open  **Camera**.
2. Touch  > **Settings** > **Perfect selfie**.
3. Turn on **Perfect selfie**.
4. Touch **Perfect selfie** to take three self-portrait shots.
 You can touch **Perfect selfie** > **Edit personal info** in Camera to edit your personal information.
5. On the **Set beauty effects** screen, adjust your beauty settings, and then touch  .
6. In **Beauty** mode, touch  to take a photo.

Time-lapse mode

Use this mode to create an accelerated video of a slow-changing scene, such as the sunset or sunrise.

1. On the home screen, touch  **Camera**.
2. Swipe left or right to select **Time-lapse** mode.
3. Touch  to start recording.
4. Touch  to stop recording.
The captured video will be played back at an accelerated pace.

Taking an all-focus photo

In all-focus mode, you can change the focal point of a photo after it's been taken.

1. On the home screen, touch  **Camera**.
2. Touch  > **All-focus** to switch to all-focus mode.
3. Touch  to take a photo.
4. Go to Gallery and select the photo that was taken in all-focus mode.
  indicates photos taken in all-focus mode.
5. Touch  to enter all-focus editing mode.
6. Touch an area of the photo to change the focal point to that location.
7. Touch  .

Taking a panoramic photo

Your HUAWEI MediaPad T2 7.0 Pro enables you to easily take panoramic photos without a wide-angle lens.


1. On the home screen, touch  **Camera**.
2. Touch  > **Panorama** to switch to panorama mode.
3. Touch  to start shooting.
4. Follow the onscreen instructions and move your device slowly in one direction.
5. Touch  to stop shooting. The camera automatically merges all the photos captured to create one panoramic photo.

Importing photos

You can import photos from a camera or other storage device (such as a USB flash drive or phone) to your HUAWEI MediaPad T2 7.0 Pro using only a USB OTG cable.

 To purchase a USB OTG cable, please contact an Huawei authorized supplier or your device vendor.

1. Use a USB OTG cable to connect a camera and your HUAWEI MediaPad T2 7.0 Pro.

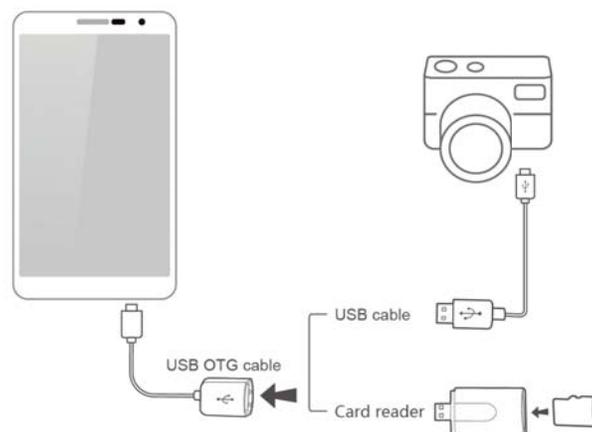

2. On your HUAWEI MediaPad T2 7.0 Pro's home screen, touch  **Files > Local > USB**.
3. Touch  or , select the photos or folders you want to import into your HUAWEI MediaPad T2 7.0 Pro.
4. Touch **COPY** or **CUT**.
5. Choose where you want to save the files and touch **PASTE**.

Viewing photos or videos

Gallery enables you to conveniently view photos and videos. It automatically searches and organizes photos and videos stored on your HUAWEI MediaPad T2 7.0 Pro's internal storage and the microSD card for your easy reference.

1. On the home screen, touch  **Gallery** to open Gallery.
2. Touch a photo or video to view it in full screen mode. Flick your finger left or right across the screen to view the previous or next file.

 You can pinch two fingers apart or together to zoom in or out.

Sharing photos or videos

You can share photos and videos via Bluetooth or email. Take your HUAWEI MediaPad T2 7.0 Pro and start sharing!

1. On the home screen, touch  **Gallery** to open Gallery.
2. Touch and hold the photo, video you want to share .
3. Touch  and choose how you want to share the selected file, for example, using Bluetooth or Wi-Fi Direct. Then follow the onscreen instructions. For details, see [File sharing](#).

Scanning a QR code using the camera

1. On the home screen, touch  **Camera**.
2. Frame the QR code with the camera.
3. After the QR code is successfully scanned, touch **View details**.

Scanning a QR code using Gallery

1. On the home screen, touch  **Gallery**.
2. Choose a QR code photo.
3. Touch the photo.
4. Touch **View details**.

11 Customized settings

Changing the theme

Your HUAWEI MediaPad T2 7.0 Pro comes with multiple themes, easily allowing your device to have a new look as often as you want.

1. On the home screen, touch  **Themes**.
2. Flick left or right to browse different local and online themes. (Applicable to selected models)
3. Select the desired theme. Then, touch .

Adding a widget to the home screen

You can add widgets, such as the calendar and bookmarks, to the home screen.

1. On the home screen, touch and hold a blank area.
2. Touch **Widgets**.
3. Drag a widget to the home screen and release your finger.



Managing home screens

On the home screen, pinch three fingers together to display the home screen thumbnails.

- **Setting the default home screen:** Touch  at the bottom of the screen to select the current home screen as the default home screen.
- **Moving a home screen:** Touch and hold the home screen until your device vibrates, and then drag the home screens to adjust their positions.

- **Adding a home screen:** Touch  to add a home screen.
- **Deleting a home screen:** Touch  to delete a blank home screen.

Setting the ringtone

1. On the home screen, touch  **Settings > Sound**.
2. Select the desired ringtone type.
3. Follow the onscreen instructions to select your favorite music or recording as the ringtone.

Setting the font size

1. On the home screen, touch  **Settings > Display**.
2. Touch **Font size**.
3. Select the desired font size.

Adjusting the screen brightness

1. On the home screen, touch  **Settings > Display > Brightness**.
 2. In the displayed dialog box, perform either of the following operations:
 - Select the **Automatic brightness** check box to let your device automatically adjust the screen brightness based on the ambient light. (Applicable to selected models)
 - Drag the slider left or right to manually adjust the screen brightness.
-  You can also open the notification panel and quickly adjust the screen brightness using the shortcut switch.

Setting the file safe

The file safe helps you keep your important files private and protected.

1. On the home screen, touch  **Files**.
 2. Under **Categories** or **Local**, touch **Safe**.
 3. Touch **Enable**.
 4. Follow the onscreen instructions to set up your safe password and security question, and then touch **Done**.
 5. Touch **Add**.
 6. Follow the onscreen instructions and select the files you want to add to the safe.
 7. Touch **ADD** to add the files to the safe.
-  Enter the file safe, touch **Settings > Destroy safe**, and follow the onscreen instructions to destroy the safe. To remove any files before destroying the safe, select **Remove files**.

Setting privacy protection

If you have private data in your device that you wish to keep hidden from others, you can enable privacy protection and set two different passwords, one for yourself and one for guests. Content that you set as private will be hidden from people logged in with the guest password.

1. On the home screen, touch  **Settings > Security**.
 2. Touch **Privacy protection > Let's start**.
 3. Select a password format.
 4. Follow the onscreen instructions and enter your owner password and guest password.
 5. Under **Set private data**, set your private contacts, albums, and applications.
-  To disable privacy protection, unlock your HUAWEI MediaPad T2 7.0 Pro using the owner password. Enter the **Privacy protection** screen, enter the owner password, and then disable **Privacy protection**. After privacy protection is disabled, your owner password will function as the screen unlock password and the guest password will become invalid.

12 File sharing

Sharing files using Wi-Fi Direct

Wi-Fi Direct is a function to connect wireless devices using a Wi-Fi network. After wireless devices are connected, they can quickly share files among them.

1. On the home screen, touch  **Settings** > **Wi-Fi**.
2. Touch the key next to **Wi-Fi** or drag the key to  to turn on Wi-Fi.
3. Touch . On the receiving device, turn on Wi-Fi Direct. Your HUAWEI MediaPad T2 7.0 Pro then automatically searches for available devices.
4. Select the device to pair it with your HUAWEI MediaPad T2 7.0 Pro.
5. On your HUAWEI MediaPad T2 7.0 Pro, touch and hold the file you want to share. On the displayed option menu, touch **Share** > **Wi-Fi Direct**.
6. On the displayed option menu, select the desired device, and lastly, touch the key on the device to receive the file.



If your HUAWEI MediaPad T2 7.0 Pro and the device have connected to the same Wi-Fi network and both have Wi-Fi Direct turned on, you can directly share files between them without pairing them.

Sharing files using Bluetooth

1. On the home screen, touch  **Settings** > **Bluetooth**.
2. Touch the key next to **Bluetooth** or drag the key to  to turn on Bluetooth.
3. Select the device to pair your HUAWEI MediaPad T2 7.0 Pro and the device.
4. On your HUAWEI MediaPad T2 7.0 Pro, touch and hold the file you want to share. On the displayed option menu, touch **Share** > **Bluetooth**.
5. On the displayed option menu, select the desired device. On the device, touch the related key to receive the file.

Copying files from a computer

Use a USB cable to connect your HUAWEI MediaPad T2 7.0 Pro to a computer. Flick down from the status bar to open the notification panel. Follow your HUAWEI MediaPad T2 7.0 Pro's onscreen instructions to select a connection method. You can then transfer files between your HUAWEI MediaPad T2 7.0 Pro and the computer.

Connection Mode	Function	Operation
Photos	On the computer, view and manage the image files stored on your HUAWEI MediaPad T2 7.0 Pro.	Click the newly displayed drive letter on the computer. Then transfer image files between your HUAWEI MediaPad T2 7.0 Pro and the computer.
Files	<ul style="list-style-type: none">● On the computer, view and manage the files stored on your HUAWEI MediaPad T2 7.0 Pro and the microSD card.● Using Windows Media Player 11 or a later version in the computer, view and manage the multimedia files stored on your HUAWEI MediaPad T2 7.0 Pro and the microSD card.	<ul style="list-style-type: none">● Click the newly displayed drive letter on the computer. Then transfer files between your HUAWEI MediaPad T2 7.0 Pro and the computer.● Start Windows Media Player on the computer. Follow the onscreen instructions to transfer multimedia files between your HUAWEI MediaPad T2 7.0 Pro and the computer.
USB drive	On the computer, view and manage the files stored on the microSD card.  This method is available only when your HUAWEI MediaPad T2 7.0 Pro has a microSD card inserted.	Click the newly displayed drive letter on the computer. Then transfer files between the microSD card and the computer.

13 Settings

Motion control

Motion control allows you to control your HUAWEI MediaPad T2 7.0 Pro using minimal movements. For example, flip to mute, shake to automatically rearrange the icons on the home screen, and double touch to wake up the screen.

1. On the home screen, touch  **Settings**.
2. Touch **Motion control**.
3. On the **Motion control** screen, select an option, and select a motion to enable it.

Setting the screen timeout period

You can set a screen timeout period so your HUAWEI MediaPad T2 7.0 Pro automatically turn off the screen to save power.

1. On the home screen, touch  **Settings > Display > Sleep**.
2. Choose a timeout period.

Setting a screen lock

1. On the home screen, touch  **Settings > Screen lock & passwords**.
2. Follow the onscreen instructions to set the screen lock.

With a screen lock set, if your HUAWEI MediaPad T2 7.0 Pro is idle for a specified period of time, it automatically locks its screen. You can also touch the power key to lock the screen.

Adjusting the volume

You can set the volume for the ringtone, media, alarms, and notifications.

1. On the home screen, touch  **Settings > Sound > Volume**.
2. Drag the sliders left or right to adjust the volume.

You can also use the volume keys to adjust the volume of running applications.

Enabling power saving mode

1. On the home screen, touch  **Settings > Power saving**.
2. Select a power saving mode.

Checking the memory status

Before moving a large file to your HUAWEI MediaPad T2 7.0 Pro's internal storage or the microSD card, check the available storage space that has left on it.

1. On the home screen, touch  **Settings**.
2. Touch **Storage** to view memory information.

Setting the date and time

1. On the home screen, touch  **Settings > Date & time**.
2. Deselect the **Automatic date & time** check box.
3. Follow the onscreen instructions to set the date and time.

 If your HUAWEI MediaPad T2 7.0 Pro is set to automatically update the date and time, it obtains the date and time information from the network and updates them according to your time zone. In this case, you cannot manually change the time zone, date, or time displayed on your HUAWEI MediaPad T2 7.0 Pro.

Formatting a microSD card

 Back up important data before you format a microSD card.

1. On the home screen, touch  **Settings**.
2. Touch **Storage > My SD card > Erase SD card**.

Restoring factory settings

 Restoring your HUAWEI MediaPad T2 7.0 Pro to its factory settings erases all your personal data, including information about your accounts, your system and application settings, and your installed applications. Before restoring factory settings, back up the important data on your HUAWEI MediaPad T2 7.0 Pro.

1. On the home screen, touch  **Settings > Backup & reset**.
2. Touch **Factory data reset** and follow the onscreen instructions to back up data or directly restore factory settings.

Updating your HUAWEI MediaPad T2 7.0 Pro



- Updating your HUAWEI MediaPad T2 7.0 Pro may clear all the data in it. Back up important data before updating your HUAWEI MediaPad T2 7.0 Pro.
- If you use unauthorized software to update the system, a update failure may occur or your personal information may be leaked. Update your HUAWEI MediaPad T2 7.0 Pro online or by using authorized software.

1. On the home screen, touch **Cloud Apps >  Updater** to view the system information.

2. Touch **Check for updates**. If a new version is available, follow the onscreen instructions to update online. You can also choose  > **Local update** to update the system using a local update package.



To update using a local update package, refer to the update guide included in the package.

14 Personal Information and Data Security

The use of some functions or third-party applications on your device could result in your personal information and data being lost or becoming accessible to others. Several measures are recommended to help you protect personal and confidential information.

- Place your device in a safe area to prevent it from unauthorized use.
- Set your device screen to lock and create a password or unlock pattern to open it.
- Periodically back up personal information kept on your memory card, or stored in your device memory. If you change to a different device, be sure to move or delete any personal information on your old device.
- If you are worried about viruses when you receive messages or emails from a stranger, you can delete them without opening them.
- If you use your device to browse the Internet, avoid websites that might pose a security risk to avoid theft of your personal information.
- If you use services such as Wi-Fi or Bluetooth, set passwords for these services to prevent unauthorized access. When these services are not in use, turn them off.
- Install or upgrade device security software and regularly scan for viruses.
- Be sure to obtain third-party applications from a legitimate source. Downloaded third-party applications should be scanned for viruses.
- Install security software or patches released by Huawei or third-party application providers.
- Some applications require and transmit location information. As a result, a third-party may be able to share your location information.
- Your device may provide detection and diagnostic information to third-party application providers. Third party vendors use this information to improve their products and services.
- If you have concerns about the security of your personal information and data, please contact mobile@huawei.com.

15 Safety information

This section contains important information about the operation of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

Electronic device

Do not use your device if using the device is prohibited. Do not use the device if doing so causes danger or interference with other electronic devices.

Interference with medical equipment

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device where prohibited.
- Some wireless devices may affect the performance of hearing aids or pacemakers. Consult your service provider for more information.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If using a pacemaker, hold the device on the side opposite the pacemaker and do not carry the device in your front pocket.

Protecting your hearing when using a headset

- Using a headset at high volumes may damage your hearing. To reduce this risk, lower the headset volume to a safe and comfortable level.
- Exposure to high volumes while driving may cause distraction and increase your risk of an accident.

Areas with flammables and explosives

- Do not use the device where flammables or explosives are stored (in a gas station, oil depot, or chemical plant, for example). Using your device in these environments increases the risk of explosion or fire. In addition, follow the instructions indicated in text or symbols.
- Do not store or transport the device in containers with flammable liquids, gases, or explosives.

Traffic security

- Observe local laws and regulations while using the device. To reduce the risk of accidents, do not use your wireless device while driving.
- Concentrate on driving. Your first responsibility is to drive safely.
- Do not hold the device while driving. Use hands-free accessories.
- When you must make or answer a call, pull off the road safely and park the vehicle first.
- RF signals may affect the electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- Do not place the device over the air bag or in the air bag deployment area in a motor vehicle. Doing so may hurt you because of the strong force when the air bag inflates.
- Do not use your device while flying in an aircraft or immediately before boarding. Using wireless devices in an aircraft may disrupt wireless networks, present a hazard to aircraft operation, or be illegal.

Operating environment

- Avoid dusty, damp, or dirty environments. Avoid magnetic fields. Using the device in these environments may result in circuit malfunctions.
- Do not use your device during thunderstorms to protect your device against any danger

caused by lightning.

- Do not expose your device to direct sunlight (such as on a car dashboard) for prolonged periods.
- To protect your device or accessories from fire or electrical shock hazards, avoid rain and moisture.
- Keep the device away from sources of heat and fire, such as a heater, microwave oven, stove, water heater, radiator, or candle.
- Do not place sharp metal objects, such as pins, near the earpiece or speaker. The earpiece may attract these objects and result in injury.
- Stop using your device or applications for a while if the device is overheated. If skin is exposed to an overheated device for an extended period, low temperature burn symptoms, such as red spots and darker pigmentation, may occur.
- Do not use your device's camera flash directly in the eyes of people or pets. Otherwise temporary loss of vision or damage to the eyes may occur.
- Do not touch the device's antenna. Otherwise, communication quality may be reduced.
- Do not allow children or pets to bite or suck the device or accessories. Doing so may result in damage or explosion.

Child's safety

- Comply with all precautions with regard to child's safety. Letting children play with the device or its accessories may be dangerous. The device includes detachable parts that may present a choking hazard. Keep away from children.
- The device and its accessories are not intended for use by children. Children should only use the device with adult supervision.

Accessories

- Using an unapproved or incompatible power adapter, charger or battery may cause fire, explosion or other hazards.
- Choose only accessories approved for use with this model by the device manufacturer. The use of any other types of accessories may void the warranty, may violate local regulations and laws, and may be dangerous. Please contact your retailer for information about the availability of approved accessories in your area.

Charger safety

- For pluggable devices, the socket-outlet shall be installed near the devices and shall be easily accessible.
- Unplug the charger from electrical outlets and the device when not in use.
- Do not drop or cause an impact to the charger.
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using it at once. Continued use may lead to electric shocks, short circuits, or fire.
- Do not touch the power cord with wet hands or pull the power cord to disconnect the charger.
- Do not touch the device or the charger with wet hands. Doing so may lead to short circuits, malfunctions, or electric shocks.
- If your charger has been exposed to water, other liquids, or excessive moisture, take it to an authorized service center for inspection.
- Ensure that the charger meets the requirements of Clause 2.5 in IEC60950-1/EN60950-1/UL60950-1 and has been tested and approved according to national or local standards.
- Connect the device only to products with the USB-IF logo or with USB-IF compliance program completion.

Battery safety

- Do not connect battery poles with conductors, such as keys, jewelry, or other metal

materials. Doing so may short-circuit the battery and cause injuries or burns.

- Keep the battery away from excessive heat and direct sunlight. Do not place it on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode if overheated.
- Do not attempt to modify or remanufacture the battery, insert foreign objects into it, or immerse or expose it to water or other liquids. Doing so may lead to fire, explosion, or other hazards.
- If the battery leaks, ensure that the electrolyte does not make direct contact with your skins or eyes. If the electrolyte touches your skins or splashes into your eyes, immediately flush with clean water and consult a doctor.
- In case of battery deformation, color change, or overheating while charging or storing, immediately stop using the device and remove the battery. Continued use may lead to battery leakage, fire, or explosion.
- Do not put batteries in fire as they may explode. Damaged batteries may also explode.
- Dispose of used batteries in accordance with local regulations. Improper battery use may lead to fire, explosion, or other hazards.
- Do not allow children or pets to bite or suck the battery. Doing so may result in damage or explosion.
- Do not smash or pierce the battery, or expose it to high external pressure. Doing so may lead to a short circuit or overheating.
- Do not drop the device or battery. If the device or battery is dropped, especially on a hard surface, it may be damaged.
- If the device standby time shortens significantly, replace the battery.
- The device has a built-in, non-removable battery. Do not attempt to remove the battery, otherwise the device may be damaged. To replace the battery, take the device to an authorized service center.

Cleaning and maintenance

- Keep the device and accessories dry. Do not attempt to dry it with an external heat source, such as a microwave oven or hair dryer.
- Do not expose your device or accessories to extreme heat or cold. These environments may interfere with proper function and may lead to fire or explosion.
- Avoid collision, which may lead to device malfunctions, overheating, fire, or explosion.
- Before you clean or maintain the device, stop using it, stop all applications, and disconnect all cables connected to it.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device or accessories. These substances may cause damage to parts or present a fire hazard. Use a clean, soft, and dry cloth to clean the device and accessories.
- Do not place magnetic stripe cards, such as credit cards and phone cards, near the device for extended periods of time. Otherwise the magnetic stripe cards may be damaged.
- Do not dismantle or remanufacture the device and its accessories. This voids the warranty and releases the manufacturer from liability for damage. In case of damage, contact an authorized service center for assistance or repair.
- If the device screen is broken in a collision, immediately stop using the device. Do not touch or attempt to remove the broken parts. Promptly contact an authorized service center.

Emergency calls

The availability of emergency calls is subject to your cellular network quality, service provider policy, and local laws and regulations. Never rely solely on your device for critical communications like medical emergencies.

Environmental protection

- The device and its accessories (if included), such as the power adapter, headset, and battery should not be disposed of with household garbage.
- Disposal of the device and its accessories is subject to local regulations. Support proper collection and recycling.

16 Legal Notice

Copyright © Huawei Technologies Co., Ltd. 2016. All rights reserved.

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd. and its affiliates ("Huawei").

The product described in this manual may include copyrighted software of Huawei and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders.

Trademarks and Permissions



HUAWEI, **HUAWEI**, and



are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Android™ is a trademark of Google Inc.

LTE is a trade mark of ETSI.

The *Bluetooth*® word mark and logos are registered trademarks owned by *Bluetooth SIG, Inc.* and any use of such marks by Huawei Technologies Co., Ltd. is under license.

Other trademarks, product, service and company names mentioned may be the property of their respective owners.

Notice

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and therefore may not be activated or may be limited by local network operators or network service providers.

Thus, the descriptions herein may not exactly match the product or its accessories which you purchase.

Huawei reserves the right to change or modify any information or specifications contained in this manual without prior notice and without any liability.

Third-Party Software Statement

Huawei does not own the intellectual property of the third-party software and applications that are delivered with this product. Therefore, Huawei will not provide any warranty of any kind for third party software and applications. Neither will Huawei provide support to customers who use third-party software and applications, nor be responsible or liable for the functions or performance of third-party software and applications.

Third-party software and applications services may be interrupted or terminated at any time, and Huawei does not guarantee the availability of any content or service. Third-party service providers provide content and services through network or transmission tools outside of the control of Huawei. To the greatest extent permitted by applicable law, it is explicitly stated that Huawei shall not compensate or be liable for services provided by third-party service providers, or the interruption or termination of third-party contents or services.

Huawei shall not be responsible for the legality, quality, or any other aspects of any software installed on this product, or for any uploaded or downloaded third-party works in any form, including but not limited to texts, images, videos, or software etc. Customers shall bear the risk for any and all effects, including incompatibility between the software and this product, which result from installing software or uploading or downloading the third-party works.

This product is based on the open-source Android™ platform. Huawei has made necessary changes to the platform. Therefore, this product may not support all the functions that are supported by the standard Android platform or may be incompatible with third-party software. Huawei does not provide any warranty or representation in connect with any such compatibility and expressly excludes all liability in connection with such matters.

DISCLAIMER

ALL CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL HUAWEI BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOSS OF PROFITS, BUSINESS, REVENUE, DATA, GOODWILL SAVINGS OR ANTICIPATED SAVINGS REGARDLESS OF WHETHER SUCH LOSSES ARE FORSEEABLE OR NOT.

THE MAXIMUM LIABILITY (THIS LIMITATION SHALL NOT APPLY TO LIABILITY FOR PERSONAL INJURY TO THE EXTENT APPLICABLE LAW PROHIBITS SUCH A LIMITATION) OF HUAWEI ARISING FROM THE USE OF THE PRODUCT DESCRIBED IN THIS MANUAL SHALL BE LIMITED TO THE AMOUNT PAID BY CUSTOMERS FOR THE PURCHASE OF THIS PRODUCT.

Import and Export Regulations

Customers shall comply with all applicable export or import laws and regulations and be responsible to obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.

Privacy Policy

To better understand how we protect your personal information, please see the privacy policy at <http://consumer.huawei.com/privacy-policy>.