



# HTC Desire® 555 User Guide



# htc

# Contents

---

## Features you'll enjoy

---

What's new and special with Camera	16
The best from HTC and Google Photos	18
Sound	18
Truly personal	19
Boost+	21
Android 7.0 Nougat	22
What's different with the onscreen keyboard	22
Software and app updates	24

---

## Unboxing

---

HTC Desire 555 overview	25
nano SIM card	27
Storage card	29
Charging the battery	31
Switching the power on or off	32

---

## Phone setup and transfer

---

Setting up HTC Desire 555 for the first time	33
Ways of transferring content from your previous phone	34

Transferring content from an Android phone	34
Transferring iPhone content through iCloud	35
Other ways of getting contacts and other content	36
Transferring photos, videos, and music between your phone and computer	37
Setting a screen lock	38
Setting up Smart Lock	39
Turning the lock screen off	40
Software and app updates	40
Installing a software update	42
Installing an application update	42
Installing app updates from Google Play	43
Getting apps from Google Play	44
Downloading apps from the web	46
Uninstalling an app	47

---

## Your first week with your new phone

---

HTC Sense Home	48
Sleep mode	49
Unlocking the screen	49
Motion gestures	51
Touch gestures	53
Getting to know your settings	58
Using Quick Settings	59
Capturing your phone's screen	60

Travel mode	61
Restarting HTC Desire 555 (Soft reset)	61
Notifications	62
Selecting, copying, and pasting text	64
Entering text	65
How can I type faster?	66
Getting help and troubleshooting	69

---

## Personalizing

---

Ringtones, notification sounds, and alarms	70
What is HTC Themes?	70
Choosing a Home screen layout	75
Setting your Home wallpaper	76
Adding or removing a widget panel	77
Changing your main Home screen	78
Launch bar	79
Adding Home screen widgets	80
Adding Home screen shortcuts	81
Grouping apps on the widget panel and launch bar	82
Moving a Home screen item	82
Removing a Home screen item	83

---

## Managing apps

---

Arranging apps	84
----------------	----

Controlling app permissions	86
Setting default apps	86
Setting up app links	87
Disabling an app	87

---

## Taking photos and videos

---

Camera screen	88
Choosing a capture mode	90
Taking a photo	92
Setting the photo quality and size	93
Tips for capturing better photos	93
Recording video	95
Quickly adjusting the exposure of your photos	96
Taking continuous camera shots	96
Using HDR	97
Selfies	98
Taking a panoramic photo	101

---

## Google Photos

---

What you can do on Google Photos	103
Viewing photos and videos	104
Editing your photos	104
Trimming a video	105

---

## Web search

---

Getting instant information with the Google app	106
Screen search	109
Searching HTC Desire 555 and the Web	111

---

## Power and storage management

---

About Boost+	113
Tips for extending battery life	118
Using power saver mode	121
Extreme power saving mode	121
Displaying the battery percentage	122
Checking battery usage	122
Checking battery history	123
Battery optimization for apps	123
Types of storage	124
Should I use the storage card as removable or internal storage?	125
Setting up your storage card as internal storage	126
Moving apps and data between the phone storage and storage card	127
Moving an app to or from the storage card	128
Viewing and managing files on the storage	128
Copying files between HTC Desire 555 and your computer	129
Freeing up storage space	130
Unmounting the storage card	131

---

## Sync, backup, and reset

---

Adding your social networks, email accounts, and more	133
Syncing your accounts	133
Removing an account	134
Ways of backing up files, data, and settings	135
Using Android Backup Service	136
Backing up contacts and messages	138
Restoring from your previous HTC phone	141
About HTC Sync Manager	142
Installing HTC Sync Manager on your computer	144
Transferring iPhone content to your HTC phone	145
Restarting HTC Desire 555 (Soft reset)	145
Resetting network settings	146
Resetting HTC Desire 555 (Hard reset)	147

---

## HTC BlinkFeed

---

What is HTC BlinkFeed?	148
Turning HTC BlinkFeed on or off	149
Restaurant recommendations	150
Ways of adding content on HTC BlinkFeed	151
Customizing the Highlights feed	153
Playing videos on HTC BlinkFeed	153
Posting to your social networks	154
Removing content from HTC BlinkFeed	154

---

## Phone calls

---

Making a call with Smart dial	155
Making a call with your voice	155
Dialing an extension number	156
Returning a missed call	156
Speed dial	157
Calling a number in a message, email, or calendar event	157
Receiving calls	158
Emergency call	159
What can I do during a call?	159
Setting up a conference call	161
Call History	161
Switching between silent, vibrate, and normal modes	163
Home dialing	163

---

## Messages

---

Sending a text message (SMS)	165
Sending a multimedia message (MMS)	166
Sending a group message	167
Resuming a draft message	168
Replying to a message	168
Forwarding a message	169
Moving messages to the secure box	170
Blocking unwanted messages	171



Copying a text message to the nano SIM card	171
Deleting messages and conversations	172

---

## People

---

Your contacts list	174
Setting up your profile	176
Adding a new contact	176
Editing a contact's information	178
Getting in touch with a contact	178
Importing or copying contacts	179
Merging contact information	180
Sending contact information	181
Contact groups	183
Private contacts	185

---

## Email

---

Checking your mail	186
Sending an email message	188
Reading and replying to an email message	189
Managing email messages	190
Searching email messages	191
Working with Exchange ActiveSync email	192
Adding an email account	193
What is Smart Sync?	194

---

## Other apps

---

Using the Clock	195
Setting the date and time manually	195
Setting an alarm	195
Checking Weather	196
Changing the city on the weather clock	197
Turning on location services from the weather clock	197
Recording voice clips	198
Listening to FM Radio	198
Google apps	199

---

## Internet connections

---

Turning the data connection on or off	201
Managing your data usage	201
Wi-Fi connection	204
Connecting to VPN	205
Installing a digital certificate	207
Using HTC Desire 555 as a Wi-Fi hotspot	208
Sharing your phone's Internet connection by USB tethering	209

---

## Wireless sharing

---

What is HTC Connect?	210
Using HTC Connect to share your media	211

Streaming music to Blackfire compliant speakers	213
Streaming music to speakers powered by the Qualcomm AllPlay smart media platform	214
Turning Bluetooth on or off	215
Connecting a Bluetooth headset	216
Unpairing from a Bluetooth device	217
Receiving files using Bluetooth	217

---

## Settings and security

---

HTC BoomSound profile	219
Turning location services on or off	219
Do not disturb mode	220
Airplane mode	223
Automatic screen rotation	224
Setting when to turn off the screen	224
Screen brightness	224
Night mode	225
Adjusting the display size	225
Touch sounds and vibration	226
Changing the display language	227
Assigning a PIN to a nano SIM card	228
Accessibility features	229
Accessibility settings	230
Turning Magnification gestures on or off	231

Navigating HTC Desire 555 with TalkBack	231
Teletypewriter (TTY) mode	236

---

## Trademarks and copyrights

---

---

## Index

---

## About this guide

In this user guide, we use the following symbols to indicate useful and important information:



This is a note. A note often gives additional information, such as what happens when you choose to do or not to do a certain action. A note also provides information that may only be applicable to some situations.



This is a tip. A tip gives you an alternative way to do a particular step or procedure, or lets you know of an option that you may find helpful.



This indicates important information that you need in order to accomplish a certain task or to get a feature to work properly.



This provides safety precaution information, that is, information that you need to be careful about to prevent potential problems.

Some apps may not be available in all regions or with your mobile operator.

## Important RF Notice

This device was tested for compliance with the applicable FCC and Industry Canada specific absorption rate (SAR) limits for radio frequency (RF) exposure during typical body-worn operations. To ensure that RF exposure levels remain at or below the tested levels, use a belt-clip, holster, or similar accessory that maintains a minimum separation distance of 1.0 cm between your body and the device, with either the front or back of the device facing towards your body. Such accessories should not contain any metallic components. Body-worn accessories that do not meet these specifications may not ensure compliance with applicable SAR limits and their use should be avoided.

### Important note on recoverable data

Files and other data that have been deleted, cleared, removed, or erased from your device may still be recoverable by third-party data recovery software. Even a factory reset may not permanently erase all data from your mobile device, including personal information.


## Features you'll enjoy

### What's new and special with Camera


Enjoy taking great camera shots on HTC Desire 555. The camera interface has a fresh new look, neatly organized to make it faster for you to switch modes and change your settings.




#### **Leaner, cleaner, camera interface**

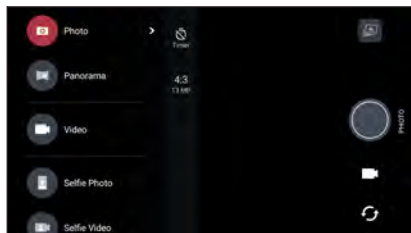The new camera interface groups related capture modes together—such as photo capture modes—so that you can quickly find the mode you want, and puts modes and their settings side by side for easy access.



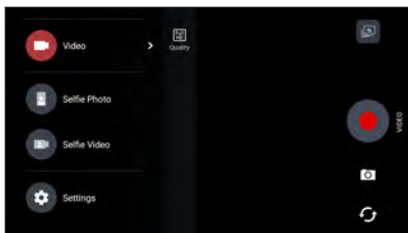



Without having to open the slideout menu, you can easily switch back to Photo or Video mode from other modes by tapping  or  below the shutter button. You can also just tap  to quickly switch between the front and main camera.

See [Taking photos and videos](#) on page 88.

## Quickly adjust image brightness and focus



Easily adjust the focus and brightness—or exposure value—before taking a shot. Just tap the screen to set the focus, and then drag your finger up or down.

See [Taking a photo](#) on page 92.

## Selfies

- Live Makeup – Before taking your selfie, use Live Makeup to smoothen your skin. See [Applying skin touch-ups with Live Makeup](#) on page 98.
- Instant selfie shots – Flash a smile, and the camera instantly captures your smiling face. Or, just say “Cheese!” See [Taking selfies automatically](#) on page 98 and [Taking selfies with voice commands](#) on page 99.

## The best from HTC and Google Photos

To give you the best experience from HTC and Google® apps yet still provide optimal storage out of the box, HTC is starting to minimize preloading duplicate apps. By focusing on the best, HTC Desire 555 gives you an even better imaging experience through the HTC Camera app and Google Photos™.

With Google Photos, manage your photos and videos, back them up to your cloud storage, and enjoy all of its cool features. For details, see [What you can do on Google Photos](#) on page 103.

## Sound

Discover audio bliss on HTC Desire 555 through its built-in speakers or headphones. Easily connect wireless speakers to your phone.

## HTC BoomSound

Hear what you've been missing. HTC BoomSound™ gives you a rich, authentic sound experience, whether you're listening to music, watching a video, or playing a game. See [HTC BoomSound profile](#) on page 219.

## HTC Connect


Simply swipe up the screen with three fingers to stream music or video from HTC Desire 555 to your speakers or TV. Control the volume and playback with your phone! You can even enjoy your favorite music on multiple speakers. See [What is HTC Connect?](#) on page 210.

## Truly personal

Designed with you in mind, HTC Desire 555 is filled with innovations that help it to adapt to your life.

## Themes

Make HTC Desire 555 more personal by customizing how it looks with your own photos and then mix and match with different sets of icons, sounds, color schemes, and more.

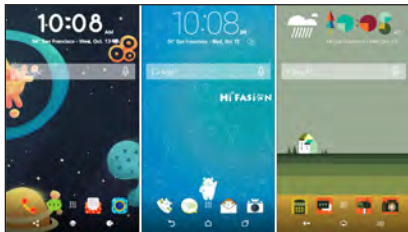


More wallpaper types, such as Multiple wallpapers and Apps screen wallpapers, are also in store!


See [What is HTC Themes?](#) on page 70 for more details.

## Freestyle home screen

If you want to take designing your Home screen to the next level, try the Freestyle home screen layout for zero-grid limitations and fun stickers to replace your app icons.

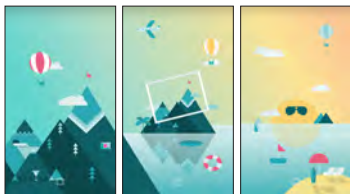

## HTC BlinkFeed

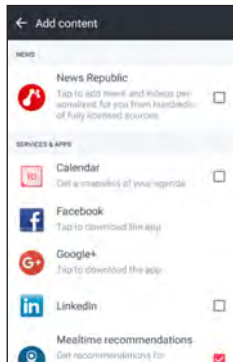


Get your favorite topics, news, social media, and more conveniently delivered to one place on your phone. Even get suggestions for places to eat! You can also play embedded videos right on HTC BlinkFeed®. See [What is HTC BlinkFeed?](#) on page 148.

## Boost+

Use the Boost+ app to help you optimize your phone's performance by allocating resources, removing junk files, stopping irregular app activities, and uninstalling the apps you don't use.

You can also set this app to help extend battery life while you're playing your favorite game on HTC Desire 555.

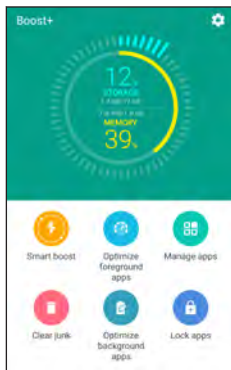

See [About Boost+](#) on page 113.

## Android 7.0 Nougat

Android® 7.0 Nougat brings new features that make working with apps and settings even more convenient.

### Enhanced notifications

See incoming information on a notification without having to open an app. If you received a new message, you can directly send a reply right from the notification. See [Notifications panel](#) on page 62.


### Improved settings

- Use the Quick Settings bar to toggle Wi-Fi® and other quick settings on and off. See [Using Quick Settings](#) on page 59.
- No more navigating back to the main settings screen by screen. There's a slideout menu that you can open anytime to directly access the main settings. See [Getting to know your settings](#) on page 58.
- At the top of the Settings screen, see suggestions for how to get more out of your phone.
- Aside from changing the font size, you can also adjust the display size of items such as icons and images. See [Adjusting the display size](#) on page 225.


## What's different with the onscreen keyboard

HTC is using TouchPal as the onscreen keyboard for HTC Desire 555 due to its popularity and extensive features.

Here are some of the features you'll enjoy with the TouchPal keyboard:

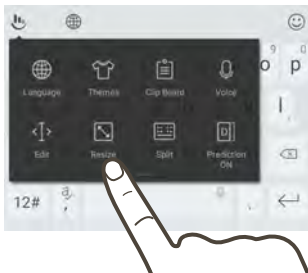

- Download keyboard themes to personalize the keyboard background.
- Choose from a variety of emoji art to add fun to your messages and social updates.
- Back up and sync your personal dictionaries as well as input patterns and data to TouchPal Cloud.
- Keyboard is resizable. You can also reposition the keyboard.
- When you're typing in landscape, you can split the keyboard so it's easier and faster for you to type with just your thumbs.

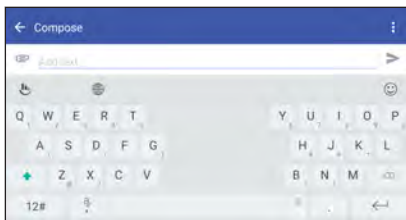

To learn the basics of using the keyboard, see [Entering text](#) on page 65.

## Software and app updates

On HTC Desire 555, get software updates for the latest performance enhancements, bug fixes, and security improvements as soon as they're available.

Also download and install the latest updates of HTC and other apps from Google Play™ to enjoy the new and improved features. Some HTC apps that are not preloaded in certain phones can also be downloaded from Google Play.




The information in this guide may not be most up-to-date if there are more recent software or app updates available.



# Unboxing

## HTC Desire 555 overview

After taking HTC Desire 555 out of the box, familiarize yourself first with the location of the card slots and the different button controls.

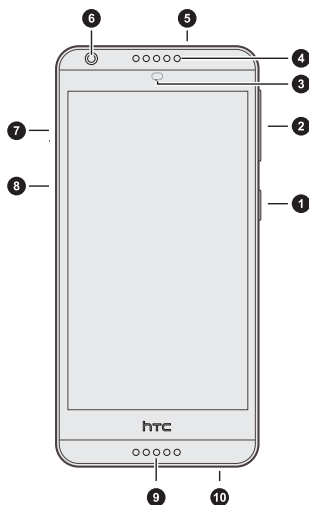

1. POWER
2. VOLUME buttons
3. Proximity sensor
4. Earpiece
5. 3.5mm headset jack
6. Front camera
7. nano SIM card slot
8. microSD™ card slot
9. Speaker
10. USB connector



You need a 4G/LTE™ plan to use your operator's 4G/LTE network for voice calls and data services. Check with your operator for details.




- If you want to use a case or screen protector, don't cover and block the proximity sensor. Purchase a case or screen protector designed for HTC Desire 555.
- Avoid liquid or dust from entering the microphone hole to prevent damage to the microphone.
- Avoid connecting third-party headsets or accessories with metallic charms that dangle near the headset jack. Using these may affect signal reception.
- Don't disassemble any part of the phone. Don't try to open the phone or remove the battery by force. This may damage the phone or its electronics and will invalidate the warranty.

## nano SIM card

HTC Desire 555 uses a nano SIM card.

Use a standard nano SIM card only. Inserting a modified card that is thicker than the standard nano SIM card may cause the card to not fit properly or damage the card slot.

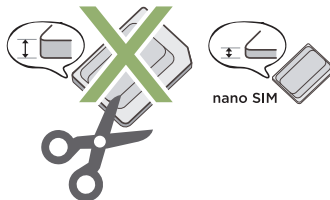


---


## Inserting a nano SIM card

---

1. Make sure HTC Desire 555 is off and hold it securely with the front facing down.
2. Open the slot cover with your thumb or finger.

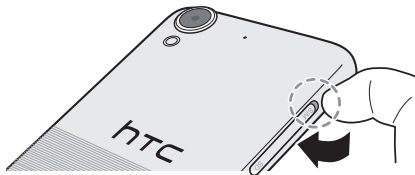

3. Pull the tray out from the nano SIM slot.
4. Place a nano SIM card into the tray with the card's gold contacts facing up and its cut-off corner facing out.

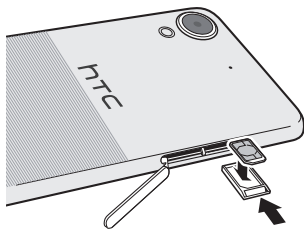

5. When reinserting the tray, make sure it is facing up so that the nano SIM card doesn't fall out. Slide the tray all the way into the slot.
6. Close the slot cover. Press from the bottom to the top of the slot cover to lock it in place.

---

### Removing a nano SIM card

---



Make sure to switch off HTC Desire 555 before removing the card.

1. Open the slot cover with your thumb or finger.
2. Pull the tray out from the nano SIM slot, and remove the nano SIM card.
3. Close the slot cover. Press from the bottom to the top of the slot cover to lock it in place.

## Storage card

Use a storage card to store your photos, videos, and music. When you need to free up phone storage space, you can also move certain apps to the storage card, if the apps support this feature.




The storage card is optional and sold separately.

---

### Inserting the storage card

---

1. Open the slot cover with your thumb or finger.
2. With HTC Desire 555 facing down, insert a microSD into the storage card slot, with its gold contacts facing up and towards the slot.

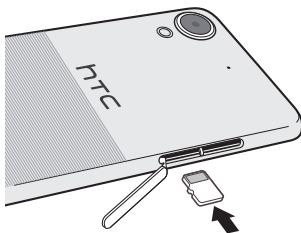

3. To close the slot cover, slide the plastic hinge into the side and press the cover until it clicks into place.

---




## Unmounting the storage card

---

When you need to remove the storage card while HTC Desire 555 is on, unmount the storage card first to prevent corrupting or damaging the files in the storage card.



If your storage card is used as internal storage and there are apps that were moved to the card, you will not be able to open these apps after unmounting the card.

1. From the Home screen, tap  > **Settings** > **Storage**.
2. Do one of the following:
  - If your storage card appears under Removable storage, tap  next to the card name, and then tap **Eject**.
  - If your storage card appears under Internal storage, tap the card name, and then tap  > **Eject**.

---

## Removing the storage card

---

1. Open the slot cover with your thumb or finger.
2. Push the storage card in to eject it from its slot.
3. To close the slot cover, slide the plastic hinge into the side and press the cover until it clicks into place.


## Charging the battery

Before you turn on and start using HTC Desire 555, it is recommended that you charge the battery.



- If the battery has been discharged for several days, you may need to charge HTC Desire 555 for several minutes before powering it on.
- Use only the adapter and the USB cable that came with HTC Desire 555 to charge the battery. When the battery power is too low, make sure to use the power adapter to charge, not the USB cable connection with your computer.

1. Insert the small end of the USB cable into the USB connector.

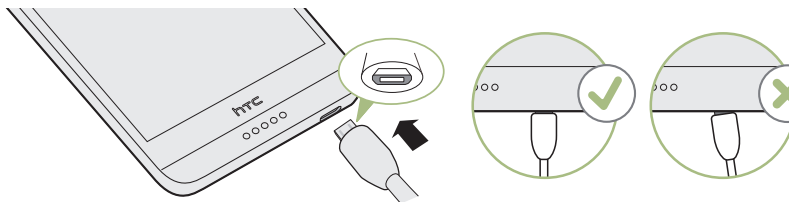

2. Insert the other end of the USB cable into the power adapter.
3. Plug in the power adapter to an electrical outlet to start charging the battery.



- As a safety precaution, the battery may stop charging to avoid overheating.
- Avoid charging the battery in hot environments.
- When you're using the web browser and charging the battery, HTC Desire 555 may become warmer. This is normal.
- To conserve energy, unplug the power adapter from the electrical outlet after you finish charging.

## Switching the power on or off

---

### Switching the power on

---

Press the POWER button until HTC Desire 555 vibrates.



When you turn on HTC Desire 555 for the first time, you'll need to set it up.

---

### Switching the power off

---

1. If the display is off, press the POWER button to turn it back on.
2. Press and hold the POWER button for a few seconds.
3. Tap **Power off** on the options menu.



# Phone setup and transfer


## Setting up HTC Desire 555 for the first time

When you switch on HTC Desire 555 for the first time—or after you’ve done a factory reset—you’ll be asked to set it up.



You can enable TalkBack to navigate by voice feedback before selecting the language. Press and hold two fingers on the screen until you hear a message saying that accessibility mode is enabled.

Walk through the on-device setup to choose your Internet connection, sign in to your Google Account, set up device protection for HTC Desire 555, and more.

Use Android Backup Service if you’ve used it to back up your old phone before. On the screen that asks you which device to restore from, tap the name of your old phone model. Tap  to choose the type of items you want to restore, and then tap **Restore** to proceed.

Otherwise, tap **Don’t restore**.



Some features that need to connect to the Internet such as location-based services and auto-sync of your online accounts may incur extra data fees. To avoid incurring data fees, disable these features under Settings. For more information on location services, see [Turning location services on or off](#) on page 219.

## Ways of transferring content from your previous phone

Depending on the operating system in your old phone, choose the proper method of transferring content to HTC Desire 555.

### From an Android phone

On your old HTC or other Android phone, download the HTC Transfer Tool and use it to transfer your content to HTC Desire 555. See [Transferring content from an Android phone](#) on page 34.

### From an iPhone

Back up iPhone® content to your iCloud® storage, and then transfer the content to HTC Desire 555. See [Transferring iPhone content through iCloud](#) on page 35.

## Transferring content from an Android phone

On your old Android phone, download the HTC Transfer Tool and use it to transfer your content to HTC Desire 555.

The types of locally stored content on your old phone that the HTC Transfer Tool can transfer include contacts, messages, music, photos, videos, and some settings. More types of data such as call histories, email accounts, and some HTC app settings can be transferred from HTC phones that have HTC Sense® 5.5 or higher.



You need Android version 2.2 or later to use the HTC Transfer Tool on your old phone.

1. From the Home screen, tap **⋮** > **Settings** > **Get content from another phone**.

2. Choose whether to transfer from an HTC Android phone or other Android phone.
3. On the Get content from another phone screen, tap **Next**.
4. Follow the steps shown on HTC Desire 555 to download the HTC Transfer Tool from Google Play to your old phone, install it, and open the tool.
5. When you see a PIN on your old phone, make sure the same PIN also appears on HTC Desire 555 before you continue.  
  
If the PIN code doesn't appear, tap **Retry** on your old phone. If it still won't appear, this may mean that your old phone is unable to connect to HTC Desire 555. When this happens, try another transfer method.
6. Tap **Confirm** on your old phone.
7. On your old phone, choose the types of content you want to transfer, tap **Transfer**, and then tap **Yes**.
8. Wait for the transfer to finish.
9. Tap **Done** on both phones.

## Transferring iPhone content through iCloud

If you have an iCloud account, sync iPhone content to your iCloud storage, and then transfer content such as contacts or photos to HTC Desire 555.

1. From the Home screen, tap **⋮** > **Settings** > **Get content from another phone**.
2. Tap **iPhone** > **Import from iCloud backup**.
3. Follow the steps shown onscreen to back up your iPhone content to your iCloud storage.
4. Enter your iCloud email address and password, and then tap **Sign in**.

5. Choose the iPhone backup that you want to transfer to HTC Desire 555, and then tap **Next**.
6. Choose the types of content you want to transfer, and then tap **Import**.
7. Wait for the transfer to finish, and then tap **Done**.



Only some contact details can be transferred, such as the contact name, photo, postal address, email address, birthdate, anniversary date, and notes.

## Other ways of getting contacts and other content

There are different ways you can individually add contacts and other content to HTC Desire 555.

Source of content	How to transfer
<b>Sync with your computer</b>	Use HTC Sync Manager to sync contacts, documents, playlists, and more between HTC Desire 555 and your computer running a Windows® or OS X® operating system. You can also use it to transfer your iTunes® backup that contains contacts, messages, and other content from an iPhone from your computer to HTC Desire 555.
<b>Google Account</b>	Google contacts are imported to HTC Desire 555 after you sign in to your Google Account. You can also create more Google contacts right from HTC Desire 555.
<b>Social network accounts</b>	Log in to your favorite social networks to sync contact information from them.

Source of content	How to transfer
Microsoft® Exchange ActiveSync®	HTC Desire 555 syncs your work contacts from the Microsoft Exchange ActiveSync Server in your workplace.
Outlook.com account	Sync personal contacts from your Microsoft Outlook.com account.
Phone contacts	You can create contacts locally on HTC Desire 555, if you don't prefer to store them on your online accounts.
nano SIM card	Copy all your nano SIM contacts to HTC Desire 555.

## Transferring photos, videos, and music between your phone and computer

Here are ways you can transfer your media from or to your computer.

- Connect HTC Desire 555 to your computer. Your computer will recognize it just like any removable USB drive, and you can copy your media between them. See [Copying files between HTC Desire 555 and your computer](#) on page 129.
- Download and use the HTC Sync Manager software on your computer. You can set it up to automatically get music, photos, and videos off HTC Desire 555 to your computer. You can also sync playlists from your computer to the phone.

If you have an iPhone, you can also connect it and transfer camera roll photos to your computer using HTC Sync Manager. Then reconnect HTC Desire 555 and copy them over.



See the HTC Sync Manager help or user guide for details.

- Use cloud storage services to put your media in one place so you can manage them anywhere—on your computer, HTC Desire 555, and other mobile devices.

## Setting a screen lock

Help protect your personal information and help prevent others from using HTC Desire 555 without your permission.

Choose to set a screen lock pattern, numeric PIN, or other means of locking your phone. You'll be asked to unlock the screen every time HTC Desire 555 is turned on or when it's idle for a certain period of time.

1. From the Home screen, tap  > **Settings** > **Security**.
2. Tap **Screen lock**.
3. Select a screen lock option and set up the screen lock.
4. On the Security screen, tap  > **Automatically lock phone**, then specify the idle time before the screen locks.






Tap  and clear **Make pattern visible** if you don't want your screen lock pattern to display as you draw it onscreen.

## Setting up Smart Lock

Use Smart Lock as an alternative way to unlock your phone, in the event you forget your password, PIN, or pattern. Set Smart Lock to unlock your phone when the phone recognizes your face or voice.

You can also set it to keep your phone unlocked in certain situations, such as when the phone is with you and you're in a trusted location.

1. From the Home screen, tap  > **Settings** > **Security**.
2. Tap **Screen lock**, and then select and set up a screen lock.  
This will be your alternate screen lock method.
3. On the Security screen, tap **Smart Lock**.
4. Confirm your screen lock.
5. Choose whether to unlock your phone through voice or facial recognition, or keep the phone unlocked when:
  - You're carrying the phone
  - You're in a trusted location such as within your home Wi-Fi network
  - The phone is connected to a trusted device such as your own Bluetooth® device
6. Follow the onscreen instructions, and then press  to return to the Security screen.
7. On the Security screen, tap  > **Automatically lock phone**, then specify the idle time before the screen is locked.

To help make Smart Lock more reliable and more secure when using facial recognition, you can train HTC Desire 555 to recognize your face in different situations, such as when you're wearing glasses or sporting a beard.

Tap **Smart Lock**, confirm your screen lock, then tap **Trusted face > Improve face matching**. Follow the onscreen instructions.

## Turning the lock screen off

Rather not have to unlock your phone every time you wake it up? You can turn the lock screen off in Settings.

1. From the Home screen, tap **⋮ > Settings > Security**.
2. Tap **Screen lock > None**.

To turn the lock screen on again, in Security settings, tap **Screen lock > Swipe**.

## Software and app updates

Download and install software updates for the latest performance enhancements, bug fixes, and security improvements. HTC Desire 555 can check and notify you if there's a new update available. You can visit [www.htc.com/us/go/htc-software-updates/](http://www.htc.com/us/go/htc-software-updates/) for news and details about your phone's software updates.

Some app updates are available from HTC or your mobile operator, and you'll receive notifications on your phone when there are new updates. Or you can install app updates from Google Play. Some HTC apps that are not preloaded in certain phones can also be downloaded from Google Play.



The information in this guide may not be most up-to-date if there are more recent software or app updates available.



---

## Checking your system software version

---

Before installing a system software update, you can check first what Android version you have on your phone.

1. From the Home screen, tap **⋮** > **Settings** > **About**.
2. Tap **Software information**.

---

## Enabling automatic updates

---

You can choose to automatically download and install software updates for HTC or mobile operator apps.

1. From the Home screen, tap **⋮**, and then find and tap **Settings**.
2. Tap **Cricket software update** > **Check for updates**.
3. To save on data usage, you can choose to update through Wi-Fi only.
4. Choose whether to auto-download system updates, app updates, or both.  
App updates are installed automatically. You'll still need to confirm when to install system software updates.

---

## Checking for updates manually

---



Turn on mobile data or connect HTC Desire 555 to a Wi-Fi network before you check for updates.

1. From the Home screen, tap **⋮**, and then find and tap **Settings**.

2. Tap **Cricket software update** > **Check for updates**. HTC Desire 555 checks if updates are available.


## Installing a software update


When HTC Desire 555 is connected to the Internet and there's a new software update available, the update notification icon  appears in the status bar.

1. Slide the Notifications panel open, and then tap the system update notification.
2. If you don't want to download the update using your data connection, select **Update over Wi-Fi only**.
3. Tap **Download**.
4. When download is complete, select **Install now**, and then tap **OK**.

After updating, HTC Desire 555 will restart.



## Installing an application update

When Internet connection is on and there's an available update for your HTC or mobile operator apps, the update notification icon  appears in the status bar.


1. Slide the Notifications panel open, and then tap the update notification. The Updates screen opens with the list of application updates to be installed.
2. Tap an item to view its details, and then tap .
3. When you're done reviewing the updates, tap **Install**. You'll be asked to restart HTC Desire 555 if needed.

## Installing app updates from Google Play

Some HTC apps and third-party apps get updated with improvements and bug fixes through Google Play. You can manually update apps or set your phone to automatically download and install app updates when available.

1. From the Home screen, tap , and then find and tap **Play Store**.
2. Tap  to open the slideout menu.
3. Tap **My apps & games**.  
You'll see a list of apps installed on your phone.
4. Under Updates, tap an app.
5. Tap **Update**.
6. If prompted, tap **Accept**.



In Play Store, tap  > **Settings** > **Auto-update apps** to choose how you want Google Play to update your apps.

## Getting apps from Google Play

Google Play is the place to go to find new apps for HTC Desire 555. Choose from a wide variety of free and paid apps ranging from productivity apps, entertainment, to games.



You need a Google Wallet™ account to buy paid apps or to make in-app purchases. If you already have a Google Account, just add Google Wallet by signing in with your existing username and password at [wallet.google.com](http://wallet.google.com).

---

## Finding and installing an app

---

When you install apps and use them on HTC Desire 555, they may require access to your personal information or access to certain functions or settings. Download and install only apps that you trust.



Be cautious when downloading apps that have access to functions or a significant amount of your data on HTC Desire 555. You're responsible for the results of using downloaded apps.

1. From the Home screen, tap **⋮**, and then find and tap **Play Store**.
2. Browse or search for an app.
3. When you find the app that you like, tap it and read its description and user reviews.
4. To download or purchase the app, tap **Install** (for free apps) or the price button (for paid apps).
5. Tap **Accept**.



Apps sometimes get updated with improvements or bug fixes. To automatically download updates, after installing the app, tap **⋮** > **Auto-update**.

To open the app, go to the Apps screen and tap the app.

---

### Restoring apps from Google Play

---

Upgraded to a new phone, replaced a lost one, or performed a factory reset? Restore apps that you previously downloaded.

1. From the Home screen, tap **⋮**, and then find and tap **Play Store**.
2. Tap **≡** to open the slideout menu.
3. Tap **My apps & games**, swipe to the All tab, and then tap the app you want to restore.
4. Install the app.

For more details, refer to the Google Play help.

## Downloading apps from the web

You can download apps directly from websites.



Apps downloaded from websites can be from unknown sources. To help protect HTC Desire 555 and your personal data, we strongly recommend that you only download from websites you trust.

1. Open the browser, and then go to the website where you can download the app you want.
2. If prompted, change the security settings to allow installation from “Unknown sources”.
3. Follow the website’s download instructions for the app.
4. After installing the app, make sure to go back to **Settings > Security** and clear the **Unknown sources** option.

## Uninstalling an app

If you no longer need an app that you've downloaded and installed, you can uninstall it.



Most of the preloaded apps cannot be uninstalled.

From the Apps screen, press and hold the app you want to remove, and then drag it to **Uninstall**.



If you purchased an app in Play Store, you can uninstall it for a refund within a limited time. To know more about the refund policy for paid apps, refer to the Google Play help.

# Your first week with your new phone

## HTC Sense Home

After you've turned on and set up HTC Desire 555 for the first time, you'll see the Home screen.

- Swipe right and you'll find HTC BlinkFeed. You can customize HTC BlinkFeed to show posts from your social networks, headlines from your favorite news media, and more. For details, see [What is HTC BlinkFeed?](#) on page 148.
- Swipe left and you'll discover space for adding your favorite widgets, apps, and more so they're just a tap away. You can also add panels. For details, see [Adding or removing a widget panel](#) on page 77.
- You can change the apps on the launch bar at the bottom of the Home screen. See [Launch bar](#) on page 79.



While you're in another screen or app, press **O** to return to the last Home screen you visited.



## Sleep mode

Sleep mode saves battery power by putting HTC Desire 555 into a low power state while the display is off. It also stops accidental button presses when HTC Desire 555 is in your bag.

---

### Switching to Sleep mode

---

To turn off the display and switch to Sleep mode, briefly press the POWER button. HTC Desire 555 also automatically goes into Sleep mode when it's left idle for a while. You can change the time before HTC Desire 555 sleeps by setting the screen timeout. For details, see [Setting when to turn off the screen](#) on page 224.

---

### Waking up from Sleep mode

---

Press the POWER button.

## Unlocking the screen

Swipe up to unlock the screen.

If you've set up a screen lock, you'll be asked to provide your credentials before HTC Desire 555 unlocks.



If you've set an event reminder or an alarm, you can snooze or dismiss the event or alarm right from the lock screen. Just drag ⌚ or ✖ up.

---

## Turning lock screen notifications on or off

---

You can choose to turn lock screen notifications on or off.

1. From the Home screen, tap **⋮** > **Settings** > **Sound & notification**.
2. Tap **On the lock screen** > **Don't show notifications at all**.



If you change your mind later, you can tap **Show all notification content** to turn lock screen notifications on.

---

## Interacting with lock screen notifications

---


Besides seeing notifications on the lock screen, you can also interact with them.

- Tap twice on a notification to go directly to the related app.
- Swipe left or right on the notification to remove it.
- Press and hold a notification to see more related information.
- Tap ⓘ to prioritize notifications from the related app.

## Motion gestures


Use motion gestures to mute HTC Desire 555, lower the ring volume, and more.

### Flip to mute

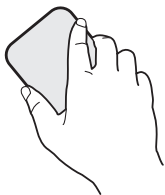

If your phone is facing up when a call comes in, turn the phone over to mute it.

### Pick up to lower volume

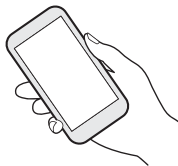

In a business meeting or restaurant, pick up HTC Desire 555 when a call comes in to lower the ring volume automatically.

You can turn this feature on or off. Go to **Settings**, tap **Sound & notification**, and then select or clear **Quiet ring on pickup**.

## Increase ring volume automatically while phone is in your pocket or bag



Pocket mode makes HTC Desire 555 recognize when your phone is in your bag or pocket and raise the ring volume so that you can hear it in noisy environments.

You can turn this feature on or off. Go to Settings, tap **Sound & notification**, and then select or clear **Pocket mode**.

## Rotate HTC Desire 555 for a better view




For many screens, you can automatically change the screen orientation from portrait to landscape by turning HTC Desire 555 sideways.

When entering text, you can turn HTC Desire 555 sideways to bring up a bigger keyboard.

## Touch gestures


Use touch gestures to get around the Home screen, open apps, scroll through lists, and more.

### Tap

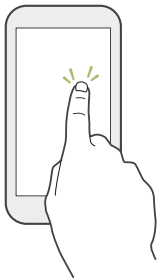


Tap the screen with your finger when you want to select onscreen items such as application and settings icons, or press onscreen buttons.

## Press and hold

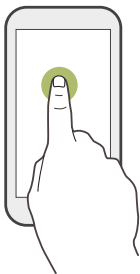

To open the available options for an item (for example, a contact or link in a webpage), just press and hold the item.

## Swipe or slide

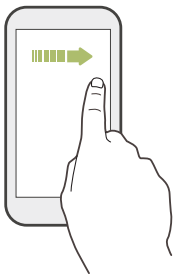


Quickly swipe your finger horizontally across the screen to go to other Home screen panels. Swipe vertically to scroll through a list, document, and more.

## Drag



Press and hold your finger with some pressure before you start to drag. While dragging, don't release your finger until you have reached the target position.

## Flick

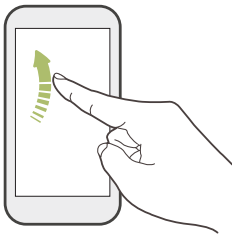

Flicking the screen is similar to swiping, except that you need to swipe your finger in light, quicker strokes, such as when moving right and left on the Home screen, or flicking through a contacts or message list.

## Press and flick



On the Home screen, you can easily move a widget or icon from one screen to another.

Press and hold the widget or icon with one finger, and flick the screen to the new location with another finger.

## Slide with two fingers



In some apps, slide two fingers apart to zoom in when viewing a picture or text.




Slide two fingers together to zoom out of the picture or text.




## Two-finger swipe

Swipe down from the status bar using two fingers to access Quick Settings.

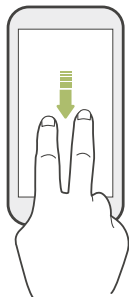

## Three-finger swipe

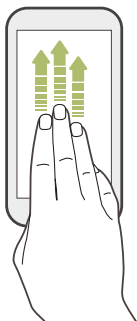



- Swipe up the screen with three fingers and HTC Connect® streams music or video from HTC Desire 555 to your speakers or TV respectively. You can also share streaming media from apps such as YouTube®.
- Swipe down to disconnect from your speakers or TV.



**Media gesture** is turned on in Settings by default, which makes the three-finger gesture work for sharing media.

## Getting to know your settings

Want to change the ringtone, set up a Wi-Fi connection, or add your accounts? Do this and more in Settings.

1. Open Settings from the Apps screen or Notifications panel.
  - From the Home screen, tap  to switch to the Apps screen, and then tap **Settings**.
  - Swipe down from the top of the screen to open the Notifications panel, and then tap .

2. Here are some of the basic settings you can change:
  - Tap the **On/Off** switch next to an item such as Wi-Fi to turn it on or off. Tap the item itself to configure its settings.
  - Tap **Sound & notification** to set a ringtone, choose a sound profile, and configure notification settings.
  - Tap **Personalize** to change the wallpaper, add apps and widgets to the Home screen, and more.
  - Tap **Accounts & sync** to add and sign in to your different accounts, such as email, social networks, and more.
  - Tap **Security** to help secure HTC Desire 555, for example with a screen lock.
  - Tap an item under Suggestions to check out new or recommended settings to customize.
3. You can also swipe right on the Settings screen to see the list of main settings and quickly jump from one setting to another. Or, tap **Q** in Settings to easily find options and settings.

## Using Quick Settings

In the Quick Settings panel, easily turn settings such as Wi-Fi and Bluetooth on or off.

1. Swipe down from the top of the screen to open the Notifications panel. Right below the **Settings** button, you'll see the first six Quick Settings tiles.

2. To see all of the Quick Settings tiles, do any of the following:

- With two fingers, swipe down from the status bar.



- Swipe down twice from the status bar.
3. Swipe left or right to see more tiles.
4. To turn a setting on or off, just tap its tile.

## Capturing your phone's screen

Want to show off your high game score or write a blog post about HTC Desire 555 features? It's easy to take a picture of the screen to share.

1. Press and hold **POWER** and **VOLUME DOWN** at the same time.
2. Open the Notifications panel, and then slide two fingers apart on the Screenshot captured notification.
3. Tap **Share**.

## Travel mode

Do you often travel across time zones? Turn on Travel mode in Settings to see a dual clock on the Home screen and lock screen that shows both your home and current time zones.



- Make sure you turn on location services in your phone settings.
- Set your home time zone first in the Clock app.

1. From the Home screen, tap **⋮** > **Settings** > **Date & time**.
2. Tap the Travel mode **On/Off** switch to turn travel mode on or off.

You'll see a dual clock of your home and current locations once your phone detects a different time zone from the home time zone you've set.

## Restarting HTC Desire 555 (Soft reset)

If HTC Desire 555 is running slower than normal, is unresponsive, or has an app that is not performing properly, try rebooting and see if that helps solve the problem.

1. If the display is off, press the POWER button to turn it back on.
2. Press and hold the POWER button, and then tap **Restart**.

## HTC Desire 555 not responding?

If HTC Desire 555 does not respond when you touch the screen or press the buttons, you can still restart it.

Press and hold the **POWER** and **VOLUME DOWN** until your phone vibrates, and then release the buttons.



You may need to press and hold the buttons for 12 to 15 seconds before the phone vibrates.

## Notifications

---

### Notifications panel


---


Notification icons inform you of new messages, calendar events, alarms, and activities in progress such as files downloading.



When you see notification icons, open the Notifications panel to check out details of the notifications that you've received.

To open the Notifications panel, slide down from the top of the screen.

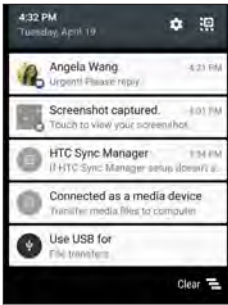

- Some notifications allow you to take immediate action. For example, tap a missed call notification to return the call or reply with a text message.
- Tap the notification icon on the left to open the corresponding app.
- To dismiss just one notification in the list, drag it left or right. To dismiss all non-persistent notifications, tap .


If you have several notifications, scroll through the list screen to see them all.



You can change what app notifications you want to receive. See [Managing app notifications](#) on page 63.

## Managing app notifications



You can set the priority, sensitivity, and more.

1. From the Home screen, tap  > **Settings** > **Sound & notification**.

2. Tap **Manage app notifications**, and then tap the app to set.  
You can also press and hold a notification in the notifications panel, and then tap ⓘ.
3. Tap the **On/Off** switch next to option you want to toggle.

Settings for app notifications are applied to notifications in the Notifications panel and the lock screen.



## Selecting, copying, and pasting text

1. Press and hold on a word.
2. Drag the start and end anchors to highlight the text you want to select.
3. Tap  or **Copy**.
4. In a text entry field (for example, while composing an email), press and hold at the point where you want to paste the text.
5. Tap  or **Paste**.

---

## Sharing text





---

1. After you have selected the text, tap  or  or **Share**.
2. Choose where to share the selected text.



## Entering text


The keyboard becomes available when you tap a text field in an app.

- Tap the keys on the onscreen keyboard to enter letters and numbers, as well as punctuation marks and symbols.
- Tap  to enter an uppercase letter. Tap twice to turn on caps lock.
- Press and hold keys with gray characters at the top or bottom to enter numbers, symbols, or accented letters. Some keys have multiple characters or accents associated with them.
- Tap **12#** to show number and symbol keys. Tap **abc** to return to the main keyboard.
- Tap  to choose from a wide selection of emojis.
- Tap  to check out more features, options, and settings. You can resize the keyboard space, change the layout and design, download dictionaries, and more.
- Press  to close the onscreen keyboard.

---

## Entering text by speaking

---

1. Tap an area where you want to enter text.
2. On the onscreen keyboard, press and hold .
3. When you see the microphone button and the words "Speak now", say the words you want to enter.
4. Enter punctuation marks by saying the name. For example, say "comma".

## Enabling smart keyboard options

---

Turn on the keyboard's advanced features to help you type faster, such as contextual prediction, auto-correction, and more.

1. From the Home screen, tap **⋮**, and then find and tap **Settings**.
2. Tap **Language & keyboard**.
3. Tap **Virtual keyboard > TouchPal - HTC Sense Version > Smart input**.
4. Select the options to enable.

## How can I type faster?


The onscreen keyboard of your phone is highly customizable. You can modify its settings and options to enhance your typing experience.

Here are some tips that you could try:

- **Show the numeric keys on the top row of the keyboard.** Go to Settings, and then tap **Language & keyboard**. Tap **Virtual keyboard > Touchpal - HTC Sense Version > General settings**. Select **Number Row**.
- **Turn on Contextual prediction.** Go to Settings, and then tap **Language & keyboard**. Tap **Virtual keyboard > TouchPal - HTC Sense Version > Smart input**, and then make sure that **Contextual prediction** is selected. This option enables next word prediction and will also allow the keyboard to learn from the usual word patterns you type for better word suggestions.


- **Switch to landscape mode.** With two fingers, swipe down from the status bar and check if **Auto rotate** is turned on. Open the app you need, and then tap a text field to show the keyboard. Turn your phone sideways to bring up a bigger keyboard.

You can then tap  > **Split**.

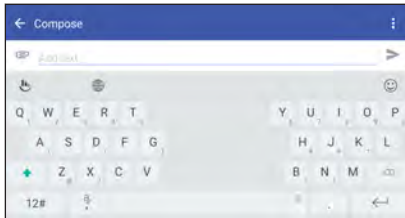

- **Resize or reposition the keyboard.**



Open the app you need, and then tap a text field to show the keyboard. Tap , and then tap **Resize**. Drag any of the border arrows to resize your keyboard.

To move the keyboard up, drag the center button up.



## Getting help and troubleshooting


---

### Want some quick guidance on your phone?

---

Check out the friendly walkthroughs and the FAQs in the Help app to learn how to use your phone.

- When you see a Help tile in HTC BlinkFeed, just tap the tile to know more about the tip.
- From the Home screen, tap , and then find and tap **Help**.

You can then tap **Search help articles & videos**, and enter what you're looking for. Or you can tap  to browse how-tos, FAQs, and more.





If HTC Help is not preinstalled on your phone, you can download it from Google Play.

---

### Having hardware or connection problems?


---

Before calling for support, you can first use the Help app to troubleshoot or perform diagnostics on your phone. This helps you in finding the problem cause, and in determining whether you can resolve the problem or you need to call for support.

1. From the Home screen, tap , and then find and tap **Help**.
2. On the Help screen, tap  and then tap **Troubleshooting** or **Diagnostics tools** to use a troubleshooting wizard to check the basic hardware functions.
3. You can also tap **Software updates** to check for new software updates if available. Software updates may contain bug fixes and feature improvements.

# Personalizing

## Ringtones, notification sounds, and alarms

1. From the Home screen, tap , and then find and tap **Settings**.
2. Tap **Sound & notification**.
3. Tap an item to modify, and then choose different sounds for your ringtone, system notification, and alarm.



Go to the settings of specific apps to choose sounds for new messages, email, and event reminders respectively.

4. Tap **Volumes** to set the volume levels for each sound type.

To browse for more sounds in Themes, go to **Settings > Personalize > Edit current theme**, and then tap **Ringtone**, **Notification**, or **Alarm**.

## What is HTC Themes?

Themes brings a quick and easy way for you to customize your phone with elements such as wallpapers, sounds, and icons.

You need to log in with your preferred account to download themes, icons, fonts, and more from the Themes store.



Themes is a part of the HTC Sense Home app. To get the latest features of Themes, make sure you've downloaded the newest version of HTC Sense Home.

---

## Downloading themes or individual elements

---

Find and download pre-made themes and elements that make it easy for you to personalize your phone.

1. Press and hold on an empty space on your Home screen.
2. Tap **Change theme**.
3. If it's your first time to use Themes, tap **Get Started**, and then sign in with your preferred account.
4. Tap **≡ > Recommended**.
5. On the Recommended screen, tap **⋮** next to each category to browse recommended items.
6. Tap a thumbnail to see the details screen.
7. Tap **Download**.



If you don't want to download the theme or any element right away, you can tap **🔖** to bookmark it first.

To apply the theme after it has finished downloading, tap **Apply**. If your chosen theme includes sounds, your ringtone, notification sound, and alert sound will also change.

---

## Creating your own theme

---

You can create and customize your own theme and even share it for others to download.

1. Press and hold on an empty space on your Home screen.
  2. Tap **Change theme**.
  3. Tap **+ > Change wallpaper** to set the main wallpaper for your theme.
  4. Select an image from your phone or take a photo with Camera.
  5. Move or enlarge the crop box to the area of the image you want to include.
  6. Crop and save the image.
  7. Tap **Next**.
  8. Swipe up or down to the pre-defined style to select for your theme.
  9. You can:
    - Tap **Next** if you don't want to customize your theme further.
    - Tap **Edit**, then tap any of the categories you want to customize, and experiment with the settings until you're satisfied.
- Tap **Preview** to see what your theme will look like.
10. Tap **Finish**, name your theme, and then tap **OK** to save your theme.  
To apply the theme after saving it, make sure you select the **Apply this theme now** option.



---

## Finding your themes

---

Themes you downloaded, bookmarked, or created can be found in your theme collection.

1. Press and hold on an empty space on your Home screen.
2. Tap **Change theme**.
3. Tap **≡ > My themes**.

---

## Editing your theme

---

After applying a theme, you can mix and match parts from other themes such as sounds, icons, wallpapers.



To mix and match themes, you need to first download theme elements from the Themes store.

1. Press and hold on an empty space on your Home screen.
2. Tap **Edit current theme**.
3. Tap any of the categories you want to change.
4. Tap an item in the category. If the category is empty, tap **✓** beside the category name, and then choose one of the collections to select from.
5. Tap **Download** to get the content, and then tap **Apply** to apply the change to your current theme.
6. Press **<** until you see the Edit current theme screen. Continue making changes until you're satisfied with the result.

7. Tap **Save copy** to save your new theme, or if you're editing a theme that you copied tap **Save** to save the changes.

---

## Deleting a theme

---

You can delete a theme if you no longer want to keep it on your phone.

1. Press and hold on an empty space on your Home screen.
2. Tap **Change theme**.
3. Tap **≡ > My themes**.
4. Find and tap an item to delete.
5. Tap **⋮ > Remove**.




If the item is currently applied, it will still be applied to your phone until another theme is applied.


## Choosing a Home screen layout

You can choose between two Home screen layouts.

The Classic layout allows you to add traditional app shortcuts and widgets on your Home screen. By design, this layout will follow and fit what you've added on the Home screen according to an invisible grid.

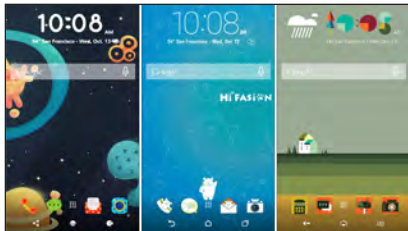

The Freestyle Home screen layout frees you from grid constraints and allows you to place your icons and widgets anywhere you want them on the Home screen. You can use custom stickers as app shortcuts, too!

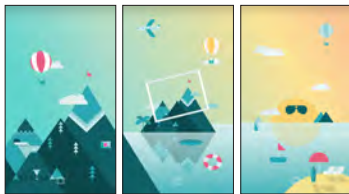

1. Press and hold on an empty space on your Home screen.

2. Tap **Change Home screen layout**.
3. Choose the Home screen layout that you want.

## Setting your Home wallpaper

Choose from the available wallpapers, or use any photo you've taken with the camera.



You can only change the wallpaper while in Classic home screen layout.

1. From the Home screen, tap **⋮** > **Settings** > **Personalize**.
2. Tap **Change wallpaper**.
3. Choose from where you want to select a wallpaper.
4. Tap **Apply** or **Set wallpaper**.
5. Tap **Home screen**. Or, if you want to use the same wallpaper for the lock screen, tap **Home screen and lock screen**.

## Adding or removing a widget panel



- You won't be able to add a new widget panel if you've already reached the maximum limit.
- HTC BlinkFeed always appears as the first panel (if it's not removed). A widget panel cannot be added before HTC BlinkFeed.

1. Press and hold an empty space on a widget panel.
2. In the pop-up menu, tap **Manage home screen pages**.
3. To add a new widget panel, swipe left until you see the **+** icon, and then tap it.
4. To remove a widget panel, swipe left or right until you see the panel, and then tap **Remove**.
5. When done, press **◀**.

---

## Arranging widget panels

---



A widget panel cannot be moved and inserted before HTC BlinkFeed.

1. On HTC BlinkFeed or any widget panel, slide two fingers together to customize the Home screen.
2. Press and hold a widget panel thumbnail, and then drag it left or right to the position that you want.

3. When you're done arranging widget panels, press ◀.

## Changing your main Home screen

Set HTC BlinkFeed or a widget panel as your main Home screen.

1. Press and hold an empty space on a widget panel.
2. In the pop-up menu, tap **Manage home screen pages**.
3. Swipe left or right until you see the panel that you want to use as your main Home screen.
4. Tap **Set as home**.
5. Press ◀.



Pressing ○ from an app will first return you to the last panel you were in. Just press ○ again to go to your main Home screen.


## Launch bar

The launch bar gives you one-touch access to commonly used apps and other shortcuts. You can replace the apps on the launch bar with the ones you often use.



- You can only customize the launch bar while in Classic layout.
- If you're using the Freestyle layout, you will only see the launch bar on the lock screen. Icons displayed will be the same ones you have in the Classic layout.

1. Press and hold the app you want to replace, and then drag it out to .

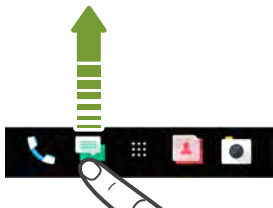



2. Tap  to go to the Apps screen.
3. Press and hold an app, and then drag it to the empty slot on the launch bar.



- You can also group apps on the launch bar into a folder. See [Grouping apps on the widget panel and launch bar](#) on page 82.
- The apps or other shortcuts on the lock screen are the same as the ones on the launch bar.

## Adding Home screen widgets

Widgets make at-a-glance important information and media content readily available.

1. Press and hold an empty space on a widget panel.
2. In the pop-menu, tap **Add apps and widgets**.
3. Tap  > **Widgets**.
4. Scroll through the widgets, or tap  to search for a specific widget.
5. Press and hold a widget, and then drag it to a widget panel you want to add it to.

---

## Changing the widget settings

---

You can modify basic settings of some widgets.

1. Press and hold a widget on your Home screen, and then drag it to .
2. Customize the widget settings.



---

## Resizing a widget



---

Some widgets can be resized after you've added them to your Home screen.

1. Press and hold a widget on the Home screen, and then release your finger. If a border appears, that means the widget is resizable.
2. Drag the sides of the border to enlarge or shrink the widget size.

## Adding Home screen shortcuts

Place apps you often use on any widget panel of your Home screen. You can also add shortcuts to frequently used settings, bookmarked webpages, and more.


1. Press and hold an empty space on a widget panel.
2. In the pop-up menu, tap **Add apps and widgets**.
3. Tap  > **Apps** or **Shortcuts**.
4. Scroll through the apps or shortcuts, or tap  to search for one.
5. Press and hold an app or shortcut, and then drag it to a widget panel you want to add it to.



To add an app from the Apps screen, press and hold the app, and then drag it to a widget panel.

## Grouping apps on the widget panel and launch bar

1. Press and hold an app, and then drag it over to another app to automatically create a folder.



2. Tap the folder to open it.
3. Tap the folder window's title bar, and then enter a new folder name.
4. Add more apps into the folder. Tap **+**, select your apps, and then tap **Done**.

You can also add shortcuts to settings or information to a folder. Add a shortcut first to a widget panel, and then drag it over to the folder.

---

### Removing items from a folder

---


1. On the launch bar or widget panel, tap a folder to open it.
2. Press and hold an app or shortcut in the folder, and then drag it out to **✖**.

## Moving a Home screen item

You can easily move a widget, icon, or sticker from one widget panel to another.


1. Press and hold a Home screen item with one finger.

2. With another finger, flick left or right to rotate the screen to another widget panel.

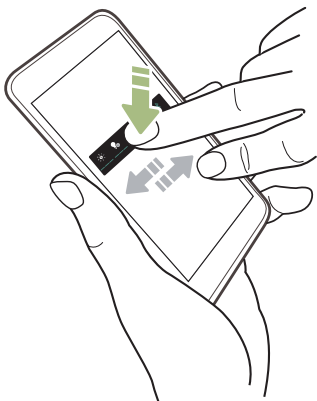

3. Release the item to where you want to move it.



## Removing a Home screen item

1. Press and hold the widget, icon, or sticker you want to remove, and then drag it to .
2. When the item turns red, lift your finger.

# Managing apps

## Arranging apps


You can arrange and rearrange the apps on the Apps screen.

1. From HTC BlinkFeed or any widget panel, tap .
2. Tap , and then choose how to arrange apps, such as alphabetically.
3. Select **Custom** if you want to rearrange or group apps into folders.

---

## Showing or hiding apps in the Apps screen



---

1. On the Apps screen, tap  > **Show/hide apps**.
2. Select the apps you want to hide, or clear their check boxes to unhide them.
3. Tap **Done**.

---

## Grouping apps into a folder

---

1. On the Apps screen, tap  > **Custom**.
2. Tap  > **Rearrange apps**.
3. Press and hold an app, and then drag it over to another app to automatically create a folder.
4. To add more apps, drag each app over to the folder.

5. To name the folder, open the folder, tap its title bar, and then enter a folder name.
6. When done, tap ✓.

---

## Moving apps and folders

---

1. On the Apps screen, tap 🗑 > **Custom**.
2. Tap ⋮ > **Rearrange apps**.
3. Press and hold an app or folder, and then do one of the following:
  - Drag the app or folder to another position on the same page. Wait until you see the occupying icon move away before releasing your finger.
  - Drag the app or folder to the ↘ or ↗ arrow to move it to another page.
4. When you're done moving apps and folders, tap ✓.

---


## Removing apps from a folder

---

1. On the Apps screen, tap 🗑 > **Custom**.
2. Tap ⋮ > **Rearrange apps**.
3. Tap the folder to open it.
4. Press and hold an app, and then drag it out to the Apps screen. Wait until you see the occupying icon move away before releasing your finger.
5. When you're done removing apps, tap ✓.



## Controlling app permissions

When you open apps the first time, you'll be prompted to grant them permissions to access certain data or features, such as contacts or the microphone. This gives you more control over which apps have authorized access.

- If you suspect a certain app of being malicious or requesting unnecessary permissions, you should choose **Deny** to protect your phone.
  - If you choose **Deny** in a trusted app, you may not be able to use the app or access its full functionality. When this happens, go to Settings to change the app permissions.
1. From the Home screen, tap , and then find and tap **Settings**.
  2. Tap **Apps**.
  3. Tap the app you want to configure, and then tap **Permissions**.
  4. Choose which permissions you want to turn on.

## Setting default apps



In Settings, you can choose default apps for web browsing, text messaging, and more.

1. From the Home screen, tap , and then find and tap **Settings**.
2. Tap **Apps**.
3. Tap  > **Configure apps**.
4. Under Default, choose your default launcher, web browser, phone, text messaging apps, and more.

## Setting up app links


If there's more than one app that can be opened when you tap a link—such as a shared social post or media link—you may be prompted to choose the app you want to use. When you're prompted after you've tapped a link, select an app, and then tap **Always** to set that app as the default app to use.

You can also go to Settings to see how app links have been set up for different apps and change them.

1. From the Home screen, tap , and then find and tap **Settings**.
2. Tap **Apps**.
3. Tap  > **Configure apps** > **Opening links**.
4. Tap the app you want to configure, and then tap **Open supported links**.
5. Select **Open in this app** to always open the app without being prompted when you tap a link.  
You can also choose whether to always be prompted to choose the app or never use the app for opening links.

## Disabling an app

Apps, even if not used often, may be running in the background and downloading data. If an app cannot be uninstalled, you can disable it.

1. From the Home screen, tap , and then find and tap **Settings**.
2. Tap **Apps**.
3. Tap the app, and then tap **Disable**.



# Taking photos and videos

## Camera screen





Take great photos and videos with the camera.

On the Home screen, tap the camera icon to open the Camera app. You'll see **Photo** mode, which is the default capture mode.



Icon or button	Function
	Switch between flash modes.
	Open the slideout menu to select a capture mode and choose camera settings.
HDR	Toggle between photo HDR modes.



Icon or button	Function
	Switch between the front camera and main camera.
	Switch between <b>Video</b> and <b>Photo</b> modes.
	Capture a photo.
	View the last photo or video taken.

---

## Zooming

---

Before taking a regular photo or video, slide two fingers apart to zoom in or together to zoom out. You can also freely zoom in or out while recording.

---

## Turning the camera flash on or off

---

Tap the flash icon to choose a flash setting.

When using  or , the camera intelligently sets the best flash brightness for your photo.

---

## Using the volume buttons for capturing

---

In the Camera app, you can set the VOLUME buttons to function as the shutter release or zoom controls.


1. On the Home screen, tap the camera icon to open the Camera app.

2. Tap **||** to open the slideout menu.
3. Tap **Settings > Volume button options**.
4. Choose how you want to use the volume buttons when you're in the Camera app.



## Choosing a capture mode

Switch to a capture mode to use for taking photos or videos. The camera on HTC Desire 555 separates capture modes into categories so that you can quickly find which mode you want.

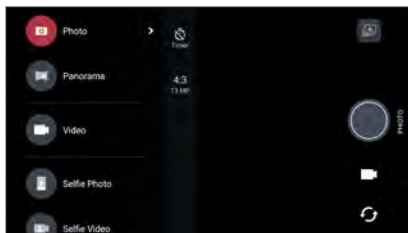
1. Tap **||** to open the slideout menu.  
You can also swipe right from the left edge in landscape orientation or swipe down from the top edge in portrait orientation.
2. Scroll through the menu to see the available capture modes.






3. Tap the capture mode you want to use.
4. To quickly switch between the front and main camera, tap **↺** on the Viewfinder screen.


5. You can quickly switch back to either Photo or Video mode when you're in other capture modes without opening the slideout menu. Right below the main shutter button, just tap  to switch back to Photo mode or  to switch back to Video mode.

## Capture mode settings

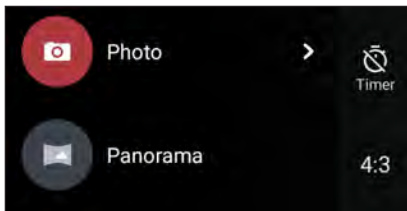You can change the settings for some of the capture modes such as **Photo** or **Video** mode. To change settings, select a mode and then tap  to view and choose the available settings for the mode.



Mode	Setting	Description
Photo Selfie Photo		Toggle between the time settings to set the self-timer or turn off the self-timer. See <a href="#">Taking photos with the self-timer</a> on page 100 for details.
Photo Selfie Photo	16:9	Set the photo quality and aspect ratio. See <a href="#">Setting the photo quality and size</a> on page 93 for details.
Video Selfie Video		Set the video quality. See <a href="#">Setting the video resolution</a> on page 95 for details.


Mode	Setting	Description
Selfie Photo		Turn Live Makeup on and off. See <a href="#">Applying skin touch-ups with Live Makeup</a> on page 98 for details.

## Taking a photo

1. On the Home screen, tap the camera icon to open the Camera app.
2. Switch to **Photo** mode, if you're not in this mode. See [Choosing a capture mode](#) on page 90 for details.
3. Point the camera at what you want to capture. The camera adjusts the focus automatically as you move it. You can also tap the screen to change the focus to a different subject.
4. To manually adjust the exposure, tap the screen, and then drag your finger up and down.




Or turn on **Touch autoexposure** so you can instantly brighten or darken a subject with a single tap. See [Quickly adjusting the exposure of your photos](#) on page 96.

5. When you're ready to take the photo, tap .



In Photo mode's settings, tap **Camera options**, and then turn on **Auto smile capture** to set the camera to take a photo automatically when your subject smiles.

## Setting the photo quality and size

1. Switch to **Photo** or **Selfie Photo** mode.
2. Tap  to open the slideout menu.
3. Tap the current setting—for example **16:9** — to change the photo quality and size, or aspect ratio.

## Tips for capturing better photos

To get better captures with the Camera app, here are some tips on what to do while taking your shots.

### Before capturing

- Make sure that the camera and flash lenses are clean and without fingerprints. Use a soft, clean, microfiber cloth to wipe them.
- Hold the phone so that your fingers aren't blocking the camera and flash lenses.





## For clear, sharp shots

- Tap the screen to focus and dynamically readjust the image contrast, which is sometimes desirable if you wish to take a macro to get an off-center bokeh effect or take photos while you're moving. Adjust the exposure to brighten the subject or make the subject look darker and richer. For details, see [Quickly adjusting the exposure of your photos](#) on page 96.
- If the subject is moving, on the Viewfinder, press and hold the subject to lock the focus.
- If there are parts of the image that are in shadows and others are in highlights, use HDR to capture multiple shots of different exposures and combine them into one shot. Keep HTC Desire 555 steady or place it on a level surface when using HDR. See [Using HDR](#) on page 97 for details.
- When taking a panoramic photo, consider the whole scene and focus on an object that has a neutral tone to help keep the exposure balanced in the composite image.
- Make sure you're not moving the camera when taking a photo, especially in low light conditions.

## Other tips

- In Camera settings, tap **Grid** to help frame the subject better or improve the composition.
- After capturing, you can enhance the photo in the Google Photos app.


## Recording video

1. On the Home screen, tap the camera icon to open the Camera app.
2. Switch to **Video** mode. See [Choosing a capture mode](#) on page 90 for details.
3. When you're ready to start recording, tap .
4. Change focus to a different subject or area by just tapping it on the Viewfinder screen. You can also change the exposure after tapping by dragging up and down on the screen.
5. Tap the flash icon to turn the flash on or off.
6. Tap  to pause the recording, and then tap  to resume.
7. To stop recording, tap .

---

### Setting the video resolution


---


1. Switch to **Video** mode.
2. Tap  to open the slideout menu.
3. Tap **Quality** to change the video resolution.

---

### Taking a photo while recording a video—VideoPic



---

1. On the Home screen, tap the camera icon to open the Camera app.
2. Switch to **Video** mode. See [Choosing a capture mode](#) on page 90 for details.
3. Tap  to start recording.

4. While recording, tap  whenever you want to capture a still shot.
5. Tap  to stop recording.

## Quickly adjusting the exposure of your photos

HTC Desire 555 features a quick way of adjusting the exposure level or brightness in real time. Turn **Touch autoexposure** on if you want the camera to automatically adjust the exposure when you tap a darker or overexposed area on the Viewfinder screen.


1. On the Home screen, tap the camera icon to open the Camera app.
2. Switch to **Photo** or **Panorama** mode. See [Choosing a capture mode](#) on page 90 for details.
3. Tap  to open the slideout menu.
4. Tap **Settings**.
5. Select the **Touch autoexposure** option.
6. Tap on the dark area to brighten it, or tap on the overexposed area to make it darker.  
To fine tune further, you can manually adjust the exposure by dragging your finger up and down.
7. When you're ready to take the photo, tap .

## Taking continuous camera shots

Do you want to take photos of moving subjects? Whether it's your kid's football game or a car race, you can capture the action.

1. On the Home screen, tap the camera icon to open the Camera app.



2. Switch to **Photo** mode. See [Choosing a capture mode](#) on page 90 for details.
3. Press and hold .



The camera takes consecutive shots of your subject.

## Using HDR

When shooting portraits against a bright background, use HDR, short for High Dynamic Range, to capture your subjects clearly. HDR brings out the details of both the highlights and shadows, even in high contrast lighting.



HDR works best when your subject is steady. The camera takes multiple shots at different exposure levels and combines them into one enhanced photo.

1. On the Home screen, tap the camera icon to open the Camera app.
2. Switch to **Photo** mode. See [Choosing a capture mode](#) on page 90 for details.
3. Make sure that HDR is selected. If not, tap  to turn HDR on.
4. Tap .

## Selfies

---



### Applying skin touch-ups with Live Makeup

---



Touch up your skin before taking your selfie. Live Makeup smoothens your skin in real time.



Live Makeup is disabled when HDR is on.

1. On the Home screen, tap the camera icon to open the Camera app.
2. Switch to **Selfie Photo** mode. See [Choosing a capture mode](#) on page 90 for details.
3. If you don't see the Live Makeup adjustment bar on the Viewfinder screen, tap  to open the slideout menu, and then tap .
4. To change the skin smoothing level, drag the adjustment bar slider.



Next time you want to take selfies without using Live Makeup, tap  to open the slideout menu, and then tap  to turn Live Makeup off.


---

### Taking selfies automatically

---

Keep still to take an auto selfie—or just smile! You just need to turn this feature on in the camera settings.

1. On the Home screen, tap the camera icon to open the Camera app.

2. Switch to **Selfie Photo** mode. See [Choosing a capture mode](#) on page 90 for details.
3. Tap  to open the slideout menu.
4. Tap **Settings** > **Camera options**.
5. Select the **Auto selfie capture** option, and then tap outside the slideout menu to close it.
6. Pose and frame yourself on the Viewfinder screen.
7. To take your selfie automatically, look at the front camera, and then:
  - Stay still until the white box turns green on the Viewfinder screen.
  - Or smile at the camera. Hold your smile for a few seconds until your shot is taken.

---


### Taking selfies with voice commands

---

You can easily take photo or video selfies using simple voice commands. You just need to turn this feature on in the camera settings.



This feature may not be available in all languages.

1. On the Home screen, tap the camera icon to open the Camera app.
2. Switch to **Selfie Photo** or **Selfie Video** mode. See [Choosing a capture mode](#) on page 90 for details.
3. Tap  to open the slideout menu.
4. Tap **Settings** > **Camera options**.

5. Select the **Voice capture** option, and then tap outside the slideout menu to close it.
6. Pose and frame yourself on the Viewfinder screen.
7. Look at the front camera, and then:
  - Say **Cheese** or **Capture** to take a photo selfie.
  - Say **Action** or **Rolling** to record a video selfie.



You can also use voice commands with the main camera. Switch to **Photo** mode, and then select the **Voice capture** option in the camera settings.

---

## Taking photos with the self-timer

---

When you use the self-timer, the Camera app counts down before taking the shot. You can set the countdown time.

1. On the Home screen, tap the camera icon to open the Camera app.
2. Choose the capture mode you want to use. See [Choosing a capture mode](#) on page 90 for details.
3. Tap **⏏** to open the slideout menu.
4. Tap **Timer** to set the countdown time.
5. To start the timer, tap **●**. The camera takes the photo after the countdown.

---

## Flipping the angle of selfies

---

Do you want the angle of your shots to look exactly the same as how you see yourself on the Viewfinder screen?

1. Switch to **Selfie Photo** mode. To find out how to switch between capture modes, see [Choosing a capture mode](#) on page 90.
2. Tap **||** to open the slideout menu.
3. Tap **Settings > Camera options**.
4. Make sure the **Save mirrored selfies** option is selected.

## Taking a panoramic photo

Get a wider shot of landscapes in one sweep.



Some camera features are not available when you're in Sweep panorama mode, such as zooming.

1. On the Home screen, tap the camera icon to open the Camera app.
2. Switch to **Panorama** mode. See [Choosing a capture mode](#) on page 90 for details.
3. When you're ready to take the shot, tap **●**.
4. Pan left or right in either landscape or portrait view. Hold HTC Desire 555 as steadily as you can to automatically capture frames.  
You can also tap **●** to stop capturing anytime.

The camera stitches the frames into a single photo.

# Google Photos

## What you can do on Google Photos

Here are some of the things you can do when using Google Photos on your phone.

- View, edit, and share the photos and videos you've taken on your phone. You can also access the media files previously backed up to your Google Account. If you see ☁ or 📁 on a thumbnail, it means that the media file is only stored on the phone and not yet backed up to your Google Account. Without this icon means that the photo or video is already backed up to your account.
- To select photos and videos, press and hold a thumbnail to select one. Tap a date to select all the media files under it. Or, press and hold a thumbnail as your first selection, and then drag your finger to the last item you want to select.



To learn more about Google Photos, tap ≡ > **Help**. Or, you can visit [support.google.com/photos](https://support.google.com/photos).

## Viewing photos and videos



When you open Google Photos for the first time, sign in to your Google Account, if prompted, and choose whether to turn backup and sync on or off.

1. From the Home screen, tap , and then find and tap Photos.  
You'll see your local and synced photos and videos organized by date. If you see or on a thumbnail, it means that the media file is only stored on the phone and not yet backed up to your account.
2. To switch to another view, tap > **Layout**, and then choose how you want to view your media files.
3. Tap a thumbnail to view it in full screen.
4. To view only the photos and videos saved on the phone storage and storage card, tap to open the slideout menu, and then tap **Device folders**.




## Editing your photos

1. From the Home screen, tap , and then find and tap Photos.
2. Tap a photo thumbnail to view it in full screen.
3. Tap , and then do any of the following:
  - Tap to adjust the brightness, color, and more.
  - Tap to apply a filter to the photo.
  - Tap to rotate or crop the photo.



4. While you're editing, press and hold the photo to compare your changes to the original.
5. After making your adjustment, tap ✓.
6. Tap **Save**.

## Trimming a video

1. From the Home screen, tap , and then find and tap Photos.
2. Tap a video thumbnail to view it in full screen.
3. Tap , and then drag the trim sliders to the part where you want the video to begin and end.
4. Tap  to preview your trimmed video.
5. Tap **Save**.

The trimmed video is saved as a copy. The original video remains unedited.


# Web search

## Getting instant information with the Google app

Do you want to check the weather or your morning commute time before you start your day? The Google app delivers quick and up-to-date information that matters to you—all without the search.

Depending on your location, time of day, and previous Google searches, the Google app displays information cards that include:

- The day's weather and the weather forecast for upcoming days.
- The traffic conditions on your way to work or your commute back home.
- The directions and travel time to your next appointment.
- The next train or bus arriving at your platform or bus stop.
- Your favorite team's score and stats while you enjoy the game.
- Time or location based reminders that you can set.

To open the Google app from the Home screen, tap , and then find and tap **Google**. Or tap the Google search bar widget when available.



Get the latest update from Google Play to enjoy Google app's new and improved features.

---

## Setting up the Google app

---



Before setting up the Google app:

- Make sure that you're signed in to your Google account.
- Turn location services on and make sure that you have an Internet connection.

1. From the Home screen, tap **⋮**, and then find and tap **Google**.
2. Tap **Get started**. Or if you've previously set up the Google app on HTC Desire 555 and turned it off, tap **Get started > Set up**.
3. Read the information screen and then tap **Yes, I'm in**. Google app's information cards will start to appear on the Google search screen.
4. Swipe up the screen to see all available information cards.
5. To dismiss a card, swipe it right.




Depending on the information that you've allowed to share, more information cards will appear on the Google search screen as you use HTC Desire 555 to search the Web, create appointments, set reminders, and more.

---

## Changing card settings

---

You can easily customize the settings of the Google app cards to suit your information needs. For example, you can change the weather units in the Weather card or your transportation mode in the Traffic card.

1. From the Home screen, tap , and then find and tap **Google**.
2. Do any of the following:
  - To change the settings of a specific card, tap  and then tap an action.
  - To change specific information such as your work address, sports teams, or stocks you follow, tap , and then tap **Customize the Feed**. Choose the information you want to change.

---




## Setting reminders in the Google app

---

Creating reminders in Google app is an easy way to keep tab of things to do. You can set time or location-based reminders. When the reminder time is up or when you've arrived at the specified location, the Google app displays the Reminder card in the Google search screen and sounds a notification to alert you.



This feature may not be available in all languages.

1. From the Home screen, tap , and then find and tap **Google**.
2. Tap , and then tap **Reminders**.
3. Tap .
4. Enter the reminder title, such as the task you want to be reminded of.

5. Select **Time** to set a time-based reminder or **Place** to set a location-based reminder.
6. Set the reminder time or location details.
7. Tap ✓.

When the reminder time is due or when you've arrived at the location, the Reminder card will appear in the Google search screen. You can then dismiss or snooze the reminder.

---

### Turning off Google app's card feed

---

1. From the Home screen, tap ⋮ > **Settings** > **Google**.
2. Tap **Search & Now** > **Your feed**.
3. Tap the switch next to **Turn off the feed**, and then tap **Turn off**.

### Screen search

Use Screen search to search information while viewing emails and websites, listening to music, or even while exchanging text messages. Screen search lets you look for information about the screen you're on so you don't have to leave the app. Just press and hold ○ and Screen search shows you related information, apps, and actions.



This feature may not be available in all languages.

---

## Turning on Screen search

---



Before turning on Screen search:

- Make sure that you're signed in to your Google Account and have set up the Google app.
- Turn location services on and make sure that you have an Internet connection.

1. From the Home screen, tap , and then find and tap **Google**.
2. Tap > **Settings** > **Screen search**.
3. Tap the Screen search **On/Off** switch.

---

## Searching with Screen search


---

1. On the current app you're in, press and hold . Screen search analyzes the screen and shows a card with information, apps, or actions related to the searched item or location.
2. Tap an item on the card to view more information or perform an action. You can also say, "OK, Google" and say what you want to know about the searched item or location. For example, if Screen search searched for a restaurant, you can say "OK, Google. Take me to that restaurant" to get directions to that location.
3. To hide the information cards and return to the screen, press .

---


## Turning off Screen search

---

1. From the Home screen, tap , and then find and tap **Google**.
2. Tap **Search & Now > Screen search**.
3. Tap the Screen search **On/Off** switch.

## Searching HTC Desire 555 and the Web

You can search for information on HTC Desire 555 and on the Web. In the Google Search app, start your search by entering a keyword or by using Google Voice Search™.

To open Google Search, from the Home screen, tap , and then find and tap **Google**. Or tap the Google search bar widget when available.




Some apps, such as People or Mail, have their own search function, which you can use to search only within those apps.

---

## Performing searches on the Web and HTC Desire 555

---

1. From the Home screen, tap , and then find and tap **Google**.  
If you've already set up a Google account on HTC Desire 555, you will be given the option to sign in to access other features of the Google app.
2. In the search box, enter what you want to search for. As you type, matching items on HTC Desire 555 and suggestions from Google web search are shown.
3. If what you're searching for is in the list of suggestions, tap the item to search for it or open it in its compatible app.



You can also filter web search results by tapping any of the categories on the filter bar below the search bar.

---

## Searching the Web with your voice

---

Use Google Voice Search to find information on the Web by speaking to HTC Desire 555.



This feature may not be available in all languages.

1. From the Home screen, tap **⋮**, and then find and tap **Google**.
2. Say "OK, Google," and then say what you want to search for. After speaking, matching items from Google web search are shown.
3. If what you're searching for is in the list, tap the item to open it in its compatible app. Otherwise, say "OK, Google" to search again.

---

## Setting search options

---

1. From the Home screen, tap **⋮** > **Settings** > **Google**.
2. Tap **Search & Now**.
3. Tap the search option you want to set.


To get help or provide feedback, tap **?**.



# Power and storage management

## About Boost+

Here are some of the things you can do when using the Boost+ app.

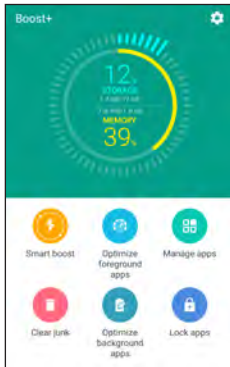

- Monitor your phone storage space and memory usage.
- Delete cache, app installers, and temporary files on your phone.
- Optimize system resources to extend battery life while you're using apps and playing your favorite games.
- Manage irregular app activities, stop unused apps from running in the background, lock apps with sensitive content, or uninstall apps you don't use.


---

## Turning Smart Boost on or off

---




The Smart Boost feature allows the Boost+ app to automatically free up memory space on your phone.

1. From the Home screen, tap , and then find and tap Boost+.

2. Tap , and then select or clear the **Smart boost** option.
3. When prompted to set up the system permission for Boost+, tap **Continue > Boost+**
4. Tap the Permit usage access **On/Off** switch.

### Adding apps to the Smart Boost exception list

You can choose to set the Boost+ app to skip some apps when it runs its Smart Boost checks.

1. From the Home screen, tap , and then find and tap Boost+.
2. Tap **Smart boost**.
3. Tap  > **Manage skipped apps**.
4. Tap , and then select the apps to skip.
5. Tap **Add**.

---

### Manually clearing junk files

---


Regularly remove junk files that clutter your storage space or slow down the phone's performance.

1. From the Home screen, tap , and then find and tap Boost+.
2. Tap **Clear junk**.

The Boost+ app will show you how much storage space is being used up by different junk files, such as cache files, ad files, temporary files, and app installers.

3. Select or clear the junk file types you want to delete.

You can tap  next to a category to view the files under it.

4. Tap  to clear junk files.



In the Boost+ app settings, you can also choose to get notified when your junk files exceed a set limit or when an app is unused over a period of time.

---


## Optimizing apps running in the foreground

---

When you enable an app in the Optimize foreground apps list, your phone automatically optimizes system resources while you're using it. This helps extend your phone's battery life.



This feature may not be available on all phones.

1. From the Home screen, tap , and then find and tap Boost+.
2. Tap **Optimize foreground apps**.
3. On the Optimize foreground apps screen, tap the **On/Off** switch next to an app to turn it on.

---



## Managing irregular activities of downloaded apps

---

The Boost+ app can check for irregular activities from a downloaded app that may affect your phone's performance. When an irregular activity is detected, you can choose to stop the activity. Or, you can also uninstall the downloaded app via the Boost+ app.



You can only uninstall the apps you've downloaded.


1. From the Home screen, tap , and then find and tap Boost+.
2. Tap **Manage apps**.
3. Do any of the following:
  - To uninstall apps you don't need, select one or more apps under the Apps tab, and then tap .
  - Go to the Irregular activities tab to see if there are irregular activities detected. If there's one, tap it and choose an action.

---

## Managing apps running in the background

---

You can set the Boost+ app to automatically stop unused apps from running in the background. This helps save battery power.

1. From the Home screen, tap , and then find and tap Boost+.
2. Tap **Optimize background apps**.
3. Make sure the Optimize background apps **On/Off** switch is turned on. Boost+ lists down unused apps that are running in the background.

4. Tap an app under Auto stop to choose whether to always stop the app from running, stop when the app isn't running for a certain period of time, or always allow the app to run in the background.

To auto stop an app after a period of inactivity, tap **⋮** > **Schedule auto stop**, and then choose how long an app is unused before it's automatically stopped.

---

### Creating an unlock pattern for some apps

---

Add a security pattern to some installed apps that you treat as private. Lock these apps to require an unlock pattern whenever the app is opened, avoiding others to access it without your permission.

1. From the Home screen, tap **⋮**, and then find and tap Boost+.
2. Tap **Lock apps**.
3. Draw your desired unlock pattern.
4. You can sign in to your Google Account or answer a security question. This will only serve as your authentication method to reset the unlock pattern.
5. Tap the **On/Off** switch next to an app to require an unlock pattern to open it.
6. Press **<**.



To change the app unlock pattern, tap **Lock apps**, and then draw your unlock pattern. Tap **⋮** > **Change pattern**.

## Tips for extending battery life

How long the battery can last before it needs recharging depends on how you use HTC Desire 555. Try out some of these tips to help increase battery life.

### Use the power management features

- Turn **Power saver mode** and **Extreme power saver mode** on in Settings.
- Monitoring your battery usage helps identify what's using the most power so you can choose what to do about it. For details, see [Checking battery usage](#) on page 122.

### Manage your connections

- Turn off wireless connections such as mobile data, Wi-Fi, or Bluetooth when not in use.
- Turn GPS on only when a precise location is needed, such as while using navigation or location-based apps. See [Turning location services on or off](#) on page 219.
- Turn on Airplane mode when you don't need any wireless connections and you don't want to receive calls or messages.

### Manage your display

Lowering the brightness, letting the display sleep when not in use, and keeping it simple helps save battery power.

- Use automatic brightness which is the default, or manually lower the brightness. See [Screen brightness](#) on page 224.

- Set the screen timeout to a shorter time. See [Setting when to turn off the screen](#) on page 224.
- Don't use a live wallpaper for your Home screen. Animation effects are nice to show off to other people but they drain your battery.  
Changing your wallpaper to a plain, black background can also help a little. The less color is displayed, the less battery is used. See [Setting your Home wallpaper](#) on page 76.

## Manage your apps

- Battery optimization helps extend battery standby time. See [Battery optimization for apps](#) on page 123.
- Install the latest software and application updates. Updates sometimes include battery performance improvements.
- Uninstall or disable apps that you never use.

Many apps run processes or sync data in the background even when you're not using them. If there are apps that you don't need anymore, uninstall them.


If an app came preloaded and can't be uninstalled, disabling the app can still prevent it from continuously running or syncing data. See [Disabling an app](#) on page 87.


## Limit background data and sync

Background data and sync can use a lot of battery power if you have many apps syncing data in the background. It's recommended not to let apps sync data too often.


Determine which apps can be set with longer sync times, or sync manually.

- In Settings, tap **Accounts & sync** and check what types of data are being synced in your online accounts. When the battery is starting to run low, temporarily disable syncing some data.
- If you have many email accounts, consider prolonging the sync time of some accounts.

In the Mail app, select an account, tap  : > **Settings > Sync, Send & Receive**, and then adjust the settings under Sync schedule.

- When you're not traveling from one place to another, sync weather updates of only your current location, rather than in all of your named cities. Open the Weather app, and then tap  : to edit and remove unneeded cities.
- Choose widgets wisely.

Some widgets constantly sync data. Consider removing the ones that are not important from your Home screen.

- In Play Store, tap  > **Settings**, and then clear **Add icon to Home screen** to avoid automatically adding Home screen app shortcuts whenever you've installed new apps. Also tap **Auto-update apps > Do not auto-update apps** if you're fine with updating apps from Play Store manually.

## Other tips


To squeeze in a little bit more battery power, try these tips:

- Tone down the ringtone and media volume.
- Minimize the use of vibration or sound feedback. In Settings, tap **Sound & notification** and choose which ones you don't need and can disable.
- Check your apps' settings as you may find more options to optimize the battery.




## Using power saver mode

Power saver mode helps to increase battery life. It reduces the usage of phone features that drain the battery such as location services and mobile data.

1. From the Home screen, tap , and then find and tap **Settings**.
2. Tap **Battery Manager**.
3. Tap the Power saver **On/Off** switch to turn power saver mode on or off.  
To set when to automatically switch this mode on, tap **Power saver**, select the **Automatically turn on power saver** option, and then select a battery level.

## Extreme power saving mode


In times when you don't need to use much of your phone, turn Extreme power saving mode on to extend battery life longer. In this mode, standby time can last longer than usual, and you can only use the most basic functions such as phone calls, text messaging, and email.

1. From the Home screen, tap , and then find and tap **Settings**.
2. Tap **Battery Manager**.
3. Tap the Extreme power saving mode **On/Off** switch to turn extreme power saving mode on or off.  
If you want to set when to automatically switch this mode on, tap **Extreme power saving mode**, select the **Automatically turn on extreme power saving mode** option, and select a battery level.

Under More information, tap **Learn more** for details on how Extreme power saving mode maximizes battery life.


## Displaying the battery percentage

You can check the percentage of remaining battery power right from the status bar.

1. From the Home screen, tap , and then find and tap **Settings**.
2. Tap **Battery Manager**.
3. Select **Show battery level**.

## Checking battery usage

See how the system and apps are using the battery and how much power is being used.

1. From the Home screen, tap , and then find and tap **Settings**.
2. Tap **Battery Manager**.
3. Tap **Battery usage**, and then tap an item to check how it's using the battery.
4. If you see the Adjust power use section while viewing battery use details, you can tap the option underneath it to adjust settings that affect battery usage.


Another way to check the battery usage per app is to go to **Settings**, and then tap **Apps**. Tap the app you want to check, and then tap **Battery**.



If the **Battery** option on the App info screen is grayed out, it means the app is currently not using the battery.

## Checking battery history

Check how long you've been using HTC Desire 555 since the last charge. You can also see a chart that shows how long the screen has been on, and how long you've been using connections like the mobile network or Wi-Fi.

1. From the Home screen, tap , and then find and tap **Settings**.
2. Tap **Battery Manager**.
3. Tap **History** to view battery usage over time.

## Battery optimization for apps

When you have connections such as Wi-Fi on while the phone is in sleep mode, some apps may still continue to use the battery. Starting from Android 6.0, battery optimization is enabled for all apps by default which helps prolong battery standby time when you're not using the phone.


The phone needs to be sitting idle for an extended period of time before battery optimization takes effect.

---

### Turning battery optimization off in apps

---

If there are apps that you don't want battery optimization enabled, you can turn the feature off in those apps.

1. From the Home screen, tap , and then find and tap **Settings**.
2. Tap **Battery Manager**.
3. Tap **Battery optimization**.
4. Tap **Not optimized > All apps** to see the complete list of apps.

5. To turn off battery optimization in an app, tap the app name, and then tap **Don't optimize** > **Done**.

Repeat this process to turn off optimization in other apps.

To filter the list and see which apps have battery optimization disabled, tap **All apps** > **Not optimized**.

## Types of storage

Starting from Android 6.0, there have been some changes on how and where downloaded apps and their data can be stored.

### Phone storage

This is the internal storage which contains the Android system, preinstalled apps, email, text messages, and cached data from the apps. You can also install apps that you've downloaded and capture photos, videos, and screenshots to this storage.

### Storage card

Use your storage card as a removable storage to store and access your media and other files on HTC Desire 555 or any Android phone, or set it up as an extension of the internal storage. See [Should I use the storage card as removable or internal storage?](#) on page 125.

## Should I use the storage card as removable or internal storage?

Use your storage card as removable storage when there's already content such as your media and other files so that you don't lose these content. If you have a brand new storage card, choose whether to use it as removable storage or set it up as an extension of the internal storage.

### Removable storage

Use a new storage card as removable storage to be able to insert and use the card on HTC Desire 555 and other Android phones.

### Internal storage

Set up a new storage card as internal storage for more privacy and secure use. This encrypts and formats the storage card to work just like the internal storage.

This also expands the internal storage space since:

- Captured screenshots, camera shots, media, and other files will be stored on the storage card.
- Third-party apps that you installed and their data can be moved between the phone storage and storage card.



After setting up the storage card as internal storage, the card can only be used on HTC Desire 555 where it has been formatted.



## Setting up your storage card as internal storage

When you insert a storage card that has not been used on HTC Desire 555 before, the card will be mounted as removable storage by default.

If the storage card is new or doesn't have content you want to keep, you can format the storage card to use it as internal storage for HTC Desire 555.



- See [Should I use the storage card as removable or internal storage?](#) on page 125 to find out the differences between using the storage card as removable storage or internal storage.
- If there are still files on the storage card, back up the files first before you format the card.

1. From the Home screen, tap  > **Settings > Storage**.
2. Under Removable storage, tap  next to the storage card name.
3. Tap **Format as internal > Erase & format > Format**.
4. Follow the onscreen instructions to move your installed apps and their data from the phone storage to the storage card.



If you no longer want to use your storage card as internal storage, you can reformat the card as removable storage. Before you do so, make sure to move all the apps and data from the card back to the phone storage. See [Moving apps and data between the phone storage and storage card](#) on page 127.

## Moving apps and data between the phone storage and storage card

If you've set up your storage card as internal storage, you can move third-party apps that you installed and their data such as photos, media, and downloaded files to the storage card to free up phone storage space.

If you no longer want to use your storage card as internal storage, make sure to move all the apps and data from the card back to the phone storage.

1. From the Home screen, tap **⋮** > **Settings** > **Storage**.
2. Tap the name of your storage card if you're moving app data from the phone storage to the card, or tap **Phone storage** if you're moving data from the storage card back to the phone storage.
3. Tap **⋮** > **Migrate data**.
4. Tap **Move**.



- Screenshots will also be migrated.
- When you take new photos or videos, capture new screenshots, or download new files after the migration, they will be saved to the new storage location.

## Moving an app to or from the storage card

When you're running out of phone storage space, you can move a downloaded app and its data to the storage card if the card has been set up as internal storage.

If you need to reformat your storage card, make sure to move each app and its data back to the phone storage before formatting the card.



Preinstalled apps cannot be moved. Some third-party apps you've downloaded and installed to the phone storage may also not allow you to move them to the storage card.

1. From the Home screen, tap **⋮** > **Settings** > **Storage**.
2. Tap **Phone storage** > **Apps** if you want to move an app from the phone storage to the storage card.  
Or tap the name of your storage card, and then tap **Apps** if you need to move an app from the storage card back to the phone storage.
3. Tap an app you want to move.
4. Tap **Change**, and then tap where you want to move it to.
5. Tap **Move**.

## Viewing and managing files on the storage

Starting from Android 6.0, you can go to Settings to view and manage files on the phone storage and storage card.

1. From the Home screen, tap **⋮** > **Settings** > **Storage**.



2. Tap **Phone storage** or the storage card name.
3. Tap **Explore** to view internal storage content—whether it's phone storage content or internal storage content on the storage card.
4. To select or deselect files:
  - Press and hold a file to select it. To select more files, tap each file.
  - Tap a file to deselect it.
  - To select all files, press and hold a file first, and then tap **⋮** > **Select all**.
5. Do one of the following:
  - To delete, tap **🗑**.
  - To paste, tap **⋮** > **Copy to**. In the Save to slideout menu, choose where to paste to, and then tap **Copy**.

## Copying files between HTC Desire 555 and your computer

You can copy your music, photos, and other files to HTC Desire 555.



- Save and close your files before copying them from your computer to HTC Desire 555, or vice versa.
- If you're using your storage card as internal storage, your computer will only show storage card content.

1. Connect HTC Desire 555 to the computer using the supplied USB cable.
2. On HTC Desire 555, unlock the screen if it's locked.

3. On the pop-up message that asks whether to use USB for file transfers, tap **Yes**.

If you don't see this message, slide the Notifications panel open, tap the **Use USB for** notification, and then tap **Transfer files**.

You'll then see options for viewing or importing files on the computer screen.

4. Choose to view files.
5. Copy the files from your computer to HTC Desire 555, or vice versa.
6. After copying the files, disconnect HTC Desire 555 from the computer.

## Freeing up storage space

As you use HTC Desire 555, you'll accumulate data and fill its storage capacity over time. Here are some tips on how to free up phone storage space.

### Manage photos and videos

- After taking continuous camera shots, keep only the best shot. Discard the rest, if you don't need them.
- After editing a photo or trimming a video, the original file is kept. Delete original files or move them elsewhere, such as to your computer.
- If you're only sending videos through MMS, use a lower resolution. Hi-res video takes up more space.

### Remove unused themes

Themes can quickly consume up storage space because themes can include images, sounds and icons. Remove themes you're not using. See [Deleting a theme](#) on page 74.

## Back up data and files

Keep only the most recent data in your apps and files that you often need to use. You can back up your other data and files. For some tips, see [Ways of backing up files, data, and settings](#) on page 135.

## Remove or disable apps

Uninstall apps that you've downloaded if no longer need them. See [Uninstalling an app](#) on page 47.

Preinstalled apps can be disabled when you're not using them. See [Disabling an app](#) on page 87.

## Move apps to the storage card

Third-party apps that you've downloaded and installed can be moved to the storage card if you've set up the card as internal storage. See [Moving apps and data between the phone storage and storage card](#) on page 127 and [Moving an app to or from the storage card](#) on page 128.

## Unmounting the storage card



When you need to remove the storage card while HTC Desire 555 is on, unmount the storage card first to prevent corrupting or damaging the files in the storage card.



If your storage card is used as internal storage and there are apps that were moved to the card, you will not be able to open these apps after unmounting the card.

1. From the Home screen, tap **⋮** > **Settings** > **Storage**.



**2.** Do one of the following:

- If your storage card appears under Removable storage, tap  next to the card name, and then tap **Eject**.
- If your storage card appears under Internal storage, tap the card name, and then tap  > **Eject**.

# Sync, backup, and reset

## Adding your social networks, email accounts, and more


You can sync contacts, calendars, and other information from your social networks, email accounts, and online services on HTC Desire 555. Depending on the account type, signing in to your online accounts lets you sync updates between HTC Desire 555 and the Web.

1. From the Home screen, tap  > **Settings** > **Accounts & sync**.
2. Tap .
3. Tap the account type you want to add.
4. Follow the onscreen instructions to enter your account information.



- In **Settings** > **Accounts & sync**, tap the Auto sync **On/Off** switch to turn automatic sync of all your accounts.
- You can add several Google Accounts.

## Syncing your accounts

1. From the Home screen, tap  > **Settings** > **Accounts & sync**.
2. Tap the Auto sync **On/Off** switch to turn automatic sync of all your accounts on or off.

3. To manually sync individual accounts, tap an account type, and then tap ⓘ > **Sync now** on the Account settings screen.



On the Account settings screen, you can also change the sync settings for an account.

## Removing an account

Remove accounts from HTC Desire 555 if you no longer use them. Removing an account does not remove accounts and information from the online service itself.

1. From the Home screen, tap ⋮ > **Settings** > **Accounts & sync**.
2. Tap an account type.  
If you've signed into multiple accounts under an account type, tap the account to remove.
3. Tap ⓘ > **Remove account**.



Some personal data may be retained by the third-party app after you have removed the account from HTC Desire 555.

## Ways of backing up files, data, and settings

Worried that you might lose important stuff on HTC Desire 555? Back up HTC Desire 555 before you remove content from the storage, do a factory reset, or upgrade to a new phone.

### Android Backup Service

Use your Google Account to automatically back up app data and settings including Wi-Fi passwords and files stored by certain apps.

### HTC Sync Manager

Use HTC Sync Manager to import music, photos, and videos from HTC Desire 555 to your computer. You can also sync locally stored contacts and playlists between HTC Desire 555 and your computer.

Likewise, HTC Sync Manager is a good alternative if you don't want to back up your accounts, settings, and other personal content to the cloud. You can use it to create backups of HTC Desire 555 on your computer.

### Other backup options

If you want, you can separately back up your data or files.

Some apps allow you to back up data to the storage card—if it's used as removable storage—so you can easily restore them after a factory reset. Just make sure not to erase the storage card when you do a factory reset.

In certain apps, you may be able to use the phone storage for backing up and restoring app data. If an app is causing some problem and you need to clear its data to try resolving the problem, back up the app data to the phone storage first.

<b>Messages</b>	Back up your text messages to the storage card or phone storage, or save them as an email attachment.
<b>Contacts</b>	<ul style="list-style-type: none"> <li>▪ Save contacts and other personal data to your online accounts so you can just sync them when switching to another phone.</li> <li>▪ If you have locally stored contacts in the People app, export them to the storage card or phone storage.</li> </ul>
<b>Files</b>	Connect HTC Desire 555 to your computer as a disk drive to manually copy and paste files to your computer.
<b>Other data</b>	Check other apps to see if they support exporting data to the storage card or phone storage.

## Using Android Backup Service

Starting from Android 6.0, use the Android Backup Service to back up your HTC phone to Google Drive™.

This service can back up and restore the following:

Back up	What content or settings are backed up
App data	<ul style="list-style-type: none"> <li>▪ In HTC apps, app data includes contacts stored on HTC Desire 555, call history, Clock and Weather city list, and email accounts.</li> <li>▪ Data from third-party apps may also be saved in the backup, depending on the app developer settings.</li> </ul>
Settings	These include ringtones, grid size and sort order on the Apps screen, Wi-Fi networks and passwords and some device settings.



When auto backup is enabled, the Android Backup Service periodically backs up your phone to a private folder in Google Drive. Auto backup occurs every 24 hours when the phone is idle, charging, and connected to a Wi-Fi network.

Backup data will not count towards your Google Drive storage quota. Large files or files that app developers have chosen to exclude from the service will not be backed up.



Restoring your wallpaper from your old phone may depend on screen resolution compatibility of both your old phone and HTC Desire 555.

## Backing up HTC Desire 555

Automatically back up HTC Desire 555 to Google Drive so you can restore content such as app data and settings when needed.

1. From the Home screen, tap **⋮** > **Settings** > **Backup & reset**.
2. Tap **Back up my data**.
3. Tap the **On/Off** switch to turn it on, and then press **↩**.
4. Make sure **Automatic restore** is turned on.

This allows an app's data and settings saved through the Android Backup Service to be restored when you reinstall the app on HTC Desire 555.



To select a backup account other than your primary Google Account, tap **Backup account** and then select another Google Account. You can also tap **Add account** to add a new Google Account for your backup.



## Backing up contacts and messages

If you want to separately back up contacts and text messages on HTC Desire 555, here are some tips on how to export or import them.

---

### Backing up your contacts

---

1. From the Home screen, tap , and then find and tap **People**.
2. On the People tab, tap  > **Manage contacts**.
3. Tap **Import/Export contacts** > **Export to phone storage** or **Export to SD card**.
4. Select an account or type of contacts to export.
5. To help protect your data, tap **Yes**, and then set a password for this backup. Be sure to remember this password. You'll need to enter it again when importing contacts.


If you don't need a password, tap **No**.

6. Tap **OK**.

---

### Restoring contacts

---

1. On the People tab, tap  > **Manage contacts**.
2. Tap **Import/Export contacts** > **Import from phone storage** or **Import from SD card**.
3. If you have more than one account set up, tap the type for the imported contacts.

4. If you have multiple backups available, select the backup you want to import, and then tap **OK**.
5. Enter the password you've set for this backup, and then tap **OK**.

---


## Backing up your text messages

---

Keep important text messages by backing them up so you can restore them to the HTC Messages app, if needed. The Messages app backs up either to the phone storage or to your storage card if you have one inserted.



Text messages in the secure box and blocked messages will not be backed up. To include such messages to your backup, move them first to the general message box.

1. From the Home screen, tap , and then find and tap **Messages**.
2. Tap **: > Back up/Restore SMS > Back up > Back up SMS**.
3. To help protect your data, set a password for your backup. Be sure to remember this password. You'll need to enter it again when restoring messages.  
If you don't need a password, select **Do not password protect this backup**.
4. Enter a name for your backup file, and then tap **OK**.



---

## Backing up text messages by email

---



- You need to set up your email account in the HTC Mail app.
- Text messages in the secure box and blocked messages will not be backed up. To include such messages to your backup, move them first to the general message box.

1. From the Home screen, tap , and then find and tap **Messages**.
2. Tap  > **Back up/Restore SMS**.
3. Tap **Back up** > **Back up SMS via mail**.
4. To help protect your data, set a password for your backup. Be sure to remember this password. You'll need to enter it again when restoring messages.  
If you don't need a password, select **Do not password protect this backup**.
5. Enter your email address.
6. Compose your email message, and then send it.

---

## Restoring text messages

---

1. From the Home screen, tap , and then find and tap **Messages**.
2. Tap  > **Back up/Restore SMS** > **Restore**.
3. Choose how you want to restore the messages, and tap **Next**.

4. Tap the backup to import.
5. Enter the password you've set for this backup. If you didn't set a password, select **This backup file is not password protected**.
6. Tap **OK**.

To restore text messages that were backed up via email, open the email message with the backup file attachment from the Mail app. Tap the attachment to download it first, and then tap it again to open the backup file to import. Enter the password you've set for this backup or select **This backup file is not password protected**.

## Restoring from your previous HTC phone

If you were using HTC Backup on your previous HTC phone, you need to download and use the HTC Restore app on HTC Desire 555 to restore your backup.



Depending on the amount of content, restoring a backup to HTC Desire 555 through your data connection may incur additional data costs and take a long time. Using a Wi-Fi connection is recommended.

1. After you've finished setting up HTC Desire 555, slide the Notifications panel open, and then tap the **Transfer or restore your content** notification.  
If you don't see this notification, go to Settings and then tap **Backup & reset**.
2. Tap **Restore from HTC backup**.  
If the HTC Restore app is not installed on the phone, you'll be prompted to download and install HTC Restore.
3. Tap **Restore from HTC backup**.

4. Sign in with the account you used to back up your old phone.
5. Choose the backup to restore to HTC Desire 555.
6. If prompted, choose whether to use a mobile data or Wi-Fi connection for restoring your backup.
7. Follow the onscreen instructions to restore your backup.
8. Slide open the Notifications panel to check if there's any notification to finish restoring your backup.

Free apps from Google Play will be restored in the background, and you can track the progress via a notification in the status bar. To restore paid apps, you need to download and install them from Google Play.

Your apps will appear on the Apps screen as they are installed. The Apps and Home screen shortcuts will be reorganized as in your backup after all of your apps have been installed. You can continue using HTC Desire 555 while apps are being restored.

## About HTC Sync Manager

HTC Sync Manager supports a computer running a Windows or OS X operating system.

Here's what you can do with HTC Sync Manager.

### View and manage media on your computer and phone

- Browse and manage music, photos, and videos that are on your computer and your phone.
- Import iTunes and Windows Media® Player playlists from your computer to HTC Sync Manager.

- Create playlists from music on your phone or your computer and then sync these playlists to both devices.
- Play music and videos using the built-in player.

## Transfer content

- Transfer iPhone photos, text messages, contacts, and more to your HTC phone.
- Import all music, photos, and videos from your HTC phone to your computer.
- Copy selected music, photos, or videos from your computer to your phone.
- Import documents from your computer to your phone.

## Back up and restore

Back up your HTC phone to your computer so you can easily restore your backup to the same phone or to another HTC phone.

## Sync data

Sync data between your phone and your computer.


---

## Getting help

---

To find out more about using HTC Sync Manager, download the user guide PDF from the HTC support site ([htc.com/hsm/](http://htc.com/hsm/)). Or open the Help that comes with the software.




On Windows, click  in HTC Sync Manager, and then click **Help**.

## Installing HTC Sync Manager on your computer

You can install HTC Sync Manager on Windows XP or later versions.

To install it on a Mac® computer, you need OS X 10.6 or later versions.

1. Download the HTC Sync Manager installer from the HTC support site: [htc.com/hsm/](http://htc.com/hsm/).
  2. Launch the installer and follow the onscreen instructions.
  3. Connect your phone to your computer using the supplied USB cable. HTC Sync Manager opens.
  4. If HTC Sync Manager didn't automatically open, you may need to do one of the steps below, depending on the Android version installed on your phone.
    - When prompted if you want to use USB for file transfers, tap **Yes**.
    - Slide the Notifications panel open, tap the **Use USB for** notification and select **File transfers**.
    - Slide the Notifications panel open and tap the HTC Sync Manager notification to give it permission.
- 
  - If you have problems in installing HTC Sync Manager, close all your running programs and reinstall. If the problem persists, temporarily disable your anti-virus program and try installing again.
  - If you disabled your anti-virus program, make sure to turn it back on after installing HTC Sync Manager.



## Transferring iPhone content to your HTC phone

With HTC Sync Manager, easily transfer iPhone content such as contacts, messages, wallpaper, camera photos, and more to your HTC phone.



You need to use iTunes 9.0 or later to back up your iPhone content first to your computer.

1. Connect your iPhone and your HTC phone to your computer.
2. In HTC Sync Manager, click **Home** > **Transfer & Backup**.
3. Click the **Get Started** button.
4. If you haven't used iTunes to back up your iPhone content to your computer, please do so before proceeding.
5. Select your iPhone backup file, and then click **OK**.
6. Select the types of content you want to transfer to your HTC phone.  
You can choose whether to replace the content on your HTC phone with the iPhone content.
7. Click **Start**. Wait for HTC Sync Manager to finish transferring content.

## Restarting HTC Desire 555 (Soft reset)

If HTC Desire 555 is running slower than normal, is unresponsive, or has an app that is not performing properly, try rebooting and see if that helps solve the problem.

1. If the display is off, press the **POWER** button to turn it back on.

2. Press and hold the POWER button, and then tap **Restart**.

## HTC Desire 555 not responding?

If HTC Desire 555 does not respond when you touch the screen or press the buttons, you can still restart it.

Press and hold the POWER and VOLUME DOWN until your phone vibrates, and then release the buttons.



You may need to press and hold the buttons for 12 to 15 seconds before the phone vibrates.

## Resetting network settings

Reset the network settings when you're having problems connecting HTC Desire 555 to your mobile data or Wi-Fi network and Bluetooth devices.

1. From the Home screen, tap **⋮** > **Settings** > **Backup & reset**.
2. Tap **Network settings reset**.
3. Tap **Reset settings**.
4. Tap **Reset settings**.

## Resetting HTC Desire 555 (Hard reset)

If HTC Desire 555 has a persistent problem that cannot be solved, you can perform a factory reset (also called a hard reset or master reset). A factory reset reverts the phone back to its initial state—the state before you turned on the phone for the first time.



Factory reset will remove all data on your phone storage, including apps you've downloaded and installed, your accounts, your files, as well as system and app data and settings. Be sure to back up any data and files you want to keep before you do a factory reset.

1. From the Home screen, tap **⋮** > **Settings** > **Backup & reset**.

2. Tap **Factory data reset**.

To avoid deleting media and other data from your storage card, make sure you do not select the **Erase SD card** option.

3. Tap **Reset phone**.

4. Tap **OK**.





A factory reset may not permanently erase all data from your phone, including personal information.

# HTC BlinkFeed

## What is HTC BlinkFeed?

Get the latest news about your interests or status updates from your friends right on HTC BlinkFeed. Set up which social networks, news sources, and more will appear.

- Swipe up or down to browse stories on HTC BlinkFeed.
- Tap a tile to view the content. If it's a video tile, you can watch the video in full screen, hear the audio, and control the playback.
- While viewing a news article, swipe left or right to see more stories.
- While in HTC BlinkFeed, you can press  or  to scroll to the top.
- Swipe right on HTC BlinkFeed to open the slideout menu where you can choose the type of feeds or add your custom topics to display.



- You'll see the clock widget on HTC BlinkFeed if you've set HTC BlinkFeed as the main Home screen.
- HTC BlinkFeed is a part of the HTC Sense Home app. To get the latest features of HTC BlinkFeed, make sure you've downloaded the newest version of HTC Sense Home.

## Turning HTC BlinkFeed on or off

1. On the Home screen, slide two fingers together.



2. Do one of the following:

- To turn on HTC BlinkFeed, swipe right on the thumbnails to + , then tap it.



- To turn off HTC BlinkFeed, tap the thumbnail to select it, press and hold the thumbnail and drag it to **Remove**.

## Restaurant recommendations

Can't think of what to eat? Get recommendations for restaurants nearby in HTC BlinkFeed.



Make sure you've added personalized content to HTC BlinkFeed. See [Ways of adding content on HTC BlinkFeed](#) on page 151.

1. On HTC BlinkFeed, swipe right to open the slideout menu.
2. Tap **+** and make sure **Mealtime recommendations** is selected. If prompted, give HTC Sense Home permission to access your location and personal usage data.

To get restaurant recommendations, you'll need to actively use HTC BlinkFeed daily. Restaurant recommendations will show up as a tile in HTC BlinkFeed and may also show up on your lock screen.

---

### Viewing restaurant recommendations

---

View photos of the restaurant, get directions to the restaurant, and more.

1. When you see a restaurant recommendation tile, tap it to view more information.
2. You can do the following:
  - Tap the photo tile or **View Photos** to browse photos of the restaurant.
  - Tap the map icon or address to see the location and get directions to the restaurant.

- If you see a phone number, tap the phone number to call the restaurant.
- If available, tap the dots at the bottom or swipe left to see more options.

## Ways of adding content on HTC BlinkFeed

Personalize HTC BlinkFeed to show articles and status updates from your favorite news sources and apps.

---

### Adding sources to HTC BlinkFeed

---

Add news sources such as News Republic® to select from a wide variety of news services.

1. On HTC BlinkFeed, swipe right to open the slideout menu.
2. Tap **+**, and then select the sources you want to add.

---

### Selecting feeds

---

Discover stories and articles on HTC BlinkFeed.



You need to add a news source before you can select feeds.

1. On HTC BlinkFeed, swipe right to open the slideout menu.
2. Next to News Republic, tap **< > +**.
3. Swipe across the screen to browse the categories.
4. Select one or more feeds.

---

## Showing content from your apps and social networks

---

See your friends' posts in social networks or show content from your HTC apps right on HTC BlinkFeed.



- You need to sign in to your social networks before you can post a status update from HTC BlinkFeed.
- When adding a social network to HTC BlinkFeed, you need to give HTC Sense permission to access it.

1. On HTC BlinkFeed, swipe right to open the slideout menu.
2. Tap **+**, and then select the apps and social networks you like.

---

## Searching and adding a topic of interest

---

Looking for a more specific topic? Search for and select topics of interest to display them on HTC BlinkFeed.

1. On HTC BlinkFeed, swipe right to open the slideout menu.
2. Next to News Republic, tap **∨ > +**.
3. Tap **🔍**, and then tap **Search topics** and enter keywords of what you're looking for.
4. Tap a result to add it to My topics in the News Republic app.



## Customizing the Highlights feed

The Highlights feed displays a mix of top trending articles and status updates from the feed sources you added. You can set the Highlights feed to only show items from your favorite news sources and apps.

1. On HTC BlinkFeed, swipe right to open the slideout menu.
2. Tap **⋮** > **Settings** > **Choose Highlights topics**.
3. Select the feed sources you want to appear in Highlights.

## Playing videos on HTC BlinkFeed

If you're connected to Wi-Fi and there's a news or social media post that contains a video, the video plays automatically on the tile.

- Tap a video tile to play it in full screen. Tap the title of the video tile to open its article page.
- While the video is playing, tap the screen to see the playback controls.
- To turn off autoplay or if you want to autoplay videos while on mobile data, tap **≡** to open the slideout menu, and then tap **⋮** > **Settings** > **Videos play automatically**. Tap the option you want.

## Posting to your social networks

You can easily post a status update from HTC BlinkFeed.



- You need to sign in to your social networks before you can post a status update from HTC BlinkFeed.
- When adding a social network to HTC BlinkFeed, you need to give HTC Sense permission to access it.

1. On HTC BlinkFeed, swipe right to open the slideout menu.
2. Tap **>Compose**, and then choose a social network.
3. Compose your status update and post it on your social network.

## Removing content from HTC BlinkFeed

Whether it's a tile or an entire feed, you can remove content you don't want to see on HTC BlinkFeed.

- To remove a tile, press and hold the tile you want to remove, and then tap **Remove**.
- To remove a feed source, in the slideout menu, next to News Republic tap **>** **+**. Then tap any tile marked with **✓** to remove it.
- To remove social networks or apps from HTC BlinkFeed, in the slideout menu, tap **+**. Then uncheck the social networks or apps you want to hide from HTC BlinkFeed.


# Phone calls

## Making a call with Smart dial

You can either dial a number directly, or use Smart dial to quickly place a call. Smart dial searches and calls a stored/synced contact or a number from your call history.


1. On the Home screen, tap the phone icon to open the **Phone** app.
2. Enter the phone number or first few letters of the contact's name to see matching contacts.
3. To see all the numbers and contacts that match, tap the number (for example, 8 matches).
4. Tap the contact you want to call.



If the phone number has an extension, tap  after connecting to the main line and then dial the extension number.

## Making a call with your voice

Call a contact hands-free using your voice.

1. On the Home screen, tap the phone icon to open the **Phone** app.
2. Tap .
3. Say the name of contact you want to call. For example, say "Call [person's name in phonebook]."

4. Follow screen instructions to make the call.

## Dialing an extension number

To skip voice prompts when dialing an extension number, do one of the following:

- After dialing the main number, press and hold \*. A comma (,) is added to the number you are dialing. Enter the extension number, and then tap the call button. You will be connected to the mainline and then to the extension number.
- After dialing the main number, press and hold # to add a semicolon (;). Enter the extension number after the semicolon, and then tap the call button. After connecting to the main line, tap **Send** to dial the extension number.

You can save phone numbers with an extension in the People app.

## Returning a missed call

You'll see the missed call icon  in the status bar when you miss a call.

1. Slide the Notifications panel open to check who the caller is.
2. To return the call, tap **Call back**.

If you have multiple missed calls, tap the missed calls notification to open the Call History tab.

## Speed dial

Use Speed dial to call a phone number with a single tap.

1. On the Home screen, tap the phone icon to open the **Phone** app.
2. Tap **:** > **Speed dial** > **+**. You can also press and hold an unassigned key on the dialpad, and then tap **Yes**.
3. Select a contact from the list.
4. On the Speed dial screen, choose the phone number of the contact to use, and a speed dial key to assign.
5. Tap **Save**.

To use Speed dial, press and hold the speed dial number you want to call.

## Calling a number in a message, email, or calendar event

When you receive a text message, email, or calendar event that has a phone number in it, you can just tap the number to place a call.

## Receiving calls

When you receive a phone call from a contact, the Incoming call screen appears.





HTC Desire 555 will automatically adjust the ringtone volume if **Quiet ring on pickup** and **Pocket mode** are selected in **Settings > Sound & notification**.

---

### Answering or rejecting a call

---

Do one of the following:

- Tap **Answer** or **Decline**.
- If you've set up a lock screen, drag  or  upwards.

---

### Muting the ringing sound without rejecting the call

---

Do one of the following:

- Press the VOLUME DOWN or VOLUME UP button.
- Press the POWER button.
- Place HTC Desire 555 face down on a level surface.

## Emergency call

In some regions, you can make emergency calls from HTC Desire 555 even if the nano SIM card has been blocked or if you don't have one installed.



If you don't have a network signal, you won't be able to make an emergency call.

1. On the Home screen, tap the phone icon to open the **Phone** app.
2. Dial the emergency number for your locale, and then tap **Call**.



If you've enabled but forgotten your lock password or lock pattern, you can still make emergency calls by tapping **Emergency** on the screen.

## What can I do during a call?

When a call is in progress, you can turn the speakerphone on, place the call on hold, and more.

---

### Putting a call on hold

---

To put the call on hold, tap **: > Hold**. The status bar then displays the hold call icon

To resume the call, tap **: > Unhold**.

---

## Switching between calls

---

If you're already in a call and you accept another call, you can switch between the two calls.

1. When you receive another call, tap **Answer** to accept the second call and put the first call on hold.
2. To switch between the calls, tap the person you want to talk to on the screen.




---

## Turning the speakerphone on or off during a call

---





To decrease potential damage to your hearing, do not hold HTC Desire 555 to your ear when the speakerphone is on.

- On the call screen, tap . The speakerphone icon  appears in the status bar.
- To turn the speakerphone off, tap .

---

## Muting the microphone during a call

---

On the call screen, tap  to toggle between turning the microphone on or off. When the microphone is turned off, the mute icon  appears in the status bar.

---

## Ending a call

---

Do one of the following to end the call:

- On the call screen, tap **End Call**.








- Slide the Notifications panel open, then tap **End Call**.

## Setting up a conference call

Conference calling with your friends, family, or co-workers is easy. Make or accept a call, and then simply dial each subsequent call to add it to the conference.



Make sure that you have conference calling service activated. Contact your mobile operator for details.


1. Make a call to the first conference call participant.
2. When connected, tap , and then dial the number of the second participant. The first participant is put on hold.
3. When connected to the second participant, tap  .
4. To add another participant, tap , and then dial the number of the contact.
5. When connected, tap  to add the participant to the conference call. Tap  to access options such as ending the call with a participant.
6. To end the conference call, tap **End Call**.

## Call History

Use Call History to check missed calls, your dialed numbers, and received calls.

1. On the Home screen, tap the phone icon to open the **Phone** app.
2. Swipe to view the Call History tab.


3. Do one of the following:

- Tap a name or number in the list to call.
- Press and hold a name or number in the list to display the options menu.
- Tap  to display just a particular type of call such as missed calls or outgoing calls.

---

### Adding a new phone number to your contacts from Call History



---

1. On the Call History tab, tap  next to the new phone number.
2. Choose whether to create a new contact or save the number to an existing contact.

---

### Clearing the Call History list

---

1. On the Call History tab, tap  > **Remove call history**.
2. Select the items you want to delete, or tap  > **Select all**.
3. Tap **Delete**.

---

## Blocking a caller

---

When you block a phone number or a contact, all calls from the phone number or contact will be declined automatically.

On the Call History tab, press and hold the contact or phone number you want to block, and then tap **Block contact**.



You can always remove a caller from your blocked list. On the Call History tab, tap **:** > **Blocked contacts**. In the All tab, press and hold a contact, and then tap **Unblock contacts**.

## Switching between silent, vibrate, and normal modes

Do one of the following:

- To change from silent to normal mode, press the VOLUME UP button twice.
- To change from vibrate to normal mode, press the VOLUME UP button.
- Go to Settings, and then tap **Sound & notification** > **Sound profile**.

## Home dialing

When you're on a trip abroad, it's easy to dial friends and family from home.


Your home country code is automatically added when you call your contacts while roaming. But when manually entering a phone number to call, you need to enter a plus (+) sign and country code before the number.



Using a roaming service may incur additional charges. Check with your mobile operator for rates before using a roaming service.

## Changing the default country code for Home dialing


---

1. From the Home screen, tap , and then tap **Settings > Call**.
  2. Tap **Home dialing settings**.
  3. Select a country, and then tap **OK**.
- 

## Turning off Home dialing





---

If you prefer to manually enter complete phone numbers to call while roaming, you can turn off Home dialing.


1. From the Home screen, tap , and then tap **Settings > Call**.
2. Clear the **Home dialing** option.

# Messages

## Sending a text message (SMS)

1. From the Home screen, tap , and then find and tap **Messages**.
2. Tap .
3. Enter a contact name or mobile number in the **To** field.
4. Tap the area that says **Add text**, and then enter your message.
5. Tap  to send the message.  
Or, you can tap  to save the message as a draft.









- There is a limit on the number of characters for a single text message (displayed above ). If you exceed the limit, your text message will be delivered as one but will be billed as more than one message.
- Your text message automatically becomes a multimedia message if you enter an email address as the recipient, attach an item, or compose a very long message.

## Sending a multimedia message (MMS)



Before attaching and sending a high-resolution video, compress it first so that the file size doesn't exceed the message size limit.

1. From the Home screen, tap , and then find and tap **Messages**.
  2. Tap .
  3. Enter a contact name, mobile number, or email address in the **To** field.
  4. Tap the area that says **Add text**, and then enter your message.
  5. Tap , and then choose an attachment type.
  6. Select or browse for the item to attach.
  7. After adding an attachment, tap  to see options for replacing, viewing or removing your attachment.
  8. Tap .
- Or, you can tap  to save the message as a draft.

## Sending a group message

Group messaging makes it easy to send a message to multiple contacts all at once. You can choose to send a group SMS or group MMS.



Group MMS may incur extra data fees.

1. From the Home screen, tap , and then find and tap **Messages**.
2. Tap .
3. Tap , and then select multiple recipients.
4. Tap **Done**.
5. To send a group SMS, tap , and then select **Send as individual**. Clear this option to send your message as a group MMS.

Sending option	Sending and receiving
<b>Group SMS</b>	Your message will be sent to the recipients as a text message and you will be charged by your mobile operator for each message sent. Replies of your recipients are sorted separately.
<b>Group MMS</b>	Similar to a group chat, sending a group MMS lets your recipients join the conversation you've started. HTC Desire 555 also organizes message replies in a single conversation thread. If this is your first time to send a group MMS, you may need to enter your mobile phone number.


6. Tap the area that says **Add text**, then enter your message.
7. Tap ➤.

## Resuming a draft message

If you switch to another app or if you receive an incoming call while composing a text message, the message is automatically saved as a draft.


1. From the Home screen, tap , and then find and tap **Messages**.
2. Tap a draft message, and then edit the message.



To see all draft messages in one place, tap , and then tap **Filter > Drafts**.

3. Tap ➤.

## Replying to a message

1. From the Home screen, tap , and then find and tap **Messages**.
2. Tap a contact (or phone number) to display the exchange of messages with that contact.
3. Tap the area that says **Add text**, and then enter your message.
4. Tap ➤.



---

## Replying to a contact's other phone number

---

When a contact has multiple phone numbers stored on HTC Desire 555, you can select which phone number to reply to.

Keep in mind that if you don't select another number, your response will be sent to the phone number that your contact used to send the last message.

1. While viewing the exchange of messages with a contact, tap **:** > **Recipient phone number** and select which phone number you want to reply to.
2. Tap the area that says **Add text**, then enter your reply message.
3. Tap **➤**.

## Forwarding a message



1. From the Home screen, tap **⋮**, and then find and tap **Messages**.
2. Tap a contact (or phone number) to view the exchange of messages with that contact.
3. Tap a message, and then tap **Forward**.

## Moving messages to the secure box

You can move private messages to the secure box. You will need to enter a password to read these messages.




- The secure box does not encrypt messages.
- Messages stored on a nano SIM card cannot be moved to the secure box.

1. From the Home screen, tap , and then find and tap **Messages**.
2. Tap a contact (or phone number) to display the exchange of messages with that contact.
3. Tap  > **Move to secure box**.
4. Select the messages, and then tap **Move**.



To move all the messages from a contact, on the Messages screen, press and hold the contact and tap **Move to secure box**.

- To read messages in the secure box, on the Messages screen, tap  > **Secure**. If it is your first time to use the secure box, set a password.
- To remove messages or contacts from the secure box, press and hold the contact (or phone number) and tap **Move to general box**.

## Blocking unwanted messages

Declutter your Messages screen by moving spam messages from contacts to the block box. If you have blocked a contact, that contact's text or picture messages will also be in the block box.

- Open the Messages app, press and hold a contact (or phone number) and tap **Block contact**.
- To block multiple contacts, tap **⋮** > **Block contacts**, select the contacts, and tap **Block**.

When the contact sends you messages, you will not see them in the Messages screen or receive notifications and calls.

To read messages in the block box, on the Messages screen, tap **🔒** > **Block**.



- To remove messages or contacts from the block box, press and hold the contact (or phone number) and tap **Unblock**.
- To completely discard future messages from blocked contacts, tap **⋮** > **Settings** > **General**, and then clear the **Save block message** option.

## Copying a text message to the nano SIM card

1. From the Home screen, tap **⋮**, and then find and tap **Messages**.
2. Tap a contact (or phone number) to display the exchange of messages with that contact.
3. Tap the message, and then tap **Copy to SIM**. The nano SIM card icon is displayed.

## Deleting messages and conversations

Open the Messages app and do any of the following:

To delete a	Do these steps
<b>Message</b>	Open the conversation thread with a contact, tap the message, and then tap <b>Delete message</b> .  To delete multiple messages within a conversation, tap <b>:</b> > <b>Delete messages</b> > <b>Delete by selection</b> , and then select the messages to delete.
<b>Conversation</b>	Press and hold a contact (or phone number), and then tap <b>Delete</b> .  To delete multiple conversations, tap <b>:</b> > <b>Delete threads</b> , and then select the conversations to delete.



In the Messages settings, tap **General** > **Delete old messages** to auto delete old messages.

---

## Preventing a message from being deleted

---

You can lock a message to prevent it from being deleted even if you delete the other messages in the conversation.


1. Open the Messages app.
2. Tap a contact (or phone number) to display the exchange of messages with that contact.
3. Tap the message that you want to lock.

4. Tap **Lock message** on the options menu. You'll then see a lock icon for locked messages.

# People

## Your contacts list

The People app lists all contacts you've stored on HTC Desire 555 and from online accounts you're logged in to. Use the People app to easily manage communications with people that matter to you.

1. From the Home screen, tap , and then find and tap **People**.



2. On your contacts list, you can:

- View your profile and edit your contact information.
- Create, edit, find, or send contacts.
- Tap a contact photo to find ways to quickly connect with the contact.
- See when a contact has sent you new messages.



To sort your contacts by their first or last name, tap **⋮ > Settings > Sort contacts by**.

## Filtering your contacts list

When your contacts list gets long, you can choose which contact accounts to show.

1. On the People tab, tap **Phonebook**.
2. Choose the accounts that contain the contacts you want to display.
3. Press **⏮**.

## Finding people

Search for contacts stored on HTC Desire 555, your company directory if you have an Exchange ActiveSync account, or social networks you've signed into.

1. From the Home screen, tap **⋮**, and then find and tap **People**.
2. On the People tab, you can:
  - Find people in your contacts list. Tap **Q**, and then enter the first few letters of the contact name in the Search people box.

- Find people on your company directory. Tap **Q**, enter the first few letters of the contact name in the Search people box, and then tap **Search contacts in your Company Directory**.



Aside from searching for a contact by name, you can search using a contact's email address or company name. On the People tab, tap **:** > **Settings** > **Search contacts by**, and then choose a search criteria.

## Setting up your profile

Store your personal contact information to easily send it to other people.

1. From the Home screen, tap **⋮**, and then find and tap **People**.
2. Tap **My profile**.
3. Tap **Edit my contact card**.
4. Enter or edit your name and contact details.
5. Tap **📷** or the current photo to change your contact photo.
6. Tap **✓**.

## Adding a new contact

1. From the Home screen, tap **⋮**, and then find and tap **People**.
2. On the People tab, tap **+**.
3. Tap the **Name** field, and then enter the contact name. Tap **📧** to separately enter the contact's given, middle, or family name and name suffix, such as Jr.



4. Select the Contact type. This determines which account the contact will sync with.
5. Enter the contact information in the fields provided.
6. Tap ✓.

When you tap the added contact in your contacts list, you'll see the contact information and your exchange of messages and calls.

## How do I add an extension number to a contact number?

While creating a new contact or editing a contact's details in People, you can add an extension number to their number so you can skip the voice prompts when calling.

1. After entering the number of the main line, do one of the following:
  - Tap **P** to insert a pause before the phone dials the extension number. To insert a longer pause, enter **P** several times.
  - Tap **W** to be prompted to confirm the extension number.
2. Enter the extension number.

## Editing a contact's information



Social network contacts cannot be edited.

1. From the Home screen, tap , and then find and tap **People**.
2. On the People tab, press and hold the contact, and then tap **Edit contact**.
3. Enter the new information.
4. Tap .

## Getting in touch with a contact

1. From the Home screen, tap , and then find and tap **People**.
2. Tap a contact's photo (not the name), and then choose how you want to get in touch with that contact.





For more ways of getting in touch with your contact, tap an icon below the contact photo.

## Importing or copying contacts

---

### Importing contacts from your nano SIM card

---

1. From the Home screen, tap , and then find and tap **People**.
2. On the People tab, tap > **Manage contacts**.
3. Tap **Import/Export contacts** > **Import from SIM card**.
4. If prompted, select which account you'd like to import your contacts to.
5. Select the contacts you want to import.
6. Tap **Save**.

---

### Importing a contact from an Exchange ActiveSync account

---

1. On the People tab, tap and enter the contact's name or email address in the search box.
2. Tap **Search contacts in your Company Directory**.
3. Tap the name of the contact you want copied to HTC Desire 555.
4. Tap to import the contact.

---

## Copying contacts from one account to another

---



Contacts from social networks may not be able to be copied.

1. On the People tab, tap **> Manage contacts**.
2. Tap **Copy contacts**, and then choose a contact type or online account to copy from.
3. Select a contact type or account you want to save to.

## Merging contact information

Avoid duplicate entries by merging contact information from different sources, such as your social network accounts, into one contact.

---

## Accepting contact link suggestions

---

When HTC Desire 555 finds contacts that can be merged, you'll see a link notification when you open the People app.

1. From the Home screen, tap **⋮**, and then find and tap **People**.
2. On the People tab, tap the Contact link suggestion notification when available. You'll see a list of suggested contacts to merge.
3. Tap **↪** next to the contact you want to merge. Otherwise, tap **↩** to dismiss the link suggestion.



If you don't want to receive contact link suggestions, on the People tab, tap **:** > **Settings**. Clear the **Suggest contact link** option.

## Manually merging contact information

1. On the People tab, tap the name of the contact (not the icon or photo) you want to link.
2. Tap **:** > **Link**.
3. You can:
  - Under **Suggest links**, link the contact to an account.
  - Under **Add contact**, tap one of the options to link to another contact.

## Breaking the link

1. On the People tab, tap the name of the contact (not the icon or photo) whose link you want to break.
2. Tap **:** > **Link**.
3. Under the **Linked contacts** section, tap **↔** beside an account to break the link.

## Sending contact information

1. From the Home screen, tap **⋮**, and then find and tap **People**.

2. On the People tab, do one of the following:

To send	Do this
<b>Someone's contact information</b>	Press and hold the name of the contact (not the icon or photo), and then tap <b>Send contact as vCard</b> .
<b>Your contact information</b>	Press and hold <b>My profile</b> , and then tap <b>Send my profile</b> .

3. Choose how you want to send the vCard.
4. Select the type of information you want to send.
5. Tap **Send**.

---

### Sending multiple contact cards

---

1. On the People tab, tap **> Send contacts**.
2. Select the contacts whose contact information you want to share
3. Tap **Send**.
4. Choose how you want to send the contact cards.

## Contact groups




Organize your friends, family, and colleagues into groups so you can quickly send a message or email to everyone in the group. We've also set up the Frequent group to automatically add the contacts you dial or get calls from the most.

HTC Desire 555 also syncs with groups you've created in your Google Account.

---

### Creating a group

---

1. From the Home screen, tap , and then find and tap **People**.
2. On the Groups tab, tap .
3. Enter a name for the group, and then tap  **>Add contact to group**.
4. Select the contacts you want to add, and then tap **Save**.
5. When your group is complete, tap **Save**.

---

### Sending a message or email to a group

---



You will be charged for each text message sent. For example, if you send a message to a group of five people, you will be charged for five messages.

1. On the Groups tab, tap the group you want to send a message or email to.
2. Go to the Group action tab.
3. Choose if you want to send a group message or group email.

---

## Editing a group

---

1. On the Groups tab, press and hold the group, and then tap **Edit group**.
2. You can:
  - Change the group name. You can only change the name for groups that you have created.
  - Add more contacts to the group. Tap **:** > **Add contact to group**.
  - Select the contacts you want to remove from the group.
3. Tap **Save**.

---

## Removing contact groups

---

1. On the Groups tab, tap **:** > **Edit groups**.
2. Select the contact groups you want to remove.
3. Tap **Save**.



## Private contacts

If you don't want to show a contact's name and photo on the lock screen when you have an incoming call, add the contact to your private contacts list.


---

### Adding a contact to the private contacts list

---



Contacts must have a phone number before they can be added to the private contacts list.




1. From the Home screen, tap , and then find and tap **People**.
2. On the People tab, press and hold the contact, and then tap **Add to private contacts**.

To view your private contacts list, on the People tab, tap  > **Manage contacts** > **Private contacts**.

---

### Organizing your private contacts



---


1. On the People tab, tap  > **Manage contacts** > **Private contacts**.
2. To add contacts to the private contacts list, tap , select the contacts you want to add, and then tap **Save**.
3. To remove private contacts from the list, tap  > **Remove private contact**, select the contacts you want to remove, and then tap **Remove**.


# Email

## Checking your mail

The Mail app is where you read, send, and organize email messages from one or more email accounts that you've set up on your phone.

1. From the Home screen, tap , and then find and tap Mail. The inbox of one of your email accounts appears.
2. Do any of the following:
  - Tap an email message to read.
  - To display email messages in another mail folder, tap  > **Folder**, and then tap the folder you want to view.

- To switch between email accounts or view email messages from all your accounts, tap .

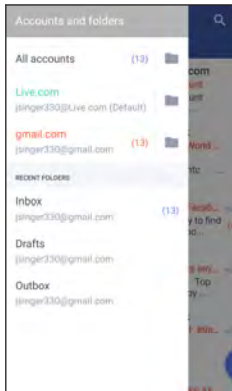


- To change an email account's settings, select the account first and then tap  > **Settings**.


---

## Organizing your inbox



---

Do you have a big pile of email messages in your inbox? Organize your email messages into tabs and quickly find the messages you want.


1. Switch to the email account that you want to use.
2. In the inbox, tap  > **Edit tabs**.
3. Select the tabs you want to add to the inbox.




4. To arrange the tabs, drag , and then move the tab to its new location.
5. Tap **Done**.
6. Swipe to the added tab to check your email messages.

## Sending an email message


1. From the Home screen, tap , and then find and tap Mail.
2. Switch to the email account that you want to use.
3. Tap .
4. Fill in one or more recipients.



Want to loop in more recipients in a carbon copy (Cc) or blind carbon copy (Bcc) of the email message? Tap  > **Show Cc/Bcc**.

5. Enter the subject, and then compose your message.
6. Do any of the following:
  - Add an attachment. Tap  and then choose what you want to attach.
  - Set the priority for an important message. Tap  > **Set priority**.
7. Tap .



To save the email as draft and send it later, tap  > **Save**. Or press .

---

## Resuming a draft email message

---

1. In an email account inbox, tap **:** > **Folder** > **Drafts**.
2. Tap the message.
3. When you finish editing the message, tap **>**.

## Reading and replying to an email message

1. From the Home screen, tap **⋮**, and then find and tap Mail.
2. Switch to the email account you want to use.
3. In the email account inbox, tap the email message or conversation you want to read.



If you want to read a particular message inside an email conversation, tap **∨** to expand the conversation, and then tap the email message.

4. Tap **Reply** or **Reply All**.



Tap **:** for more actions for the email.

---

## Quickly replying to an email message

---

You can quickly respond to a new email message from the Home screen or lock screen.

1. When you receive a new email message notification, slide the Notifications panel down.

2. On the email preview, tap **Reply all**.

If you have several notifications and you don't see the email options, expand the email preview by sliding two fingers apart on the notification.

3. Compose your reply message and tap ➤.

## Managing email messages

The Mail app provides easy ways to sort, move, or delete your email messages.

---

### Sorting email messages

---

Customize how you sort your email messages.

In an email account inbox, tap ⓘ > **Sort**, and select from the sorting options.

---

### Moving email messages to another folder

---

1. Switch to the email account you want to use.
2. Select the email messages you want to move.



To select all, select one email message first, and then tap ⓘ > **Select all**.

3. Tap **Move to**, and then select a folder.

---

### Deleting email messages

---

1. Switch to the email account you want to use.

2. Select the email messages you want to delete.



To select all, select one email message first, and then tap **:** > **Select all**.

3. Tap **Delete**.

## Searching email messages

1. From the Home screen, tap **⋮**, and then find and tap Mail.
2. Tap **Q**.
3. If you want to narrow the scope for your search, tap **⚙**, check the search options, and then tap **OK**.
4. In the search box, enter the words you want to search for.
5. Tap a result to open the email message.

---

## Searching for emails from a contact

---

Do you remember the sender, but can't find a particular email from him or her?

1. Switch to the email account you want to use.
2. Press and hold an email message from a contact.
3. Tap **Show all mail from sender**. A list of email messages from that contact appears.


## Working with Exchange ActiveSync email

With your Microsoft Exchange ActiveSync account, you can flag important email messages or set your out of the office reply right on your phone.


---

### Flagging an email

---

1. From the Home screen, tap , and then find and tap Mail.
2. Switch to your Exchange ActiveSync account.
3. While viewing the inbox, tap the flag icon that appears beside an email message or conversation.




To flag an email message inside a conversation, tap  to expand the conversation, and then tap the flag icon of the email message.

---

### Setting your Out of the office status

---

1. Switch to your Exchange ActiveSync account.
2. Tap  > **Out of the office**.
3. Tap your current office status, and then select **Out of the office**.
4. Set the dates and times.
5. Enter the auto-reply message.
6. If you want a different auto-reply message for recipients outside your organization, tap the **Send replies to external senders** option, and then enter the auto-reply message in the box.





## 7. Tap **Save**.

### Adding an email account

Set up additional email accounts such as another Microsoft Exchange ActiveSync account or an account from a Web-based email service or email provider.



If you're adding a Microsoft Exchange ActiveSync or a POP3/IMAP email account, ask your network administrator or email service provider for additional email settings that you may need.

1. From the Home screen, tap , and then find and tap Mail.
2. Tap  > **Add account**.
3. Select an email account type from the list of email providers. Otherwise, tap **Other (POP3/IMAP)**.
4. Enter the email address and password for your email account, and then tap **Next**.



Some email accounts allow you to set the sync schedule.

5. Enter a name for your email account, and then tap **Finish setup**.

## What is Smart Sync?

Smart Sync automatically extends the sync time the longer the Mail app is inactive. Set your email account to Smart Sync when you don't need to check new email messages frequently. Smart Sync helps save battery power.



If you want to receive email messages as they arrive, select another **Peak time sync** and **Off-peak sync** schedule in the email account's **Sync, Send & Receive** settings.

## Other apps

### Using the Clock

Get more from the Clock app than just the regular date and time. Use your phone as a world clock to see the date and time in cities across the globe. You can also set alarms or track your time using the stopwatch or timer.

### Setting the date and time manually


1. From the Home screen, tap , and then find and tap Clock.
2. On the World Clock tab, tap  > **Set date & time**.
3. Clear **Automatic date & time** and **Automatic time zone**, and then set the time zone, date, and time as required.



To display military time, choose the **Use 24-hour format** option.

### Setting an alarm

You can set up one or more alarms.

1. From the Home screen, tap , and then find and tap Clock.
2. On the Alarms tab, select the check box of an alarm and then tap that alarm.




3. Under Set alarm, use the scroll wheels to set the alarm time.
4. If you want the alarm for multiple days, tap **Repeat**.
5. Tap **Done**.



- To turn off an alarm, clear the check box of that alarm.
- If you need to set more than three alarms, tap + .

## Checking Weather

Use the Weather app and widget to check the current weather and weather forecasts for the next few days. In addition to your current location, you can view weather forecasts for other cities around the globe.

1. From the Home screen, tap , and then find and tap Weather. You'll see the weather for different cities, including where you are.
2. Tap a city to view weather information.
3. Swipe to the Hourly and Forecast tabs to view the forecast in your selected location.
4. To check the weather in other cities, tap , and then select the city you want.
5. To add more cities, tap + and then enter the location.
6. To change the temperature scale, update schedule, and more, tap  > **Settings**.

Your settings in the Weather app also control the weather information that is shown in the Clock.

## Changing the city on the weather clock

Change the city on the weather clock directly from the widget.

1. On the weather clock widget, tap the name of the currently displayed city.
2. Tap **+**.
3. Enter the name of the city want to search for. As you type, suggestions will be listed on the screen.
4. Tap the city you want to add.
5. Tap the city to select it as the city to display on the weather clock.



If you are prompted to confirm your choice, tap **OK**.



## Turning on location services from the weather clock

If you forgot to turn on location services, you can easily do that from the weather clock widget.

1. On the weather clock widget, tap **Turn on location services to get weather > OK**.
2. If prompted, tap the switch on the Location title bar to turn on location services.


## Recording voice clips

Use Voice Recorder to capture information during lectures, interviews, or even to create your own audio log.

1. From the Home screen, tap , and then find and tap **Voice Recorder**.
2. Hold the microphone near the sound source.
3. Tap  to start recording a voice clip.




Voice Recorder can run in the background while you do other things on HTC Desire 555, except when you open other apps that also use audio functions.

4. Tap  to stop recording.

To play back the voice clip, tap .



To see your recorded voice clips, tap . Press and hold a voice clip to see options for sharing, setting it as a ringtone, and more.

## Listening to FM Radio

Listen to your favorite radio stations using the FM Radio app.



You need to connect a headset first to the audio jack of HTC Desire 555 to use FM Radio. FM Radio uses the stereo headset as the FM radio antenna.

1. From the Home screen, tap , and then find and tap **FM Radio**.

2. If this is your first time to open FM Radio, it will automatically scan for local FM stations. When it finishes scanning, scroll through the list and tap a station you want to listen to.
3. While you're listening to an FM station, you can:
  - Tap **▶▶** or **◀◀** to go to the next or previous station.
  - Drag the slider to tune in to a frequency on the FM band. To fine tune the radio frequency, tap **▶** or **◀**.
  - Tap **♥** to mark a radio station as a favorite. To see your other favorites and preset stations, tap **◀** .
4. To turn off FM Radio, tap **■** .  
To turn it back on while you're still in the app, tap **▶** .

## Google apps

Count on the suite of Google apps on HTC Desire 555 to help you get productive, surf the Internet, be entertained, and more.

### Gmail

Send and receive emails from your Google Accounts or from other email accounts. Gmail now also lets you add your Microsoft Exchange ActiveSync work email.

### Google Calendar

Schedule events, meetings, and appointments. Google Calendar™ syncs with your Google Account so your calendar events and reminders go with you.

## **Google Chrome**

Surf the Internet, search the Web, and bookmark your favorite websites.

## **Google Drive**

Store your photos, documents, and other files on Google Drive to access them on HTC Desire 555, computer, and other devices. In addition to the default storage that you get from Google Drive, you may be eligible to receive additional online storage for free. Sign in to your Google Account on HTC Desire 555—and not from your computer or other non-HTC phones—to claim this offer.

## **Google Maps**

Track your current location, view real-time traffic situations, and receive detailed directions to your destination.

It also provides a search tool where you can locate places of interest or an address on a map, or view locations at street level.

## **Google Play Music**

Create your own music library, play your favorite tracks, and purchase albums or songs.

## **YouTube**

Share your videos or check out the latest viral videos.




# Internet connections

## Turning the data connection on or off

Turning your data connection off saves battery life and money on data charges.



You need a 4G/LTE plan to use your operator's 4G/LTE network for voice calls and data services. Check with your operator for details.

1. From the Home screen, tap , and then find and tap **Settings**.
2. Tap the Mobile data **On/Off** switch to turn the data connection on and off.



If you don't have the data connection turned on and you're also not connected to a Wi-Fi network, you won't receive automatic updates to your email, social network accounts, and other synced information.

## Managing your data usage

If you're on a limited data allowance, it's important to keep track of the activities and apps that usually send and receive data, such as browsing the web, syncing online accounts, and sending email or sharing status updates.

Here are some other examples:

- Streaming web videos and music

- Playing online games
- Downloading apps, maps, and files
- Refreshing apps to update info and feeds
- Uploading and backing up your files to your online storage account
- Using HTC Desire 555 as a Wi-Fi hotspot
- Sharing your mobile data connection by USB tethering

To help you save on data usage, connect to a Wi-Fi network whenever possible and set your online accounts and emails to sync less frequently.

---

### Turning data roaming on or off

---

Connect to your mobile operator's partner networks and access data services when you're out of your mobile operator's coverage area.



Using data services while roaming may be costly. Check with your mobile operator for data roaming rates before you use data roaming.

1. From the Home screen, tap , and then find and tap **Settings**.
2. Tap **Mobile data**.
3. Select or clear the **Data roaming** option.

---

## Keeping track of your data usage

---

Monitor your data usage to help prevent going over your monthly data allowance.



Data usage measured by HTC Desire 555 may differ from, and be less than, your actual data usage.

1. From the Home screen, tap **⋮**, and then find and tap **Settings**.
2. Under Wireless & networks, tap **More > Data Manager**.
3. Select **Limit mobile data usage** and tap **OK** to automatically disable your data connection when you reach the set limit.
4. Drag the upper LIMIT line to set your monthly data limit.
5. Select **Alert me about data usage**, and then drag the lower ALERT line to set an alert before you reach your monthly data limit.
6. Tap **Reset data usage**, and then set the day of the month when your usage cycle resets. This date is usually the start of your monthly billing cycle.



If you're connecting HTC Desire 555 to another portable Wi-Fi hotspot, tap **⋮ > Mobile hotspots** to restrict background data from downloading that may incur extra data fees.

---

## Viewing the data usage of apps

---

1. From the Home screen, tap **⋮**, and then find and tap **Settings**.
2. Under Wireless & networks, tap **More > Data Manager**.

3. Scroll down the screen to see a list of apps and their data usage info.
4. Tap an app to see more details.

## Wi-Fi connection

To use Wi-Fi, you need access to a wireless access point or “hotspot”.




The availability and strength of a Wi-Fi signal varies depending on objects the Wi-Fi signal has to pass through (such as buildings or a wall between rooms).



---

### Turning Wi-Fi on or off

---

1. From the Home screen, tap , and then find and tap **Settings**.
2. Tap the Wi-Fi **On/Off** switch to turn Wi-Fi on or off.
3. Tap **Wi-Fi** to see a list of detected wireless networks.




- To manually scan for Wi-Fi networks, tap  > **Scan**.
- If the wireless network that you want is not listed, tap  > **Add network** to manually add it.

---

### Connecting to a Wi-Fi network

---

1. Turn Wi-Fi on, and check the list of detected Wi-Fi networks.  
See [Turning Wi-Fi on or off](#) on page 204.

2. Tap a Wi-Fi network you want to connect to.
3. If you selected a secured network, enter the network key or password.
4. Tap **Connect**. You'll see the Wi-Fi icon  in the status bar when connected.

---

## Connecting to a Wi-Fi network via WPS

---

If you're using a Wi-Fi router with Wi-Fi Protected Setup (WPS), you can connect HTC Desire 555 easily.

1. Turn Wi-Fi on, and check the list of detected Wi-Fi networks.  
See [Turning Wi-Fi on or off](#) on page 204.
2. Tap **: > WPS Push**, and then press the WPS button on your Wi-Fi router.



To use the Wi-Fi Protected Setup (WPS) PIN method, tap **: > WPS Pin Entry**.

## Connecting to VPN

Add virtual private networks (VPNs) so you can connect and access resources inside a local network, such as your corporate or home network.

Before you can connect HTC Desire 555 to your local network, you may be asked to:

- Install security certificates.
- Enter your login credentials.
- Download and install a required VPN app, if you're connecting to a secured enterprise network. Contact your network administrator for details.

Also, HTC Desire 555 must first establish a Wi-Fi or data connection before you can start a VPN connection.

---

## Adding a VPN connection

---



You must first set a lock screen PIN, password, or pattern before you can use credential storage and set up the VPN.

1. From the Home screen, tap **⋮**, and then find and tap **Settings**.
2. Under Wireless & networks, tap **More**.
3. Tap **VPN** > **:** > **Add VPN profile**.
4. Enter the VPN settings and set them up according to the security details your network administrator gave you.
5. Tap **Save**.

---

## Connecting to a VPN

---

1. From the Home screen, tap **⋮**, and then find and tap **Settings**.
2. Under Wireless & networks, tap **More**.
3. Tap **VPN**.
4. Tap the VPN that you want to connect to.
5. Enter your log in credentials, and then tap **Connect**. When you're connected, the VPN connected icon **🔒** appears in the notification area of the status bar.

To disconnect from a VPN connection, tap the VPN connection, and then tap **Disconnect**.

You can then open the web browser to access resources such as your corporate network intranet.

## Installing a digital certificate

Use client and Certificate Authority (CA) digital certificates to enable HTC Desire 555 to access VPN or secured Wi-Fi networks, and also to provide authentication to online secure servers. You can get a certificate from your system administrator or download it from sites that require authentication.



- You must set a lock screen PIN or password before installing a digital certificate.
- Some apps such as your browser or email client let you install certificates directly in the app. See the app's help for details.

1. Save the certificate file in the root folder on HTC Desire 555 or your storage card.
2. From the Home screen, tap **⋮** > **Settings** > **Security**.
3. Tap **Install from SD card**.
4. Browse to the certificate and select it.
5. Enter a name for the certificate and select how it will be used.
6. Tap **OK**.

## Using HTC Desire 555 as a Wi-Fi hotspot

Share your data connection with other devices by turning HTC Desire 555 into a Wi-Fi hotspot.



- Make sure the data connection is turned on.
- You must have an approved data plan associated with your account from your mobile service provider to use this service. Devices connected to your Wi-Fi hotspot use data from your subscribed data plan.

1. From the Home screen, tap **⋮**, and then find and tap **Settings**.
2. Under Wireless & Networks, tap **More**.
3. Tap **Mobile network sharing > Mobile Hotspot**.

The first time you turn on the Wi-Fi hotspot, you'll need to set it up.

4. Enter a hotspot name or use the default.
5. Enter a password or use the default.

The password is the key other people need to enter on their device so they can connect and use HTC Desire 555 as a wireless router.

6. To help make your Wi-Fi hotspot more secure, tap **⋮ > Advanced**.  
Choose from the available settings, and then press **<**.
7. Tap the Mobile Hotspot **On/Off** switch to turn it on.



HTC Desire 555 is ready to be used as a Wi-Fi hotspot when you see  on the status bar.




To help minimize security risks, use the default security settings and set a strong and unique password.

## Sharing your phone's Internet connection by USB tethering

No Internet connection available for your computer? No problem. Use the data connection of HTC Desire 555 to connect to the Internet.



- To make sure that the USB drivers for HTC Desire 555 are up-to-date, install the latest version of HTC Sync Manager on your computer.
- You may need to have USB tethering added to your data plan, and it may incur additional cost. Contact your mobile service provider for details.
- Make sure that mobile data is turned on.

1. Connect HTC Desire 555 to your computer using the provided USB cable.
2. From the Home screen, tap , and then find and tap **Settings**.
3. Under Wireless & networks, tap **Mobile network sharing** > **USB tethering**.

# Wireless sharing

## What is HTC Connect?

With HTC Connect, wirelessly stream music or video from your phone to your speakers or TV by just swiping up the screen with 3 fingers.

You can stream media to any of the following types of devices:

- Blackfire® compliant multi-room speakers
- Multi-room speakers that support the Qualcomm® AllPlay™ smart media platform
- DLNA® compatible speakers and TV
- Miracast™ compatible display devices
- Chromecast™ compatible display devices.
- Bluetooth speakers
- HTC certified consumer electronic devices or accessories that have the HTC Connect logo:




Some devices may need to be paired before you can share to them.

To see a list of supported devices or accessories, go to <https://connect.htc.com/certified-devices.html>. For more information about HTC Connect, see <https://connect.htc.com/index.html>.


## Using HTC Connect to share your media

Before you start, make sure you have set up your speakers, TV, or appliance to connect to your Wi-Fi network. Refer to its documentation on how to set it up.

1. Open and play any music or other media content that you want to share from your phone.
2. Swipe up with three fingers on the screen.

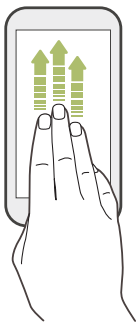

3. Choose the device you want to connect to.

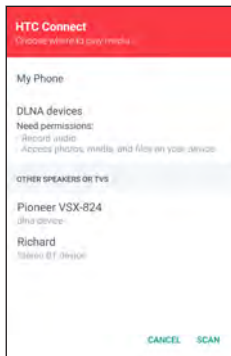

4. Once connected, use your phone to control the volume, pause or resume playback, and more.
5. To stop wireless media sharing and disconnect from the device, swipe down with three fingers on the screen.

## Streaming music to Blackfire compliant speakers



Play music simultaneously to multiple Blackfire compliant speakers from your phone.

Before you start, make sure your speakers are connected to your Wi-Fi network. Refer to the documentation that comes with your speakers to set up and connect them to your Wi-Fi network.

1. After connecting your speakers to your Wi-Fi network, open a music app on your phone.
2. Swipe up with three fingers on the screen.  
Your phone then turns Wi-Fi on automatically and scans for media devices on your Wi-Fi network. You'll see the available speakers listed.
3. Tap the speaker you want to connect to.
4. In the music app, start playing music. You'll then hear the music play from the speaker you've selected.
5. To switch between speakers or to group them, swipe up the screen again with three fingers.
  - To stream music to another speaker, just tap it.
  - To group speakers so that music plays through them at the same time, tap the **Group** button next to a speaker name, select the other speakers you want to group it with, and then tap **OK**.

## Renaming the speakers

---

You can rename your Blackfire compliant speakers in Settings.

1. Make sure the speakers are connected to your Wi-Fi network.

2. From the Home screen, tap **⋮** > **Settings** > **HTC Connect**.

Your phone then turns Wi-Fi on automatically and scans for media devices on your Wi-Fi network. You'll then see the available Blackfire speakers listed.

3. Tap **:** next to a speaker name.

4. Enter the new speaker name, and then tap **Done**.

## Streaming music to speakers powered by the Qualcomm AllPlay smart media platform

Before you start, make sure your speakers are connected to your Wi-Fi network. Refer to the documentation that comes with your speakers to set up and connect them to your Wi-Fi network.

1. After connecting your speakers to your Wi-Fi network, open a music app on your phone.

2. Swipe up with three fingers on the screen.


Your phone then turns Wi-Fi on automatically and scans for media devices on your Wi-Fi network. You'll then see the available speakers listed.

3. Tap the speaker you want to connect to.

4. In the music app that you're using, start playing music. You'll then hear the music play from the speaker you've selected.

5. To switch between speakers or to group them, swipe up the screen again with three fingers.
  - Just tap another speaker to stream music to it.
  - To group speakers so that music plays through them at the same time, tap the **Group** button next to a speaker name, select the other speakers you want to group it with, and then tap **OK**.

## Turning Bluetooth on or off

1. From the Home screen, tap , and then find and tap **Settings**.
2. Tap the Bluetooth **On/Off** switch to turn the Bluetooth connection on and off.
3. Tap **Bluetooth** to see a list of available devices.



Turn off Bluetooth when not in use to save battery power, or in places where using a wireless device is prohibited, such as on board an aircraft and in hospitals.

## Connecting a Bluetooth headset

You can listen to music over a Bluetooth A2DP stereo headset, or have hands-free conversations using a compatible Bluetooth headset.



Before you connect your headset, make it discoverable so HTC Desire 555 can find it. Refer to your headset manual for details.

1. Turn Bluetooth on and check the list of available devices.  
See [Turning Bluetooth on or off](#) on page 215.
2. If you don't see your headset listed, tap **Scan for devices** to refresh the list.
3. Tap the name of your headset in the Available Devices section. HTC Desire 555 pairs with the headset and the headset connection status is displayed in the Paired Devices section.
4. If prompted to enter a passcode, try 0000 or 1234, or consult the headset documentation to find the passcode.

When the Bluetooth headset is connected, you'll see  in the status bar.

---

## Reconnecting a Bluetooth headset

---

Normally, you can easily reconnect your headset by switching on Bluetooth on HTC Desire 555, and then turning on the headset.

However, you might have to connect manually if your headset has been used with another Bluetooth device.


1. Turn Bluetooth on and check the list of paired devices.  
See [Turning Bluetooth on or off](#) on page 215.



2. Tap the headset's name in the Paired Devices section.
3. If prompted to enter a passcode, try 0000 or 1234, or consult the headset documentation to find the passcode.

If you still cannot reconnect to the headset, follow the instructions in [Unpairing from a Bluetooth device](#) on page 217, and then follow the steps under [Connecting a Bluetooth headset](#) on page 216.

## Unpairing from a Bluetooth device

1. Turn Bluetooth on and check the list of paired devices.  
See [Turning Bluetooth on or off](#) on page 215.
2. In the Paired devices section, tap  next to the device to unpair.
3. Tap **Unpair**.

## Receiving files using Bluetooth

HTC Desire 555 lets you receive various files with Bluetooth including photos, contact info, and documents such as PDFs.



Refer to the device's documentation for instructions on sending information over Bluetooth.

1. Turn Bluetooth on.  
See [Turning Bluetooth on or off](#) on page 215.
2. On the sending device, send one or more files to HTC Desire 555.

3. If asked, accept the pairing request on HTC Desire 555 and on the sending device. You may also be prompted to enter the same passcode or confirm the auto-generated passcode on both devices.

You'll then get a Bluetooth authorization request.

4. Tap **Pair**.
5. When HTC Desire 555 receives a file transfer request notification, slide the Notifications panel down, tap the incoming file notification, and then tap **Accept**.
6. When a file is transferred, a notification is displayed. Slide the Notifications panel down, and then tap the relevant notification.
7. Tap the received file to view it.

# Settings and security

## HTC BoomSound profile

With the HTC BoomSound profile turned on, you'll enjoy enhanced audio quality when you plug in a headset. Listen to stronger bass, clearer vocals, and finer details in songs and videos.

To turn the HTC BoomSound profile on or off, go to **Settings**, and then tap the HTC BoomSound **On/Off** switch.

## Turning location services on or off

In order to find your location on HTC Desire 555, you need to enable location sources.

1. From the Home screen, tap **⋮** > **Settings** > **Location**.
2. Tap the **On/Off** switch to turn location services on and off.
3. Under Location sources, select the location mode you want. For example, for a better estimate of your location, choose **High accuracy**. To save battery power, choose **Battery saving**.




Turning off a location source (for example GPS) means no applications on HTC Desire 555 will collect your location data through that location source. However, third party applications may collect — and HTC Desire 555 may continue to provide — location data through other sources, including through Wi-Fi and signal triangulation.

## Do not disturb mode

Use Do not disturb mode to reject calls, and silence audible alerts and notifications, but still keep a data connection available.

1. With two fingers, swipe down from the top of the screen to open Quick Settings.



2. Tap . If necessary, swipe to the next screen.
3. Tap **Total silence**, **Alarms only**, or **Priority only** depending on if you want to allow exceptions. When **Priority only** is selected, you can receive messages or calls from contacts in your exceptions list.
4. Tap **Until you turn this off** if you want to turn off Do not disturb by yourself or tap  or  to set the number of hours before Do not disturb turns off automatically.
5. Tap **Done** to activate it.

The Do not disturb icon  will appear in the status bar.

You can also tap **More settings** and then select **Auto decline incoming calls** to decline incoming calls and have them sent to voicemail.



- When the screen is on, press VOLUME and then tap **End now** to turn off Do not disturb mode quickly.
- When you press VOLUME down until you reach silence mode, Do not disturb **Alarms only** mode is activated.

---

## Blocking visual disturbances

---

You can set Do not disturb mode to block visual disturbances such as pop up notifications.

1. From the Home screen, tap **⋮** > **Settings** > **Sound & notification**.
2. Tap **Do not disturb** > **Block visual disturbances**.
3. Tap the **On/Off** switches to choose whether to block visual disturbances when the screen is on and off.

---

## Allowing notifications and contacts to bypass Do not disturb mode

---

Add important contacts to an exceptions list so you can still receive their calls and messages even when Do not disturb mode is on.

1. From the Home screen, tap **⋮** > **Settings** > **Sound & notification**.
2. Tap **Do Not Disturb** > **Priority only allows**.
3. Tap the **On/Off** switch next to the items you wish to allow.
4. Tap **Messages from** or **Calls from** to select who can contact you.

5. Tap **Manage approved contacts**, and then tap **+** to add contacts to your exceptions list.

To remove contacts or numbers from the list, tap **:** **> Remove contacts**.

---

## Setting a Do not disturb schedule

---

Schedule Do not disturb to turn on automatically and how long will it last. For example, you can set it to turn on during a weekly meeting.

1. From the Home screen, tap **⋮** **> Settings > Sound & notification**.
2. Tap **Do Not Disturb > Automatic rules**.
3. Tap **Add rule**.
4. Select whether to base the rule on a time or an event, enter a name for the rule, and then tap **OK**.
5. Set the rule's parameters.

Rule	Settings
<b>Time rule</b>	<ul style="list-style-type: none"><li>▪ Set the days.</li><li>▪ Set the start and end times.</li><li>▪ Select a Do not disturb level.</li></ul> <p>You can also choose whether to allow the rule to stop at either the rule end time or by the next alarm you've set in the Clock app.</p>

Rule	Settings
<b>Event rule</b>	<ul style="list-style-type: none"><li>▪ Select a calendar you want to make the rule for.</li><li>▪ Set a condition for the type of reply.</li><li>▪ Select a Do not disturb level.</li></ul>



You can turn an automatic rule on or off by tapping the **On/Off** switch when viewing the details of the rule.

## Airplane mode

When you enable Airplane (Flight) mode, all wireless radios on HTC Desire 555 are turned off, including the call function, data services, Bluetooth, and Wi-Fi.

When you disable Airplane mode, the call function is turned back on and the previous state of Bluetooth and Wi-Fi is restored.



- You can manually turn Bluetooth and Wi-Fi back on after enabling Airplane mode.
- If USB tethering is turned on, enabling Airplane mode turns it off. You need to manually turn USB tethering on after you disable Airplane mode.

Do any of the following to turn Airplane mode on or off:


- Press and hold **POWER**, and then tap **Airplane mode**.
- With two fingers, swipe down from the status bar to open the Quick Settings panel. Tap the **Airplane mode** tile to turn airplane mode on or off.

When enabled, the Airplane mode icon  is displayed in the status bar.

## Automatic screen rotation



Automatic rotation is not supported in all applications.


1. From the Home screen, tap  > **Settings** > **Display & gestures** or **Display, gestures & buttons**.
2. Select or clear the **Auto rotate screen** option to turn it on or off.

## Setting when to turn off the screen

After a period of inactivity, the screen turns off to conserve battery power. You can set the idle time before the screen turns off.

1. From the Home screen, tap  > **Settings** > **Display & gestures** or **Display, gestures & buttons**.
2. Tap **Screen timeout**, and then tap the time before the screen turns off.

## Screen brightness


1. From the Home screen, tap  > **Settings** > **Display & gestures** or **Display, gestures & buttons**.
2. Tap **Brightness level**.
3. With the **Automatic brightness** option selected, drag the slider to set the maximum brightness level. This sets a limit on how bright the screen will be when **Automatic brightness** is selected.



4. To set the brightness manually, clear the **Automatic brightness** option, and then drag the brightness slider to the left to decrease or to the right to increase the screen brightness.


## Night mode

Enabling Night mode in the evening shifts the display colors from blue to warmer colors, helping to reduce eyestrain.

1. From the Home screen, tap  > **Settings** > **Display & gestures** or **Display, gestures & buttons**.
2. Tap **Night mode**, and then tap the **On/Off** switch to turn it on.
3. Drag the slider to adjust the color temperature. Dragging the slider to **Warmer** filters out more blue light.
4. Tap **Enable Night mode automatically** to set a schedule when Night mode will be turned on.

## Adjusting the display size

Resize items and fonts on the screen to make them easier to see.

1. From the Home screen, tap  > **Settings** > **Display & gestures** or **Display, gestures & buttons**.
2. Tap **Display size**.
3. Drag the sliders to increase or decrease the size of fonts or the items on the screen.

## Touch sounds and vibration

Some people like the sound or vibration feedback they get when touching the screen, and some don't. You can turn on or off various types of touch sounds and vibration on HTC Desire 555.

- Touch tones when tapping the phone dial pad
- Touch sounds when tapping onscreen items
- Screen lock sounds
- Pull-to-refresh sounds
- Vibration when pressing hardware buttons
- Touch sound and vibration when tapping the keyboard

---

### Turning touch sounds and vibration on and off

---

1. From the Home screen, tap **⋮** > **Settings** > **Sound & notification**.
2. Under System, select the option you want to turn on or off.

---

### Turning off keyboard sounds and vibration

---

1. From the Home screen, tap **⋮**, and then find and tap **Settings**.
2. Tap **Language & keyboard** > **Virtual keyboard** > **TouchPal - HTC Sense Version** > **General settings**.
3. On the General settings screen, do one of the following:
  - Tap **Keypress sound**, clear **System Volume**, and then drag the slider all the way to the left to turn off keyboard sounds.

- Tap **Keypress vibration**, clear **System default**, and then drag the slider all the way to the left to turn off keyboard vibration.
4. Tap **OK**.

## Changing the display language

Changing the language adjusts the keyboard layout, date and time formatting, and more.

You can choose several languages and specific dialects so that apps with localized content will display correctly.

1. From the Home screen, tap **⋮** > **Settings** > **Language & keyboard**.
2. Tap **Languages**. The first language in the list is the default display language.
3. Tap **Add a language** to add another language to the list, and then select the regional variant of the language.
4. To change the display language, press and hold **=** next to the language you want, and drag it to the beginning of the list.
5. To remove languages from the list, tap **⋮** > **Remove** and then select the languages you want to remove.

## Assigning a PIN to a nano SIM card

You can help to protect the nano SIM card by assigning a Personal Identification Number (PIN).



Make sure you have the default PIN provided by your mobile operator before continuing.

1. From the Home screen, tap **⋮** > **Settings** > **Security**.
2. Tap **Set up SIM card lock**.
3. Choose to lock the card, enter the default PIN of the card, and then tap **OK**.
4. To change the card PIN, tap **Change SIM PIN**.

---

## Restoring a nano SIM card that has been locked out

---

If you enter the wrong PIN more times than the maximum number of attempts allowed, the card will become “PUK-locked.”

You need a Pin Unlock Key (PUK) code to restore access to HTC Desire 555. Contact your mobile operator for this code.

1. On the Phone dialer screen, enter the PUK code, and then tap **Next**.
2. Enter the new PIN you want to use, and then tap **Next**.
3. Enter the new PIN again, and then tap **OK**.

## Accessibility features

HTC Desire 555 comes with features and settings that allow easy access and use of apps and functions.

### Improve screen readability

If you have low vision, take advantage of these features to help improve screen readability.

- Increase the font and display size, use color inversion and color correction, or enable high-contrast text using the Accessibility settings. You can also enable HTC Desire 555 to speak the passwords you enter. See [Accessibility settings](#) on page 230.
- Turn magnification gestures on. See [Turning Magnification gestures on or off](#) on page 231.
- Turn on automatic screen rotation. See [Automatic screen rotation](#) on page 224.

### Enhance the audio

If you're hard of hearing, these audio-related features make listening to HTC Desire 555 clearer and more comprehensible.

- Use TalkBack to hear audible feedback on what you do on your phone. See [Navigating HTC Desire 555 with TalkBack](#) on page 231.
- When using headphones, you can control the sound balance or enable mono audio when using a single headphone. See [Accessibility settings](#) on page 230.

## Enable hearing aids and sidetone

If you wear a hearing aid or are hearing impaired, you can enable these options in **Settings > Call**:

- Select **Hearing aids** to enable hearing aid compatibility that amplifies your phone's in-call volume
- Select **Sidetone** to receive controlled feedback through the phone's earpiece, helping you modulate your voice so that it's neither too loud nor too soft.

## Use your voice

You can use your voice to perform an action on HTC Desire 555.

- Call a contact using your voice. See [Making a call with your voice](#) on page 155.
- Search for information on the Web using Google Voice Search.
- Enter text with your voice. See [Entering text by speaking](#) on page 65.

## Accessibility settings

Use these settings to turn accessibility functions or services on or off. When you've downloaded and installed an accessibility tool, such as a screen reader that provides voice feedback, you can also control them using these settings.

1. From the Home screen, tap **⋮ > Settings > Accessibility**.
2. Tap or select the settings you want.

## Turning Magnification gestures on or off

If you have low vision or would like to get a closer view of what's on the screen, use finger gestures to magnify portions of your phone's screen.

1. From the Home screen, tap **⋮** > **Settings** > **Accessibility**.
2. Tap **Magnification gestures** and read the instructions on how to use it.
3. Tap the **On/Off** switch to turn Magnification gestures on or off.

## Navigating HTC Desire 555 with TalkBack

Use TalkBack if you need to navigate HTC Desire 555 by spoken feedback. When you touch the screen, HTC Desire 555 vibrates and gives you an audible response so you know what you are touching.



Not all languages are supported.

---

## Turning TalkBack on

---

1. From the Home screen, tap **⋮** > **Settings** > **Accessibility**.
2. Tap **TalkBack**, and then tap the **On/Off** switch.
3. Read the TalkBack disclaimer and then tap **OK**.

A short tutorial explaining how to use TalkBack will begin playing after you turn on TalkBack.



TalkBack works best if you turn off automatic screen rotation.

---

## Turning Explore by touch on or off

---

Explore by touch allows HTC Desire 555 to respond to shortcut gestures and screen touches with audible feedback. Explore by touch is enabled when you turn on TalkBack.

1. From the Home screen, tap **⋮** > **Settings** > **Accessibility**.
2. Tap **TalkBack**, and then tap **⋮** > **Settings**.
3. Under Touch exploration, tap the **On/Off** switch next to **Explore by touch** to turn the feature on or off.

When Explore by touch is disabled, HTC Desire 555 will no longer respond to shortcut gestures or speak items when you touch the screen.



---

## Using TalkBack gestures

---

When TalkBack and Explore by touch are turned on, the regular touch gestures are replaced by the TalkBack gestures.



Media gestures such as 3-finger swiping may not be available when TalkBack gestures are enabled.

Do one of the following:

To	Do this
<b>Open an item</b>	<ol style="list-style-type: none"><li>1. Drag your finger on the screen to find and select the item.</li><li>2. Double-tap anywhere on the screen to open the item.</li></ol>
<b>Move an item</b>	<ol style="list-style-type: none"><li>1. Drag your finger on the screen to find the item.</li><li>2. Double-tap anywhere on the screen, but don't lift your finger on the second tap.</li><li>3. Drag the item to a new spot and then lift your finger.</li></ol>
<b>Scroll through a screen</b>	Use two fingers to swipe up, down, left or right.
<b>Unlock the lock screen</b>	Use two fingers to swipe up from the bottom of the screen.
<b>Open the Notifications panel</b>	Use two fingers to swipe down from the top of the screen.

## Assigning TalkBack shortcuts

TalkBack has customizable gestures that can be used to open the Notifications panel, view recent apps, access TalkBack controls, and more.



The steps below are described using the regular gestures. Use the corresponding TalkBack gestures if you already have TalkBack turned on.

1. From the Home screen, tap **⋮** > **Settings** > **Accessibility**.
2. Tap **TalkBack**, and then tap **⋮** > **Settings** > **Manage gestures**.
3. Tap any of the shortcut gestures, and then select an action.

---

## Using TalkBack context menus

---

TalkBack has a global context menu for controlling continuous reading and TalkBack controls and a local context menu for controlling the selected text or item on the screen. These menus can be accessed using TalkBack shortcut gestures.

1. Turn TalkBack on.
2. Do one of the following:
  - To open the global context menu, use one finger to swipe down and right in one continuous movement.
  - To open the local context menu, use one finger to swipe up and right in one continuous movement.



If you already changed the TalkBack shortcut gestures, check your TalkBack settings for the appropriate gesture.

3. Double-tap an item on the menu to select.

---

## Changing the TalkBack reading speed and pitch

---



The steps below are described using the regular gestures. Use the corresponding TalkBack gestures if you already have TalkBack turned on.

1. From the Home screen, tap **⋮** > **Settings** > **Accessibility**.
2. Tap **Text-to-speech output**.
3. Drag the **Speech rate** and **Pitch** sliders to the right to increase or left to decrease.
4. Tap **Listen to an example** to hear the speech rate and pitch you've set.




Tap **Reset speech rate** or **Reset speech pitch** to revert the settings to their default values.



---

## TalkBack language settings

---

1. From the Home screen, tap **⋮** > **Settings** > **Accessibility**.
2. Tap **Text-to-speech output**.

3. Tap  next to **Google Text-to-speech Engine**, and then do any of the following:

To	Do this
Select a different language	Tap <b>Language</b> .
Install a voice	Tap <b>Install voice data</b> , and then tap the language. Tap  next to the voice data you want to install. When installation is completed, press  twice and tap <b>Language</b> .



Not all languages are supported.


## Teletypewriter (TTY) mode

TTY mode allows people who have hearing or speech impediments to communicate by telephone. HTC Desire 555 is compatible with select TTY phones. HTC Desire 555 and the TTY phone connect using a special cable that may come with the TTY phone. Contact your TTY phone manufacturer to see if the phone supports digital wireless transmission or to purchase the connector cable if one was not provided with the TTY phone.

---

### Turning TTY mode on

---

1. Connect the TTY phone cable plug to the HTC Desire 555 headset jack.
2. From the Home screen, tap , and then tap **Settings** > **Call**.

### 3. Tap **TTY mode**.



When turned on, TTY mode may impair the audio quality of non-TTY phones connected to the headset jack.

## Trademarks and copyrights

©2017 HTC Corporation. All Rights Reserved.

HTC, the HTC logo, HTC Desire, HTC BlinkFeed, HTC Connect, HTC Sense, VideoPic, and all other HTC product and feature names are trademarks or registered trademarks in the U.S. and/or other countries of HTC Corporation and its affiliates.

© 2017 Cricket Wireless LLC. All rights reserved. Cricket and the Cricket logo are registered trademarks under license to Cricket Wireless LLC.

Your phone is designed to make it easy for you to access a wide variety of content. For your protection, we want you to be aware that some applications that you enable may involve the location of your phone being shared. For applications available through Cricket, we offer privacy controls that let you decide how an application may use the location of your phone and other phones on your account. However, the Cricket privacy tools do not apply to applications available outside of Cricket. Please review the terms and conditions and the associated privacy policy for each location-based service to learn how location information will be used and protected. In addition, your Cricket phone may be used to access the internet and to download, and/or purchase goods, applications, and services from Cricket or elsewhere from third parties. Cricket provides tools for you to control access to the Internet and certain Internet content. These controls may not be available for certain devices which bypass Cricket controls.

Google, Android, Google Chrome, Google Drive, Google Maps, Google Now, Google Play, Google Voice Search, Google Wallet, and YouTube are trademarks of Google Inc.

Microsoft, Windows, ActiveSync, PowerPoint, Outlook.com, and Windows Media are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.

Wi-Fi® and Miracast are registered trademarks of the Wireless Fidelity Alliance, Inc. LTE is a trademark of European Telecommunications Standards Institute (ETSI).

DLNA is a trademark or registered trademark of Digital Living Network Alliance. All rights reserved. Unauthorized use is strictly prohibited.

Qualcomm is a trademark of Qualcomm Incorporated, registered in the United States, and other countries and used with permission. AllPlay is a trademark of Qualcomm Connected Experiences, Inc., and used with permission.

BLACKFIRE RESEARCH™ is a Registered Trademark (No. 3,898,359) of BLACKFIRE RESEARCH CORP.

AirPlay, Apple TV, iCloud, iPhone, iTunes, Mac, and Mac OS are trademarks of Apple Inc. registered in the U.S. and other countries.

microSD is a trademark of SD-3C LLC.

All other trademarks and service marks mentioned herein, including company names, product names, service names and logos, are the property of their respective owners and their use herein does not indicate an affiliation with, association with, or endorsement of or by HTC Corporation. Not all marks listed necessarily appear in this User Guide.

The HTC Sync Manager software can be used with materials that you own or are lawfully authorized to use and/or duplicate. Unauthorized use and/or duplication of copyrighted material may be a violation of copyright law in the United States and/or other countries/regions. Violation of U.S. and international copyright laws may subject you to significant civil and/or criminal penalties. HTC Corporation shall not be held responsible for any damages or losses (direct or indirect) that you may incur as a result of using this software.

Screen images contained herein are simulated. HTC shall not be liable for technical or editorial errors or omissions contained herein, nor for incidental or consequential damages resulting from furnishing this material. The information is provided “as is” without warranty of any kind and is subject to change without notice. HTC also

reserves the right to revise the content of this document at any time without prior notice.

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording or storing in a retrieval system, or translated into any language in any form without prior written permission of HTC.



# Index

## A

### Accounts

- syncing 133

### Airplane mode 223

### Alarms

- setting 195

### Apps

- arranging 84
- grouping into a folder 82, 84
- hiding or unhiding 84
- icons on Home screen 81
- installing 46
- installing from Google Play 44
- installing from the web 46
- on Home screen 81
- restoring 45
- uninstalling 47
- updating 42

### Auto Selfie 98

## B

### Backup

- about 135
- HTC Sync Manager 142
- options 135
- restoring backed up apps 45

### Battery

- charging 31

- checking usage 122
- saving battery power 118

### BlinkFeed

- See HTC BlinkFeed

### Bluetooth

- connecting a Bluetooth headset 216
- receiving information 217

### Boost+

- about 113
- clearing junk files 114
- Game Battery Booster 115
- Smart Boost 113

### Burst mode 96

## C

### Call history 161

### Camera

- basics 88, 92, 95
- capture modes 90
- continuous shooting 96
- flash 89
- HDR 97
- recording a video 95
- selfie 98–100
- standby 88
- sweep panorama 101
- taking a photo 92
- taking photo while recording 95
- using volume buttons as controls 89
- video resolution 95
- zooming 89

## Capture modes

- switching to 90

## Capture screen 60

## Change phone language 227

## Clock 195

- alarm 195
- setting date and time 195

## Conference call 161

## Contacts

- adding 176
- contact link suggestions 180
- copying 36, 179, 180
- editing 178
- filtering 175
- groups 183
- importing 36, 179
- merging contact information 180
- sending contact information 181
- transferring 36, 179

## Continuous shooting 96

## Copy

- files 129

## Copying

- text 64

---

**D**


---

## Data connection

- data roaming 202
- sharing 209
- turning on or off 201
- usage 201

## Data transferiPhone

- from iCloud 35

## Data transfer

- from Android phone 34
- transferring contacts 36

## Display

- changing the time before the screen turns off 224
- screen brightness 224
- screen rotation 224
- Sleep mode 49

## display size 225

---

**E**


---

## Email

See Mail

## Exchange ActiveSync

- flagging an email 192
- Out of office 192

## expanded storage 124

---

**F**


---

## Face unlock 39

## Factory reset 147

## Files

- copying 129

## Finger gestures 53

## Firmware

See Software update

## FM Radio 198

- using 198

## Folder

- grouping apps 82
- removing items 82, 85

## FOTA

See Software update

## Freestyle layout 75

## G

- Game Battery Booster 115
- Gestures
  - motion gestures 51
  - touch gestures 53
- Gmail 199
- Google apps 199
- Google Chrome
  - Google Drive 199
- Google Maps 199
- Google Play
  - installing apps 44
  - refund 47
- Google Voice Search 112
- GPS (Global Positioning System)
  - See Location settings
- Group messaging 167

## H

- Hands free 216
- Hard reset
  - See Factory reset
- HDR 97
- Headphones
  - See Bluetooth
- hearing impaired
  - hearing aids 230
  - sidetone 230
- Home screen
  - adding or removing widget panel 77
  - apps 81
  - arranging widget panels 77
  - changing your main Home screen 78
  - classic layout 75

- feeds 148
- folder 82
- freestyle layout 75
- launch bar 79
- shortcuts 81
- wallpaper 76
- widget panel 48
- widgets 80
- Hotspot
  - See Wireless router
- HTC BlinkFeed
  - about 148
  - deleting items 154
  - posting to social networks 154
  - selecting feeds 151
  - setting up custom topics 152
  - showing social network and app feeds 152
  - turning on or off 149
- HTC Clock 195
  - setting an alarm 195
- HTC Connect
  - about 210
  - streaming music to speakers 213, 214
  - streaming music, videos, or photos to media devices 211
- HTC Sense version 41
- HTC Sync Manager 142

## I

- Idle screen
  - See Lock screen
- Internet connection
  - VPN 205
  - Wi-Fi 204
  - wireless router 208

## K

### Keyboard

- entering text 65
- entering text by speaking 65
- speech recognition 65

## L

### Language

- system language 227

### Live Makeup 98

### Location settings 219

### Lock screen

- answering a call 158
- dismissing an alarm 49
- locking apps 117
- rejecting a call 158
- unlocking 49

### Low battery 118

### Low storage 130

## M

### Mail

- attachments 188
- carbon copy, blind copy (cc, bcc) 188
- deleting 190
- draft 188
- replying 189
- searching 191
- sending 188
- sorting 190

### Mail folders

- moving email messages 190

### Master reset

- See Factory reset

### Media streaming

- See HTC Connect

### Messages

- block box 171
- deleting a conversation 172
- draft message 165, 166, 168
- forwarding 169
- group SMS 167
- locking 172
- replying 168
- secure box 170
- sending 165, 166

### microSD card 29

### MMS

- See Multimedia message

### Multimedia message

- attachment 166
- group MMS 167
- sending 166

### Google PlayMusic 199

### Music

- BoomSound profile 219
- transferring from iPhone 145

## N

### Night mode 225

### Notifications

- panel 62

## O

### Online accounts

- adding accounts 133

- removing accounts 134
- syncing manually 133
- what can you sync with 133

## P

Pair a Bluetooth headset 216

Phone calls

- blocking a call 163
- call history 161
- calling 155
- conference call 161
- emergency call 159
- extension number 156
- missed calls 156
- muting the microphone 160
- putting a call on hold 159
- receiving calls 158
- Smart Dial 155
- speakerphone 160
- speed dial 157

Phone information 41

Phone settings

See Settings

Phone updates 40

Photos

- transferring from computer 37
- transferring from iPhone 145

Power

- charging the battery 31
- checking battery usage 122
- saving power 118
- sleep mode 49

Print screen

See Capture screen

PUK (PIN Unblock Key) 228

## Q

Quick settings 59

## R

Radio

See FM Radio

Recording your voice 198

Reset 61, 145, 147

Router

See Wireless router

## S

Screen 49, 60, 224

- adjusting brightness 224
- capture 60
- changing the time before the screen turns off 224
- idle screen 49
- rotation 224
- Sleep mode settings 224

Screen lock 38

Screen shot

See Capture screen

SD card 29

Search

- searching phone and Web 111
- voice search 112

Security

- protecting phone with screen lock 38
- security certificates 205

self-timer 100

## selfie

- Auto Selfie 98
- Live Makeup 98
- self-timer 100
- Voice Selfie 99

## Settings

- About 41
- Accessibility 230
- display language 227
- Storage 124

## Setup

- contacts from old phone 36
- first-time setup 33
- photos, music, videos from old phone 37
- restoring backup from cloud storage 141

## Sharing

- text 64

## sidetone 230

## Sleep mode 49

## Smart Boost 113

## Smart network sharing 209

## SMS

See Messages

## Soft reset 61, 145

## Software update 40

## Sound

- ringtone, notifications, and alarm 70
- switching profiles 163

## Speakerphone 160

## Speed dial 157

## Storage 114, 116, 124

- clearing junk files 114
- uninstalling apps 116

## Sweep panorama 101

## Sync

- HTC Sync Manager 142

---

**T**


---

## Tethering

See USB Tethering

## Text message 165

## Themes 70–74

- creating 72
- deleting 74
- downloading 71
- finding 73
- mix and match 73

---

**U**


---

## Upgrade

See Software update

## USB Tethering 209

---

**V**


---

## VideoPic 95

## Videos

- recording 95
- taking photo while recording 95
- transferring from computer 37

## Voice input 65

## Voice Recorder 198

## Voice search 112

## Voice Selfie 99

## VPN 205, 206

- adding a connection 206
- connecting 206

---

## W

---

Waking up phone

- through power button 49

Wallpaper

- changing 76

Weather

- checking weather 196

Wi-Fi 204, 205

- connecting via WPS 205
- turning on 204

Widgets

- adding 80
- changing settings 80
- removing 83
- resizing 81

Wireless media sharing

See HTC Connect

Wireless router 208

---

## Y

---

YouTube 199