

HUAWEI MatePad Pro

User Guide



HUAWEI

Contents

Essentials

Basic Gestures	1
System Navigation	1
Tablet Clone	2
Lock and Unlock Your Screen	3
Get Familiar with the Home Screen	4
Notification and Status Icons	4
Shortcut Switches	5
Quickly Access Frequently Used App Features	6
Home Screen Widgets	6
Set Your Wallpaper	7
Screenshots & Screen Recording	7
View and Clear Notifications	8
Adjust Sound Settings	9
Enter Text	10
Multi-Window	11
Power On and Off or Restart Your Device	14
Charging	14

Smart Features

AI Voice	18
AI Lens	21
Easy Projection	23
Multi-screen Collaboration Between Your Tablet and Phone	24
Huawei Share	26

Camera and Gallery

Launch Camera	29
Take Photos	29
Take Panoramic Photos	29
Light Painting	30
Take HDR Photos	31
Moving Pictures	31
Add Stickers to Photos	32
Documents Mode	32
Record Videos	33
Slow-Mo Recording	34
Time-Lapse Photography	34
Filters	34
Adjust Camera Settings	35
Manage Gallery	35

Apps

Apps	38
Contacts	39
Phone	42
Messaging	48
Calendar	50
Clock	51
Notepad	53
Recorder	56
Email	57
Calculator	60
Torch	61
App Twin	61
Tablet Manager	61
Tablet Clone	64

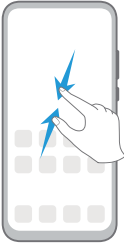
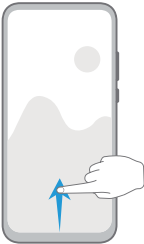
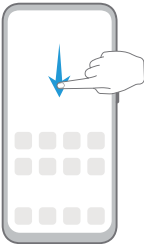
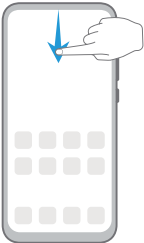
Settings

Search for Items in Settings	66
Wi-Fi	66
Bluetooth	67
Mobile Data	68
More Connections	70
Home Screen & Wallpaper	74
Display & Brightness	76
Sounds & Vibration	79
Notifications	81
Biometrics & Password	82
Apps	83
Battery	84
Storage	85
Security	86
Privacy	88
Accessibility Features	92
Users & Accounts	93
System & Updates	94
About Tablet	97

Essentials

Basic Gestures

More Gestures



	Access Home screen editing mode Pinch two fingers together on the home screen.
	Display the shortcut panel on the lock screen Swipe up from the bottom of the lock screen.
	Display the search bar Swipe down on the home screen.
	Open the notification panel Swipe down from the status bar.


System Navigation

Use Three-Key Navigation


Go to **Settings > System & updates > System navigation**, and select **Three-key navigation**.

You can then:

- Touch  to return to the previous menu or exit the current app. You can also use this key to close the onscreen keyboard.
- Touch  to return to the home screen.

- Touch  to access the recent tasks screen.

You can touch **Settings** to configure more settings.

- Select a navigation key combination.
- Enable **Hide navigation keys** to allow you to hide the navigation bar when not in use.
- Touch  (if available in the selected navigation key combination) to open the notification panel.

Use the Navigation Dock to Operate the Device

Go to **Settings > System & updates > System navigation > More**, and enable **Navigation Dock**.

After the Navigation dock button appears, you can:

- Drag the button to your desired position.
- Touch the button to go back.
- Touch and hold the button, then release it to go back to the home screen.
- Touch and hold the button, then swipe left or right to view recent tasks.

 The feature availability varies by device.


Tablet Clone

Use Tablet Clone to Move Data to Your New Device

Tablet Clone lets you quickly and seamlessly move all the basic data (including contacts, calendar, images, and videos) from your old device to your new device.


Migrate Data from an Android Device

- 1 On your new device, open the **Tablet Clone** app. Alternatively, go to **Settings > System & updates > Tablet Clone**, touch **This is the new device**, then touch **Huawei** or **Other Android**.
- 2 Follow the onscreen instructions to download and install **Tablet Clone** on your old device.
- 3 On your old device, open the **Tablet Clone** app and touch **This is the old device**. Follow the onscreen instructions to connect your old device with your new device by scanning a code or connecting manually.
- 4 On your old device, select the data you want to clone, then touch **Transfer** to start cloning.

 **Tablet Clone** is only available on devices running Android 7.0 or later.

Migrate Data from an iPhone or iPad

- 1 On your new device, open the **Tablet Clone** app. Alternatively, go to **Settings > System & updates > Tablet Clone**, touch **This is the new device**, then touch **iPhone/iPad**.

- 2 Follow the onscreen instructions to download and install **Tablet Clone** on your old device.
 - 3 On your old device, open the **Tablet Clone** app and touch **This is the old device**. Follow the onscreen instructions to connect your old device with your new device by scanning a code or connecting manually.
 - 4 On your old device, select the data you want to clone, then follow the onscreen instructions to complete the data cloning.
-  **Tablet Clone** is only available on devices running iOS 8.0 or later.

Lock and Unlock Your Screen

Lock and Unlock Your Screen

Lock the Screen

If your tablet remains inactive for a period of time, it will automatically lock the screen and enter sleep mode to save power.

Alternative, you can manually lock the screen in either of the following ways:

- Press the Power button.
- On the home screen, pinch two fingers together to enter screen editing mode. Touch **Widgets**, then drag the **Screen Lock** icon to the home screen. You can now touch the **Screen Lock** icon to lock the screen.

Turn On the Screen

You can turn on the screen in any of the following ways:

- Press the Power button.
- Go to **Settings > Accessibility features > Shortcuts & gestures > Wake screen**, and enable **Raise to wake** and/or **Double-tap to wake**. Then use the corresponding feature to turn on the screen.

Unlock the Screen with Password

Once the screen is turned on, swipe up from the middle of the screen to display the password input panel. Then, enter your lock screen password.

Use Face Unlock

Turn on the screen and align it with your face. Your device will unlock once your face is recognised.

Display Your Signature on the Lock Screen

Go to **Settings > Home screen & wallpaper**, touch **Lock screen signature**, then type text to display on the lock screen.

To remove the signature, touch **Lock screen signature** and delete the text.

Get Familiar with the Home Screen


Get Familiar with the Home Screen



























From the home screen, you can:
























- Check the status of your device and notifications from the status bar at the top of the screen.
- Swipe left or right to view apps and widgets displayed on the home screen.

Notification and Status Icons

Notification and Status Icons

-  Network status icons may vary according to your region or network service provider. Supported functions vary according to the device model. Some of the following icons may not be applicable to your device.

	5G network connected		4G network connected
	3G network connected		2G network connected
	Full signal strength		Roaming
	Data saver enabled		No SIM card detected
	Hotspot enabled		Hotspot connected
	Wi-Fi connected		Hotspot disconnected
	Switching network via Wi-Fi+		Alarm set
	Battery empty		Low battery
	Charging		Quick charging
	Super charging		Super wireless charging
	Quick wireless charging		Regular wireless charging
	Power saving mode enabled		Digital balance enabled
	Bluetooth enabled		Bluetooth device battery


	Bluetooth device connected		VPN connected
	Driving mode		Projection device connected
	Location service enabled		Eye comfort mode enabled
	Headset connected		Headset with a microphone connected
	Calling		VoLTE enabled
	Missed call		Unread SMS
	Silence		Vibration
	NFC enabled		Do Not Disturb mode enabled
	Data syncing		Data sync failed
	Performance mode enabled		New email
	Event reminder		More notifications
	Airplane mode enabled		

Shortcut Switches

Use Shortcut Switches

Turn on a Shortcut Switch

Swipe down from the status bar to open the notification panel, then swipe down on it again to show all shortcuts.

- Touch a shortcut switch to enable or disable the corresponding feature.
- Touch and hold a shortcut switch to access the settings screen of the corresponding feature. (Supported by some features.)
- Touch  to access the system settings screen.

Customise Shortcut Switches

Touch , touch and hold a shortcut switch, then drag it to the desired position.


Quickly Access Frequently Used App Features


Access Frequently Used App Features from the Home Screen

You can access frequently used features of certain apps from app icons on the home screen, and even add shortcuts for these features to the home screen.

Quickly Access Frequently Used App Features

Touch and hold an app icon until a pop-up menu is displayed, then touch a frequently used feature to access it.

For example, touch and hold the  icon, then touch a shooting mode, such as Selfie or Video, from the pop-up menu to access it.

-  If no pop-up menu is displayed after you touch and hold an app icon, it indicates that the app does not support this feature.

Add Frequently Used App Features to the Home Screen

Touch and hold an app icon on your home screen to bring up the pop-up menu. Touch and hold the desired feature and drag it to your home screen to create a shortcut.



Home Screen Widgets


Add, Move, or Delete Home Screen Widgets

You can add, move, or delete home screen widgets, such as Screen lock, Weather, Notepad, Clock, Contacts, and Calendar, according to your personal requirements.

Add Weather, Clock, and Other Widgets to the Home Screen

- 1 Pinch two fingers on the home screen to access Home screen settings mode.
- 2 Touch **Widgets**, then swipe left to view all widgets.
- 3 Some widgets, such as **Weather**, come in various formats. Touch the widget to show all formats, and swipe right to collapse.
- 4 Touch a widget to add it to the home screen. If there is no room on the current screen, touch and hold it, then drag it to a different screen.

-  To configure the **Weather** app, open it, and touch  to set the configurations as prompted.

For example, to switch between Celsius and Fahrenheit, go to  > **Temperature unit**, and touch **Celsius (°C)** or **Fahrenheit (°F)**.


Move or Delete a Widget

Touch and hold a widget on your home screen until your device vibrates, then drag it to the desired position or touch **Remove**.


Set Your Wallpaper

Set Your Wallpaper

Use a Preset Wallpaper

- 1 Go to **Settings > Home screen & wallpaper > Wallpaper**.
- 2 Touch an image you want to set as the wallpaper.
- 3 Set the following according to your preferences:
 - **Blur**: applies a blur effect, which can be adjusted by dragging the slider.
 - **Scrollable**: enables the wallpaper to be scrollable on the home screen.
- 4 Touch , then determine whether you'd like to set it as the wallpaper for the **Lock screen**, **Home screen**, or **Both**.

Set an Image from Gallery as Your Wallpaper

- 1 Open **Gallery**, and open the image you want to set as your wallpaper.
- 2 Go to  > **Set as > Wallpaper**, then follow the onscreen instructions to complete the setting.


Screenshots & Screen Recording

Take a Screenshot

Use a Key Combination to Take a Screenshot

Press and hold the Power and Volume down buttons simultaneously to take a screenshot.

Use a Shortcut to Take a Screenshot

Swipe down from the status bar to open the notification panel, then swipe down on it again to show all shortcuts. Touch  to take a screenshot.

Share and Edit a Screenshot or Switch to Scrollshot

After you take a screenshot, a thumbnail will be displayed in the lower left corner of the screen. You can then:

- Swipe down on the thumbnail to take a scrolling screenshot.

 This is not supported in Landscape mode.

- Swipe up on the thumbnail to select a way to share the screenshot with your friends.
- Touch the thumbnail to edit or delete it. You can also touch **Scrollshot** to take a scrolling screenshot.

Screenshots are saved to **Gallery** by default.

Record the Screen

Record your screen activities in sharable videos to compose a tutorial, show off your awesome gaming skills, and a lot more.

Use a Key Combination to Start Screen Recording

Press and hold the Power and Volume up buttons simultaneously to start screen recording. To stop recording, press and hold both buttons again.

Use a Shortcut to Start Screen Recording

- 1 Swipe down from the status bar to open the notification panel, then swipe down on it again to show all shortcuts.
- 2 Touch **Screen Recorder** to start screen recording.
- 3 To stop the recording, touch the timer at the top of the screen.
- 4 The recording will be saved to **Gallery**.

Record Your Voice During Screen Recording


You can enable the microphone to record your voice while recording the screen.

After starting a screen recording, touch the microphone icon and ensure that it is displayed as



. You can now record your voice.



If the microphone is disabled (if it is displayed as ) , you will only be able to record system sounds, such as music. If you don't want any system sounds in your screen recording, mute your device and turn off any music or other media sounds before starting the screen recording.



View and Clear Notifications

View and Clear Notifications


View Notifications


When there is a notification reminder, you can unlock the screen and swipe down from the status bar to open the notification panel and view the notification.

Clear Notifications

- You can remove a notification by swiping right on it.
- You can touch  to clear all notifications.
-  Some system notifications and notifications from apps running in the foreground cannot be cleared.

Do Not Disturb Settings for Notifications

If you wish not to be disturbed by a notification, swipe left on it, touch , and choose from options including **Disable notifications**, **Use gentle notifications**, and **DELAY**.

-  Some system notifications and notifications from apps running in the foreground cannot be disabled or delayed.

Adjust Sound Settings

Adjust Sound Settings

Press a Volume Button to Adjust the Volume

Press the Volume up or down button to adjust the volume.

Press the Power Button to Mute Your Device When It Rings

When your device rings for an incoming call or alarm, you can press the Power button to mute it.




Flip to Mute or Raise to Reduce Ringing Volume

When you receive an incoming call, you can flip your device to mute it, or raise it to reduce the ringing volume.

Go to **Settings > Accessibility features > Shortcuts & gestures > Mute ringtone/Reduce volume**, then enable **Flip to mute ringtone** and **Raise to reduce volume**.

-  Calling services are not supported on Wi-Fi only tablets.

Use a Shortcut to Switch Between Sound, Vibration, and Silent Modes

- 1 Swipe down from the status bar to open the notification panel, then swipe down on it again to show all shortcuts.
- 2 Touch the  **Sound**,  **Silent**, or  **Vibration** icon to switch between different modes.

In Sound mode, your phone plays all sounds as normal.

In Silent mode, your phone only mutes the ringtones for incoming calls, messages, notifications, and some third-party app notifications. Other sounds, including alarms, voice calls, music, videos, and games, will not be muted.

In Vibration mode, your phone is muted and vibrates to provide discreet alerts for calls or messages.

You can also go to **Settings > Sounds & vibration** to switch between **Sound**, **Vibration**, and **Silent** modes.

Set the Default Volume

Go to **Settings > Sounds & vibration**, and you can then set the volume for the following items:

- **Ringer, Messages, Notifications**
- **Alarms**
- **Music, Videos, Games**
- **Calls**

 Calling services are not supported on Wi-Fi only tablets.

Enter Text





Change the Keyboard Language

After your device is connected to a physical keyboard, you can switch between different input languages using shortcut keys.

- 1 Go to **Settings > System & updates > Language & input > More input settings > Physical keyboard**, then touch a keyboard name.
- 2 Use the Ctrl-Space shortcut to switch to the keyboard in the selected language. The system will indicate the current language at the bottom of the screen.

Select, Copy, Paste, or Share Text

You can select text displayed on your screen, copy or cut it to the clipboard, then paste it somewhere else. You can also share it in multiple ways.

- 1 Touch and hold the text until  appears.
 -  What happens after you touch and hold the text may vary by app. Follow the onscreen instructions.
- 2 Drag  and  to select the text you need, or touch **Select all** to select all text.
- 3 Touch **Copy** or **Cut** as needed.
- 4 Touch and hold the space where you want to paste the text until **Paste** appears, then touch **Paste**.

Multi-Window


Enable Split-screen Mode

Multi-Window allows you to open apps in split screen for multitasking.



Enable split-screen mode:


- 1 Open an app and swipe inward from the left or right edge and hold to bring up the Multi-Window dock.
- 2 Drag an app icon out of the Multi-Window dock.

Switch the split-screen panes:

Touch and hold  at the top of a split-screen pane until the pane shrinks, then drag it to the other side of the screen to switch panes.

Exit split-screen mode:

Touch and hold  or  in the middle of the split screen line and drag it until either pane disappears.

-  • Support for split-screen mode varies by app.
- Split-screen mode is limited to two apps at any given time.





Drag and Drop Between Apps with Multi-Window

Use the Multi-Window feature to easily drag and drop images, text, and documents between apps.

- Drag and drop an image: When taking notes with **Notepad**, open **Files**, select the photo you want to add, and drag it into the **Notepad** editor.
- Drag and drop text: When sending an SMS message, open **Notepad**, touch and hold the text you want to send, and drag it into the message text input box.
- Drag and drop a document: When writing an email, open **Files**, select the document you want to attach, and drag it into the email editor.

-  Not all apps fully support drag-and-drop with Multi-Window.

Add, Move, or Remove an App from the Multi-Window Dock

- Add an app: In the Multi-Window dock, touch , touch the app you want to add, then touch **Done**.
- Move an app: In the Multi-Window dock, touch , drag the desired app to any location in the dock, then touch **Done**.
- Remove an app: In the Multi-Window dock, touch , touch  in the upper right corner of the icon of the app you want to remove, then touch **Done**.

Switch Between Split-screen and Floating Window

- Switch from Split-screen mode to floating window: Touch and hold the bar at the top of a split-screen pane, then drag it to the left/right side of the screen when in Portrait mode or to the lower edge when in Landscape mode.
- Switch from floating window to Split-screen mode: Touch and hold the bar at the top of the floating window, then drag it to the upper/lower part of the screen when in Portrait mode, or to the left or right when in Landscape mode.

Multi-Window View for a Single App

You can create two task windows for the same app (such as Email and Notepad), and drag images, text, or documents between them.

 This feature is unavailable in some apps.

1 Enter the split-screen view within an app.

- Open the Email app.
- Swipe inward from the left or right edge of your device and hold to bring up the Multi-Window dock.
- Touch and hold the Email icon, and drag it to the screen to enter split-screen view.

2 Drag images, text, or documents between the split-screen windows.

- **Drag an image:** Select an image from one split-screen window and drag it to the other window.
- **Drag text:** Touch and hold the text and select the desired part from one split-screen window, then touch and hold the text again and drag it to the other window.
- **Drag a document:** Select a document from one split-screen window and drag it to the other window.

Disable Multi-Window

Multi-Window is enabled by default. To disable it, go to **Settings > Accessibility features > Multi-Window**, then disable **Multi-Window dock**.

Use the Floating Window

Open a floating window while gaming, and you can chat with a friend without missing a second of the action.

Display the floating window:


- 1 Swipe inward from the left or right edge and hold to bring up the Multi-Window dock.
- 2 Touch an app icon in the Multi-Window dock to open the app in a floating window.

 Tablets support the display of two floating windows at the same time.


Relocate the floating window:

Drag the bar at the top of the floating window to move the window to the desired location.

Display in full screen:


Touch  at the top of the floating window to display it in full screen.

Minimise the floating window:

Touch  at the top of the floating window to minimise it, and it will go directly into the floating ball.


 The floating ball is able to house a maximum of 10 minimised floating windows.

Close the floating window:

Touch  at the top of the floating window to close it.

Find and Switch Between Floating Windows for Apps

You can quickly find and switch between floating windows for apps using the floating window management function.

- 1 Make sure that you have opened floating windows for multiple apps and minimised them into the floating ball.
- 2 Touch the floating ball to display all floating window previews:
 - **Browse through the floating window previews:** Swipe up or down to find the floating window preview of the app you are looking for.
 - **Display the floating window for an app:** Touch the floating window preview of the app to display it in a floating window.
 - **Close the floating window for an app:** Touch  on the floating window preview to close it.

Open an Attachment in a Floating Window

You can open a link or attachment within specific apps (such as Email and Notepad) in a floating window.


 This feature is unavailable in some apps.

- 1 Open the Email app.
- 2 Touch a link or attachment in the Email app to open it in the floating window.
 - **Open a link:** Touch a link in the Email app to display it in a floating window.
 - **Open an attachment:** Touch an attachment (such as a document, image, or video) in the Email app to display it in a floating window.

Enable App Multiplier

App Multiplier displays an app's home and content screens in dual windows for easier multitasking when your device is in landscape orientation.

- 1 Go to **Settings > Apps > App Multiplier**, and turn on the switch for apps that you want to use this feature with.
- 2 Open an app that has **App Multiplier** enabled. The app's home screen will then be displayed in the centre of the screen.
- 3 Touch an entry on the app's home screen. The home screen will then be relocated to the left to make space for the new screen.

To adjust the window sizes, touch and hold  between the windows, then slide left or right.

Power On and Off or Restart Your Device

Turn On and Off or Restart Your Device

Power Your Device On and Off

To power off your device, press and hold the Power button for a few seconds, touch **Power off** and **Touch to power off**.

To power on your device, press and hold the Power button for a few seconds until your device vibrates and displays the logo.

Restart Your Device

Restart your device on a regular basis to clear the cache and keep the device in an optimal state. A restart can sometimes resolve the issue when your device encounters a problem.

Just press and hold the Power button for a few seconds, then touch **Restart** and **Touch to restart**.

Force Restart Your Device

You can force restart your device if it isn't working or won't turn off normally. To do this, just press and hold the Power and Volume down buttons simultaneously for 10 seconds or longer.

Charging

Charge Your Device

Your device will alert you when it is running out of power. Please make sure to charge your device in time to prevent it from turning off automatically when the power runs out.

Precautions for Charging

- Charge your device using the standard adapter and USB cable that came with your device. Using other chargers or USB cables may cause repeated restarts, slow charging, overheating, or other undesirable effects.

- Your device will automatically run a safety check when a charger or other device is connected to the USB port. If moisture is detected in the USB port, your device will automatically activate safety measures and stop charging. Disconnect your device from the USB port and wait until the USB port is dry.
- The time required to fully charge the battery depends on the ambient temperature and age of the battery.
- Batteries have a limited number of charge cycles. When the battery life becomes noticeably shorter, go to an authorised Huawei Customer Service Centre to replace the battery.
- Do not cover your device or charger during charging.
- Your device may heat up when you have been using it for an extended period of time, especially in high temperatures. In this case, stop charging, disable some features, and move your device to a cool place.
- Please do not use your device while it is charging.
- If your device does not respond after you press and hold the Power button, the battery may have run out. Charge for 10 minutes and then power it on.



Using the Charger that Came with Your Device


- 1 Use the USB cable that came with your device to connect your device and the adapter.
- 2 Plug the adapter into a power socket.

Use the Wireless Charger

A wireless charger consists of an adapter, a cable, and a charging pad. To ensure safe charging, please purchase a charging pad from an official Huawei channel, and use the adapter and USB cable that came with your device.

To super charge your device wirelessly, purchase a charging pad that supports super fast charging.

- 1 Connect the adapter and charging pad using the USB cable, then plug the adapter into a power socket.
- 2 Place the charging pad on the table, then place your device on the centre of the charging pad with the screen facing upwards.
- 3 When a beep is heard, your device should start charging.
 - If you are using a high-voltage super fast charging adapter, the charging pad will charge the device at a super fast charging speed. The wireless SuperCharge icon  will be displayed on the lock screen.
 - If you are using a high-voltage fast charging adapter, the charging pad will charge the device at a fast charging speed. The wireless QuickCharge icon  will be displayed on the lock screen.

- If you are using a standard adapter, the charging pad will charge the device at a standard charging speed. The wireless standard charging icon  will be displayed on the lock screen.





Charging Pad Indicator	Description
Blinks once	The charger is properly connected to the power supply.
Steady on	Charging is in process.
Blinks quickly	A charging error has occurred.

Charging Your Device With a PC

- 1 Connect your device to a PC or other device using a USB cable.
- 2 When the **Use USB to** dialog box is displayed on your device, touch **Charge only**. If another option has been set previously, the dialog box will not pop up. Swipe down from the status bar to open the notification panel, touch **Settings**, then select **Charge only**.

Overview of Battery Icons

You can check the battery level from the battery icon on the device screen.

Battery Icon	Battery Level
	Less than 4% battery remaining
	Charging, less than 10% battery remaining
	Charging, 10% to 90% battery remaining
	Charging, at least 90% battery remaining If 100% is displayed next to the battery icon, or a charging complete message is displayed on the lock screen, the battery is fully charged.

Use Wireless Reverse Charging

Wireless reverse charging is supported by devices that support the Wireless Charging Standard, such as phones, tablets, watches, and bands.

Before using wireless reverse charging, ensure that the battery level of your device is higher than 20%.

- 1 Go to **Settings > Battery**, and enable **Wireless Reverse Charging**.
- 2 Power on the device to be charged, and place it on the centre of the back of your device. Do not place any metal objects between your device and the device to be charged.
- 3 If the device does not start charging within 5 seconds, adjust its position and try again.

- 4 If the device to be charged is removed from the device for more than 2 minutes during charging, **Wireless Reverse Charging** will automatically be disabled.

Reverse Charge with an OTG Cable

On-The-Go (OTG) is a USB transmitting technology that allows a device to directly access files on a USB flash drive or digital camera, or connect to an external device such as a keyboard or mouse, with the help of an OTG cable.

You can use your device to charge other devices using an OTG cable.

- 1 Connect your device with the device to be charged using an OTG cable.
- 2 Swipe down from the status bar to open the notification panel, touch **Touch for more options**, and then select **Reverse charge**.
- 3 Follow the onscreen instructions on the device to be charged to start charging.


Smart Features

AI Voice

AI Voice

AI Voice allows you to communicate verbally with your device.

To operate hands-free on your device, wake up **AI Voice** and give a voice command.

 This feature is only available in some countries and regions.

Wake up AI Voice


You can wake up **AI Voice** in multiple ways:

Press and hold the Power button for 1 second to wake up AI Voice

- 1 Go to **Settings > HUAWEI Assistant > AI Voice > Wake with Power button**, and enable **Wake with Power button**.
- 2 Press and hold the Power button for 1 second to wake up **AI Voice**.

Say the wakeup phrase to wake up AI Voice


- 1 Go to **Settings > HUAWEI Assistant > AI Voice > Voice wakeup**, enable **Voice wakeup**, and follow the onscreen instructions to record your wakeup phrase.
- 2 When you need to wake up **AI Voice**, say the wakeup phrase.

-  The settings items vary by device. If your device does not provide a specific item, it indicates that the corresponding feature is not supported.
- You cannot wake up **AI Voice** with the wakeup phrase when your device is in a call.
- You cannot wake up **AI Voice** with the wakeup phrase either if you are making an audio or screen recording (with microphone enabled). In this case, you can press and hold the Power button to wake up **AI Voice**.
- This feature is only available in some countries and regions.

Communicate with AI Voice

AI Voice can be in one of the following three modes: Idle, Listening, and Thinking. You can talk to **AI Voice** when it is in the Listening mode.


- Idle mode: **AI Voice** doesn't pick up any sound in this mode.
- Listening mode: You can talk to **AI Voice** as it can listen to you in this mode.
- Thinking mode: **AI Voice** can start to execute your voice commands.


 This feature is only available in some countries and regions.

View AI Voice Skill

View Built-in AI Voice Skills


You can view the built-in **AI Voice** skills in either of the following ways:

- Wake up **AI Voice** and ask: "What can you do?". **AI Voice** will then display the Skill centre where the built-in skills are listed.
- Wake up **AI Voice** and follow the onscreen instructions to swipe up to enter full-screen mode. Then go to  > **Skill centre** to check the built-in **AI Voice** skills.

 This feature is only available in some countries and regions.

Make Calls and Send SMS Messages with AI Voice


AI Voice allows you to make calls or send messages hands-free.

 This feature is only available in some countries and regions.

Make Calls with Voice Commands

You can make a call on your device with **AI Voice**.

Wake up **AI Voice** and give voice command, such as "Call Mom", "Call back", "Check call records", or "Redial".

-  When you make calls with voice commands, hands-free mode is automatically enabled.
- Calling services are not supported on Wi-Fi only tablets.

Send SMS Messages with Voice Commands

You can send SMS messages with **AI Voice**.


Wake up **AI Voice** and give voice commands such as "Send a message", "Check messages", or "Send Dad a message saying the party is tomorrow".

 Calling services are not supported on Wi-Fi only tablets.

Set Alarms with Voice Commands

You can create, disable, and query alarms with **AI Voice**.


Wake up **AI Voice** and give voice commands such as "Wake me up at 8 AM tomorrow", "Set an alarm for 8 PM", "Set a Wednesday alarm for 7 AM", or "Show my alarms".

 This feature is only available in some countries and regions.

Set Timers with Voice Commands

You can quickly create and control the timer on your device with **AI Voice**.

Wake up **AI Voice** and give voice commands such as "Set timer for 5 minutes", "Show timer", "Pause timer", or "Stop timer".

 This feature is only available in some countries and regions.


Play Music or Videos with Voice Commands

If you want to listen to music or watch videos, wake up **AI Voice** and give the voice commands directly.

Play Music with Voice Commands


You can request your device to play a song for you with **AI Voice**.

Wake up **AI Voice** and give voice commands such as "Play music", "Play previous song", or "Play next song".

 This feature is only available in some countries and regions.


Play Videos with Voice Commands

Wake up **AI Voice** and give voice commands such as "Play video", "Play Friends in HUAWEI Video", "Show me a funny video", or "Play a Coldplay video".

 This feature is only available in some countries and regions.


Open Apps with Voice Commands

You can quickly open an app with **AI Voice**, such as for opening the camera and taking a photo in a specific mode.

 This feature is only available in some countries and regions.


Access Camera with Voice Commands

Wake up **AI Voice** and give voice commands such as "I want to take a photo" or "Take a photo".

 This feature is only available in some countries and regions.

Open an App with Voice Commands

Wake up **AI Voice** and give voice commands such as "Open the Camera", "Open YouTube", "Open PayPal", or "Open HUAWEI Music".

-  • This feature is only available in some countries and regions.
- Not all apps support voice control.

Speech Translation

AI Voice allows you to translate your voice or text input so you can communicate with foreign friends easily.

 This feature is only available in some countries and regions.


Speech Translation

You can use **AI Voice** to translate your voice or text input into the target language you have set.

- 1 Wake up **AI Voice** and give the voice command "Translate".
- 2 Say or type in what you want to be translated.
- 3 **AI Voice** will display the translated result and broadcast it for you.

Communicate Easily with Face-to-Face Translation


Face-to-face translation allows you to overcome language barriers when you are travelling abroad or in an international conference.

- 1 Wake up **AI Voice** and give the voice command "Face-to-face translation" to enter the translation screen.
- 2 Touch  so the text on each of the two sections can be read from each side of the device.
- 3 Press the button on your side of the section, say what you want to be translated, and release the button for **AI Voice** to display the translated result in real time and broadcast it.

Set Calendar Events and Reminders with Voice Commands

AI Voice allows you to create and check your Calendar events and add reminders for these events.


Wake up **AI Voice** and give voice commands such as "Schedule a meeting for 9 tomorrow morning", "Set a meeting for 2 o'clock tomorrow afternoon", "What's my schedule for tomorrow morning?", or "Do I have any appointments on Monday?".

 This feature is only available in some countries and regions.

Set Up the System with Voice Commands

AI Voice allows you to set up the system, such as for adjusting the volume or brightness of the screen, and enabling or disabling Wi-Fi.

Wake up **AI Voice** and give voice commands such as "Turn the volume up", "Turn on Wi-Fi", "Increase the brightness", or "Turn off Airplane mode".


 This feature is only available in some countries and regions.

AI Lens


Enable AI Lens

There are multiple ways to access **AI Lens**.


From Camera

Open **Camera**, select **Photo** mode, and touch  to access **AI Lens**.

From the Search Bar

When the screen is unlocked, swipe down from the centre of the home screen to open the search box, and touch  next to it to access **AI Lens**.

From the Lock Screen


Turn on the screen when it is locked, swipe up from the bottom to open the shortcuts panel, and touch  to unlock the screen and access **AI Lens**.

Scan to Shop



When you see an item you wish to buy in a magazine or when you are strolling on the street, you can use **AI Lens** to quickly search for the item and compare prices across multiple shopping platforms before making a purchase.

Scan and Shop with AI Voice

- 1 Wake up **AI Voice** and give voice commands such as "Look at how much is the refrigerator", or "Help me look at the same style of this juice machine".
- 2 Position the object within the viewfinder and wait for it to be identified.
- 3 You will be provided with purchase links to different shopping platforms once the object has been recognised.

 This feature is only available in some countries and regions.

Scan to Shop Using Camera


- 1 Go to **Camera > Photo**, touch , and then touch .
- 2 Position the item you want to buy within the viewfinder, and wait for it to be identified.
- 3 After the item has been identified by **AI Lens**, links to purchase it on different shopping platforms will be displayed.

Scan to Translate



AI Lens allows you to scan and translate text in a foreign language, so you can easily read road signs, menus, or descriptions on cosmetics bottles when you are travelling or shopping abroad.

Scan and Translate with AI Voice

- 1 Wake up **AI Voice** and ask questions or give voice commands such as "Please scan this menu and translate it", or "Scan this street sign and translate it".
- 2 Select the source and target languages from the language list.
- 3 Position the text you want to translate within the viewfinder, and wait for it to be translated.

 This feature is only available in some countries and regions.


Scan to Translate Using Camera

- 1 Go to **Camera** > **Photo**, touch , and then touch .
- 2 Select the source and target languages from the language list.
- 3 Position the text you want to translate within the viewfinder, and wait for it to be translated.



Scan to Learn More

AI Lens allows you to learn more about artworks or landmarks you see by scanning the objects with your camera.

Scan to Learn More with AI Voice

- 1 Wake up **AI Voice** and ask questions or give voice commands such as "Help me see what this flower is?" or "Please have a look what is this building?".
 - 2 Position the object within the viewfinder and wait for it to be identified.
 - 3 Touch the information card to obtain additional information.
-  This feature is only available in some countries and regions.

Scan to Learn More Using Camera

- 1 Go to **Camera** > **Photo**, touch , and then touch .
- 2 Position the object within the viewfinder and wait for it to be identified.
- 3 Touch the information card to obtain additional information.

Scan and Count Calories

AI Lens allows you to count the calories and nutrients in an item of food by scanning it with your camera.

Scan Codes for Services and Information



You can scan different types of QR codes and bar codes with **AI Lens**, and then touch the identified result to be redirected to other pages for more services and information.

Easy Projection

Project Your Device Screen Wirelessly

You can project your tablet screen wirelessly to a large display (such as a TV).

- 1 Perform the following based on the model and functions of the large display:
 - If the large display supports **Miracast**, turn on its wireless projection switch.

- **If the large display does not support Miracast**, connect a wireless HDMI adapter to it. Ensure that the wireless HDMI adapter is connected to a power supply.
 -  To check whether the large display supports Miracast and how to enable wireless projection on it, consult the user guide or customer service of the large display manufacturer.
- 2 On your device, swipe down from the status bar to open the notification panel, and turn on  .
 - 3 Swipe down again to show all shortcuts and enable **Wireless Projection**. Your device will start searching for available display devices.
Alternatively, go to **Settings > More connections** and enable **Wireless Projection**.
 - 4 In the device list, touch the name corresponding to the large display or wireless HDMI adapter to complete the projection connection.
- Alternatively, swipe down from the status bar on your tablet, and touch **Disconnect**.

Projection Using a Docking Station

You can use a docking station to connect your device with a large display, and connect them with a wired keyboard and mouse.


- 1 Prepare a docking station.
Multiple types of ports are available on a docking station. If the large display supports HDMI and you need to use a wired mouse and keyboard, use a docking station with at least one HDMI port and two USB ports.
- 2 Connect your device and the large display to the docking station, then connect the wired mouse and keyboard to the docking station.
- 3 On the external display, set the corresponding HDMI, DP, or MiniDP input as the signal source.

Multi-screen Collaboration Between Your Tablet and Phone

Multi-screen Collaboration Between Your Phone and Tablet


Connect your phone and tablet to use Multi-screen Collaboration for cross-device operations, such as to display your phone screen on the tablet, use your phone apps on the tablet, drag files across the two devices, and edit a file from your phone on the tablet.

Connect Your Tablet and Phone

-  Multi-screen Collaboration is supported by Huawei and Honor phones running EMUI 10.0 or later.

Connect your tablet and phone to enable Multi-screen Collaboration using any of the following methods:

Connect over Bluetooth:


- 1 Swipe down from the status bar on your tablet and enable **Multi-Screen Collaboration**.
- 2 On your phone, swipe down from the status bar to open the notification panel, and enable  .
- 3 Hold your phone close to your tablet and follow the onscreen instructions to establish a connection.

Scan QR code to connect:

- 1 On your tablet, enable **Multi-Screen Collaboration**, on the **Multi-Screen Collaboration** screen, touch **Scan to connect**.
- 2 Ensure that your phone is connected to the Internet, and connect your phone and tablet as prompted.

Connect by tapping against a NFC-capable keyboard:

You can place your phone against the standard NFC-capable keyboard that comes with your tablet to enable Multi-screen Collaboration.

- 1 Make sure that your tablet has been paired with the keyboard.
- 2 Swipe down from the status bar to open the notification panel, swipe down again to show all shortcuts, then turn on .
- 3 Tap the NFC area at the back of your phone (near the rear cameras) against the NFC area of the keyboard until your phone vibrates or plays a tone.
- 4 Connect your phone and tablet as prompted.

Access Phone Apps and Files from Your Tablet

After connecting your phone with your tablet, you can operate your phone from your tablet, such as to operate phone apps and files, view phone notifications (such as SMS messages), and make or answer phone calls.

When your phone screen is unlocked, you can perform the following operations in the phone window on your tablet:

- Open **Phone** to make a call by dialling a number.
- Open **Messaging** to view and reply to SMS messages.
- Open **Gallery** or **Files** to view photos, videos, and files, as well as to play video or audio files from your phone.
- Swipe down from the status bar on your phone or tablet to open the notification panel, then touch **Play audio/video on phone** or **Play audio/video on tablet** to switch the audio output device.
- If your tablet is connected to an external keyboard or a stylus, you can use it to input text and control the phone window on your tablet.

Drag to Transfer Files Between Your Phone and Tablet

- 1** Open **Gallery** or **Files**, and touch and hold a picture, video, or document.
- 2** Select more files if needed, touch and hold any of the selected files, then drag them when an icon for dragging files appears.

For example, you can:

- Drag to transfer files in **Gallery** or **Files** between your phone and tablet.
- Drag to transfer files in **Files** between your phone and tablet.
- Drag a picture, text, or file from your phone to an open document on your tablet, such as a Microsoft Office document, memo, or email.

Disconnect Your Phone from Your Tablet

After you have finished using your phone and tablet, you can disconnect them using the following methods:

- On the phone window displayed on the tablet, touch to disconnect.
- On your phone or tablet, swipe down from the status bar to open the notification panel and touch **DISCONNECT**.

Huawei Share

Huawei Share

Huawei Share is a wireless sharing technology that allows you to quickly transfer images, videos, documents, and other types of files between devices. This technology uses Bluetooth to discover nearby devices that supports Huawei Share and Wi-Fi Direct to transfer files without using mobile data.

Enable or Disable Huawei Share


You can enable or disable Huawei Share in either of the following ways:


- Swipe down from the status bar to open the notification panel, swipe down on it again to show all shortcuts, then turn on or turn off **Huawei Share**. You can also touch and hold **Huawei Share** to access its settings screen.
- Go to **Settings > More connections > Huawei Share** to enable or disable **Huawei Share**.

Quickly Share Files Between Devices with Huawei Share

You can use Huawei Share to quickly share files between Huawei devices. The recipient can preview the files before they are sent, then view the full content of the files once they have been received. For example, the recipient can view received pictures or videos in Gallery.

- 1** On the receiving device, enable **Huawei Share**.

- 2 On the sending device, touch and hold to select a file or album you want to share, then touch . Touch **Huawei Share**, then touch the icon of the receiving device to send the file.

 These steps may be different if you are sharing files directly from an app.

- 3 On the receiving device, touch **Accept** to accept the transfer.


To view the received files, open **Files**, touch the **Categories** tab, then go to **Internal storage > Huawei Share**.

You can also view the received images or videos by going to **Gallery > Albums > Huawei Share**.

Share Files Between Your Device and Computer with Huawei Share

You can use Huawei Share to easily share files wirelessly between your device and a computer (Windows or macOS).

- 1 Make sure your device and computer are connected to the same Wi-Fi network.
- 2 On your device, enter the **Huawei Share** settings and enable **Huawei Share** and **Computer Share**.
- 3 Make a note of the name displayed next to **Name shown on computers**, as well as the user name and password under **Verification**.
- 4 Perform the following operations on a Windows-based computer (desktop or laptop) or a macOS-based computer (laptop):
 - Windows: Go to **This PC (Computer) > Network** on the computer.
 - macOS: Go to **Finder > Go to > Network** on the computer.

 Currently, this feature is only available on Macs running macOS 10.8 to 10.14.
- 5 On your computer, double-click the name of your device and enter the user name and password previously noted down.
- 6 Open a shared folder on your device, such as the Internal storage or Album folder to view, edit, or copy files from your device to your computer or vice versa.
Changes made to files in the shared folders on your computer will be automatically synced to your device and vice versa.

One-Touch Printing with Huawei Share

When a printer that supports Huawei Share is nearby, you can use Huawei Share to find the printer and print out pictures or PDF files stored on your device.


- 1 Depending on the type of printer, ensure the following:
 - Wi-Fi capable printers: The printer must be powered on and connected to the same network as your device.
 - WiFi Direct capable printers: The printer must be powered on and have enabled WiFi Direct.

- Bluetooth capable printers: The printer must be powered on and discoverable via Bluetooth.

2 On your device, preview the file to be printed, then go to **Share > Huawei Share**.

3 Once the printer has been discovered, touch its name on your device, and adjust the settings on the preview screen. Then touch **PRINT** to print.

If you are connecting a Bluetooth printer to your device for the first time, find the printer on your device, touch the printer name, then press and hold the Power button on the printer for about 1 second to confirm the connection.

 For a list of supported printers, touch **Help** on the Huawei Share sharing screen, select **Printers**, then touch **What printers are supported?**.

Camera and Gallery

Launch Camera

Launch Camera

There are multiple ways to open the Camera app.

From the Home Screen

From the home screen, open **Camera**.


From the Lock Screen

When the screen is locked, turn on the screen, then swipe up on the camera icon in the lower right corner to open the camera.

Take Photos


Take Timed Photos

The camera timer allows you to set a countdown so you can get into position after you have touched the shutter button.

- 1 Go to **Camera** >  > **Timer** and select a countdown.
- 2 Return to the viewfinder and touch the shutter button. Your device will take a photo when the countdown ends.

Use Audio Control to Take Photos

You can use your voice to take photos without having to touch the shutter button.

- 1 Go to **Camera** >  > **Audio control**, and select an option.
- 2 Go back to the viewfinder, then say your command to take a photo.




Take Panoramic Photos

Take Panoramic Photos

Add some width to your landscape or group photos with the Panorama feature. The camera takes multiple photos of objects within your field of view and stitches them together into a single panoramic photo.

Use the Rear Camera to Take Panoramic Photos

Panorama mode combines multiple shots into a seamless panoramic photo. Simply move the camera as you shoot and the camera will take care of the rest.

- 1 Go to **Camera > More** and select **Panorama** mode.
- 2 Touch  and set the pan direction.
- 3 Point the camera at your starting point, then touch  to start shooting. Move the camera in the direction of the arrow displayed on the screen. Keep the arrow on the centre line when you are taking the photo.
- 4 Touch  when you are finished.

Light Painting



Use Light Painting to Shoot Light Trails

Light painting helps you capture light trails by allowing the shutter to stay open for a longer time. No manual aperture and shutter adjustment is involved.

Just choose from the available options depending on the subjects and light conditions. To reduce camera shake, a tripod is recommended to steady your device.



Capture Car Light Trails in Traffic Trails Mode

Traffic trails mode lets you create artistic photos of car light trails at night.

- 1 Go to **Camera > More > Light painting** and select **Traffic trails**.
- 2 Find a spot where you'll see the light trails created by cars from a distance. Ensure that car headlights do not point directly at the camera, as this can overexpose the image.
- 3 Touch  to start shooting. Look at the shot in the viewfinder.
- 4 When the exposure is just right, touch  to finish shooting.



Capture Light Drawings in Light Graffiti Mode

Light graffiti mode lets you create patterns or write words by moving a light source in front of the camera.

- 1 In **Light painting** mode, select **Light graffiti**.
- 2 In a dark environment without distracting light sources, move a suitably bright light source of an appropriate colour, such as a small torch or glow stick, in front of the camera. Avoid exaggerated body movements as this may affect the shooting results.
- 3 Touch  to start shooting. Look at the shot in the viewfinder.
- 4 When the exposure is just right, touch  to finish shooting.



Capture Rivers and Waterfalls in Silky Water Mode

Silky water mode lets you capture silky smooth photographs of waterfalls and rivers.

- 1 In **Light painting** mode, select **Silky water**.
- 2 This feature works best when taking photos of a stream or waterfall where there is a lot of flowing water.
- 3 Touch  to start shooting. Look at the shot in the viewfinder.
- 4 When the exposure is just right, touch  to finish shooting.

Capture the Beauty of the Stars in Star Trails Mode


Star trails mode lets you use your camera to capture the movement of the stars in the night sky.

- 1 In **Light painting** mode, select **Star trails**.
- 2 For best results, choose a clear night in a location without light pollution and with an unobstructed view of the sky.
- 3 Touch  to start shooting. Look at the shot in the viewfinder.
- 4 When the exposure is just right, touch  to finish shooting.

Take HDR Photos

Use HDR to Take Photos


When shooting photos with backlighting or a high light contrast, High Dynamic Range (HDR) mode can help you improve light and shadow effects in your photos, giving your photos sharper details.

- 1 Go to **Camera > More** and select **HDR** mode.
- 2 Steady your device.
- 3 Touch  to take a photo.

Moving Pictures

Play Moving Pictures


Moving pictures are saved in JPG format in **Gallery**.

Go to **Gallery > Albums > Camera**, touch a moving picture, then touch  at the top of the picture to view it.

The moving picture will automatically stop after a complete playback. You can also touch the screen to stop the playback.

Share Moving Pictures

You can share moving pictures with Huawei or Honor devices using various methods, such as Wi-Fi Direct, Bluetooth, or Huawei Share.

Go to **Gallery > Albums > Camera**, touch and hold to select the moving pictures you want to share, then touch  to share them.


If you share moving pictures to third-party apps or incompatible devices, moving pictures will be displayed as static images.



Add Stickers to Photos

Add Stickers to Photos

Add a sticker, such as time, weather, mood, or food, to spice up your photos.

- 1 Go to **Camera > More** and select **Stickers** mode.

If the **Stickers** option is not present, touch , then download **Stickers**.

- 2 Touch  and select a sticker. The selected sticker will be displayed in the viewfinder.
- 3 Drag the sticker to change its position. You can also edit the text of some types of stickers.
- 4 Touch  to take a photo.

Documents Mode


Use Documents Mode to Straighten Photos


Images shot at an angle always suffer from the problem of perspective. If you aren't able to take a perfectly straight photo of a document, use Documents mode.

The camera will automatically adjust skewed images shot in Documents mode and remove shadows from them.

Shoot Photos in Documents Mode

- 1 Go to **Camera > More** and select **Documents** mode.



If the **Documents** option is not present in **More**, touch , then download **Documents**.

- 2 Frame the document you want to shoot within the viewfinder, then touch .
- 3 The camera will automatically identify the text area within the viewfinder, unskew the image, and remove any shadows.

Adjust the Text Area




If you find the skew correction of a photo unsatisfactory, you can also manually adjust the text area.


This is only available for photos taken in **Documents** mode.



- 1 Go to **Gallery** > **Albums** > **Camera**, then touch the photo you wish to adjust.
- 2 Touch  above the photo.
- 3 Drag the four corners to customise the correction area. Then touch . Your device will reshape the photo as a flat, rectangular image.

Record Videos

Record Videos

- 1 Open **Camera** and select **Video** mode.
- 2 Adjust the following settings:
 - Zoom in or out: Pinch in or out on the viewfinder, or drag the zoom slider.
 - Focus: Touch the location you want to focus on. Touch and hold the viewfinder to lock the exposure and focus.
 - Turn the flash on or off: Touch , then touch  to keep the flash on, or  to turn it off.

When using the front camera to record videos, you can set the flash to  (Always on) when there is insufficient light. The camera will then increase the screen brightness to illuminate the subject's face.







- Adjust the beauty effect: Touch  and drag the slider to adjust beauty settings.
- Adjust the video resolution and frame rate: Go to  > **Video resolution** and select the desired resolution. A higher resolution will result in a higher quality video with a larger file size.

Touch **Frame rate** to select a frame rate.

- Select a video format that saves on storage space: Touch  and enable **Efficient video format**.





When this feature is enabled, your device will use a video format that takes up less storage space. However, this may result in other devices being unable to play the video. Please exercise caution when selecting this option.

 Not all devices support these features.

- 3 Touch  to start recording.
While recording, touch and hold  or  to smoothly zoom in or out.
Touch  to take a photo while recording.
- 4 Touch  to pause the recording and  to end the recording.

Slow-Mo Recording



Shoot Slow-Mo Videos

- 1 Go to **Camera** > **More** and select **Slow-mo** mode.
- 2 Touch  and select 4x or 8x.
 The 8x option is not available on certain devices.
- 3 Touch  to start recording.
- 4 Touch  to end the recording.

Time-Lapse Photography





Use Time-Lapse to Create a Short Video

You can use Time-lapse to capture images slowly over several minutes or even hours, then condense them into a short video. This allows you to capture the beauty of change – blooming flowers, drifting clouds, and more.

- 1 Go to **Camera** > **More** and select **Time-lapse** mode.
- 2 Place your device in position. To reduce camera shake, use a tripod to steady your device.
- 3 Touch  to start recording, then touch  to end the recording.
The recorded video is automatically saved to Gallery.

Filters


Apply a Filter to Photos or Videos

- 1 Open **Camera** and select **Photo** or **Video** mode.
- 2 Touch  or  to select a filter and preview the effect.
 Some devices do not have the  icon.
- 3 Touch the shutter button to take a photo or start recording a video.

Adjust Camera Settings

Adjust Camera Settings

You can adjust the camera settings to take photos and videos more quickly.

 The following features may not be available in some camera modes.

Enable Location Tag

Enable **Location tag** to tag your location in photos and videos.

Swipe up on a photo or video in Gallery to view its shooting location.


Use the Assistive Grid to Compose Your Photos

Use the assistive grid to help you line up the perfect shot.

- 1** Enable **Assistive grid**. Grid lines will then appear in the viewfinder.
- 2** Place the subject of your photo at one of the intersecting points, then touch the shutter button.

Mute the Shutter Sound

Enable **Mute** to mute the camera shutter sound.

 This feature is only available in some countries and regions.

Capture Smiles

Enable **Capture smiles**. The camera will take a photo automatically when it detects a smile in the viewfinder.

Manage Gallery

View Photos and Videos

In Gallery, you can view, edit, and share your photos and videos, as well as browse the clips automatically generated from them.

View by Album

You can view photos and videos by album on the **Albums** tab.


Some photos and videos are stored in default albums. For example, videos recorded with the camera are saved in the **Camera** album. Screenshots and screen recordings are saved in the **Screenshots** album.

View by Category

Gallery intelligently sorts photos into categories, allowing you to quickly sift through large albums by category.



Touch a category album on the **Discover** tab (such as food, portrait, or scenery) to view photos in that album.

View Details About Photos and Videos

- 1 In Gallery, touch a photo or video to view it in Full screen mode. Touch the screen again to hide the menu.
- 2 When in Full screen mode, touch  to view details about the photo or video, such as the storage path, resolution, and size.

Share Photos and Videos


There are several ways to share photos and videos from **Gallery**:

- Share a single photo or video: Touch the photo or video, then touch .
- Share multiple photos or videos: In an album, touch and hold to select multiple photos and videos, then touch .



Organise Albums

Organise photos and videos into albums to easily sift through them.



Add Albums

- 1 Go to **Gallery > Albums**.
- 2 Touch , name the album, then touch **OK**.
- 3 Select the photos or videos you want to add, and then move or copy them to the album.


Sort Albums


- 1 Go to **Gallery > Albums > ** and touch **Sort albums**.
- 2 Drag  next to an album to the desired position. Touch **Reset** to reset the albums to the default order.

Move Photos and Videos

- 1 Open an album, then touch and hold to select the photos and videos you want to move.
 - 2 Touch  > **Move** to select the desired album.
 - 3 Once the items are moved, they will no longer be in their original album.
-  The **All photos** and **Videos** albums show all photos and videos stored on your device. Moving items across albums will not affect the view in these albums.

Delete Photos and Videos


Touch and hold to select the items you want to delete, then go to  > **Delete**.

 Some preset albums, such as **All photos**, **My favourites**, **Videos**, and **Camera** albums, cannot be deleted.

Deleted photos and videos will be temporarily moved to the **Recently deleted** album before being permanently deleted after 30 days.

To permanently delete a photo or video manually, touch and hold its thumbnail in the **Recently deleted** album, then go to  > **Delete**.

Recover Deleted Photos and Videos

In the **Recently deleted** album, touch and hold to select the items you want to recover, then touch  to restore them to their original albums.

If the original album has been deleted, a new one will be created.

Add Photos and Videos to Favorites



Open a photo or video, then touch .

The item will appear in both its original album and the **My favourites** album.

Block Albums

Block third-party app albums to prevent them from being displayed in Gallery.

1 In the **Others** list, touch the album you want to block.

2 If  is displayed at the top, go to  > **Block**.
Blocked albums cannot be viewed in other apps except **Files**.

3 To unblock an album, go to  > **Blocked albums**, then touch **Unblock** next to the album.


 Only some albums in **Others** can be blocked.

Apps

Apps

App Basics


Locate an Installed App

Swipe down from the middle of the home screen to show the search bar, and enter the app name. When the app is found, touch  next to its name.

Uninstall an App


You can uninstall an app using either of the following methods:

- Touch and hold the app icon you want to uninstall until your device vibrates, touch **Uninstall**, then follow the onscreen instructions to uninstall the app.
- Go to **Settings > Apps > Apps**, touch the app you want to uninstall, then touch **Uninstall**.





 Some pre-installed system apps can't be uninstalled, as uninstalling them may cause system errors.

Manage Background Apps

1 Access the recent tasks screen using either of the following methods, depending on the navigation method you are using:

- **Gestures:** Swipe up from the bottom of the screen and hold.
- **Three-key navigation:** Touch .

2 On the recent tasks screen, you can:

- Swipe across to view app previews.
- Touch an app preview to access an app.
- Swipe up on an app preview to close an app.
- Swipe down on an app preview to lock it.  will appear at the top of the app preview. Touching  will not close this app.
- Swipe down again to unlock it.  will disappear.
- Touch  to close all apps (except for those you have locked).

Clear the Cache of an App

Delete app cache files to free up storage space.




Go to **Settings > Apps > Apps**, select the app for which you want to clear the cache, then go to **Storage > Clear cache**.

Contacts


Create and Edit Contact Information

You can create contacts in multiple ways, as well as view and manage your contacts list.




Create Contacts

- 1 Open **Phone**, touch the **Contacts** tab, and touch .
If you are creating a contact for the first time, touch **Create new contact** to start adding a contact.
 For Wi-Fi only tablets, open **Contacts** in the **Tools** folder.
- 2 Set a profile picture for the contact, enter information such as the name, organisation, and phone number of the contact, then touch .

Import Contacts



- 1 On the **Contacts** screen, go to  > **Settings > Import/Export**.
- 2 Select **Import via Bluetooth**, **Import via Wi-Fi Direct**, or **Import from storage**, then follow the onscreen instructions to import contacts.

Scan Business Cards to Add Contacts


- 1 On the **Contacts** screen, go to  > **Scan** or go to **Business cards > Scan**.
- 2 Place a business card on a flat surface, adjust the camera so that the contents on the business card are clearly displayed in the viewfinder, then touch  to capture a single or multiple business cards in a row.
- 3 After the photos are taken, your device will automatically identify the contact information.
Touch  to save the contact.

You can view the scanned business cards in **Business cards**.


Merge Duplicate Contacts

- 1 On the **Contacts** screen, go to  > **Settings > Organise contacts > Merge duplicate contacts**.
 For Wi-Fi only tablets, open **Contacts** in the **Tools** folder.
- 2 Select duplicate contacts you want to merge and touch **Merge**.


Search for Contacts

- 1 Open **Contacts**, go to  > **Settings** > **Display preferences**, and touch **All contacts** to display all your contacts. Ensure that the corresponding icon at the bottom is enabled.
- 2 Search for contacts using either of the following methods:
 - Swipe down from the middle of the home screen and enter a keyword for the contact you want to find in the search box (such as their name, initials, or email address). You can also enter multiple keywords, such as "John London", to quickly find matching contacts.
 - On the top of the **Contacts** screen, enter keywords for the contact you want to find in the search box.

Share Contacts




- 1 On the **Contacts** screen:
 - Touch and hold the contact you want to share, then touch **Share contact**.
 - Touch the contact you want to share, then go to  > **Share contact**.
- 2 Select a sharing method, then follow the onscreen instructions to share the contact.



Export Contacts

- 1 On the **Contacts** screen, go to  > **Settings** > **Import/Export**.
- 2 Touch **Export to storage** and follow the onscreen instructions to export contacts. The exported **.vcf** files are saved in **Files** > **Categories** > **Internal storage** by default.

Delete Contacts

Delete contacts using either of the following methods:




- Touch and hold the contact you want to delete, then touch **Delete**.
- Touch the contact you want to delete, then go to  > **Delete contact**.
- On the **Contacts** screen, go to  > **Settings** > **Organise contacts** > **Delete multiple contacts**, select the contacts you want to delete, then touch .

To restore deleted contacts, go to  > **Settings** > **Organise contacts** > **Recently deleted**, touch and hold the contact you want to restore, select any other contacts you also want to restore, then touch .



Manage Contact Groups

You can conveniently send emails or messages to multiple contacts by creating and managing contact groups. Your device automatically groups contacts by company, city, and last contact time, but you can also create new groups based on your preferences.


Create a Contact Group

- 1 Open **Phone**, touch the **Contacts** tab, and touch **Groups**.
 For Wi-Fi only tablets, open **Contacts** in the **Tools** folder.
- 2 Touch , enter the group name, such as "Family" or "Friends", then touch **OK**.
- 3 Follow the onscreen instructions to add contacts to the group, then touch .



Edit a Contact Group

- 1 On the **Groups** screen, select the group you want to edit and touch  to add a new contact.
- 2 Touch  for **Remove members**, **Group ringtone**, **Delete group**, or **Rename**.

Send Group Messages or Emails



 SMS messaging services are not supported on Wi-Fi only tablets.

On the **Groups** screen, open a group. You can then:

- Touch  to send a group message.
- Touch  to send a group email.

Delete Contact Groups


On the **Groups** screen, do either of the following to delete a contact group from your device:


- Touch and hold the group and select **Delete**.
- Touch , select the groups you want to delete, and touch .

Create Personal Information

You can create a business card containing your personal information to share with others. You can also add personal emergency information so you can call for help quickly in an emergency.

Create a Personal Business Card

- 1 Open **Phone**, touch the **Contacts** tab, and touch **My card**.
 For Wi-Fi only tablets, open **Contacts** in the **Tools** folder.



- 2 Set your profile picture and enter personal information, such as your name, work address, and phone number.
- 3 Touch  to automatically create a QR code business card.
You can share your business card using the QR code.

Add Emergency Information

 Calling services are not supported on Wi-Fi only tablets.

- 1 From the **Contacts** screen, go to **My card** > **Emergency information**.
 - 2 Touch **ADD** and set your personal, medical, and emergency contact information.
- Once you have added emergency contacts and you find yourself in an emergency, access the lock screen for inputting your password, go to **Emergency** > **Emergency information** > **Emergency contacts**, and select an emergency contact to make a call.

Erase Contact Traces

- 1 Open **Phone**, touch the **Contacts** tab, then touch a contact to erase your contact traces.
 - 2 Go to  > **Erase history** > **Erase** to delete all call and message records for that contact.
-  This feature is not supported on Wi-Fi only tablets.

Phone

Make a Call

 Calling services are not supported on Wi-Fi only tablets.

Dial a Number or Select a Contact to Make a Call


Use either of the following methods to make a call:

- Open **Phone**, enter part of a phone number, the first letter of a contact's name, or a contact's initials to find a contact, then touch to make a call.
- Open **Phone**, touch the **Contacts** tab, then search for a contact or select a contact in the contact list to make a call.

Touch  to end the call.


Use Speed Dial

Once you've set up speed dialling for a contact, you can quickly call that contact with the assigned number key.

Go to **Phone** >  > **Settings** > **Speed dial**, select a number key, then set a contact for this speed dial number.

Press the Power Button to End a Call

During a call, press the Power button to end the call.

Go to **Phone** >  > **Settings**, and enable **Power button ends call**.

Set a Call Background



To set a wallpaper as the call background, do the following:

1 Go to **Settings** > **Home screen & wallpaper** > **Wallpaper**.

2 Select a picture and set it as the wallpaper.

You can also set a profile picture for a contact to be shown on the call background.


1 Open **Phone**, touch the **Contacts** tab, then select a contact.

2 Touch  and then  to set a profile picture for the selected contact.

Make an International Call

1 Contact your mobile carrier to activate and inquire about the international calling service.

2 Open **Phone**, touch the **Contacts** tab, then select a contact to make a call.


3 For numbers that are not in the contacts list, open the dialler and hold the **0** number key until the **+** icon is displayed. Enter the country code and phone number, then touch  to make an international call.

Manage Call Logs

 Calling services are not supported on Wi-Fi only tablets.

You can merge the call logs of the same contact or number for a tidier and more concise interface, or delete call logs as required.

Merge Call Logs

1 Go to **Phone** >  > **Settings** > **Merge call log**.

2 Select **By contact** and your device will automatically merge the call logs of the same number or contact.

View Missed Calls



1 To display all missed calls, open **Phone**, swipe down on the call log list, then touch the **Missed** tab.

All missed calls are displayed in red in the call log list for you to quickly identify them. You can also find them on the **All** screen.

2 Touch  next to a call log entry to call back or send a message.

Delete Call Logs

Delete call logs using any of the following methods:

- On the **Phone** screen, touch and hold an entry, then touch **Delete entry**.
- On the **Phone** screen, go to  > **Delete entries**, select the entries you want to delete, then touch **Delete**.
- On the **Phone** screen, swipe left on the entry you want to delete, then touch .

Set a Ringtone for Incoming Calls

You can set your favourite music or a video as the ringtone for incoming calls.

If you are carrying your device in your pocket, the ringtone volume will gradually increase. This helps prevent you from missing important calls.

 Calling services are not supported on Wi-Fi only tablets.

Set a Ringtone for a Contact


Set a different ringtone for a particular contact to distinguish more easily when that contact is calling you.

- 1 Open **Phone**, touch the **Contacts** tab, then select the contact you want to set a ringtone for.
- 2 On the contact details screen, touch **Ringtone** and select a ringtone.

Use MeeTime

Use MeeTime to make HD video or audio calls with contacts who have Huawei/Honor devices, such as phones and tablets, and share your screen during calls.


Using GPU Turbo technology, this feature will automatically improve video quality when the network connection is poor. Thanks to its intelligent algorithms, your face will be seen clearly even when making a video call at night or in a poorly-lit environment. During a video call, you can adjust the beauty effects.

 Please make sure your device has been updated to the latest system version.

This feature is only available in some countries and regions.

Enable MeeTime

Open **Contacts**, touch **MeeTime** at the bottom of the screen, and follow the onscreen instructions to activate and enable MeeTime.

 Your linked phone number will be used by default to make and receive MeeTime calls.

Other devices can confirm that you have enabled the feature by checking this number.



Charges for MeeTime


- MeeTime only uses Wi-Fi or mobile data and will not be charged as calls by your carrier. It is recommended that you use this feature over a Wi-Fi network.


- If you need to make a video call using mobile data, you can perform the following to save on the amount of mobile data you use: On the **MeeTime** screen, touch your account to access the **Settings** screen, then turn on the **Data saver** switch.

Make an HD Video or Voice Call




Once MeeTime is enabled, you can view the contacts who have enabled this feature in the **MeeTime** tab. MeeTime calls require an Internet connection.

- 1 On the **MeeTime** screen, select the contact or contact's device you wish to call, then touch  or  on the right.

- 2 During a video call, touch the screen and touch  to access the **Soften** function. Drag the slider left or right to adjust the beautification level.


 For better effects, keep your device within 1 metre of you and ensure that you are in a bright environment.



- 3 Touch **More**. You can then:

- Touch  to mute the call.
- Touch  to use the speaker.
- Touch  to switch to a voice call.

Share Your Screen During a MeeTime Call

During a call, you can share your screen and doodle on it for both parties to convey messages with each other even more effectively. For example, show your parents how to use their phone by talking to them while operating on your phone. When discussing with your colleagues and customers over a call, you can demonstrate your idea and make notes on the screen.



During a video call, touch the screen and go to **More** >  to share your screen with the other party.

- During screen sharing, both parties can touch  in the upper part of their screen to enable or disable the doodle feature.
- During screen sharing, either party can touch  to end sharing.

Set MeeTime Phone Numbers

You can use MeeTime with more than one of your phone numbers.

- 1 On the **MeeTime** screen, touch your account to access the **Settings** screen.
- 2 Touch **Number settings**. You can then:

- Touch  to add another phone number if only one phone number has been linked.
- Touch  to delete any numbers or add new ones if multiple phone numbers have been linked.
- Select one of the added phone numbers to set it as the default number.





Manage Incoming Calls

 Calling services are not supported on Wi-Fi only tablets.





You can use the call waiting feature to answer incoming calls when you are already engaged in a previous call. If you cannot answer a call because your device is faulty or the network signal is poor, you can also set call forwarding to forward calls to another number or device.

Answer or Reject an Incoming Call

If you receive a call when the screen is locked:


- Drag  right to answer the call.
- Drag  left to reject the call.
- Touch  to reject the call and reply with a message.
- Touch  to set a reminder for calling back.

If you receive a call when the screen is unlocked:

- Touch  to answer the call.
- Touch  to reject the call.
- Touch  to reject the call and reply with a message.
- Touch  to set a reminder for calling back.



Enable Call Waiting

The Call waiting feature lets you answer an incoming call when a call is already in progress by placing the first call on hold. This feature requires the support of your carrier. For details, contact your carrier.

Go to **Phone** >  > **Settings** and then go to **More** > **Call waiting**.



 This feature may vary depending on your network provider.

Answer a New Incoming Call During a Call


- 1 When you receive an incoming call when you are already engaged in a previous call, touch  to answer it.
- 2 Touch  or touch a held call in the call list to switch between the two calls.

Enable Call Forwarding

After the Call forwarding feature is enabled, calls that meet your pre-set conditions will be automatically transferred to a specified phone number. This feature requires the support of your carrier. For details, contact your carrier.

- 1 Open **Phone**, go to  > **Settings**, and touch **Call forwarding**.
 - 2 Select and enable a forwarding method, then enter and confirm the target number.
-  This feature may vary depending on your network provider.

Disable Call Forwarding




- 1 Open **Phone**, go to  > **Settings**, and touch **Call forwarding**.
- 2 Select the forwarding mode and disable it.

Filter and Block Spam Calls

 Calling services are not supported on Wi-Fi only tablets.





Set different block rules to block sales, fraud, and other kinds of spam calls.

Filter Spam Calls

- 1 Go to **Phone** >  > **Blocked** > .
Alternatively, go to **Optimiser** > **Blocked** > .
- 2 Touch **Call block rules** and toggle on the switches of corresponding block rules.

Block Incoming Calls from Specific Numbers

You can block incoming calls from specific numbers using either of the following methods:

- Go to **Phone** >  > **Blocked** >  > **Blocklist**, touch , then add the phone numbers you want to block.
- Open **Phone**, touch the **Contacts** tab, touch the contact you want to block, then choose  > **Block contact**.

Set Whether to Receive Notifications for Blocked Calls

Go to **Phone** >  > **Blocked** >  > **Receive notifications** and set whether to receive notifications when calls are blocked.

Emergency SOS and Calls

 This feature is not supported on Wi-Fi only tablets.

Use Emergency SOS

If you are in an emergency situation, you can quickly and secretly send an SOS message or make an SOS call to your emergency contacts.


- 1 Go to **Settings** > **Security** > **Emergency SOS**, and touch **Emergency contacts** to add an emergency contact.
- 2 Enable **Also send SOS message** and **Auto-SOS call**, and set related permissions as prompted.


Once you have enabled the Emergency SOS feature and you are in an emergency situation, press the Power button five times in quick succession and your device will automatically send a message with your current location to your emergency contacts. It will also automatically call your emergency contacts one by one and play a pre-recorded SOS message, then end the call automatically.

If **Auto-SOS call** is disabled, after the message is sent, your device will bring up the emergency call screen, from which you can quickly call an emergency service or one of your emergency contacts.

Make Emergency Calls

In the event of an emergency, you can make emergency calls directly from the lock screen of your device even if there is no signal.

 The emergency call feature is subject to local regulations and individual mobile carriers. Network issues or other types of interference may lead to emergency calls not working.

- 1 From the lock screen, access the screen for entering your password, and touch **Emergency**. If you are in an area with a good signal and your device has an Internet connection, it will automatically obtain your location and display it on the screen.
- 2 Enter your local emergency number and touch  to call the number. Alternatively, touch **Emergency information** and select an emergency contact to call.






Messaging

Send and Manage Messages


 SMS messaging services are not supported on Wi-Fi only tablets.

You can send and receive messages that include text, emojis, pictures, audio files, and more. You can also manage your messages in the message list.

Send Messages



- 1 Open **Messaging** and touch .
- 2 On the **New message** screen, enter your message content. Touch  to add other types of content such as pictures and audio files.
- 3 In the recipient box, touch , select contacts or contact groups, then touch . To send a group message to those not included in your contacts list, touch anywhere blank in the recipient box and enter the recipients' phone number. Touch the return key in the keyboard when you finish entering each of the phone numbers.
- 4 After finishing editing, touch  to send the message.

Cancel Sending a Message

On the **Messaging** screen, go to  > **Settings** > **Advanced**, and enable **Recall messages**. Within six seconds after a message is sent, you can double-tap the message to cancel sending it.



Mark Messages as Read

You can use any of the following methods to mark messages as read:

- New messages will be displayed in the notification panel in the form of a banner and you can mark them as read there.
- On the **Messaging** screen, swipe left on the message that you want to mark as read, then touch .
- On the **Messaging** screen, go to  > **Mark all as read**.

Delete a Message

You can delete messages using either of the following methods:



- On the **Messaging** screen, swipe left the message to be deleted, then touch .
- Touch and hold a message, select multiple messages you wish to delete, then touch . Deleted messages cannot be recovered.

Filter and Block Spam Messages

-  This feature is not supported on Wi-Fi only tablets.

Set different block rules, such as your blocklist, to block sales, fraud, and other kinds of spam messages.



Block Spam Messages


1 Go to **Messaging** >  > **Blocked** > .

Alternatively, go to **Optimiser** > **Blocked** > .

2 Touch **Message block rules** and enable **Block unknown numbers**. Your device will then block all messages from unknown numbers.


Block Messages from Specific Numbers

1 Go to **Messaging** >  > **Blocked** >  > **Blocklist**.

2 Touch  and add the numbers you want to block. SMS and MMS messages sent by these numbers will all be blocked.

Block Messages Containing Specific Keywords

1 Go to **Messaging** >  > **Blocked** >  > **Keyword blocklist**.


2 Touch  and add the keywords to be filtered. All messages containing these keywords will be blocked.

Set Whether to Receive Notifications for Blocked Messages

Go to **Messaging** >  > **Blocked** >  > **Receive notifications** and set whether to receive notifications when messages are blocked.

Manage Blocked Messages

On the Blocked screen, you can manage blocked message, such as by deleting records, restoring messages, or submitting appeals if a number has been incorrectly marked.

Go to **Messaging** >  > **Blocked**. You can then:



- Touch a record and select **Restore to messages** to restore this message to the Messaging app. Touch **Add to trustlist** to add the number corresponding to this message to the trustlist. Touch **Delete** to delete the message record.
- Touch **Clear** to delete blocked messages in batches.
- Touch **Block rules** to change the block rules.

Calendar

Use Events

Events help you schedule activities in your daily and work life, such as attending company meetings, arranging social get-togethers, and making credit card repayments. You can add events and set reminders to help you arrange your schedule in advance.


Add an Event

- 1 Open **Calendar** and touch .
- 2 Enter the details of the event, such as the title, location, and start and end times.
- 3 Touch **Add reminder** to set a time for the event reminder.
- 4 When you are finished, touch .

Search for an Event



- 1 On the **Calendar** screen, touch .
- 2 Enter keywords of your event in the search box, such as the title and location.

Share an Event

- 1 Open **Calendar**, then touch an event on a calendar screen or under the schedule tab.
- 2 Touch  to share the event however you prefer when prompted.

Delete an Event

You can delete an event using either of the following methods:

- On the **Calendar** screen, touch the event you want to delete, then touch .
- On the **Schedule** screen, touch and hold an event, select the events you want to delete, then touch .

Set a Calendar Notification

Set the calendar notification type according to your requirements. You can set status bar notifications, banner notifications, and ringtone notifications. After setting the default reminder time, your device will send a notification at the specified time.

Go to **Calendar** >  > **Settings**.



- Touch **Default reminder time** or **Reminder time for all-day events** to set a reminder time.
- Touch **Notifications** and enable **Allow notifications**. Then follow the onscreen instructions to set a notification type.

Clock

Set Alarms

You can set alarms to play a sound or vibrate at specific times.

Set an Alarm

- 1 Go to **Clock > Alarm** and touch  to add an alarm.
- 2 Set the alarm sound, vibration pattern, repeat cycle, and other settings as needed.
- 3 When you are finished, touch .

Modify or Delete an Alarm

Touch an existing alarm to modify or delete it.

Snooze an Alarm

If you don't want to get up when an alarm rings, simply touch the snooze button or press the Power button.

The snooze length is set when creating the alarm.



Turn Off an Alarm

When an alarm rings, swipe left or right on the button that appears at the bottom of the screen to turn it off.

Use the Timer or Stopwatch

You can use the timer to count down from a specified time. You can also use the stopwatch to measure the duration of an event.

Timer


Go to **Clock > Timer**, set the duration of time, and touch  to start the timer. To stop it, touch .

Stopwatch

Go to **Clock > Stopwatch**, and touch  to start the stopwatch. To stop it, touch .

View the Time in Cities Worldwide


Use **Clock** to see the local time in different time zones around the world.

Go to **Clock > World clock**, touch , and enter the name of a city or select one from the list of cities.

Display Dual Clocks on the Lock Screen

When you are away from your home time zone, use **Dual clocks** to display the time of both your home city and current location on the lock screen.

Go to **Settings > System & updates > Date & time**, enable **Dual clocks**, and set a **Home city**. The time of your home city and current location will now both display on the lock screen.

-  Only one clock will display on the lock screen if your current location is in the same time zone as your home city.







This feature is not supported on Wi-Fi only tablets.

Notepad





Create a Note

To help you quickly keep a track of your thoughts and inspirations, you can create notes using the Handwrite (to write or draw content) and Scan document modes.

Add Content to a Note


- 1** Go to **Notepad > Notes** and touch .
- 2** Enter the title and content of the note. You can then perform the following:
 - Touch  to add a checklist.
 - Touch  to change the text style, paragraph alignment, and background.
 - Touch  to insert a picture. Touch and hold the picture, then drag it to the desired position in the note.
 - To organise your notes for easier access and viewing, touch  after finishing to add a tag for it.
- 3** Touch  to save the note.



Add a Note by Scanning Documents

- 1** Open **Notepad** and go to **Notes >  >  > Scan document**.
- 2** Align your phone camera with the picture or file you want to scan and touch  to start scanning. The scanned pages are saved in Notepad.
- 3** Go to **Extract text > Save > Save images and text > ** to save the note.

Add a Handwritten Note

You can add a handwritten note to write down thoughts and inspirations that would be difficult to convey through text.

- 1** Go to **Notepad > Notes** and touch .

- 2 Touch  to write or draw the content you need in the selected colour.
- 3 Touch  to save the note.




Create To-dos

You can create to-dos to keep a track of day-to-day essentials, such as daily shopping lists, tasks at work, and household chores.

Add a To-do Item

You can add a to-do item and set a time reminder for it.

If you have marked the to-do item as important, you will be prompted with a full-screen reminder when the screen is locked.

- 1 Go to **Notepad > To-dos** and touch .
- 2 Enter your to-do item.
- 3 Touch , set a time, and touch **OK**.
- 4 Enable  to mark the to-do item as important.
- 5 Touch **Save**.

Set Repeated Reminders for a To-do Item

If you specify a time for a to-do item, you can select a repeat mode for it (for example, **Never**, **Every day**, **Every week**, **Every month**, or **Every year**), and your device will repeatedly prompt you to complete the to-do item at the specified time.



Manage Your Notepad


You can sort your Notepad items by category and put them into different folders, delete unwanted items, and share items with other people.

When viewing a list of items or an individual item in Notepad, touch the status bar at the top of the screen to quickly return to the first item or the beginning of the item you are viewing.

Use App Lock for Notepad or Lock a Note

Enable the app lock for Notepad: Go to **Settings > Security > App Lock**, enter the lock screen password or customise the app lock password as prompted, and then turn on the switch next to Notepad.





Lock a note: Open the note you need to lock in Notepad, go to  > **Add lock**, and follow the onscreen instructions. To unlock the note, go to  > **Remove lock**.


If your device supports fingerprint or face unlock, you can use fast authentication by performing the following: Go to **Notepad** >  > **Settings** > **Note lock**, then enable **Unlock with Fingerprint ID** and **Unlock with Face Recognition**.

Sort Notepad Items by Category

To sort the notes into different folders by category, you can add labels in different colours.

You can sort notepad items using either of the following methods:

- On the **All notes** screen, swipe left on an item, select  or  to move this item to the top, or add a star mark to it.
- On the **All notes** or **All to-dos** screen, swipe left on an item, touch , and select a notebook for this item.
- Touch and hold a note or to-do item, select the ones you want to classify under the same category, then touch .


 Items in an Exchange account cannot be moved.

Sync Notepad Items



Swipe down from the Exchange mail list to sync the notes and tasks from the current account to Notepad. The corresponding notes and to-do items will then be generated automatically. A folder named after the Exchange account will be automatically generated in Notepad.

Share Notepad Items

You can share Notepad items in the following ways:


- To share a single note or to-do item, open the one you want to share from the **All notes** or **All to-dos** screen, touch , and share it as prompted.

Notes can be shared by touching **As image**, **As text**, **Export as document**, or **To another device**.

-  After touching **Export as document**, you can choose to export the note as a TXT or HTML file, which will be saved to **Files** > **Internal storage** > **Documents** > **NotePad** by default.
- To share multiple notes, on the **All notes** screen, touch and hold a note, and select the ones you want to share. Then touch  and share them as prompted.



Print Notepad Items


1 On the **All notes** screen, open the item you want to print.

2 Go to  > **Print**, then select a printer and configure printing settings as prompted.

Delete Notepad Items




You can delete Notepad items using either of the following methods:

- On the **All notes** or **All to-dos** screen, swipe left on an item, and touch  to delete it.
- Touch and hold a note or to-do item you want to delete, select or drag over the check boxes of any other notes or to-do items you want to delete as well, then touch .

To restore a deleted Notepad item, touch **All notes** or **All to-dos**, select the item you want to restore in **Recently deleted**, then touch .

Recorder




Recording

- 1 In the **Tools** folder, open **Recorder**, and touch  to start a recording.
 - 2 During a recording, you can touch  to add a tag.
 - 3 When you are finished, touch  to stop recording.
 - 4 You can also touch and hold a recording, then share, rename, or delete it.
- Recordings are saved under **Files > Categories > Internal storage > Sounds**.



Play a Recording

Recording files are listed on the **Recorder** home screen. Touch a recording to play it.


On the recording playback screen, you can:

- Touch  to skip the muted parts.
- Touch  to adjust the playback speed.
- Touch  to add a tag.
- Touch a tag to rename it.

Edit a Recording

- 1 On the **Recorder** home screen, touch a recording.
- 2 Touch  to display the waveform of the recording.
- 3 Drag the start and end bars to adjust the clip length. Pinch your fingers on the waveform to zoom in or out to adjust the clip length more precisely.
- 4 Touch  and select **Keep selected part** or **Delete selected part**.

Share Recordings

- 1 On the **Recorder** home screen, touch the recording you want to share.
- 2 Go to  > **Share**.
- 3 Select your preferred sharing method and follow the onscreen instructions to share the recording.

Email

Add Email Accounts

Add your email account in **Email** to start using your device for convenient email access.

Add a Personal Email Account

- 1 Open **Email** on your device, then select from the available mailbox providers or touch **Other**.
- 2 Enter your email address and password, touch **Sign in**, and follow the onscreen instructions to complete configuration. The system will automatically connect to the server and check the server settings.

Add an Exchange Account




Microsoft Exchange enables digital messaging within a company. If your company mailbox uses the Exchange server, you can log in to your company email account on your device.

- 1 Contact the administrator of the company email server to obtain the domain name, server address, port number, and security type.
- 2 Open **Email** and select **Exchange**.
- 3 Enter the email address, user name, and password.
- 4 Touch **Manual setup**. On the **Account setup** screen, enter the email domain name, server address, port number, and security type.
- 5 Touch **Next**, then follow the onscreen instructions to complete configuration. The system will automatically connect to the server and check the server settings.


Use Emails

Select an email account, then write an email and send it to the recipient's email addresses.


Send Emails

- 1 Open **Email** and touch .
- 2 Enter the recipient's email address, or touch  to select a contact or group, then touch .
- 3 Add the addresses of any recipients to whom you wish to CC or BCC the email.

If you have more than one email account, you will also need to select the email address you wish to send the email from.




- 4 Write the email, enter the subject, then touch .

Save an Email as a Draft

On the **Compose** screen, enter the recipient's email address, subject, or email content, and touch  to save the email as a draft.



To view draft emails, go to **Inbox > Show all folders > Drafts**.

Reply to an Email

- 1 On the **Inbox** screen, open the email you wish to reply to.
- 2 Touch  to reply to the email sender, or touch  to reply to everyone in the thread.
- 3 After writing your reply, touch .

Set Encryption for Outgoing Emails

You can encrypt outgoing emails to protect your confidential information. Encrypted emails can only be viewed by recipients who have the required digital certificates, thereby ensuring information security.


- 1 Apply for and install a digital certificate.
 -  You need to apply for a digital certificate from a trusted third-party certificate authority (CA) before installing it. The processing procedure varies between different CAs. For details, refer to the relevant CA website.
- 2 From the **Inbox** screen, go to  > **Settings**.
- 3 Touch the account you want to set encryption for, touch **Email encryption**, then enable **Encrypt outgoing emails**.
- 4 If the certificate has been installed, select **Encryption certificate** and set **Encryption algorithm** according to your preferences.
If no certificate has been installed, enable **Send encrypted emails without installing certificates**.

View and Manage Emails

Receive, view, and manage your emails in the inbox.

View Emails

- 1 Open **Email**, then swipe down on the **Inbox** screen to refresh the email list.
If you have multiple email accounts, touch **Inbox** and select the email account you want to view.
- 2 Open an email, then view, reply to, forward, or delete the email.

If you are notified about an important event in an email, go to  > **Add to calendar** to import the event into your calendar.

3 Swipe left or right on the email screen to view the previous or next email.

Organise Emails by Subject


On the **Inbox** screen, go to  > **Settings** > **General**, and enable **Organise by subject**.

Add an Email Contact to a Group

You can create email groups to communicate more efficiently.

1 On the **Inbox** screen, open an email, and touch **Add to group**.

2 Choose to add the email sender or recipient to the group, and touch **OK**.


3 On the group selection screen, select an existing group, then touch  to save the contact in the group.

Alternatively, touch **Create group**, enter the group name, then touch **Save**.

Once you have created a group, you can select the group from the recipient drop-down list to send emails to group members.

Sync Emails Automatically

After automatic email syncing is enabled, the emails on your device will be automatically synced with those on the email server.

1 From the **Inbox** screen, go to  > **Settings**.


2 Touch the account you wish to sync emails for, then turn on the **Sync Email** switch.

3 Touch **Sync frequency** to set the automatic syncing period.

Search for Emails

On the **Inbox** screen, touch the search box, then enter keywords such as the subject or content of the email.


Delete Emails

On the **Inbox** screen, touch and hold the email you want to delete, touch any other emails you want to delete as well, then touch .

Manage Multiple Email Accounts

You can add and manage multiple email accounts.

Add Multiple Email Accounts


1 Go to **Email** >  > **Settings** > **Add account**.

- 2 Select an existing email service provider or touch **Other**, then follow the onscreen instructions to add an email account. Repeat for each of the accounts you wish to add.


Switch Between Email Accounts

On the **Inbox** screen, touch **Inbox** and select the email account you wish to use.

Change Account Name and Signature

On the **Inbox** screen, go to  > **Settings**, select an account, and set the corresponding **Account name**, **Signature**, and **Default account**.

Log Out of an Email Account

On the **Inbox** screen, go to  > **Settings**, select an account, and touch **Remove account**.


Calculator

Calculator


Use the calculator on your device to perform basic mathematical calculations and for calculating exponential, logarithmic, and trigonometric functions.

Use the Basic Calculator





You can open the calculator using either of the following methods:

- Swipe down from the middle of the home screen to display the search box. Search for **Calculator**, and the first result will be the preinstalled **Calculator** app.
- Find **Calculator** in the **Tools** folder.
- Swipe up from the bottom of the lock screen to display the shortcut panel, then touch  to open the calculator.

Use the Scientific Calculator

Open the calculator and go to  > **Scientific**.



Copy, Delete, or Clear Numbers


- Copy a calculation result: Touch and hold the calculation result, touch **Copy**, then paste the result somewhere else, such as in a note or message.
- Delete the last digit: Touch .
- Clear the display: Touch . You can also touch  to clear the display after touching  to complete the calculation.

Torch

Torch

You can turn on the torch using either of the following methods:

- Swipe down from the status bar to open the notification panel, and touch  to turn the torch on or off.
- Swipe up from the bottom edge of the lock screen to display the shortcut panel, and touch  to turn the torch on or off.

When turned on, a notification indicating that the torch has been turned on will be displayed on the lock screen. Touch  to turn off the torch.

App Twin

Enable App Twin

App Twin enables you to log in to two WhatsApp or Facebook accounts simultaneously, allowing you to keep your work and private life separate.

 **App Twin** is only supported by some apps.

Go to **Settings > Apps > App Twin**, and enable **App Twin**. The twin app will then be displayed on the home screen.

Tablet Manager

Clean Up Device Storage

You can use **Cleanup** in **Optimiser** to scan for redundant or large files, such as app residue, unwanted installation packages, WeChat data, and more. Once detected, you can choose whether or not to delete files as suggested.

- 1 Open **Optimiser**, then touch **Cleanup**.
- 2 When the scan is complete, touch **Clean up** after each item and delete any files you don't need.

Automatically Clean Up System Trash

- 1 Open **Optimiser**, and touch **Cleanup**.
- 2 Swipe down from the top of the screen, and your device will automatically clean up system trash.

Manually Clean Up System Trash

In addition to automatic cleanup, your device will also detect and recommend trash files for you to clean up manually.

On the **Cleanup** screen, touch **Clean up** next to a category, select the items you want to clean up, then touch **DELETE**.

Clean Up Duplicate Files

Optimiser can identify duplicate files on your device.

On the **Cleanup** screen, touch **Duplicate files**, then select unwanted files to delete them.

Manage Data Usage

 This feature is not supported on Wi-Fi only tablets.

Open **Optimiser**, then touch **Data usage** to view data usage and manage network access.

View and Manage High Data Consumption Apps


- 1 You can find out how much data your apps are using in comparison to each other by going to **Data usage this month** on the Data usage screen.
- 2 Touch a high data consumption app to set mobile data, roaming data, or background data usage limits for it.

View and Set the Network Access Permission of an App

On the Data usage screen, touch **Network access**, then change the settings for apps that consume a large amount of data (such as video streaming apps) so they can only be used when you are connected to a Wi-Fi network.

Enable or Disable Smart Data Saver

Enable Smart data saver to prevent apps from using mobile data in the background.

- 1 On the Data usage screen, touch **Smart Data Saver**, then enable it. The  icon will then display on the status bar.
- 2 If you want to allow unrestricted access to data for some apps even when they are running in the background, toggle on the switches for these apps.

Add Mobile Data Usage Reminders

Add data plans for your SIM cards and usage reminders in **Optimiser** to keep you informed of your data consumption.

- 1 On the **Data usage** screen, go to **More data settings** > **Monthly data limit** and follow the onscreen instructions to add a data plan.
- 2 On the **More data settings** screen, touch **Usage reminders**. From there, you can set whether a notification will be sent or if mobile data will be disabled once the monthly data limit or roaming data limit has been topped.

- 3 On the **More data settings** screen, you can set whether to **Show data used when the screen is locked**.

Filter and Block Spam Calls

 Calling services are not supported on Wi-Fi only tablets.

Set different block rules to block sales, fraud, and other kinds of spam calls.

Filter Spam Calls





- 1 Go to **Phone** >  > **Blocked** > .

Alternatively, go to **Optimiser** > **Blocked** > .

- 2 Touch **Call block rules** and toggle on the switches of corresponding block rules.

Block Incoming Calls from Specific Numbers

You can block incoming calls from specific numbers using either of the following methods:

- Go to **Phone** >  > **Blocked** >  > **Blocklist**, touch , then add the phone numbers you want to block.
- Open **Phone**, touch the **Contacts** tab, touch the contact you want to block, then choose  > **Block contact**.

Set Whether to Receive Notifications for Blocked Calls



Go to **Phone** >  > **Blocked** >  > **Receive notifications** and set whether to receive notifications when calls are blocked.

Filter and Block Spam Messages

 This feature is not supported on Wi-Fi only tablets.

Set different block rules, such as your blocklist, to block sales, fraud, and other kinds of spam messages.



Block Spam Messages


- 1 Go to **Messaging** >  > **Blocked** > .

Alternatively, go to **Optimiser** > **Blocked** > .




- 2 Touch **Message block rules** and enable **Block unknown numbers**. Your device will then block all messages from unknown numbers.

Block Messages from Specific Numbers

- 1 Go to **Messaging** >  > **Blocked** >  > **Blocklist**.

- 2 Touch  and add the numbers you want to block. SMS and MMS messages sent by these numbers will all be blocked.

Block Messages Containing Specific Keywords


- 1 Go to **Messaging** >  > **Blocked** >  > **Keyword blocklist**.
- 2 Touch  and add the keywords to be filtered. All messages containing these keywords will be blocked.

Set Whether to Receive Notifications for Blocked Messages

Go to **Messaging** >  > **Blocked** >  > **Receive notifications** and set whether to receive notifications when messages are blocked.

Manage Blocked Messages

On the Blocked screen, you can manage blocked message, such as by deleting records, restoring messages, or submitting appeals if a number has been incorrectly marked.

Go to **Messaging** >  > **Blocked**. You can then:

- Touch a record and select **Restore to messages** to restore this message to the Messaging app. Touch **Add to trustlist** to add the number corresponding to this message to the trustlist. Touch **Delete** to delete the message record.
- Touch **Clear** to delete blocked messages in batches.
- Touch **Block rules** to change the block rules.

One-Touch Optimisation

Use the **OPTIMISE** feature of **Optimiser** to keep your device in an optimal state.

- 1 Open **Optimiser**, and touch **OPTIMISE**.
- 2 Wait until **Optimiser** finishes checking your device and provides you with the optimisation results.

Tablet Clone


Use Tablet Clone to Move Data to Your New Device

Tablet Clone lets you quickly and seamlessly move all the basic data (including contacts, calendar, images, and videos) from your old device to your new device.

Migrate Data from an Android Device


- 1 On your new device, open the **Tablet Clone** app. Alternatively, go to **Settings** > **System & updates** > **Tablet Clone**, touch **This is the new device**, then touch **Huawei** or **Other Android**.

- 2 Follow the onscreen instructions to download and install **Tablet Clone** on your old device.
- 3 On your old device, open the **Tablet Clone** app and touch **This is the old device**. Follow the onscreen instructions to connect your old device with your new device by scanning a code or connecting manually.
- 4 On your old device, select the data you want to clone, then touch **Transfer** to start cloning.

 **Tablet Clone** is only available on devices running Android 7.0 or later.

Migrate Data from an iPhone or iPad

- 1 On your new device, open the **Tablet Clone** app. Alternatively, go to **Settings > System & updates > Tablet Clone**, touch **This is the new device**, then touch **iPhone/iPad**.
- 2 Follow the onscreen instructions to download and install **Tablet Clone** on your old device.
- 3 On your old device, open the **Tablet Clone** app and touch **This is the old device**. Follow the onscreen instructions to connect your old device with your new device by scanning a code or connecting manually.
- 4 On your old device, select the data you want to clone, then follow the onscreen instructions to complete the data cloning.

 **Tablet Clone** is only available on devices running iOS 8.0 or later.

Settings

Search for Items in Settings

Quickly Find What You're Looking For

Tired of trudging through layers of settings? Just search for them using the search box.


- Swipe down from the middle of the screen to display the search box. Enter the name of a setting to obtain search results.
- Open **Settings**, and enter the name of a setting in the search box at the top of the screen, to obtain search results.

Wi-Fi

Introduction to Wi-Fi

Connecting to the Internet over Wi-Fi is an effective way to save mobile data. You can also enable Wi-Fi security monitoring to avoid risky hotspots and ensure safe Internet access.

Connect to a Wi-Fi Network


 Be extra careful when connecting to a free public Wi-Fi hotspot to avoid security risks and economic loss resulting from the leakage of your personal data.


- 1 Go to **Settings** > **Wi-Fi**, and enable **Wi-Fi**.
- 2 Connect to a Wi-Fi network on the **Wi-Fi** screen using either of the following methods:
 - Select a Wi-Fi network to connect to under **Available networks**. A password is required for encrypted networks.
 - To manually add a Wi-Fi network, scroll down to the bottom of the screen, touch **Add network**, and enter the SSID and password as prompted to complete the connection.

The  icon displayed on the status bar indicates that the device is connected to Wi-Fi.

Transfer Data Using Wi-Fi Direct

You can use Wi-Fi Direct to transfer data between Huawei devices. Wi-Fi Direct allows you to transfer large files to a nearby device more quickly than Bluetooth and without having to pair the devices.

- 1 On the receiving device, go to **Settings** > **Wi-Fi** and enable **Wi-Fi**.
- 2 Go to **More settings** > **Wi-Fi Direct** to start searching for nearby devices that have enabled Wi-Fi Direct.
- 3 On the sending device, touch and hold to select the files you want to share, touch , and select **Wi-Fi Direct**.

 These steps may be different if you are sharing files directly from an app.

4 Touch the icon of the receiving device to establish a connection, then share the files.

5 On the receiving device, accept the Wi-Fi Direct transfer request.

Then go to **Files > Categories > Internal storage > Wi-Fi Direct** to view the received files.

Bluetooth

Bluetooth

You can connect your device to Bluetooth headsets, speakers, and car kits. You can also use Bluetooth to share data between your device and other devices.

Make sure your device is within 10 m (about 33 ft.) of other Bluetooth devices.

Enable or Disable Bluetooth

You can enable or disable Bluetooth in either of the following ways:

- Swipe down from the status bar to open the notification panel, swipe down further to show all shortcut switches, then enable or disable **Bluetooth**. Touch and hold the switch to enter the **Bluetooth** settings screen.
- Go to **Settings > Bluetooth**, then enable or disable **Bluetooth**.


Set a Bluetooth Name

Set a Bluetooth name for your device to easily identify it during connection.

- 1** On the **Bluetooth** settings screen, toggle the **Bluetooth** switch on.
- 2** Touch **Device name**, enter a name, then touch **OK**.

Pair with a Bluetooth Device



- 1** Enable Bluetooth on the target device and set it to discoverable. For detailed instructions, refer to the device's user guide.
- 2** From your device, access the **Bluetooth** settings screen, and enable **Bluetooth** to have your device automatically search for nearby Bluetooth devices.
- 3** From the list of **Available devices**, select the one you want to pair your device with, and follow the onscreen instructions to complete pairing.

On the **Bluetooth** settings screen, touch  to view tips for connecting various Bluetooth devices.


Transfer Files via Bluetooth

You can use Bluetooth to transfer videos, pictures, contacts, and more to another device provided that both devices are within the effective Bluetooth range.

- 1** Pair the sending and recipient devices via Bluetooth.


- 2 On the sending device, touch and hold a file, select the files you want to share, touch , and select **Bluetooth**.
 -  Operations may vary if you are sharing files from apps directly.
- 3 Touch the Bluetooth name of the recipient device to start sharing.
- 4 On the recipient device, accept the Bluetooth transfer request.

Unpair a Bluetooth Device

- 1 On the **Bluetooth** settings screen, enable the **Bluetooth** switch.
- 2 In the list of **Paired devices**, touch  next to the name of the device you wish to unpair, then touch **Unpair**.

Mobile Data

Enable 5G

-  • 5G services are only available in some countries and regions.
 - Not all devices support 5G.
 - This feature is not supported on Wi-Fi only tablets.

5G refers to the fifth generation of mobile communications technology. Compared with a 4G network, a 5G network has a higher data transmission rate and a shorter delay.

When two SIM cards are inserted, only the default mobile data SIM will support 5G, while the other will only support 4G/3G/2G.

- 1 The 5G service depends on the support of your carrier's network and its deployment of relevant services. Please contact your carrier to activate the 5G service.
- 2 If your device has two SIM cards inserted, go to **Settings > Mobile network > SIM management**, and set SIM 1 or SIM 2 as the default mobile data SIM.
- 3 Go to **Settings > Mobile network > Mobile data**, and enable **5G** for the default mobile data SIM.


The 5G service may be unavailable in certain areas due to frequency interference with the carrier network.

Share Your Network Connection with Other Devices

-  Data services are not supported on Wi-Fi only tablets.

Once **Personal hotspot** has been enabled, you can share your mobile data or the Wi-Fi network your device is currently connected to with other devices.

Share Your Network via Personal Hotspot


-  • The settings items vary by device. If your device does not provide a specific item, it indicates that the corresponding feature is not supported.
- Some Wi-Fi networks that require authentication cannot be shared.

Go to **Settings** > **Mobile network** > **Personal hotspot**, and enable **Personal hotspot**. The mobile data or Wi-Fi network connection of your device will then be shared with other devices.

You can also perform the following for the personal hotspot:

- Set **Device name**.
- Set **Password**.
- Touch **Connected devices** to view the connected devices list and blocklist. Touch a device in the **Connected devices** list to move it to the **Blocklist** list as prompted. You can also remove a device from the list.
- If you are sharing a mobile data network, you can also touch **More** to set **Data limit** and **AP band**.

Share Your Network via Bluetooth

- 1 Go to **Settings** > **Bluetooth**, and enable **Bluetooth**. Select a device, then follow the onscreen instructions to complete pairing.
- 2 Go to **Settings** > **Mobile network** > **Personal hotspot** > **More**, and enable **Bluetooth tethering**.
- 3 On the **Bluetooth** settings screen of the paired device, touch  next to the name of your device, then enable **Internet access** to share your network.

Share Your Network via USB

- 1 Use a USB cable to connect your device to your computer.
- 2 On your device, go to **Settings** > **Mobile network** > **Personal hotspot** > **More**, and enable **USB tethering** to share your mobile data or the currently connected Wi-Fi network.

Manage Data Usage

-  This feature is not supported on Wi-Fi only tablets.

Open **Optimiser**, then touch **Data usage** to view data usage and manage network access.

View and Manage High Data Consumption Apps


- 1 You can find out how much data your apps are using in comparison to each other by going to **Data usage this month** on the Data usage screen.
- 2 Touch a high data consumption app to set mobile data, roaming data, or background data usage limits for it.

View and Set the Network Access Permission of an App

On the Data usage screen, touch **Network access**, then change the settings for apps that consume a large amount of data (such as video streaming apps) so they can only be used when you are connected to a Wi-Fi network.

Enable or Disable Smart Data Saver

Enable Smart data saver to prevent apps from using mobile data in the background.

- 1 On the Data usage screen, touch **Smart Data Saver**, then enable it. The  icon will then display on the status bar.
- 2 If you want to allow unrestricted access to data for some apps even when they are running in the background, toggle on the switches for these apps.

Add Mobile Data Usage Reminders

Add data plans for your SIM cards and usage reminders in **Optimiser** to keep you informed of your data consumption.



- 1 On the **Data usage** screen, go to **More data settings** > **Monthly data limit** and follow the onscreen instructions to add a data plan.
- 2 On the **More data settings** screen, touch **Usage reminders**. From there, you can set whether a notification will be sent or if mobile data will be disabled once the monthly data limit or roaming data limit has been topped.
- 3 On the **More data settings** screen, you can set whether to **Show data used when the screen is locked**.

More Connections

Project Your Device Screen Wirelessly

You can project your tablet screen wirelessly to a large display (such as a TV).

- 1 Perform the following based on the model and functions of the large display:
 - **If the large display supports Miracast**, turn on its wireless projection switch.
 - **If the large display does not support Miracast**, connect a wireless HDMI adapter to it. Ensure that the wireless HDMI adapter is connected to a power supply.

 To check whether the large display supports Miracast and how to enable wireless projection on it, consult the user guide or customer service of the large display manufacturer.
- 2 On your device, swipe down from the status bar to open the notification panel, and turn on  .
- 3 Swipe down again to show all shortcuts and enable **Wireless Projection**. Your device will start searching for available display devices.

Alternatively, go to **Settings > More connections** and enable **Wireless Projection**.

- 4 In the device list, touch the name corresponding to the large display or wireless HDMI adapter to complete the projection connection.

Alternatively, swipe down from the status bar on your tablet, and touch **Disconnect**.

Projection Using a Docking Station

You can use a docking station to connect your device with a large display, and connect them with a wired keyboard and mouse.

- 1 Prepare a docking station.
Multiple types of ports are available on a docking station. If the large display supports HDMI and you need to use a wired mouse and keyboard, use a docking station with at least one HDMI port and two USB ports.
- 2 Connect your device and the large display to the docking station, then connect the wired mouse and keyboard to the docking station.
- 3 On the external display, set the corresponding HDMI, DP, or MiniDP input as the signal source.

Huawei Share

Huawei Share is a wireless sharing technology that allows you to quickly transfer images, videos, documents, and other types of files between devices. This technology uses Bluetooth to discover nearby devices that supports Huawei Share and Wi-Fi Direct to transfer files without using mobile data.


Enable or Disable Huawei Share


You can enable or disable Huawei Share in either of the following ways:

- Swipe down from the status bar to open the notification panel, swipe down on it again to show all shortcuts, then turn on or turn off **Huawei Share**. You can also touch and hold **Huawei Share** to access its settings screen.
- Go to **Settings > More connections > Huawei Share** to enable or disable **Huawei Share**.

Quickly Share Files Between Devices with Huawei Share

You can use Huawei Share to quickly share files between Huawei devices. The recipient can preview the files before they are sent, then view the full content of the files once they have been received. For example, the recipient can view received pictures or videos in Gallery.

- 1 On the receiving device, enable **Huawei Share**.
- 2 On the sending device, touch and hold to select a file or album you want to share, then touch . Touch **Huawei Share**, then touch the icon of the receiving device to send the file.

 These steps may be different if you are sharing files directly from an app.

- 3 On the receiving device, touch **Accept** to accept the transfer.


To view the received files, open **Files**, touch the **Categories** tab, then go to **Internal storage > Huawei Share**.

You can also view the received images or videos by going to **Gallery > Albums > Huawei Share**.

Share Files Between Your Device and Computer with Huawei Share

You can use Huawei Share to easily share files wirelessly between your device and a computer (Windows or macOS).

- 1** Make sure your device and computer are connected to the same Wi-Fi network.
- 2** On your device, enter the **Huawei Share** settings and enable **Huawei Share** and **Computer Share**.
- 3** Make a note of the name displayed next to **Name shown on computers**, as well as the user name and password under **Verification**.
- 4** Perform the following operations on a Windows-based computer (desktop or laptop) or a macOS-based computer (laptop):
 - Windows: Go to **This PC (Computer) > Network** on the computer.
 - macOS: Go to **Finder > Go to > Network** on the computer.


 Currently, this feature is only available on Macs running macOS 10.8 to 10.14.
- 5** On your computer, double-click the name of your device and enter the user name and password previously noted down.
- 6** Open a shared folder on your device, such as the Internal storage or Album folder to view, edit, or copy files from your device to your computer or vice versa.
Changes made to files in the shared folders on your computer will be automatically synced to your device and vice versa.

One-Touch Printing with Huawei Share

When a printer that supports Huawei Share is nearby, you can use Huawei Share to find the printer and print out pictures or PDF files stored on your device.

- 1** Depending on the type of printer, ensure the following:
 - Wi-Fi capable printers: The printer must be powered on and connected to the same network as your device.
 - WiFi Direct capable printers: The printer must be powered on and have enabled WiFi Direct.
 - Bluetooth capable printers: The printer must be powered on and discoverable via Bluetooth.
- 2** On your device, preview the file to be printed, then go to **Share > Huawei Share**.
- 3** Once the printer has been discovered, touch its name on your device, and adjust the settings on the preview screen. Then touch **PRINT** to print.

If you are connecting a Bluetooth printer to your device for the first time, find the printer on your device, touch the printer name, then press and hold the Power button on the printer for about 1 second to confirm the connection.

-  For a list of supported printers, touch **Help** on the Huawei Share sharing screen, select **Printers**, then touch **What printers are supported?**.

Print Images and Documents

Connect your device to a Mopria-certified printer via Wi-Fi, and then you will be able to print images and documents from your device.

Connect Your Device to a Printer

- 1** Check the printer manual or consult with its manufacturer to verify that it is Mopria-certified.
If it is not, consult with its manufacturer to install the corresponding app or plug-in for it on your device.
- 2** Connect your device and the printer to the same Wi-Fi network using any of the following methods:
 - Connect to a Wi-Fi router: Enable Wi-Fi on the printer and connect it to the Wi-Fi router. On your device, go to **Settings > Wi-Fi**, enable **Wi-Fi**, touch the same Wi-Fi router, and follow the onscreen instructions to complete the settings.
 - Connect with Wi-Fi Direct: If your printer supports Wi-Fi Direct, follow the instructions in the printer manual to enable this feature. On your device, go to **Settings > Wi-Fi**, enable **Wi-Fi**, go to **More settings > Wi-Fi Direct**, then touch the printer to establish the connection.
 - Connect to your printer's hotspot: If your printer can double as a wireless hotspot, follow the instructions in the printer manual to enable the hotspot and set a password. On your device, go to **Settings > Wi-Fi**, enable **Wi-Fi**, touch the printer's hotspot, then follow the onscreen instructions to complete the settings.
- 3** Go to **Settings > More connections > Printing > Default Print Service**, and enable **Default Print Service**.
- 4** Select the printer from the search results and follow the onscreen instructions to add the printer.

Print Files

To print files in **Gallery** and **Notepad**, do the following:

- Print an image: Open **Gallery**. Open the image you want to print, go to **More > Print or export to PDF**, select the printer, then follow the onscreen instructions to complete the printing.
- Print a note: Open **Notepad**. Open the note you want to print, touch **Print**, then follow the onscreen instructions to complete the printing.

Connect to a VPN Network

A virtual private network (VPN) is a temporary connection that extends a private network across a public network, encrypting data transmission to provide security.

When working outside the office, you can use a VPN to securely access your company's Intranet.

The following types of servers are supported:

- PPTP: It stands for Point-to-Point Tunneling Protocol, offering MPPE encryption.
- L2TP: It stands for Layer 2 (Data Link Layer) Tunneling Protocol, offering IPsec PSK and IPsec RSA encryption.
- IPsec Xauth: Offering PSK, RSA, and Hybrid RSA encryption.

Connect to a PPTP Server

- 1** Obtain the required data such as the VPN server name and address from your VPN server administrator.
- 2** Go to **Settings > More connections > VPN > Add VPN network**, enter the VPN name, set the server type to **PPTP**, then enter the server address.
- 3** If the VPN server does not have a DNS address, touch **Show advanced options** and enter the DNS domain, DNS server address, and forwarding route.
- 4** Touch **Save**.
- 5** Touch the VPN you have just set up, enter your VPN user name and password, then touch **Connect**.

Connect to an L2TP/IPsec PSK Server

- 1** Obtain the VPN server name, server address, L2TP key (optional), IPsec identifier (optional), and IPsec pre-shared key from your VPN server administrator.
- 2** Go to **Settings > More connections > VPN > Add VPN network**, enter the VPN name, set the server type to **L2TP/IPsec PSK**, then enter the server address, L2TP key, IPsec identifier, and IPsec pre-shared key.
- 3** If the VPN server does not have a DNS address, touch **Show advanced options** and enter the DNS domain, DNS server address, and forwarding route.
- 4** Touch **Save**.
- 5** Touch the VPN you have just set up, enter your VPN user name and password, then touch **Connect**.

Home Screen & Wallpaper

Manage the Home Screen Layout

You can customise the home screen layout to suit your device usage habits.

Move an App Icon on the Home Screen

Touch and hold an app icon until your device vibrates, then drag it to the desired position on the home screen.

Keep Home Screen Icons Aligned

Pinch two fingers together on the home screen to access **Home screen settings** mode, then enable **Auto-align**. With this feature enabled, empty spaces will automatically be filled when apps are removed.

Lock Home Screen Icon Positions

Pinch two fingers together on the home screen to access **Home screen settings** mode, then enable **Lock layout**.

Select the Home Screen Layout Pattern

Pinch two fingers together on the home screen, go to **Home screen settings > Layout**, then select a layout pattern you prefer.

Set Your Home Screen in Settings

You can also go to **Settings > Home screen & wallpaper > Home screen settings**, then enable **Auto-align** and more.

Put App Icons in Folders

For easy management of your app icons on the home screen, you can stack similar apps in a folder and name the folder.

- 1 Touch and hold an app icon until your device vibrates, then drag it over another app. A folder will automatically be created to house these two apps.
- 2 Open a folder, touch its name, then enter a name for it.

Add App Icons to a Folder or Remove Them

Open a folder and touch . Then you can:

- Select one or more apps, and touch **OK** to add them to the folder.
- Deselect one or more apps, and touch **OK** to remove them from the folder. If you deselect all apps, the folder will be deleted.

Use App Drawer to Store Apps

You can put your apps in a drawer and display only frequently used apps on your home screen to streamline your home screen.

Enable App Drawer

Go to **Settings > Home screen & wallpaper > Home screen style**, and select **Drawer**.

Once enabled, you can swipe up on the home screen to access all of your apps in the drawer.

Add Apps in the Drawer to the Home Screen

In Drawer mode, you can swipe up on the home screen to display the App Drawer. Touch and hold the app you want to add until your device vibrates, then drag it to the desired position on the home screen.

Move Apps Back to the Drawer

Touch and hold an app icon until your device vibrates, then touch **Remove**. This operation will only remove the app icon from your home screen but will not uninstall it.

You can still find it in the app drawer.

Disable the Drawer Style

To disable the drawer style, set **Home screen style** to **Standard**.

Display & Brightness

Adjust the Screen Brightness, Colour Mode, and Colour Temperature

You can set the screen brightness, colour mode, and colour temperature according to your preferences.



Automatically Adjust the Screen Brightness

Go to **Settings > Display & brightness**, and enable **Automatic**.

Your device will automatically adjust the screen brightness according to the ambient lighting conditions.

Manually Adjust the Screen Brightness

You can manually adjust the screen brightness using either of the following methods:

- Swipe down from the status bar to open the notification panel. In the  section, drag the slider to adjust the screen brightness.
- Go to **Settings > Display & brightness**. In the  section, drag the slider to adjust the screen brightness.

Adjust the Colour Mode

Go to **Settings > Display & brightness > Colour > Colour mode & temperature**, and select the colour mode that you prefer. **Normal** mode will be easier on your eyes and is therefore recommended.

- **Normal**: natural colour tones
- **Vivid**: vivid colour tones

Adjust the Colour Temperature

Go to **Settings > Display & brightness > Colour > Colour mode & temperature**, and select the colour temperature that you prefer. **Default** and **Warm** will be easier on your eyes and are therefore recommended.

- **Default:** a natural tint
- **Warm:** a yellowish tint
- **Cool:** a whitish tint
- You can touch anywhere on the colour circle or drag the spot to adjust the colour temperature.

Enable or Disable Natural Tone


Natural Tone enables your device to simulate the way human eyes adapt to ambient lighting to automatically adjust the colour temperature.

When the ambient lighting is of a warm colour temperature, the screen will take on a yellowish tint; when the ambient lighting is of a cold colour temperature, the screen will take on a whitish tint.

Go to **Settings > Display & brightness > Colour**, and enable or disable **Natural Tone**.


Use Eye Comfort Mode

Eye comfort mode can effectively reduce harmful blue light and adjust the screen to display warmer colours, relieving eye fatigue and protecting your eyesight.

-  Rest your eyes for at least 10 minutes every half an hour.
 - Look into the distance for your eyes to have a break from the screen and to relieve eye fatigue.
 - Cultivating good eye care habits will protect your vision and prevent near-sightedness.

Enable or Disable Eye Comfort Mode

- Swipe down from the status bar to open the notification panel, swipe down on it again to show all shortcuts, then turn on or turn off **Eye Comfort**. You can touch and hold **Eye Comfort** to access the settings screen.
- Go to **Settings > Display & brightness > Eye Comfort**, and enable or disable **Enable all day**.

Once Eye comfort mode is enabled,  will be displayed in the status bar, and the screen will take on a yellow tint since less blue light is being emitted.

Set a Schedule for Eye Comfort Mode

Go to **Settings > Display & brightness > Eye Comfort**, enable **Scheduled**, then set **Start** and **End** according to your preferences.


Customise Eye Comfort Mode

Go to **Settings > Display & brightness > Eye Comfort**, enable **Enable all day** or set up **Scheduled**, and adjust the slider under **Filter level** to customise how much blue light you would like to be filtered.

Enable Dark Mode

You can enable Dark mode to apply a darker colour scheme, which helps prevent excessive screen light from irritating your eyes and saves battery power.

Go to **Settings > Display & brightness > Dark mode**, and follow the onscreen instructions to set the related configurations, such as when you would like this feature to take effect.

 The feature availability varies by device.

Adjust Text Style Settings

You can adjust the system text size and app display size, as well as the text style.

Enlarge or Reduce Text Size

Go to **Settings > Display & brightness > Text and display size**, and drag the slider for **Text size**.

Enlarge or Reduce Display Size

Display size determines the size of content (including text and images) displayed within apps.

Go to **Settings > Display & brightness > Text and display size**, and drag the slider for **Display size**.

Automatically Switch Between Portrait and Landscape Orientation


Swipe down from the status bar to open the notification panel, then swipe down on it again

to show all shortcuts. Touch  to enable the Auto-rotate feature.

Your device will then be able to automatically adjust your screen display, with the help of the built-in Swing Gesture Sensor (to detect your face orientation) and gravity sensor.

For example:

- When you need to switch your device between portrait and landscape orientation when it is placed on a surface, just keep your face in front of the screen and rotate your device.
- When you are using your device while lying down, the screen will not change its display orientation when you change the way you are lying.

 The Swing Gesture Sensor is located at the top of the screen. To ensure that the sensor can effectively identify your face orientation, keep your face in front of the screen during use.

Why Can't the Screen Rotate Intelligently?

The possible causes are as follows:

- Your device comes equipped with the Swing Gesture Sensor to detect the face direction. Therefore, you need to ensure that the sensor can detect faces.
 - Do not cover the sensor, which is located in the upper left corner of the screen.
 - Look straight at the screen and keep a distance of 40–60 cm away from the sensor.
 - The sensor works better in a well-lit environment.
- Landscape display is not supported in some apps (such as navigation or game apps) and the home screen.

Introduction to GPU Turbo

GPU Turbo represents a radical redesign of the graphics processing framework of the device at its most basic level, integrating hardware and software to achieve accelerated graphics processing. It improves the device's graphics processing efficiency, image quality, and performance, whilst simultaneously reducing system power consumption.

The end result is a great improvement in user experience when playing graphically intense games.

Sounds & Vibration


Set Do Not Disturb Mode


Do Not Disturb helps you prevent interruptions when you need to focus. When this mode is enabled, calls and messages will be muted and banner notifications will not be displayed.

Enable or Disable Do Not Disturb

You can enable or disable Do Not Disturb using either of the following methods:

- Swipe down from the status bar to open the notification panel, swipe down on it again to show all shortcuts, then turn on or turn off **Do Not Disturb**. You can touch and hold **Do Not Disturb** to access the settings screen.
- Go to **Settings > Sounds & vibration > Do Not Disturb**, and enable or disable **Do Not Disturb**.

Once Do Not Disturb has been enabled,  will display in the status bar. To check for notifications, go to the lock screen or swipe down from the status bar to open the

notification panel. Swipe left on a notification and touch  to delay the notification.

When receiving incoming calls, notifications, and messages, your device will be muted and will not automatically turn on its screen or display banner notifications.

 This feature is not supported on Wi-Fi only tablets.

Set a Schedule for Do Not Disturb

- 1** Go to **Settings > Sounds & vibration > Do Not Disturb**, and disable **Do Not Disturb**.
- 2** Enable **Scheduled**. Your device will enter Do not disturb mode at the specified time on Saturdays and Sundays by default.
- 3** Touch **Scheduled** to set the time frame and repeat cycle.
- 4** You can also touch **Add** to set multiple start times.

Make Exceptions in Do Not Disturb Mode

While in **Do Not Disturb** mode, you can enable your device to ring for calls and messages from certain sources so you don't miss anything important.

Go to **Settings > Sounds & vibration > Do Not Disturb**, and enable **Do Not Disturb** or **Scheduled**. Then you can:

- Touch **Calls** or **Messages** and select one of the options. If you set an exception, your device will ring for calls or messages from the selected source.
- Once **Repeated calls** is enabled, a second call from the same number within 15 minutes will not be silenced.

 Calling services are not supported on Wi-Fi only tablets.

Set a Ringtone for Incoming Calls

You can set your favourite music or a video as the ringtone for incoming calls.

If you are carrying your device in your pocket, the ringtone volume will gradually increase. This helps prevent you from missing important calls.

 Calling services are not supported on Wi-Fi only tablets.


Set a Ringtone for a Contact

Set a different ringtone for a particular contact to distinguish more easily when that contact is calling you.

- 1** Open **Phone**, touch the **Contacts** tab, then select the contact you want to set a ringtone for.
- 2** On the contact details screen, touch **Ringtone** and select a ringtone.

Enable Huawei Histen Sound Effects

Huawei Histen sound effects, with 3D surround sound support, deliver vibrant and crisp sound to create an immersive audio experience.


 Huawei Histen sound effects are only available when a headset is plugged in.

Go to **Settings > Sounds & vibration > Huawei Histen sound effects** and select an option:

- **Auto**: Automatically identifies what you are playing and intelligently applies sound effects to optimise your experience.

- **3D audio:** Delivers 3D spatial sounds.
- **Natural:** Faithfully reproduces the original sounds.
- **Standard:** Requires less power for audio playback. You can also customise equaliser settings yourself to achieve the exact sound you are looking for.

Auto, **3D audio**, and **Standard** modes allow you to select a headset type so you can match the sound effects to your headset.

-  Selecting a headset type is available only when a 3.5 mm-jack headset is plugged in. If your device does not have a 3.5 mm jack, use an original Huawei headset adapter.

Notifications

App Badges

When new notifications arrive for an app, a numbered badge will appear on the app icon. You can also set a dot as the badge, or hide the badge for some or all apps.

Turn Off App Badges

- 1 Go to **Settings > Notifications**, and touch **App icon badges**.
- 2 Turn off the switch for some or all apps.


Change the Badge Display Mode

On the **App icon badges** screen, touch **Badge display mode**, and select **Numbers** or **Dots** according to your preference.

Disable App Notifications

Disable Notifications from a Specific App

If you do not want to be disturbed by notifications from an app, perform either of the following:

- After you receive a notification from the app, swipe left on it in the notification panel, and go to  > **Disable notifications**.
- Go to **Settings > Notifications**, locate and touch the app for which you want to disable notifications, then disable **Allow notifications**.

Disable Notifications from Apps in Batches

To disable notifications from multiple apps at a time, go to **Settings > Notifications > Manage all**, and turn off the switch next to each app.

Hide Content of Notifications on the Lock Screen


Go to **Settings > Notifications**, and enable **Hide notification content**. The content of notifications will then not be displayed on the lock screen.

More App Notification Settings

Set the App Notification Mode

Go to **Settings > Notifications** and select an app. You can then set its notification mode.

- Enable **Gentle notifications**: Notifications will only be displayed in the notification panel. There will be no banners, lock screen notifications, or status bar icons, and your device will not ring or vibrate.
- Enable **Lock screen** and **Banners**.
- Set **Notification sound**: You can change the notification tone, set the vibration pattern, or select **None**.
- Enable **Allow interruptions**: You can still receive notifications from this app even if Do not disturb is enabled.

 This feature may vary by device.

Notifications Turn on Screen

Go to **Settings > Notifications > More notification settings**, and enable **Wake screen**. Your device will then automatically turn on the lock screen when it receives a notification.

Show Notification Icons in the Status Bar

Go to **Settings > Notifications > More notification settings**, and enable **Show notification icons in the status bar**.

Biometrics & Password

Face Recognition

Face Recognition allows you to unlock your device or access locked apps with your facial data.


Add More Facial Profiles

You can add a maximum of five facial profiles for your device so that it can be shared with your beloved ones securely.

On the **Face Recognition** screen, touch **Add facial profile**, and follow the onscreen instructions to add facial data.

Enable Face Unlock

On the **Face Recognition** screen, touch **Unlock device**, and select an unlock method.

 If you have enabled PrivateSpace on or added multiple users to your phone, you can use Face unlock only in MainSpace or with the Owner account.

Access App Lock with Face Recognition

On the **Face Recognition** screen, enable **Access App Lock**, and follow the onscreen instructions to add your facial data to App lock.

You can then touch a locked app on your home screen and use face recognition to access the app.

Lock Screen Password

You can set a numeric, pattern, or hybrid password as your lock screen password.

Set the Lock Screen Password

You can set a numeric, pattern, or hybrid password.

- 1** Go to **Settings > Biometrics & password** and touch **Lock screen password**.
- 2** Enter a password containing 6 digits.
- 3** Alternatively, touch **Change unlock method** and select a password type, then follow the onscreen instructions to input a new password.

Change the Lock Screen Password

- 1** On the **Biometrics & password** screen, go to **Change lock screen password**.
- 2** Enter the original lock screen password.
- 3** Enter a new password, or touch **Change unlock method** to select a password type, then follow the onscreen instructions to input a new password.


Disable Lock Screen Password

On the **Biometrics & password** screen, go to **Disable lock screen password**.

Apps

Enable App Twin

App Twin enables you to log in to two WhatsApp or Facebook accounts simultaneously, allowing you to keep your work and private life separate.

 **App Twin** is only supported by some apps.

Go to **Settings > Apps > App Twin**, and enable **App Twin**. The twin app will then be displayed on the home screen.

View or Change App Settings

Go to **Settings > Apps > Apps** and touch an app. You can force stop it, uninstall it, view and change the app permissions, set notification modes, and more.


 Some apps cannot be uninstalled.

Battery

Check the Power Consumption of Your Device

Go to **Settings** > **Battery** (or **Optimiser** > ) , and you can then:

- View **Power consumption details** to learn about the power consumption of the last 24 hours and the power usage ranking of apps.
- Touch a bar in the chart to learn about the power consumption during the corresponding period.
- Touch an app and view its **Battery usage details**, or touch **Force stop** to close the app.



 Some pre-installed apps cannot be closed.

Power Management

On the **Battery** screen, you can check the estimated battery time remaining, and enable a power saving mode to extend the battery life of your device.

Enable Power Saving Mode


If **Power Saving mode** is enabled on your device and the battery level is higher than 10%, some functions will be disabled, background apps will be restricted, and visual effects will be weakened to reduce power consumption. When the battery level is lower than or equal to 10%, stricter power saving measures are taken to ensure the longest standby time. It is recommended that you enable **Power Saving mode** when the battery level is lower than or equal to 20%.


To do so, go to **Settings** > **Battery** (or **Optimiser** > ) , and enable **Power Saving mode**. A  icon will then be displayed in the status bar.

Enable Performance Mode

Performance mode adjusts power settings to deliver maximum performance. This will cause the battery to drain more quickly, especially when graphic-intensive apps are used.

When the battery level is sufficient, go to **Settings** > **Battery** (or **Optimiser** > ) and enable **Performance mode**.


The  icon will then be displayed in the status bar.

 **Performance mode** is not available on some devices. If this option is not displayed in **Optimiser**, it indicates that your device does not support the feature.

Enable Smart Charge

Smart Charge learns from your charging habits and manages the charging process intelligently. This feature reduces the battery wear level and prolongs the battery life by reducing the time your device spends fully charged. It is advised that you keep this feature enabled.

For example, if you are used to charging your devices overnight or for an extended period of time, Smart Charge will pause the charging when the battery capacity reaches a certain level. Before you get up in the morning, Smart Charge will resume charging until your device is fully charged. This reduces the time your device spends fully charged to slow down battery wear and prolong the battery life.

 Data about your charging habits will only be used on your device and will not be backed up or uploaded to the cloud.

To enable this feature, go to **Settings > Battery > More battery settings**, and enable **Smart Charge**.

Enable Smart Battery Capacity


Smart Battery Capacity intelligently adjusts the maximum available battery capacity based on the current battery state to slow down battery wear and prolong the battery lifespan. It is advised that you keep this feature enabled.

To enable this feature, go to **Settings > Battery > More battery settings**, and enable **Smart Battery Capacity**.

Customise Battery Settings

You can also set whether to display the battery percentage in the status bar, and whether to maintain a network connection when the device screen is turned off.

Display Battery Percentage on the Status Bar

Go to **Settings > Battery** (or **Optimiser > **), touch **Battery percentage**, and choose to display the battery percentage, either inside or outside of the battery icon on the status bar.

Stay Connected while Your Device is Sleeping

If you would like your device to continue to receive messages or download data while it is in sleep mode, set to keep your device connected when it sleeps. Please note that this may increase power consumption.

On the **Battery** screen, touch **More battery settings**, then enable or disable **Stay connected while asleep** as required.

Storage

Check Storage Usage

Go to **Settings** > **Storage** to check storage usage and optimise it when you feel necessary.

Clean Up Device Storage

You can use **Cleanup** in **Optimiser** to scan for redundant or large files, such as app residue, unwanted installation packages, WeChat data, and more. Once detected, you can choose whether or not to delete files as suggested.

- 1 Open **Optimiser**, then touch **Cleanup**.
- 2 When the scan is complete, touch **Clean up** after each item and delete any files you don't need.

Automatically Clean Up System Trash

- 1 Open **Optimiser**, and touch **Cleanup**.
- 2 Swipe down from the top of the screen, and your device will automatically clean up system trash.

Manually Clean Up System Trash

In addition to automatic cleanup, your device will also detect and recommend trash files for you to clean up manually.

On the **Cleanup** screen, touch **Clean up** next to a category, select the items you want to clean up, then touch **DELETE**.

Clean Up Duplicate Files


Optimiser can identify duplicate files on your device.

On the **Cleanup** screen, touch **Duplicate files**, then select unwanted files to delete them.

Security

Use the Password Vault to Automatically Fill in the Password

Password Vault saves your usernames and passwords and autofills them for you each time you log in to an app. This data is hardware encrypted and stored only on your device. Huawei does not have access to it, and will not upload it to the network or server.

-  Before using Password Vault, set a lock screen password for your device.
- Password Vault is only compatible with certain apps.

Log In Faster with Password Vault

- 1 When you log in to an app for the first time, your device will automatically prompt you to save the password. Touch **SAVE** when prompted.
If you accidentally touch **Never save**, you can still enable the autofill feature for this app by going to **Settings** > **Security** > **Password Vault** > **Autofill settings**, and toggling on

the switch next to this app. When the switch is toggled off, the autofill feature will be disabled.

- 2 If you log out of the app, the next time you log in, your device will autofill the username and password once you have verified your identity with your lock screen password, fingerprint, or face ID.

When you switch to a new Huawei device, you can use **Tablet Clone** to transfer data in Password Vault to your new device.

View or Delete Stored Usernames and Passwords

You can view or delete the usernames and passwords stored in Password Vault at any time.

Go to **Settings > Security > Password Vault > ACCOUNTS** to view or delete the stored usernames and passwords.

Disable Password Vault

Password Vault is enabled by default, but can be disabled if required.

Go to **Settings > Security > Password Vault**, and disable **Password Vault**.

Use App Lock to Protect Your Privacy

You can lock apps containing private data, such as chat and payment apps, to prevent unauthorised access.

Use App Lock to Protect Your Privacy

With App Lock, you can lock apps containing private data, such as chat and payment apps, to prevent unauthorised access. If you have enabled App Lock and set Face Recognition as the app unlock method, when your face is not detected by your device, the locked app can't be accessed again after it is closed unless you verify your identity. This feature intelligently protects your privacy and works better in a well-lit environment.

Enable App Lock

Go to **Settings > Security > App Lock > Enable**, then follow the onscreen instructions to set the App Lock password and select the apps to lock.

If you have enabled face or fingerprint unlock, you can link App Lock with a face ID or fingerprint ID as prompted.

 Not all devices support fingerprint features.


Change the App Lock Password or Security Questions

Enter the **App Lock** settings screen, go to  > **Password type**, and select **Lock screen password** or **Custom PIN** as the App Lock password.

If you select **Custom PIN**, you can go on to set a new password and security questions.

Cancel or Disable App Lock

On the **App Lock** settings screen, do the following:

- Cancel App Lock: On the locked app list, toggle off the switches beside the apps for which you want to cancel the lock.
- Reset App Lock: Go to  > **Disable App Lock** > **DISABLE**. This will cancel all locks, and clear all app lock settings.

Enable Smart Unlock

Smart Unlock enables you to unlock your device with a Bluetooth device, such as a smart band. When a compatible Bluetooth device is detected, you can then unlock your device with a simple swipe.





- 1 Pair your device with the Bluetooth device.
- 2 On your device, go to **Settings** > **Biometrics & password** > **Smart Unlock**, and enable **Smart Unlock**.
- 3 Follow the onscreen instructions to set the lock screen password. Skip setting the lock screen password if a lock screen password has already been set.
- 4 From the **Paired devices** list, touch the name of the device you would like to use for Smart Unlock, and follow the onscreen instructions to set it as the **Unlocking device**.

To learn more about Smart Unlock, touch  on the **Smart Unlock** screen.

Pin a Screen

You can pin the screen of an app so you can stay focused on it. Try this feature when playing games, watching videos, and more.

Go to **Settings** > **Security** > **More settings** > **Screen pinning**, and enable **Screen pinning**.

- When using gesture navigation, swipe up from the bottom of the screen and hold to access the recent tasks screen, then touch  on an app preview. To unpin, swipe up twice from the bottom of the screen.
- When using three-key navigation, touch  to access the recent tasks screen, and touch  on an app preview. To unpin, touch and hold .

Privacy

Manage App Access Permissions

Apps may require certain permissions, such as the Location permissions, in order to provide you with corresponding services.

However, some apps may obtain too many unnecessary permissions, posing potential risks to your privacy and information security. You can monitor the permissions granted to each app and deny those you deem unnecessary.

Manage the Location Permission

After granting the Location permission to an app, it can obtain your location information at any time. For example, if a map app is granted the Location permission, it can provide you with location and navigation services. You can revoke the permission if you do not need these services.

- 1 Go to **Settings > Apps > Permission manager**.
- 2 On the **Permission manager** screen, touch **Location**, touch the icon of the corresponding app, then select **Allow all the time**, **Allow only while in use**, or **Deny**.

Manage Permissions to Access Other Private Data

You can also manage permissions to access your personal data, such as Contacts, Messaging, Call logs, Body sensors, Calendar, and Camera, to enjoy better services and protect your privacy.

 Calling services are not supported on Wi-Fi only tablets.


On the **Permission manager** screen, touch the permission you want to manage, and toggle the switch for each app on or off as required.

Use Location Services

Some apps need to obtain your location information to provide better services. You can enable or disable location services, and grant or deny the permission to access location information for particular apps as required.

Enable or Disable Location Services


You can enable or disable location services in either of the following ways:

- Swipe down from the status bar to open the notification panel and swipe down further to display all shortcut switches. Touch  to enable or disable this function.
- Alternatively, go to **Settings > Location** and enable or disable **Access my location**.

After location services are disabled, your device will prevent all apps and services from collecting and using location information, with the exception of some built-in apps. When these apps or services need to use location information, your device will remind you to enable location services again.

Increase the Accuracy of Location Services

You can improve the positioning accuracy of your device by allowing apps and services to scan for nearby Wi-Fi networks and Bluetooth devices or access correction data for global navigation satellite systems (GNSS).

 The feature availability varies by device.

Go to **Settings > Location > Advanced settings**, then set the options as required.

Allow or Forbid Apps to Obtain Location Information

You can allow or forbid an app to access location information, including granting one-time or permanent access, or denying access to location information during use of the app.

- 1 Go to **Settings > Privacy > Permission manager**, touch **Location**, and check which apps have been granted access to location information.
- 2 Touch the app for which you want to change settings and follow the onscreen instructions to grant or deny permissions.

Create a PrivateSpace for Your Private Data


Create your PrivateSpace that is completely independent of MainSpace (the original space) on your device, which can be accessed using your fingerprint or a password.

 Not all devices support fingerprint features.

You can move private photos, videos, and other files to your PrivateSpace to prevent unauthorised access. You can also move your payment and gaming apps to PrivateSpace to prevent them from being accessed by your child.

Enable and Access PrivateSpace

- 1 Go to **Settings > Privacy > PrivateSpace > Enable**, and follow the onscreen instructions to create a PrivateSpace.
- 2 You can enter your PrivateSpace using either of the following methods:
 - On the lock screen, access PrivateSpace using the fingerprint or password set for the space.
 - Alternatively, in MainSpace, go to **Settings > Privacy > PrivateSpace**, and touch **Log in**.

 If you restart your device, you have to enter the password to access the MainSpace first, then switch to the PrivateSpace.

Hide or Unhide the Entrance to PrivateSpace

You can hide the entrance to PrivateSpace in the MainSpace settings, so that you can only access PrivateSpace using the fingerprint or password set for the space.


- To hide the entrance to PrivateSpace: In PrivateSpace, go to **Settings > Privacy > PrivateSpace**, and enable **Hide PrivateSpace**.
- To unhide the entrance to PrivateSpace: In MainSpace, go to **Settings > Security > More settings**, then go to **Show all settings > OK**.

Transfer Files Between MainSpace and PrivateSpace

- 1 In PrivateSpace, go to **Settings > Privacy > PrivateSpace**, and touch **MainSpace to PrivateSpace** or **PrivateSpace to MainSpace**.
 - 2 Select the files (such as photos, videos, and audio files) you want to transfer, touch **Move**, and follow the onscreen instructions to transfer the files.
- In the target space, go to **Gallery > Albums > Others > SharedImages**, or **Gallery > Albums > Others > SharedVideos** to view photos and videos.

Reset Password for PrivateSpace

You can set a security question when creating the password for PrivateSpace, which will help you to reset the password if you happen to forget it.

- 1 In PrivateSpace, go to **Settings > Privacy > PrivateSpace**, then touch **Password protection**.
- 2 Follow the onscreen instructions to complete the verification, select and answer the security question, then touch **Finish**.
- 3 In MainSpace, go to **Settings > Privacy > PrivateSpace**, then go to  **> Reset password**, and follow the onscreen instructions to complete the verification and reset the password.

Transfer Data in PrivateSpace to Your New Device

You can quickly transfer your PrivateSpace data, such as contacts, photos, and files, from the old device to the new one.

- 1 On your new device, create and enter your PrivateSpace, go to **Settings > Privacy > PrivateSpace > Space Clone**, and select **This is the new device**.
- 2 In your old device, enter your PrivateSpace, go to **Settings > Privacy > PrivateSpace > Space Clone**, and select **This is the old device**.
- 3 Follow the onscreen instructions to scan the QR code or manually connect the old device to the new one.
- 4 On your old device, select the data to be transferred. You can cancel the data transfer during the process, and then continue it once you have connected your old device with the new one again.

Delete PrivateSpace

If you delete PrivateSpace, all apps and data stored in the space will be deleted and cannot be restored. Please exercise caution when deleting PrivateSpace.

You can delete PrivateSpace in either of the following ways:

- In MainSpace, go to **Settings > Privacy > PrivateSpace**, then go to  **> Delete PrivateSpace**.
- Alternatively, in PrivateSpace, go to **Settings > Privacy > PrivateSpace**, then touch **Delete**.

Accessibility Features

Use a Screen Reader App

Screen reader apps are designed to assist visually impaired users to use a device.

Enable Colour Correction to Customise the Screen Colour

Colour correction helps people with poor eyesight see the screen content more easily.

- 1** Go to **Settings > Accessibility features > Accessibility > Colour correction** and enable **Colour correction**.
- 2** Touch **Correction mode** to select a colour correction mode.

Use Magnification Gestures

Use magnification gestures to zoom in on the screen.

On the **Accessibility > Magnification** screen, touch **Magnification**, then enable it.

Zoom in or out by touching the screen three times in a row.

- While zoomed in, spread two or more fingers to further zoom in, then pinch two or more fingers together to zoom back out.
- Drag the screen with two or more fingers to view other parts of the screen.

Enable Colour Inversion

Colour inversion allows you to invert the colour of the text and the background. When Colour inversion is enabled, your device will display text in white and the background black.

On the **Accessibility** screen, enable **Colour inversion**.

Use a Shortcut to Activate an Accessibility Feature

You can use Volume buttons to quickly activate an accessibility feature.

- 1** On the **Accessibility** screen, touch **Accessibility shortcut**.
- 2** Touch **Select feature** to select the feature you want to activate with the shortcut.
- 3** Enable **Accessibility shortcut**. You can now press and hold the Volume up and down buttons simultaneously for 3 seconds to activate the feature.

Adjust the Touch and Hold Delay

Touch & hold delay allows you to adjust the time the screen takes to respond when you touch and hold something.

On the **Accessibility** screen, touch **Touch & hold delay**, then select a delay option according to your preferences.

Protect Your Device with a Flip Cover

For best results, you are advised to use a standard Huawei flip cover.

Enable Smart Cover Mode

Go to **Settings > Accessibility features > Smart Cover**, and enable **Smart Cover**.

Set Scheduled Power On/Off

Use the **Scheduled power on/off** feature to power your device on and off at set times, to save power and prevent interruptions while resting.

- 1 Go to **Settings > Accessibility features > Scheduled power on/off**, and enable **Scheduled power on/off**.
- 2 Set the power on and off times, as well as the repeat cycle. Your device will power on and off automatically at the specified times.

To stop using this feature, disable **Scheduled power on/off**.

Users & Accounts

Add a User or Guest Account

- 1 Go to **Settings > Users & accounts > Users**, touch **Add user** or **Add guest**, then follow the onscreen instructions to add an account.
- 2 Touch **Switch** to switch to the user or guest account. Configure the settings for the new account as prompted.
- 3 Install apps as needed. Note that if a newer version of an app has been installed by another user, the app installation will fail.

A maximum of three user and one guest accounts can be added.

Authorise a User or Guest Account to Make Calls and Send Messages


You can set whether to allow a user or guest account to make calls, send SMS messages, and more.

 Calling services are not supported on Wi-Fi only tablets.

- After accessing your device as the owner, go to **Settings > Users & accounts > Users**.
- Touch the related account, and select the permissions you want to authorise.

Switch Between the Owner, User, and Guest


You can switch to a different account using either of the following methods:

- Swipe down from the status bar to open the notification panel, touch , then touch the profile picture of the account you wish to switch to.
- Go to **Settings > Users & accounts > Users**, and touch the name of the account you wish to switch to.

Delete a User or Guest Account

Deleting a user or guest account will delete all its related data. Please exercise caution.

After accessing your device as the owner, use either of the following methods to delete a user or guest account:

- Go to **Settings > Users & accounts > Users**, touch the name of the account you wish to delete, then follow the onscreen instructions to delete it.
- Swipe down from the status bar to open the notification panel, touch  > **More settings**, touch the name of the account you wish to delete, then follow the onscreen instructions to delete it.

System & Updates

Change the System Language and Region

- 1 Go to **Settings > System & updates > Language & input > Language and region**, then select the language you want to use.
- 2 If the language is not listed, touch **Add language**, then locate and touch it to add it to the list.
- 3 Touch **Region** to select a country/region, so the display content will adapt to the local culture and habits of the country/region you have selected.

Use Another Input Method

You can download a third-party input method and set it as the default input method.

- 1 Download the input method from an official app market.
- 2 Follow the onscreen instructions to set it as the default input method, or go to **Settings > System & updates > Language & input > Default keyboard** and select the input method.

Set the System Date and Time

Your device is able to sync to the local date, time, and time zone over a mobile network. You can also manually set the date, time, and time zone for your device.

Go to **Settings > System & updates > Date & time**, then set the options according to your requirements.

Set the Date and Time Automatically or Manually

- Enable **Set automatically**, and your device will sync to the local date and time over a mobile network.
- To manually set the date and time, disable **Set automatically**.

Change the Time Zone

 This feature is not supported on Wi-Fi only tablets.

- Enable **Set automatically**, and your device will sync to the local time zone over a mobile network.

- To manually set the time zone, disable **Set automatically**.

Change the Time Format


- Enable **24-hour time** and your device will display time in the 24-hour format.
- Disable **24-hour time** and your device will display time in the 12-hour format.

Use Tablet Clone to Move Data to Your New Device

Tablet Clone lets you quickly and seamlessly move all the basic data (including contacts, calendar, images, and videos) from your old device to your new device.


Migrate Data from an Android Device

- 1 On your new device, open the **Tablet Clone** app. Alternatively, go to **Settings > System & updates > Tablet Clone**, touch **This is the new device**, then touch **Huawei** or **Other Android**.
- 2 Follow the onscreen instructions to download and install **Tablet Clone** on your old device.
- 3 On your old device, open the **Tablet Clone** app and touch **This is the old device**. Follow the onscreen instructions to connect your old device with your new device by scanning a code or connecting manually.
- 4 On your old device, select the data you want to clone, then touch **Transfer** to start cloning.

 **Tablet Clone** is only available on devices running Android 7.0 or later.

Migrate Data from an iPhone or iPad

- 1 On your new device, open the **Tablet Clone** app. Alternatively, go to **Settings > System & updates > Tablet Clone**, touch **This is the new device**, then touch **iPhone/iPad**.
- 2 Follow the onscreen instructions to download and install **Tablet Clone** on your old device.
- 3 On your old device, open the **Tablet Clone** app and touch **This is the old device**. Follow the onscreen instructions to connect your old device with your new device by scanning a code or connecting manually.
- 4 On your old device, select the data you want to clone, then follow the onscreen instructions to complete the data cloning.

 **Tablet Clone** is only available on devices running iOS 8.0 or later.

Restore Your Device to Default Settings

Reset Network Settings

This operation will reset your Wi-Fi, mobile data network, and Bluetooth settings. It will not change any other settings on your device or delete any data.

Go to **Settings > System & updates > Reset**, touch **Reset network settings**, then follow the onscreen instructions to reset network settings.

Restore All Settings

This operation will reset all network settings, your lock screen password, and the home screen layout. If your device supports fingerprint or facial recognition, the enrolled fingerprints and facial data will be deleted as well. Other data or files will not be deleted from your device. This operation does not restore the settings of Find Device, Users & accounts, Device administrators, or app settings either.

Go to **Settings > System & updates > Reset**, touch **Reset all settings**, and follow the onscreen instructions to complete the operation.


Restore Factory Settings

This operation will erase data on your device, including your accounts, app data and system settings, installed apps, music, images, all files in the internal storage, security chip contents, and locally-stored system, app, and personal data related to HUAWEI IDs. Make sure to back up your data before restoring your device to its factory settings.

Go to **Settings > System & updates > Reset > Reset tablet**, touch **Reset tablet**, and follow the onscreen instructions to restore factory settings.

Update Your Device System Online

When an update is available, your device will prompt you to download and install the update package.


-  • Before updating, make sure your device is running an official system version. Otherwise, the update may fail and your device may experience unknown issues.
- Back up your user data before the update.
- After an update, third-party apps that aren't compatible with the new system version may become unavailable. In some cases, it may take some time for a compatible app version to be released.
- During the update, do not power off or restart your device, remove the memory card, or insert a memory card.

1 Go to **Settings > System & updates**, and touch **Software update**.

2 When an update is available, you can either manually download and install the update package, or update your device automatically overnight.


- Download and install the update package: Go to **New version > DOWNLOAD AND INSTALL**. To avoid data usage, connect your device to a Wi-Fi network when downloading the update package.

Your device will automatically restart once the update is complete.

- Update overnight: Touch , and enable **Auto-download over Wi-Fi** and **Update overnight**.

Your device will automatically update and restart between 02:00 – 04:00.

To ensure a successful overnight update, make sure that your device is powered on, the screen is locked, there are no alarms set for this period of time, and the battery level remains higher than 35%. Connect your device to a charger if necessary.

To disable automatic updates, touch  on the **Software update** screen, then disable **Auto-download over Wi-Fi**.

About Tablet

Legal Notice

Copyright © Huawei 2019. All rights reserved.

This guide is for reference only. The actual product, including but not limited to the color, size, and screen layout, may vary. All statements, information, and recommendations in this guide do not constitute a warranty of any kind, express or implied.

Model: MRX-W09
MRX-AL09
MRX-W29

EMUI 11.0_01

HUAWEI MatePad Pro

User Guide



HUAWEI

Contents

Essentials

System Navigation	1
Phone Clone	2
Lock and Unlock Your Screen	3
Get Familiar with the Home Screen	4
Notification and Status Icons	4
Shortcut Switches	5
Home Screen Widgets	6
Set Your Wallpaper	6
Screenshots&Screen Recording	7
View and Clear Notifications	8
Adjust Sound Settings	8
Enter Text	9
Split-screen Mode&Floating Window	9
Charging	11

Smart Features

AI Lens	14
HiTouch	14
Easy Projection	14
Huawei Share	16

Camera and Gallery

Launch Camera	18
Take Photos	18
Master AI	19
Take Wide-Angle or Long-Focus Photos	19
Take Panoramic Photos	19
Light Painting	20
Take HDR Photos	21
Moving Pictures	21
Add Stickers to Photos	22
Documents Mode	22
Pro Mode	23
4K HD Videos	26
Slow-Mo Recording	26
Time-Lapse Photography	27
Filters	27
Edit Camera Modes	27
Adjust Camera Settings	28
Manage Gallery	28

Huawei Vlog Editor	32
Huawei Vlogs	33
Highlights	34

Apps

Apps	36
Contacts	37
Phone	40
Messaging	45
Calendar	47
Clock	49
Notepad	50
Recorder	51
Email	52
Calculator	56
Torch	56
Compass	57
App Twin	57
Quickly Access Frequently Used App Features	57
Tablet Manager	58
Phone Clone	60
Tips	61


Settings

Wi-Fi	63
Bluetooth	63
Mobile Data	64
More Connections	67
Home Screen&Wallpaper	71
Display&Brightness	72
Sounds&Vibration	75
Notifications	77
Biometrics&Password	79
Apps	80
Battery	80
Storage	82
Security	82
Privacy	85
Accessibility Features	88
Users&Accounts	89
System&Updates	90
About Tablet	93


Essentials

System Navigation

Change the Navigation Mode

Go to  **Settings** > **System & updates** > **System navigation** to select a navigation mode according to your preferences.


Navigate with Gestures

Go to  **Settings** > **System & updates** > **System navigation**, and enable or disable **Gestures**.

Once **Gestures** has been enabled, you can:





- Go back to the previous screen: Swipe inward from the left or right edge.
- Return to the home screen: Swipe up from the bottom of the screen.
- Access the recent tasks screen: Swipe up from the bottom of the screen and hold.
- Close an app from the recent tasks screen: Swipe up on an app preview.
- Access in-app menus: In applicable third-party apps, swipe inward from the left or right edge near the top of the screen.

Three-Key Navigation

Go to  **Settings** > **System & updates** > **System navigation**, and select **Three-key navigation**.

Touch **Settings** to select the navigation key combination you prefer.

The icons on the navigation bar are as follows:


- : Back key to return to the previous screen, exit an app, or close the onscreen keyboard.
- : Home key to return to the home screen.
- : Recents key to display the recent tasks screen. Touch and hold it to access Split-screen mode.
- : Notification key to open the notification panel.

Customise the Navigation Key Combination

Go to **Three-key navigation** > **Settings**. You can:

- Select a navigation key combination.
- Enable **Hide navigation keys** to allow you to hide the navigation bar when not in use.

Navigation Dock

Go to  **Settings > System & updates > System navigation > Navigation dock**, and enable **Navigation dock**.

After the Navigation dock button appears, you can:




- Drag the button to your desired position.
- Touch the button to go back.
- Double-touch the button to go back two steps.
- Touch and hold the button, then release it to go back to the home screen.
- Touch and hold the button, then swipe left or right to view recent tasks.


Phone Clone

Phone Clone




Phone Clone lets you quickly and seamlessly move all the basic data (including contacts, calendar, images, and videos) from your old device to your new device.

Clone Data from an Android Device


- 1 On your new device, open  **Phone Clone** (in the **Tools** folder by default). Alternatively, go to  **Settings > System & updates > Phone Clone**, touch **This is the new phone**, then touch **Huawei** or **Other Android**.
- 2 Follow the onscreen instructions to download and install **Phone Clone** on your old device.
- 3 On your old device, open  **Phone Clone** and touch **This is the old phone**. Follow the onscreen instructions to connect your old device with your new device by scanning a code or connecting manually.
- 4 On your old device, select the data you want to clone, then touch **Transfer** to start cloning.

 Phone Clone is only available on devices running Android 4.4 or later.

Clone Data from an iPhone or iPad

- 1 On your new device, open  **Phone Clone** (in the **Tools** folder by default). Alternatively, go to  **Settings > System & updates > Phone Clone**, touch **This is the new phone**, then touch **iPhone/iPad**.
- 2 Follow the onscreen instructions to download and install **Phone Clone** on your old device.
- 3 On your old device, open  **Phone Clone** and touch **This is the old phone**. Follow the onscreen instructions to connect your old device with your new device by scanning a code or connecting manually.

- 4 On your old device, select the data you want to clone, then follow the onscreen instructions to complete the data cloning.

 Phone Clone is only available on devices running iOS 8.0 or later.

Lock and Unlock Your Screen

Lock and Unlock Your Screen

Lock the Screen


If your device remains inactive for a period of time, it will automatically lock the screen and enter sleep mode to save power.

Alternative, you can manually lock the screen in either of the following ways:

- Press the Power button.
- On the home screen, pinch two fingers together to enter screen editing mode. Touch **Widgets**, then drag the **Screen Lock** icon to the home screen. You can now touch the **Screen Lock** icon to lock the screen.

Wake Screen

You can turn on the screen in either of the following ways:

- Press the Power button.
- Go to  **Settings > Accessibility features > Shortcuts & gestures > Wake screen** and enable **Raise to wake** or **Double-tap to wake**.
 - When **Raise to wake** is enabled, you can pick up your device to turn on the screen.
 - When **Double-tap to wake** is enabled, you can touch the screen twice to turn it on.

Enter the Password to Unlock the Screen

Once the screen is turned on, swipe from any position on the screen to display the password input panel. Then enter your lock screen password.

Use Face Unlock

Lift your device and align it with your face. Your device will unlock once your face is recognised.

Change the Lock Screen Display


Display Your Signature on the Lock Screen

Go to  **Settings > Home screen & wallpaper**, touch **Lock screen signature**, then type text to display on the lock screen.

To remove the signature, touch **Lock screen signature** and delete the text.

Access Apps from the Lock Screen

You can access commonly used apps such as Camera, Recorder, and Calculator from the lock screen.

- On the lock screen, swipe up on the  icon to open **Camera**.
- On the lock screen, swipe up from the bottom of the lock screen to open the shortcut panel. Shortcuts for **Recorder**, **Torch**, **Calculator**, and **Timer** will be available for you to choose from.

Get Familiar with the Home Screen


Get Familiar with the Home Screen

















From the home screen, you can:

































- Check the status of your device and notifications from the status bar at the top of the screen.
- Swipe left or right to view apps and widgets displayed on the home screen.

Notification and Status Icons

Notification and Status Icons

-  Network status icons may vary according to your region or network service provider. Supported functions vary according to the device model. Some of the following icons may not be applicable to your device.

	5G network connected		4G network connected
	3G network connected		2G network connected
	Full signal strength		Roaming
	Data saver enabled		SIM card not found
	Hotspot enabled		Hotspot connected
	Calling		VoLTE enabled
	Wi-Fi network connected		SkyTone in use
	Hotspot disconnected		Network being switched by Wi-Fi +

	Airplane mode enabled		Alarms set
	Battery empty		Battery low
	Charging		Quick charging
	Super charging		Power saving mode enabled
	Bluetooth enabled		Bluetooth device battery
	Bluetooth device connected		VPN connected
	Driving mode		Projection device connected
	Location service enabled		Eye comfort mode enabled
	Headset connected		Headset with a microphone connected
	Missed call		Unread SMS
	Microphone disabled		Muted
	More notifications		Vibrate only
	NFC enabled		Do Not Disturb mode enabled
	Data syncing		Data sync failed
	Performance mode enabled		New emails
	Event reminders		Digital balance enabled


Shortcut Switches

Shortcut Switches


Turn on a Shortcut Switch

Swipe down from the status bar to open the notification panel, then swipe down on it again to show all shortcuts.

- Touch a shortcut switch to enable or disable the corresponding feature.
- Touch and hold a shortcut switch to enter the settings screen for that feature.

- Touch  to open Settings.

Customise Shortcut Switches

Touch , touch and hold an icon, then drag it to the desired position.

Home Screen Widgets

Home Screen Widgets

You can add, move, or delete home screen widgets, such as Screen lock, Weather, Notepad, Clock, Contacts, and Calendar, according to your personal requirements.

Add a Widget to the Home Screen

- 1 Pinch two fingers on the home screen to access Home screen settings mode.
- 2 Touch **Widgets**, then swipe left to view all widgets.
- 3 Some widgets, like **Weather**, come in various formats. Touch the widget to view all formats, then swipe right to return.
- 4 Touch a widget to add it to the home screen. If there is no room on the current screen page, touch and hold it, then drag it to a different screen page.



Move or Delete a Widget

Touch and hold a widget on your home screen until your device vibrates, then drag it to the desired position or touch **Remove**.

Set Your Wallpaper


Set Your Wallpaper

Use a Preset Wallpaper

- 1 Go to  **Settings** > **Home screen & wallpaper** > **Wallpaper**.
- 2 Touch an image you want to set as the wallpaper.
- 3 Set the following according to your preferences:
 - **Blur**: applies a blur effect, which can be adjusted by dragging the slider.
 - **Scrollable**: enables the wallpaper to be scrollable on the home screen.
- 4 Touch , then determine whether you'd like to set the image as **Lock screen**, **Home screen**, or both.

Set an Image from Gallery as Your Wallpaper

- 1 Open  **Gallery**, and open the image you want to set as your wallpaper.

- 2 Go to  > **Set as** > **Wallpaper**, then follow the onscreen instructions to complete the setting.


Screenshots & Screen Recording

Take a Screenshot

Use a Key Combination to Take a Screenshot

Press and hold the Power and Volume down buttons simultaneously to take a screenshot.

Use a Shortcut to Take a Screenshot

Swipe down from the status bar to open the notification panel, then swipe down on it again to show all shortcuts. Touch  to take a screenshot.

Share and Edit a Screenshot, or Switch to Scrollshot

After you take a screenshot, a thumbnail will display in the lower left corner of the screen. Then you can:

- Swipe down on the thumbnail to take a scrolling screenshot.
- Swipe up on the thumbnail to select a sharing mode and share the screenshot with your friends.
- Touch the thumbnail to edit or delete it.

Screenshots are saved to **Gallery** by default.

Record the Screen

Record your screen activities in sharable videos to compose a tutorial, show off your awesome gaming skills, and a lot more.

Use a Key Combination to Start Screen Recording


Press and hold the Power and Volume up buttons simultaneously to start screen recording. To stop recording, press and hold both buttons again.



Use a Shortcut to Start Screen Recording

- 1 Swipe down from the status bar to open the notification panel, then swipe down on it again to show all shortcuts.
- 2 Touch **Screen Recorder** to start screen recording.
- 3 To stop the recording, touch the timer at the top of the screen.
- 4 The recording will be saved to **Gallery**.

Record Your Voice During Screen Recording

You can enable the microphone to record your voice while recording the screen.

Once you have started a screen recording, touch the microphone icon and ensure that it is displayed as . Your voice can then also be recorded.

-  If the microphone is disabled (i.e. if it is displayed as ) , you will only be able to record system sounds (such as gameplay sounds). If you want the screen to be recorded in silence, mute your device and turn off the music and any other media sound before starting the screen recording.


View and Clear Notifications

View and Clear Notifications

View Notifications


When there is a notification reminder, you can turn on the screen and swipe down from the status bar to open the notification panel and view the notification.

Clear Notifications

- Swipe right on a notification reminder to clear the notification.
- Touch  at the bottom of the notification panel to clear all notifications.

Block, Silence, or Delay Notifications

Swipe left on a notification, then touch  to block, silence, or delay notifications from that source.

-  Some system notifications can't be blocked, cleared, or delayed.

Adjust Sound Settings

Adjust Sound Settings

Press a Volume Button to Adjust the Volume


Press the Volume up or down button to adjust the volume.

Press the Power Button to Mute Your Device When It Rings

When your device rings for an incoming call or alarm, you can press the Power button to mute it.


Flip to Mute or Raise to Reduce Ringing Volume

When you receive an incoming call, you can flip your device to mute it, or raise it to reduce the ringing volume.

Go to  **Settings** > **Accessibility features** > **Shortcuts & gestures** > **Mute ringtone/Reduce volume**, then enable **Flip to mute ringtone** and **Raise to lower volume**.

 Voice calls are not supported on Wi-Fi only tablets.




Set the Default Volume

Go to  **Settings** > **Sounds & vibration**, then you can set the volume for the following items:

- Media (video, games, music, and more)
- Ringtones
- Alarms
- Calls

 Voice calls are not supported on Wi-Fi only tablets.




Use a Shortcut to Switch Between Ring, Vibrating, or Mute Mode

- 1 Swipe down from the status bar to open the notification panel, then swipe down on it again to show all shortcuts.
- 2 Touch the  **Sound**,  **Silent**, or  **Vibration** icon to switch between different modes.

Enter Text

Edit Text

You can select text displayed on your screen, copy or cut it to the clipboard, then paste it somewhere else. You can also share it in multiple ways.

- 1 Touch and hold the text until  appears.
- 2 Drag  and  to select the text you need, or touch **Select all** to select all the text.
- 3 Touch **Copy** or **Cut** according to your requirement.
- 4 Touch and hold the point where you want to paste the text, then touch **Paste**.




Split-screen Mode&Floating Window

Multi-Window

When enabled, the Multi-Window dock allows you to access apps faster and split the screen or display a floating window for multitasking.




Enable Split-screen Mode from the Multi-Window Dock

You can split the screen of your device to use two apps simultaneously.

- Enable Split-screen mode:
 - 1** Open an app. Swipe inward from the left or right edge and hold to bring up the Multi-Window dock.
 - 2** Drag an app icon out of the Multi-Window dock.
- Switch the split-screen panes: Touch and hold  at the top of a split-screen pane until the pane shrinks. Then drag the pane to the other side of the screen to switch between panes.
- Exit Split-screen mode: Drag  or  in the middle of the split screen line horizontally or vertically until either pane disappears. You can also touch the Back key consecutively to exit Split-screen mode.



Display the Floating Window from the Multi-Window Dock

While playing a game, you can chat with a friend in a floating window, without having to leave your game.


- Display the floating window:
 - 1** Swipe inward from the left or right edge and hold to bring up the Multi-Window dock.
 - 2** Touch an app icon in the Multi-Window dock to open the app in a floating window.
- Relocate the floating window: Drag  at the top of the floating window to the desired location.
- Display in full screen: Touch  on the floating window to display the content in the window in full screen.
- Close the floating window: Touch  on the floating window to close it.

Switch Between Split-screen and Floating Window

Switch from Split-screen mode to floating window

- In landscape mode, touch and hold  at the top of a split-screen pane and drag it downwards. Release your finger when the split-screen pane becomes an app icon.
- In portrait mode, touch and hold  at the top of a split-screen pane and drag it to the left or right. Release your finger when the split-screen pane becomes an app icon.





Switch from floating window to Split-screen mode

Touch and hold  at the top of the floating window, then drag it to the left/right side of the screen when in landscape mode, or to the upper/lower portion when in portrait mode.


 The app displayed in full screen must support Split-screen mode or the floating window.

Add, Move, or Remove an App from the Multi-Window Dock

Apps in the Multi-Window dock can be added, moved, or removed to better suit your needs.


- Add an app: In the Multi-Window dock, touch , touch the app you want to add from **Suggested** or **More apps**, then touch **Done**.
- Move an app: In the Multi-Window dock, touch , then drag the desired app to any location in the dock.
- Remove an app: In the Multi-Window dock, touch , then touch  in the upper right corner of the app you want to remove.


Disable Multi-Window

Multi-Window is enabled by default. To disable it, go to  **Settings > Accessibility features > Multi-Window**, then disable **Multi-Window dock**.

App Multiplier

App Multiplier displays an app's home and content screens in dual windows for easier multitasking when your device is in landscape orientation.

- 1 Go to  **Settings > Accessibility features > App Multiplier**, and turn on the switch for apps that you want to use this feature with.
- 2 Open an app that has **App Multiplier** enabled. The app's home screen will then be displayed in the centre of the screen.
- 3 Touch an entry on the app's home screen. The home screen will then be relocated to the left to make space for the new screen.

To adjust the window sizes, touch and hold  between the windows, then slide left or right.

Charging

Charge Your Device

Your device will alert you when it is running out of power. Please make sure to charge your device in time to prevent it from turning off automatically when the power runs out.

Precautions for Charging

- Charge your device using the standard adapter and USB cable that came with your device. Using other chargers or USB cables may cause repeated restarts, slow charging, overheating, or other undesirable effects.





- Your device will automatically run a safety check when a charger or other device is connected to the USB port. If moisture is detected in the USB port, your device will automatically activate safety measures and stop charging. Disconnect your device from the USB port and wait until the USB port is dry.
- The time required to fully charge the battery depends on the ambient temperature and age of the battery.
- Batteries have a limited number of charge cycles. When the battery life becomes noticeably shorter, go to an authorised Huawei Customer Service Centre to replace the battery.
- Do not cover your device or charger during charging.
- Your device may heat up when you have been using it for an extended period of time, especially in high temperatures. In this case, stop charging, disable some features, and move your device to a cool place.
- Please do not use your device while it is charging.
- If your device does not respond after you press and hold the Power button, the battery may have run out. Charge for 10 minutes and then power it on.

Using the Charger that Came with Your Device

- 1 Use the USB cable that came with your device to connect your device and the adapter.
- 2 Plug the adapter into a power socket.

Overview of Battery Icons


You can check the battery level from the battery icon on the device screen.

Battery Icon	Battery Level
	Less than 4% battery remaining
	Charging, less than 10% battery remaining
	Charging, 10% to 90% battery remaining
	Charging, at least 90% battery remaining If 100% is displayed next to the battery icon, or a charging complete message is displayed on the lock screen, the battery is fully charged.

Wireless Reverse Charging

Wireless reverse charging is supported by devices (such as phones, tablets, watches, or bands) that support the Qi Wireless Charging Standard.

Before using wireless reverse charging, ensure that the battery level of your device is higher than 20% and that it is not in **Ultra Power Saving mode**.

- 1 Go to  **Settings** > **Battery**, and enable **Wireless reverse charging**.



- 2** Power on the device to be charged, and place it on the centre of the back of your device. Do not place any metal objects between your device and the device to be charged.
- 3** If the device does not start charging within 5 seconds, adjust its position and try again.
- 4** If the device to be charged is removed from the device for more than 2 minutes during charging, **Wireless reverse charging** will automatically be disabled.

Smart Features

AI Lens




Scan Codes

HiVision can read various QR codes and instantly direct you to the corresponding app screen.

- 1 Open the camera, touch , then touch .
- 2 Place the QR code within the scan frame and wait for it to be recognised.

Scan to Shop


The Shopping feature of HiVision lets you scan goods to get purchase recommendations for similar items online.

- 1 Open the camera, touch , then touch .
- 2 Frame the target object in the viewfinder. You will be given purchase recommendations once the object has been recognised. You can also touch  to take a photo, which will be recognised automatically.

HiTouch

Use HiTouch for Convenient Shopping

When you see an item you wish to buy on your device screen, touch and hold it with two fingers to search for it online, and touch the displayed links to view more details.

- 1 Go to  **Settings** > **Accessibility features** > **HiTouch**, then enable **HiTouch**.
- 2 Touch and hold the item you wish to purchase with two fingers spread slightly apart.
- 3 After the subject is identified, links to the item on different shopping platforms will then display.
- 4 You can also adjust the position and size of the identification box to select other items you're interested in.
- 5 Touch the links to view product details and make a purchase.

Easy Projection


Wireless Projection

You can connect your device to an external display (for example, a TV) wirelessly.


- 1 Based on the model and functions of your external display, do the following:

- If the external display supports Miracast, enable wireless projection on it.
- If not, use a wireless HDMI adapter to connect your device and external display. Ensure that the wireless HDMI adapter is connected to a power supply.

To check whether your external display supports Miracast and how to enable wireless projection on it, consult the user guide or customer service of the external display manufacturer.

2 Swipe down from the status bar to open the notification panel, then touch  to turn on **Wi-Fi**.

3 Swipe down further on the notification panel to enable **Wireless Projection**. Your device will now search for the external display or the wireless HDMI adapter.

Alternatively, go to  **Settings > More connections > Easy Projection** and enable **Wireless Projection**.

4 Touch the name of the external display or the wireless HDMI adapter on the search result list to start projecting.

Wired Projection


If you need to connect your device to an external display and use a wired mouse and keyboard, use a docking station with a USB port.

- 1** Prepare a docking station.
Multiple types of ports are available on a docking station. If your external display supports HDMI and you need to use a wired mouse and keyboard, use a docking station with at least one HDMI port and two USB ports.
- 2** Connect your device and the external display through the docking station, then connect the wired mouse and keyboard to the docking station.
- 3** On the external display, set the corresponding HDMI, DP, or MiniDP input as the signal source.

Desktop Mode

For enhanced work efficiency, project your device's content onto an external display, swipe down from the status bar to open the notification panel, then enable **Desktop mode**.

In **Desktop mode**, the display of your device will be arranged in a desktop layout, and operations on your device won't affect what's on the external display. For example, you can edit a document on the external display while chatting on your device. You don't need to worry about missing notifications, calls, or messages, as a red dot will appear on the notification panel on the external display to keep you informed.

 After an external keyboard is connected, your tablet will prompt you to enable **Desktop mode**.

Exit Desktop Mode

Touch the network signal icons area in the status bar to open the notification centre, then touch **Exit Desktop mode**.



Huawei Share

Huawei Share

Huawei Share is a wireless sharing technology that allows you to quickly transfer images, videos, documents, and other types of files between devices. This technology relies on Bluetooth to discover nearby devices, and uses Wi-Fi Direct to transfer files without using mobile data.

Enable or Disable Huawei Share


You can enable or disable Huawei Share in either of the following ways:

- Swipe down from the status bar to open the notification panel, then touch  to enable or disable **Huawei Share**. Touch and hold the switch to enter the **Huawei Share** settings screen.
- Go to  **Settings** > **More connections** > **Huawei Share**, enable or disable **Huawei Share**. Enabling Huawei Share automatically turns on Wi-Fi and Bluetooth.

Share Files Between Your Device and Computer

You can use Huawei Share to quickly and easily share files wirelessly between your device and a computer (Windows PC or Apple Mac).


- 1 Make sure your device and computer are connected to the same Wi-Fi network.
- 2 On your device, enter the **Huawei Share** settings and enable **Huawei Share** and **Computer Share**.
- 3 Make a note of what's shown next to the **Name shown on computers** and the user name and password under **Verification**.
- 4 On your computer, go to:
 - Windows: **This PC (Computer)** > **Network**.
 - macOS: **Finder** > **Go** > **Network**.

 Currently, this feature is only available on Macs running macOS 10.8 to 10.14.
- 5 On your computer, double-click the name of your device and enter the user name and password that you made a note of earlier.
- 6 Open a shared folder of your device such as the Internal storage or Album folder, then view, edit, or copy files to the computer, or copy files from the computer to the shared folder to store them in your device.
If you edit files in the shared folder on your computer, the changes will be synced to your device automatically. Similarly, if you edit any files in the shared folder on your device, the changes will be synced to your computer.

One-Touch Printing with Huawei Share

When a printer that supports Huawei Share is nearby, you can use Huawei Share to find the printer and print out pictures or PDF files from your device.

- 1** Depending on the type of printer, ensure the following:
 - Wi-Fi capable printers: The printer must be powered on and connected to the same network as your device.
 - Wi-Fi Direct capable printers: The printer must be powered on and have Wi-Fi Direct enabled.
 - Bluetooth capable printers: The printer must be powered on and discoverable.
- 2** On your device, preview the file to be printed, then go to **Share > Huawei Share**.
- 3** Once the printer has been discovered, touch its name on your device, and adjust settings on the preview screen. Then touch **PRINT** to print.

If you are connecting a Bluetooth printer to your device for the first time, find the printer on your device, touch the printer name, then press and hold the Power button on the printer for about 1 second to confirm the connection.
-  For a list of supported printers, touch **Learn more** on the Huawei Share sharing screen, swipe left on the screen, then touch **What printers are supported?** to see the list.


Camera and Gallery

Launch Camera

Launch Camera

There are multiple ways to open the Camera app.

From the Home Screen

From the home screen, open  **Camera**.

From the Lock Screen







When the screen is locked, turn on the screen, then swipe up on the camera icon in the lower right corner to open the camera.

Take Photos

Take Photos

1 Open  **Camera**.

2 You can then:

- **Focus:** Touch where you want to focus.
To adjust focus and metering separately, touch and hold the viewfinder and drag the individual frame or ring to the desired location.
- **Adjust brightness:** Touch the viewfinder. When the  symbol appears next to the focus frame, drag it up or down.
- **Zoom in or out:** On the viewfinder, pinch in or out, or drag the zoom slider.
- **Select a camera mode:** Swipe left or right across the camera mode options.
- **Turn the flash on or off:** Touch  and select  (Auto),  (On),  (Off), or  (Always on).


Some features are only available when using the rear camera.

3 Touch  to take a photo.

Take Timed Photos



The camera timer allows you to set a time delay so you can get into position after you have touched the shutter button.

1 Open  **Camera**.

- 2 Go to  > **Timer** and select a delay option.
- 3 Return to the viewfinder and touch the shutter button. Your device will take a photo when the countdown ends.

Use Audio Control to Take Photos

You can use your voice to take photos without having to touch the shutter button.





- 1 Open  **Camera**.
- 2 Go to  > **Audio control**, enable **Audio control**, and select an audio control option.
- 3 Go back to the viewfinder, then say your command to take a photo.

Master AI

AI Camera



AI camera is a pre-installed camera feature that helps you take better photos by intelligently identifying objects and scenes and optimising the camera settings accordingly.

AI camera is able to identify a variety of scenes, such as stages, beaches, blue skies, greenery, and text.

- 1 Open  **Camera** and select **Photo** mode.
- 2 Touch  to ensure that AI camera is enabled.
- 3 Frame the subject in the viewfinder. Once AI camera identifies what you are shooting, it will automatically recommend a mode (such as portrait, greenery, or text).
- 4 To disable the recommended mode, touch  next to the mode text or touch  to disable AI camera.

Take Wide-Angle or Long-Focus Photos

Take Wide-Angle or Long-Focus Photos





- 1 Open  **Camera** and select **Photo** mode.
- 2 Aim the camera at the distant object you want to shoot. Drag the zoom slider, or pinch in or out to adjust the zoom.
You will not be able to adjust the zoom when the resolution is set to the maximum value.
- 3 In the viewfinder, touch where you want to focus. When the camera is in focus, touch .

Take Panoramic Photos

Take Panoramic Photos

Add breadth to your landscape or group photos with the Panorama feature. The camera takes multiple photos of objects within your field of view and stitches them together into a single panoramic photo.

Use the Rear Camera to Take Panoramic Photos

- 1 Go to  **Camera > More** and select **Panorama** mode.
- 2 Touch  at the bottom of the viewfinder to set the pan direction.
- 3 Point the camera at your starting point, then touch  to start shooting.
- 4 Slowly move the camera in the direction of the arrow displayed on the screen. Keep your device steady and the arrow on the centre line the entire time.
- 5 Touch  when you are finished.

Light Painting




Light Painting

Light painting helps you capture light trails by allowing the shutter to stay open for a longer time. No manual aperture and shutter adjustment is involved.

Just choose from the available options depending on the subjects and light conditions. To reduce camera shake, a tripod is recommended to steady your device.


Capture Car Light Trails in Traffic Trails Mode



Traffic trails mode lets you create artistic photos of car tail lights at night.

- 1 Go to  **Camera > More > Light painting > Traffic trails**.
- 2 Find a spot where you'll see the light trails created by cars from a distance. Ensure that car headlights do not point directly at the camera, as this can overexpose the image.
- 3 Touch  to start shooting. Observe the shot in the viewfinder. When the exposure is just right, touch  to finish shooting.

Capture Light Drawings in Light Graffiti Mode




Light graffiti lets you create patterns or write words by moving a light source in front of the camera.

- 1 Go to  **Camera > More > Light painting > Light graffiti**.
- 2 In a dark environment without distracting light sources, move a suitably bright light source of an appropriate colour, such as a small torch or glow stick, in front of the camera. Avoid exaggerated body movement as this may affect the shooting results.

- 3 Touch  to start shooting. Observe the shot in the viewfinder. When the exposure is just right, touch  to finish shooting.




Capture Rivers and Waterfalls in Silky Water Mode

Silky water lets you capture silky smooth photographs of waterfalls and rivers.

- 1 Go to  **Camera > More > Light painting > Silky water.**
- 2 This feature works best when taking photos of a stream or waterfall where the water is flowing heavily.
- 3 Touch  to start shooting. Observe the shot in the viewfinder. When the exposure is just right, touch  to finish shooting.

Capture the Beauty of the Stars in Star Track Mode

Star track lets you use your camera to capture the movement of the stars in the night sky.



- 1 Go to  **Camera > More > Light painting > Star trails.**
- 2 For best results, choose a clear night in a location free of light pollution and with an unobstructed view of the sky.
- 3 Touch  to start shooting. Observe the shot in the viewfinder. When the exposure is just right, touch  to finish shooting.

Take HDR Photos

Take HDR Photos

When shooting photos with backlighting or a high light contrast, High Dynamic Range (HDR) mode can help you improve light and shadow effects in your photos, giving your photos sharper details.

Use HDR with the Rear Camera

- 1 Go to  **Camera > More** and select **HDR**.
- 2 Steady your device, with the help of a tripod if necessary.
- 3 Touch  to take a photo.

Moving Pictures

Moving Pictures



Moving pictures capture a second of movement and sound before you touch the shutter button, and a second after.

Take Moving Pictures

Go to  **Camera** > **More** > **Moving picture** and touch  to take a photo.

Play Moving Pictures



Moving pictures are saved in JPG format in **Gallery**.

Go to  **Gallery** > **Albums** > **Camera**, touch a moving picture, then touch  at the top of the picture to view it.

The moving picture will automatically stop after a complete playback. You can also touch the screen to stop the playback.

Share Moving Pictures

You can share moving pictures with Huawei or Honor devices using various methods, such as Wi-Fi Direct, Bluetooth, or Huawei Share.

Go to  **Gallery** > **Albums** > **Camera**, touch and hold to select the moving pictures you want to share, then touch  to share them.

If you share moving pictures to third-party apps or incompatible devices, moving pictures will be displayed as static images.


Add Stickers to Photos

Add Stickers to Photos

Add a watermark, such as time, location, weather, or mood, to spice up your photo.

1 Go to  **Camera** > **More** > **Stickers**.

If this mode is not there, touch  and then download **Stickers**.

2 Touch  and select a watermark. The selected watermark will be displayed in the viewfinder.

3 Drag the watermark to change its position. You can also edit the text of some types of watermarks.

4 Touch  to take a photo.




Documents Mode

Documents Mode

Images shot at an angle always suffer from the problem of perspective. If you aren't able to take a perfectly straight photo of a document, use Documents mode.

The camera will automatically adjust skewed images shot in Documents mode.




Shoot Photos in Documents Mode

- 1 Go to  **Camera > More > Documents**. If this mode is not there, touch  and then download **Documents**.
- 2 Frame the document you want to shoot in the viewfinder, such as a presentation slide on a projector or a street poster. Then touch .
- 3 The camera then automatically identifies the text area within the viewfinder and unskews the image.

Adjust the Text Area

If you find the skew correction provided by Documents mode unsatisfactory, you can also manually adjust the text area.

This is only available for photos taken in **Documents** mode.



- 1 Go to  **Gallery > Albums > Camera**, then touch the photo you wish to adjust.
- 2 Touch  above the photo.
- 3 Drag the four corners to customise the correction area. Then touch .

Pro Mode


Pro Mode



Pro mode lets you fine-tune photos and videos and gives you full control over metering, ISO sensitivity, exposure, and more.

Some of the above settings are not available when you shoot videos in Pro mode.

- 1 Open  **Camera > More** and select **Pro** mode.
- 2 In **Pro** mode, you can customise camera settings to shoot unique and professional-looking photos. You can also shoot videos by touching . Before shooting, you can:

- Adjust the metering mode: Touch **M** to select a metering mode.

Metering Mode	Description
 Matrix	Captures average light levels across the screen. Applicable when shooting landscapes.


Metering Mode	Description
 Centre	Gives more weight to light levels at the centre of the screen. Applicable when shooting portrait or macro photos.
 Spot	Concentrates on the light in a small area or point of the screen, such as the subject's eyes.




- Adjust the ISO sensitivity: Touch **ISO** and drag the slider.
In low-light conditions, a higher ISO sensitivity is recommended. In well-lit environments, lower the ISO sensitivity to avoid image noise.
- Adjust the shutter speed: Touch **S** and drag the slider.
When you are shooting static scenes or portraits, it is recommended that you lower the shutter speed. When you are shooting moving scenes, it is recommended that you increase the shutter speed.
- Adjust EV exposure compensation: Touch **EV** and drag the slider.
Increase the EV value in low-light conditions and lower the value in well-lit environments.
- Adjust the focus: Touch **AF** and drag the slider.

Focus Mode	Applicable Scenario
AF-S (single)	Stationary subjects
AF-C (continuous)	Moving subjects
MF (manual)	Touch the subject on which you want to focus.


- Adjust the colour cast: Touch **WB** and select a mode.

When shooting in bright sunlight, select . In low-light environments, select .

Touch  to adjust the colour temperature. If you want to give your photo or video a warm, cosy, or nostalgic tone, increase the K value. For a cool, calm, or futuristic tone, reduce the K value.

- Use Horizontal level: Touch  and enable **Horizontal level**.
A horizontal guiding line will appear on the viewfinder. When the dotted line overlaps with the solid line, the camera is parallel with the horizontal level. It is recommended that you enable this function when shooting buildings or landscapes.
- Use AF auxiliary light: Touch  and enable **AF auxiliary light** for better focus in low-light environments.
- Save RAW format photos: RAW format records more detail and allows you to have a wider range of post-processing options. Go to  > **Resolution** and enable **RAW format**.

Now when you take a photo, it will be saved in RAW and standard formats. The RAW format photos will be saved to the RAW photo album in **Gallery**.

-  RAW format pictures take up more storage space than standard format pictures. Make sure that your device has sufficient storage space.


3 Touch the shutter button to shoot a photo or video.

Use Pro Mode to Shoot Like a Pro




Pro mode lets you fine-tune photos and videos and gives you full control over metering, ISO sensitivity, exposure, and more when shooting.

Some of the above settings are not available when you shoot videos in Pro mode.

1 Open  **Camera** and select **Pro** mode.

2 Customise camera settings to shoot unique and professional-looking photos. You can also shoot high-quality videos by touching .

- Adjust the metering mode: Touch **M** and select a metering mode.


Metering Mode	Description
 Matrix	Measures the light in the whole frame. Applicable when shooting natural landscapes.
 Centre	Places more emphasis on light levels at the centre of the screen. Applicable when shooting portraits.
 Spot	Concentrates on the light in a small area of the screen, such as the subject's eyes.




- Adjust the ISO sensitivity: Touch **ISO** and drag the slider.
In low-light conditions, increase the ISO sensitivity. In well-lit environments, lower the ISO sensitivity to avoid image noise.
- Adjust the shutter speed: Touch **S** and drag the slider.
When you are shooting stationary scenes or portraits, lower the shutter speed. When you are shooting moving scenes or objects, increase the shutter speed.
- Adjust EV exposure compensation: Touch **EV** and drag the slider.
Increase the EV value in low-light conditions and lower the value in well-lit environments.
- Adjust the focus: Touch **AF** and drag the slider.

Focus Mode	Applicable Scenario
AF-S (single)	Stationary subjects
AF-C (continuous)	Moving subjects
MF (manual)	Touch the subject on which you want to focus.

- Adjust the colour cast: Touch **WB** and select a mode.

When shooting in bright sunlight, select . In low-light environments, select .

Touch  to adjust the colour temperature.

- Use Horizontal level: Touch  and enable **Horizontal level**.
A horizontal guiding line will appear on the viewfinder. When the dotted line overlaps with the solid line, the camera is parallel with the horizontal level, avoiding skewed edges.
- Use AF auxiliary light: Touch  and enable **AF auxiliary light** for better focus in low-light environments.
- Save RAW format photos: RAW format records more detail and allows you to have a wider range of post-processing options. Go to  > **Resolution** and enable **RAW format**.





Now when you take a photo, it will be saved in RAW and standard formats. The RAW format photos will be saved to the RAW photo album in **Gallery**.

RAW format photos take up more storage space than standard format photos. Make sure that your device has sufficient storage space.

3 Touch the shutter button to shoot a photo or video.




4K HD Videos


4K HD Videos

- 1** Open  **Camera** and select **Video** mode.
 - 2** Go to  > **Resolution** and select **(16:9) 4K**.
 - 3** Return to the **Video** screen, and touch  to record a video.
-  A higher resolution will result in a higher quality video, but will also take up more storage space.

Slow-Mo Recording

Slow-Mo Recording




- 1** Go to  **Camera** > **More**, then touch **Slow-mo**.
- 2** Touch  and select a speed.
- 3** Touch  to start recording.

- 4 Touch  to end the recording.

Time-Lapse Photography






Time-Lapse Photography

You can use Time-lapse to capture images slowly over several minutes or even hours, then condense them into a short video. This allows you to capture the beauty of change – blooming flowers, drifting clouds, and more.

- 1 Go to  **Camera** > **More**, then touch **Time-lapse**.
 - 2 Place your device in position. To reduce camera shake, use a tripod to steady your device.
 - 3 Touch  to start recording. Touch  to end the recording.
- The recorded video is automatically saved to Gallery.

Filters

Filters



- 1 Open  **Camera** and select **Photo** or **Video** mode.
- 2 Touch  or  and select a filter.
 Some devices do not have the  icon.
- 3 Touch the shutter button to shoot a photo or video.

Edit Camera Modes

Edit Camera Modes

Your device allows you to download, update, and delete camera modes to better suit your needs.

Download Camera Modes






- 1 Go to  **Camera** > **More**.
 - 2 Touch , then touch **ADD** next to the mode you want to download.
- When the download is complete, the new mode will be displayed in **More**.

Update Camera Modes

- 1 On the **More** screen, touch .

- 2 A red dot will display on any mode that has an update available. Follow the onscreen instructions to update modes.




Delete Camera Modes

- 1 On the **More** screen, touch  to display the editing screen.
 - 2 Touch  in the upper right corner of the mode you want to delete, then touch  to save your settings. If  is not displayed, the mode cannot be deleted.
-  To ensure that the camera runs correctly, pre-installed camera modes cannot be deleted.

Adjust Camera Settings

Adjust Camera Settings

Adjust the Camera Resolution

- 1 Open  **Camera** and touch  to access the **Settings** screen.
 - 2 Touch **Resolution** and select a resolution.
-  This feature is not available in some modes.




Enable Location Tag

Enable **Location tag** to tag your location in photos and videos.

Swipe up on a photo or video in Gallery to view its shooting location.

Use the Assistive Grid to Compose Your Photos

Use the assistive grid feature to help you line up the perfect shot.

- 1 Go to  **Camera** > .
- 2 Enable **Assistive grid**.
- 3 Grid lines will appear in the viewfinder. Place the subject of your photo on one of the intersecting points, then touch .

Mute the Shutter Sound

Enable **Mute** as needed.

Capture Smiles

Enable **Capture smiles**. The camera will take a photo automatically when it detects a smile in the viewfinder.

Manage Gallery

View Photos and Videos

In Gallery, you can view, edit, and share your photos and videos, as well as browse the clips automatically generated from them.

View by Album

You can view photos and videos by album on the **Albums** tab.


Some photos and videos are stored in default albums. For example, videos recorded with the camera are saved in the **Camera** album. Screenshots and screen recordings are saved in the **Screenshots** album.

View by Category

Gallery intelligently sorts photos into categories, allowing you to quickly sift through large albums by category.



Touch a category album on the **Discover** tab (such as food, portrait, or scenery) to view photos in that album.

View Details About Photos and Videos

- 1 Touch a photo or video to view it in Full screen mode. Touch the screen again to hide the menu.
- 2 In Full screen mode, you can check the following:
 - Basic information: Swipe up on the photo or video to view basic information.
 - Shooting details: Touch  and view shooting details in the popup box, including the storage path, resolution, and size.

Search for Photos


Quickly locate a photo by searching for keywords in Gallery.


- 1 Open  **Gallery**, then touch  at the top of the screen.
- 2 Enter a keyword (such as "food", "scenery", or "flower").
- 3 Photos related to that keyword will be displayed. Touch a suggested keyword or enter more keywords to find more results.








Edit Photos and Videos

Gallery offers a wide range of editing features for photos and videos.



Basic Editing

Open  **Gallery**, touch the thumbnail of the photo you want to edit, then touch **Edit** to access the editing features.



- Rotate: Touch  and drag the angle wheel to the desired orientation.
You can also touch **Rotate** to rotate your photo 90 degrees or **Mirror** to flip it.

- Crop: Touch  and drag the grid or its corners to make your selection. You can also select a fixed ratio and drag the corners of the grid to crop the photo.
- Add filter effects: Touch  to select a filter.
- Colour splash: Touch  to select the colours you want to highlight. Other parts of the photo will be black and white.
- Blur: Touch , select a blur mode, and drag the slider to adjust the blur.
- Adjust photo effects: Touch  to adjust the brightness, contrast, saturation, and other qualities of the photo.
- Graffiti: Touch  to select a brush and colour to add graffiti.
- Add a text element: Touch  to select an element style and font format.


Add Stickers to Photos

- 1 Touch **Edit > Stickers**.
- 2 Select a type of sticker, such as **Time**, **Location**, **Weather**, or **Mood**.
- 3 Select a sticker and drag it to change its position. You can also edit the text of some types of stickers.
- 4 Touch  to save your edits and  to save the photo.



Pixelate Photos



- 1 Touch **Edit > Mosaic**.
- 2 Select a mosaic style and size to censor parts of a photo.
- 3 To remove the mosaic, touch **Eraser** and wipe it off the photo.
- 4 Touch  to save your edits and  to save the photo.


Rename Photos

- 1 In **Gallery**, touch the photo thumbnail you want to rename.
- 2 Go to  > **Rename** and enter a new name.
- 3 Touch **OK**.

Edit Videos




- 1 Go to  **Gallery > Albums > Videos**, and touch the video you want to edit.
- 2 Touch . Then you can:

- Crop the video: Drag the slider at both ends of the video clip to select which part you want to keep. Touch  to preview the cropped video.
- Adjust the video resolution: Select the desired resolution.
 -  A higher resolution will result in a higher quality video, but will also take up more storage space.

3 When you are finished, touch  to export the video. The exported video will be saved alongside the original video in its original album.

Share Photos and Videos

You can share photos and videos from Gallery in multiple ways.


- 1** Open  **Gallery**.
- 2** Use either of the following methods:
 - Share a single photo or video: Touch the photo or video, then touch .
 - Share multiple photos or videos: In an album, touch and hold to select multiple photos and videos, then touch .

Manage Gallery



Organise photos and videos into albums to easily sift through them.

Open  **Gallery**, then touch **Albums**. From here you can:


Add Albums

- 1** Open  **Gallery**, then touch **Albums**.
- 2** Touch **Add album**, then name the album.
- 3** Touch **OK**.
- 4** Select the photos or videos you want to add.

Move Photos and Videos

- 1** Open an album, then touch and hold to select the photos and videos you want to move.
- 2** Touch  > **Move** to select the desired album.
- 3** Once the items are moved, they will no longer be in their original album.
 -  The **All photos** and **Videos** albums show all photos and videos stored on your device. Moving items across albums will not affect the view in these albums.


Delete Photos and Videos

Touch and hold to select the items you want to delete, then go to  > **Delete**.

 The **All photos**, **Videos**, and **Camera** albums cannot be deleted.

Deleted photos and videos will be temporarily moved to the **Recently deleted** album before being permanently deleted after 30 days.

To permanently delete a photo or video manually, touch and hold its thumbnail in the

Recently deleted album, then go to  > **Delete**.

Recover Deleted Photos and Videos

In the **Recently deleted** album, touch and hold to select the items you want to recover, then

touch  to restore them to their original albums.


If the original album has been deleted, a new one will be created.


Add Photos and Videos to Favorites

Open a photo or video, then touch .

The item will appear in both its original album and the **My favourites** album.

Hide Albums

 System albums such as **Camera**, **Videos**, **My favourites**, and **Screenshots** cannot be hidden.



From the **Albums** tab, go to  > **Hide albums** and toggle the switches on for albums that you want to hide.

Hidden albums and the photos and videos in them are hidden from view in Gallery.

Block Albums

To prevent third-party app albums from displaying in Gallery, block these albums.

1 On the **Albums** tab, touch **Others**.

2 Touch an album, and if  is displayed at the top, go to  > **Block**.
Move photos and videos you want to block to blocked albums.
Blocked albums cannot be viewed in any apps other than Files.

3 To unblock an album, go to **Others**, touch **View blocked albums**, then touch **Unblock** next to the album.

 Only some albums in **Others** can be blocked.

Huawei Vlog Editor

Huawei Vlog Editor



The Huawei Vlog editor automatically creates Huawei Vlogs, such as Spotlight Reels, Highlights videos, and People albums, with added background music from your photos and videos.

You can also select photos and videos yourself to create your own Huawei Vlogs.




Either way, you can edit and share your Huawei Vlogs at the touch of a finger.

View Spotlight Reels


Spotlight Reels are highlight clips of particular people and objects with added background music that Gallery creates automatically from your videos.

- 1 Go to  **Gallery** > **Albums** > **Videos**.
- 2 Touch a video, then swipe up on the video. Touch a People album or video under **Best cut** to view.
If a clip has not yet been generated, touch **GET STARTED** to create one.
-  This feature works automatically when your device is charging and the screen is off. It only works on local videos between 10 seconds and 3 minutes long.

Edit Spotlight Reels

- 1 When you are watching a Spotlight Reel, touch the video to select a preset template at the bottom of the screen.
- 2 Touch  at the top of the screen to customise the background music, filter, intro and outro, and more. Then touch  to save the video.
- 3 When you are finished, touch  to export the video.

Share Spotlight Reels

- 1 Go to **Gallery** > **Albums** > **Video Editor**, where you'll find all your exported videos.
- 2 Touch and hold to select the videos you want to share, then touch .



Huawei Vlogs

Huawei Vlogs

Gallery automatically creates people albums by identifying faces in photos.

View, edit, and share the Huawei Vlogs generated in these people albums.



View Huawei Vlogs


- 1 Go to  **Gallery** > **Discover** and touch a people album.
- 2 Touch  on the album cover.

Edit Huawei Vlogs

Apply special effects, filters, and background music to juice up your Huawei Vlogs.

- 1 Touch  to play the video. During playback, you can:

- Touch the video to select a preset template at the bottom of the screen.
- Touch  at the top of the screen to add or remove photos, change the background music, filter, intro and outro, and more.
- Touch  to save the video. Preview your edits on the playback screen.

2 Touch  to export the video.

Share Huawei Vlogs

When exporting Huawei Vlogs, you can share them with your friends by following the onscreen instructions.


Another way to share Huawei Vlogs is as follows: Go to **Gallery > Albums > Video Editor**, where you'll find all your exported Huawei Vlogs.

Touch and hold to select a Huawei Vlog, then touch .

Highlights

Highlights

Gallery automatically creates Highlights albums from your best photos and videos based on time, location, and theme information, and even generates a short video clip so you can instantly relive the good times.

- To start using Highlights, go to **Camera >**  and enable **Location tag**.
- Highlights albums are created automatically when your device is charging, the screen is turned off, and the battery is at least 50% charged. This process may take some time. Highlights albums will not be created if there are fewer than 10 photos or videos in Gallery.



View Highlights Videos


1 Go to  **Gallery > Highlights** and touch an album.

2 Touch  to play the video.


Edit Highlights Videos

1 When you are watching a Highlights video, touch the video to select a preset template at the bottom of the screen.




2 Touch  at the top of the screen to customise the background music, filter, intro and outro, and more. Then touch  to save the video.

3 When you are finished, touch  to export the video.


Share Highlights Videos

- 1 Go to **Gallery > Albums > Video Editor**, where you'll find all your exported videos.
- 2 Touch and hold to select the videos you want to share, then touch .


Add or Remove Photos and Videos from Highlights Albums

- 1 On the **Highlights** tab, touch an album.
- 2 You can then:
 - Add photos or videos: Touch , select the items you want to add, then touch .
 - Remove photos or videos: Touch and hold to select photos or videos you want to remove, touch , then touch **Move**.

Rename Highlights Albums

- 1 On the **Highlights** tab, touch an album.
- 2 Go to  > **Rename** and enter a new name.

Delete Highlights Albums


- 1 On the **Highlights** tab, touch an album.
- 2 Go to  > **Delete** and touch **Delete**.

Apps

Apps

Apps


Locate an Installed App


Swipe down from the middle of the home screen to show the search bar, and enter the app name. When the app is found, touch  next to its name.

Uninstall an App

You can uninstall an app using either of the following methods:

- Touch and hold the app icon you want to uninstall until your device vibrates, touch **Uninstall**, then follow the onscreen instructions to uninstall the app.

- Go to  **Settings** > **Apps** > **Apps**, touch the app you want to uninstall, then touch **Uninstall**.

 Some pre-installed system apps can't be uninstalled, as uninstalling them may cause system errors.





Manage Background Apps

- 1 Access the recent tasks screen using either of the following methods, depending on the navigation method you are using:

- **Gestures:** Swipe up from the bottom of the screen and hold.


- **Three-key navigation:** Touch .

- 2 On the recent tasks screen, you can:

- Swipe across to view app previews.
- Touch an app preview to access an app.
- Swipe up on an app preview to close an app.
- Swipe down on an app preview to lock it.  will appear at the top of the app preview. Touching  will not close this app.
- Swipe down again to unlock it.  will disappear.
- Touch  to close all apps (except for those you have locked).

Clear the Cache of an App

Delete app cache files to free up storage space.





Go to  **Settings** > **Apps** > **Apps**, select the app for which you want to clear the cache, then go to **Storage** > **Clear cache**.

Contacts


Create and Edit Contact Information

You can create contacts in multiple ways, as well as view and manage your contacts list.




Create Contacts

- 1 Open  **Phone**, select the **Contacts** tab at the bottom of the screen, then touch  .
If you are creating a contact for the first time, touch **Create new contact** to start adding a contact.
 For Wi-Fi-only tablets, open **Contacts** in the **Tools** folder.
- 2 Touch the camera image to set a profile picture for the contact, enter information such as the name, organisation, and phone number of the contact, then touch .

Import Contacts


- 1 On the **Contacts** screen, go to  > **Settings** > **Import/Export**.
- 2 Select **Import via Bluetooth**, **Import via Wi-Fi Direct**, or **Import from storage**, then follow the onscreen instructions to import contacts.

Scan Business Cards to Add Contacts

- 1 On the **Contacts** screen, go to  > **Scan** or go to **Business cards** > **Scan**.
- 2 Place a business card on a flat surface, adjust the camera so that the contents on the business card are clearly displayed in the viewfinder, then touch  to capture a single or multiple business cards in a row.
- 3 After the photos are taken, your device will automatically identify the contact information.
Touch  to save the contact.

You can view the scanned business cards in **Business cards**.


Search for Contacts

- 1 From the **Contacts** screen, go to  > **Settings** > **Display preferences** and touch **All contacts** to display all your contacts.
- 2 Search for contacts using either of the following methods:
 - Swipe down from the middle of the home screen, enter a keyword for the contact you want to find in the search box (such as their name, initials, or email address).


You can also enter multiple keywords, such as "John London", to quickly find matching contacts.

- Enter keywords for the contact you want to find in the search box above the contacts list. Matching results will be displayed below the search box.

Share Contacts



- 1 On the **Contacts** screen, select the contact you want to share, then go to  > **Share contact**.
- 2 Select a sharing method, then follow the onscreen instructions to share the contact.



Export Contacts

- 1 On the **Contacts** screen, go to  > **Settings** > **Import/Export**.
 - 2 Touch **Export to storage** and follow the onscreen instructions to export contacts.
- The exported **.vcf** files are saved in the root directory of your device's internal storage by default. You can open **Files** to view the exported files in the internal storage.




Delete Contacts

Delete contacts using either of the following methods:

- Touch and hold the entry you want to delete, then touch **Delete**.
- On the **Contacts** screen, go to  > **Settings** > **Organise contacts** > **Delete multiple contacts**, select the entries you want to delete, then touch .

To restore deleted contacts, go to  > **Settings** > **Organise contacts** > **Recently deleted**, touch and hold a contact you want to restore, select the check boxes of any others you also want to restore, then touch .





Merge Duplicate Contacts

- 1 Open  **Phone**, select the **Contacts** tab at the bottom of the screen, then touch  > **Settings** > **Organise contacts** > **Merge duplicate contacts**.
 For Wi-Fi-only tablets, open **Contacts** in the **Tools** folder.
- 2 Select duplicate contacts to be merged and touch **Merge**.



Manage Contact Groups

You can conveniently send emails or messages to multiple contacts by creating and managing contact groups. Your device automatically groups contacts by company, city, and last contact time, but you can also create new groups based on your preferences.


Create a Contact Group



- 1 Open  **Phone**, select the **Contacts** tab at the bottom of the screen, then touch **Groups**.
 For Wi-Fi-only tablets, open **Contacts** in the **Tools** folder.
- 2 Touch , enter the group name, such as "Family" or "Friends", then touch **OK**.
- 3 Follow the onscreen instructions to add contacts to the group, then touch .

Edit a Contact Group

- 1 On the **Groups** screen, select the group you want to edit and touch  to add a new contact.
- 2 Touch  for **Remove members**, **Group ringtone**, **Delete group**, or **Rename**.

Send Group Messages or Emails

 SMS messaging services are not supported on Wi-Fi only tablets.

On the **Groups** screen, open a group, then touch  to send a message or touch  to send an email.




Delete Contact Groups

On the **Groups** screen, touch and hold the group to be deleted, then touch **Delete**.

Create Personal Information

You can create a business card containing your personal information to share with others. You can also add personal emergency information so you can call for help quickly in an emergency.

Create a Personal Business Card

- 1 Open  **Phone**, select the **Contacts** tab at the bottom of the screen, then touch **My card**.
 For Wi-Fi-only tablets, open **Contacts** in the **Tools** folder.
- 2 Set your profile picture, enter personal information such as your name, work address, and phone number.
- 3 Touch  to automatically create a QR code business card.
 You can share your business card using the QR code.




Add Emergency Information

 Voice calls are not supported on Wi-Fi only tablets.

- 1 From the **Contacts** screen, go to **My card** > **Emergency information**.
- 2 Touch **ADD** and set your personal, medical, and emergency contact information.

Once you have added emergency contacts and you find yourself in an emergency, access the lock screen for inputting your password, go to **Emergency > Emergency information > Emergency contacts**, and select an emergency contact to make a call.



Erase Contact Traces

- 1 Open  **Phone**, touch the **Contacts** tab at the bottom of the screen, then touch the contact for whom you wish to erase contact traces.
 - 2 Go to  > **Erase history** > **Erase** to delete all call and message records for that contact.
-  This feature is not supported on Wi-Fi only tablets.

Add Your LinkedIn Account

Link your LinkedIn account to sync the LinkedIn information of your contacts to your device.

Sync LinkedIn Contacts

- 1 Open  **Phone**, select the **Contacts** tab at the bottom of the screen, then go to  > **Settings** > **Add LinkedIn account**.
- 2 Follow the onscreen instructions to log in to your LinkedIn account. After logging in, the LinkedIn information of your contacts will automatically be synced to your device.
- 3 To sync all LinkedIn contact information, from the LinkedIn settings screen, go to **Sync LinkedIn contacts** > **All LinkedIn contacts**, and select **Sync** or **Auto-update LinkedIn**.

View a Contact's LinkedIn Information

From the **Contacts** screen, select a LinkedIn contact, then touch **View LinkedIn profile online**.

Unlink Your LinkedIn Account

From the **Contacts** screen, touch  > **Settings** > **LinkedIn** and select **Disassociate**.


Phone

Make a Call

 Voice calls are not supported on Wi-Fi only tablets.

Dial a Number or Select a Contact to Call



Use either of the following methods to make a call:

- Open  **Phone**, enter part of a phone number, the first letter of a contact's name, or the contact's initials to find a contact.
- On the **Phone** screen, touch the **Contacts** tab at the bottom, then select a contact to make a call.

Touch  to end a call.



Use Speed Dial

Once you've set up speed dialling for a contact, you can quickly call that contact with the assigned number key.

Go to  **Phone** >  > **Settings** > **Speed dial**, select a number key, then set a contact for this speed dial number.

Press the Power Button to End a Call

During a call, press the Power button to end the call.

Go to  **Phone** >  > **Settings** and enable **Power button ends call**.

Set a Call Background

You can set a wallpaper as the call background.

1 Go to  **Settings** > **Home screen & wallpaper** > **Wallpaper**.

2 Select a picture and set it as the wallpaper.


You can also set a profile picture for a contact to be shown on the call background.


1 On the **Phone** screen, touch the **Contacts** tab at the bottom, then select the contact you want to set a profile picture for.

2 Touch  and then touch  to set a profile picture for the contact.

Make an International Call

1 Contact your mobile carrier to activate and inquire about the international calling service.

2 Open  **Phone**, touch the **Contacts** tab at the bottom, then select a contact to make a call.



For numbers that are not in the contacts list, on the **Phone** screen, touch and hold the 0 number key to display +, enter the country code and phone number, then touch  to make an international call.

Manage Call Logs

 Voice calls are not supported on Wi-Fi only tablets.



You can merge the call logs of the same contact or number for a tidier and more concise interface, or delete call logs as required.

Merge Call Logs

1 Go to  **Phone** >  > **Settings** > **Merge call log**.



2 Select **By contact** and your device will automatically merge the call logs of the same number or contact.

View Missed Calls

- 1 To display all missed calls, open  **Phone**, swipe down on the call log list, then touch the **Missed** tab.
All missed calls are displayed in red in the call log list for you to quickly identify them on the **All** screen.
- 2 Touch  next to a call log to call back or send a message.

Delete Call Logs

Delete call logs using either of the following methods:

- On the **Phone** screen, touch and hold a call log, then touch **Delete entry**.
- On the **Phone** screen, go to  > **Delete entries**. Select multiple call logs, then touch  to delete them.




Set a Ringtone for Incoming Calls

 Voice calls are not supported on Wi-Fi only tablets.


You can set your favorite music or a video as the ringtone for incoming calls.

If two SIM cards have been inserted into your device, configure the ringtone separately for SIM 1 and SIM 2.

Set a Music Ringtone

- 1 Go to  **Phone** >  > **Settings** > **Ringtone** or  **Settings** > **Sounds & vibration** > **Tablet ringtone**.
- 2 Select a system ringtone, or touch **Music on device** to select a local song as the ringtone.

Set a Ringtone for a Contact

- 1 Open  **Phone**, touch the **Contacts** tab at the bottom of the screen, then select the contact you want to set a ringtone for.
- 2 On the contact details screen, touch **Ringtone** and select a ringtone.


Manage Incoming Calls




 Voice calls are not supported on Wi-Fi only tablets.

You can use the call waiting feature to answer incoming calls when you are already engaged in a previous call. If you cannot answer a call because your device is faulty or the network signal is poor, you can also set call forwarding to forward calls to another number or device.





Answer or Reject an Incoming Call

If you receive a call when the screen is locked:

- Drag  right to answer the call.


- Drag  left to reject the call.
- Touch  to reject the call and reply with an SMS message.
- Touch  to set a callback reminder.



If you receive a call when the screen is unlocked:

- Touch  to answer the call.
- Touch  to reject the call.
- Touch  to reject the call and reply with an SMS message.
- Touch  to set a callback reminder.

Enable Call Waiting



The Call waiting feature lets you answer incoming calls when a call is already in progress by placing the first call on hold.

 This feature requires the support of your mobile carrier. For details, contact your carrier.

Go to  **Phone** >  > **Settings**. Under the SIM card you wish to enable call waiting on, go to **More** > **Call waiting**.

 Features may vary depending on your carrier.


Answer a New Incoming Call During a Call

- 1 When you receive an incoming call when you are already engaged in a previous call, touch  to answer it.
- 2 Touch  or touch a held call in the call list to switch between the two calls.

Enable Call Forwarding



After the Call forwarding feature is enabled, calls that meet set conditions will be automatically transferred to a specified phone number.

 This feature requires the support of your mobile carrier. For details, contact your carrier.

- 1 On the **Phone** screen, go to  > **Settings**, and touch **Call forwarding**.
- 2 Select and enable a forwarding method, then enter and confirm the target number.

 Features may vary depending on your carrier.

Disable Call Forwarding


- 1 On the **Phone** screen, go to  > **Settings**, and touch **Call forwarding** under the SIM card you wish to disable call forwarding on.
 - 2 Select the forwarding mode that you wish to disable and disable it.
-  Features may vary depending on your carrier.

Filter and Block Spam Calls

-  Voice calls are not supported on Wi-Fi only tablets.






Set different block rules to block sales, fraud, and other kinds of spam calls.

Filter Spam Calls

- 1 Go to  **Phone** >  > **Blocked** >  and set the block rules.
Alternatively, go to  **Optimizer** > **Blocked** >  to set the block rules.
- 2 Touch **Call block rules** and toggle on the switches of corresponding block rules.

Block Incoming Calls from Specific Numbers

You can block incoming calls from specific numbers using either of the following methods:

- Go to  **Phone** >  > **Blocked** >  > **Blocklist**, touch , then add the phone numbers you want to block.
- On the **Phone** screen, touch the **Contacts** tab at the bottom, touch the contact you want to block, then go to  > **Block contact**.

Set Whether to Receive Notifications for Blocked Calls


Go to  **Phone** >  > **Blocked** >  > **Receive notifications** and set whether to receive notifications for blocked calls.

Emergency SOS and Calls

-  This feature is not supported on Wi-Fi only tablets.

Use Emergency SOS

If you encounter an emergency, you can quickly and secretly send an SOS message to your emergency contacts.


- 1 Enable GPS and allow the Emergency SOS feature to access your location.
- 2 Go to  **Settings** > **Security** > **Emergency SOS**, enable **Also send SOS message**, then set your emergency contacts.


Once you have enabled the Emergency SOS feature, if you encounter an emergency, press the Power button five times in quick succession and your device will automatically send a message with your current location to your emergency contacts.

Once the message is sent, your device will bring up the emergency call screen, from which you can quickly call an emergency service or one of your emergency contacts.

Make Emergency Calls

In the event of an emergency, you can make emergency calls directly from the lock screen of your device even if there is no signal.

 The emergency call feature is subject to local regulations and individual mobile carriers. Network issues or other types of interference may lead to emergency calls not working.

- 1 From the lock screen, access the screen for inputting your password, and touch **Emergency**. If you are in an area with a good signal and your device has an Internet connection, it will automatically obtain your location and display it on the screen.
- 2 Enter your local emergency number and touch  to call the number. Alternatively, touch **Emergency information** and select an emergency contact to call.



Use Voicemail

 Voice calls are not supported on Wi-Fi only tablets.

Divert calls to your voicemail when your device is switched off or when there is no cellular coverage. Callers can leave a voice message which you can listen to later.

This feature requires service support from your mobile carrier. Contact your mobile carrier for details.

Enable Voicemail

- 1 Go to  **Phone** >  > **Settings** > **More**.
If two SIM cards have been inserted into your device, touch **More** under SIM 1 or SIM 2.
- 2 Go to **Voicemail** > **Voicemail number**, enter the voicemail number obtained from your carrier, and touch **OK**.

Listen to a Voicemail Message

Touch and hold the 1 key on the dialler and then enter your voicemail number.







Messaging

Send and Manage Messages


 SMS messaging services are not supported on Wi-Fi only tablets.

You can send and receive messages that include text, emojis, pictures, audio files, and more. You can also manage your messages in the message list.


Send Messages

- 1 Open  **Messaging** and touch .
- 2 On the **New message** screen, enter your message content. Touch  to add other types of content such as pictures and audio files.
- 3 In the recipient box, touch , select contacts or contact groups, then touch . To send a group message to those not included in your contacts list, touch anywhere blank in the recipient box and enter the recipients' phone number. Touch the return key in the keyboard when you finish entering each of the phone numbers.
- 4 After finishing editing, touch  to send the message.


Save a Draft Message

From the **New message** screen, touch  to save a draft message.

Cancel Sending a Message



On the **Messaging** screen, go to  > **Settings** > **Advanced** and enable **Recall messages**. Within six seconds after the message is sent, you can double-touch the message to cancel sending it.

View and Reply to Messages

- 1 On the **Messaging** screen, select a contact to view your conversation with them.
- 2 To reply to a message, enter your message content in the text box, then touch . New messages will be displayed in the notification panel in the form of banners and you can touch them there to reply.


Mark Messages as Read


You can use any of the following methods to mark messages as read:

- New messages will be displayed in the notification panel in the form of a banner and you can mark them as read there.
- On the **Messaging** screen, swipe left on the message that you want to mark as read, then touch .
- On the **Messaging** screen, go to  > **Mark all as read**.

Delete a Message

You can delete messages using either of the following methods:

- On the **Messaging** screen, swipe left the message to be deleted, then touch .

- Touch and hold a message, select multiple messages you wish to delete, then touch . Deleted messages cannot be recovered.

Filter and Block Spam Messages

 This feature is not supported on Wi-Fi only tablets.


Set different block rules, such as your blocklist, to block sales, fraud, and other kinds of spam messages.


Block Spam Messages

Go to  **Messaging** >  > **Blocked** >  and set block rules.

You can also go to  **Optimizer** > **Blocked** >  to set block rules.

Block Messages from Specific Numbers

1 Go to  **Messaging** >  > **Blocked** >  > **Blocklist**.




2 Touch  and add the numbers you want to block. SMS and MMS messages sent by these numbers will all be blocked.

Block Messages Containing Specific Keywords

1 Go to  **Messaging** >  > **Blocked** >  > **Keyword blocklist**.

2 Touch  and add the keywords to be filtered. All messages containing these keywords will be blocked.

Set Whether to Receive Notifications for Blocked Messages

Go to  **Messaging** >  > **Blocked** >  > **Receive notifications** and set whether to receive notifications when messages are blocked.

Calendar

Add and Manage Events


Events help you plan and manage activities in your daily life and work, such as attending company meetings, arranging social get-togethers, and making credit card repayments. You can add events and set reminders to help you arrange your schedule in advance.

Create an Event



1 Open  **Calendar** and touch .

2 Enter the details of the event, such as the title, location, and start and end times.

3 Touch **Add reminder** to set the reminder time for the event.

- 4 Touch  to save the event.


Import Meeting Reminders

- 1 Go to  **Calendar** >  > **Manage accounts**.
- 2 Touch **Add account**, then follow the onscreen instructions to add your work emails (from your Exchange account) to the calendar to see meeting reminders.

Search for Events

- 1 On the **Calendar** screen, touch .
- 2 Enter keywords of your event in the search box, such as the title and location.



Share an Event

- 1 On the **Calendar** screen, touch an event on the calendar or under the schedule.
- 2 Touch  and follow the onscreen instructions to share the event using whichever method you prefer.

Set a Calendar Notification



Set the calendar notification type according to your requirements. You can set status bar notifications, banner notifications, sound notifications, and more.

You can also change the default reminder time to control when your device will send you a reminder.

- 1 Go to  **Calendar** >  > **Settings**.
- 2 In the reminder settings, set **Default reminder time** and **Reminder time for all-day events**.
- 3 Touch **Notifications** and enable **Allow notifications**. Then follow the onscreen instructions to set a notification type.

Customise the Calendar View

Set the start day of the week, whether or not to show week numbers, and more in the calendar view settings.

- 1 Go to  **Calendar** >  > **Settings**.
- 2 Set the start day of the week, whether or not to show week numbers, and so on.



Set Alternate Calendars

Set the Calendar to display other calendars as well, such as the Chinese lunar calendar or the Islamic calendar.

- Go to  **Calendar** >  > **Settings** > **Alternate calendars** and select another calendar.




View National/Regional Holidays

View national/regional holidays in the calendar to help plan your travel.

- 1 Go to  **Calendar** >  > **Settings** > **National/Regional holidays**.
- 2 Turn on the switch of a country/region, and your device will automatically download holiday information for that country/region and display it in the Calendar.

Clock

Alarm

- 1 Go to  **Clock** > **Alarm**, touch , and set a time.
- 2 Select a sound for the alarm. The sound will play when you select it. You can press the Volume buttons to adjust its volume.
- 3 Set the following options according to your preferences:
 - Repeat
 - Vibrate
 - Ring duration
 - Snooze duration
 - Label
- 4 When you are finished, touch .

Modify or Delete an Alarm

Touch an existing alarm to modify or delete it.

Snooze an Alarm

If you don't want to get up when an alarm rings, simply touch the snooze button or press the Power button.

The snooze length is set when creating the alarm.




Turn Off an Alarm

When an alarm rings, swipe left or right on the button that appears at the bottom of the screen to turn it off.

Timer and Stopwatch

You can use the timer to count down from a specified time. You can also use the stopwatch to measure the duration of an event.

Timer



Go to  **Clock > Timer**, set the duration of time, and touch  to start the timer. To stop it, touch .

Stopwatch

Go to  **Clock > Stopwatch**, and touch  to start the stopwatch. To stop it, touch .

View the Time in Cities Worldwide

Use **Clock** to see the local time in different time zones around the world.

Go to  **Clock > World clock**, touch , and enter the name of a city or select one from the list of cities.






Display Dual Clocks on the Lock Screen

You can set alarms to play a sound or vibrate at specific times.

Notepad

Create Notes




You can create notes to record your thoughts and inspirations.

- 1 Go to  **Notepad > Notes**, then touch .
- 2 Enter the title and content of the note.
- 3 Touch  to insert a picture into the note as required. Touch and hold the picture, then drag it to the desired position in the note.
- 4 If you want to organise your notes for easier access and viewing, touch  to add a tag to your note after finishing it.
- 5 Touch  to save the note.

Create To-Dos

You can create to-dos with a set time to remind you to complete them.

If you set a time, your device will send you a reminder notification at the specified time.

- 1 Go to  **Notepad > To-dos**, then touch .
- 2 Enter your to-do.
- 3 Touch , set a reminder time, then touch **OK**.
- 4 Touch **Save**.

Manage Your Notepad



You can sort your Notepad items by category and put them into different folders, delete unwanted items, and share items with other people.

When viewing a list of items or an individual item in Notepad, touch the status bar at the top of the screen to quickly return to the first item or the beginning of the item you are viewing.

Sort Notepad Items by Category


Different types of notes or to-dos can be sorted by category and displayed in different colours for more convenient viewing.

You can sort notepad items using either of the following methods:

- On the **All notes** or **All to-dos** screen, swipe left on an item, touch , then select a tag.
- Touch and hold a note or to-do, select or drag over the check boxes of the notes or to-dos you want to categorise under the same tag, then touch  to select a tag.





Share Notepad Items

You can share your Notepad items as text files or images.

On the **All notes** or **All to-dos** screen, touch the item to be shared, touch , then follow the onscreen instructions to share it.

Recorder

Recorder



- 1 In the **Tools** folder, open  **Recorder**, and touch  to start a recording.
- 2 During a recording, you can touch  to add a tag.
- 3 When you are finished, touch  to stop recording.
- 4 You can also touch and hold a recording, then share, rename, or delete it.


Recordings are saved under **Files** > **Categories** > **Internal storage** > **Sounds**.

Play a Recording




Recording files are listed on the  **Recorder** home screen. Touch a recording to play it.

On the recording playback screen, you can:



- Touch  to skip the muted parts.
- Touch  to adjust the playback speed.

- Touch  to add a tag.
- Touch a tag to rename it.

Edit a Recording

- 1 On the  **Recorder** home screen, touch a recording.
- 2 Touch  to display the waveform of the recording.
- 3 Drag the start and end bars to adjust the clip length. Pinch your fingers on the waveform to zoom in or out to adjust the clip length more precisely.
- 4 Touch  and select **Keep selected part** or **Delete selected part**.

Share Recordings


- 1 On the  **Recorder** home screen, touch the recording you want to share to play it.
- 2 Go to  > **Share**.
- 3 Select your preferred sharing method and follow the onscreen instructions to share the recording.

Email

Add Email Accounts


Add your email account in **Email** and you can use your device for convenient email access at any time.

Add a Personal Email Account

- 1 Open  **Email** on your device and select from the available mailbox providers or touch **Other**.
- 2 Enter the email address and password, touch **Sign in**, and follow the onscreen instructions to configure the server settings. The system will automatically connect to the server and check the server settings.

Add an Exchange Account

Microsoft Exchange enables digital messaging within a company. If your company mailbox uses the Exchange server, you can log in to your company email account on your device.






- 1 Contact the company email server administrator to obtain the domain name, server address, port number, and security type.
- 2 Open  **Email**, and select **Exchange**.
- 3 Enter the email address, user name, and password.

- 4 Touch **Manual setup**. On the **Account setup** screen, set parameters such as the email domain name, server address, port number, and security type.
- 5 Touch **Next**, then follow the onscreen instructions to complete the configuration. The system will automatically connect to the server and check the server settings.

Send Emails

Select an email account and write emails to send them to the recipients' email addresses.

Send an Email




- 1 Open  **Email**, then touch .
- 2 Enter the recipient's email address, or touch  to select a contact or group, then touch .
- 3 Add the addresses of any recipients to whom you wish to CC or BCC the email. If you have more than one email account, you will also need to select the email address you wish to send the email from.
- 4 Write the email and enter the subject, then touch .

Save an Email as a Draft

On the **Compose** screen, touch  to save the email as a draft.



Go to **Inbox > Show all folders > Drafts** to view draft emails.

Reply to an Email

- 1 On the **Inbox** screen, open the email you wish to reply to.
- 2 Touch  to reply to just the email sender, or touch  to reply to everyone on the thread.
- 3 After writing your reply, touch .



Set Encryption for Outgoing Emails

You can encrypt outgoing emails to protect your confidential information. Encrypted emails can be viewed only by recipients who have the required digital certificates, ensuring information security.

- 1 Apply for and install a digital certificate.
 -  You need to apply for a digital certificate from a trusted third-party certificate authority (CA) before installing it. The processing procedure varies between different CAs. For details, refer to the relevant CA website.
- 2 From the **Inbox** screen, go to  > **Settings**.
- 3 Touch the account you want to set encryption for, touch **Email encryption**, then enable **Encrypt outgoing emails**.



- 4 If the certificate has been installed, select **Encryption certificate** and set **Encryption algorithm** according to your preferences.
If no certificate has been installed, enable **Send encrypted emails without installing certificates**.

Set Automatic Replies for an Exchange Account

- 1 Go to  **Email** >  > **Settings**.
- 2 Select the Exchange account you want to set automatic replies for, touch **Automatic replies**, and turn on the **Automatic replies** switch.
- 3 Set the time or content of the auto reply, then touch **Done**.

Set Email Notifications


Set a notification mode for your emails based on your needs.


- 1 Go to  **Email** >  > **Settings** > **General** > **Notifications** and enable **Allow notifications**.
- 2 Select the email account you want to set notifications for, turn on the **Allow notifications** switch, then select a notification mode.

View and Manage Emails

Receive, view and manage your emails in the inbox.

View an Email

- 1 Open  **Email**, then swipe down on the **Inbox** screen to refresh the email list.
If you have multiple email accounts, touch **Inbox** and select the email account you want to view.
- 2 Open an email, then view, reply to, forward, or delete the email.


If you are notified about an important event in an email, touch  > **Add to calendar** to import the event into your calendar.
- 3 Swipe left or right to view the next or previous email.

Organise Emails by Subject

On the **Inbox** screen, go to  > **Settings** > **General**, then enable **Organise by subject**.

Add an Email Contact to a Group


You can create email groups to communicate more efficiently.

- 1 On the **Inbox** screen, open an email, and touch **Add to group**.
- 2 Choose to add the email sender or recipient to the group, and touch **OK**.
- 3 On the group selection screen, select an existing group, then touch  to save the contact in the group.
Alternatively, touch **Create group**, enter the group name, then touch **Save**.

Once you have created a group, you can select the group from the recipient drop-down list to send emails to group members.

Sync Emails


After automatic email syncing is enabled, the emails on your device will be automatically synced with those on the email server.

- 1 On the **Inbox** screen, go to  > **Settings**.
- 2 Touch the account you wish to sync emails for, then turn on the **Sync Email** switch.
- 3 Touch **Sync frequency** to set the automatic syncing period.

Search for an Email

On the **Inbox** screen, touch the search box, then enter keywords such as the subject or content of the email.



Delete Emails

On the **Inbox** screen, touch and hold the email to be deleted, drag over the check boxes of any other emails you want to delete, then touch .

Manage Email Accounts

You can add multiple email accounts so you can manage them at the same time.


Add Email Accounts

- 1 Go to  **Email** >  > **Settings** > **Add account**.
- 2 Select an existing email service provider or touch **Other**, then follow the onscreen instructions to add an email account. Repeat for each of the accounts you wish to add.


Switch Between Email Accounts

On the **Inbox** screen, touch **Inbox** and select the email account you wish to use.

Change Account Name and Signature

On the **Inbox** screen, go to  > **Settings** and select an account. You can then set or change the **Account name**, **Signature**, and **Default account**.

Log Out of an Email Account



On the **Inbox** screen, go to  > **Settings**, select an account, and touch **Remove account**.

Manage VIP Contacts





Important email contacts can be added as VIP contacts. Emails from VIP contacts will be automatically stored in the VIP inbox.

Add a VIP Contact

You can add VIP contacts using either of the following methods:

- Go to  **Email** >  > **Settings** > **VIP contacts**. On the **VIP list** screen, go to **Add** > **Create** or touch **Add from contacts**, then follow the onscreen instructions.
- Open an email, touch the account name of the sender or receiver, then touch **Add to VIP list**.

Delete a VIP Contact

- 1 Go to  **Email** >  > **Settings** > **VIP contacts**.
- 2 On the **VIP list** screen, touch .
- 3 Select the VIP contact to be deleted, then touch .


Calculator

Calculator

Use the calculator on your device to perform basic mathematical calculations and for calculating exponential, logarithmic, and trigonometric functions.

Use the Basic Calculator

You can open the calculator using either of the following methods:

- Swipe down from the middle of the home screen to display the search box. Search for **Calculator**, and the first result will be the preinstalled **Calculator** app.
- Find **Calculator** in the **Tools** folder.
- Swipe up from the bottom of the lock screen to display the shortcut panel, then touch  to open the calculator.

Use the Scientific Calculator

Open the calculator and rotate your device to landscape orientation.



Copy, Delete, or Clear Numbers

- Copy a calculation result: Touch and hold the calculation result, touch **Copy**, then paste the result somewhere else, such as in a note or message.
- Delete the last digit: Touch the Back button.
- Clear the display: Touch the Clear (C) button.

Torch

Torch

You can turn on the flashlight using either of the following methods:

- Swipe down from the status bar to open the notification panel, and touch  to turn on the flashlight. Touch the icon again to turn off the flashlight.
- Swipe up from the bottom of the lock screen to display the shortcut panel, and touch  to turn on the flashlight. Touch the icon again to turn off the flashlight.

Compass

Compass

- 1 You can open **Compass** using either of the following methods:
 - Swipe down from the middle of the home screen to display the search box. Search for **Compass**, and the first result will be the preinstalled **Compass** app.
 - Find **Compass** in the **Tools** folder.
- 2 To lock your current direction, touch the compass dial. The scale marks will turn blue if you go off course.


For accurate bearings, hold your device flat or straight up when using **Compass**.

App Twin

App Twin

App Twin enables you to log in to two Facebook accounts simultaneously without the hassle of having to constantly switch between them, allowing you to keep your work and private lives separate.

 **App Twin** will only work with certain apps.

- 1 Go to  **Settings** > **Apps** > **App Twin**, and turn on the switch for the app you want to create a twin of.
- 2 Two icons for the same app will display on the home screen for you to log in to your separate accounts simultaneously.
- 3 To disable App twin, touch and hold the twinned version of the app, then touch **Delete**. All the data of the twin app will be deleted.


Quickly Access Frequently Used App Features


Quickly Access Frequently Used App Features

You can access frequently used features of certain apps from app icons on the home screen, and even add shortcuts for these features to the home screen.

Quickly Access Frequently Used App Features

Touch and hold an app icon until a pop-up menu is displayed. Then touch a frequently used feature to access it.

For example, touch and hold the  icon, then touch a shooting mode from the pop-up menu to access it.

-  If no pop-up menu is displayed after you touch and hold an app icon, the app does not support this feature.


Add Frequently Used App Features to the Home Screen

Touch and hold an app icon on your home screen to bring up the pop-up menu. Touch and hold the desired feature and drag it to your home screen to create a shortcut.

Tablet Manager

Cleanup

You can use **Cleanup** in **Optimizer** to scan for redundant or large files, such as app residue, unwanted installation packages, WeChat data, and more. Once detected, you can choose whether or not to delete files as suggested.

- 1 Open  **Optimizer**, then touch **Cleanup**.
- 2 When the scan is complete, touch **Clean up** after each item and delete any files you don't need.

Clean Up Duplicate Files

Optimizer can identify duplicate files on your device.

On the **Cleanup** screen, touch **Duplicate files**, then select unwanted files to delete them.

Manage Data Usage

-  This feature is not supported on Wi-Fi only tablets.

Open  **Optimizer**, then touch **Data usage** to view data usage and manage network access.

View and Manage High Data Consumption Apps

- 1 You can find out how much data your apps are using in comparison to each other by going to **Data usage this month** on the Data usage screen.


- 2 Touch a high data consumption app to set mobile data, roaming data, or background data usage limits for it.

View and Set the Network Access Permission of an App

On the Data usage screen, touch **Network access**, then change the settings for apps that consume a large amount of data (such as video streaming apps) so they can only be used when you are connected to a Wi-Fi network.

Enable or Disable Smart Data Saver

Enable Smart data saver to prevent apps from using mobile data in the background.

- 1 On the Data usage screen, touch **Smart Data Saver**, then enable it. The  icon will then display on the status bar.
- 2 If you want to allow unrestricted access to data for some apps even when they are running in the background, toggle on the switches for these apps.

Add Mobile Data Usage Reminders

Add data plans for your SIM cards and usage reminders in Optimiser to keep you informed of your data consumption.


- 1 On the data usage screen, go to **More data settings** > **Monthly data limit** and follow the onscreen instructions to add a data plan.
- 2 On the **More data settings** screen, touch **Usage reminders**. From there, you can set whether a notification will be sent or if mobile data will be disabled once the monthly data limit or roaming data limit has been topped.
- 3 On the **More data settings** screen, you can set whether to show data used when the screen is locked.

Filter and Block Spam Calls

 Voice calls are not supported on Wi-Fi only tablets.

Set different block rules to block sales, fraud, and other kinds of spam calls.


Filter Spam Calls

- 1 Go to  **Phone** >  > **Blocked** >  and set the block rules.
Alternatively, go to  **Optimizer** > **Blocked** >  to set the block rules.
- 2 Touch **Call block rules** and toggle on the switches of corresponding block rules.

Block Incoming Calls from Specific Numbers

You can block incoming calls from specific numbers using either of the following methods:

- Go to  **Phone** >  > **Blocked** >  > **Blocklist**, touch , then add the phone numbers you want to block.

- On the **Phone** screen, touch the **Contacts** tab at the bottom, touch the contact you want to block, then go to  > **Block contact**.

Set Whether to Receive Notifications for Blocked Calls

Go to  **Phone** >  > **Blocked** >  > **Receive notifications** and set whether to receive notifications for blocked calls.



Filter and Block Spam Messages

 This feature is not supported on Wi-Fi only tablets.




Set different block rules, such as your blocklist, to block sales, fraud, and other kinds of spam messages.


Block Spam Messages

Go to  **Messaging** >  > **Blocked** >  and set block rules.

You can also go to  **Optimizer** > **Blocked** >  to set block rules.


Block Messages from Specific Numbers

1 Go to  **Messaging** >  > **Blocked** >  > **Blocklist**.




2 Touch  and add the numbers you want to block. SMS and MMS messages sent by these numbers will all be blocked.

Block Messages Containing Specific Keywords

1 Go to  **Messaging** >  > **Blocked** >  > **Keyword blocklist**.

2 Touch  and add the keywords to be filtered. All messages containing these keywords will be blocked.

Set Whether to Receive Notifications for Blocked Messages

Go to  **Messaging** >  > **Blocked** >  > **Receive notifications** and set whether to receive notifications when messages are blocked.

One-Touch Optimisation

Use the **OPTIMISE** feature of **Optimizer** to keep your device in an optimal state.

1 Open  **Optimizer** and touch **OPTIMISE**.




2 Results and recommendations will be displayed once the optimisation is complete.


Phone Clone

Phone Clone




Phone Clone lets you quickly and seamlessly move all the basic data (including contacts, calendar, images, and videos) from your old device to your new device.


Clone Data from an Android Device

- 1 On your new device, open  **Phone Clone** (in the **Tools** folder by default). Alternatively, go to  **Settings** > **System & updates** > **Phone Clone**, touch **This is the new phone**, then touch **Huawei** or **Other Android**.
- 2 Follow the onscreen instructions to download and install **Phone Clone** on your old device.
- 3 On your old device, open  **Phone Clone** and touch **This is the old phone**. Follow the onscreen instructions to connect your old device with your new device by scanning a code or connecting manually.
- 4 On your old device, select the data you want to clone, then touch **Transfer** to start cloning.

 Phone Clone is only available on devices running Android 4.4 or later.


Clone Data from an iPhone or iPad

- 1 On your new device, open  **Phone Clone** (in the **Tools** folder by default). Alternatively, go to  **Settings** > **System & updates** > **Phone Clone**, touch **This is the new phone**, then touch **iPhone/iPad**.
- 2 Follow the onscreen instructions to download and install **Phone Clone** on your old device.
- 3 On your old device, open  **Phone Clone** and touch **This is the old phone**. Follow the onscreen instructions to connect your old device with your new device by scanning a code or connecting manually.
- 4 On your old device, select the data you want to clone, then follow the onscreen instructions to complete the data cloning.

 Phone Clone is only available on devices running iOS 8.0 or later.

Tips

Tips

 **Tips** provides you with an abundance of information so you can quickly familiarise yourself with your device and make the best use of it. In **Tips**, you can also find a full set of user guides for more detailed instructions.

- Vividly depicted cards: Browse through the easy-to-read cards with a short clip or image to quickly get to grips with all the most useful features on your device. The cards are categorised so you can jump directly to a category you are interested in.

- User guides: Find detailed instructions in the comprehensive user guides.
- Try out features: A **TRY NOW** button is available in certain cards for you to try out the feature immediately.


Settings


Wi-Fi

Connect to a Wi-Fi Network

Connecting to the Internet over Wi-Fi is an effective way to save mobile data. You can also enable Wi-Fi security monitoring to avoid risky hotspots and ensure safe Internet access.

Connect to a Wi-Fi Network


 Be extra careful when connecting to a free public Wi-Fi hotspot to avoid security risks and economic loss resulting from the leakage of your personal data.

- 1 Go to  **Settings** > **Wi-Fi**, and enable **Wi-Fi**.
- 2 Connect to a Wi-Fi network on the **Wi-Fi** screen using either of the following methods:
 - Select a Wi-Fi network to connect to under **Available networks**. A password is required for encrypted networks.
 - To manually add a Wi-Fi network, scroll down to the bottom of the screen, touch **Add network**, and enter the SSID and password as prompted to complete the connection.

The  icon displayed on the status bar indicates that the device is connected to Wi-Fi.

Wi-Fi+

Once Wi-Fi+ is enabled, when your device detects a Wi-Fi network that it has previously connected to or that is free, it will automatically enable Wi-Fi and connect to the network. Your device will also evaluate the stability of Wi-Fi networks and switch to mobile data when the Wi-Fi signal is poor. Please note, this may incur extra charges.

- 1 Go to  **Settings** > **Wi-Fi**.
- 2 Go to **More settings** > **Wi-Fi+** and enable or disable **Wi-Fi+**.

Bluetooth



Bluetooth Basics

You can connect your device to Bluetooth headsets, speakers, and car kits. You can also use Bluetooth to share data between your device and other devices.

Make sure your device is within 10 m (about 33 ft.) of other Bluetooth devices.

Enable or Disable Bluetooth

You can enable or disable Bluetooth in either of the following ways:

- Swipe down from the status bar to open the notification panel, then touch  to enable or disable **Bluetooth**. Touch and hold the switch to enter the **Bluetooth** settings screen.
- Go to  **Settings** > **Bluetooth**, then enable or disable **Bluetooth**.


Set a Bluetooth Name

Set a Bluetooth name for your device to easily identify it during connection.

- 1 On the **Bluetooth** settings screen, toggle the **Bluetooth** switch on.
- 2 Touch **Device name**, enter a name, then touch **OK**.



Pair with a Bluetooth Device

- 1 Enable Bluetooth on the target device and set it to discoverable. For detailed instructions, refer to the device's user guide.
- 2 From your device, access the **Bluetooth** settings screen, and enable **Bluetooth** to have your device automatically search for nearby Bluetooth devices.
- 3 From the list of **Available devices**, select the one you want to pair your device with, and follow the onscreen instructions to complete pairing.


On the **Bluetooth** settings screen, touch  to view tips for connecting various Bluetooth devices.

Transfer Files via Bluetooth

You can use Bluetooth to transfer videos, pictures, contacts, and more to another device provided that both devices are within the effective Bluetooth range.



- 1 Pair the sending and recipient devices via Bluetooth.
- 2 On the sending device, touch and hold a file, select the files you want to share, touch , and select **Bluetooth**.
 Operations may vary if you are sharing files from apps directly.
- 3 Touch the Bluetooth name of the recipient device to start sharing.
- 4 On the recipient device, accept the Bluetooth transfer request.

Unpair a Bluetooth Device

- 1 On the **Bluetooth** settings screen, enable the **Bluetooth** switch.
- 2 In the list of **Paired devices**, touch  next to the name of the device you wish to unpair, then touch **Unpair**.

Mobile Data

Connect to Mobile Data

- 1 Make sure that mobile data is available on your SIM card. Wi-Fi only tablets do not support mobile data.
- 2 Connect to mobile data using either of the following methods:
 - Swipe down from the status bar to open the notification panel, then swipe down further to show all shortcut switches. Touch  to enable **Mobile data**.
 - Go to  **Settings** > **Mobile network** > **Mobile data** and enable **Mobile data**.


To conserve battery power and reduce data usage, disable the mobile data service when you don't need it.

Personal Hotspot




 Data services are not supported on Wi-Fi only tablets.

Once **Personal hotspot** has been enabled, you can share your mobile data or the Wi-Fi network your device is currently connected to with other devices.

Share Your Network Connection via Personal Hotspot


- 1 Go to  **Settings** > **Mobile network** > **Personal hotspot**.
- 2 Set **Device name** and **Password**.
- 3 Enable **Personal hotspot** and your device will share your mobile data or the Wi-Fi network you are currently connected to with other devices.
- 4 In the case of a Wi-Fi network, you can set the AP frequency band of the Wi-Fi hotspot. Go to **More** > **AP band** and touch **2.4 GHz** or **5 GHz**.
- 5 In the case of mobile data, you can set a mobile data limit for a single session. Go to **More** > **Data limit** and set the limit.
When this limit has been reached, your device will automatically disable the hotspot.

Share Your Network Connection via Bluetooth

- 1 Go to  **Settings** > **Bluetooth**, enable **Bluetooth**, select a device, then follow the onscreen instructions to complete pairing.
- 2 Go to  **Settings** > **Mobile network** > **Personal hotspot** > **More**, and enable **Bluetooth tethering**.
- 3 On the **Bluetooth** settings screen of the paired device, touch  next to your device name, then enable **Internet access** to establish an Internet connection and share your network connection.

Manage Data Usage

 This feature is not supported on Wi-Fi only tablets.

Open  **Optimizer**, then touch **Data usage** to view data usage and manage network access.

View and Manage High Data Consumption Apps


- 1 You can find out how much data your apps are using in comparison to each other by going to **Data usage this month** on the Data usage screen.
- 2 Touch a high data consumption app to set mobile data, roaming data, or background data usage limits for it.

View and Set the Network Access Permission of an App

On the Data usage screen, touch **Network access**, then change the settings for apps that consume a large amount of data (such as video streaming apps) so they can only be used when you are connected to a Wi-Fi network.

Enable or Disable Smart Data Saver

Enable Smart data saver to prevent apps from using mobile data in the background.

- 1 On the Data usage screen, touch **Smart Data Saver**, then enable it. The  icon will then display on the status bar.
- 2 If you want to allow unrestricted access to data for some apps even when they are running in the background, toggle on the switches for these apps.

Add Mobile Data Usage Reminders


Add data plans for your SIM cards and usage reminders in Optimiser to keep you informed of your data consumption.


- 1 On the data usage screen, go to **More data settings** > **Monthly data limit** and follow the onscreen instructions to add a data plan.
- 2 On the **More data settings** screen, touch **Usage reminders**. From there, you can set whether a notification will be sent or if mobile data will be disabled once the monthly data limit or roaming data limit has been topped.
- 3 On the **More data settings** screen, you can set whether to show data used when the screen is locked.

Enable Data Roaming

 Data services are not supported on Wi-Fi only tablets.

Once you have activated the international roaming service, you can enable this feature to use mobile data when traveling in a different country or region.

-  • This feature requires the support of your mobile carrier. For details, contact your carrier.
- Charges may apply when using the international roaming service. For details about how data roaming fees are charged, contact your carrier.


Go to  **Settings** > **Mobile network** > **Mobile data**. Under the SIM card for which you wish to enable the data roaming feature, enable **Data roaming**.


More Connections

Airplane Mode

When traveling by plane, you can enable **Airplane mode** if allowed to do so by the airline. In **Airplane mode**, your device will not be able to make calls, send or receive SMS messages, or use mobile data, but you can use all of its other functions.

You can enable or disable **Airplane mode** using either of the following methods:

- Swipe down from the status bar to open the notification panel, then swipe down on it again to show all shortcuts. Touch  to enable or disable **Airplane mode**.

- Go to  **Settings** > **Mobile network**, and enable or disable **Airplane mode**.


Once **Airplane mode** has been enabled, Wi-Fi and Bluetooth will automatically be disabled. You can re-enable them if allowed to do so by the airline.


Wireless Projection

You can connect your device to an external display (for example, a TV) wirelessly.

- 1 Based on the model and functions of your external display, do the following:
 - If the external display supports Miracast, enable wireless projection on it.
 - If not, use a wireless HDMI adapter to connect your device and external display. Ensure that the wireless HDMI adapter is connected to a power supply.

To check whether your external display supports Miracast and how to enable wireless projection on it, consult the user guide or customer service of the external display manufacturer.

- 2 Swipe down from the status bar to open the notification panel, then touch  to turn on **Wi-Fi**.
- 3 Swipe down further on the notification panel to enable **Wireless Projection**. Your device will now search for the external display or the wireless HDMI adapter.

Alternatively, go to  **Settings** > **More connections** > **Easy Projection** and enable **Wireless Projection**.

- 4 Touch the name of the external display or the wireless HDMI adapter on the search result list to start projecting.

Wired Projection

If you need to connect your device to an external display and use a wired mouse and keyboard, use a docking station with a USB port.



- 1 Prepare a docking station.
Multiple types of ports are available on a docking station. If your external display supports HDMI and you need to use a wired mouse and keyboard, use a docking station with at least one HDMI port and two USB ports.
- 2 Connect your device and the external display through the docking station, then connect the wired mouse and keyboard to the docking station.
- 3 On the external display, set the corresponding HDMI, DP, or MiniDP input as the signal source.

Huawei Share

Huawei Share is a wireless sharing technology that allows you to quickly transfer images, videos, documents, and other types of files between devices. This technology relies on Bluetooth to discover nearby devices, and uses Wi-Fi Direct to transfer files without using mobile data.

Enable or Disable Huawei Share


You can enable or disable Huawei Share in either of the following ways:

- Swipe down from the status bar to open the notification panel, then touch  to enable or disable **Huawei Share**. Touch and hold the switch to enter the **Huawei Share** settings screen.
- Go to  **Settings** > **More connections** > **Huawei Share**, enable or disable **Huawei Share**. Enabling Huawei Share automatically turns on Wi-Fi and Bluetooth.

Share Files Between Your Device and Computer

You can use Huawei Share to quickly and easily share files wirelessly between your device and a computer (Windows PC or Apple Mac).


- 1 Make sure your device and computer are connected to the same Wi-Fi network.
- 2 On your device, enter the **Huawei Share** settings and enable **Huawei Share** and **Computer Share**.
- 3 Make a note of what's shown next to the **Name shown on computers** and the user name and password under **Verification**.
- 4 On your computer, go to:
 - Windows: **This PC (Computer)** > **Network**.
 - macOS: **Finder** > **Go** > **Network**.

 Currently, this feature is only available on Macs running macOS 10.8 to 10.14.
- 5 On your computer, double-click the name of your device and enter the user name and password that you made a note of earlier.
- 6 Open a shared folder of your device such as the Internal storage or Album folder, then view, edit, or copy files to the computer, or copy files from the computer to the shared folder to store them in your device.

If you edit files in the shared folder on your computer, the changes will be synced to your device automatically. Similarly, if you edit any files in the shared folder on your device, the changes will be synced to your computer.

One-Touch Printing with Huawei Share


When a printer that supports Huawei Share is nearby, you can use Huawei Share to find the printer and print out pictures or PDF files from your device.

- 1 Depending on the type of printer, ensure the following:
 - Wi-Fi capable printers: The printer must be powered on and connected to the same network as your device.
 - Wi-Fi Direct capable printers: The printer must be powered on and have Wi-Fi Direct enabled.
 - Bluetooth capable printers: The printer must be powered on and discoverable.
 - 2 On your device, preview the file to be printed, then go to **Share > Huawei Share**.
 - 3 Once the printer has been discovered, touch its name on your device, and adjust settings on the preview screen. Then touch **PRINT** to print.
If you are connecting a Bluetooth printer to your device for the first time, find the printer on your device, touch the printer name, then press and hold the Power button on the printer for about 1 second to confirm the connection.
-  For a list of supported printers, touch **Learn more** on the Huawei Share sharing screen, swipe left on the screen, then touch **What printers are supported?** to see the list.

Connect to a Laptop Using a USB Cable

Transfer Data Using a USB Cable

- 1 Use a USB cable to connect your device to the computer. After the driver program is automatically installed, a drive named for your device will display on the computer.
- 2 Select an appropriate USB connection mode on your device to transfer data:
 - Select **Transfer photos** in the new drive displayed on the computer to view and copy photos from your device to the computer. You can also view photos stored on your device from the computer, or copy and paste photos between the two devices.
 - Select **Transfer files** in the new drive displayed on the computer to view and copy files from your device to the computer. You can also view files stored on your device from the computer, or copy and paste files between the two devices.





 Install Windows Media Player 11 or a later version on your computer to view media files on your device.

 - Select **Input MIDI** to receive and process MIDI messages transmitted by your computer, on your device.

Printing

Connect your device to a Mopria-certified printer via Wi-Fi, and then you will be able to print images and documents from your device.

Connect Your Device to a Printer

- 1 Check the printer manual or consult with its manufacturer to verify that it is Mopria-certified.
If it is not, consult with its manufacturer to install the corresponding app or plug-in for it on your device.
- 2 Connect your device and the printer to the same Wi-Fi network using any of the following methods:
 - Connect to a Wi-Fi router: Enable Wi-Fi on the printer and connect it to the Wi-Fi router. On your device, go to  **Settings** > **Wi-Fi**, enable **Wi-Fi**, touch the same Wi-Fi router, and follow the onscreen instructions to complete the settings.
 - Connect with Wi-Fi Direct: If your printer supports Wi-Fi Direct, follow the instructions in the printer manual to enable this feature. On your device, go to  **Settings** > **Wi-Fi**, enable **Wi-Fi**, go to **More settings** > **Wi-Fi Direct**, then touch the printer to establish the connection.
 - Connect to your printer's hotspot: If your printer can double as a wireless hotspot, follow the instructions in the printer manual to enable the hotspot and set a password.
On your device, go to  **Settings** > **Wi-Fi**, enable **Wi-Fi**, touch the printer's hotspot, then follow the onscreen instructions to complete the settings.
- 3 Go to  **Settings** > **More connections** > **Printing** > **Default Print Service**, and enable **Default Print Service**.
- 4 Select the printer from the search results and follow the onscreen instructions to add the printer.

Connect to a VPN Network


A virtual private network (VPN) is a temporary connection that extends a private network across a public network, encrypting data transmission to provide security.

When working outside the office, you can use a VPN to securely access your company's Intranet.

The following types of servers are supported:


- PPTP: It stands for Point-to-Point Tunneling Protocol, offering MPPE encryption.
- L2TP: It stands for Layer 2 (Data Link Layer) Tunneling Protocol, offering IPSec PSK and IPSec RSA encryption.
- IPSec Xauth: Offering PSK, RSA, and Hybrid RSA encryption.

Connect to a PPTP Server

- 1 Obtain the VPN server name and address from your VPN server administrator.
- 2 Go to  **Settings** > **More connections** > **VPN** > **Add VPN network**, enter the VPN name, set the server type to PPTP, then enter the server address.

- 3 If the VPN server does not have a DNS address, touch **Show advanced options**, then enter the DNS domain, DNS server address, and forwarding route.
- 4 Touch **Save**.
- 5 Touch the VPN you have just set up, enter your VPN user name and password, then touch **Connect**.

Connect to a L2TP/IPSec PSK Server

- 1 Obtain the VPN server name, server address, L2TP key (optional), IPsec identifier (optional), and IPsec pre-shared key from your VPN server administrator.
- 2 Go to  **Settings** > **More connections** > **VPN** > **Add VPN network**, enter the VPN server name, set the server type to L2TP/IPSec PSK, then enter the server address, L2TP key, IPsec identifier, and IPsec pre-shared key.
- 3 If the VPN server does not have a DNS address, touch **Show advanced options** and enter the DNS domain, DNS server address, and forwarding route.
- 4 Touch **Save**.
- 5 Touch the VPN you have just set up, enter your VPN user name and password, then touch **Connect**.

Home Screen&Wallpaper

Manage the Home Screen

You can customise the home screen layout to suit your device usage habits.

Move an App Icon on the Home Screen

Touch and hold an app icon until your device vibrates, then drag it to the desired position on the home screen.

Keep Home Screen Icons Aligned

Pinch two fingers on the home screen to access **Home screen settings** mode, then enable **Auto-align**. With this feature enabled, empty spaces will automatically be filled when apps are removed.

Lock Home Screen Icon Positions

Pinch two fingers on the home screen to access **Home screen settings** mode, then enable **Lock layout**.

Select the Home Screen Layout Pattern

Pinch two fingers on the home screen, go to **Home screen settings** > **Layout**, then select a layout pattern you prefer.

Put App Icons in Folders

For easy management of your app icons on the home screen, you can stack similar apps in a folder and name the folder.

- 1 Touch and hold an app icon until your device vibrates, then drag it over another app. A folder will automatically be created to house these two apps.
- 2 Open a folder, touch its name, then enter a name for it.

Add App Icons to a Folder or Remove Them

Open a folder and touch . Then you can:

- Select one or more apps, and touch **OK** to add them to the folder.
- Deselect one or more apps, and touch **OK** to remove them from the folder. If you deselect all apps, the folder will be deleted.


Relocate a Screen Page

- 1 Pinch together two fingers on the home screen to access the Home screen editor.
- 2 Touch and hold the screen page you wish to relocate, then drag it to the desired position.

App Drawer

You can put your apps in a drawer and display only frequently used apps on your home screen to streamline your home screen.

Enable App Drawer

Go to  **Settings > Home screen & wallpaper > Home screen style**, and select **Drawer**. Once enabled, you can swipe up on the home screen to access all of your apps in the drawer.

Add Apps in the Drawer to the Home Screen

In Drawer mode, you can swipe up on the home screen to display the App Drawer. Touch and hold the app you want to add until your device vibrates, then drag it to the desired position on the home screen.

Move Apps Back to the Drawer

Touch and hold an app icon until your device vibrates, then touch **Remove**. This operation will only remove the app icon from your home screen but will not uninstall it.

You can still find it in the app drawer.

Disable the Drawer Style

To disable the drawer style, set **Home screen style** to **Standard**.

Display&Brightness

Brightness, Colour, and Colour Temperature

You can set the screen brightness, colour mode, and colour temperature according to your preferences.




Automatically Adjust the Screen Brightness

Go to  **Settings > Display & brightness**, and enable **Automatic**.


Your device will automatically adjust the screen brightness according to the ambient lighting conditions.

Manually Adjust the Screen Brightness

You can manually adjust the screen brightness using either of the following methods:


- Swipe down from the status bar to open the notification panel. In the  section, drag the slider to adjust the screen brightness.
- Go to  **Settings > Display & brightness**. In the  section, drag the slider to adjust the screen brightness.

Adjust the Colour Mode


Go to  **Settings > Display & brightness > Colour & Eye Comfort > Colour mode & temperature**, and select the colour mode that you prefer. **Normal** mode will be easier on your eyes and is therefore recommended.

- **Normal:** natural colour tones
- **Vivid:** vivid colour tones

Adjust the Colour Temperature

Go to  **Settings > Display & brightness > Colour & Eye Comfort > Colour mode & temperature**, and select the colour temperature that you prefer. **Default** and **Warm** will be easier on your eyes and are therefore recommended.


- **Default:** a natural tint
- **Warm:** a yellowish tint
- **Cool:** a whitish tint
- You can touch anywhere on the colour circle or drag the spot to adjust the colour temperature.

 When **Eye Comfort** is enabled, you will need to go to the **Eye Comfort** settings screen to adjust the colour temperature.

Enable or Disable Natural Tone


Natural Tone enables your device to simulate the way human eyes adapt to ambient lighting to automatically adjust the colour temperature.

When the ambient lighting is of a warm colour temperature, the screen will take on a yellowish tint; when the ambient lighting is of a cold colour temperature, the screen will take on a whitish tint.




Go to  **Settings > Display & brightness > Colour & Eye Comfort**, and enable or disable **Natural Tone**.


Eye Comfort Mode

Eye comfort mode can effectively reduce blue light and adjust the screen to show warmer colours, relieving eye fatigue and protecting your eyesight.


-  • After every half hour of screen time, rest your eyes for at least 10 minutes.
 - Look into the distance to adjust the focusing muscles of your eyes and to avoid eye fatigue.
 - Cultivating good eye care habits will protect your vision and prevent near-sightedness.

Enable or Disable Eye Comfort Mode


- Swipe down from the status bar to open the notification panel, then swipe down on it again to show all shortcuts. Touch  to enable or disable **Eye Comfort**. Touch and hold  to access the **Eye Comfort** settings screen.
- Go to  **Settings > Display & brightness > Colour & Eye Comfort > Eye Comfort**, and enable or disable **Enable**.

Once **Eye Comfort** is enabled,  will be displayed in the status bar, and the screen will take on a yellow tint as a result of emitting less blue light.

Set a Schedule for Eye Comfort Mode

Go to  **Settings > Display & brightness > Colour & Eye Comfort > Eye Comfort**, enable **Scheduled**, then set **Start** and **End** according to your preferences.

Adjust the Colour Temperature for Eye Comfort Mode

Go to  **Settings > Display & brightness > Colour & Eye Comfort > Eye Comfort**, enable **Enable**, then drag the colour temperature slider for a cooler or warmer screen colour.

Dark Mode

In low light conditions or at night, you can enable **Dark mode** to apply a darker colour scheme, which helps prevent excessive screen light from irritating your eyes.

Go to  **Settings > Display & brightness**, and enable or disable **Dark mode**.

Adjust Text Style Settings

You can adjust the system text size and app display size, as well as the text style.

Enlarge or Reduce Text Size

Go to  **Settings > Display & brightness > Text and display size**, and drag the slider for **Text size**.


Enlarge or Reduce Display Size

Display size determines the size of content (including text and images) displayed within apps.

Go to  **Settings > Display & brightness > Text and display size**, and drag the slider for **Display size**.

Switch to Horizontal or Landscape Orientation

The built-in gravity sensor of your device allows you to automatically switch between horizontal and landscape orientations when you rotate the screen.

Swipe down from the status bar to open the notification panel, then swipe down on it again to show all shortcuts. Touch  to enable or disable this feature.

GPU Turbo

GPU Turbo represents a radical redesign of the graphics processing framework of the device at its most basic level, integrating hardware and software to achieve accelerated graphics processing. It improves the device's graphics processing efficiency, image quality, and performance, whilst simultaneously reducing system power consumption.


The end result is a great improvement in user experience when playing graphically intense games.

Sounds&Vibration

Do Not Disturb

Do Not Disturb helps you prevent interruptions when you need to focus. When this mode is enabled, calls and messages will be muted and banner notifications will not be displayed.

Set a Schedule for Do Not Disturb Mode

Go to  **Settings > Sounds & vibration > Do Not Disturb**, touch **Scheduled**, set the time period and repeat cycle, then enable **Scheduled**.

Make Exceptions in Do Not Disturb Mode

While in **Do Not Disturb** mode, you can enable your device to ring for calls and messages from certain sources so you don't miss anything important.

Go to  **Settings** > **Sounds & vibration** > **Do Not Disturb**, and enable **Do Not Disturb** or **Scheduled**. Then you can:

- Touch **Calls** or **Messages** and select one of the options. If you set an exception, your device will ring for calls or messages from the selected source.
- Once **Repeated calls** is enabled, a second call from the same number within 15 minutes will not be silenced.

Set a Ringtone for Incoming Calls

 Voice calls are not supported on Wi-Fi only tablets.

You can set your favorite music or a video as the ringtone for incoming calls.


If two SIM cards have been inserted into your device, configure the ringtone separately for SIM 1 and SIM 2.

Set a Music Ringtone

1 Go to  **Phone** >  > **Settings** > **Ringtone** or  **Settings** > **Sounds & vibration** > **Tablet ringtone**.

2 Select a system ringtone, or touch **Music on device** to select a local song as the ringtone.

Set a Ringtone for a Contact

1 Open  **Phone**, touch the **Contacts** tab at the bottom of the screen, then select the contact you want to set a ringtone for.

2 On the contact details screen, touch **Ringtone** and select a ringtone.

Set the SMS Notification Tone

1 Go to  **Settings** > **Sounds & vibration**, then touch **Messaging tone**.

2 Select a preset tone, or touch **Music on device** to select a local song as the SMS notification tone.

 This feature is not supported on Wi-Fi only tablets.

Set the Notification Tone

You can set a global notification tone or set tones for specific apps, such as Notepad or Calendar.


Set the Default Notification Tone

1 Go to  **Settings** > **Sounds & vibration**, and touch **Notification sound**.

- 2 Select a preset tone, or touch **Music on device** to select a local song as the notification tone.


Set the Notification Tone for a Specific App

You can set the notification tone for certain apps by doing the following:

- 1 Go to  **Settings** > **Apps** > **Apps**.
- 2 Select an app (for example, **Notepad**).
- 3 Go to **Notifications** > **Notepad** > **Sound**.
- 4 Select a preset tone, or touch **Music on device** to select a local song as the notification tone.

Huawei Histen Sound Effects

Huawei Histen sound effects, with 3D surround sound support, deliver vibrant and crisp sound to create an immersive audio experience.

 Huawei Histen sound effects are only available when a headset is plugged in.

Go to  **Settings** > **Sounds & vibration** > **Huawei Histen sound effects** and select an option:

- **Auto**: Automatically identifies what you are playing and intelligently applies sound effects to optimise your experience.
- **3D audio**: Delivers 3D spatial sounds.
- **Natural**: Faithfully reproduces the original sounds.
- **Standard**: Requires less power for audio playback. You can also customise equaliser settings yourself to achieve the exact sound you are looking for.


Auto, **3D audio**, and **Standard** modes allow you to select a headset type so you can match the sound effects to your headset.

Notifications

App Badges

When new notifications arrive for an app, a badge will appear on the app icon. By default, a numbered badge is displayed. You can also set a dot as the badge, or hide the badge for some or all apps.


Turn Off App Badges

- 1 Go to  **Settings** > **Notifications**, and touch **App icon badges**.
- 2 Turn off the switch for some or all apps.

Change the Badge Display Mode


On the **App icon badges** screen, touch **Badge display mode**, and select **Numbers** or **Dots** according to your preference.

Lock Screen Notifications


Go to  **Settings** > **Notifications** and enable **Hide notification content**. The contents of new notifications will then not be displayed on the lock screen of your device. When **Hide notification content** is disabled, the contents of new notifications will be displayed on the lock screen.

More Notification Settings

Notifications Turn on Screen


Go to  **Settings** > **Notifications** > **More notification settings** and enable **Wake screen**. Your device will automatically turn on the screen when it receives a notification.

Pulse Notification Light upon Receiving Notifications

Go to  **Settings** > **Notifications** > **More notification settings** and enable **Flash notification light**. The indicator on your device will blink when a notification is received.

Disable App Notifications

Disable App Notifications in the Notification Panel


When you receive an app notification, swipe down from the status bar to open the notification panel. On a notification, swipe left and hold, go to  > **More settings**, then disable **Allow notifications**.

Disable App Notifications

Go to  **Settings** > **Notifications**. Then you can:


- Locate and touch the app which you want to disable notifications for, then disable **Allow notifications**.
- Touch **Manage all**, then turn off the switches for multiple apps which you want to disable notifications for.

Disable App Notifications in Settings


- 1 Go to  **Settings** > **Apps** > **Apps** and search for the app which you want to disable notifications for.
- 2 Touch the app icon, then touch **Notifications** and disable **Allow notifications**.

Manage App Notifications

Set the Notification Mode for an App

Go to  **Settings** > **Notifications**, select an app, then set the following:

- **Allow notifications**
- **Banners**
- **Lock screen notifications**
- **Allow interruptions**
- **Sound**
- **Vibration**

 Features may vary by product.

Manage Notifications for Multiple Apps

Go to  **Settings** > **Notifications** > **Manage all** and enable or disable **All**.

Biometrics&Password

Face Recognition

Face Recognition allows you to unlock your device or access locked apps with your facial data, even in dark environments.

Ensure that you are facing the device screen when using face recognition.


Add More Facial Profiles

You can add a maximum of five facial profiles for your device so that it can be shared with your beloved ones securely.

On the **Face Recognition** screen, touch **Add facial profile**, and follow the onscreen instructions to add facial data.

Enable Face Unlock

On the **Face Recognition** screen, touch **Unlock device**, and select an unlock method.

 If you have enabled PrivateSpace on or added multiple users to your phone, you can use Face unlock only in MainSpace or with the Owner account.

Access App Lock with Face Recognition

On the **Face Recognition** screen, enable **Access App Lock**, and follow the onscreen instructions to add your facial data to App lock.


You can then touch a locked app on your home screen and use face recognition to access the app.

Lock Screen Password

You can set a numeric, pattern, or hybrid password as your lock screen password.

Set the Lock Screen Password

You can set a numeric, pattern, or hybrid password.

- 1 Go to  **Settings** > **Biometrics & password** and touch **Lock screen password**.
- 2 Enter a password containing 6 digits.
- 3 Alternatively, touch **Change unlock method** and select a password type, then follow the onscreen instructions to input a new password.

Change the Lock Screen Password

- 1 On the **Biometrics & password** screen, go to **Change lock screen password**.
- 2 Enter the original lock screen password.
- 3 Enter a new password, or touch **Change unlock method** to select a password type, then follow the onscreen instructions to input a new password.

Disable Lock Screen Password


On the **Biometrics & password** screen, go to **Disable lock screen password**.

Apps


App Twin

App Twin enables you to log in to two Facebook accounts simultaneously without the hassle of having to constantly switch between them, allowing you to keep your work and private lives separate.

 **App Twin** will only work with certain apps.



- 1 Go to  **Settings** > **Apps** > **App Twin**, and turn on the switch for the app you want to create a twin of.
- 2 Two icons for the same app will display on the home screen for you to log in to your separate accounts simultaneously.
- 3 To disable App twin, touch and hold the twinned version of the app, then touch **Delete**. All the data of the twin app will be deleted.

View or Change App Settings

Go to  **Settings** > **Apps** > **Apps**, and touch an app. You can force stop it, uninstall it, clear the app cache, view and change app permissions, set notification modes, and more.

Battery

Check Power Consumption




Go to  **Settings** > **Battery** (or  **Optimizer** > ). You can:

- Touch **Battery usage** to view power-intensive apps. Touch a power-intensive app to enable or disable power consumption alerts.
- Touch **Power consumption details** to learn more about the software and hardware power consumption.

Power Management

On the **Battery** screen, you can check the estimated battery time remaining, and enable a power saving mode to extend the battery life of your device.


Optimise Device Power Settings

Go to  **Settings** > **Battery** (or  **Optimizer** > ) and touch **Optimise battery usage**. Your device will automatically analyse the current power consumption issues, optimise certain settings, and recommend other setting optimisations.

Enable Performance Mode

Performance mode adjusts power settings to deliver maximum performance. This will cause the battery to drain more quickly, especially when graphic-intensive apps are used.




When the battery level is sufficient, go to  **Settings** > **Battery** (or  **Optimizer** > ) and enable **Performance mode**.

The  icon will then display in the status bar.

Battery Settings

You can also set whether to display the battery percentage in the status bar, and whether to maintain a network connection when the device screen is turned off.

Display Battery Percentage on the Status Bar

Go to  **Settings** > **Battery** (or  **Optimizer** > ) , touch **Battery percentage**, and choose to display the battery percentage, either inside or outside of the battery icon on the status bar.


Stay Connected while Your Device is Sleeping

If you would like your device to continue to receive messages or download data while it is in sleep mode, set to keep your device connected when it sleeps. Please note that this may increase power consumption.

On the **Battery** screen, touch **More battery settings**, then enable or disable **Stay connected when device sleeps** as required.


Storage

Check Storage Usage

Go to  **Settings** > **Storage** to check storage usage and optimise it when you feel necessary.

Cleanup

You can use **Cleanup** in **Optimizer** to scan for redundant or large files, such as app residue, unwanted installation packages, WeChat data, and more. Once detected, you can choose whether or not to delete files as suggested.

- 1 Open  **Optimizer**, then touch **Cleanup**.
- 2 When the scan is complete, touch **Clean up** after each item and delete any files you don't need.

Clean Up Duplicate Files

Optimizer can identify duplicate files on your device.

On the **Cleanup** screen, touch **Duplicate files** , then select unwanted files to delete them.

Security

Password Vault

Password Vault saves your usernames and passwords and autofills them for you each time you log in to an app. This data is hardware encrypted and stored only on your device. Huawei does not have access to it, and will not upload it to the network or server.

 Password Vault is only compatible with certain apps.

Disable Password Vault

Password Vault is enabled by default, but can be disabled if required.

Go to  **Settings** > **Security** > **Password Vault**, and disable **Password Vault**.

App Lock


You can lock apps containing private data, such as chat and payment apps, to prevent unauthorised access.

Use App Lock to Protect Your Privacy

With App Lock, you can lock apps containing private data, such as chat and payment apps, to prevent unauthorised access.

If you use Face ID as the App Lock unlock method, the Swing Gesture Sensor will provide further security protection when you are using the app. In a well-lit environment, if another face is detected, the app will be locked and notifications received by the app will be hidden. You will need to unlock the app again with a password or your face to re-enter it.


Enable App Lock

Go to  **Settings** > **Security** > **App Lock** > **Enable**, set the App Lock password and select the apps to lock.

If you have enabled face or fingerprint unlock, you can link App Lock with a face ID or fingerprint ID as prompted.

Enable AI Information Protection

If you have enabled App Lock and set Face Recognition as the app unlock method, the Swing Gesture Sensor will provide further security protection when you are using the app. If another face is detected, such as when someone else is looking at your screen or using your device, the app will be locked, and notifications received by the app will be hidden. You will not be able to unlock the app again with your own face, and only a password will work in this case. This feature works better in a well-lit environment.

- AI information protection will be enabled automatically once you have set Face Recognition as the app unlock method.
- To set up Face Recognition for App Lock, go to  **Settings** > **Biometrics & password** > **Face Recognition**, input the password to enter the **Face Recognition** screen and enrol your facial data, then enable **Access App Lock**.


Change the App Lock Password or Security Questions

Enter the **App Lock** settings screen, go to  > **Password type**, and select **Lock screen password** or **Custom PIN** as the App Lock password.

If you select **Custom PIN**, you can go on to set a new password and security questions.

Cancel or Disable App Lock



On the **App Lock** settings screen, do the following:

- Cancel App Lock: On the locked app list, toggle off the switches beside the apps for which you want to cancel the lock.
- Reset App Lock: Go to  > **Disable App Lock** > **DISABLE**. This will cancel all locks, and clear all app lock settings.

Set a SIM PIN Lock

A PIN is the identity code of a SIM card, and can be set as the SIM card lock. After doing so, you will be required to enter the correct PIN to unlock the SIM card every time you power on your device or switch to a new device to prevent unauthorised access.





You need to obtain the PIN of your SIM card from your carrier before using this function.

- 1 Go to  **Settings** > **Security** > **More settings** > **Encryption and credentials** to enter the SIM lock setup screen.
 - 2 Enable **Lock SIM card**, enter the PIN code, and then touch **OK**.
To modify the PIN, touch **Change SIM PIN** and follow the instructions.
-  • You will have to enter a PIN Unlocking Key (PUK) to unlock the SIM card if you exceed the maximum number of failed attempts to enter the PIN. A new PIN needs to be set up once you successfully unlock your SIM with a PUK. Should you also exceed the maximum number of failed attempts to enter the PUK, your SIM card will be blocked.
 - The PUK can only be obtained from your carrier.

Pin a Screen

You can pin the screen of an app so you can stay focused on it. Try this feature when playing games, watching videos, and more.

Go to  **Settings** > **Security** > **More settings** > **Screen pinning**, and enable **Screen pinning**.


- When using gesture navigation, swipe up from the bottom of the screen and hold to access the recent tasks screen, then touch  on an app preview. To unpin, swipe up twice from the bottom of the screen.
- When using three-key navigation, touch  to access the recent tasks screen, and touch  on an app preview. To unpin, touch and hold .

Safe Mode

Safe mode uses a simplified operating system with only basic functions and pre-installed apps available. It can be used to locate third-party apps causing system failures.

Safe Mode Functions

After installing certain third-party apps, your device may fail to work properly. In this case, you can enter Safe mode to check whether the problem has been caused by a third-party app or by the system itself.

- If the system is running properly in Safe mode, the issue is likely caused by a third-party app. In Safe mode, go to  **Settings** > **Apps** > **Apps**, find the third-party app in question, and uninstall it after switching back to the normal mode.
- If the system runs abnormally in Safe mode, then the system is faulty. Back up your data and take your device and proof of purchase to an authorised Huawei Customer Service Centre for assistance.

Enter and Exit Safe Mode

- Enter **Safe mode**: During the startup process, press and hold the Power and Volume up buttons simultaneously until the selection screen is displayed. Press the Volume button to select **Safe mode** and press the Power button to enter Safe mode. In Safe mode, **Safe mode** is displayed in the lower left corner.
- Exit **Safe mode**: Restart your device to exit.

Privacy


Permission Management

Apps may require certain permissions, such as the Location permissions, in order to provide you with corresponding services.

However, some apps may obtain too many unnecessary permissions, posing potential risks to your privacy and information security. You can monitor the permissions granted to each app and deny those you deem unnecessary.

Manage the Location Permission

With the location permission, apps can obtain your location to provide location-based services. For example, if a map app obtains the location permission, it can provide you with location and navigation services. You can disable the permission if you do not need these services.

- 1 Go to  **Settings** > **Apps** > **Permissions**.
- 2 On the **Permissions** screen, enter **Location**, touch the app you want to manage, and select an option.

Manage Permissions to Access Other Private Data

You can also manage permissions to access your personal data, such as Contacts, Messaging, Call logs, Body sensors, Calendar, and Camera, to enjoy better services and protect your privacy.


On the **Permissions** screen, touch the permission you want to manage, and toggle the switch for each app on or off as required.

Location Services

Some apps need to obtain your location information to provide better services. You can enable or disable location services, and grant or deny the permission to access location information for particular apps as required.

Enable or Disable Location Services

You can enable or disable location services in either of the following ways:


- Swipe down from the status bar to open the notification panel and swipe down further to display all shortcut switches. Touch  to enable or disable this function.

- Alternatively, go to  **Settings** > **Location** and enable or disable **Access my location**.

After location services are disabled, your device will prevent all apps and services from collecting and using location information, with the exception of some built-in apps. When these apps or services need to use location information, your device will remind you to enable location services again.


Increase the Accuracy of Location Services

You can improve the positioning accuracy of your device by allowing apps and services to scan for nearby Wi-Fi networks and Bluetooth devices.

Go to  **Settings** > **Location** > **Advanced settings**, then enable Wi-Fi and Bluetooth scanning.

Allow or Forbid Apps to Obtain Location Information

You can allow or forbid an app to access location information, including granting one-time or permanent access, or denying access to location information during use of the app.




- 1 Go to  **Settings** > **Privacy** > **Permissions**, touch **Location**, and check which apps have been granted access to location information.
- 2 Touch the app you want to change settings for, and follow the onscreen instructions to grant or deny permissions.

PrivateSpace

Create a PrivateSpace that is completely independent of the MainSpace (the original space) of your device, which can be accessed using your fingerprint ID or a password.



You can move private photos and confidential business files to your PrivateSpace to prevent unauthorised access. You can also move your payment and gaming apps to PrivateSpace to keep them away from your child.

Enable and Access PrivateSpace


- 1 Go to  **Settings > Privacy > PrivateSpace > Enable**, and follow the onscreen instructions to create a PrivateSpace.
 - 2 You can enter your PrivateSpace using either of the following methods:
 - On the lock screen, access PrivateSpace using the fingerprint or password set for the space.
 - Alternatively, in MainSpace, go to  **Settings > Privacy > PrivateSpace**, and touch **Log in**.
-  If you restart your device, you have to enter the password to access the MainSpace first, then switch to the PrivateSpace.

Hide or Unhide the Entrance to PrivateSpace

You can hide the entrance to PrivateSpace in the MainSpace settings, so that you can only access PrivateSpace using the fingerprint or password set for the space.

- To hide the entrance to PrivateSpace: In PrivateSpace, go to  **Settings > Privacy > PrivateSpace**, and enable **Hide PrivateSpace**.
- To unhide the entrance to PrivateSpace: In MainSpace, go to  **Settings > Security > More settings**, then go to **Show all settings > OK**.




Transfer Files Between MainSpace and PrivateSpace

- 1 In PrivateSpace, go to  **Settings > Privacy > PrivateSpace**, and touch **MainSpace to PrivateSpace** or **PrivateSpace to MainSpace**.
- 2 Select the files (such as contacts, photos, videos, and audio files) you want to transfer, touch **Move**, and follow the onscreen instructions to transfer the files.

In the target space, go to **Gallery > Albums > SharedImages**, or **Gallery > Albums > SharedVideos** to view photos and videos.



Reset Password for PrivateSpace

You can set a security question when creating the password for PrivateSpace, which will help you to reset the password if you happen to forget it.

- 1 In PrivateSpace, go to  **Settings > Privacy > PrivateSpace**, then touch **Password protection**.
- 2 Follow the onscreen instructions to complete the verification, select and answer the security question, then touch **Finish**.
- 3 In MainSpace, go to  **Settings > Privacy > PrivateSpace**, then go to  **> Reset password**, and follow the onscreen instructions to complete the verification and reset the password.

Transfer Data in PrivateSpace to Your New Device



You can quickly transfer your PrivateSpace data, such as contacts, photos, and files, from the old device to the new one.

- 1 On your new device, create and enter your PrivateSpace, go to  **Settings > Privacy > PrivateSpace > Space Clone**, and select **This is the new phone**.
- 2 In your old device, enter your PrivateSpace, go to  **Settings > Privacy > PrivateSpace > Space Clone**, and select **This is the old phone**.
- 3 Follow the onscreen instructions to scan the QR code or manually connect the old device to the new one.
- 4 On your old device, select the data to be transferred. You can cancel the data transfer during the process, and then continue it once you have connected your old device with the new one again.

Delete PrivateSpace

If you delete PrivateSpace, all apps and data stored in the space will be deleted and cannot be restored. Please exercise caution when deleting PrivateSpace.

You can delete PrivateSpace in either of the following ways:

- In MainSpace, go to  **Settings > Privacy > PrivateSpace**, then go to  **> Delete PrivateSpace**.
- Alternatively, in PrivateSpace, go to  **Settings > Privacy > PrivateSpace**, then touch **Delete**.


Accessibility Features

Accessibility

Screen reader apps are designed to assist visually impaired users to use a device.

Enable Colour Correction to Customise the Screen Colour

Colour correction helps people with poor eyesight see the screen content more easily.

- 1 Go to  **Settings > Accessibility features > Accessibility > Colour correction** and enable **Colour correction**.
- 2 Touch **Correction mode** to select a colour correction mode.

Use Magnification Gestures

Use magnification gestures to zoom in on the screen.

On the **Accessibility > Magnification** screen, touch **Magnification**, then enable it.

Zoom in or out by touching the screen three times in a row.

- While zoomed in, spread two or more fingers to further zoom in, then pinch two or more fingers together to zoom back out.
- Drag the screen with two or more fingers to view other parts of the screen.

Enable Colour Inversion

Colour inversion allows you to invert the colour of the text and the background. When Colour inversion is enabled, your device will display text in white and the background black.

On the **Accessibility** screen, enable **Colour inversion**.

Adjust the Touch and Hold Delay

Touch & hold delay allows you to adjust the time the screen takes to respond when you touch and hold something.

On the **Accessibility** screen, touch **Touch & hold delay**, then select a delay option according to your preferences.

Smart Cover Mode

For best results, you are advised to use a standard Huawei flip cover.

Enable Smart Cover Mode


Go to  **Settings > Accessibility features > Smart Cover**, and enable **Smart Cover**. If the flip cover comes with a display window, enable **Use display window** as well.

Open or Close the Flip Cover

- Flipping open the cover will light up your device and show the lock screen (or Magazine Unlock screen).
- Closing the flip cover will lock the screen of your device if it is on standby.
- When a flip cover with a display window is closed, you can check the date, time, weather, and more in the window.

Scheduled Power On/Off


Use the **Scheduled power on/off** feature to power your device on and off at set times, to save power and prevent interruptions while resting.

- 1 Go to  **Settings > Accessibility features > Scheduled power on/off**, and enable **Scheduled power on/off**.
- 2 Set the power on and off times, as well as the repeat cycle. Your device will power on and off automatically at the specified times.

To stop using this feature, disable **Scheduled power on/off**.

Users&Accounts


Set Up Users

- 1 Go to  **Settings > Users & accounts > Users**, touch **Add user** or **Add guest**, then follow the onscreen instructions to add an account.
- 2 Touch **Switch** to switch to the user or guest account. Configure the settings for the new account as prompted.
- 3 Install apps as needed. Note that if a newer version of an app has been installed by another user, the app installation will fail.

A maximum of three user and one guest accounts can be added.



Authorise a User or Guest Account to Make Calls and Send Messages

You can set whether to allow a user or guest account to make calls, send SMS messages, and more.

- After accessing your device as the administrator, go to  **Settings > Users & accounts > Users**.
- Touch the related account, and select the permissions you want to authorise.

Switch Between the Administrator, User, and Guest



You can switch to a different account using either of the following methods:

- Swipe down from the status bar to open the notification panel, touch , then touch the profile picture of the account you wish to switch to.
- Go to  **Settings > Users & accounts > Users**, and touch the name of the account you wish to switch to.

Delete a User or Guest Account


Deleting a user or guest account will delete all its related data. Please exercise caution.

After accessing your device as the administrator, use either of the following methods to delete a user or guest account:

- Go to  **Settings > Users & accounts > Users**, touch the name of the account you wish to delete, then follow the onscreen instructions to delete it.
- Swipe down from the status bar to open the notification panel, touch  > **More settings**, touch the name of the account you wish to delete, then follow the onscreen instructions to delete it.


System&Updates

Language and Region

- 1 Go to  **Settings** > **System & updates** > **Language & input** > **Language and region**, then select the language you want to use.
- 2 If the language is not listed, touch **Add language**, then locate and touch it to add it to the list.
- 3 Touch **Region** to select a country/region, so the display content will adapt to the local culture and habits of the country/region you have selected.

Input Method

You can download a third-party input method and set it as the default input method.

- 1 Download the input method from an official app market.
- 2 Follow the onscreen instructions to set it as the default input method, or go to  **Settings** > **System & updates** > **Language & input** > **Default keyboard** and select the input method.

Date and Time

Your device is able to sync to the local date, time, and time zone over a mobile network. You can also manually set the date, time, and time zone for your device.

Go to  **Settings** > **System & updates** > **Date & time**, then set the options according to your requirements.




Change the Time Format


- Enable **24-hour time** and your device will display time in the 24-hour format.
- Disable **24-hour time** and your device will display time in the 12-hour format.

Phone Clone




Phone Clone lets you quickly and seamlessly move all the basic data (including contacts, calendar, images, and videos) from your old device to your new device.


Clone Data from an Android Device

- 1 On your new device, open  **Phone Clone** (in the **Tools** folder by default). Alternatively, go to  **Settings** > **System & updates** > **Phone Clone**, touch **This is the new phone**, then touch **Huawei** or **Other Android**.
- 2 Follow the onscreen instructions to download and install **Phone Clone** on your old device.
- 3 On your old device, open  **Phone Clone** and touch **This is the old phone**. Follow the onscreen instructions to connect your old device with your new device by scanning a code or connecting manually.
- 4 On your old device, select the data you want to clone, then touch **Transfer** to start cloning.

 Phone Clone is only available on devices running Android 4.4 or later.

Clone Data from an iPhone or iPad


- 1 On your new device, open  **Phone Clone** (in the **Tools** folder by default). Alternatively, go to  **Settings** > **System & updates** > **Phone Clone**, touch **This is the new phone**, then touch **iPhone/iPad**.
- 2 Follow the onscreen instructions to download and install **Phone Clone** on your old device.
- 3 On your old device, open  **Phone Clone** and touch **This is the old phone**. Follow the onscreen instructions to connect your old device with your new device by scanning a code or connecting manually.
- 4 On your old device, select the data you want to clone, then follow the onscreen instructions to complete the data cloning.

 Phone Clone is only available on devices running iOS 8.0 or later.

Reset Your Device


Reset Network Settings

This operation will reset your Wi-Fi, mobile data network, and Bluetooth settings. It will not change any other settings on your device or delete any data.

Go to  **Settings** > **System & updates** > **Reset**, touch **Reset network settings**, then follow the onscreen instructions to reset network settings.


Reset All Settings

This operation will reset all network settings, fingerprints, face recognition data, and the lock screen password of your device. It will not delete any data from your device.

Go to  **Settings** > **System & updates** > **Reset**, touch **Reset all settings**, then follow the onscreen instructions to reset all settings.


Restore Factory Settings

This operation will erase all the data on your device, including your accounts, app data, system settings, installed apps, music, images, and all files on the internal storage. Make sure to back up your data before restoring your device to its factory settings.

Go to  **Settings** > **System & updates** > **Reset** > **Reset tablet**, touch **Reset tablet**, then follow the onscreen instructions to restore your device to its factory settings.

Update the System Online

When an update is available, your device will prompt you to download and install the update package.


-  • Before updating, make sure your device is running an official system version. Otherwise, the update may fail and your device may experience unknown issues.
- Back up your user data before the update.
- After an update, third-party apps that aren't compatible with the new system version may become unavailable. In some cases, it may take some time for a compatible app version to be released.
- During the update, do not power off or restart your device, remove the memory card, or insert a memory card.

1 Go to  **Settings > System & updates**, and touch **Software update**.

2 When an update is available, you can either manually download and install the update package, or update your device automatically overnight.

- Download and install the update package: Go to **New version > DOWNLOAD AND INSTALL**. To avoid data usage, connect your device to a Wi-Fi network when downloading the update package.

Your device will automatically restart once the update is complete.

- Update overnight: Touch , and enable **Auto-download over Wi-Fi** and **Update overnight**.

Your device will automatically update and restart between 02:00 – 04:00.

To ensure a successful overnight update, make sure that your device is powered on, the screen is locked, there are no alarms set for this period of time, and the battery level remains higher than 35%. Connect your device to a charger if necessary.

To disable automatic updates, touch  on the **Software update** screen, then disable **Auto-download over Wi-Fi**.

About Tablet

Legal Disclaimer

Copyright © Huawei Technologies Co., Ltd. 2020. All rights reserved.

The product described in this document may include software that is the copyright of Huawei or its licensors. Such software shall not be reproduced, distributed, modified, decompiled, disassembled, decrypted, extracted, reverse engineered, leased, assigned, or sublicensed unless such restrictions are prohibited by law or such actions are approved by the copyright holder.

This guide is for reference only. The actual product, including but not limited to the color, size, and screen layout, may vary. All statements, information, and recommendations in this guide do not constitute a warranty of any kind, express or implied.

Please visit <http://consumer.huawei.com/en/support/hotline> for recent updated hotline and email address in your country or region.

Model: MRX-W09
MRX-AL09

EMUI 10.0_01