

## Quickstart



## Welcome to AT&T

Please use this quickstart to get a brief overview of the major features and services available with your MOTOROLA **FLIPSIDE** with MOTOBLUR.

You can also use our interactive web tutorial available at

[att.com/Tutorials](http://att.com/Tutorials)

for the most complete and up to date information available for setting up and using your new smartphone and all the services available. The online tutorials include step-by-step instructions and screen shots to assist your learning as well as providing an easy search function.

## Your Phone



Shift Alternate Menu Back Search Press=text Hold=voice Space Symbols Delete New Line Scroll/Select

**Tip:** Your phone can automatically switch to vibrate mode whenever you place it face-down. To change this, touch Menu [Menu] > **Settings** > **Sound & display** > **Smart Profile: Face Down to Silence Ringer**.

**Note:** Your phone might look a little different.

## Device Setup

1. Cover off
2. SIM in
3. Battery in
4. Cover on
5. Charge up
6. Power up & log in

**Caution:** Before assembling, charging or using your phone for the first time, please read the *Safety, Regulatory, & Legal Information* provided with your phone.

When you first turn on your phone, you need to create or log into your **MOTOBLUR account**. MOTOBLUR syncs your contacts, posts, feeds, messages, emails, and photos from your other accounts. Registration is secure and should only take a few minutes:

1. Press and hold Power [Power] on top of your phone to turn it on.
2. Select a language.

**My MOTOBLUR Account Login**

User ID (my valid email address)

Password Hint

can send account information), and a new MOTOBLUR account password.

4. To add an account to MOTOBLUR, touch the account type, then enter the account's user name (or email) and password.

5. When you're done, touch **Done adding accounts**.

**Tip:** To see the accounts you added, touch Menu [Menu] > **Settings** > **Accounts**.


You can log into your MOTOBLUR account from a computer to upload contacts, reset your password, get help, or even locate your phone: [www.motorola.com/mymotoblur](http://www.motorola.com/mymotoblur)

## Calls

**Find it:** [Dialer]

**Call Lists**

Touch a tab to open a list

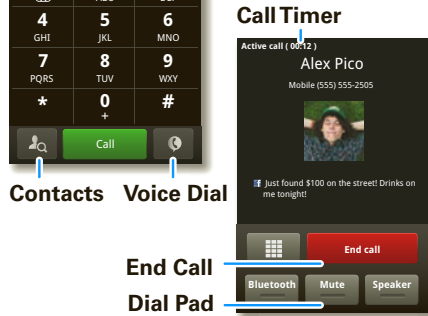

To open your **Recent** or **Frequent** call lists, open the dialer and touch the tabs at the top.

**Tip:** During a call, you can touch Home [Home] or Back [Back] to hide the call display. To reopen it, touch [Dialer].

When you have a new voicemail, [Voicemail] shows at the top of your screen. To hear the voicemail, flick down the notification bar and touch the [Voicemail].

## More Information

**On your phone**—Touch [Help Center] > **Help Center**.

**On the web**—You can also get support online:


- Interactive web tutorials are available at [att.com/Tutorials](http://att.com/Tutorials). Select Manufacturer: **Motorola** and Model: **FLIPSIDE** from the drop-down menus.
- For help with MOTOBLUR go to [www.motorola.com/mymotoblur](http://www.motorola.com/mymotoblur)
- For detailed support information including device specifications, the user manual, troubleshooting, user forums and knowledgebase articles, go to [att.com/DeviceSupport](http://att.com/DeviceSupport)
- For information about your wireless account, service plan or network, go to [att.com/Wireless](http://att.com/Wireless)

**On any phone**—Call AT&T Customer Care at 1-800-331-0500 or dial 611 from any AT&T mobile phone for assistance with your service or device.

## Accessories

You can find accessories for your phone at [att.com/WirelessAccessories](http://att.com/WirelessAccessories) or visit your local AT&T store.

## Home Screen

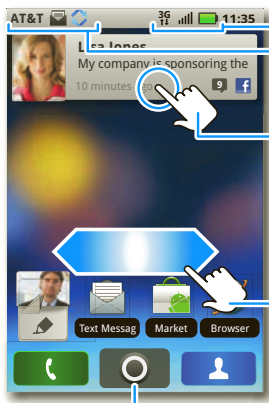

Open the app menu

**Phone Status Notifications**

Flick this bar down for details.

**Widgets**

Touch to open Touch & hold to move items (or show options in lists)


**Drag or flick** to open panels (or scroll in lists)

The home screen gives you all your latest information in one place. It's what you see when you turn on the phone or touch Home [Home] from a menu.

If your screen goes to sleep, press Power [Power] to wake it up.


In your home screen:

- To **open** something, touch it. Touch Home [Home] to return to the home screen.
- To **change** widget options (if available), open the widget and touch Menu [Menu]. You can choose an account in messaging widgets.
- To **resize** a **Motorola widget**, touch and hold it until you feel a vibration, then release. Drag a corner to resize.
- To **add** something to the screen, touch and hold an empty spot until the menu opens—you can add shortcuts, widgets, or folders, or change wallpaper.
- To **move** or **delete** something, touch and hold it until you feel a vibration, then drag it to another place, another panel, or to the trash can.

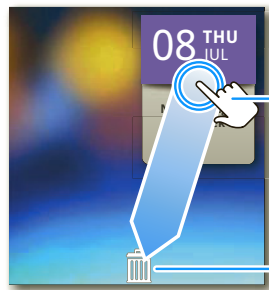

**Touch & hold** then drag to move


Drag a widget or icon here to delete it from your screen



You can use the touchpad to select small items in the display (like a small link on a web page), or control a game without blocking your view. Just flick across the pad to scroll or move, and press the pad to select.

## Text Entry

When your phone is closed, you can open a display keypad by touching a text field, or touching and holding Menu [Menu]. To close the keypad, touch Back [Back].

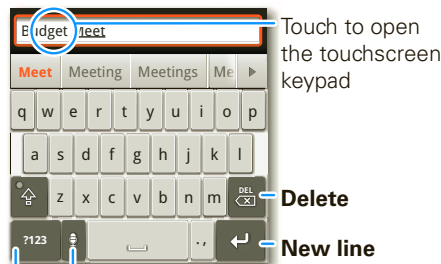

**Voice Recognition**  
Touch this, then speak the recipient's name or the text message

**Symbols/Numbers**

## Voice Input & Search

You can touch the voice icon on the display keypad to speak text or names.

To use voice dial, touch [Dialer] > [Voice Dial]. Then, say a phone number or a name from your **Contacts**.

To search by voice, touch the voice icon on a Search widget or open your phone to press and hold Search [Search] on the keypad.

To change search settings, touch Menu [Menu] > **Settings** > **Search**.

## Ringtones & Settings

You can customize sound and display settings:


- To change your ringtone, notifications, and display settings, touch Menu [Menu] > **Settings** > **Sound & display**.  
To use a song as a ringtone, touch [Music], touch and hold the song name, then touch **Use as phone ringtone**.
- To set notifications for different message types, touch [Messaging] > [Messaging] > Menu [Menu] > **Messaging Settings** > **Text Messaging**, **Email**, or **Social Messaging**.
- To switch to silent mode when you have **Screen lock** turned on, you can slide the silence switch on the unlock screen.

You can also try Menu [Menu] > **Settings** > **Sound & display** > **Double-Tap to Silence** or **Smart Profile: Face Down to Silence Ringer**.

## Contacts

**Find it:** [Contacts]

**Contacts: A-Z**

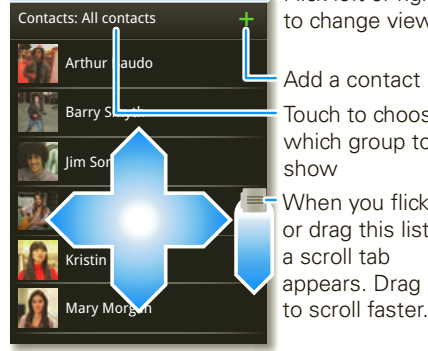


In your contacts list:

- To edit a contact, open it and touch Menu [Menu] > **Edit**.
- To quickly send an email, delete, and more, touch and hold a contact.
- To search, just type a name.

**Tip:** You can hide a contact's social status updates, or name (so their name appears for incoming calls and messages, but not in your in your **Contacts**). Open the contact, touch Menu [Menu] > **Edit** > **Additional Info**, then choose **Hide in Contacts list** or **Hide social activity**.

To save a recent call as a contact, touch [Dialer] > **Recent**, touch and hold the call, then choose **Add to contacts**.



## Social Networking

When you add social networking accounts (like **Facebook** or **MySpace**) to MOTOBLUR, friends appear in your phone's **Contacts**, and updates appear in **Social Status** and **Happenings** widgets.

**Find it:** Menu  > **Settings** > **Accounts** > **Add account**

Sign into your social networking account with the user name or email and password you set up on that account (the same as on your computer). If you don't have accounts, you can visit their websites to set them up.


After you add a social networking account to MOTOBLUR, you can see and respond to friends' updates with a **Happenings** widget on your home screen.





To add a **Happenings** widget, touch and hold a blank spot on your home screen, then touch **Motorola widgets**.


## Email & Text Messages

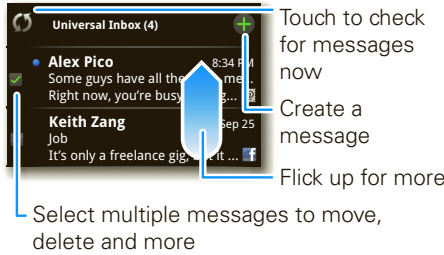**Find it:**  >  **Messaging** > **Universal Inbox**




In your inbox:


- To create an email, text, or other message, touch . Choose the message type, then enter the recipient and message. In text messages and emails, touch Menu  for options.
- To forward, save attachments, or use other options for a text message, open it, then **touch and hold** it.
- To enter names and text with **voice recognition** when your phone is closed, just touch a text box, then touch the voice icon on the display keypad.

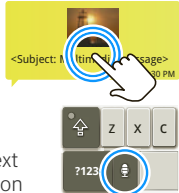


**Please don't text and drive.**


## Photos & Videos

**Find it:** Press and hold the Camera  button.

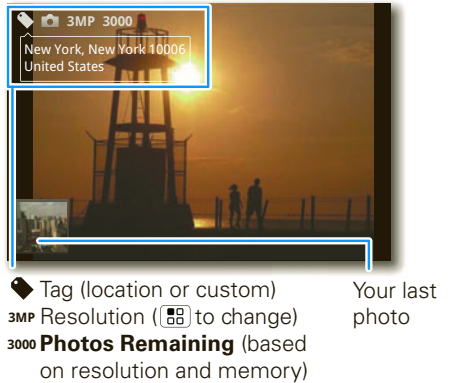

To open your camera's **Settings**, touch Menu . Photos are stored on your memory card.


**Find it:**  >  **Camcorder**

Before you record a video to send in a message, touch Menu  > **Settings** > **Video quality** > **Low (for MMS messages)**.



To **record** the video, press Camera . To stop the video recording, press Camera  again.


## Apps & Updates

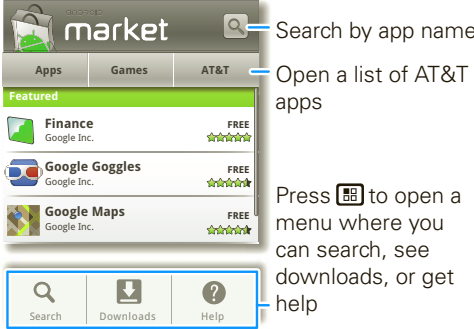**Find it:**  >  **Market**



Android Market offers quick, easy access to a wide variety of applications developed specifically for the Android platform. These have been created by developers all around the world, and have been rated by your fellow Android users. In **Market**:

- To find an app, touch the search icon or Menu  > **Search**. To download, touch the app.
- To reinstall downloaded apps or load your apps on a new device, touch **Downloads**.
- To get help, touch Menu  > **Help**.

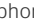
To manage or remove apps on your phone, touch Menu  > **Settings** > **Applications** > **Manage applications**. Touch an app in the list, then touch **Uninstall** (for apps you downloaded), **Clear cache**, or other options.


If you have trouble removing an app, turn off your phone, then press and hold the "S" key while you turn on your phone. Your screen will show **Safe Mode** in the lower left corner, and you can remove the app.

## Web

**Find it:**  >  **Browser**



To go to a web page in the browser, just open your phone and type the URL address. In your home screen, open your phone, press Search , then type.

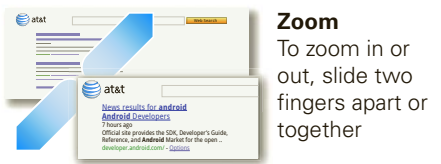


**Zoom**

To zoom in or out, slide two fingers apart or together

## Music Player & Radio

**Find it:**  >  **Music**, then choose a song

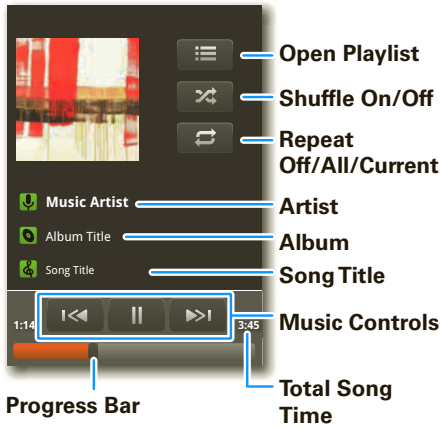

**Tip:** When a song is playing, you can add it to a playlist by touching Menu  > **Add to playlist**.

**AT&T Radio** lets you bring 400+ stations anywhere you go. Enjoy all the best in music, from Hip-Hop and R&B to Rock, Pop, Latin and more, PLUS the best in talk radio.

**Note:** AT&T Radio requires a subscription and data plan, unless you only listen to the FM Radio Tuner.


**Find it:**  >  **AT&T Radio**

To close the radio, touch Menu  > **Exit**.

## Wi-Fi® & Bluetooth® Connections

**Find it:** Menu  > **Settings** > **Wireless & networks** > **Wi-Fi settings** or **Bluetooth settings**

- In **Wi-Fi settings**:

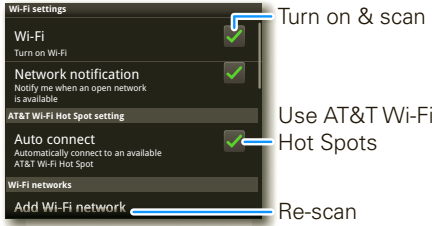


You can connect to a **Wi-Fi network** for fast Internet access and downloads.

See [www.attwifi.com](http://www.attwifi.com) for terms, conditions & charges.

- In **Bluetooth settings**:



Touch **Bluetooth** to turn it on and scan for a Bluetooth headset or car kit, then touch a device that was found to connect it.

**Note:** Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.



**Tip:** Airplane mode turns off your Bluetooth, Wi-Fi, and network connections—useful when flying. Press and hold Power  > **Airplane mode**.

## Memory Card & USB

Your phone comes with a removable memory card already installed. You need it for some features on your phone, like **Camera**.



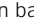


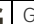



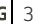









To manage memory card files, touch  >  **Quickoffice** > **Memory card**. Touch a file or folder to open, touch and hold a file to **Delete** or **Share**.


You can transfer your pictures, videos, music, ringtones and more, from your computer to the memory card in your phone:

- Connect a Motorola micro USB data cable from your phone's micro USB port to a USB port on your computer.
- Your phone should show  in the notification bar. Flick down the notification bar and touch  to choose a memory card connection. You should be able to access the memory card from your computer.

## Icons & Battery Life

At the top of the screen, icons on the left notify you about new messages or events (flick the bar down for details). Icons on the right tell you about phone status:

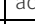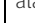	Bluetooth® active		network (full signal)
	GPS active		network (roaming)
	Wi-Fi® active		GPRS (fast data)
	downloading		EDGE (faster data)
	vibrate		3G (fastest data)
	silent		flight mode
	mute call		battery (charging)
	speakerphone active		battery (full charge)
	alarm set		Google™ sync active
	<b>Media Share</b> is ready to search over Wi-Fi®		

To get the most out of your battery, touch Menu  > **Settings** > **Battery Manager** > **Battery Profile**, then choose:

- Performance Mode** for constant data transfer and battery use.
- Battery Saver Mode** when your battery is low.
- Smart Mode** if you want to set **Battery Profile Options** that limit your data and wireless connections during off-peak hours.

Be aware that the following could reduce battery life between charges:

- recording or watching videos, listening to music or taking pictures.
- widgets that stream information to your home screen, like news or weather.

## AT&T Features & Services

**Note:** To use some AT&T services, you might need to turn off Wi-Fi® power. Some features are not available in all areas.

- AT&T Maps & Navigator**—Check maps and get driving directions quickly and conveniently. AT&T Navigator requires a separate subscription.
- Instant Messaging (IM)**—Send IMs to your buddy list using your favorite service.
- Mobile Video**—Watch news, sports, weather, and entertainment video clips.
- MobiTV**—Transform your phone into a wireless TV. MobiTV requires a subscription and data plan, and is not available in all areas. Programs are subject to change.
- Mobile Banking**—Check your account balances, transfer funds between eligible accounts, view and pay bills. To find out if your bank supports Mobile Banking, visit [att.com/mobilebanking](http://att.com/mobilebanking), or contact your financial institution.

For information on setting up or using these services, visit [att.com/Tutorials](http://att.com/Tutorials). To add these services, contact your local AT&T store or call 1-800-331-0500.

Motorola Mobility, Inc.  
Consumer Advocacy Office  
600 N US Hwy 45  
Libertyville, IL 60048  
[www.hellomoto.com](http://www.hellomoto.com)  
**Note:** Do not ship your product to the above address. If you need to return your product for repairs, replacement, or warranty service, please contact the Motorola Customer Support Center at:  
1-800-734-5870 (United States - Android products)  
1-800-331-6456 (United States - all other products)  
1-888-390-6456 (TTY/TDD United States for hearing impaired - all products)  
1-800-461-4575 (Canada - all products)  
Certain features, services and applications are network dependent and may not be available in all areas; additional terms, conditions and/or charges may apply. Contact AT&T Mobility for details.  
All features, functionality, and other product specifications, as well as the information contained in this guide, are based upon the latest available information and believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.  
MOTOROLA, the Stylized M Logo, MOTOBLUR and the MOTOBLUR logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. © 2010 AT&T Intellectual Property. Service provided by AT&T Mobility. All rights reserved. AT&T, the AT&T logo and all other AT&T marks contained herein are trademarks of AT&T Intellectual Property and/or AT&T affiliated companies. The Bluetooth trademarks are owned by their proprietor and used by Motorola Mobility, Inc. under license. **Wi-Fi** is a Certification Mark of the Wireless Fidelity Alliance, Inc. Google, the Google logo, Google Maps, Gmail, YouTube, Picasa, Android and Android Market are trademarks of Google, Inc. Facebook is a registered trademark of Facebook, Inc. Microsoft, Windows, Windows Me, and Windows Vista are registered trademarks of Microsoft Corporation in the United States and other countries. All other product or service names are the property of their respective owners.  
© 2010 Motorola Mobility, Inc. All rights reserved.  
**Caution:** Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.  
Product ID: MOTOROLA FLIPSIDE with MOTOBLUR (MB508)  
Manual Number: 68000202729-A