

onetouch | 585/585D

www.alcatelonetouch.com



For more information about how to use the phone, please go to www.alcatelonetouch.com to download complete user manual. Moreover, from the website you can also consult FAQ, realize software upgrade via PC suite, etc.

ALCATEL **onetouch**.

my world in one touch

ALCATEL **onetouch**.

Introduction.....

TCT Mobile Limited would like to thank you for purchasing this mobile phone.

Desktop

- Convenient at-a-glance view of Widget applications
- Menu shortcuts for quick access

Side key

- Access to "Camera"

Power media applications

- Music player & Radio
- Webcam

The 2.0 Megapixel camera is the best companion for PC instant messaging.

Bluetooth

With Bluetooth 2.1 supporting A2DP profiles, enjoy handsfree conversations.

My friends

Popular websites (like Friendster, hi5, etc.) to stay in touch with your friends wherever you are, whenever you want.

Two SIM Card Two Standby⁽¹⁾

With 2 SIM cards in one phone, users have the option to use either one or both at the same time.

⁽¹⁾ one touch 585D only.

Table of contents

Safety and use.....	6
General information	11
1 Getting started.....	13
1.1 Set-up	13
1.2 Power on your phone.....	15
1.3 Power off your phone.....	16
1.4 Home screen.....	16
2 Your mobile.....	17
2.1 Keys	18
2.2 Main screen icons	20
3 Calls	23
3.1 Making a call.....	23
3.2 Calling your voicemail	23
3.3 Receiving a call.....	24
3.4 During a call	24
3.5 Conference calls	25
4 Contacts.....	26
4.1 Consulting your contacts	26
4.2 Adding a contact.....	27
4.3 Available options.....	28
5 Messaging.....	29
5.1 Access	29
5.2 Conversational mode and conventional mode	29
5.3 Create message.....	30
5.4 Search.....	30
5.5 Alerts.....	30
5.6 Available options.....	31

6	Email	34
6.1	Access	34
6.2	Email account set-up.....	34
6.3	Create Email	35
6.4	Inbox.....	35
6.5	Outbox.....	35
6.6	Sent.....	35
6.7	Drafts.....	35
6.8	Available options.....	36
7	Opera Mini	37
8	Facebook.....	37
9	mTweet	38
10	Palringo.....	38
11	Media.....	39
11.1	Camera.....	39
11.2	Video.....	40
11.3	Music.....	42
11.4	Radio.....	43
12	My friends	45
13	Settings	46
13.1	Phone settings	46
13.2	Call settings.....	48
13.3	Security	50
13.4	Network.....	51
13.5	Connectivity.....	51
13.6	Dual SIM settings	51
14	Call log.....	52
14.1	Access	52
14.2	Available options.....	52

15	Tools.....	53
15.1	Alarm.....	53
15.2	Calendar	54
15.3	Notes.....	55
15.4	Calculator	55
15.5	Converter	56
15.6	World clock.....	56
15.7	Fake call	57
15.8	Stopwatch.....	57
16	Java	58
16.1	Java applications	58
16.2	Java settings.....	58
16.3	Java network.....	58
16.4	Trusted certificates	58
17	Applications.....	60
17.1	News	60
17.2	Weather	61
17.3	Bluetooth™	62
17.4	WAP.....	63
17.5	Services	64
18	Profiles	65
18.1	General	65
18.2	Meeting	66
18.3	Outdoor	66
18.4	Indoor.....	66
18.5	Silence	66
18.6	Flight mode	66
19	File manager.....	67
19.1	My audios	67
19.2	My images.....	68

19.3	My photos	68
19.4	My videos	68
19.5	Other files	68
19.6	Phone.....	68
19.7	Memory card	69
19.8	Memory status	70
19.9	Managing audios, images, videos and others.....	70
19.10	Formats and compatibility	71
20	Making the most of your mobile.....	72
20.1	PC suite	72
20.2	One Touch Upgrade.....	73
20.3	Webcam	73
21	Latin input mode/character table.....	74
22	Telephone warranty	75
23	Accessories	77
24	Troubleshooting.....	78



This product meets applicable national SAR limits of 2.0 W/kg. The specific maximum SAR values can be found on page 9 of this user guide.

When carrying the product or using it while worn on your body, either use an approved accessory such as a holster or otherwise maintain a distance of 1.5 cm from the body to ensure compliance with RF exposure requirements. Note that the product may be transmitting even if you are not making a phone call.

Safety and use.....

We recommend that you read this chapter carefully before using your phone. The manufacturer disclaims any liability for damage, which may result as a consequence of improper use or use contrary to the instructions contained herein.

• TRAFFIC SAFETY:

Given that studies show that using a mobile phone while driving a vehicle constitutes a real risk, even when the hands-free kit is used (car kit, headset...), drivers are requested to refrain from using their mobile when the vehicle is not parked.

When driving, do not use your phone and headphone to listen to music or to the radio. Using a headphone can be dangerous and forbidden in some areas.

When switched on, your phone emits electromagnetic waves that can interfere with the vehicle's electronic systems such as ABS anti-lock brakes or airbags. To ensure that there is no problem:

- do not place your phone on top of the dashboard or within an airbag deployment area,
- check with your car dealer or the car manufacturer to make sure that the dashboard is adequately shielded from mobile phone RF energy.

• CONDITIONS OF USE:

You are advised to switch off the telephone from time to time to optimise its performance.

Switch the phone off before boarding an aircraft.

Switch the phone off when you are in health care facilities, except in designated areas. As with many other types of equipment now in regular use, mobile telephones can interfere with other electrical or electronic devices, or equipment using radio frequency.

Switch the phone off when you are near gas or flammable liquids. Strictly obey all signs and instructions posted in a fuel depot, petrol station, or chemical plant, or in any potentially explosive atmosphere.

When the phone is switched on, it should be kept at least 15 cm from any medical device such as a pacemaker, a hearing aid or insulin pump, etc. In particular when using the phone, you should hold it against the ear on the opposite side to the device, if any.

To avoid hearing impairment, pick up the call before holding your phone to your ear. Also move the handset away from your ear while using the "hands-free" mode because the amplified volume might cause hearing damage.

Do not let children use the phone and/or play with the telephone and accessories without supervision.

When replacing the cover please note that your phone may contain substances that could create an allergic reaction.

Always handle your phone with care and keep it in a clean and dust-free place.

Do not allow your phone to be exposed to adverse weather or environmental conditions (moisture, humidity, rain, infiltration of liquids, dust, sea air, etc). The manufacturer's recommended operating temperature range is -10°C to +55°C.

At over 55°C the legibility of the phone's display may be impaired, though this is temporary and not serious.

Emergency call numbers may not be reachable on all cellular networks. You should never rely only on your phone for emergency calls.

Do not open, dismantle or attempt to repair your mobile phone yourself.

Do not drop, throw or bend your mobile phone.

Do not paint it.

Use only batteries, battery chargers, and accessories which are recommended by TCT Mobile Limited and its affiliates and are compatible with your phone model (see Accessories List, page 77). TCT Mobile Limited and its affiliates disclaim any liability for damage caused by the use of other chargers or batteries.

Remember to make back-up copies or keep a written record of all important information stored in your phone.

Some people may suffer epileptic seizures or blackouts when exposed to flashing lights, or when playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your phone or enabling a flashing-lights feature on your phone.

Parents should monitor their children's use of video games or other features that incorporate flashing lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a flashing-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after playing, stop the game and see a doctor.

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow the instructions to avoid problems such as tendinitis, carpal tunnel syndrome, or other musculoskeletal disorders.



Prolonged exposure to music at full volume on the music player may damage the listener's hearing.

Set your phone volume safely. Use only headphones recommended by TCT Mobile Limited and its affiliates.

• PRIVACY:

Please note that you must respect the laws and regulations in force in your jurisdiction or other jurisdiction(s) where you will use your mobile phone regarding taking photographs and recording sounds with your mobile telephone. Pursuant to such laws and regulations, it may be strictly forbidden to take photographs and/or to record the voices of other people or any of their personal attributes, and duplicate or distribute them, as this may be considered to be an invasion of privacy. It is the user's sole responsibility to ensure that prior authorisation be obtained, if necessary, in order to record private or confidential conversations or take a photograph of another person; the manufacturer, the seller or vendor of your mobile phone (including the operator) disclaim any liability which may result from the improper use of the mobile phone.

• BATTERY:

Before removing the battery from your phone, please make sure that the phone is switched off.

Observe the following precautions for battery use:

- Do not attempt to open the battery (due to the risk of toxic fumes and burns).
- Do not puncture, disassemble or cause a short-circuit in a battery.
- Do not burn or dispose of a used battery in household rubbish or store it at temperatures above 60°C.

Batteries must be disposed of in accordance with locally applicable environmental regulations. Only use the battery for the purpose for which it was designed. Never use damaged batteries or those not recommended by TCT Mobile Limited and/or its affiliates.



This symbol on your telephone, the battery and the accessories means that these products must be taken to collection points at the end of their life:

- Municipal waste disposal centres with specific bins for these items of equipment
- Collection bins at points of sale.

They will then be recycled, preventing substances being disposed of in the environment, so that their components can be reused.

In European Union countries:

These collection points are accessible free of charge.

All products with this sign must be brought to these collection points.

In non European Union jurisdictions:

Items of equipment with this symbol are not to be thrown into ordinary bins if your jurisdiction or your region has suitable recycling and collection facilities; instead they are to be taken to collection points for them to be recycled.

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

• CHARGERS

Mains powered chargers will operate within the temperature range of: 0°C to 40°C.

The chargers designed for your mobile phone meet with the standard for safety of information technology equipment and office equipment use. Due to different applicable electrical specifications, a charger you purchased in one jurisdiction may not work in another jurisdiction. They should be used for this purpose only.

• RADIO WAVES:

Proof of compliance with international standards (ICNIRP) or with European Directive 1999/5/EC (R&TTE) is required of all mobile phone models before they can be put on the market. The protection of the health and safety for the user and any other person is an essential requirement of these standards or this directive.

THIS DEVICE MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves (radio frequency electromagnetic fields) recommended by international guidelines. The guidelines were developed by an independent scientific organization (ICNIRP) and include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The radio wave exposure guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2.0 W/kg.

Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The highest SAR values under the ICNIRP guidelines for this device model are:

one touch 585:

Maximum SAR for this model and conditions under which it was recorded.		
Head SAR	GSM 900+Bluetooth	0.984 W/kg
Body-worn SAR	GSM 900+Bluetooth	1.19 W/kg

one touch 585D:

Maximum SAR for this model and conditions under which it was recorded.		
Head SAR	GSM 900+Bluetooth	0.984 W/kg
Body-worn SAR	GSM 900+Bluetooth	1.19 W/kg

During use, the actual SAR values for this device are usually well below the values stated above. This is because, for purposes of system efficiency and to minimize interference on the network, the operating power of your mobile device is automatically decreased when full power is not needed for the call. The lower the power output of the device, the lower its SAR value.

Body-worn SAR testing has been carried out at a separation distance of 1.5 cm. To meet RF exposure guidelines during body-worn operation, the device should be positioned at least this distance away from the body. If you are not using an approved accessory ensure that whatever product is used is free of any metal and that it positions the phone the indicated distance away from the body.

Organizations such as the World Health Organization and the US Food and Drug Administration have stated that if people are concerned and want to reduce their exposure they could use a hands-free device to keep the phone away from the head and body during phone calls, or reduce the amount of time spent on the phone.

For more information you can go to www.alcatelonetouch.com

Additional information about electromagnetic fields and public health are available on the following site: <http://www.who.int/peh-emf>.

Your telephone is equipped with a built-in antenna. For optimal operation, you should avoid touching it or degrading it.

As mobile devices offer a range of functions, they can be used in positions other than against your ear. In such circumstances the device will be compliant with the guidelines when used with headset or USB data cable. If you are using another accessory ensure that whatever product is used is free of any metal and that it positions the phone at least 1.5 cm away from the body.

• LICENCES

Obigo®

is a registered trademark of Obigo AB.



microSD Logo is a trademark.



The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by TCT Mobile Limited and its affiliates is under license. Other trademarks and trade names are those of their respective owners.

one touch 585/585D Bluetooth QD ID B016876



eZiText™ and Zi™ are trademarks of Zi Corporation and/or its Affiliates.



Java™ and all Java™ based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.



is a registered trademark of Opera Mini.



Facebook and the f Logo are trademarks of Facebook, Inc., and are used under license.



Twitter and the T Logo are trademarks of Twitter, Inc., and are used under license.

General information

- **Internet address:** www.alcatelonetouch.com
- **Hot Line Number:** see "TCT Mobile Services" leaflet or go to our Internet site.

On our Internet site, you will find our FAQ (Frequently Asked Questions) section. You can also contact us by e-mail to ask any questions you may have.

An electronic version of this user guide is available in English and other languages according to availability on our server:

www.alcatelonetouch.com

Your telephone is a transceiver that operates on GSM networks with 900 and 1800 MHz bands.

CEI588

This equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The entire copy of the Declaration of Conformity for your telephone can be obtained through our website: www.alcatelonetouch.com

Protection against theft ⁽¹⁾

Your telephone is identified by an IMEI (phone serial number) shown on the packaging label and in the product's memory. We recommend that you note the number the first time you use your telephone by entering * # 0 6 # and keep it in a safe place. It may be requested by the police or your operator if your telephone is stolen. This number allows your mobile telephone to be blocked preventing a third person from using it, even with a different SIM card.

Disclaimer

There may be certain differences between the user manual description and the phone's operation, depending on the software release of your telephone or specific operator services.


TCT Mobile shall not be held legally responsible for such differences, if any, nor for their potential consequences, which responsibility shall be borne by the operator exclusively.

⁽¹⁾ Contact your network operator to check service availability.


Getting started

1.1 Set-up

Removing and installing the back cover

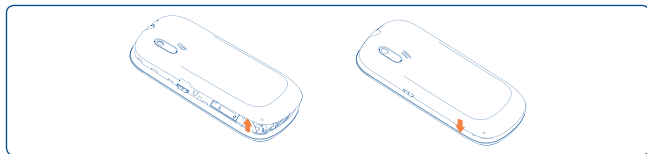


Removing and installing the battery

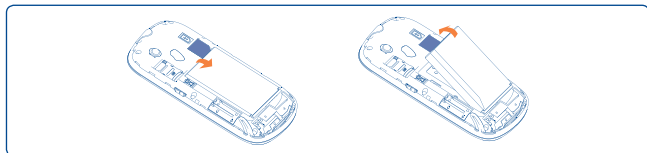



Inserting and removing the SIM card ⁽¹⁾

one touch 585

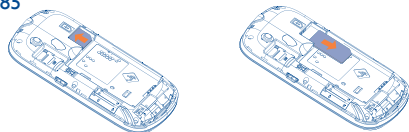


⁽¹⁾ Check with your network operator to make sure that your SIM card is 3V or 1.8V compatible. The old 5 Volt cards can no longer be used. Please contact your operator.

one touch 585D

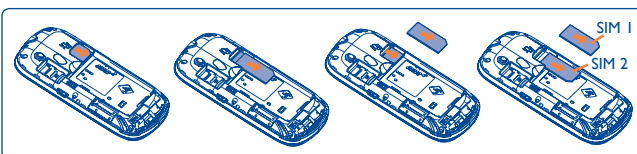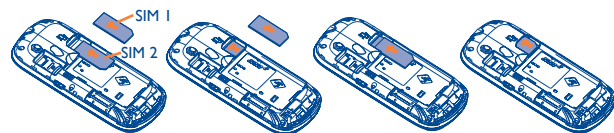

Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press it and slide it out.

Charging the battery ⁽¹⁾

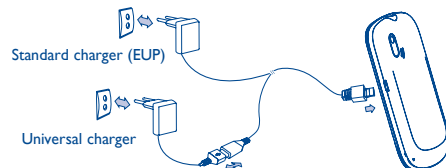

Connect the battery charger to your phone and mains socket respectively.

- The charging may take about 20 minutes to start if the battery is flat.
- Be careful not to force the plug into the socket.
- Make sure the battery is correctly inserted before connecting the charger.


⁽¹⁾ Depending on your country.

- The mains socket must be near to the phone and easily accessible (avoid electric extension cables).
- When using your telephone for the first time, charge the battery fully (approximately 3 hours). You are advised to fully charge the battery (🔋).
- To reduce power consumption and energy waste, when battery is fully charged, disconnect your charger from the plug; switch off Bluetooth when not in use; reduce the backlight time, etc.




The charge is complete when the animation stops.

1.2 Power on your phone

Hold down the  key until the telephone powers on, type in your PIN code if necessary and then confirm. The main screen is displayed.

If you do not know your PIN code or if you have forgotten it, contact your network operator. Do not leave your PIN code with your telephone. Store this information in a safe place when not in use.

If cell broadcast messages are displayed, you can browse through them or press  to return to the main screen.

While the phone is searching for a network, "**Searching/Emergency**" will be displayed.

In the power on screen, you also have access to the functions of "**Radio**", "**Camera**", "**Music**", etc. even if there is no SIM card inserted.

1.3 Power off your phone

Hold down the  key from the main screen.

1.4 Home screen




Status Bar


Status/Notification indicators

Wallpaper

Widget Bar

You can add your favorite applications to your Idle Widget Bar for quick view or access. Press the right or left of Navigation key to select the widget and then press  key. You may also customize widget bar by Settings/Phone settings/Widget bar.

2 Your mobile

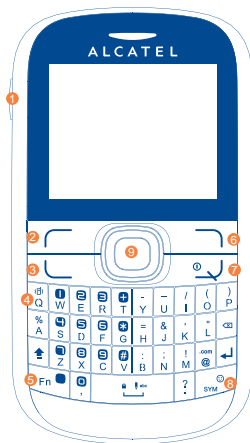

- 1 Camera
- 2 Left softkey
- 3 Pick up/Send call
Call log (Idle screen)
Activate fake call
(long keypress)
- 4 Vibration alert
(long keypress)
- 5 Fn key
- 6 Right softkey
- 7 Switch on/
Switch off
End call
- 8 SYM key
- 9 Navigation key:
Menu/Confirm an option 

2.1 Keys



- Navigation key
- Confirm an option (press the middle of the key)
- Activate music player (long press the middle of key)
- Scroll widget bar (press the right or left of the key)



- Pick up
- Send a call
- In idle screen:
- Access call log (Redial) (short keypress)
- Activate fake call (long keypress)
- During MP3 Playing:
- Switch between Headset and speaker (long keypress)



- Switch on/Switch off the telephone (long keypress)
- End call
- Return to idle screen



- Left softkey



- Right softkey



- Access your voicemail (long keypress)



- In idle screen:
- Long/short keypress: Lock/Unlock the keypad
- In edit mode:
- Short keypress: input space
- Long keypress: switch language



In idle screen:

Press to access shortcuts

Fn + P: Access to Profiles

Fn + Q: Access to Time and date

Fn + S: Access to Notes

In edit mode:

Press once to input top-half character

Press twice to lock top-half character inputting mode, then press once to unlock top-half character inputting mode



In edit mode:

Short press: popup symbol page to select special character by navigation key



Delete one by one (short keypress)

Delete one by one quickly (long keypress)



Move cursor to the next line



Switch the uppercase and lowercase (in edit screen)

2.2 Main screen icons ⁽¹⁾

In one touch 585:



Battery charge level.



Vibrate alert: your phone vibrates, but does not ring or beep (see page 66).



Bluetooth status (Activated).



Bluetooth status (Connected to an audio device).



Headset connected.



Keypad locked.



Call forwarding activated: your calls are forwarded (see page 49).



Alarm or appointments programmed (see page 53).



Level of network reception.



Voicemail message arrived.



Missed calls.



Radio is on.

⁽¹⁾ The icons and illustrations in this guide are provided for information purposes only.



WAP alerts ⁽¹⁾.



Roaming.



SIM card missing.



MicroSD card available.



GPRS connection status (Activated).



GPRS connecting.



Sending a MMS.



MMS receiving.



Silence mode: your phone does not ring, beep or vibrate with the exception of the alarm (see page 66).



SMS unread.



MMS unread.



Email unread.



Flight mode.

In one touch 585D:



Call forwarding activated: your calls are forwarded (see page 49).



Level of network reception.



Voicemail message arrived.



GPRS connection status (Activated).




GPRS connecting.

⁽¹⁾ Depending on your network operator.


3 Calls.....

3.1 Making a call


Dial the desired number then press the  key to place the call. For dual SIM model, you can select either SIM1 or SIM2 when you wish to place a call ⁽¹⁾. If you make a mistake, you can delete the incorrect digits by pressing the right softkey.

To hang up the call, press the  key.

Making an emergency call

If your phone is covered by the network, dial emergency number and press the  key to make an emergency call. This works even without a SIM card and without typing the PIN code or unlocking the keypad.

3.2 Calling your voicemail ⁽²⁾

Your voicemail is provided by your network to avoid missing calls. It works like an answering machine that you can consult at any time. To access your voicemail, hold down the  key.

If the access number for your operator's voicemail service does not work, dial the number that you were given. To change this number, refer to "My number" (see page 48).






To use your voicemail service from abroad, contact your network operator before leaving.

⁽¹⁾ one touch 585D only.

⁽²⁾ Contact your network operator to check service availability.

3.3 Receiving a call

When you receive an incoming call, press the  key to talk and then hang up using the  key.

If the  icon is displayed, the vibrator is activated and there is no ringtone.

If the  icon is displayed, the phone neither rings nor vibrates.



The caller's number is displayed if it is transmitted by the network (contact your network operator to check service availability).

Muting the ringtone

You may mute ringtone of current incoming call by pressing .

Answer the call by pressing the  key.

Rejecting a call

Press the  key once to reject the call, or reject call with SMS.

3.4 During a call ⁽¹⁾

Available functions

During a call, press "Options" to use your directory, calendar, messages etc. without losing your caller.

WARNING: move the handset away from your ear while turn on the speaker because the amplified volume might cause hearing damage.

You can switch the audio function from handset to Bluetooth device when connected.

⁽¹⁾ Contact your network operator to check service availability.


Adjusting the volume

You can adjust the sound level during a call using the up/down key.

Handling two calls

- Answering a second call (ensure that "**Call waiting**" is activated, see page 49).
- To call a second party during a call, you may press "**Options**" and select "**New call**".

3.5 Conference calls ⁽¹⁾

Your phone allows you to talk to several people at the same time. If you are on a double call, press "**Options**" and select "**Conference**". If a third call comes in, answer it by pressing the  key and speak with your new caller.

This caller becomes a member of the conference if you press "**Options**" and select "**Conference call**".

⁽¹⁾ Contact your network operator to check service availability.

4 Contacts

4.1 Consulting your contacts

To access the contacts from the main screen, press the  key and select the  icon from the menu.

For dual SIM model, the complete contacts of both SIM1 and SIM2 are available in this menu ⁽¹⁾.

The whole contact list is categorized by **All**, **SIM**, **Phone** and **My favourite**.

 All

 SIM

 Phone

 My Favourite

Searching for a contact

You can search for a contact by inputting the initial of their name. Subsequent letters may be added to refine the search. Or you may scroll up/down to find the contact you need when reaches the initial letter among contact list part (A-Z).

Viewing a contact

Select a name from your directory to read the contact information. Select "**Options**" to send messages, edit the contact, etc.

Sending vCard

In this menu, you may send the vCard you wish by SMS, MMS, Email and Bluetooth.

⁽¹⁾ one touch 585D only.

4.2 Adding a contact

Select the directory in which you wish to add contact, press the "**Options**" softkey, select "**Add contact**".

Following fields are accessible when you create a new contact in the directory: Name, Mobile, Copy to SIM/Not copy to SIM, Home, Work, Email, URL, Address, etc.

You can move from one field to another by scrolling up and down.



If you use your phone abroad, store the numbers in your directories in international format "+" followed by the country code.

4.3 Available options

From the list of names in All, SIM, Phone and My favourite, you can access the following options:

Send message	Send an SMS to a contact you selected from the directory.
Group	You can view, send messages to the group you select or you can create, delete groups as you want.
Delete	Delete the selected contact.
View mode	You may view contacts stored in phone only, SIM only or both in SIM and phone.

More	My number	Type in, modify or send the user's own number by SMS.
	Memory status	View used and available space in SIM and Phone directory.
	Copy all from SIM to phone	Copy the whole directory to the Phone directory only if there is sufficient memory.
	Copy all from phone to SIM	Copy the whole directory to SIM only if there is sufficient memory.

5 Messaging



You can create, edit and receive SMS and MMS with this mobile phone.




MMS enables you to send video clips, images, photos, animations and sounds to other compatible mobiles and e-mail addresses.



The MMS function can only be used if the service is provided by your operator, and if your contract includes the MMS option and if all the parameters for MMS have been entered.

5.1 Access

You may access this menu using the following options:

- Press  to enter the main menu screen, and then select .
- Access from , when widget bar is hide.

5.2 Conversational mode and conventional mode

In conversational view mode, you can view chat history in chronological order. In conventional view mode, you may have access to the following folders: **Write msg, Inbox, Outbox, Sent, Draft, Voicemail, Broadcast SMS, Empty folder, Templates, Settings**. Conversational view mode is set as default. You may switch to conventional view mode by selecting "**Options\Settings\Conversational mode\On(Off)**". The following instructions are based on conversational mode.

5.3 Create message

From the main menu select "**Messaging**" to create text/multimedia message. For dual SIM model, you can type a message and select to send it to a recipient in either the SIM1 or SIM2 directory ⁽¹⁾. You can type a message and you can also modify a predefined message in **Templates** or customise your message by adding pictures, photos, sounds, titles, etc (only available while editing a MMS). While writing a message, select "**Options**" to access all the messaging options. You can save your messages that you send often to **Draft** or **Templates** (MMS only).



Specific letters (accent) will increase the size of the SMS, this may cause multiple SMS to be sent to your recipient.

5.4 Search

To search for a thread, you may input the initial of a contact name. Subsequent letters may be added to refine the search.

5.5 Alerts

5.5.1 WAP alerts

Store WAP push messages.

5.5.2 Setting messages

The storage of provisioning messages.

⁽¹⁾ one touch 585D only.

5.5.3 Voicemail

View and edit the voicemail number.

5.5.4 Broadcast SMS

Store the received Broadcast SMS.

5.6 Available options

5.6.1 View

With this option, you can view details of the selected thread.

5.6.2 Delete

To delete a thread (containing all chat history), select "**Options\Delete**" and then confirm.

5.6.3 Settings

Conversational mode

This option enables you to switch on/off conversational message view mode.

Text messages

Profile settings

Profiles can be retrieved directly from SIM card. Alternatively, you can create your own profile.

Common settings

Delivery report, request for acknowledgement of delivery report On/Off. Reply path ⁽¹⁾: show reply path.

Alphabet management

Enables the definition of SMS data coding for SMS sending.

Memory status

Memory used on the phone.

Pref. storage

Select default message storage, SIM or phone.

⁽¹⁾ Depending on your network operator.

Multimedia messages

Edit	Set slide timing, edit mode, picture resize, signature, etc.
Sending	Set the values for validity period, Read report, etc.
Retrieve	Set the values for Home network, Roaming network, etc.
Edit profile	Follow the same procedure as for setting your WAP connection.
Memory status	Memory used on the phone.

Broadcast SMS ⁽¹⁾

Receiving mode	Enable to receive broadcast SMS.
Languages	Language selection.
Channel settings	Select/Add/Edit/Delete channels.

5.6.4 Delete all

You may delete all threads with this option.

⁽¹⁾ Depending on your network operator.

6 Email ⁽¹⁾

Your phone has an email client with the settings predefined for a few popular email services like – GoogleMail, Windows live, Yahoo, AOL, etc. Besides this, you can set up other POP3 or IMAP4 email accounts that you may be using.

6.1 Access

Press  to enter the main menu, select "**Email**".

6.2 Email account set-up

Pre-defined email service

If you own an email account of predefined services, you can install it to your phone by selecting the service (GoogleMail, yahoo, etc.), entering the display name, password and account name, and then confirming with "**Save**" on screen keypad.

New email service

To set up a new email account other than the predefined email services, press "**Create**", select "**Other Email accounts**".

You are required to enter your email address, display name, password, account name, then confirm with "**Save**" on screen keypad. After you'll need to select protocol ⁽²⁾ (POP3 or IMAP4), then enter your incoming server address and outgoing server address, select "**Save**".

⁽¹⁾ Depending on your network operator.

⁽²⁾ Consult your email service provider for more information about protocol.

6.3 Create Email

Select "**Email\Options\Create Email**" to enter write email interface.

Select  to add receiver from Directory.

6.4 Inbox

Folder of all received Emails.

6.5 Outbox

Folder of all unsent Emails.

6.6 Sent

Folder of all sent Emails.

6.7 Draft

Folder of all draft Emails.

6.8 Available options

Send and receive all accounts

To connect all email accounts' server in order to receive/send mails.

Create Email

To create a new Email.

Edit account

To edit the detailed configuration information of the selected account.

Delete account

To delete the current selected account.

New account

To create a new email account.

Empty folder

Delete all emails in "**Inbox/Outbox/Sent/Drafts**".

Empty all folders

Delete all emails in all folders.

Delete marked

To delete the marked mail in the selected folder.

Delete all marked

To delete all marked mails in all folders.

7 Opera Mini ⁽¹⁾

Not only does Opera Mini give you the full Web experience where you stay in touch with your friends, obtain information, do your online banking etc., but it is also designed to save time by using compressed web pages.

8 Facebook ⁽¹⁾

Facebook is a social utility that connects people with friends and others who work, study and live around them. It provides a number of features with which users may interact: Wall, a space on every user's profile page that allows friends to post messages for the user to see; Pokes, which allow users to send a virtual "poke" to each other; Gifts, a feature allowing users to send virtual gifts which appear on the recipient's profile; Market places, which lets users post free classified goods, etc.

To open an account online, please go to: <http://www.facebook.com/>.

⁽¹⁾ Depending on your network operator.

9 mTweet ⁽¹⁾

Twitter is a social networking and microblogging service that has gained notability and popularity worldwide. This feature enables phone users to exchange news updates and ideas with a community in the form of messages or posts. Posts are displayed on the author's profile page and delivered to the author's subscribers or followers.

To open an account online, please go to: <http://twitter.com/>.

10 Palringo ⁽¹⁾

Palringo Instant messaging (IM) allows you to chat with other people using Palringo account. You can also connect to other popular IM services through Palringo, like Yahoo, AIM, GG, ICQ, Google talk, iChat etc. Please note that the services may be upgraded depending on your client version.

⁽¹⁾ Depending on your network operator.

Media



11.1 Camera

Your mobile phone is fitted with a camera for taking photos and shooting videos that you can use in different ways:



- store them in your **"File manager\My creations"**.
- send them in a multimedia message (MMS) to a mobile phone or an email address.
- send them directly by Bluetooth.
- customise your main screen (see page 46).
- select them as incoming call image to a contact in your directory.

11.1.1 Access

Press  to access the main menu and select Media/Camera.

11.1.2 Camera

11.1.2.1 Take a photo, save or delete














The screen acts as the viewfinder. Position the object or landscape in the viewfinder and press  to take the image and the images will be automatically saved. If you don't want it, you may directly delete it by pressing .

11.1.2.2 Settings in framing mode

Before taking the photo, you can adjust a number of settings by using the following shortcuts:

From the photo shot screen, press **"Options"** to access: **"Image size"**, **"Capture mode"**, **"Quality"**, **"Timer"**, **"Banding"**, **"Night mode"**, **"Exposure Value(EV)"**, **"White balance"**, **"Color mode"**, **"My creations"**, **"Storage"**, **"Access video"**, **"Restore default"**.

Press  to access **My creations** to view the photos you have taken.

 Image size	 Banding	 Color mode
 Capture mode	 Night mode	 My creations
 Quality	 Exposure Value	 Storage
 Timer	 White balance	 Access video
 Restore default		

11.1.2.3 Options available after taking the photo






Once you have taken a photo, three icons appear on the photo so you can choose to store it in my photos, send your photo by Bluetooth, MMS, Email or Facebook.


11.2 Video

You can record a video clip of unlimited length, as long as the battery sustains and there is sufficient memory.

"My videos" album contains video clips recorded, received or downloaded. All video clips in this folder can be played, set as Power on/off, sent, deleted, renamed, sorted, etc.

Useful icons/keys:


-  Switch between Normal screen and Full screen display.
-  Set as play/pause.
-  Set the volume level.
-  Previous/next video.
-  Back to previous menu.


 We strongly advise you to change the default folder to "**Memory card**" to store your photos and videos.

11.2.1 Framing mode

When you enter the "**Video**" function, you are in Framing mode. Use the mobile screen as a viewfinder and press "**Options**" for the "**White balance**", "**Exposure Value(EV)**", "**Night mode**", "**Banding**", "**Quality**", "**Record audio**", "**Color mode**", "**My videos**", "**Storage**", "**Access camera**", "**Restore default**" settings, and to access "**File manager\My videos**".

11.2.2 Recording mode

Once you have chosen your settings, you can launch the recording of your video-clip by pressing the .

 If you receive a call in recording mode, video recording will be stopped and a pop up message will inquire if you want to save it after the call ends.

11.2.3 Further operations after shooting a video

After shooting a video, three icons will appear on the screen so you can choose to send your video by MMS, Email or Bluetooth.

In the list of "**My videos**", press "**Options**" to play the video, set as Power on/off, Rename, etc.

11.3 Music

Access this feature from the main menu by selecting "**Media\Music**".

You will have full flexibility of managing music both on your mobile and memory card.

You can have access to your music files through one of the following:

- All songs** Contains all songs both on phone memory and memory card.
- My star list** You can simply add your favourite songs to "**My star list**" (max 100).
- Folders** Category of songs in folder.
- Album/Artist/Genre** Music files are categorized by Album, Artist or Genre based on information stored in the tags. Those missing such information will be classified as "**Unknown**".
- Update songs** Update the information of songs saved in phone or memory card.

11.3.1 Settings

Play mode	Normal, Repeat current, Repeat all, Shuffle and Repeat shuffle.
Equalizer	Different music styles preset in the phone for your selection.
Display	Enable your player to display song information. or lyric.
Bluetooth settings	BT stereo output and BT stereo headset setting.

11.3.2 Playing with lyrics

Lyrics can be displayed in synchronization with the music.

11.4 Radio

Your phone is equipped with a radio ⁽¹⁾ with RDS functionality. You can use the application as a traditional radio with saved channels or with parallel visual information related to the radio program on the display if you tune to stations that offer Visual Radio service. You can listen to it while running other applications.



To use it, you must plug in your headset, which works as an antenna connected with your phone.

⁽¹⁾ The quality of the radio depends on the coverage of the radio station in that particular area.

Available options:

Channel list	Open the list of saved stations.
Save channel	Save the current tuned station to the " Channel list ".
Auto search	Start auto search and stations will be automatically saved to " Channel list ".
Entry freq	Enter the frequency manually.
Record	Record the radio: files will be automatically saved to " Notes ".
Settings	Scroll up and down to manage settings.
Activate loudspeaker/Play in headset	Listen to the radio using loudspeaker or headset.
Radio turn off	Stop playing the radio.

12 My friends ⁽¹⁾.....




It migrates self-contained sub-trees of the websites to let you stay in touch with your friends by flicking through Friendster, Hi5, etc.

⁽¹⁾ Depending on your network operator.

13 Settings.....



From the main menu, select the menu icon  and select the function of your choice in order to customise your telephone.

13.1 Phone settings

13.1.1 Time and date

Allows you to have settings of date and time, including 12/24h format.

You can also set the daylight saving adjustment.

13.1.2 Display

Wallpaper

The wallpaper is displayed when you switch on your telephone.

By selecting "**Wallpaper**" you can customise it by replacing the default image or animation displayed on your telephone.

Theme

This function enables you to customise the colours of your telephone.

Power On/Off ⁽¹⁾

You can customise your welcome animation or image that appears when you switch on your phone.

You can also customise your OFF screen with an image or animation.

⁽¹⁾ Depending on the model.


Brightness

You may adjust black level with respect to LCD display by pressing the key .

Backlight

- **Screen** Allows you to reduce brightness for enhanced battery performance and to save power during periods of expected inactivity.
- **Keypad** You may customise your keypad light by selecting **Always on/Always off** or **when needed**.

13.1.3 Languages ⁽¹⁾

Display language for messages (select using ). The "Auto" option selects the language according to the home network (if available).

13.1.4 Headset mode

Switch audio play (incoming call, message beep, alarm beep...) between **Headset only** and **Phone and Headset**.

13.1.5 Keypad

By customising your keypad, you can access any function directly from the idle screen.

13.1.6 Auto lock

Your keypad will be locked automatically, you can set the auto lock time.

Unlock the keypad

To unlock the keypad, you may press  for a second.

⁽¹⁾ Contact your network operator to check service availability.

13.1.7 Widget bar

Widget bar with menu items as a shortcut for quick access (see page 16).

13.1.8 Default browser setting

Choose WAP or Opera Mini as default browser.

13.1.9 Input mode

Please see chapter "**Latin input mode**", page 74. In addition to the specific characters table for Cyrillic, Chinese, other data input modes are also available in your telephone. This feature allows you to write short messages and add names with special characters to your directory.

13.2 Call settings

You can access a number of items with this option:

13.2.1 My number

Type in or modify your telephone number or the number to access your voicemail and confirm by pressing "OK". Your telephone number is usually written on your SIM card.

13.2.2 Billing ⁽¹⁾

You can access different items with this option:

Amount	You can view the total cost of charged calls, modify it or reset it and enter the cost of a call in the currency of your choice.
Duration	You can view the total duration of all outgoing calls, Answered calls or reset it.
GPRS counter	Management of data usage volume (in kilobytes).
Beep duration	You can activate or cancel the beep emitted during a call with a specified frequency.


⁽¹⁾ Contact your network operator to check service availability.

13.2.3 Call waiting

Activate/deactivate the notification of a second incoming call by a beep.

13.2.4 Call forwarding

You can activate, cancel or verify the status of the call forwarding to the voicemail or to a specified number. The following configurations are possible:

- **Unconditional:** systematic forwarding of all your calls. The  icon is displayed.
- **Conditional:** if your line is busy, if you don't answer or if you are outside the network range.

13.2.5 Call barring

You can activate or deactivate the call barring for outgoing and incoming calls. The various options are:

Outgoing calls

The following configurations are possible:

- **All calls** All outgoing calls are barred.
- **International calls** Outgoing international calls are barred.
- **International except home** Outgoing international calls except those to your country of subscription are barred.

Incoming calls

The following configurations are possible:

- **All calls** All incoming calls are barred.
- **Roaming** Incoming calls are barred when you are abroad.

Cancel all barring

Deactivate all call barring.

Change barring Password

Change the original Password for activating call barring.

13.2.6 Caller ID

Activate/deactivate CLIR.

13.2.7 Auto redial

You can activate or deactivate the automatic callback of your party for calls that do not get through the first time

13.3 Security

Activate PIN

The SIM card protection code is requested each time the phone is powered on if this code is activated.

Change PIN

Change PIN code.

Change PIN2

A protection code for certain SIM card features (Billing/Cost/FDN, etc.) will be requested if you attempt to access it, if the code is activated. Select to update it with a new one (between 4 and 8 digits).

Activate phone code

Code is requested each time the phone is powered on.

Change phone code

Change phone password, its initial one is 1234.

Fixed dialed number

Allows the phone to be "locked" so that it can only dial certain numbers, or numbers with certain prefixes. To activate this function, PIN2 code is mandatory.

13.4 Network

Network selection

- Preferred network** List of networks to which you wish to be connected in order of priority.
- Select network** The choice of network connection is left up to the user.
- Search mode** Network connection can be switched between "**Manual**" and "**Auto**".

GPRS connection ⁽¹⁾

- When needed** GPRS mode active depending on connection requirements.
- Always** GPRS mode continuously active.
- GPRS international roaming** GPRS data services can be used while roaming overseas.

13.5 Connectivity

A set of profile settings for messaging (MMS, Email...) and WAP connection.

13.6 Dual SIM settings ⁽²⁾

- Dual SIM activated** Keep both of your SIM cards active.
- Only SIM1 activated** Only keep SIM1 active.
- Only SIM2 activated** Only keep SIM2 active.


⁽¹⁾ Depending on network availability.

⁽²⁾ one touch 585D only.

4 Call log.....



14.1 Access

You may access this function from the main menu "**Call log**" or by pressing . Once enter this menu, following list will be displayed:

For dual SIM model, the complete call logs of both SIM1 and SIM2 are available in this menu ⁽¹⁾.



Missed calls



Outgoing calls



Incoming calls

14.2 Available options

When you press "**Options**", you may have access to **Send message**, **Dial**, **Edit before call**, **Delete**, **Delete all**, etc.

⁽¹⁾ one touch 585D only.

15 Tools



15.1 Alarm

Your mobile phone has a built-in alarm clock with a snooze feature. You can set up to five separate alarms and choose whether or not the alarm should repeat.

Repeat	You may select Once (default)/ Every day/Days (Mon-Fri) or customize to your desire.
Snooze	The alarm will repeat at regular intervals.
Mode	You may select the mode of Ringtone: Ring , Vibration only , Radio ⁽¹⁾ or Vibration and Ring .

⁽¹⁾ In Radio mode, you are required to plug in headset first. Your phone will power on automatically before Radio is on.

15.2 Calendar

Once you enter this menu from "Tools", there is a monthly-view calendar for you to keep track of important meetings, appointments, etc. Days with events entered will be marked in color.

Available options:

Today's appointments	See today's appointments.
All appointments	See all the created appointments.
Jump to date	Input the required date and it will be immediately highlighted.
Create	Create an appointment.
Synchronization	Synchronize with the account you've set.
Settings	Set the 1st day of 1 week and 1st week of 1 year.

15.3 Notes

You can create a note in text or voice format by accessing "**Notes**" from "**Tools**".

Available options:

- | | |
|-------------|---------------------------------------|
| Open | Open and view note. |
| Send | Send by SMS, MMS, Email or Bluetooth. |

New text note/voice memo Add new text note or voice memo.


- | | |
|-------------------|-------------------|
| Delete | Delete note. |
| Delete all | Delete all notes. |

While recording a voice memo, you can define the audio format (AMR, WAV or AWB), Quality (High/Low), and Storage (Phone, memory card).

15.4 Calculator

Access this feature by selecting "**Calculator**" from "**Tools**".


Enter a number, select the type of operation to be performed, and enter the second number, then press "=" to display the result.

Once an operation is complete, you can press  to clear numbers and carry out a new operation.

To return to the main screen, press .


15.5 Converter

15.5.1 Unit convertor

You can use the Weight and Length conversion by selecting the unit you wish to convert via , then input the digits. After press "**Ok**", you can get the converter results.

15.5.2 Currency converter

The currency converter allows you to:

- Convert a currency directly into euros and vice versa ⁽¹⁾.
- Convert between international currencies, both currencies must be selected by pressing . You are requested to input the appropriate exchange rate.

15.6 World clock

The World clock shows current local time and the time zone in different cities. You may view up to 3 cities at one time (**Options\Set as my city**).

⁽¹⁾ For the former European national currencies, the currency converter uses the final Euro conversion rates set on 31/12/1998, which are used in accordance with official conversion rules.

15.7 Fake call

This program enables you to call yourself by simulating a caller number/name, ringtone, contact photo at a scheduled time. It helps you to politely escape from social situations at any time you wish. This call can be rejected by ☎ key.

Activate Activate a fake call by "**Tools\Fake call\Activate**" or by a long press of the ☎ key in idle screen. The call will then be made at the predetermined time.

Settings Predefined settings of Caller name/number, Call time, Ringtone, Image (Contact photo).

15.8 Stopwatch

The stopwatch is a simple application for measuring time with the possibility to register several results and suspend/resume measurement.

16 Java.....

Your Alcatel phone may include ⁽¹⁾ some Java™ applications and games. You can also download new applications and games to your phone.

16.1 Java applications

Select "**Java applications**" to launch applications.

16.2 Java settings

This menu allows you to manage Java settings, in which you may set Audio, Backlight, Vibration and Heap size.

16.3 Java network

This menu allows you to select the network for Java.

16.4 Trusted certificates

View detailed information of the trusted certificates supported by your phone.

⁽¹⁾ Depending on your network operator.

Disclaimer

Downloading or running applications will not damage or alter any software already in your mobile telephone designed to support Java™ technology. TCT Mobile Limited and its affiliates waive any responsibility and refuse to guarantee applications that are subsequently used, as well as for all applications not embedded in the handset upon purchase. The purchaser alone bears the risk of loss, damage or defect of the handset, or of applications/software, and generally of any damage or consequence resulting from the use of the said applications/software. In the event that the said applications/software, or the subsequent setup of any function are lost due to technical reasons resulting from the handset being replaced/ repaired, the mobile phone owner should repeat the operation and download or set up again. TCT Mobile Limited and its affiliates grant no guarantee and disclaim any responsibility if the operation cannot be repeated or cannot be performed without incurring some cost.

17 Applications

17.1 News ⁽¹⁾

It is a huge time saver providing news updates from a website in a simple form.

Once subscribed to a channel, it gives you the ability to track and manage all your favourite RSS content on your mobile phone at anytime, anywhere!

Available options:

View	Message title or message summary of a channel with URL will be shown.
Update	Refresh the content of a channel.
Create channel	Create a new channel with name and URL.
Delete	Delete the channel.
Edit	Edit the name or URL of a channel.
Update all	Refresh all channels.
Enable/Disable all auto-update	Activate auto-update or not to all channels.
Settings	Select a regular interval to retrieve updates automatically, set to show images or not, as well as Network account to connect to.

⁽¹⁾ Depending on your network operator.

17.2 Weather ⁽¹⁾

Your phone is equipped with a weather function for consulting up to 3-day forecasts of favourite cities.

To access the function from the main screen, select "**Applications\Weather**".

Press ◀▶ scroll left or right to switch the cities.



Enter "**AccuWeather.com**" to access online website, which may charge extra fee.

Available options:

More information	Search more weather information online.
Forecast	Display 3-day weather forecast.
Update	Refresh weather information.
My cities	List all my cities, you can add new city, set as default, delete the selected city, etc.
Settings	Set unit, update mode and network.

17.3 Bluetooth™

Access this feature by pressing  to enter the main menu, then selecting "**Applications\Bluetooth**".

To use your phone with a Bluetooth device, you need to proceed in two steps:

- Pair and register the device to your phone,
- Select it to use hands-free communication. Only one Bluetooth audio device (your Bluetooth headset or your Bluetooth car kit) can be connected during the communication.

Pair and register your Bluetooth device

Activate the Bluetooth feature by selecting the "**Bluetooth\Activation\On**" option. Then enter the "**Device list**" menu to search for connectable Bluetooth devices and select the device you want to be paired with in the list. If the bluetooth device has no keyboard, enter its default password to register it with your phone. If the Bluetooth device has keyboard/keypad, enter the same set of password on both handset and the device to get it registered.

From the list, search for new devices, press "**Options**" to connect/disconnect, rename or delete an unconnected one from the list.



Don't forget to turn on your Bluetooth device and activate the pairing mode while pairing it with your phone.

⁽¹⁾ Depending on your network operator.

Available functions

Data transmit	Exchange files with another bluetooth device.
Handle a call	Initiate or receive a phone call with a Bluetooth headset.
Listen to music	Support A2DP profile.
PBAP (Phonebook access profile)	Make contacts in Directory & Call log easily accessible and even directly operated on car kit or Bluetooth headset if PBAP supported.
Visibility	Select whether you want to hide ("off") or show to all ("on") your phone.
My phone's name	You may change your phone name, which is visible to the others.



Always activate Bluetooth in your phone first before connecting it to a Bluetooth device. Be aware that Bluetooth activation will slightly affect battery life of your phone.

Bluetooth technology allows free wireless connections between all Bluetooth-compliant devices within short range. Please make sure that the Bluetooth headset or the Bluetooth car kit and your mobile phone are in this range and set as "On" of Visibility.

Your phone is Bluetooth™ v1.1, v1.2, v2.0 and v2.1 compatible.

17.4 WAP

17.4.1 Homepage

Launch the WAP browser with the preset homepage.

17.4.2 Bookmarks

Access your favourite sites.

17.4.3 Recent pages

Pages which you recently browsed.

17.4.4 Offline pages

Pages available for offline viewing.

17.4.5 Go to URL

Enter the URL of Wap site.

17.4.6 Service inbox

Store WAP push messages.

17.4.7 Settings

Customise your browser preferences.

17.5 Services

Contact your network operator to check service availability.

18 Profiles.....



With this menu, you may personalise ringtones for different events and environments.

18.1 General

To modify the sound settings within any profile, press **"Options"** and select **"Edit"** and you will see the functions below by scrolling up/down Volume key:

Ringtone	Select a melody from the list by scrolling up and down the Volume key then confirm by pressing "Options\Select" .
Mode	You may set your phone ringtone to Normal, Vibration (all sounds are replaced by vibrations except for alarms), Vibration and Melody, Vibration then Melody, Discreet (beep then ring), Beep and Vibration, Silence (no sounds except for alarms, the 📵 icon will be displayed).
Volume	Adjust the volume using the up/down key.
Key beep	Select the type of key beep.
Message beep	Select a melody for a new incoming message.
Power on beep	Select a Power on melody for your phone.
Power off beep	Select a Power off melody for your phone.

18.2 Meeting

When this is selected the phone will not ring or beep unless an alarm has been set. A new event will cause it to vibrate.

18.3 Outdoor

It is a profile designed for outdoor users who require louder ringtones.

18.4 Indoor

Ringtone/beep volume will be slightly lower than General mode volume.

18.5 Silence

This profile will turn off all ringtones, including notification sounds.

18.6 Flight mode

Voice calls, Bluetooth and messaging functions are barred. Can be used to increase standby duration.

19 File manager



You will have access to all audio and visual files stored in phone or memory card in File manager.

19.1 My audios

Choose an audio file for an incoming call ringtone, a message alert beep, power on/off ringtone, contact ID tone or an alarm.

The "My audios" album contains the following folders ⁽¹⁾:

- Music: full track music.
- Melodies: melodies that can be set as ringtone.
- Recorded: all recorded sounds.
- General: contains all audio files stored in phone or memory card.



DRM: Digital Rights Management feature allows sounds and images to be played while protecting the associated copyright. DRM counter-based files and files with expired rights will not be automatically played when scrolling the list.

⁽¹⁾ The embedded folder names cannot be modified. However, in certain cases, you can modify, delete and add items included in these folders.

19.2 My images

You can select an image or a photo as wallpaper, ON/OFF screen, or Incoming call image.



The images will be displayed in alphabetical order.

19.3 My photos

This feature stores all the photos captured by your mobile phone.

19.4 My videos

"My videos" album contains video clips recorded, received or downloaded

19.5 Other files

A folder contains all downloaded unsupported file.

19.6 Phone

An access point for all files in all folders stored in phone.


19.7 Memory card

You can access all files stored in the memory card here.



When a memory card is inserted for the first time, it will be scanned and default folders will be created.

Inserting the memory card:

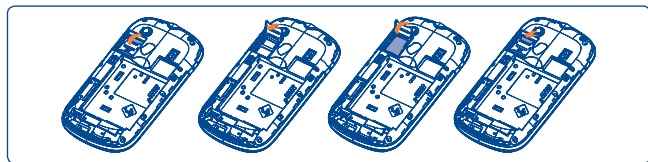

To release the microSD card holder, slide it in the direction of the arrow and lift it. Then insert the microSD card with the golden contact downward. Finally, turn down the microSD holder and slide it in the opposite direction to lock it.

Available options

Open	Open a folder.
Create folder	Create more folders.
Empty folder	Delete all files in one folder.
Memory card	To format or to query its memory status.

19.8 Memory status

Indicates how much space is used and how much is currently free on your phone and memory card (if any).

Phone

View available memory space.

Your phone's memory is shared among several functions: directory, calendar, messages, images, melodies, games and video clips.

Memory card (MicroSD card)

View the memory available on your MicroSD card.

You are advised to save large files (like songs) on your microSD card.

19.9 Managing audios, images, videos and others

According to the item chosen, you can access some of the functions below:

View	View the selected image.
Play	Play the selected video/audios.
Send ⁽¹⁾	Send the audio/image/video/Java.
Delete	Delete the audio/image/video selected (not applicable for embedded items).

⁽¹⁾ Some DRM files can not be sent.

Set as	<ul style="list-style-type: none"> • Image→Wallpaper, Power on/off, Incoming call image. • Sound→Ringtone, Message beep, Power on/off, assign it to a contact.
Mark/Unmark	<p>Mark/Unmark a tick on a file for further operation.</p> <p>Select "Mark all" on Mark menu to mark all directly.</p>
Download	Download new items.
Rename	Rename the audio/image/video.
Sort	Sort the files by name, type and size.
Move to phone/ memory card	Move a file to the phone memory or the memory card.
Install	Install downloaded Java applications.
Properties	Display part of the ID3 Tag content of an MP3 file.
Activate	DRM file option.
Copy to phone/ memory card	Copy a file to the phone memory or the memory card.

19.10 Formats and compatibility ⁽¹⁾

- Sounds: mp3, m4a, aac, midi, wav, amr
- Images: jpg, gif
- Videos: 3gp, mp4

⁽¹⁾ Depending on phone and market.

20 Making the most of your mobile.....

20.1 PC suite

You can download software upgrade for free from the website. The PC suite includes:

- **Backup/restore**
You can backup the important data in your mobile and restore them when needed.
- **GPRS Modem**
Use your mobile phone to connect PC to the internet.
- **Multimedia Personalization**
Customize your mobile with images, animations and melodies.
- **Messaging**
You can compose SMS/MMS easily on your PC and transfer them to your phone.

Supported Operating Systems

Windows XP/Vista/Windows 7.

20.2 One Touch Upgrade

Using One Touch Upgrade tool you can update your phone's software from your PC.

Download One Touch Upgrade from ALCATEL website (www.alcatelonetouch.com) and install it on your PC. Launch the tool and update your phone by following the step by step instructions (refer to the User Guide provided together with the tool).

Your phone's software will now have the latest software.



All personal information will be permanently lost following the update process. We recommend you backup your personal data using PC Suite before upgrading.

20.3 Webcam⁽¹⁾

You can use your phone as a webcam for instant messaging on your PC.


- Connect your phone to PC via USB cable.
- Go to "**My computer**" folder on your PC and find USB video device (Under Scanners & Cameras).

⁽¹⁾ The using of webcam may vary according to the operating system of your PC.


2 | Latin input mode/ character table


To write messages, there are two writing methods:

- Normal: this mode allows you to type a text by choosing a letter or a sequence of characters associated with a key.
- Predictive with the Zi mode: This mode speeds up the writing of your text.

Fn key  : Press once: input top-half character, Press twice: lock top-half character inputting mode, then press once to unlock top-half character inputting mode.

Sym key  : Short keypress: access the Symbols table

Space key  : Short press: input space
Long press: switch language
Fn+Space: switch input mode

Shift key  : In abc (Multitapabc) input mode (no Abc mode):
Short press once: only switch one character from minuscule to uppercase
Short press twice: lock uppercase input mode
Short press once: unlock the uppercase
In eZiabc (Smartabc) input mode:
Short press once: to eZi Abc
Short press twice: to eZi ABC

Del key  : Short keypress: delete one by one
Long keypress: delete one by one quickly

22 Telephone warranty.....

Your phone is warranted against any defect or malfunctioning which may occur in conditions of normal use during the warranty period of twelve (12) months ⁽¹⁾ from the date of purchase as shown on your original invoice.

Batteries ⁽²⁾ and accessories sold with your phone are also warranted against any defect which may occur during the first six (6) months ⁽¹⁾ from the date of purchase as shown on your original invoice.

In case of any defect of your phone which prevents you from normal use thereof, you must immediately inform your vendor and present your phone with your proof of purchase.

If the defect is confirmed, your phone or part thereof will be either replaced or repaired, as appropriate. Repaired Phone and accessories are entitled to a one ⁽¹⁾ month warranty for the same defect. Repair or replacement may be carried out using reconditioned components offering equivalent functionality.

This warranty covers the cost of parts and labor but excludes any other costs.

This warranty shall not apply to defects to your phone and/or accessory due to (without any limitation):

⁽¹⁾ The warranty period may vary depending on your country.

⁽²⁾ The life of a rechargeable mobile phone battery in terms of conversation time standby time, and total service life, will depend on the conditions of use and network configuration. Batteries being considered expendable supplies, the specifications state that you should obtain optimal performance for your phone during the first six months after purchase and for approximately 200 more recharges.

- 1) Non-compliance with the instructions for use or installation, or with technical and safety standards applicable in the geographical area where your phone is used,
- 2) Connection to any equipment not supplied or not recommended by TCT Mobile Limited,
- 3) Modification or repair performed by individuals not authorised by TCT Mobile Limited or its affiliates or your vendor,
- 4) Inclement weather, lightning, fire, humidity, infiltration of liquids or foods, chemical products, download of files, crash, high voltage, corrosion, oxidation...

Your phone will not be repaired in case labels or serial numbers (IMEI) have been removed or altered.

There are no express warranties, whether written, oral or implied, other than this printed limited warranty or the mandatory warranty provided by your country or jurisdiction.

In no event shall TCT Mobile Limited or any of its affiliates be liable for indirect, incidental or consequential damages of any nature whatsoever, including but not limited commercial or financial loss or damage, loss of data or loss of image to the full extent those damages can be disclaimed by law.


Some countries/states do not allow the exclusion or limitation of indirect, incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

23 Accessories ⁽¹⁾.....

The latest generation of Alcatel GSM mobile phones offers a built-in handsfree feature that allows you to use the telephone from a distance, placed on a table for example. For those who prefer to keep their conversations confidential, an earpiece is also available known as the headset.



Standard charger



Battery



USB cable



Stereo headset




Only use your telephone with Alcatel batteries, chargers and accessories in your box.

⁽¹⁾ Images for reference only.

24 Troubleshooting

Before contacting the service centre, you are advised to follow the instructions below:


- You are advised to fully charge () the battery for optimal operation.
- Avoid storing large amounts of data in your phone as this may affect its performance.
- Use User Data Format and the One Touch Upgrade tool to perform phone formatting or software upgrading, (to perform User Data format, hold down # while simultaneously pressing the power on/off key). ALL User phone data: contacts, photos, messages and files, downloaded applications like Java games will be lost permanently. It is strongly advised to fully backup the phone data and profile via PC suite before doing formatting and upgrading.

and carry out the following checks:

My phone cannot switch on

- Check the battery contacts, remove and reinstall your battery, then turn your phone on
- Check the battery power level, charge for at least 20 minutes
- If it still does not work, please use User Data Format to reset the phone or One Touch Upgrade to upgrade software

My phone is frozen or has not responded for several minutes

- Restart your phone by pressing and holding the  key
- Remove the battery and re-insert it, then restart the phone
- If it still does not work, please use User Data Format to reset the phone or One Touch Upgrade to upgrade software

My phone turns off by itself

- Check that your keypad is locked when you are not using your phone, and make sure power off key is not mis-contacted due to unlocking keypad.

- Check the battery charge level
- If it still does not work, please use User Data Format to reset the phone or One Touch Upgrade to upgrade software

My phone cannot charge properly

- Make sure you are using an Alcatel battery and the charger from the box
- Make sure your battery is inserted properly and clean the battery contact if it's dirty. It must be inserted before plugging in the charger
- Make sure that your battery is not completely discharged; if the battery power is empty for a long time, it may take around 20 minutes to display the battery charger indicator on the screen
- Make sure charging is carried out under normal conditions (0°C to +40°C)
- When abroad, check that the voltage input is compatible

My phone cannot connect to a network or “No service” is displayed

- Try connecting in another location
- Verify the network coverage with your operator
- Check with your operator that your SIM card is valid
- Try selecting the available network(s) manually (see page 51)
- Try connecting at a later time if the network is overloaded


My phone cannot connect to the Internet

- Check that the IMEI number (press *#06#) is the same as the one printed on your warranty card or box
- Make sure that the internet access service of your SIM card is available
- Check your phone's Internet connecting settings
- Make sure you are in a place with network coverage
- Try connecting at a later time or another location

Invalid SIM card

- Make sure the SIM card has been correctly inserted (see page 14)
- Make sure the chip on your SIM card is not damaged or scratched
- Make sure the service of your SIM card is available

Unable to make outgoing calls

- Make sure you have dialed a valid number and press the  key
- For international calls, check the country and area codes
- Make sure your phone is connected to a network, and the network is not overloaded or unavailable
- Check your subscription status with your operator (credit, SIM card valid, etc.)
- Make sure you have not barred outgoing calls (see page 49)
- Make sure that your phone is not in flight mode

Unable to receive incoming calls

- Make sure your phone is switched on and connected to a network (check for overloaded or unavailable network)
- Check your subscription status with your operator (credit, SIM card valid, etc.)
- Make sure you have not forwarded incoming calls (see page 49)
- Make sure that you have not barred certain calls
- Make sure that your phone is not in flight mode



The caller's name/number does not appear when a call is received

- Check that you have subscribed to this service with your operator
- Your caller has concealed his/her name or number

I cannot find my contacts

- Make sure your SIM card is not broken
- Make sure your SIM card is inserted properly
- Import all contacts stored in SIM card to phone

The sound quality of the calls is poor

- You can adjust the volume during a call by pressing the  key
- Check the network strength 
- Make sure that the receiver, connector or speaker on your phone is clean

I am unable to use the features described in the manual

- Check with your operator to make sure that your subscription includes this service
- Make sure this feature does not require an Alcatel accessory

When I select a number from my contacts, the number cannot be dialed

- Make sure that you have correctly recorded the number in your file
- Make sure that you have inputted the country prefix when calling a foreign country

I am unable to add a contact in my contacts

- Make sure that your SIM card contacts are not full; delete some files or save the files in the phone contacts (i.e. your professional or personal directories)

My callers are unable to leave messages on my voicemail

- Contact your network operator to check service availability

I cannot access my voicemail

- Make sure your operator's voicemail number is correctly entered in "My numbers"
- Try later if the network is busy

I am unable to send and receive MMS

- Check your phone memory availability as it might be full
- Contact your network operator to check service availability and check MMS parameters (see page 33)
- Verify the server centre number or your MMS profile with your operator
- The server centre may be swamped, try again later

The flickering  icon is displayed on my standby screen

- You have saved too many short messages on your SIM card; delete some of them or archive them in the phone memory

SIM card PIN locked

- Contact your network operator to obtain the PUK code (Personal Unblocking Key)

I am unable to connect my phone to my computer

- Install Alcatel's PC suite first of all
- Check that your computer meets the requirements for Alcatel's PC Suite installation

I am unable to download new files

- Make sure there is sufficient phone memory for your download
- Select the Micro-SD card as the location to store downloaded files
- Check your subscription status with your operator

The phone cannot be detected by others via Bluetooth

- Make sure that Bluetooth is turned on and your phone is visible to other users
- Make sure that the two phones are within Bluetooth's detection range

How to make your battery last longer

- Make sure you follow the complete charge time (minimum 3 hours)
- After a partial charge, the battery level indicator may not be exact. Wait for at least 20 minutes after removing the charger to obtain an exact indication
- Switch on the backlight upon request
- Extend the email auto-check interval for as long as possible
- Update news and weather information on manual demand, or increase their auto-check interval
- Exit background-running Java applications if they are not being used for a long time
- Deactivate Bluetooth when not in use

ALCATEL is a trademark of Alcatel-Lucent
and is used under license by
TCT Mobile Limited.

All rights reserved © Copyright 2011
TCT Mobile Limited.

TCT Mobile Limited reserves
the right to alter material or technical
specification without prior notice.