

Mobile Phone User Manual

LEGAL INFORMATION

Copyright © 2012 SMTX

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of SMTX Corporation.

SMTX Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice.

Version No.: R1.0

Contents

| | |
|---|-----------------|
| <u>For Your Safety.....</u> | <u>8</u> |
| <u>General Safety.....</u> | <u>8</u> |
| <u>Driving.....</u> | <u>9</u> |
| <u>Operating Machinery.....</u> | <u>9</u> |
| <u>Product Handling.....</u> | <u>9</u> |
| <u>General Statement on Handling and Use.....</u> | <u>9</u> |
| <u>Small Children.....</u> | <u>11</u> |
| <u>Demagnetization.....</u> | <u>11</u> |
| <u>Electrostatic Discharge (ESD).....</u> | <u>11</u> |
| <u>Antenna.....</u> | <u>11</u> |
| <u>Normal Use Position.....</u> | <u>11</u> |
| <u>Air Bags.....</u> | <u>12</u> |
| <u>Seizures/ Blackouts.....</u> | <u>12</u> |
| <u>Repetitive Motion Injuries.....</u> | <u>12</u> |
| <u>Emergency Calls.....</u> | <u>12</u> |
| <u>Loud Noise.....</u> | <u>13</u> |
| <u>Phone Heating.....</u> | <u>13</u> |
| <u>Electrical Safety.....</u> | <u>13</u> |
| <u>Accessories.....</u> | <u>13</u> |
| <u>Connection to a Car.....</u> | <u>13</u> |
| <u>Faulty and Damaged Products.....</u> | <u>13</u> |
| <u>Interference</u> | <u>14</u> |
| <u>General Statement on Interface.....</u> | <u>14</u> |
| <u>Pacemakers.....</u> | <u>14</u> |
| <u>Hearing Aids.....</u> | <u>14</u> |

| | |
|--|-----------|
| Medical Devices..... | 15 |
| Hospitals..... | 15 |
| Aircraft..... | 15 |
| Interference in Cars..... | 15 |
| Explosive Environments..... | 16 |
| Petrol Stations and Explosive Atmospheres..... | 16 |
| Blasting Caps and Areas..... | 16 |
| Getting Started..... | 17 |
| Overview..... | 17 |
| Keys Explained | 18 |
| Starting up..... | 18 |
| Installing the SIM/SD Card and Battery..... | 18 |
| Removing the Battery and SIM/SD Card..... | 20 |
| Charging the Battery..... | 21 |
| Switching Your Phone On/Off | 21 |
| Setting Up Your Phone for the First Time | 21 |
| Switching to Sleep Mode..... | 22 |
| Waking Up Your Phone..... | 22 |
| Getting Around Your Phone..... | 22 |
| Touch Control..... | 22 |
| Home Screen..... | 23 |
| Status and Notification Icons..... | 24 |
| Using the Notification Panel..... | 25 |
| Phone Calls..... | 25 |
| Making Calls..... | 25 |
| Calling from the Phone..... | 26 |













| | |
|--|-----------|
| Calling from Your Contacts..... | 26 |
| Calling from Your Call Log..... | 26 |
| Calling from a Text Message..... | 27 |
| Receiving Calls..... | 27 |
| Answering a Call..... | 27 |
| Rejecting a Call..... | 27 |
| Muting a Call..... | 27 |
| Turning the Speakerphone On/Off..... | 28 |
| Ending a Call..... | 28 |
| Contacts..... | 28 |
| Creating a Contact..... | 28 |
| Searching for a Contact..... | 28 |
| Messaging..... | 29 |
| The Message Box..... | 29 |
| Sending an Message..... | 29 |
| Message Settings..... | 30 |
| Touch Input Settings..... | 30 |
| Getting Connected to the Internet | 30 |
| Adding a New Network Connection..... | 31 |
| Turning On Wi-Fi | 31 |
| Connecting to a Wi-Fi Network..... | 31 |
| Checking the Wi-Fi Network Status..... | 32 |
| USB tethering & portable hotspot..... | 32 |
| Enabling USB tethering | 32 |
| Disabling USB tethering..... | 33 |
| Enabling the Wi-Fi Hotspot..... | 33 |






| | |
|---|-----------|
| Disabling the Wi-Fi Hotspot..... | 34 |
| Browsing the Internet..... | 34 |
| Browsing Options..... | 34 |
| Using Bookmarks..... | 35 |
| Editing a Bookmark..... | 35 |
| Deleting a Bookmark..... | 35 |
| Changing Browser Settings..... | 35 |
| Bluetooth..... | 36 |
| Making the Most of Multimedia..... | 36 |
| Taking Pictures with Your Camera..... | 36 |
| Listening to Your FM Radio..... | 37 |
| Playing Your Music..... | 37 |
| Opening Your Gallery..... | 38 |
| Making Voice Memos..... | 38 |
| Using Your Google Applications..... | 38 |
| Gmail..... | 39 |
| Places..... | 39 |
| Latitude..... | 40 |
| Sorting out Your Phone Settings..... | 40 |
| Setting Date and Time..... | 40 |
| Display Settings..... | 40 |
| Sound Settings..... | 41 |
| Language Settings..... | 41 |
| Disabling Data Services..... | 41 |
| Switching Network Modes..... | 41 |

| | |
|--|-----------|
| Switching Networks..... | 41 |
| Security Settings..... | 42 |
| Protecting Your Phone with a Pattern..... | 42 |
| Protecting Your Phone with a PIN or Password..... | 43 |
| Disabling Screen Unlock Security..... | 43 |
| Protecting Your SIM Card with a PIN..... | 44 |
| Managing Your Device Memory..... | 45 |
| Privacy: Reset to Factory Settings..... | 45 |
| Applications..... | 45 |
| Installing an Application..... | 46 |
| Removing an Application..... | 46 |
| Moving an Application..... | 46 |
| Managing Other Settings..... | 47 |
| Text-to-speech Output..... | 47 |
| Accessibility..... | 47 |
| Other Applications..... | 48 |
| Clock..... | 48 |
| Calculator..... | 48 |
| FCC RF Exposure Information and Statement.... | 49 |
| Battery Tips..... | 54 |
| Product Maintenance..... | 57 |

For Your Safety

General Safety

| | | | |
|---|---|--|---|
|  | Don't make or receive handheld calls while driving. And never text while driving. |  | Don't use at petrol stations. |
|  | Keep your phone at least 15 mm away from your ear or body while making calls. |  | Your phone may produce a bright or flashing light. |
|  | Small parts may cause a choking. |  | Don't dispose of your phone in fire. |
|  | Your phone can produce a loud sound. |  | Avoid contacting with anything magnetic. |
|  | Keep away from pacemakers and other electronic medical devices. |  | Avoid extreme temperatures. |
|  | Switch off when asked to in hospitals and medical facilities. |  | Avoid contacting with liquids. Keep your phone dry. |

| | | | |
|--|--|---|--------------------------------|
|  | Switch off when told to in aircrafts and airports. |  | Don't take your phone apart. |
|  | Switch off when near explosive materials or liquids. |  | Only use approved accessories. |
|  | Don't rely on your phone for emergency communications. | | |

Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands free kit) can cause distraction and lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

Operating Machinery

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

Product Handling

General Statement on Handling and Use

You alone are responsible for how you use your phone and any consequences of its use.

You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

- Always treat your phone and its accessories with care and keep it in a clean and dust-free place.
- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture or high humidity.
- Do not drop, throw or try to bend your phone or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories, only authorized personnel can do so.
- Do not expose your phone or its accessories to extreme temperatures, minimum - [5] and maximum + [50] degrees Celsius.
- The phone's normal operating temperature is -20°C ~ 60°C .In order to ensure the normal phone functions, do not use this phone outside the temperature range.
- Please check local regulations for disposal of electronic products.
- Do not carry your phone in your back pocket as it could

break when you sit down.

Small Children

Do not leave your phone and its accessories within the reach of small children or allow them to play with it.

They could hurt themselves or others, or could accidentally damage the phone.

Your phone contains small parts with sharp edges that may cause an injury or may become detached and create a choking hazard.

Demagnetization

To avoid the risk of demagnetization, do not allow electronic devices or magnetic media close to your phone for a long time.

Electrostatic Discharge (ESD)

Do not touch the SIM card's metal connectors.

Antenna

Do not touch the antenna unnecessarily.

Normal Use Position

When placing or receiving a phone call, hold your phone to your ear, with the bottom towards your mouth.

Air Bags

Do not place a phone in the area over an air bag or in the air bag deployment area.

Store the phone safely before driving your vehicle.

Seizures/ Blackouts

The phone can produce a bright or flashing light.

Repetitive Motion Injuries

To minimize the risk of RSI when texting or playing games with your phone:

- Do not grip the phone too tightly.
- Press the buttons lightly.
- Use the special features which are designed to minimize the times of pressing buttons, such as Message Templates and Predictive Text.
- Take lots of breaks to stretch and relax.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

Loud Noise

This phone is capable of producing loud noises, which may damage your hearing. Turn down the volume before using headphones, Bluetooth stereo headsets or other audio devices.

Phone Heating

Your phone may become warm during charging and during normal use.

Electrical Safety

Accessories

Use only approved accessories.

Do not connect with incompatible products or accessories.

Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit in the battery terminals.

Connection to a Car

Seek professional advice when connecting a phone interface to the vehicle electrical system.

Faulty and Damaged Products

Do not attempt to disassemble the phone or its accessory.

Only qualified personnel can service or repair the phone or its accessory.

If your phone or its accessory has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service centre.

Interference

General Statement on Interface

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hearing Aids

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby.

The level of interference will depend on the type of hearing

device and the distance from the interference source, increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

Medical Devices

Please consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

Hospitals

Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

Aircraft

Switch off your wireless device whenever you are instructed to do so by airport or airline staff.

Consult the airline staff about the use of wireless devices on board the aircraft. If your device offers a 'flight mode', this must be enabled prior to boarding an aircraft.

Interference in Cars

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a hands-

free kit with an external antenna is included in the installation.

Explosive Environments

Petrol Stations and Explosive Atmospheres

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment.

Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

Blasting Caps and Areas

Power off your mobile phone or wireless device when in a blasting area or in areas posted power off “two-way radios” or “electronic devices” to avoid interfering with blasting operations.

Getting Started

Overview



Keys Explained

| Key | Function |
|-------------|--|
| Power Key | <ul style="list-style-type: none">• Hold to switch audio profiles, or to turn on or off Airplane mode, or to power off.• Press to switch your phone to Sleep mode.• Press to wake up your phone. |
| Home Key | <ul style="list-style-type: none">• Press to return to the Home Screen from any application or screen.• Hold to see recently used applications. |
| Menu Key | Press to get the options for the current screen. |
| Back Key | Press to go to the previous screen. |
| Volume Keys | Press or hold to turn the volume up or down. |

Starting up


Installing the SIM/SD Card and Battery

Switch off your phone before installing or replacing the battery, SIM, or memory card.

1. Remove the back cover.



2. Hold the SIM card with the cut corner oriented as shown and slip it into the card holder.

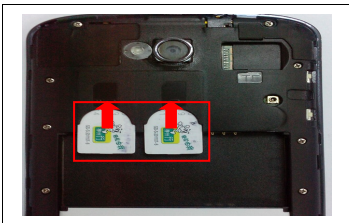

3. Insert the memory card into the metal slot with the metal contacts facing down until it clicks to the right position.



4. Insert the battery by aligning the gold contacts on the battery with the gold contacts in the battery compartment. Gently push down on the battery until it clicks into place.



5. Press the cover gently back into place until you hear a click.

Removing the Battery and SIM/SD Card

1. Make sure that your mobile phone is off.
2. Remove the back cover.
3. Lift the battery up and out

4. Slide the SIM card out.
5. Slide the SD card out.

Charging the Battery

When you first get your new phone you'll need to charge the battery.

1. Connect the adapter to the charger jack. Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the charger jack.
2. Connect the charger to a standard AC wall outlet.
3. Disconnect the charger when the battery is fully charged.

Switching Your Phone On/Off

Make sure the SIM card is in your device and the battery is charged.

- Hold **Power Key** to switch on your phone.
- To switch it off, hold **Power Key** to get the phone options. Select **Power off**, and then tap **OK**.

Setting Up Your Phone for the First Time

When you first power on your phone after you purchase it or reset it to factory settings (see chapter *Sorting out Your Phone Settings – Privacy: Reset to Factory Settings*), you need to do some settings before using it.

Tap **Menu Key** in the standby mode, then select **System**


settings > Language & input > language to change the language you want to use, if needed.

Switching to Sleep Mode

To save battery power, Sleep Mode suspends your device to a low-power-consumption state while the display is off. Your device also goes into Sleep Mode by itself when the display is automatically turned off after a certain period of time. You can start sleep mode by the following method.

Press **Power Key** to switch to Sleep Mode.

Waking Up Your Phone

1. Press **Power Key** to activate your screen display.
2. Drag the  icon to the right.

NOTE: If you have set an unlock pattern, PIN or password for your phone (see chapter *Sorting out Your Phone Settings – Security Settings*) you'll need to draw the pattern or enter the PIN/password to unlock your screen.

Getting Around Your Phone

Touch Control

You can use finger gestures to control your phone. The controls on your touch-screen change dynamically depending on the tasks you're performing.

1. Tap the buttons, icons, or applications to select items or to open applications.
2. Flick the screen to scroll up, down, left or right.
3. Point, drag and drop to move particular items across the screen.
4. Double-tap the screen to zoom in/out an image.

NOTE: You can view the phone screen in portrait or landscape orientation simply by holding it upright or turning it on its side. Not all screens are viewable in landscape.

Home Screen

In the Home screen, besides the shortcut icon is displayed, you can also set your own wallpaper, add the widgets or application shortcuts you need, or remove them as you like.

Extended Home Screen

The Home Screen extends beyond the screen width, giving you loads more space to add more stuff. Simply slide your finger to the left or right.


Choosing Your Wallpaper Press Home Key to return to the Home Screen.

5. Tap **Menu Key** and select **Wallpaper**.
6. Tap **Gallery, Live Wallpapers, Video Wallpaper, or Wallpapers** and choose the image or animation you want to use as the wallpaper. Some cropping may be

needed for Gallery images.

7. Tap **Set wallpaper**.

Adding Items to Your Home Screen



1. Press **Home Key** > tap  to enter the Application Program Interface
2. In the list of applications, touch and hold the icon until its vibration, when the main screen appears, move the application icon to the idle position, release the finger.






Removing Items from Your Home Screen

1. Press **Home Key** to return to the Home Screen.
2. Tap and hold the item you want to delete until the remove icon appears on the top of the screen.
3. Drag the item to the remove icon and release your finger when the item turns red.

Status and Notification Icons

Your phone will tell you exactly what's going on by showing you simple icons. Here's what they mean.

| | | | |
|--|----------------|---|-----------------|
|  | USB connected |  | Missed call |
|  | Airplane mode |  | Signal strength |
|  | Battery charge |  | New message |
|  | Meeting mode |  | Wi-Fi network |

| | | | |
|---|----------------|---|----------------------------|
|  | Alarm set |  | Earphone insert |
|  | Silent mode |  | Signal searching |
|  | Bluetooth icon |  | USB debugging connected |
|  | Data Conn off |  | New Wi-Fi network detected |

Using the Notification Panel

Flick the status bar downwards from across the top of the screen to open the Notification Panel, where you can see your calendar events, new Messaging, and current settings – such as call forwarding or call status. From here you can also open new Messaging, reminders, etc.

Open Recently-Used Applications

1. Hold **Home Key** from any screen. The phone will display the applications you used recently.
2. Tap the application you want to open.


Phone Calls

Making Calls



There are many ways to make a call with your phone. And they're all easy to do.

Calling from the Phone

1. Press **Home key** > tap  > **Phone** or tap  on the Home Screen.
2. Enter the phone number using the on-screen keypad.
Tap  to delete wrong digits.
3. Tap the dial icon.

TIPS: To make international calls, hold  to enter the “+”.

Calling from Your Contacts


1. Press **Home key** > tap  > **People**.
2. Slide your finger to scroll the contacts list and tap the contact name you want to call, when the contact details appear, click on the number, choose the SIM card to dial.
You can search for a contact by tapping  on the bottom of the screen.

Calling from Your Call Log

1. If you have opened the dialer, touch the call log tab to open the call records, respectively touch all, dialed, received, missed call button to display a list of the corresponding call records.
2. Tap dial icon on the right side of the current record.


Calling from a Text Message

If a text message contains a phone number that you want to call, you can make the call while viewing the text message.


1. Press **Home key** > tap  > **Messaging**.
2. Tap the conversation and then find the message that contains the phone number you need.
3. Tap the message, the phone will list the options.

Receiving Calls

Answering a Call



Drag the  icon to right to answer the call.

Rejecting a Call



Drag the  icon to left to reject the call.

Muting a Call


During a call, you can mute your microphone so that the person you are speaking to cannot hear you, but you can still hear them.

Tap  to turn your microphone off. To turn your microphone back on, tap  again.

Turning the Speakerphone On/Off

Tap  during a call to turn the speakerphone on. Tap  again to turn off the speakerphone.

Ending a Call


Tap  to finish a call.

Contacts


You can add contacts on your phone and synchronize them with the contacts in your Google account or other accounts that support contact syncing.

To see your contacts, Press **Home key** > tap  > **People**.


Creating a Contact

1. Tap  from the Contacts Screen.
2. Choose the storage location to save the contact.
3. Enter the contact name, phone numbers, and other information, and then save it.

Searching for a Contact

1. Tap  on the bottom of the Contacts Screen.
 2. Input the contact name you want to search for.
- The contacts matched will be listed.





Messaging

Your SMS (text message) and MMS (multimedia messaging service) are combined into one menu in **Home Key** >  > **Messaging**.

The Message Box

Instead of an inbox and outbox, your phone organizes all Messaging you sent and received into one box, where Messaging exchanged with the same number are grouped into one message thread in the Messaging Screen. You can tap a thread to see the conversation you have had with someone.

Sending an Message

1. Press **Home key** > tap  > **Messaging**.
2. Tap  to create new message.
3. Enter the recipient's number or name. As you type, matching contacts will appear. Tap a suggested contact to add as a recipient. You can also tap  to select recipients from the contacts.
4. Tap **Type message** and type your message.
 - Tap **Menu Key** to insert quick text, smiley, or contact.
 - If you are sending an MMS, tap **Menu Key** to add a subject, or tap  to attach pictures, videos, audio, or

slideshow.

5. Tap ➤ to send your message.

NOTE: Add an attachment to text message and it will be converted into an MMS automatically. Likewise if you remove all attachments and the subject from an MMS, it'll automatically become a text message.

Message Settings

The phone's message settings are pre-configured for you to use immediately. To change them, tap **Menu Key > Settings** from the Messaging Screen.

NOTE: From SMS settings screen tap **Menu Key > Restore default settings** to change all the message settings back to the original.

Touch Input Settings

Choose the touch input settings by tapping **Menu Key > System settings > Language & input** from Home Screen.

In the **KEYBOARD & INPUT METHODS** section, you can choose the settings that you need.

Getting Connected to the Internet

Your phone's impressive networking capabilities allow you to access the Internet or your corporate network with ease.

You can use default connection settings to connect to the


Internet via your mobile network, or Wi-Fi.

The network connection can be enabled /disabled manually.

Just press **Home key** > tap  > **Settings** > **SIM management** > **Data connection** from the Home Screen. You can according to the need to set.




Adding a New Network Connection

To get connected via your mobile network you need a data plan with your service provider. Also if the networks settings are not pre-configured on your phone, please contact your provider to get the necessary information.

You can view settings by pressing **Home key** > tap  > **Settings** > **More (WIRELESS & NETWORKS)** > **Mobile networks** > **Access Point Names**.

Turning On Wi-Fi

Wi-Fi provides wireless Internet access over distances of up to about 300 feet.

1. Press **Home key** > tap  > **Settings**.
2. Click  next to the Wi-Fi menu to turn it on, click  you can turn off the Wi-Fi function.

Connecting to a Wi-Fi Network

1. Press **Home key** > tap  > **Settings** > **Wi-Fi**.

When the WLAN is on, the Wi-Fi access points, or “hotspots”, that your phone has detected are displayed with their names and security settings.

2. Tap an access point to connect to it.

NOTE: If security features are implemented, you'll need to enter a password.

Checking the Wi-Fi Network Status

You can check the Wi-Fi network by looking at the  icon in the status bar.

USB tethering & portable hotspot

Share your phone's data connection via USB or as a portable Wi-Fi hotspot.

Enabling USB tethering

TIPS: The PC accesses the Internet via the phone's mobile network. Therefore, set up the networks connection correctly before you try to use the phone as a modem.

Press **Home Key** > tap **Menu Key** > **System settings** > **More (WIRELESS & NETWORKS)** > **Tethering & portable hotspot** and tick the **USB tethering** check box.

Disabling USB tethering

Press **Home Key** > tap **Menu Key** > **System settings** > **More (WIRELESS & NETWORKS)** > **Tethering & portable hotspot** and clear the **USB tethering** check box.

You can also just pull out the USB cable.

Enabling the Wi-Fi Hotspot

You can use the phone as a portable WLAN router, to share your phone's internet connection with one or more PC or other devices.

NOTE:


- When the portable Wi-Fi hotspot function is enabled, you can't use your phone's applications to access the internet via its Wi-Fi connection.
- You can configure the Wi-Fi hotspot as follows:
 1. Press **Home Key** > tap **Menu Key** > **System settings** > **More (WIRELESS & NETWORKS)** > **Tethering & portable hotspot** and tick the **Portable Wi-Fi hotspot** check box.
 2. Tap **Configure Wi-Fi hotspot** to set up & manage portable Wi-Fi hotspot.
 3. Tap **Save**. Now you can find the hotspot on other devices and connect to it.

Disabling the Wi-Fi Hotspot


Press **Home Key** > tap **Menu Key** > **System settings** > **More (WIRELESS & NETWORKS)**> **Tethering & portable hotspot** and clear the **Portable Wi-Fi hotspot** check box.

Browsing the Internet

You can use your phone to get on the Internet via a network or Wi-Fi connection.

Press **Home Key** > tap  > **Browser**.

There are different ways to open web pages:

- Tap the address bar to enter the website you want to browse. Then tap  on the touch keyboard.
- Tap **Menu Key** > **Bookmarks/History** and select a bookmark or history to open.

Browsing Options

When you browse the Web, you can also do the following:
Press **Menu Key** > **Close** and select **Quit** to exit.

- Press **Menu Key** > **Bookmarks/History** and select a bookmark or history to open.
- Press **Menu Key** > **Settings** to configure browser settings.

Using Bookmarks

If you know the Web address, you can manually add bookmarks. To bookmark a web page, open it and tap **Menu Key > Save to bookmarks**. Give the bookmark a name and save it.

Editing a Bookmark

1. Open a Browser window.
2. Tap **Menu Key > Bookmarks/History**.
3. Select an item you want to edit and hold on it until the shortcut menu pops up.
4. Select **Edit bookmark**.
5. Edit the name or location, and then tap **Ok** to save it.

Deleting a Bookmark




1. Open a Browser window.
2. Tap **Menu Key > Bookmarks/History**.
3. Select an item you want to delete and hold on it until the shortcut menu pops up.
4. Select **Delete bookmark** and tap **OK** to confirm.

Changing Browser Settings

Tap **Menu Key > Settings** from a browser window to change browser settings.

Bluetooth


Bluetooth is a short-range wireless communication technology. Phones or other devices with Bluetooth capabilities can exchange information wirelessly within a distance of about 10 meters. The Bluetooth devices must be paired before the communication is performed.

1. Press **Home Key** > tap  **Settings**.
2. Click  next to the Bluetooth menu to turn it on, When Bluetooth is on, the  icon will appear in the status bar.
3. Tap **Bluetooth**. Your phone will show all visible Bluetooth devices in range.
4. Tap the device you want to pair with and operate according to the message prompt.
When the owner of the device to be paired accept the connection, the pairing is completed.

TIPS: Tap your device name to make your phone discoverable if other devices try to pair with your phone.

Making the Most of Multimedia


Taking Pictures with Your Camera

Your phone has camera function. Open it by pressing **Home Key** > tap  > **Camera**.

Tap  to take a shot. To view it, just tap the picture in the right corner of the screen.


Listening to Your FM Radio

With the FM Radio, you can search for radio channels, listen to them, and save them on your phone. Note that the quality of the radio broadcast depends on the coverage of the radio station in your area. The wired headset works as an antenna, so always connect the headset when using the radio.


- To tune in, plug your headset into your phone. Press **Home key** > tap  > **FM Radio**.

Playing Your Music

You can play digital audio files from your phone's memory card in **Music**. Before playing music, you need to copy music files to memory card location.





1. Press **Home Key** > tap  > **Music** to open the Music Screen.
2. Click the Music category label > music files to start playing.
3. Adjust the volume with **Volume Keys**.

Opening Your Gallery

Press **Home Key** > tap  > **Gallery**. You can use **Gallery** to view pictures and play videos. You can also do some basic editing of your pictures – such as setting them as wallpaper or contact photo, and sharing with friends.

Making Voice Memos

Sound Recorder enables you to record your voice memos. You need a SD card to use it.

1. Press **Home Key** > tap  > **Sound Recorder**.
2. Tap  to start recording.
3. Tap  to stop recording.
4. Tap  to play back the voice recording.
5. Save the voice recording after stop, or tap **Discard** to delete the recording.

Using Your Google Applications

Signing in to your Google Account lets you synchronize Gmail, Calendar, and Contacts between your phone and the web. And if you don't have an account, you can easily create one.

1. Tap a Google application that needs a Google account, such as **Play Store**.
2. If you've got a Google account, tap **Existing**. Enter your

username and password. Then tap **Sign in**. (Or tap **New** if you don't have a Google account.)


Gmail

Gmail is a web-based email service that's configured when you sign in to your Google account. Depending on your synchronization settings, the Gmail on your phone can be automatically synchronized with your Gmail account on the web. This is how to enter Gmail:

Open **Gmail** by Pressing **Home Key** > tap  > **Gmail**.

Places

Google Places helps you find all kinds of businesses near you. Please enable GPS or wireless networks in settings application, under location settings.

1. Press **Home Key** > tap  > **Places**.
2. Select a business category and the information of that type of business near you will be displayed.
3. Tap a result you are interested in and check out the details and reviews about that place. You can also see the place on Google Maps, find out how to get there, or give that business a call.


Latitude

Google's Latitude service is a social tool for sharing your location information with selected friends. You can also find on the map the location of your friends - to see nearby friends and met with them (if necessary).


Press **Home key** > tap  > **Latitude** to enable Latitude service.

Sorting out Your Phone Settings

Setting Date and Time


1. Press **Home key** > tap  > **Settings** > **Date & time**.
2. Tap **Automatic Date & time** and select **Off** if you want to set the time and date by yourself.
3. Set date, time and change the other options.

Display Settings

Press **Home key** > tap  > **Settings** > **Display**, you can adjust the display settings as you like:

- **Brightness:** Adjust brightness of the screen.
- **Auto-rotate screen:** Rotate the screen display as you rotate the phone.
- **Sleep:** Set the delay for the screen to automatically turn off.

Sound Settings

By pressing **Home Key** > tap  > **Settings** > **Audio profiles**, you can select the profile, adjust the sound settings, such as ringtones, volume and vibrate.

Language Settings

You can change the language of your phone system in two simple steps.

1. Press **Home key** > tap  > **Settings** > **Language & input** > **language**.
2. Select a language from the list given.

Disabling Data Services

Press **Home key** > tap  > **Settings** > **SIM management** > **Data connection**, then tap **Off**.

Switching Network Modes

1. Press **Home key** > tap  > **Settings** > **More (WIRELESS & NETWORKS)** > **Mobile networks** > **3G service** > **Network Mode**.
2. Select one of the following: **GSM/WCDMA (auto mode)**, **WCDMA only**.

Switching Networks

1. Press **Home key** > tap  > **Settings** > **More**

(WIRELESS & NETWORKS) > Mobile networks > Network operators. The phone automatically searches for all available networks.

2. Tap the SIM card you want to set.
3. Tap a network to register manually, or tap **Select automatically**.

To connect to the Internet you can use the default Access Point Names (APN). And if you want to add a new APN, please contact the service provider to find out more.


Press **Home key> Menu Key > Settings > More (WIRELESS & NETWORKS) > Mobile networks > Access Point Names**.

Security Settings

Here's how to protect your phone and SIM card from unauthorized use.

Protecting Your Phone with a Pattern

Creating Your Screen Unlock Pattern

1. Press **Home key > tap  Settings > Security > Screen lock > Pattern**.
2. Read the instructions on-screen and watch the example pattern, and select **Next**.
3. Drag your finger to connect at least four dots, draw the pattern.

4. Touch **Continue**.
5. Redraw your pattern to confirm.


Unlocking the Screen with Your Pattern

1. Press **Power Key** to wake up the screen.
2. Draw the pattern you set to unlock the screen.


If you make a mistake, your phone will ask you to try again.

Protecting Your Phone with a PIN or Password

Creating a PIN or Password


1. Press **Home key** > tap  > **Settings** > **Security** > **Screen lock**.
2. Tap **PIN** or **Password**.
3. According to the instruction to complete your PIN or password settings.

Unlocking the Screen with Your PIN or Password

1. Press **Power Key** to wake up the phone.
2. Enter the PIN or password you set then select  on the touch keyboard.


Disabling Screen Unlock Security

If you have created an unlock pattern, PIN or password, you can disable it.

1. Press **Home key** > tap  > **Settings** > **Security** > **Screen lock**.
2. Draw the screen unlock pattern or enter your PIN/ password you have created if required.
3. Tap **None**.

Protecting Your SIM Card with a PIN

Every SIM card comes with a PIN. The initial PIN is provided by your mobile phone carrier. It's best to lock your SIM card as soon as you can.

1. Press **Home key** > tap  > **Settings** > **Security** > **Set up SIM card lock**.
2. Choose the SIM card you want set.
3. Tick the **Lock SIM card** check box.
4. Enter the PIN you've been given and tap **OK**.

TIPS: If you enter the wrong SIM PIN more times than allowed, your SIM card will be locked and you cannot access the mobile phone network. Contact your operator for a PIN Unlock Key (PUK) to restore the SIM card.

Changing Your SIM PIN

You can change the PIN you've been given to one easier for you to remember and harder for others to guess.

1. Press **Home key** > tap  > **Settings** > **Security** > **Set up SIM card lock**.

2. Make sure you already tick the **Lock SIM card** check box.
3. Tap **Change SIM PIN**.

Managing Your Device Memory

Press **Home Key** > tap  > **Settings** > **Storage**.

You can view the space information of the SD card and the phone storage.

- **Unmount SD card:** You can unmount the SD card to safely remove it.
- **Erase SD card:** Erase all data on the SD card.

Privacy: Reset to Factory Settings


Press **Home key** > tap  > **Settings** > **Backup & reset** > **Factory data reset** > **Reset phone** > **Erase everything**.

WARNING: All your personal information and downloaded applications on your phone will be erased after the resetting.


Applications

Press **Home Key** > tap  > **Settings** > **Apps**.

Installing an Application


You can install an application from the Play store (**Home Key** >  > **Play Store**).

You can also install a non-Marketing application if you have allowed the installation of it. Make sure that you select an application developed for your device and processor type before installing it.

1. Copy the application file to the SD card and install the card on your phone.
2. Press **Home key** > tap  > **File Manager**, and open the folder where the application file is.
3. Tap the file to start installation.
4. Read the installation instructions that come with the application and follow it to complete the setup.

NOTE: please take your handset as the standard.

Removing an Application


1. Press **Home key** > tap  > **Settings** > **Apps**.
2. Select the application you want to delete.
3. Tap **Uninstall** and **OK** to confirm.

Moving an Application

You can move the applications downloaded or installed on your phone to the memory card when the phone memory is

full. You can also move applications to your phone if the memory card is getting full.

NOTE: Not all applications can be move to your phone or memory card.

1. Press **Home key** > tap  > **Settings** > **Apps**.
2. Click the application you want to move on the **Downloaded** tab.


Managing Other Settings

Text-to-speech Output

You can set the text-to-speech and voice recognition options by pressing **Home Key** > tap  > **Settings** > **Language & input** > **Text-to-speech output**.


NOTE: You need to download voice data in order to use the text-to-speech function.

Accessibility

You can configure accessibility options for accessibility-related applications by pressing **Home Key** > tap  > **Settings** > **Accessibility**.


Other Applications

Clock

1. Press **Home key** > tap  > **Clock**.
2. Tap the default alarm to configure it. Or to create a new alarm, tap **Menu Key** > **Add alarm**.
3. Tick the **Turn alarm on** box and set up the alarm options.

Calculator

You can use the phone directly perform simple mathematical calculations.

1. Press **Home Key** > Tap  > **Calculator**.
2. Click the button corresponding with the calculator display, perform basic arithmetic.

TIPS: Tap **Menu Key** > **Advanced panel** to use scientific calculation.

Tips: if all suggests and solutions can't solve your problem, please contact authorized after service center.
Please do not disassembly or repair your phone without professional guide.

FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is W/kg averaged over one gram of tissue.

Device types S758

(FCC ID:) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is $0.711W/kg$ and when properly worn on the body is $1.116W/kg$. This device was tested for typical body-worn operations with the back of the handset

kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be

determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

NOTE 3: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Battery Tips

- The machine is provided by the reusable rechargeable battery.

- The new battery only can by two or three times full charge and discharge cycle to achieve optimum performance.
- Battery can be recharged many times for repeated use, but it will eventually be exhausted. When the talk and standby time is significantly shorter than usual, then need to replace a new battery.
- Use the battery the handset manufacturers approved only, and use the authorized charger for the battery charge only.
- Cut off the power supply when do not use the charger.
- Do not connect a battery to a

charger more than one week, the long time charge will affect battery life.

- The battery storage for too long would affect the results. And the battery will automatically discharge as long time unused.
- Do not use a damaged battery or charger.
- Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F).
- Always take your phone with you when you leave your vehicle.
- It is normal for batteries to gradually wear down and require longer charging times. If you notice a

change in your battery life, it is probably time to purchase a new battery.

- Do not let the batteries short-circuit. When metal objects (such as: coins, etc.) directly connected to the battery anode and the cathode (with the metal side), will occur short-circuit accident. In the pocket or handbag carry a spare battery should be particularly careful. Short-circuit will damage the battery.
- Please deal with the waste batteries according to the relevant provisions.
- Never dispose of batteries in a fire because they may explode.

Product Maintenance

Your phone is a product with outstanding design and superior quality, please take good care using it. You are strongly suggested to take the following advice which should help you stick to the warranty in order to extend the usage period of the product.

- Keep your phone and its parts away from children.
 - Keep your phone dry. Keep it away from rain, damp or any kind of fluid.
 - Don't touch your phone with wet hands when charging or there may be bodily injury or damage to the phone.
 - Keep your phone away from extreme heat which can shorten
-

your phone's life, damage the battery, twist or melt some plastic parts.

- Keep your phone away from extreme cold because when the temperature grows up, water vapor accumulated from inside the phone may damage the electronic circuit.
- Keep your phone away from dust and dirt.
- Keep your phone away from ignited cigarettes, fire or heat source.
- Don't disassemble your phone by yourself.
- Don't drop, beat or shake your phone. Any rude treatment can damage the inner electronic circuit

board.

- Don't drop your phone because it would jam-up the earpiece, microphone or any other removable part and disable your phone.
- Clean the camera lens or screen with neat, soft and dry cloth. Don't use alcohol or other cleaning solutions.
- If your phone, battery, charger or parts can't work, please take them to the authorized service center for help.

FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices

- On July 10, 2003, the U.S. Federal

Communications Commission (FCC) Report and Order in WT Docket 01- 309 modified the exception of wireless phones under the Hearing Aid Compatibility

- Act of 1988 (HAC Act) to require digital wireless phones be compatible with hearing-aids. The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities. While some wireless phones are used near some hearing devices (hearing aids and cochlear
- implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this

interference noise, and phones also vary in the amount of interference they generate. The wireless telephone industry has

- developed a rating system for wireless phones, to assist hearing device users find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box.
- The ratings are not guarantees. Results will vary depending on the user's hearing
- device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone

successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

- M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not rated. M4 is the better/higher of the two ratings.

- S758 is rated M3.

- T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more

- usable with a hearing aid's telecoil than phones that are not rated. T4 is the better/higher

- of the two ratings.
-
- S758 is rated T3.
-
- Please power off the Bluetooth function while using hearing aid devices with your S135.
- Hearing devices may also be rated.
- Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to
- Interference noise.
-
- Safety and regulatory guide
- The hearing aid and wireless phone rating values are then added together. A sum of 5 is considered

acceptable for normal use. A sum of 6 is considered for better use. A sum of 8 is considered for best use. In the above example, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This should provide the hearing aid user with “normal usage” while using their hearing aid with the particular wireless phone. “Normal usage” in this context is defined as a signal quality that is acceptable for normal operation. This methodology applies equally for T ratings. The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark.

The M and T marks are recommended by the Alliance for Telecommunications.

- Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules. The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.
- For information about hearing aids and digital wireless phones.
- FCC Hearing Aid Compatibility and Volume Control:
- <http://www.fcc.gov/cgb/dro/hearing.html>
- Gallaudet University, RERC:
- <https://fjallfoss.fcc.gov/oetcf/eas/reports/GenericSearch.cfm>

