



ENGLISH

हिंदी

# USER GUIDE GX300



**CE0168**

P/NO : MMBB0383204(1.0)

[www.lg.com](http://www.lg.com)

Bluetooth QD ID B016528

# GX300 User Guide - English

This guide will help you understand your new mobile phone. It will provide you with useful explanations of features on your phone.

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

# Contents

Getting to know your phone .....	4	Setting up your e-mail .....	16
Installing a memory card.....	5	Creating new e-mail account .....	16
Installing the SIM and battery .....	6	Sending an e-mail using your new account.....	17
Charging your phone.....	7	Message folders.....	17
Using Dual SIM-card.....	8	Camera .....	18
Menu map.....	9	Taking a quick photo .....	18
On-Screen Icons.....	11	Video camera .....	18
		Shooting a quick video.....	18
Calls .....	12	Music.....	18
Making a call.....	12	FM radio .....	19
Making a call from your contacts.....	12	Searching for stations.....	19
Answering and rejecting a call.....	12	Listening to the radio .....	19
Using the speakerphone .....	12	Recording the Radio .....	19
Speed dialling .....	12	Voice recorder.....	19
Sending SOS Message.....	13	Recording your voice memo .....	19
Viewing your call logs .....	13	Gallery .....	20
Changing the call settings.....	13	Organiser .....	20
Contacts.....	14	Setting your alarm.....	20
Searching for a contact.....	14	Using the calendar .....	20
Adding a new contact.....	14	Adding an item to your to do list .....	20
Adding a contact to a group.....	14	Adding a note.....	20
Messaging .....	14	Secret notes .....	20
Sending a message .....	14	Using your calculator .....	20
Entering text.....	16	Using the stopwatch.....	21
T9 mode .....	16		
Abc mode .....	16		
123 mode.....	16		

Date finder .....	21	PC Suite .....	24
Converting a unit .....	21	Installing LG PC Suite on your	
Adding a city to your world time.....	21	computer .....	24
Go to .....	21	Changing your other settings .....	24
Torch .....	21	Changing your phone settings .....	25
Fake call .....	21	Changing your security settings .....	25
Web .....	21	Viewing memory status.....	26
Accessing the wap browser.....	21	Resetting your phone.....	26
Applications .....	22	Phone Software update .....	27
Settings .....	22	Guidelines for safe and	
Personalising your profiles .....	22	efficient use .....	28
Using flight mode .....	22	Accessories .....	33
Changing your display settings .....	22	Technical data.....	34
Changing your date & time .....	22	Trouble shooting .....	35
Changing your connectivity			
settings .....	23		
Changing your Bluetooth			
settings .....	23		
Pairing with another Bluetooth			
device .....	24		

# Getting to know your phone

**Earpiece**

**Main screen**

**Navigation key**

Use for quick access to phone functions.

**Call key**

Dials a phone number and answers incoming calls.

**End/Power key**

Ends or rejects a call. Turns the phone on/off. Returns to the standby screen when you use the menu.



**Charger, cable slot,  
Handsfree connector**

**Memory card slot**



**Volume key**

**Dual SIM key**

**Camera**

Go to Camera function directly.

## Installing a memory card

Lift the memory card cover and insert a micro SD card with the golden contact area facing downwards. Close the memory card cover so that it clicks shut. To remove the memory card, gently push it.



**Note:** A memory card is an optional accessory.

### Formatting the memory card

Press **Menu** and select **Settings**.


Choose **Memory info**, select **External memory** and press **Format**, and insert security code.

**WARNING:** When you format your memory card, all the content will be wiped. If you do not want to lose the data on your memory card, back it up first.

# Installing the SIM and battery


## 1 Remove the battery cover

Slide the battery cover towards the top of the phone and away from it.

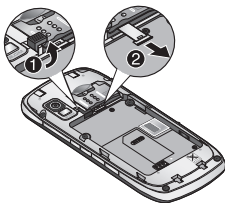


## 2 Install the SIM card

Slide the SIM card into the SIM card holder making sure that the gold contact area on the card is facing downwards. Please make sure the battery is removed from the phone before installing the SIM card. To remove the SIM card, pull it gently in the opposite direction.

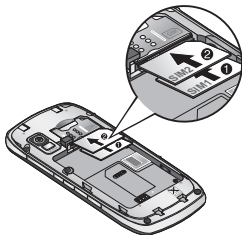

### WARNING




Make sure that your SIM card has a neat and clean cut before you insert it into the holder.



## Charging your phone

### 3 Install the battery

Insert the left side of the battery into the top edge of the battery compartment first. Ensure that the battery contacts align with the phone's terminals. Press the right side of the battery until down it clicks into place.

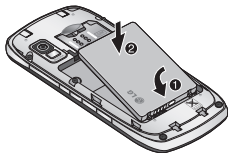

### 4 Replace the battery cover

Insert the top of the battery cover and push down and slide until it clicks into place.



Remove the charger socket cover on the side of your GX300. Connect the Travel Adapter (Charger) and the included USB cable. Connect the USB cable into the phone and plug it into a power socket. Your GX300 must be charged until the "Battery full" message appears on the screen.

**NOTE:** The battery must be fully charged initially to improve battery lifetime. Disregard the first "Battery full" message and keep the phone on charge overnight.



## Using Dual SIM-card

You can see two Network Signal icons on the left-top of the screen when you insert two SIM-Card.

To select or switch the SIM-card, press Menu and select Settings, then select Dual SIM.

Or press **Dual SIM key** simply on the right side of the GX300. **Dual SIM key** make it easy for you to switch SIM-Card whenever you call, send messages and so on.

**TIP!** You can see the network signals highlighted by background colour when you switch them. It makes you easily identify the strength of your signal of the selected SIM-Card.

# Menu map



## Messaging

- Create message
- Inbox
- My mailbox
- Create new e-mail address
- Drafts
- Outbox
- Sent items
- Saved items
- Emoticons
- Message settings



## Contacts

- Names
- Settings
- Groups
- Speed dials
- Service dial numbers
- Own number
- My business card



## Log

- Call log
- Missed calls
- Received calls
- Dialled numbers
- Call duration
- Packet data counter
- Call costs



## Settings

- Dual SIM
- Profiles
- Display
- Date & time
- Connectivity
- Call
- Phone
- Network
- Internet profiles
- Access points
- Packet data conn.
- Security
- Memory info
- Restore factory settings



## Gallery

- My memory card
- My images
- My sounds
- My videos
- My games & apps
- Others



## Media

- Camera
- Video
- Music
- FM radio
- Voice recorder

# Menu map

## **Organiser**

Alarm clock  
Calendar  
To-do list  
Notes  
Secret notes  
Calculator  
Stopwatch  
Date finder  
Converter  
World time  
Go to  
Torch  
Fake call  
Settings












## **Applications**

My games & apps  
Settings

## **Web**



Home  
Google Search  
Bookmarks  
Last web address  
Settings  
Go to address  
Saved pages

# On-Screen Icons

Icon	Description
	Tells you the strength of the network signal.
	Bluetooth connectivity is powered on.
	The alarm clock is set.
	Roaming service is used
	Indicates new text message(s).
	The normal profile is activated.
	The silent profile is activated.
	The outdoor profile is activated.
	The flight mode profile is activated.
	The headset setting is used.
	Indicates the battery charge level.

# Calls


## Making a call

- 1 Key in the number using the keypad. To delete a digit press **CLR**.
- 2 Press  to initiate the call.
- 3 To end the call, press .


**TIP!** To enter + when making an international call, press and hold **0**.

**TIP!** To control the volume during a call, press volume key.


## Making a call from your contacts

- 1 Select **Contacts** from the home screen.
- 2 Using the keypad, enter the first letter of the contact you want to call. For example, for **Office**, Press 6 three times to select the first character, "O".
- 3 Select **Make call** by from **Options** or press  to initiate the call.


## Answering and rejecting a call


When your phone rings, press  to answer the call.

To mute your phone while it is ringing, simply select **Silent**. This is useful if you have forgotten to change your profile to **Silent** for a meeting.

Press  or select **Reject** to reject the incoming call.

## Using the speakerphone

During a call, you can activate speakerphone by pressing  key and you can use the handset in hands-free.

If the speakerphone is active, press  key again to resume normal handset conversation mode.

## Speed dialling

Press **Menu** and select **Contacts**, then choose **Speed dials**.

You can assign a speed dial number to a contact you call frequently.

Speed dial 1 is set to your voice mail and you can not change it.

## **Sending SOS Message**

This allows you to send SOS message to your friends automatically by long press No. 9 key on you keypad when you are in emergency.

Initial long press of No. 9 key brings up your SOS message settings. Once you set ON, you can edit this function by selecting Menu > Contacts > Speed dials.

## **Viewing your call logs**

Press **Menu** and select **Call log**. You can check the call record of missed, received, and dialled calls only if the network supports the Calling Line Identification (CLI) within the service area.

## **Changing the call settings**

You can set the menu relevant to a call. Press **Menu**, select **Settings** and choose **Call** and Select SIM 1 or SIM 2.

**Call divert** - Choose whether to divert your calls.

**Call barring** - Select when you would like calls to be barred.

**Fixed dial numbers** - Choose a list of numbers that can be called from your phone. You'll need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

**Call waiting** - Be alerted when you have a call waiting. (Depends on your network provider.)

**Call reject** - Select **Off** or **On** and choose to reject all calls, contacts, those from specific groups, unregistered numbers (those not in your list of contacts) or those with no caller ID.

**Send my number** - Choose whether your number will be displayed when you call someone. (Depends on your network provider.)

**Auto redial** - Allows you to set the auto redial function when a call attempt has failed.

**Minute minder** - Determines whether to sound a tone when you are on the phone as per the set time.

**Save new number** - Choose **Yes** or **No**.

# Contacts


## Searching for a contact

- 1 Select **Contacts** from the home screen and choose **Names**.
- 2 Using the keypad enter the first letter of the contact you want to call.
- 3 To scroll through the contacts and their different numbers use the navigation keys.

## Adding a new contact

- 1 Press **Menu** and select **Contacts** then choose **Names**. Press **Options** and **Add new contact** and choose **Handset** or **SIM 1** or **SIM 2**.
- 2 Enter the first and last name of your new contact. You do not have to enter both, but you must enter one or the other.
- 3 Enter the number and select **Options** then choose **Done**.

**Note:** If you add more information, press **Options** and choose **Add detail** then select options you want.

**Note:** When you are storing a contact's e-mail address, press  key and select a symbol @ then **OK**.

## Adding a contact to a group

You can save your contacts into groups, for example, keeping your work colleagues and family separate. There are a number of groups including **Family**, **Friends**, **Colleague**, **School** and **VIP** already set up on the phone.

**TIP!** In contacts, by default there is a LG Customer Care number provided

## Messaging

Your GX300 includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service), e-mail as well as the network's service messages.

## Sending a message

- 1 Press **Menu**, select **Messaging**, and choose **Create message**.
- 2 Choose **Message** to send an SMS or MMS.



- 3 A new message editor will open. The message editor combines **Text message** and **Multimedia messages** into one intuitive and easy to switch between editor. The default setting of the message editor is text message.
- 4 Enter the phone number or press **Options** and select **Send** to add a contact from the list of your contacts. You can even add multiple contacts by selecting **Add recipient**.
- 5 Enter your message.
- 6 Select **Options** and choose **Insert** to add an **Image, Video clip, Sound clip, Schedule, Business card, Note, Text field, To do**, or a **Text template**.
- 7 Press **Send**.

**TIP!** You can select your message type as SMS or MMS when you enter a text longer than 1 page in the message field. If you want to change the type of message to send, press **Menu > Messaging > Message settings > Text message > SIM 1 or SIM 2**, and choose **Send long text as**.

**WARNING:** Image, Video clip, Sound clip, Schedule, Business card, Text field or Subject is added to the message editor, it will be automatically converted to MMS mode and you will be charged accordingly.

**TIP!** You can send SMS to many contacts at a time. "Add" Option will open the contacts list, from where user can mark/unmark contacts for sending the message. Only 20 contacts can be marked and if user select Mark all only first 20 contacts will be marked. To send the SMS to a particular group of contacts select "Contact groups" option from the list

## Entering text

You can enter alphanumeric characters using the phone's keypad. The following text input methods are available in the phone: T9 mode, Abc mode and 123 mode.

**Note:** Some fields may allow only one text input mode (e.g. telephone number in address book fields).

### T9 mode

T9 mode uses a built-in dictionary to recognise words you're writing based on the key sequences you press. Simply press the number key associated with the letter you want to enter, and the dictionary will recognise the word once all the letters are entered.

### Abc mode

This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

## 123 mode

Type numbers using one keystroke per number. You can also add numbers while remaining in letter modes by pressing and holding the desired key.

## Setting up your e-mail

You can stay in touch on the move using e-mail on your GX300. It's quick and simple to set up a POP3 or IMAP4 e-mail account.

- 1 Press **Menu**, select **Messaging**, and choose **Message Settings**.
- 2 Select **E-mail** then **E-mail accounts**.
- 3 Press **Add** and follow the pop up instruction and enter the information required.

## Creating new e-mail account

If the e-mail account is set up in your phone and you want to add a new e-mail account, Select **Menu**, then select **Create new e-mail address**.

## **Sending an e-mail using your new account**

To send/receive an e-mail, you should set up an e-mail account.

- 1 Select **Menu**, select **Messaging** and choose **Create message**.
- 2 Choose **E-mail** and a new e-mail will open.
- 3 Enter the recipient's address and write a subject.
- 4 Enter your message.
- 5 Press **Options**, select **Insert** to add an **Image**, **Video clip**, **Sound clip**, **Business card**, **Schedule** or a **Note**.
- 6 Press **Send** and your e-mail will be sent.

## **Message folders**

Press **Menu**, select **Messaging**. The folder structure used on your GX300 is fairly self explanatory.

**Create message** - Allows you to create new message.

**Inbox** - All the messages you receive are placed into your **Inbox**. From here you can reply, forward and more.

**My mailbox** - All your e-mails you receive are placed into **My mailbox**.

**Drafts** - If you don't have time to finish writing a message, you can save what you have written so far in here.

**Outbox** - This is a temporary storage folder used while messages are being sent.

**Sent items** - Copies of all the messages you send are kept into your **Sent items**.

**Saved Items** - You can access your **Saved messages**, **Text templates** and **Multimedia templates**.

**Emoticons** - A list of useful emoticons already written for a quick reply. You can add, edit and delete emoticons. You can insert the emoticon which you preferred on writing a message.

**Message settings** - Your message settings are pre-defined so that you can send messages immediately. If you would like to change the settings, you can do this using the settings options.


**TIP!** Messages which are stored in Phone or SIM1 / SIM 2 memory can be moved either to SIM1 / SIM2 or Phone memory.

**TIP!** Inbox Messages can be sorted with the given sorting options for an easy access of messages (Subject, Date, Sender)

## Camera


Using the camera module built in your phone, you can take pictures of people. Additionally, you can send photos to other people and select photos as wallpaper.

### Taking a quick photo

- 1 Press **Menu** and select **Media**. Select **Camera** to open the viewfinder.
- 2 Holding the phone and, point the lens towards the subject of the photo.
- 3 Press  key to take a photo.

## Video camera

### Shooting a quick video

- 1 Press **Menu** and select **Media**, then choose **Video**.
- 2 Point the camera lens towards the subject of the video.
- 3 Press  key to start recording.
- 4 REC will appear in the viewfinder and a timer will show the length of your video.
- 5 Select **Stop** to stop recording.

## Music

Your GX300 has a built-in music player so you can play all your favourite music.

**Note:** Music is copyright protected in international treaties and national copyright laws. It may be necessary to obtain permission or licence to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Please check the national legislation of the applicable country concerning the use of such materials.

## FM radio

Your GX300 has an **FM radio** feature so you can tune into your favourite stations and listen on the move.

**Note:** You will need to insert your headset in order to listen to the radio. Insert the plug into the headset connector in order to listen to the radio and keep the good radio reception.

### Searching for stations



- 1 Press **Menu** and select **Media**, then choose **FM radio**.
- 2 Select **Option** and choose **Auto scan** then select **Yes**. You can also use the left and right navigation keys to search for stations.

### Listening to the radio

- 1 Press **Menu** and select **Media**, then choose **FM radio**.
- 2 Select the channel number of the station you would like to listen to.

**TIP!** You can listen to the radio via built-in speaker. Press **Options**, select **Listen via speaker**.


### Recording the Radio

- 1 Press  key during listening to the radio.
- 2 The recording time is displayed on your phone. If you want to stop the recording, press  key. If recording is done, the recorded contents will be saved in **Gallery** as mp3 file.

## Voice recorder

Use your **Voice recorder** to record voice memos or other sounds.

### Recording your voice memo

- 1 Press **Menu** and select **Media**, then choose **Voice recorder**.
- 2 Press  key to begin recording.
- 3 Choose **Stop** to end the recording.
- 4 Press **Options** and select **Play** to listen to the recording.

## Gallery

You can store any media files into your phone's memory so that you have easy access to all of your images, sounds, videos, others and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory. All your multimedia files will be saved in **Gallery**. Press **Menu** then select **Gallery** to open a list of folders.

## Organiser

### Setting your alarm (Menu > Organiser > Alarm clock)

You can set up to 5 alarm clocks to go off at a specified time.

### Using the calendar (Menu > Organiser > Calendar)

When you enter this menu, a calendar appears. A square cursor is located on the current date. You can move the cursor to another date using the navigation keys. You can add and manage the appointments.

**TIP!** User can schedule an SMS, so that it can be sent to the pre defined number/contact on Set date and Set time.

### Adding an item to your to do list (Menu > Organiser > To-do list)

You can view, edit and add tasks to do.

### Adding a note (Menu > Organiser > Notes)

You can register your own notes here.

### Secret notes (Menu > Organiser > Secret notes)

You can write the private memo to protect your privacy. You enter the security code to use this menu.

### Using your calculator (Menu > Organiser > Calculator)

The calculator provides the basic arithmetic functions: addition, subtraction, multiplication, division and Scientific applications also.

## **Using the stopwatch (Menu > Organiser > Stopwatch)**

This option allows you to use the function of a stopwatch.

## **Date finder (Menu > Organiser > Date finder)**

Date finder is a handy tool to help you calculate what the date will be after a certain amount of days has passed.

## **Converting a unit (Menu > Organiser > Converter)**

This converts many measurements into a unit you want.

## **Adding a city to your world time (Menu > Organiser > World time)**

You can add a required city to the list of world clock. You can also check the current time of major cities around the world.

## **Go to (Menu > Organiser > Go to)**

It helps you to go to the menu you search for. You can set the item as Go to.

## **Torch (Menu > Organiser > Torch)**

This allows you to light the place with a lamp . Set it to On and you can find the light from the back side of the phone.

## **Fake call (Menu > Organiser > Fake call)**

This is a useful function for avoiding awkward situation politely.

You can call yourself by setting the time in Fake call menu.

**Note:** In idle screen , Fake call can be activated and deactivated by entering the code ##.

## **Web**

### **Accessing the wap browser**

You can launch the wap browser and access the homepage of the activated profile on Web settings. You can also manually enter an URL address and access the associated wap page.

- 1 Press **Menu** and select **Web**.
- 2 To access the wap browser homepage directly, select **Home**. Alternately, select **Go to address** and type in your desired URL.

**Note:** An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

## Applications

Your GX300 comes with preloaded games to keep you amused when you have time to spare.

GX300 also comes with some preloaded applications

**Data Wallet** - This application is used to keep personal informations. (Bank Account / Credit Card / Loan / Email ID details)

**Just Cricket**-It is a java application for mobile phone which provides online access for Flash simulation of live matches, Archive Matches etc...

## Settings

### Personalising your profiles (Menu > Settings > Profiles)

You can personalise each profile setting. Choose the profile you want and select **Options** and choose **Edit**.

### Using flight mode (Menu > Settings > Profiles > Flight mode)

Use this function to switch the flight mode on. You will not be able to make calls, connect to the Internet, send messages when flight mode is switched on.

### Changing your display settings (Menu > Settings > Display)

You can change the settings for the phone display.

### Changing your date & time (Menu > Settings > Date and time)

You can set functions relating to the date and time.



## Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone from switch on. If you want to change any settings, use this menu. You can configure the network setting and data access profiles in this menu.

Press **Menu** and select **Settings** then choose **Connectivity**. Your options are:

**Bluetooth** - Set up your GX300 for Bluetooth use. You can adapt your visibility to other devices or search through devices your phone is paired with.

**USB connection mode** - You can select the USB connection mode on your phone for several uses.

- **Mass storage:** Select this and connect the handset to your computer and drag and drop files to the GX300 removable device folder.

- **PC Suite:** Select this and connect the handset to your computer in PC Sync mode.
- **Always Ask:** Selecting this, will give an option, to select the mode, when handset is connected to the computer, every time.

**Note:** To use the USB mass storage function, you will need to insert an external memory card in your phone.

## Changing your Bluetooth settings

- 1 Press **Menu** and select **Settings** then choose **Connectivity**.
- 2 Choose **Bluetooth** and select **Settings**.

Make your changes to:

**My phone's visibility** - Choose whether to **Visible**, **Hidden** or **Visible for 1 min** your device to others.

**My phone's name** - Enter a name for your LG GX300.

**Supported services** - Shows what it supports.

**My address** - View your Bluetooth address.

## **Pairing with another Bluetooth device**

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Bluetooth Settings** menu, by selecting **My phone's visibility**, then **Visible**.
- 2 Select **Active devices** from the **Bluetooth** menu.
- 3 Your GX300 will search for devices. When the search is completed **Add** and **Refresh** will appear on screen.
- 4 Choose the device you want to pair with, then handset create a passcode window.
- 5 Press or enter passcode.
- 6 Your phone will then connect to the other device.
- 7 Your passcode protected Bluetooth connection is now ready.

## **PC Suite**

You can synchronise your PC with your phone. This will ensure all your important details and dates match, and also act as a back up to help put your mind at ease.

### **Installing LG PC Suite on your computer**

- 1 Go to [www.lgmobile.com](http://www.lgmobile.com) and choose your region first and then your country.
- 2 Click **Manual & Software**.
- 3 Download **LG Mobile support tool**.
- 4 Follow the instructions on screen to complete the LG PC Suite Installer wizard.
- 5 Once installation is complete, the LG PC Suite icon will appear on your desktop.

### **Changing your other settings**

**Network** - Choose SIM 1 or SIM 2, Select network mode settings using this menu. Also you can add a preferable network to be connected to Preferred lists.

**Internet profile** - Choose SIM 1 or SIM 2 ,This menu shows the Internet profiles.You can create new profiles, delete or edit them using the options menu.However, you cannot delete or edit default configurations.

**Access points** - Choose SIM 1 or SIM 2 ,This menu shows the access points list.You can create new profiles, delete or editthem by using the options menu.

However, you cannot delete or edit default configurations.

**Packet data conn.** - Choose SIM 1 or SIM 2 ,If you select "When available", your phone is automatically registered to a GPRS network when you switch the phone on. If you select "When needed", the GPRS connection is established for the duration of a WAP or application connection.

## **Changing your phone settings (Menu > Settings > Phone)**

Enjoy the freedom of adapting how your GX300 works for your own style.

**Auto key lock** - Lock the keypad automatically in standby screen.

**Language** - You can change the language for the display texts in your phone. This change will also affect the language input mode.

**Power save** - Choose to switch the power save settings **Off, Night only, Always on**. If you set **Always on**,you can save the battery power.

**Handset Information** - View the technical information for your GX300.

## **Changing your security settings**

**(Menu > Settings > Security)**

Change your security settings to keep your GX300 and the important information it holds protected.

**PIN code request** - Choose SIM 1 or SIM 2 ,Choose a PIN code to be requested when you turn your phone on.

**Handset lock** - Choose to lock your handset.

**Lock if SIM is changed** - If you activate this option, your phone will request a security code when you change your SIM card.

**Change codes** - Change your **PIN code**, **PIN2 code**, **Security code** and **Anti-theft code**.

**Anti-theft mobile tracker** - When the handset is stolen, handset sends the SMS to the numbers configured by real owner. To activate the ATMT feature, you will need to set ATMT on, and configure the Sending number list with name, primary number and secondary number. Default ATMT code is "0000." ATMT SMS will contain information about the stolen phone IMEI, current location (captured as per Cell Broadcast message) & number of the person who is using that handset.

**Application lock** - You can set the application lock to avoid unauthorized use of phone memory, and To do. You will need a security code to access the data. The default security code is 0000

**Viewing memory status**  
(Menu > Settings > Memory info.)

You can use the memory manager to determine how each memory is used and see how much space is available: common, reserved, SIM 1, SIM 2 and external memory and also set the primary storage when the memory card is inserted.

**Resetting your phone**  
(Menu > Settings > Restore factory settings)

Use **Restore factory settings** to reset all the settings to their factory definitions. You need the security code to activate this function. The default security code is set to "0000".

# Phone Software update

## LG Mobile Phone Software update from internet

For more information on using this function, please visit the <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> select country Support

This Feature allows you to update the firmware of your phone to the latest version conveniently from the internet without the need to visit a service center.

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage you mobile phone.

# Guidelines for safe and efficient use

## Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model GX300 has been designed to comply with applicable safety requirements for exposure to radio waves.

These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all users, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.

- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use close to the ear is 1.43 W/kg(10g) and when worn on the body is 1.54 W/kg(10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

## Product care and maintenance

### WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required. Repairs under warranty, at LG's option, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.

- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

## **Efficient phone operation**

### **Electronics devices**

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, i.e. in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

### **Road safety**

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music while out and about, please ensure that the volume is at a reasonable level so that you are



aware of your surroundings. This is particularly imperative when near roads.

### **Avoid damage to your hearing**

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

### **Blasting area**

Do not use the phone where blasting is in progress. Observe restrictions, and follow the rules and regulations.

### **Potentially explosive atmospheres**

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.

- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

### **In aircraft**

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the aircraft without permission from the crew.

### **Children**

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

### **Emergency calls**

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

## **Battery information and care**

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose off used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

# Accessories

These accessories are supplied with the GX300.

**Charger**



**Data cable  
and CD**



**Battery**



**Stereo  
headset**



## NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

# Technical data

## Ambient Temperatures

Max.: +55°C (discharging) +45°C (charging)

Min.: -10°C

### Declaration of Conformity



LG Electronics

#### Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

#### Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri band Terminal Equipment

Model Name

GX300

Trade Name

LG

CE 0168

#### Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v1.3.2

EN 300 328 v1.7.1

EN 60950-1 : 2001

EN 50360 : 2001 / EN62209-1 : 2006

EN 301 511 v9.0.2

#### Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom

Notified Body Identification Number : 0168

#### Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Seung Hyoun, Ji / Director

27. Apr. 2010

LG Electronics Inc. – EU Representative  
Vekwezoom 15, 1327 AE Almere, The Netherlands

Signature of representative

# Troubleshooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy for you to correct yourself.

Message	Possible causes	Possible Solutions
USIM error	There is no USIM card in the phone or it is inserted incorrectly.	Make sure the USIM card is correctly inserted.
No network connection	Signal weak Outside GSM network area	Move towards a window or into an open area. Check the service provider coverage map.
Codes do not match	To change a security code, you will need to confirm the new code by entering it again. The two codes you have entered do not match.	Contact your Service Provider.
Function cannot be set	Not supported by Service Provider, or registration required	Contact your Service Provider.
Calls not available	Dialling error New USIM card inserted Charge limit reached	New network not authorised. Check for new restrictions. Contact Service Provider or reset limit with PIN 2.
Phone cannot be switched on	On/Off key not pressed long enough	Press the On/Off key for at least two seconds.
	Battery empty	Keep charger attached for a longer time.
	Battery contacts dirty	Clean the contacts.

# Troubleshooting

Message	Possible causes	Possible Solutions
Charging error	Battery totally empty	Charge battery.
	Temperature out of range	Make sure the ambient temperature is right, wait for a while, and then charge again.
	Contact problem	Check the power supply and connection to the phone. Check the battery contacts and clean them if necessary.
	No mains voltage	Plug in to a different socket or check the voltage.
	Charger defective	If the charger does not warm up, replace it.
	Wrong charger	Only use original LG accessories.
Number not permitted	Battery defective	Replace battery.
	The Fixed dial number function is on.	Check settings.

# GX300 उपयोगकर्ता मार्गदर्शिका - हिंदी

यह मार्गदर्शिका आपके नए मोबाइल फोन को समझने में आपकी मदद करेगी.यह आपको आपके फोन में दी गई सुविधाओं के बारे में उपयोगी स्पष्टीकरण प्रदान करेगी.फोन के सॉफ्टवेयर या आपके सेवा प्रदाता के आधार पर इस मैनुअल की कुछ सामग्री आपके फोन से अलग हो सकती है.




# सामग्री

अपने फोन को जानें.....	4	अक्षर व अंक प्रविष्ट करने की तालिका.....	16
मेमोरी कार्ड स्थापित करना.....	5	हिन्दी शब्द लिखने के उदाहरण.....	17
सिम और बैटरी स्थापित करना.....	6	आपका ई-मेल सेट करना.....	17
अपना फोन चार्ज करना.....	7	आपके नए खाते का उपयोग कर ई-मेल	
डुअल सिम-कार्ड का उपयोग करना.....	8	मेजना.....	17
मेनू मैप.....	9	संदेश फोल्डर्स.....	18
ऑन-स्क्रीन आइकॉन्स.....	11	कैमरा.....	18
कॉल्स.....	12	तुरंत फोटो लेना.....	18
कॉल करना.....	12	वीडियो कैमरा.....	19
अपने संपर्कों से कॉल करना.....	12	तुरंत वीडियो शूट करना.....	19
कॉल का उत्तर देना और अस्वीकार करना.....	12	संगीत.....	19
स्पीकरफोन का उपयोग करना.....	12	FM रेडियो.....	19
स्पीड डायलिंग.....	12	स्टेशन खोजना.....	19
SOS संदेश.....	13	रेडियो सुनना.....	19
आपके कॉल लॉग्स देखना.....	13	रेडियो से रिकॉर्ड करना.....	20
कॉल सेटिंग्स बदलना.....	13	वॉइस रिकॉर्डर.....	20
संपर्क.....	14	आपके वॉइस मेमो को रिकॉर्ड करना.....	20
कोई संपर्क खोजना.....	14	गैलरी.....	20
नया संपर्क जोड़ना.....	14	ऑर्गनाइजर.....	20
किसी समूह में संपर्क जोड़ना.....	14	आपका अलार्म सेट करना.....	20
संदेश.....	14	कैलेंडर का उपयोग करना.....	20
संदेश.....	14	आपकी करने के लिए सूची में आइटम	
पाठ दर्ज करना.....	15	जोड़ना.....	20
T9 मोड.....	15	नोट जोड़ना.....	21
Abc मोड.....	16	गुप्त नोट्स.....	21
123 मोड.....	16		



अपने कैलकुलेटर का उपयोग करना.....	21	फोन सॉफ्टवेयर अपडेट.....	27
स्टॉपवॉच का उपयोग करना .....	21	सुरक्षित और सक्षम उपयोग के लिए निर्देश.....	28
तिथि खोजक.....	21	एक्सेसरीज.....	33
इकाई कनवर्ट करना.....	21	तकनीकी डेटा.....	34
अपनी विश्व समय में एक शहर जोड़ना.....	21	समस्या निवारण.....	35
इस पर जाएँ .....	21		
टॉर्च .....	21		
फेक कॉल.....	21		
वेब .....	22		
वेबवैप ब्राउजर तक पहुँच प्राप्त करना .....	22		
सेटिंग्स.....	22		
अपने प्रोफाइल को व्यक्तिगत रूप देना .....	22		
फ्लाइट मोड का उपयोग करना .....	23		
अपनी डिस्प्ले सेटिंग्स बदलना.....	23		
अपना दिनांक और समय बदलना.....	23		
अपनी कनेक्टिविटी सेटिंग्स बदलना.....	23		
अपनी ब्लूटूथ सेटिंग्स बदलना.....	23		
किसी अन्य ब्लूटूथ डिवाइस से युग्मित करना .....	24		
PC सुइट.....	24		
आपके कंप्यूटर पर LG पीसी सुइट स्थापित करना.....	24		
अपने फोन की सेटिंग्स बदलना .....	25		
अपनी सुरक्षा सेटिंग्स बदलना.....	25		
मेमोरी की स्थिति देखना.....	26		
अपने फोन को रीसेट करना .....	26		

# अपने फोन को जानें

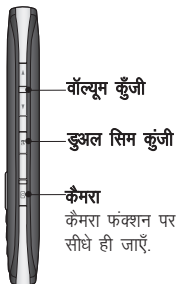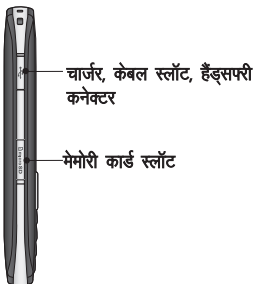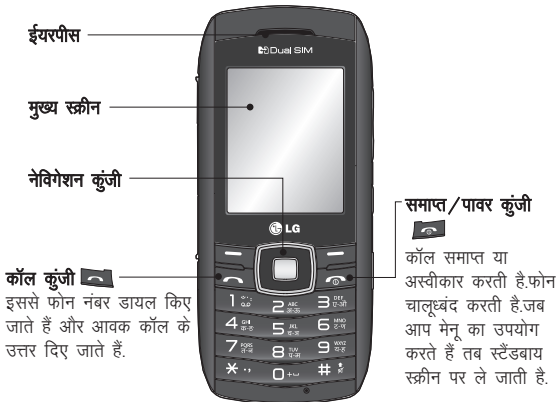

## मेमोरी कार्ड स्थापित करना

मेमोरी कार्ड कवर उठाएँ और माइक्रो SD कार्ड का गोल्डन संपर्क क्षेत्र नीचे की ओर रखते हुए कार्ड डालें. मेमोरी कार्ड को कवर इस तरह बंद करें की वह क्लिक की आवाज करें



**नोट:** मेमोरी कार्ड एक वैकल्पिक सहायक उपकरण है.

## मेमोरी कार्ड स्वरूपित करना

मेनू दबाएँ और सेटिंग्स का चयन करें.


मेमोरी प्रबंधक चुनें, बाह्य मेमोरी का चयन करें और स्वरूप दबाएँ और सुरक्षा कोड डालें.

**चेतावनी:** आपके द्वारा अपना मेमोरी कार्ड स्वरूपित करने पर सभी सामग्री हट जाएगी. यदि आप अपने मेमोरी कार्ड का डेटा खोना नहीं चाहते हैं तो पहले उसका बैकअप लें.

# सिम और बैटरी स्थापित करना


## 1 बैटरी कवर निकालें

बैटरी कवर को फोन के नीचे की तरफ और उससे दूर खिसकाएँ.

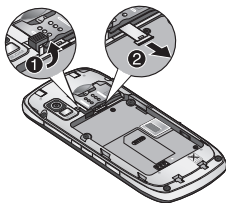


## 2 सिम कार्ड लगाना

सिम कार्ड को सिम कार्ड होल्डर में डालें, इस बात का ध्यान रखें कि उसका सुनहरा संपर्क भाग नीचे की तरफ हो. कृपया सुनिश्चित करें कि सिम कार्ड स्थापित करने से पहले फोन से बैटरी निकाल दी गई है. सिम कार्ड निकालने के लिए, उसे उल्टी तरफ धीरे से खींचें.

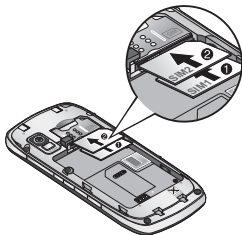

### ⚠ चेतावनी



सुनिश्चित करें कि होल्डर में डालने से पहले आपका सिम कार्ड सही आकार का और साफ सुथरा होना चाहिए.


## अपना फोन चार्ज करना

### 3 बैटरी लगाना

बैटरी कंपार्टमेंट के ऊपरी कोने में पहले बैटरी का बायाँ हिस्सा डालें.

सुनिश्चित करें कि बैटरी संपर्क फोन के टर्मिनलों के साथ अलाइन हैं.

बैटरी के दाएँ हिस्से को नीचे की तरफ दबाएँ जब तक कि वह स्थान पर क्लिक न हो जाए.

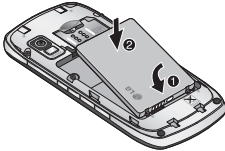

### 4 बैटरी कवर लगाना

बैटरी कवर के शीर्ष को डालें और स्लाइड को नीचे की ओर तब तक दबाएँ, जब तक यह सही स्थान पर बैठ न जाए.



अपने **GX300** के साइड से चार्जर सॉकेट कवर निकालें. ट्रैवल अडैप्टर (चार्जर) और USB केबल कनेक्ट करें.

USB केबल को फोन से कनेक्ट करें और इसे एक पॉवर सॉकेट में प्लग करें.

स्क्रीन पर "बैटरी पूर्ण" संदेश प्रकट होने तक आपका **GX300** चार्ज किया जाना आवश्यक है.

**नोट:** बैटरी की कार्य अवधि सुधारने के लिए बैटरी को प्रारंभिक रूप में पूर्ण चार्ज किया जाना आवश्यक है. पहले "बैटरी पूर्ण" संदेश पर ध्यान न दें और फोन को पूरी रात चार्ज पर रहने दें.



## डुअल सिम-कार्ड का उपयोग करना

जब आप दो सिम-कार्ड डालते हैं तो स्क्रीन के ऊपरी-बाएँ तरफ दो नेटवर्क सिग्नल आइकन देख सकते हैं.

सिम-कार्ड स्विच या चयन करने के लिए, मेनू दबाएँ और सेटिंग्स का चयन करें, फिर डुअल सिम का चयन करें.

या साधारण रूप से GX300 के दाईं तरफ डुअल सिम कुंजी दबाएँ.

डुअल सिम कुंजी आपको कभी भी कॉल करते समय, संदेश भेजते समय और इसी तरह और भी कार्य करते समय सिम-कार्ड स्विच करना आसान बनाता है.

**टिप!** जब आप नेटवर्क सिग्नल स्विच करते हैं तो उन्हें पृष्ठभूमि रंग से हाइलाइट किया गया देख सकते हैं.

यह आपके चयनित सिम कार्ड की सिग्नल क्षमता की पहचान करना आसान बनाता है.

# मेनू मैप



## संदेश

संदेश लिखें  
इनबॉक्स  
मेरा मेलबॉक्स  
नया ईमेल पता बनाएँ  
प्रारूप  
ऑउटबॉक्स  
प्रेषण आईटम्स  
सहेजें गए आईटम्स  
भावनाएं  
संदेश अनुकूलन



## संपर्क

नाम  
सेटिंग्स  
समूह  
शीघ्र डायल्स  
सेवा डायल नम्बर्स  
स्वयं का नम्बर  
मेरा व्यवसाय कार्ड



## कॉल लॉग

कॉल लॉग  
छूटे कॉल्स  
प्राप्त कॉल्स  
डायल किए गए नंबर,  
कॉल अवधि  
पैकेट डेटा काउन्टर  
कॉल कीमत



## सेटिंग्स

डुअल SIM  
प्रोफाइल्स  
प्रदर्शित करें  
दिनांक और समय  
संयोजकता  
कॉल  
फोन  
नेटवर्क  
इंटरनेट प्रोफाइल्स  
एक्सेस पॉइंट्स  
पैकेट डेटा कनेक्शन  
सुरक्षा  
स्मृति की जानकारी  
फैक्ट्री सेटिंग्स पुनर्स्थापित करें



## गैलरी

मेरा मेमोरी कार्ड  
मेरे छवियाँ  
मेरी ध्वनि  
मेरे विडियो  
मेरे खेल एवं अनुप्रयोग  
अन्य



## मीडिया

कैमरा  
वीडियो  
संगीत  
FM रडियो  
वाइज़ रिकॉर्डर

# मेनू मैप



## आयोजक

अलार्म घडी  
कैलेंडर  
टूडू सूची  
नोट्स  
गुप्त नोट्स  
कैलकुलेटर  
स्टॉपवॉच  
तिथि खोजक  
परिवर्तक  
विश्व समय  
के पास जाओ  
टॉर्च  
फ़ेक कॉल  
सेटिंग्स



## सुविधायें

मेरे खेल एवं अनुप्रयोग  
सेटिंग्स














## वेब

होम  
Google खोज  
बुकमार्क  
पिछला वेब पता  
सेटिंग्स  
पते पर जाएँ  
सुरक्षित प्रष्ठ





# ऑन-स्क्रीन आइकॉन्स

चिह्न	वर्णन
	आपको नेटवर्क सिग्नल की शक्ति बताता है.
	Bluetooth कनेक्टिविटी पावर चालू है.
	अलार्म घड़ी सेट है.
	रोमिंग सेवा का उपयोग किया गया है
	नए पाठ संदेश(शॉ) को दर्शाता है.
	सामान्य प्रोफाइल को सक्रिया किया गया है.
	मौन प्रोफाइल को सक्रिय किया गया है.
	आउटडोर प्रोफाइल को सक्रिय किया गया है.
	फ्लाइट मोड प्रोफाइल को सक्रिय किया गया है.
	हेडसेट सेटिंग का उपयोग किया गया है.
	बैटरी चार्ज स्तर दिखाता है.

# कॉल्स


## कॉल करना

- 1 कीपैड का उपयोग करके संख्या लिखें।  
अंक हटाने के लिए, **CLR** दबाएँ।
- 2 कॉल प्रारंभ करने के लिए,  दबाएँ।
- 3 कॉल समाप्त करने के लिए,  दबाएँ।


**टिप!** अंतर्राष्ट्रीय कॉल करते समय + दर्ज करने के लिए, 0 दबाकर रखें।

**टिप!** कॉल के दौरान वॉल्यूम पर नियंत्रण रखने के लिए, वॉल्यूम कुंजी दबाएँ।

## अपने संपर्कों से कॉल करना


- 1 होम स्क्रीन से संपर्क का चयन करें।
- 2 कीपैड का उपयोग करते हुए उस संपर्क का पहला अक्षर लिखें, जिसे आप कॉल करना चाहते हैं। उदाहरण के लिए, **Office** हेतु प्रथम अक्षर "O" का चयन करने के लिए तीन बार 6 दबाएँ।
- 3 कॉल प्रारंभ करने के लिए विकल्प से कॉल करें का चयन करें या  दबाएँ।

## कॉल का उत्तर देना और अस्वीकार करना


जब आपका फोन रिंग होता है, तो कॉल का उत्तर देने के लिए,  दबाएँ।


अपने फोन को रिंग करते समय म्यूट करने के लिए, साधारण रूप से साइलेंट का चयन करें।

यह तब उपयोगी है यदि आप एक मीटिंग के लिए अपनी प्रोफाइल को साइलेंट पर करना भूल गए हैं।

इनकमिंग कॉल को अस्वीकार करने के लिए  दबाएँ या अस्वीका करें का चयन करें।

## स्पीकरफोन का उपयोग करना

कॉल के दौरान, आप  कुंजी दबाकर स्पीकरफोन को सक्रिय कर सकते हैं और आप हैंड्स-फ्री में हैंडसेट का उपयोग कर सकते हैं।

यदि स्पीकरफोन सक्रिय है, तो सामान्य हैंडसेट वार्तालाप मोड फिर से शुरू करने के लिए फिर से  कुंजी दबाएँ।

## स्पीड डायलिंग

मेनू दबाएँ और संपर्क का चयन करें फिर स्पीड डायल चुनें।

आप ऐसे संपर्क को स्पीड डायल नंबर असाइन कर सकते हैं, जिसे आप बार-बार कॉल करते हैं।

स्पीड डायल 1 आपके वॉइस मेल के लिए सेट किया जाता है और आप इसे बदल नहीं सकते हैं।

## SOS संदेश

यह आपको आपातकालीन स्थिति में अपने कीपैड पर लंबे समय तक 9 नंबर की कुंजी दबाकर स्वचालित रूप से अपने मित्रों को SOS संदेश भेजने की अनुमति देता है। प्रारंभिक रूप से 9 नंबर की कुंजी को लंबे समय तक दबाने पर आपकी SOS संदेश सेटिंग्स खुलती है। एकबार जब आप चालू सेट कर लेते हैं, आप मेनू > संपर्क > स्पीड डायल का चयन करके इस फंक्शन को संपादित कर सकते हैं।

## आपके कॉल लॉग्स देखना

मेनू दबाएँ कॉल लॉग का चयन करें। यदि नेटवर्क, सेवा क्षेत्र के अंदर कॉलिंग लाइन आइडेंटिफिकेशन (ब्लू) का समर्थन करता है तो आप छूटे, प्राप्त और डायल किए गए कॉल्स के कॉल रिकॉर्ड की जाँच कर सकते हैं।

## कॉल सेटिंग्स बदलना

आप किसी कॉल के संगत मेनू सेट कर सकते हैं। मेनू दबाएँ, सेटिंग्स का चयन करें और कॉल चुनें।

**कॉल अंतरण** – अपने कॉल्स को डायवर्ट करना या न करना चुनें।

**कॉल रोधन** – जब आप कॉल्स रोधन करना चाहें, तब इसका चयन करें।

**सीमित डायल नंबर** – उन नंबर की सूची चुनें, जिसे आपके फोन से कॉल किया जा सके। आपको अपने ऑपरेटर से PIN2 कोड की आवश्यकता होगी। केवल फिक्सड डायल सूची में शामिल नंबरों को ही आपके फोन से कॉल से किया जा सकता है।

**कॉल प्रतीक्षा** – किसी कॉल के प्रतीक्षा में होने पर संकेत प्राप्त करें। (आपके नेटवर्क प्रदाता पर निर्भर करता है।)

**कॉल अस्वीकार करें** – आप बंद या चालू का चयन करें और उन सभी कॉल्स को अस्वीकार करना चुनें, जो विशिष्ट समूहों, संपर्कों, पंजीकृत नंबरों (जो आपके संपर्कों की सूची में नहीं हैं) या वे जो किसी कॉलर ID के साथ नहीं हैं।

**मेरा नंबर भेजें** – चुनें कि किसी व्यक्ति को कॉल करने पर आपका नंबर प्रदर्शित हो या नहीं। (आपके नेटवर्क प्रदाता पर निर्भर करता है।)

**स्वतः रीडायल** – जब कॉल करने का प्रयास विफल हो जाता है, तो आपको स्वतः रीडायल फंक्शन सेट करने की अनुमति देता है।

**मिनट माइंडर** – निर्धारित करता है कि आपके फोन पर होने के समय सेट किए गए टाइम के अनुसार टोन की आवाज करे या नहीं।

**नया नंबर सहेजें** – हाँ या नहीं का चयन करें।

# संपर्क

## कोई संपर्क खोजना

- 1 होम स्क्रीन से संपर्क का चयन करें.
- 2 कीपैड का उपयोग करते हुए उस संपर्क का पहला अक्षर लिखें, जिसे आप कॉल करना चाहते हैं.
- 3 संपर्कों और उनके भिन्न नंबरों के अंतर्गत स्कॉल करने के लिए नेविगेशन कुंजियों का उपयोग करें.

## नया संपर्क जोड़ना

- 1 मेनू दबाएँ और संपर्कों का चयन करें फिर नाम चुनें. विकल्प और नया संपर्क जोड़ें दबाएँ.
- 2 अपने नए संपर्क का प्रथम और अंतिम नाम दर्ज करें. आपको दोनों दर्ज नहीं करने हैं, लेकिन आपको एक या अन्य दर्ज करना आवश्यक है.
- 3 नंबर दर्ज करें और विकल्प का चयन करें फिर सहेजें चुनें.

**नोट:** यदि आप अधिक जानकारी जोड़ते हैं, विकल्प दबाएँ और विवरण जोड़ें चुनें फिर इच्छित विकल्पों का चयन करें.

**नोट:** जब आप किसी संपर्क का ई-मेल पता संग्रहीत कर रहे हों, तो \*... कुंजी दबाएँ और @ चिह्न फिर OK का चयन करें.

## किसी समूह में संपर्क जोड़ना

आप अपने संपर्कों को समूहों में सहेज सकते हैं, उदाहरण के लिए, अपने सहकर्मियों और परिजनों को अलग-अलग समूह में रखते हुए. फोन में परिवार, मित्र, सहकर्मी, विद्यालय और वीआईपी सहित कई समूह पहले से सेट हैं.

## संदेश

आपके GX300 में SMS (शार्ट मैसेज सर्विस), MMS (मल्टीमीडिया मैसेज सर्विस), ई-मेल साथ ही साथ नेटवर्क के सर्विस मैसेजेज से संबंधित फंक्शंस शामिल हैं.

## संदेश

- 1 मेनू दबाएँ, संदेश का चयन करें और संदेश लिखें चुनें.
- 2 SMS या MMS भेजने के लिए संदेश चुनें.
- 3 नया संदेश संपादक खुल जाएगा. संदेश संपादक पाठ संदेश और मल्टीमीडिया संदेशों को एक सहज और संपादक के बीच आसानी से स्विच करने के लिए संयुक्त करता है. संदेश संपादक की डिफॉल्ट सेटिंग पाठ संदेश है.

**4** फोन नंबर दर्ज करें या विकल्प दबाएँ और अपने संपर्कों की सूची से एक संपर्क जोड़ने के लिए भेजें का चयन करें. आप प्राप्तकर्ता जोड़ें का चयन करके, एकाधिक संपर्क भी जोड़ सकते हैं.

**5** अपना संदेश दर्ज करें.

**6** छवि, वीडियो क्लिप, ध्वनि क्लिप, शिडयूल, व्यावसायिक कार्ड, नोट, पाठ फील्ड, करने के लिए या एक पाठ टेम्पलेट जोड़ने के लिए विकल्प का चयन करें और सम्मिलित करें, चुनें.

**7** भेजें दबाएँ.

**टिप!** संदेश फील्ड में 1 पृष्ठ से अधिक लंबा पाठ दर्ज करने पर, आप अपना संदेश का प्रकार **SMS** या **MMS** के रूप में चयन कर सकते हैं.

यदि आप भेजने के लिए संदेश का प्रकार बदलना चाहते हैं, तो मेनू > संदेश > संदेश सेटिंग्स झ पाठ संदेश दबाएँ और लंबे पाठ को इस रूप में भेजें चुनें.

**चेतावनी:** छवि, वीडियो क्लिप, ध्वनि क्लिप, शिडयूल, व्यावसायिक कार्ड, पाठ फील्ड या विषय को संदेश संपादक में जोड़ दिया गया है, यह स्वचालित रूप से **MMS** मोड में कनवर्ट कर दिया जाएगा और आपसे उसके अनुसार ही शुल्क लिया जाएगा.

संदेश जो फोन या सिम में जमा है उसे सिम या फोन स्मृति में मूव किया जा सकता है

आप एसएमएस एक समय में कई संपर्क करने के लिए भेज सकते हैं, जोड़े विकल्प खुले सूची से होगा जहाँ उपयोगकर्ता चिन्हित कर सकते हैं/संदेश भेजने के लिए केवल 20 संपर्क और चिन्हित किया जा सकता है यदि उपयोगकर्ता का चयन मार्क केवल पहले 20 संपर्क को चिन्हित किया जायेगा , एक विषय समूह को एसएमएस भेजने के लिए 'संपर्क' सूची से विकल्प का चयन करे 'समूह' ,

## पाठ दर्ज करना

आप फोन के कीपैड का उपयोग करते हुए अल्फान्यूमेरिक वर्ण दर्ज कर सकते हैं. फोन में निम्न पाठ इनपुट विधि उपलब्ध हैं: **T9** मोड, **Abc** मोड और **123** मोड.

**नोट:** हो सकता है कि कुछ फील्ड्स केवल एक पाठ इनपुट मोड की अनुमति दें (उदा. पता बुक फील्ड्स में टेलीफोन नंबर).

## T9 मोड

**T9** मोड आपके द्वारा लिखे जा रहे शब्दों को पहचानने के लिए आपके द्वारा दबाई जा रही कुंजियों के क्रम के आधार पर अंतर्निहित शब्दकोश का उपयोग करता है.

आप जिस अक्षर को दर्ज करना चाहते हैं, बस उससे संबंधित कुंजी दबाएँ और शब्दकोश दर्ज किए सभी अक्षर दर्ज किए जाने के बाद शब्द को एकबार में पहचान लेगा।

## Abc मोड

इस मोड में आप अपने इच्छित अक्षर वाली कुंजी को दबाकर अक्षर डाल सकते हैं, इसके लिए अक्षर दिखाई देने तक आपको एक, दो, तीन या चार बार कुंजी को दबाना पड़ सकता है।

## 123 मोड

प्रत्येक संख्या के लिए एक बार कुंजी दबाकर संख्याएँ लिखें।

आप अक्षर मोड में रहते हुए भी इच्छित कुंजी को दबाए रखकर अंक डाल सकते हैं।

## अक्षर व अंक प्रविष्ट करने की तालिका

बटन	अक्षर/अंक (बटनों को इतनी बार दबाएँ)													
	1 बार	2 बार	3 बार	4 बार	5 बार	6 बार	7 बार	8 बार	9 बार	10 बार	11 बार	12 बार	13 बार	14 बार
1	ॐ	.	:	॰	1									
2	।	ि	ी	ु	ू	ॢ	अ	आ	इ	ई	उ	ऊ	ॢ	2
3	ँ	ॄ	ॅ	ॆ	े	ै	ए	ऐ	ॐ	ओ	औ	ऑ	ॣ	
4	क	ख	ग	घ	ङ	4	क	ख	ग					
5	च	छ	ज	झ	ञ	5	ज							
6	ट	ठ	ड	ढ	ण	6	ड	ढ						
7	त	थ	द	ध	न	7								
8	प	फ	ब	भ	म	8	फ							
9	य	र	ल	व	श	ष	स	ह	9	य				
0	—													

## हिन्दी शब्द लिखने के उदाहरण

### 1) किताब

- क : — बटन 4 को 1 बार दबाएँ.  
ि : — बटन 2 को 2 बार दबाएँ.  
त : — बटन 7 को 1 बार दबाएँ.  
ा : — बटन 2 को 1 बार दबाएँ.  
ब : — बटन 8 को 3 बार दबाएँ.

### 2) क्षत्रिय

- क : — बटन 4 को 1 बार दबाएँ.  
् : — बटन 1 को 4 बार दबाएँ.  
ष : — बटन 9 को 6 बार दबाएँ.  
त : — बटन 7 को 1 बार दबाएँ.  
् : — बटन 1 को 4 बार दबाएँ.  
र : — बटन 9 को 2 बार दबाएँ.  
ि : — बटन 2 को 2 बार दबाएँ.  
य : — बटन 9 को 1 बार दबाएँ.

### 3) ज्ञानी

- ज : — बटन 5 को 3 बार दबाएँ.  
् : — बटन 1 को 4 बार दबाएँ.  
अ : — बटन 5 को 5 बार दबाएँ.  
ा : — बटन 2 को 1 बार दबाएँ.  
न : — बटन 7 को 5 बार दबाएँ.  
ी : — बटन 2 को 3 बार दबाएँ.

## आपका ई-मेल सेट करना

आप अपने GX300 पर ई-मेल का उपयोग करके कहीं से भी संपर्क में रह सकते हैं.

POP3 या IMAP4 ई-मेल खाता सेटअप करना अब त्वरित और आसान है.

- 1 मेनू दबाएँ, संदेश का चयन करें और संदेश सेटिंग्स चुनें.
- 2 ई-मेल और फिर ई-मेल खातों का चयन करें.
- 3 जोड़ें दबाएँ और पॉप अप निर्देश का पालन करें और आवश्यक जानकारी दर्ज करें.

## आपके नए खाते का उपयोग कर ई-मेल भेजना

ई-मेल भेजनेप्राप्त करने के लिए, आपको ई-मेल खाता सेट करना चाहिए.

- 1 मेनू का चयन करें, संदेश का चयन करें और संदेश बनाएँ चुनें.
- 2 ई-मेल चुनें और एक नया ई-मेल खुल जाएगा.
- 3 प्राप्तकर्ता का पता दर्ज करें और विषय लिखें.
- 4 अपना संदेश दर्ज करें.
- 5 छवि, वीडियो क्लिप, ध्वनि क्लिप, व्यावसायिक कार्ड, शिडयूल या नोट जोड़ने के लिए सम्मिलित करें का चयन करें विकल्प दबाएँ.

**6** भेजें दबाएँ और आपका ई-मेल भेज दिया जाएगा.

## संदेश फोल्डर्स

मेनू दबाएँ, संदेश का चयन करें. आपके GX300 पर उपयोग की गई फोल्डर संरचना काफी स्वयं-वर्णनात्मक है.

**इनबॉक्स** – आपको प्राप्त सभी संदेश आपके इनबॉक्स में स्थित होते हैं. यहाँ से आप उत्तर दे सकते हैं, अग्रेषित कर सकते हैं और बहुत कुछ कर सकते हैं.

**मेरा मेलबॉक्स** – आपके सभी ई-मेल, जो आप प्राप्त करते हैं, मेरे मेलबॉक्स में स्थित होते हैं.

**प्रारूप** – यदि किसी संदेश को पूर्ण लिखने के लिए आपके पास प्रयाप्त समय नहीं है, तो आप अभी तक लिखे गए संदेश को यहाँ सहेज सकते हैं.

**आउटबॉक्स** – जब संदेश भेजे जा रहे हों, तो यह एक अस्थायी संग्रहण फोल्डर होता है.

**प्रेषण आइटम्स** – आपके द्वारा भेजे गए सभी संदेशों की प्रतिलिपियाँ आपके भेजे गए आइटम्स में रखी जाती हैं.

**सहेजे गए आइटम** – आप अपने सहेजे गए संदेशों, पाठ टेम्पलेट्स और मल्टीमीडिया टेम्पलेट्स तक पहुँच प्राप्त कर सकते हैं.

**भावनाएं** – त्वरित उत्तर के लिए, उपयोगी इमोटिकॉन्स की एक सूची पहले ही से लिखी है. आप इमोटिकॉन्स को जोड़, संपादित और

हटा सकते हैं. आप संदेश लिखते समय, अपनी प्राथमिकता के अनुसार इमोटिकॉन सम्मिलित कर सकते हैं.

**संदेश सेटिंग्स** – आपके संदेश सेटिंग्स पूर्वनिर्धारित हैं, ताकि आप तुरंत संदेश भेज सकें. यदि आप सेटिंग्स को बदलना चाहें, तो आप सेटिंग्स विकल्प का उपयोग करते हुए यह कर सकते हैं.


**टिप:** इनबाक्स संदेशों को आप आसान तरीके से उपयोग करने के लिए कृम बंध कर सकते हैं (जैसेकी विशय, दिनांक, प्रेषक)

## कैमरा

अपने फोन में बने कैमरा मॉड्यूल का उपयोग करके, आप लोगों के चित्र ले सकते हैं.

इसके अलावा, आप दूसरे लोगों को फोटो भेज सकते हैं और फोटो का वॉलपेपर के रूप में चयन कर सकते हैं.


## तुरंत फोटो लेना

- 1 मेनू दबाएँ और मीडिया का चयन करें. व्यूफाइंडर खोलने के लिए कैमरा का चयन करें.
- 2 फोन को पकड़ कर और लेंस को फोटो के सब्जेक्ट पर पॉइंट करें.
- 3 फोटो लेने के लिए  कुँजी दबाएँ.



## वीडियो कैमरा

### तुरंत वीडियो शूट करना

- 1 मेनू दबाएँ और मीडिया का चयन करें, फिर वीडियो चुनें.
- 2 कैमरा लेंस को वीडियो के सब्जेक्ट पर पॉइंट करें.
- 3 रिकॉर्डिंग प्रारंभ करने के लिए  कुंजी दबाएँ.
- 4 REC व्यूफाइंडर में प्रकट होगा और टाइमर आपके वीडियो की लंबाई दिखाएगा.
- 5 रिकॉर्डिंग रोकने के लिए रोकें का चयन करें.

## संगीत

आपके GX300 में एक अंतर्निहित संगीत प्लेयर है ताकि आप अपना मनपसंद संगीत सुन सकें.

**नोट:** संगीत अंतर्राष्ट्रीय संधियों और राष्ट्रीय कॉपीराइट कानून में कॉपीराइट द्वारा सुरक्षित है. संगीत को पुनरु बनाने या प्रतिलिपि बनाने के लिए अनुमति या एक लाइसेंस प्राप्त करना आवश्यक हो सकता है. कुछ देशों में राष्ट्रीय कानून कॉपीराइट की गई सामग्रियों की निजी प्रतिलिपि बनाने से प्रतिबंधित करता है. कृपया इस प्रकार की सामग्री के उपयोग से संबंधित उचित देश के राष्ट्रीय कानून को जाँच लें.

## FM रेडियो

आपके GX300 में एक FM रेडियो सुविधा है ताकि आप कभी भी अपने मनपसंद रेडियो स्टेशन को ट्यून करके सुन सकें.

**नोट:** रेडियो सुनने के लिए आपको अपना हैडसेट जोड़ने की आवश्यकता होगी. रेडियो सुनने और रेडियो को अच्छा ग्रहण करने वाला बनाने के लिए, प्लग को हैडसेट कनेक्टर में सम्मिलित करें.

## स्टेशन खोजना



- 1 मेनू दबाएँ और मीडिया का चयन करें, फिर FM रेडियो चुनें.
- 2 विकल्प चुनें और स्वरूप स्कैन चुनें फिर हाँ का चयन करें. स्टेशन खोजने के लिए, आप बाएँ और दाएँ नेविगेशन कुंजियों का भी उपयोग कर सकते हैं.

## रेडियो सुनना

- 1 मेनू दबाएँ और मीडिया का चयन करें, फिर FM रेडियो चुनें.
- 2 उस स्टेशन के चैनल नंबर का चयन करें, जिसे आप सुनना चाहते हैं.

**टिप:** आप अंतर्निहित स्पीकर द्वारा रेडियो सुन सकते हैं. विकल्प दबाएँ, स्पीकर द्वारा सुनें का चयन करें.



## रेडियो से रिकॉर्ड करना

- 1 रेडियो सुनते समय  कुँजी दबाएँ.
- 2 रिकॉर्डिंग समय आपके फोन पर प्रदर्शित होता है. यदि आप रिकॉर्डिंग रोकना चाहते हैं, तो  कुँजी दबाएँ. रिकॉर्डिंग पूरी होने पर, रिकॉर्ड की गई सामग्री गैलेरी में mp3 फाइल के रूप में सहेजी जाएगी.

## वॉइस रिकॉर्डर

वॉइस मेमो या अन्य ध्वनियाँ रिकॉर्ड करने के लिए अपने वॉइस रिकॉर्डर का उपयोग करें.

### आपके वॉइस मेमो को रिकॉर्ड करना

- 1 मेनू दबाएँ और मीडिया का चयन करें, फिर वॉइस रिकॉर्डर चुनें.
- 2 रिकॉर्डिंग प्रारंभ करने के लिए  कुँजी दबाएँ
- 3 रिकॉर्डिंग समाप्त करने के लिए  कुँजी चुनें.
- 4 विकल्प दबाएँ और रिकॉर्डिंग सुनने के लिए चलाएँ का चयन करें.

## गैलेरी

आप अपने फोन की मेमोरी में किसी भी मीडिया फाइल का संग्रह कर सकते हैं, ताकि आपको आपकी सभी छवियों, ध्वनियों, वीडियो, अन्य और गेम्स के लिए आसानी से पहुँच हो. आप अपनी फाइलों को मेमोरी कार्ड

में भी सहेज सकते हैं. मेमोरी कार्ड उपयोग करने का लाभ यह है कि आप अपने फोन की मेमोरी का स्थान खाली कर सकते हैं. आपकी सभी मल्टीमीडिया फाइलें गैलेरी में सहेजी जाएँगी. फोल्डर्स की सूची खोलने के लिए मेनू दबाएँ फिर गैलेरी का चयन करें.

## ऑर्गनाइजर

टिप: उपयोग कर्ता एक एसएमएस अनुसूची पूर्व निर्धारित सख्या या संपर्क को सेटकिये गये समय या दिनांक को भेजा जा सकता है

### आपका अलार्म सेट करना

**(मेनू > ऑर्गनाइजर > अलार्म घड़ी)**

किसी निर्दिष्ट समय को याद रखने के लिए आप 5 अलार्म घड़ियाँ तक सेट कर सकते हैं.

### कैलेंडर का उपयोग करना

**(मेनू > ऑर्गनाइजर > कैलेंडर)**

जब आप इस मेनू में आते हैं, तो एक कैलेंडर दिखाई देता है. वर्तमान दिनांक पर वर्गाकार कर्सर स्थित होता है. आप नेविगेशन कुंजियों का उपयोग करके कर्सर को किसी अन्य तिथि पर ले जा सकते हैं.

**आपकी करने के लिए सूची में आइटम जोड़ना ( मेनू > ऑर्गनाइजर > टूडू सूची)**

आप करने के लिए कार्यों को देख, संपादित और जोड़ सकते हैं.

## नोट जोड़ना

### (मेनू > ऑर्गनाइजर > नोट्स)

आप अपने स्वयं के नोट्स यहाँ पंजीकृत कर सकते हैं.

## गुप्त नोट्स

### (मेनू > ऑर्गनाइजर > गुप्त नोट्स)

आप अपनी गोपनीयता की सुरक्षा के लिए व्यक्तिगत मेमो लिख सकते हैं. आप इस मेनू का उपयोग करने के लिए, सुरक्षा कोड दर्ज करें.

## अपने कैलक्युलेटर का उपयोग करना

### (मेनू > ऑर्गनाइजर > कैलक्युलेटर)

कैलक्युलेटर मूल अंकगणितीय फंक्शंस प्रदान करता है: जोड़ना, घटाना, गुणा, विभाजन और वैज्ञानिक अनुप्रयोग भी.

## स्टॉपवॉच का उपयोग करना

### (मेनू > ऑर्गनाइजर > स्टॉपवॉच)

यह विकल्प आपको स्टॉपवॉच फंक्शन के उपयोग की अनुमति देता है.

## तिथि खोजक (मेनू > ऑर्गनाइजर > दिनांक ढूँढने वाला)

दिनांक ढूँढने वाला एक हैंडी उपकरण है जो दिनों की एक निश्चित संख्या के बीतने के बाद कौन सा दिनांक होगा, यह परिकलित करने में आपकी मदद करता है.

## इकाई कनवर्ट करना

### (मेनू > ऑर्गनाइजर > कनवर्टर)

यह कई मापों को आपकी इच्छित इकाई में कनवर्ट करता है.

## अपनी विश्व समय में एक शहर जोड़ना

### (मेनू > ऑर्गनाइजर > विश्व घड़ी)

आप विश्व घड़ी की सूची में वह शहर जोड़ सकते हैं, जिसकी आपको आवश्यकता है. आप पूरे विश्व के मुख्य शहरों का वर्तमान समय भी जाँच सकते हैं.

## इस पर जाएँ

### (मेनू > ऑर्गनाइजर > इस पर जाएँ)

आप जिस मेनू को खोज रहे हैं, वहाँ तक जाने में ये आपकी मदद करता है. आप आइटम को यहाँ जाएँ के रूप में सेट कर सकते हैं.

## टॉर्च

### (मेनू > ऑर्गनाइजर > टॉर्च)

यह आपको लैंप से किसी स्थान पर रोशनी करने की अनुमति देता है . इसे चालू पर सेट करें और आप फोन के पीछे की तरफ रोशनी देख सकते हैं.

## फेक कॉल

### (मेनू > ऑर्गनाइजर > फेक कॉल)

नकारात्मक स्थितियों से शांतिपूर्ण ढंग से बचने के लिए यह एक उपयोगी फंक्शन है.

आप फेक कॉल मेनू में समय सेट करके स्वयं को कॉल कर सकते हैं.

## वेब

### वैप ब्राउजर तक पहुँच प्राप्त करना

आप वैप ब्राउजर लॉन्च कर सकते हैं और वेब सेटिंग्स पर सक्रिय प्रोफाइल के होमपेज पर पहुँच सकते हैं. आप मैन्युअल रूप से भी URL पता दर्ज कर सकते हैं और संबद्ध वैप पृष्ठ तक पहुँच सकते हैं.

- 1 मेनू दबाएँ और वेब का चयन करें.
- 2 ब्राउजर के होमपेज पर सीधे पहुँच प्राप्त करने के लिए, होम का चयन करें. वैकल्पिक रूप से, पते पर जाएँ का चयन करें और अपने इच्छित URL में लिखें.

**नोट:** इस सेवा से कनेक्ट होने और सामग्री डाउनलोड करने के लिए अतिरिक्त शुल्क लगाया जाता है. अपने नेटवर्क प्रदाता से अपना डेटा जुल्क जाँचें.

**टिप:** आपके GX300 के साथ प्रिलोडेड खेल आते हैं जो आपको मनोरंजन करते हैं साथ ही आपको कुछ अनुप्रयोगी दिये गये हैं जैसे की

डेटा वॉलेट : यह अनुप्रयोग अपने व्यक्तिगत सूचनाओं के लिए रख गया है (क्रेडिट कार्ड / ब्रध्ण / ईमेल आइडी विवरण जस्ट क्रिकेट: एक ऐसा जावा अपलिकेशन है जो इस हैन्डसेट में मिल रहा है जिसमें हम ऑनलैन एक्सीस करके हम लैव मेचस देख सकते हैं

फेक कॉल को आइडल स्क्रीन में एकटीवेट या डिएक्टिवेट करने के लिए ##\*# कोड को दबा सकते हैं

## सेटिंग्स

**अपने प्रोफाइल को व्यक्तिगत रूप देना (मेनू > सेटिंग्स > प्रोफाइल्स > प्रदर्शित करें)**

आप प्रत्येक प्रोफाइल सेटिंग को व्यक्तिगत बना सकते हैं. अपना इच्छित प्रोफाइल चुनें और विकल्प का चयन करें और संपादन करें चुनें.

## फ्लाइट मोड का उपयोग करना

(मेनू > सेटिंग्स > प्रोफाइल्स > फ्लाइट मोड)

फ्लाइट मोड चालू करने के लिए इस फंक्शन का उपयोग करें। फ्लाइट मोड चालू होने पर, आप कॉल नहीं कर सकेंगे, इंटरनेट से कनेक्ट नहीं हो सकेंगे, संदेश नहीं भेज सकेंगे।

## अपनी डिस्प्ले सेटिंग्स बदलना

(मेनू > सेटिंग्स > प्रोफाइल्स)

आप फोन डिस्प्ले की सेटिंग्स बदल सकते हैं।

## अपना दिनांक और समय बदलना

(मेनू > सेटिंग्स > दिनांक और समय)

आप दिनांक और समय से संबंधित फंक्शन सेट कर सकते हैं।

## अपनी कनेक्टिविटी सेटिंग्स बदलना

आपकी कनेक्टिविटी सेटिंग्स आपके नेटवर्क ऑपरेटर द्वारा पहले ही सेट कर दी गई है, इसलिए आप सीधे ही अपने नए फोन का उपयोग शुरू कर सकते हैं। यदि आप कोई सेटिंग्स बदलना चाहते हैं, तो इस मेनू का उपयोग करें। इस मेनू में आप नेटवर्क सेटिंग्स और डेटा पहुँच प्रोफाइल्स कॉन्फिगर कर सकते हैं।

मेनू दबाएँ और सेटिंग्स का चयन करें, फिर कनेक्टिविटी चुनें।

आपके विकल्प इस प्रकार हैं:

**ब्लूटूथ** – ब्लूटूथ के उपयोग के लिए अपने GX300 का सेटअप करें। आप अन्य डिवाइसेज पर अपनी दृश्यता अनुकूलित कर सकते हैं या फोन के साथ युग्मित किए गए डिवाइसेज में खोजें।

**USB संयोग मोड** – आप अपने फोन पर कई कार्यों के लिए USB कनेक्शन मोड का चयन कर सकते हैं।

**व्यापक संग्रहण:** इसका चयन करें और अपने हैंडसेट को अपने कंप्यूटर से कनेक्ट करें और फाइलों को GX300 निकालने योग्य डिवाइस फोल्डर में खींचें और छोड़ें-

**PC सुइट:** इसका चयन करें और हैंडसेट को PC सिंक मोड में अपने कंप्यूटर से कनेक्ट करें।

**सदा पूछें:** प्रत्येक समय हैंडसेट को कंप्यूटर से कनेक्ट करने पर, इसका चयन करना, मोड का चयन करने के लिए एक विकल्प देगा।

नोट: USB मास संग्रहण कार्यक्षमता का उपयोग करने के लिए, आपको आपके फोन में एक बाह्य मेमोरी कार्ड सम्मिलित करने की आवश्यकता होगी।

## अपनी ब्लूटूथ सेटिंग्स बदलना

- 1 मेनू दबाएँ और सेटिंग्स का चयन करें, फिर कनेक्टिविटी चुनें।
- 2 ब्लूटूथ चुनें और सेटिंग्स का चयन करें।

**इनमें अपने बदलाव करें:**

**मेरे फोन की दृश्यता** – चुनें कि आपकी डिवाइस अन्यों के लिए दृश्यमान रहे, छुपी रहे या 1 मिनट के लिए दृश्यमान हो।

**मेरे फोन का नाम** – अपने LG GX300 के लिए कोई नाम दर्ज करें।

**समर्थित सेवाएँ** – समर्थित सेवाएँ दिखाता है।

**मेरा पता** – अपना ब्लूटूथ पता देखें।

## **किसी अन्य ब्लूटूथ डिवाइस से युग्मित करना**

1 जाँचें कि आपका ब्लूटूथ चालू और दृश्यमान है। ब्लूटूथ सेटिंग्स मेनू में, मेरे फोन की दृश्यता, फिर दृश्यमान का चयन करके आप अपनी दृश्यता सेटिंग्स बदल सकते हैं।

2 ब्लूटूथ मेनू से सक्रिय डिवाइसेज का चयन करें।

3 आपका GX300 डिवाइसेज के लिए खोजेगा। खोज पूर्ण होने पर स्क्रीन पर पुनाश्चर्याँ और टीकें प्रकट होंगे।

4 युग्मित करने के लिए इच्छित डिवाइस चुनें, फिर हैंडसेट एक पासकोड विंडो बनाता है।

5 पासकोड दबाएँ या दर्ज करें।

6 फिर आपका फोन अन्य डिवाइस से कनेक्ट होगा।

7 अब आपका पासकोड रक्षित ब्लूटूथ कनेक्शन तैयार है।

## **PC सुइट**

आप अपने PC को अपने फोन के साथ सिंक्रनाइज कर सकते हैं। यह आपके सभी महत्वपूर्ण विवरण और दिनांक का मिलान सुनिश्चित करेगा और एक बैकअप के रूप में भी कार्य करेगा ताकि आप निश्चित रह सकें।

## **आपके कंप्यूटर पर LG पीसी सुइट स्थापित करना**

1 [www.lgmobile.com](http://www.lgmobile.com) पर जाएँ और पहले अपना क्षेत्र और फिर अपना देश चुनें।

2 मैनुअल और सॉफ्टवेयर पर क्लिक करें।

3 LG मोबाइल समर्थन उपकरण डाउनलोड करें।

4 LG PC सुइट इंस्टॉलर विजार्ड पूरा करने के लिए ऑन स्क्रीन निर्देशों का अनुपालन करें।

5 एक बार स्थापना पूर्ण होने पर, आपके डेस्कटॉप पर LG पीसी सुइट चिह्न प्रकट होगा।

## **अपनी अन्य सेटिंग्स बदलना**

**नेटवर्क** – इस मेनू का उपयोग कर नेटवर्क मोड सेटिंग्स का चयन करें। आप पसंदीदा सूचियों से कनेक्ट रहने के लिए, पसंदीदा नेटवर्क को भी जोड़ सकते हैं।

**इंटरनेट प्रोफाइल** – यह मेनू इंटरनेट प्रोफाइल्स दिखाता है। आप विकल्प मेनू का उपयोग करके नए प्रोफाइल्स बना सकते हैं, उन्हें हटा सकते हैं या संपादित कर सकते हैं। हालाँकि, आप डिफॉल्ट कॉन्फिगरेशन को हटा या संपादित नहीं कर सकते हैं।

**एक्सेस पाईट** – यह मेनू पहुँच बिंदु सूची दिखाता है। आप नए प्रोफाइल्स बना सकते हैं, विकल्प मेनू का उपयोग करके उन्हें हटा या संपादित कर सकते हैं। हालाँकि, आप डिफॉल्ट कॉन्फिगरेशन को हटा या संपादित नहीं कर सकते हैं।

**पैकेट डेटा कनेक्शन** – यदि आप “जब उपलब्ध हो” का चयन करते हैं, तो आपका फोन चालू करते ही स्वचालित रूप से GPRS नेटवर्क से पंजीकृत हो जाता है। यदि आप “जब आवश्यकता हो” का चयन करते हैं, तो GPRS कनेक्शन WAP या अनुप्रयोग कनेक्शन की अवधि के लिए स्थापित होता है।

### **अपने फोन की सेटिंग्स बदलना (मेनू > सेटिंग्स > फोन)**

अपने GX300 को अपनी स्वयं की शैली के अनुसार कार्य करने हेतु अनुकूलित करने का आनंद उठाएँ।

**स्वतरु कुंजी लॉक** – कीपैड को स्टैंडबाय स्क्रीन में स्वचालित रूप से लॉक करता है।

**भाषा** – आप अपने फोन के प्रदर्शन पाठों के लिए भाषा बदल सकते हैं। इस बदलाव से भाषा इनपुट मोड भी प्रभावित होगा।

**ऊर्जा बचत** – ऊर्जा बचत सेटिंग्स को स्विच करने के लिए स्वतरु, हमेशा चालू या बंद करना में से चुनें। यदि आप सेट करते हैं हमेशा चालू, तो आप बैटरी की ऊर्जा की बचत कर सकते हैं।

**हैंडसेट जानकारी** – अपने GX300 के लिए तकनीकी जानकारी देखें।

### **अपनी सुरक्षा सेटिंग्स बदलना (मेनू > सेटिंग्स > सुरक्षा)**

अपने GX300 और इसमें रखी गई महत्वपूर्ण जानकारी को सुरक्षित रखने के लिए अपनी सुरक्षा सेटिंग्स बदलें।

**PIN कोड अनुरोध** – अपने फोन के चालू होने पर अनुरोधित PIN कोड चुनें।

**हैंडसेट लॉक** – अपने हैंडसेट को लॉक करने के लिए चुनें।

**यदि सिम बदल दिया जाता है, तो लॉक करें**

– यदि आप इस विकल्प को सक्रिय करते हैं, तो सिम कार्ड बदलते समय, आपका फोन एक सुरक्षा कोड का अनुरोध करेगा।

**कोड्स बदलें** – अपना पिन कोड, पिन2 कोड, सुरक्षा कोड बदलें।

अनुप्रयोग लट आप निर्दिष्ट कर सकते हैं। अनुप्रयोग लट आपके फोन के गलत उपयोग से बचने के लिए यह उपयोगी है, इसके

लिए एक सुरक्ष कोड की जरूरत पड़ती है  
अगर आप अपने फोन में रहने वाले डेटा को  
देखना चाहते हैं तो इसका इस्तमाल करते हैं  
, डिफॉल्ट सुरक्ष कोड है '0000'

## **मेमोरी की स्थिति देखना**

### **(मेनू > सेटिंग्स > मेमोरी की जानकारी)**

प्रत्येक मेमोरी के उपयोग के तरीके निर्धारित  
करने और उपलब्ध स्थान देखने के लिए,  
आप मेमोरी प्रबंधक का उपयोग कर सकते हैं:  
सामान्य, आरक्षित, सिम और बाह्य मेमोरी और  
मेमोरी कार्ड डाले जाने पर प्राथमिक संग्रहण  
। भी सेट करें.

## **अपने फोन को रीसेट करना**

### **(मेनू > सेटिंग्स > फैक्ट्री सेटिंग्स पुनरु स्थापित करें)**

सभी सेटिंग्स को उनकी फैक्ट्री परिभाषाओं के  
अनुसार रीसेट करने के लिए फैक्ट्री सेटिंग्स  
पुनरु स्थापित करें का उपयोग करें. यह  
फंक्शन सक्रिय करने के लिए आपको सुरक्षा  
कोड की आवश्यकता होगी. डिफॉल्ट सुरक्षा  
कोड "0000" पर सेट किया गया है.



## फोन सॉफ्टवेयर अपडेट

**LG** मोबाइल फोन सॉफ्टवेयर इंटरनेट से अपडेट होता है इस फंक्शन का उपयोग करने के बारे में अधिक जानकारी के लिए, कृपया <http://update.lgmobile.com> या <http://www.lg.com/common/index.jsp> select country Support पर जाएँ

यह सुविधा आपको सर्विस सेंटर जाए बिना ही आसानी से इंटरनेट द्वारा अपने फोन के फर्मवेयर को नवीनतम संस्करण से अपडेट करने की अनुमति देता है.

जैसा कि मोबाइल फोन फर्मवेयर अपडेट को अपडेट प्रक्रिया के लिए उपयोगकर्ता के संपूर्ण ध्यान की आवश्यकता होती है, कृपया आगे बढ़ने से पहले प्रत्येक चरण पर प्रकट होने वाले निर्देशों और नोट्स की जाँच करना सुनिश्चित करें.

कृपया ध्यान दें कि नवीनीकरण के दौरान USB डेटा केबल या बैटरी निकालना आपके मोबाइल फोन को गंभीर रूप से क्षतिग्रस्त कर सकता है.

# सुरक्षित और सक्षम उपयोग के लिए निर्देश

रेडियो फ्रीक्वेंसी ऊर्जा के संपर्क में आना

रेडियो तरंगों से संपर्क और विशिष्ट अवशोषण दर (स्पेसिफिक एब्जॉर्प्शन रेट) ;। त्वर की जानकारी

यह मोबाइल फोन मॉडल GX300 रेडियो तरंगों के एक्सपोजर के लिए लागू सुरक्षा आवश्यकताओं के अनुरूप बनाया गया है। ये आवश्यकताएँ वैज्ञानिक दिशानिर्देशों पर आधारित हैं, जिनमें सभी आयु वर्ग और हर प्रकार के स्वास्थ्य वाले लोगों की सुरक्षा तय करने के लिए बनाए गए सुरक्षा उपाय शामिल हैं।

- रेडियो तरंग संपर्क दिशानिर्देश विशिष्ट अवशोषण दर, या SAR के रूप में पहचाने जाने वाली मापन इकाई का उपयोग करते हैं। फोन पर SAR के परीक्षण मानक विधियों के उपयोग से किए जाते हैं, इसके लिए उपयोग होने वाले सभी फ्रीक्वेंसी बैंड्स में फोन के उच्चतम प्रमाणित पावर स्तर पर संप्रेषण किया जाता है।
- वैसे तो कई LG फोन मॉडल के SAR स्तर में भिन्नता हो सकती है, किंतु उन सभी को रेडियो तरंगों से संपर्क के लिए संबंधित दिशानिर्देशों को पूरा करने के लिए बनाया गया है।

- नॉन-आयोनाइजिंग रेडिएशन प्रोटेक्शन (ICNIRP) के लिए अंतरराष्ट्रीय आयोग द्वारा अनुशंसित SAR सीमा 10g टिश्यू पर औसतन 2 W/kg होती है।
- इस मॉडल फोन का सबसे उच्च SAR मान कान पर उपयोग के लिए 1.43 W/Kg (10g) है और शरीर के संपर्क में होने पर 1.54 W/Kg (10g) है, जिसका परीक्षण DASY4 द्वारा किया गया है।
- जिन देशों/क्षेत्रों ने इंस्टीट्यूट ऑफ इलेक्ट्रिकल एंड इलेक्ट्रॉनिक्स इंजीनियर्स (IEEE) द्वारा अनुशंसित SAR सीमा को स्वीकार किया है, वहाँ के निवासियों के लिए SAR डेटा जानकारी 1g टिश्यू पर औसतन 1.6 W/kg है।

## उत्पाद की देखभाल और रखरखाव

### चेतावनी

इस विशेष फोन मॉडल के साथ केवल बताई गई बैटरियों, चार्जर्स और सहायक उपकरणों का ही उपयोग करें। किसी भी दूसरे प्रकार का उपयोग करने पर फोन पर लागू होने वाले अनुमोदन या वॉरंटी अमान्य हो सकते हैं और यह खतरनाक हो सकता है।

- इस यूनिट को डिसअसेंबल न करें। सुधारने की आवश्यकता होने पर इसे योग्य सेवा तकनीशियन के पास ले जाएँ।
- बिजली के उपकरणों जैसे टीवी, रेडियो और पर्सनल कंप्यूटर से दूर रखें।
- यूनिट को गर्मी के स्रोतों जैसे रेडिएटर्स या कुकर से दूर रखना चाहिए।
- इसे गिराएँ नहीं।
- यूनिट को मैकेनिकल कंपन या झटकों से बचाएँ।
- जिस किसी भी क्षेत्र में विशेष नियम के तहत आवश्यक हो, वहाँ फोन बंद कर दें। उदाहरण के लिए, अपने फोन का उपयोग अस्पतालों में न करें, क्योंकि यह संवेदनशील मेडिकल उपकरणों को प्रभावित कर सकता है।
- चार्ज होते समय फोन को गीले हाथों से न पकड़ें। इससे बिजली का झटका लग सकता है और आपके फोन को गंभीर रूप से क्षति हो सकती है।
- हैंडसेट को ज्वलनशील सामग्री के पास चार्ज न करें, क्योंकि हैंडसेट गर्म होकर आग का कारण बन सकता है।
- यूनिट को बाहर से साफ करने के लिए सूखे कपड़े का उपयोग करें।
- (बेंजीन, थिनर, या एल्कोहल जैसे विलायकों का उपयोग न करें)।
- फोन को मुलायम फर्नीचर पर चार्ज न करें।
- फोन अच्छे हवादार क्षेत्र में चार्ज किया जाना चाहिए।
- इस यूनिट को अत्यधिक धुएँ या धूल में न रखें।
- फोन को क्रेडिट कार्ड्स या ट्रांसपोर्ट टिकट्स के पास न रखें यह चुंबकीय पट्टियों पर अंकित जानकारी को प्रभावित कर सकता है।
- स्क्रीन को नुकीली वस्तु से न ठकठकाएँ, क्योंकि इससे फोन को नुकसान हो सकता है।
- फोन को तरल पदार्थ या नमी में न रखें।
- सहायक उपकरण जैसे ईयरफोन का सावधानीपूर्वक उपयोग करें। एंटीना को अनावश्यक रूप से न छुएँ।

## प्रभावी ढंग से फोन का उपयोग

### इलेक्ट्रॉनिक और मेडिकल डिवाइसेस

सभी मोबाइल फोन में रुकावट आ सकती है, जो कार्यक्षमता को प्रभावित कर सकती है।

- बिना अनुमति के अपने मोबाइल फोन का उपयोग मेडिकल उपकरण के पास

न करें। आपके फोन की कार्रवाई आपके मेडिकल डिवाइस के साथ हस्तक्षेप कर सकती है या नहीं, यह निर्धारित करने के लिए कृपया अपने डॉक्टर से संपर्क करें।

- मोबाइल फोन द्वारा कुछ श्रवण सुविधाएँ बाधित हो सकती हैं।
- छोटा-सा व्यवधान भी टीवी, रेडियो, पीसी इत्यादि को प्रभावित कर सकता है।

## पेसमेकर

पेसमेकर के निर्माता अनुशंसा करते हैं कि पेसमेकर के साथ संभावित हस्तक्षेप से बचने के लिए एक मोबाइल फोन और और एक पेसमेकर के बीच न्यूनतम 15सेमी के विभाजन को अवश्य संचालित करना चाहिए। इसे प्राप्त करने के लिए इस फोन को अपने पेसमेकर के विपरीत कान पर उपयोग करें और इसे वक्ष के पॉकेट पर नहीं रखें

## अस्पताल

अस्पताल, क्लिनिक या स्वास्थ्य केंद्र सुविधाओं में जब कहा जाए तो अपने वायरलेस डिवाइस को सविच ऑफ कर दें। ये अनुरोध संवेदनशील मेडिकल उपकरणों के संभावित हस्तक्षेपों को रोकने के लिए बनाए गए हैं।

## सड़क सुरक्षा

जिन क्षेत्रों में आप वाहन चलाते हैं, वहाँ मोबाइल फोन के उपयोग से संबंधित कानूनों और नियमों की जानकारी ले लें।

- वाहन चलाते समय हैंड-हेल्ड फोन का उपयोग न करें।
- वाहन चलाने पर पूरा ध्यान दें।
- यदि उपलब्ध हो, तो हैंड्स-फ्री किट का उपयोग करें।
- यदि वाहन चलाते समय आवश्यक हो, तो कॉल करने या उत्तर देने से पहले वाहन को सड़क के किनारे लगाएँ।
- RF ऊर्जा आपके वाहन के कुछ इलेक्ट्रॉनिक सिस्टम्स जैसे कार स्टीरियो और सुरक्षा उपकरण को प्रभावित कर सकती है।
- जब आपके वाहन में एयर बैग की सुविधा हो, तो लगे हुए या पोर्टेबल वायरलेस उपकरण से व्यवधान न डालें। इससे एयर बैग विफल हो सकता है या अनुपयुक्त कार्य के चलते गंभीर चोट पहुँचा सकता है।
- यदि आप यात्रा के समय संगीत सुन रहे हैं, तो कृपया सुनिश्चित करें कि वॉल्यूम उचित स्तर पर रहे, जिससे आप अपने चारों ओर के वातावरण के प्रति सचेत रहें। यह तब विशेष रूप से जरूरी है, जब आप रास्ते में हों।

## अपने सुनने की क्षमता को नुकसान न पहुँचाएँ

यदि आप लंबे समय तक तेज ध्वनि सुनते हैं तो आपकी सुनने की क्षमता को क्षति पहुँच सकती है। इसलिए हम सलाह देते हैं कि आप अपना हैंडसेट कान के पास चालू या बंद न करें। हम इसकी भी सलाह देते हैं कि संगीत और कॉल वॉल्यूम उचित स्तर पर सेट हों।

## ग्लास भाग

आपके मोबाइल डिवाइस के कुछ भाग कांच के बने हैं। यदि आपका मोबाइल डिवाइस किसी सख्त सतह पर गिर जाता है या उसे कोई शक्तिशाली धक्का लगता है, तो यह कांच टूट सकता है। यदि ग्लास टूटता है तो स्पर्श नहीं करें या निकालने का प्रयास नहीं करें। अपने मोबाइल डिवाइस का उपयोग तब तक रोकें जब तक ग्लास अधिकृत सेवा प्रदाता द्वारा बदल नहीं दिया जाता।

## विस्फोटक क्षेत्र

फोन का उपयोग ऐसे स्थान पर न करें जहाँ विस्फोट हो रहे हों। प्रतिबंधों पर ध्यान दें, और नियम या शर्तों का पालन करें।

## संभावित रूप से विस्फोट वाले वातावरण

- फोन का उपयोग ईंधन भरने के स्थान पर न करें।
- ईंधन या रसायनों के पास उपयोग न करें।
- मोबाइल फोन और सहायक उपकरणों को ज्वलनशील गैस, तरल या विस्फोटकों के साथ अपने वाहन में न ले जाएँ या न ही रखें।

## एयरक्रॉफ्ट में

वायरलेस डिवाइस से एयरक्रॉफ्ट में बाधा उत्पन्न हो सकती है।

- किसी भी एयरक्रॉफ्ट में चढ़ते समय अपना मोबाइल फोन बंद कर दें।
- क्रू की अनुमति के बिना विमानतल पर इसका उपयोग न करें।

## बच्चे

फोन को छोटे बच्चों की पहुँच से दूर किसी सुरक्षित स्थान पर रखें। इसमें छोटे-छोटे भाग होते हैं जो यदि अलग हो जाएँ तो गले में फँस सकते हैं।

## आपातकालीन कॉल्स

संभव है कि आपातकालीन कॉल्स सभी मोबाइल नेटवर्क्स के तहत उपलब्ध न हों। इसलिए, आपको आपातकालीन कॉल्स

के लिए केवल फोन पर ही निर्भर नहीं रहना चाहिए. अपने स्थानीय सेवा प्रदाता से इसकी जानकारी लें.

### **बैटरी जानकारी और देखभाल**

- बैटरी रिचार्ज करने के पहले आपको उसे पूरी तरह डिस्चार्ज करने की आवश्यकता नहीं है. अन्य बैटरी सिस्टम्स के विपरीत, ऐसा कोई स्मृति प्रभाव नहीं है जिससे बैटरी के प्रदर्शन पर असर पड़ता है.
- केवल LG बैटरियों और चार्जर्स का उपयोग करें. LG के चार्जर्स बैटरी का जीवन बढ़ाने के लिए होते हैं.
- बैटरी पैक को अलग-अलग न करें या उसे शॉर्ट-सर्किट से बचाएँ.
- बैटरी पैक के धातु वाले हिस्सों को साफ रखें.
- बैटरी का प्रदर्शन अपेक्षानुसार न रहने पर उसे बदल दें. बैटरी पैक को सैकड़ों बार रीचार्ज किया जा सकता है, जब तक कि उसे बदलने की आवश्यकता न हो.
- यदि बैटरी को लंबे समय से उपयोग नहीं किया गया है तो उसकी क्षमता बढ़ाने के लिए उसे रीचार्ज करें.
- बैटरी चार्जर को सीधे धूप में न रखें या बाथरूम जैसी अधिक नमी वाली जगहों पर इसका उपयोग न करें.

- बैटरी को गर्म या ठंडे स्थानों पर न रखें, इससे बैटरी के प्रदर्शन पर बुरा असर हो सकता है.
- यदि बैटरी को किसी गलत प्रकार की बैटरी से बदला जाता है तो विस्फोट का खतरा होता है.
- उपयोग की गई बैटरीज का निपटान निर्माता के निर्देशों के अनुसार ही करें. जब भी संभव हो इसे रीसायकल करें. इसे घरेलू कचरे की तरह न फेंकें.
- यदि आप बैटरी बदलना चाहते हैं तो सहायता के लिए इसे नजदीक के अधिकृत LG इलेक्ट्रॉनिक्स सेवा केंद्र या डीलर के पास ले जाएँ.
- फोन पूरी तरह चार्ज हो जाने पर चार्जर को वॉल सॉकेट से निकाल दें ताकि चार्जर की अनावश्यक ऊर्जा खपत को बचाया जा सके.
- वास्तविक बैटरी जीवन नेटवर्क कॉन्फिगरेशन, उत्पाद सेटिंग्स, उपयोग पद्धति, बैटरी और वातावरण की परिस्थितियों पर निर्भर करेगा.

## एक्सेसरीज

आपके मोबाइल फोन के लिए विभिन्न सहायक उपकरण हैं। इनका नीचे वर्णन किया गया है।

यात्रा एडॉप्टर



डेटा केबल और  
सीडी



हैमनक  
बैटरी



स्टीरियो  
हेडसेट



### नोट

- हमेशा प्रामाणिक स्ल सहायक उपकरणों का उपयोग करें। ऐसा नहीं करने पर आपकी वॉरंटी अमान्य हो सकती है।
- भिन्न क्षेत्रों में सहायक उपकरण भी भिन्न हो सकते हैं। अधिक जानकारी के लिए कृपया हमारी क्षेत्रीय सेवा कंपनी या अभिकर्ता से संपर्क करें।

# तकनीकी डेटा

## परिवेश का तापमान

अधिकतम : +55°C (डिसचार्जिंग) +45°C (चार्जिंग)

न्यूनतम : -10°C

## Declaration of Conformity



LG Electronics

### Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

### Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri band Terminal Equipment

Model Name

GX300

Trade Name

LG

CE 0168

### Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v1.3.2

EN 300 328 v1.7.1

EN 60950-1 : 2001

EN 50360 : 2001 / EN62209-1 : 2006

EN 301 511 v9.0.2

### Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom

Notified Body Identification Number : 0168

### Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Seung Hyoun, Ji / Director

27. Apr. 2010

LG Electronics Inc. – EU Representative  
Vekwazoom 15, 1327 AE Almere, The Netherlands

Signature of representative



# समस्या निवारण

समस्या	संभावित हल
टेलीफोन चालू नहीं किया जा सकता	कृपया बैटरी निकालकर फिर से लगाएँ। इसके बाद फोन का पावर चालू करने के लिए समाप्तध्वावर चालू कुंजी दबाएँ।
बैटरी खाली	बैटरी चार्ज करें। प्रदर्शन पर चार्जिंग संकेतक जाँचें।
बैटरी ठीक से चार्ज नहीं होती है या कभी-कभी फोन स्वयं बंद हो जाता है	फोन और बैटरी पर चार्जिंग की सतहों को साफ नर्म कपड़े से पोछें।
बैटरी का उपयोग समय कम हो जाता है	यदि बैटरी का समय कम है, तो ऐसा उपयोगकर्ता वातावरण I, या अधिक कॉल्स, या कमजोर सिग्नल्स के कारण हो सकता है।
चार्जिंग त्रुटिकृतापमान सीमा से अधिक है	सुनिश्चित करें कि परिवेशी तापमान ठीक है, कुछ देर प्रतीक्षा करें, और तब पुनरु चार्ज करें।
चार्जिंग त्रुटिकृगलत चार्जर	केवल मूल LG सहायक सामग्री का उपयोग करें।
चार्जिंग त्रुटिकृबैटरी खराब है	बैटरी बदलें।
चार्जिंग त्रुटिकृचार्जिंग के समय कोई बैटरी चिह्न नहीं दिखाई देता	बैटरी खाली है या बहुत समय से उपयोग नहीं की गई है। स्क्रीन पर बैटरी चिह्न दिखाई देने में कुछ समय लग सकता है।
फोन कोड या पासवर्ड भूल गए हैं	डिफॉल्ट फोन कोड "0000" है।
PUK दर्ज करें	पिन कोड लगातार तीन बार गलत दर्ज किया गया है, और फोन अब अवरोधित हो गया है। आपके सेवा प्रदाता द्वारा दिया गया PUK दर्ज करें।
नेटवर्क गुम	संभव है कि आप कमजोर सिग्नल क्षेत्र में हों। ले जाएँ और पुनरु प्रयास करें। आप ऐसे विकल्प का उपयोग करने का प्रयास कर रहे हैं जिसके लिए आपने अपने सेवा प्रदाता से सदस्यता नहीं ली है। आगे की जानकारी के लिए अपने सेवा प्रदाता से संपर्क करें।

# समस्या निवारण

समस्या	संभावित हल
आपने एक नंबर दर्ज किया है किंतु उसे डायल नहीं किया गया था	सुनिश्चित करें कि आपने बात करें/हाँ कुंजी दबाई है. सुनिश्चित करें कि आप सही नेटवर्क सेवा तक पहुँचे हैं. सुनिश्चित करें कि आपने कोई जावक कॉल रोधन विकल्प नहीं सेट किया है. सुनिश्चित करें कि आपने क्षेत्र कोड दर्ज कर दिया है .
आपका संवाददाता आप तक नहीं पहुँच सकता	सुनिश्चित करें कि आपका फोन चालू है. बात करें/हाँ कुंजी को एक सेकेंड से अधिक समय के लिए दबाएँ. सुनिश्चित करें कि आप नेटवर्क सेवा का उपयोग कर रहे हैं. सुनिश्चित करें कि आपने कोई आवक कॉल रोधन विकल्प नहीं सेट किया है.
आपका संवाददाता आपकी आवाज नहीं सुन सकता	सुनिश्चित करें कि आपने लाउडस्पीकर बंद कर दिया है. सुनिश्चित करें कि आपने अपना फोन मुँह के पास रखा है. माइक्रोफोन, फोन के नीचे स्थित है.
कॉल की वॉइस क्वालिटी बहुत खराब है	डिसप्ले पर सिग्नल शक्ति संकेतक को जाँचें. पट्टियों की संख्या सिग्नल क्षमता दर्शाती है. यदि आप किसी बिल्डिंग में हैं तो फोन को थोड़ा घुमाकर या खिड़की के पास ले जाकर प्रयास करें.
जब आप किसी संपर्क को रीकॉल करते हैं, तो कोई नंबर डायल नहीं किया जाता	नंबर सही तरह से संग्रहीत किया गया है, यह सुनिश्चित करने के लिए फोनबुक खोज सुविधा का उपयोग करें. यदि आवश्यकता हो, तो नंबर फिर से सहेजें.
ब्राउजर का उपयोग नहीं कर सकता	आपकी सदस्यता में डेटा क्षमता शामिल नहीं है. आपको सेवा सक्षम करने के लिए अपने सेवा प्रदाता से संपर्क करना होगा.
यदि उपरोक्त दिशानिर्देशों से आपकी समस्या हल करने में मदद नहीं मिलती है	आपके मोबाइल फोन का मॉडल नंबर और समस्या का स्प ट वर्णन नोट कर लें. मदद के लिए अपने फोन डीलर या LG सेवा केंद्र से संपर्क करें.

# LG Mobile



## WARRANTY CARD

This LG handset and charger comes with a 12-month warranty from date of purchase or 15 months from manufacturing date of corresponding IMEI No. Of the unit whichever is earlier, against defect in material or workmanship. In case of a defect, LG Electronics India Pvt. Ltd. undertakes to get the set repaired free of charge through its authorised service centre (ASC) or service dealer subject to following conditions:

### Terms and Conditions

1. This warranty is applicable to the first purchase and in no case it can be transferred or extended.
2. Repair of this product will be carried out on a carry in basis to the nearest ASC.
3. While the company will make every effort to carry out repairs at the earliest, it however is made explicitly clear that the company is under no obligation to do so in a specified period of time.
4. The company or its authorised ASC/ service dealer reserves the right to retain any parts of the component/s replaced at its discretion. In the event of a defect being noticed in the equipment during the warranty period.
5. This warranty entitles the purchaser to free of cost repairs of the unit within warranty period and does not entitle for replacement or refund of entire unit. Claims, if any, to this warranty shall in no case exceed the purchase price of the unit.
6. In case of any software upgradation of the phone, no warranty is provided on phone memory or phone book.
7. The warranty is void in case the serial no./ IMEI no. is tampered / disfigured or details in the warranty card are not properly filled up at the time of purchase.
8. This warranty is not valid for damages resulting due to negligence, mishandling, improper use, tampering, breakage, soaking, fire, unauthorised repair and failure due to network upgrades.
9. Batteries are covered under warranty for a period of 6 months from date of purchase or 9 months from date of corresponding IMEI no. of the unit whichever is earlier
10. Warranty does not cover accessories external to the equipment supplied by the dealer.
11. The Delhi / New Delhi courts shall have the jurisdiction to try any dispute and /or suits related to or arising out of this agreement.

### Customer Information Center/ Call Center Number

For any query related to the after sales service and customer support please contact us at the numbers listed below.

<b>LG 24 x 7 CALL CENTER OPERATIONS</b>	
<b>1800-180-9999</b> <small>(Toll Free)</small>	<b>5757554</b> <small>(Send SMS)</small>
<b>www.lgindia.com</b> <b>lgservice@lgindia.com</b>	

## BRANCH ADDRESSES

S. No.	Branch	Branch Office Address	STD Code	Phone No.
1	Ahmedabad	LGEIL, 233-234, Platinum Plaza, Judges Bungalow Road, Bodakdev Road, Ahmedabad - 51	079	40040013 / 14
2	Asansol	LGEIL, Block-E, 1st Floor, P.C. Chattarjee Market, Rambandhu Tala, GT Road (E) Asansol - 713303	0341	3292009 / 3292010
3	Aurangabad	LGEIL, 302 CIDCO No 3, Opp Hotel Ramgiri, Jalna Road, Aurangabad - 431003	0240	2474055 / 32095436 / 32095437 / 32095438
4	Bangalore	LGEIL, No. 914, 2nd Floor, Shri Venkateshwar Complex, Opp. IBP Petrol Pump, 80ft Road, 6th Block, Korangala - Bangalore - 560095	080	41145145 / 41144750 / 41144751 / 30910754 / 30910753
5	Bhopal	13A Vignes Warehousing Corporation, Sector-G Govindpura Industrial Area J K Road Bhopal	0755	4062900 / 3092938 / 3959804
6	Bhubaneswar	LGEIL, Plot No. 02, 1st Flr., Bapuji Nagar, Bhubaneswar - 751009	0674	2531430 / 2534280 / 3966525 / 3966526
7	Chandigarh	LGEIL, SCO No. 142-143, 3rd Floor, Sector-34A Chandigarh. - 160002	0172	5087389 / 90 / 5089191 / 3256001 / 3256003
8	Chennai	LGEIL, AA11, 2nd Avenue, Fatima Tower, Anna Nagar West, Chennai - 600040	044	65510501 - 04
9	Cochin	LGEIL, 40/1270, Vasudeva Buildings, T.D. Road, Ernakulam Cochin - 682011	0484	2368743 / 2370744 / 2370484 / 4027444 / 4027555
10	Coimbatore	LGEIL, 250a, Sangarur Main Road, Kannappa Nagar, Coimbatore - 641027	0422	2332197 / 2332195 / 2332506 / 3094613 / 3094573
11	Dehradun	LGEIL, M-22, Mobbewala, Tata Commercial Compound, Dehradun Saharanpur Road, Dehradun	0135	2644213 / 283
12	Delhi	LGEIL, A-27, Mohan Co-operative, Industrial Estate, New Delhi	011	26991411 / 12 / 13
13	Ghaziabad	LGEIL, J-10, RDC Rajnagar Ghaziabad - 201001	0120	9811354152 / 3 / 64 / 65
14	Goa	LGEIL, Plot No. D-36-D-4, Rego Baug, Alto Santacruz, Bambolim, Goa - 403	0832	3294955 / 3294956 / 3294759
15	Gurgaon	LGEIL, 11nd Flr. A Block, Centre Point Bldg. Sushant Lok - PH-1, Gurgaon - 122001	0124	4047461 / 62 / 63 / 4272867 / 4047460
16	Guwahati	LGEIL, Shantiner Bhawan, C K Aggarwal Path, Chenikurthi, Guwahati - 781003	0361	2663895 / 2666958 / 2665983 / 2668984
17	Hubli	LGEIL, 603/1B, Ravi Nagar Road, Behind Renuka Petrol Pump, Gokul Road, Hubli - 580030	0836	4205251 / 52 / 2337251 / 52
18	Hyderabad	LGEIL, 1st Floor, Survey No 54, Pulla Reddy Building, Vikarampuri Main Road Kharkhana, Secunderabad - 500004	040	27811732 / 33 / 34
19	Indore	LGEIL, 3rd flr., 304 Bansil Trade Centre, 581/5 M.G. Road, Indore - 452008	0731	4065523 / 24 / 40822157
20	Jaipur	LGEIL, B-71, Sahakar Marg, Lal Kothi Scheme, Jaipur - 302015	0141	5111118 / 5113028 / 5105392
21	Jalandhar	LGEIL, Village Khajuria, Near Hawall Restaurant Jalandhar, Phagwara Highway, G T Road, Jalandhar	01824	502667 / 508025 / 502668
22	Jammu	LGEIL, Plot No. -52, Yard No. 6, Transport Nagar, Narwal, Jammu - 180006	0191	2477420 / 2477419 / 2474396 / 2474394
23	Jodhpur	LGEIL, 22(1-A)/21(2-B)/2, RIICO Heavy Industrial area, Jodhpur - 342003	0291	2742384 / 392
24	Kolkata	LGEIL, 1, Ho-Chi-Min-Sarani, 6th Floor, Metro Towers, Kolkata - 700071	033	22883250 / 51 / 52
25	Kundi	LGEIL, Sunshine Enterprises, Sunder Cold Storage, Gt Karmal Road, Kundi - Sonapat	0130	2219201 / 02 / 03
26	Lucknow	LGEIL, B-537, Hari Kunj, Keshav Nagar, Sitapur Road Lucknow - 226020	0522	2757538 / 39 / 2759121
27	Ludhiana	LGEIL, Village Jhande, Near Badowal Railway Station, Opp ferozpur Road Ludhiana.	0161	2804413 / 19
28	Mumbai	LGEIL, Trade Star, 4th Floor, A Wing, J B Nagar, Andheri Kurla Road, Andheri (E) Mumbai - 400059	022	28352882 - 2887
29	Nagpur	LGEIL, 5a, Road No.13, Behind Mstrc Workshop, MIDC Hinga, Nagpur - 440016	07104	235120 / 235122
30	Patna	LGEIL, 2nd Floor, Ankit Chandra Deep Complex, Bander Bageecha, Near Samrat Hotel, Patna - 800001.	0612	3299156
31	Pune	LGEIL, 105/106, Premium Point, GM Road, Opp Modern High School, 11rd Floor, Shivaji Marg, Pune - 411005	020	66030100 / 732
32	Rajpur	LGEIL, Nathani Compound, Shyam Nagar, Katora Talab, Rajpur (C.G.)	0771	4053171 / 4037470 / 4048745
33	Ranchi	LGEIL, 402, Commerce Tower, Opp. Gel Church Complex, Main Road, Ranchi	0651	3294026 / 2311815 / 3090426
34	Surat	LGEIL, 1001-1004, Ascon Plaza, 11nd Flr, Anand Mahal Road, Behind Bhulka Bhavan School, Adajan, Surat - 395009	0261	2730982 / 83 / 84
35	Thane	LGEIL, Gali Shop No- 206, 207, 2nd Floor, Sai Plaza, Above Vijay Sales Opp. Cine Wonder Mall, Ghodbunder Road, Thane(West) - 400607	022	25472633 / 2637
36	Varanasi	LGEIL, Pama Complex, DLW, Lahartara Road, Shivdaspur, Manduadih, Varanasi UP - 221002	0542	2375432 / 36 / 37
37	Vijaywada	LGEIL, Door No 32-2/1-7, Ratnamamba Street, Prakashji Nagar, Vijaywada - 520010, Andhra Pradesh	0866	2497283 / 87
38	Warangal	LGEIL, HOUSE No. 1-8-598/1 FIRST FLOOR, BESIDE HDFC BANK NAKKAL GUTTA, HANAMAKONDA-506001 (WARANGAL)	0870	2551453

Dealer name with Stamp

Dealer address

IMEI No.

Date of sale

Serial no.

LG Electronics India Pvt. Ltd., Plot No. 51, Udyog Vihar Surajpur Kasma Road, Greater Noida, U.P.

**CHOLAMANDALAM MS GENERAL INSURANCE CO. LTD.**  
**2nd Floor, 9B, DLF Cyber City, Phase-III,**  
**Gurgaon - 122002**

TO

CHOLAMANDALAM MS GENERAL  
INSURANCE CO. LTD.

DATE...../...../.....

2nd Floor, 9B, DLF Cyber City,  
Phase-III, Gurgaon - 122002.  
Haryana

Dear Sir,

RE: Loss of mobile phone no.: .....

MAKE .....MODEL .....

This is to inform that my mobile phone has been lost due to theft on  
.....at.....FIR/DD entry has been lodged

with ..... Police Station. I am enclosing the Claim  
Form cum Bill along with required documents for settlement of the claims.

Thanking you

Yours Sincerely,

Signature of the Insured

Name

## CLAIM FORM CUM CLAIM BILL

To be filled in by the ultimate consumer

Name

Present Address

Tel. No.

Make & Model of the Handset

Invoice No.  Date of Purchase

Dealer Name

Address

Tel. No.

IMEI No.

Date of Theft  Time

Place of Theft

Details of Theft

FIR No./DD No.  Date

Police Station

Amount Claimed

Block the SIM Card within 3 days YES ☐ NO ☐

DATE

PLACE

SIGNATURE OF CUSTOMER

### TERMS AND CONDITIONS:

#### POLICY COVERAGE

1. Theft coverage of LG GSM HANDSET for one year from the date of purchase/invoice only. No other loss covered.
2. Offer applicable on all purchases made from 7th April 2010 to 6th April 2011 under Policy No. **PBG-00016391-000-00** Dated 07/04/2010
3. Only theft registered under section 379 IPC or theft reported under Daily Dairy with Police FIR is covered.
4. Reimbursement will be subject to following depreciation/ deduction on the invoice value from date of purchase:
 

Handset upto 3 months old	-10%
More than 3 months upto 6 months	-15%
More than 6 months upto 9 months	-25%
More than 9 months upto 12 months	-35%

## **CLAIM PROCESSING DOCUMENTS**

In the event of handset loss, the buyer should follow the understated procedure:

- a) (i) Lodge FIR under Section 379 IPC or theft to be entered in Daily Dairy with the Police Station in whose jurisdiction the theft occurred within 24 hours of occurrence of the same.
- (ii) Block the SIM Card with your service provider within 3 days.
- (iii) Send information to the insurance company within 7 days of the loss.
- b) Documents required:
  - (i) Original Invoice & Cash Memo.
  - (ii) Original certified copy of DD/FIR u/s 379 by the police authority.
  - (iii) Translation of vernacular documents in English/Hindi.
  - (iv) Complete claim Form cum Bill and Discharge Voucher.

These documents should be sent to the Policy Issuing Office within 7 days of the loss by regd. post/courier. All document to be submitted in English/Hindi language. The company reserves the right to call for any other necessary document in addition to the documents listed above.

Subject to all the conditions being fulfilled, claim will be settled within 15 days of our receipt of the above documents.

Deduction of Rs. 350/- will be applicable towards accessories.

**Note:** In case the handset cost is more than Rs. 20,000/-, a survey is required. Contact nearest office of Cholamandalam MS General Insurance Co. Ltd. for survey.

For any future queries assistance related to the policy exclusion and claim settlement you may write to Cholamandalam MS General Insurance Co. Ltd. 2nd Floor, 9B, DLF Cyber City, Phase-III, Gurgaon - 122002. Tel. No. 1800-200-5544, Fax No. 0124-30051-99, e-mail id : [customercare@cholams.murugappa.com](mailto:customercare@cholams.murugappa.com)



---

### DISCHARGE VOUCHER

Received from Cholamandalam MS General Insurance Co. Ltd. under Policy No..... in full and final discharge of our claim, the sum of ..... (in words) Rs.....

Signature of Insured /Customer  
across revenue stamp

Affix Re.1 revenue stamp

Date:

Place:



# Customer Information Center

For any query related to the after sales service and customer support please contact us at below details

**LG****24 x 7****CALL CENTER OPERATIONS****1800-180-9999****(Toll Free)****5757554****(Send SMS)****[www.lgindia.com](http://www.lgindia.com)****[lgservice@lgindia.com](mailto:lgservice@lgindia.com)**

