

عربي
ENGLISH



ENGLISH
عربي

دليل مستخدم
GM360i

دليل مستخدم
GM360i

USER GUIDE
GM360i

LG Electronics



www.lg.com

P/N : MMBB0383430 (1.0) **WR**



www.lg.com

P/N : MMBB0383430 (1.0) **WR**

Bluetooth QD ID B016583

Downloaded from <http://www.gsmarc.com>



قد تختلف بعض المحتويات الموجودة في هذا الدليل عن هاتفك وذلك استناداً إلى برنامج الهاتف أو موفر الخدمة.

دليل مستخدم GM360i

تهانينا لشرائك الهاتف المتقدم والصغير الحجم GM360i
من LG، والمصمّم للعمل مع تقنية الاتصال الرقمي الأحدث
للهواتف المحمولة.

المحتويات


- التعرّف على الهاتف الخاص بك.....6
- نظرة على الهاتف وهو مفتوح.....7
- تثبيت بطاقة SIM و البطارية.....8
- شحن الهاتف.....9
- بطاقة الذاكرة.....10
- إستخدام شاشة اللمس.....11
- تلميحات شاشة اللمس.....11
- التحكم بشاشة اللمس.....11
- الشاشة الرئيسية الخاصة بك.....13
- المفاتيح السريعة.....14
- شريط الحالة.....15
- تغيير الحالة من شريط الحالة.....16
- استخدام وظيفة المهام المتعددة.....16
- المكالمات.....17
- إجراء مكالمة.....17
- إجراء مكالمة من الأسماء.....17
- الرد على مكالمة ورفضها.....17
- خيارات أثناء المكالمة.....18
- الاتصال السريع.....19
- إجراء مكالمة ثانية.....19
- عرض سجلات المكالمات.....19
- استخدام تحويل المكالمات.....20
- استخدام حظر المكالمات.....20
- تغيير إعداد المكالمات العام.....20
- الأسماء.....21
- البحث عن جهة اتصال.....21
- إضافة جهة اتصال جديدة.....21
- إنشاء مجموعة.....22
- تغيير إعدادات الأسماء.....22
- عرض المعلومات.....23
- الرسائل.....24
- الرسائل.....24
- إرسال رسالة.....24
- إدخال النص.....24
- وضع T9.....24
- التعرّف على الكتابة اليدوية.....24
- إعداد البريد الإلكتروني.....25
- استرداد رسائل البريد الإلكتروني.....25
- إرسال بريد إلكتروني باستخدام حسابك الجديد.....25
- تغيير إعدادات البريد الإلكتروني.....25
- حافظات الرسائل.....26
- تغيير إعدادات الرسائل النصية.....26
- تغيير إعدادات رسائل الوسائط المتعددة.....27
- تغيير الإعدادات الأخرى.....27
- خدمات الشبكة الاجتماعية (SNS).....28
- Facebook.....28
- Linkbook.....29
- الكاميرا.....30
- التعرّف على محدّد المنظر.....30

المحتويات

41.....	إرسال فيديو كليب.....	31.....	التقاط صورة سريعة.....
41.....	الألعاب والتطبيقات.....	31.....	بعد التقاط الصورة.....
41.....	تشغيل لعبة.....	32.....	استخدام الإعدادات المتقدمة.....
41.....	المستندات.....	33.....	كاميرا الفيديو.....
41.....	نقل ملف إلى هاتفك.....	33.....	التعرّف على محدّد المنظر.....
41.....	أخرى.....	34.....	إنشاء فيديو سريع.....
42.....	الموسيقى.....	34.....	بعد إنشاء الفيديو.....
42.....	نقل الموسيقى إلى الهاتف.....	35.....	استخدام الإعدادات المتقدمة.....
42.....	تشغيل أغنية.....	36.....	الصور ومقاطع الفيديو.....
43.....	إنشاء قائمة تشغيل.....	36.....	عرض الصور وملفات الفيديو.....
43.....	راديو FM.....	36.....	التقاط صورة من فيديو.....
43.....	البحث عن محطات.....	36.....	مشاهدة الصور كعرض شرائح.....
43.....	إعادة تعيين القنوات.....	37.....	تعيين صورة كخلفية الشاشة.....
44.....	منظم المواعيد.....	37.....	تعديل الصور.....
44.....	إضافة حدث إلى التقويم.....	38.....	إضافة تأثير إلى صورة.....
44.....	إضافة عنصر إلى قائمة المهام.....	39.....	الوسائط المتعددة.....
44.....	استخدام الباحث عن التاريخ.....	39.....	الصور.....
45.....	إضافة مذكرة.....	39.....	إرسال صورة.....
45.....	ضبط المنبه.....	39.....	استخدام صورة.....
45.....	إضافة مذكرة بواسطة لوحة الرسم.....	39.....	طباعة صورة.....
46.....	التقاط صورة شاشة.....	40.....	نقل ملف أو نسخة.....
46.....	مسجّل الصوت.....	40.....	أصوات.....
46.....	تسجيل ملف صوتي أو صوت.....	40.....	استخدام صوت.....
46.....	استخدام الحاسبة.....	40.....	ملفات الفيديو.....
47.....	تحويل وحدة.....	40.....	مشاهدة فيديو.....
47.....	إضافة مدينة إلى ساعتك العالمية.....		

- 54..... تغيير إعدادات التّوصيل
- 55..... إرسال الملفات واستلامها باستخدام بلوتوث...
- 55..... تغيير إعدادات بلوتوث.....
- 56..... الاقتران بجهاز بلوتوث.....
- 56..... استخدام سماعة رأس بلوتوث
- 56..... Wi-Fi.....
- 57..... تحديث البرنامج.....
- 58..... الملحقات.....
- 59..... بيانات تقنية.....
- 60..... إرشادات لاستخدام أمن و فعال
- 47..... استخدام ساعة الإيقاف
- 48..... مزامنة الكمبيوتر الشخصي
- 48..... تثبيت LG PC Suite على الكمبيوتر.....
- 48..... توصيل الهاتف والكمبيوتر
- 48..... نسخ احتياطي للمعلومات على الهاتف واستعادتها.....
- 48.....
- 48..... عرض ملفات الهاتف على الكمبيوتر
- 49..... مزامنة الأسماء.....
- 49..... مزامنة الرسائل.....
- 49..... استخدام الهاتف كجهاز تزامن الموسيقى
- 50..... المتصفح.....
- 50..... الوصول إلى المتصفح
- 50..... إضافة الإشارات المرجعية والوصول إليها.....
- 50..... استخدام قارئ RSS.....
- 51..... حفظ صفحة.....
- 51..... الوصول إلى صفحة محفوظة
- 51..... عرض محفوظات المتصفح.....
- 51..... تغيير إعدادات المتصفح.....
- 51..... استخدام الهاتف كمودم.....
- 52..... الوصول إلى Google.....
- 53..... الإعدادات
- 53..... تخصيص الأوضاع.....
- 53..... تغيير إعدادات الشاشة.....
- 53..... تغيير إعدادات الهاتف
- 54..... استخدام إدارة الذاكرة.....

التعرّف على الهاتف الخاص بك

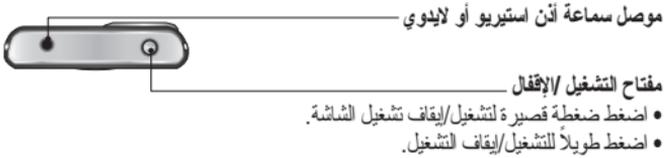

⚠ تحذير: قد يؤدي وضع شيء ثقيل الوزن على الهاتف أو الجلوس عليه عند وجوده في جيبك إلى إلحاق ضرر بوظيفة شاشة LCD وشاشة اللمس.

نظرة على الهاتف وهو مفتوح



تنشيط بطاقة SIM و البطارية

1 نزع غطاء البطارية

تحذير: لا تستخدم أظافرِكَ لإخراج البطارية.

حرك غطاء البطارية نحو أسفل الهاتف وبعيداً عنه.



تحذير: لا تتم بزالة البطارية عندما يكون الهاتف قيد التشغيل، إذ قد يؤدي ذلك إلى إلحاق الضرر بالهاتف.


3 تركيب البطارية

أدخل الجانب الأيمن من البطارية في الجهة العليا لحجرة البطارية أولاً.
تأكد من محاذاة ملامسات البطارية مع أطراف توصيل الهاتف. اضغط الجانب الأيسر من البطارية إلى الأسفل حتى تستقر في مكانها.



2 تثبيت بطاقة SIM

قم بتمرير بطاقة SIM إلى داخل حاملها وتأكد من كون ناحية الموصلات الذهبية الموجودة على البطاقة موجهة نحو الأسفل. احرص على إزالة البطارية من الهاتف قبل تثبيت بطاقة SIM. لإزالة بطاقة SIM، اسحبها بلطف في الاتجاه المعاكس.

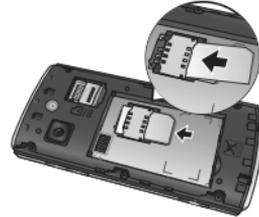

شحن الهاتف

قم بإزالة غطاء مقبس الشاحن الموجود على جانب GM360i. قم بتوصيل مهبط السفر (الشاحن) وكبل USB المضمن. قم بتوصيل كبل USB في الهاتف وقم بتوصيله بمقبس الكهرباء. يجب أن يتم شحن الهاتف GM360i حتى تظهر على الشاشة رسالة تشير إلى أن "البطارية ممتلئة".

ملاحظة: يجب أن يتم شحن البطارية بالكامل أولاً لتحسين فترة عمل البطارية. تجاهل رسالة "البطارية الممتلئة" الأولى واترك الهاتف في الشحن ليلاً.



بطاقة الذاكرة

تركيب بطاقة ذاكرة

يمكنك توسيع مساحة الذاكرة المتوفرة على هاتفك باستخدام بطاقة ذاكرة microSD.

ملاحظة: بطاقة الذاكرة هي عبارة عن ملحق اختياري.

1 افتح غطاء فتحة بطاقة microSD الموجود على حافة الهاتف اليسرى.



2 حرّك بطاقة microSD إلى داخل الفتحة،

حتى تستقر في مكانها. تأكد من كون ناحية الملامسات الذهبية موجهة نحو الأسفل.

تنسيق بطاقة الذاكرة

قد تكون بطاقة الذاكرة مهيةأة أصلاً. إذا لم تكن مهيةأة، ستحتاج إلى تهيئتها قبل البدء باستخدامها.

1 في الشاشة الرئيسية حدّد **⊞** ، ثم إعدادات الهاتف في علامة التبويب الإعدادات.

2 المس معلومات الذاكرة ثم اختر الذاكرة الخارجية.

3 المس تهيئة ثم أكد خيارك.

4 أدخل كلمة المرور إذا كان قد تمّ تعيين واحدة. ستتم تهيئة البطاقة وتصبح جاهزة للاستخدام.

ملاحظة: إذا تضمنت بطاقة الذاكرة محتوى موجوداً، فقد تختلف بنية الحافظة بعد التهيئة بما أنه تمّ حذف كل الملفات.

إستخدام شاشة اللمس

تلميحات شاشة اللمس

فتح التطبيقات
افتح أي تطبيق، المس الرمز.



- لتحديد عنصر، المس وسط الرمز.
- لا حاجة إلى الضغط بقوة. فشاشة اللمس حساسة بشكل كافٍ يتيح لها التعرف على لمسة خفيفة ولكن ثابتة.
- استخدم رأس إصبعك للمس الخيار المطلوب. احترس من عدم لمس أي مفاتيح أخرى.
- عندما لا يكون الهاتف GM360i قيد الاستخدام، يعود إلى الشاشة التي تم إقفالها.

التحكم بشاشة اللمس

تتغير مفاتيح التحكم في شاشة لمس الهاتف GM360i بسرعة، وهذا يتوقف على المهمة التي تقوم بها.

التمرير

قم بالسحب من جهة إلى جهة للتمرير. على بعض الشاشات، كقائمة محفوظات المكالمات، يمكنك أيضاً التمرير لأعلى أو لأسفل.



إستخدام شاشة اللمس

حركة إقفال الشاشة


حركة إقفال الشاشة - تعيين حركة لتطبيقات الاختصار الـ 9 الموسعة. تتيح الحركة للمستخدمين عند إقفال الشاشة إلغاء قفل الهاتف وتنفيذ التطبيقات مباشرة بعد أن ترسم حركة على الشاشة. لإعداد هذه الميزة،

1 حدد  - إعدادات الشاشة - حركة إقفال الشاشة

2 قم بسحب وإفلات الحركة المفضلة من أسفل الشاشة إلى التطبيقات التي تريد تعيينها إليها.

تلميح! هل تريد الرسم؟ الشكل للانتقال إلى قائمة حركة إقفال الشاشة في شاشة التي تم إقفالها.

تلميح! هذه الوظيفة متاحة للاستخدام مع شاشة الخمول بعد قفل المفاتيح فقط.

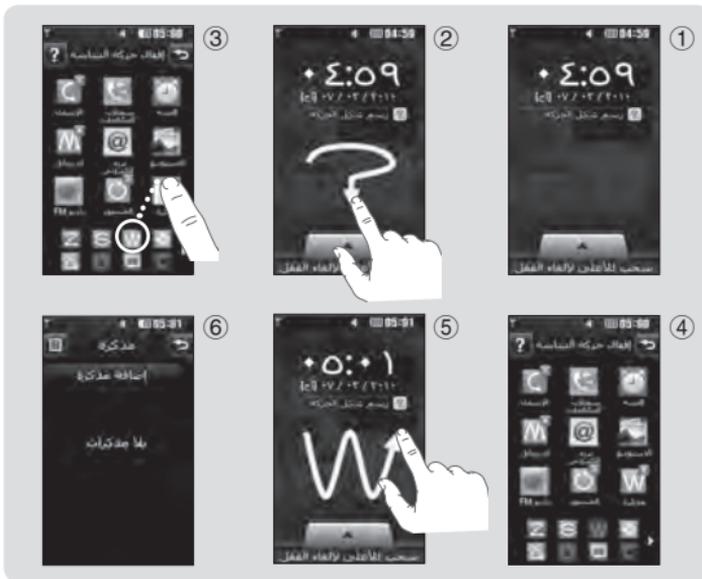

الشاشة الرئيسية الخاصة بك

يمكنك أن تقوم بسحب وإفلات ما تحتاج إليه فوراً في كل أنواع الشاشات الرئيسية.

نشط

الشاشة الرئيسية للاتصال السريع - عندما تلمس ، تظهر قائمة الاتصال السريع. يمكنك الاتصال أو إرسال رسالة أو تعديل جهة اتصال مباشرة في الشاشة الرئيسية.



نشط

عصر واجهة استخدام الشاشة الرئيسية - عند لمس في الجانب الأيمن في أسفل الشاشة، تظهر لوحة عنصر واجهة الاستخدام النقال. عند تسجيل عنصر واجهة الاستخدام بسحبه، يتم إنشاء العنصر في النقطة حيث تم إسقاطه.



تلميح! تعتمد واجهة المستخدم على ثلاثة أنواع شاشات رئيسية. للتبديل بين الشاشات الرئيسية قم باللمس بسرعة فوق الشاشة من اليمين إلى اليسار أو من اليسار إلى اليمين.

شاشة Livesquare الرئيسية - في شاشة Livesquare يمكنك إجراء اتصال وإرسال رسالة إلى الرقم المخصص لصورة رمزية بسهولة. لاستخدام وظائف المكالمات أو الرسائل أو الأسماء، حدد صورة رمزية واختر رمز المفاتيح السريع الذي تريد استخدامه.

نشط



الشاشة الرئيسية الخاصة بك

المفاتيح السريعة

توفر المفاتيح السريعة الموجودة على الشاشة الرئيسية وصولاً سهلاً بمجرد لمسة واحدة إلى أكثر الوظائف استخداماً.

 المس لفتح الأسماء. للبحث عن الرقم الذي تريد الاتصال به، أدخل اسم جهة الاتصال في أعلى الشاشة مستخدماً لوحة للمس. يمكنك إنشاء الأسماء جديدة وتعديل الأسماء الموجودة.

 المس لإحضار لوحة الطلب بواسطة للمس لإجراء مكالمة.

 المس لفتح القائمة العلوية الكاملة التي تنتقل إلى أربع فئات.

 المس للوصول إلى قائمة الرسائل. من هنا يمكنك إنشاء رسالة SMS أو MMS جديدة، أو عرض حافظة الرسائل.

الوصف	الرمز
الوضع المخصص قيد الاستخدام (يختلف الرقم الموجود في الرمز)	
الوضع عادي قيد الاستخدام	
الوضع خارجي قيد الاستخدام	
الوضع صامت قيد الاستخدام	
سماعة الرأس قيد الاستخدام	
المكالمات محولة	
EDGE قيد الاستخدام	
التحول	
وضع الرحلات الجوية قيد التشغيل	
بلوتوث نشط	
تشغيل الموسيقى الخلفية BGM	
إيقاف مؤقت للموسيقى الخلفية BGM	
تم تمكين بطاقة الذاكرة للاستخدام	

شريط الحالة

يستخدم شريط الحالة رموزاً مختلفة للإشارة إلى أمور مثل قوة الإشارة والرسائل الجديدة وفترة عمل البطارية، وكذلك لإعلامك ما إذا كان بلوتوث أو GPRS نشطاً.

يفسر الجدول التالي معنى الرموز التي قد تشاهدها على شريط الحالة.

الوصف	الرمز
تعدد المهام	
قوة إشارة الشبكة (يختلف عدد الأشرطة)	
إشارة الشبكة غير متوفرة	
فترة العمل المتبقية للبطارية	
البطارية فارغة	
رسالة نصية جديدة	
رسالة صوتية جديدة	
صندوق الوارد للرسائل ممتلئ	
فشل إرسال الرسالة	
فشل إرسال رسالة الوسائط المتعددة	
تم تعيين منبه	

الشاشة الرئيسية الخاصة بك

الوصف	الرمز
<p>للمرسلة التلقائية الواردة تحقق من الرسالة التلقائية: المس الألعاب والتطبيقات في الترفيه ثم المس التطبيقات.</p> <p>*تنبيه: قد لا يتمكن المستخدم من استخدام الرسائل التلقائية والوصول إلى WAP (أو MMS) في الوقت نفسه وهذا يتوقف على المنطقة أو موفر SIM.</p>	

تغيير الحالة من شريط الحالة

المس وسط شريط الحالة لفتح ملخص الحالة.
يعرض الوقت الحالي والشبكة ومعرّف SVC
والبطارية وذاكرة الهاتف والذاكرة الخارجية
والوضع وMP3 وحالة بلوتوث. ويمكنك هنا
تعيين نوع الوضع، وتشغيل/ إيقاف تشغيل MP3s
مؤقتاً، وتشغيل/إلغاء تنشيط بلوتوث.

استخدام وظيفة المهام المتعددة

اضغط مفتاح المشغل الخاص بالمهام المتعددة
 لفتح قائمة تعدد المهام. من هنا يمكنك
عرض كل التطبيقات قيد التشغيل والوصول إليها
بلمسة واحدة.
عند وجود تطبيق يجري تشغيله في الخلفية (العبة أو
راديو FM مثلا)، يظهر  في شريط الحالة.

المكالمات

إجراء مكالمة

- 1 المس  لفتح لوحة المفاتيح.
 - 2 أدخل الرقم باستخدام لوحة المفاتيح.
 - 3 المس  لبدء المكالمة.
 - 4 لإنهاء المكالمة، اضغط على المفتاح الذكي.
- تلميح!** لإدخال الرمز + بهدف إجراء مكالمة دولية، اضغط باستمرار .
- تلميح!** اضغط على مفتاح التشغيل لإيقاف شاشة للمس وذلك لمنع إجراء مكالمات عن طريق الخطأ.
- 1 على الشاشة الرئيسية، المس  لفتح الأسماء.
 - 2 اضغط خاتمة حقل الاسم في أعلى الشاشة وأدخل الأحرف القليلة الأولى من جهة الاتصال التي تريد الاتصال بها باستخدام لوحة المفاتيح.
 - 3 في القائمة التي تمت تصفيتها، المس رمز المكالمة إلى جانب جهة الاتصال التي تريد الاتصال بها. تستخدم المكالمة الرقم الافتراضي إذا كان هناك أكثر من رقم لجهة الاتصال هذه.
 - 4 أو يمكنك لمس اسم جهة الاتصال وتحديد الرقم الذي تريد استخدامه إذا كان هناك أكثر من رقم واحد لاستخدامه لجهة الاتصال هذه. يمكنك أيضاً لمس  لبدء الاتصال بالرقم الافتراضي.

الرد على مكالمة ورفضها

- عند رنين الهاتف، المس المفتاح الذكي للإجابة على المكالمة.
- لكتم الرنين، حرك الغطاء إلى الأعلى. يؤدي ذلك إلى إلغاء قفل الهاتف إذا كان مقفلاً، ثم المس  . يُعتبر هذا الأمر مفيداً إذا كنت قد نسيت تغيير وضع الهاتف إلى صامت أثناء حضور اجتماع.
- المس  لرفض مكالمة واردة.

المكالمات

خيارات أثناء المكالمة



تلميح! للتمرير عبر قائمة خيارات أو قائمة الأسماء، المس العنصر الأخير المرئي وقم بتمرير إصبعك إلى أعلى الشاشة. فتتحرك القائمة نحو الأعلى وتحصل على المزيد من العناصر المرئية.

الاتصال السريع

يمكنك تعيين جهة اتصال تطلبها بشكل متكرر إلى رقم اتصال سريع.

1 حدّد الأسماء في علامة التويب للاتصال وحدّد الاتصالات السريعة.

2 يتمّ مسبقاً تعيين بريدك الصوتي إلى رقم الاتصال السريع 1. ولا يمكنك تغييره. المس أي رقم آخر لتعيينه كجهة اتصال سريع.

3 تفتح الأسماء. حدّد جهة الاتصال التي تريد تعيينها إلى ذلك الرقم وذلك بلمس رقم الهاتف الخاص بها مرةً واحدةً. للعثور على جهة اتصال، اضغط مربع حقل الاسم وأدخل الحرف الأول من اسم جهة الاتصال المطلوبة.

إجراء مكالمة ثانية

1 أثناء المكالمة الأولى، المس  وكتب الرقم الذي تريد الاتصال به.

2 المس  لتوصيل المكالمة.

3 يتم عرض المكالمتين معاً على شاشة المكالمة. ويتم إقفال المكالمة الأولية ويوضع المتصل في حالة الانتظار.

4 للتغيير بين المكالمات، المس  أو اضغط على رقم المكالمة قيد الانتظار.

5 لإنهاء إحدى المكالمتين أو كلاهما اضغط على  ثم حدّد إنهاء يتبعها الكل أو قيد الانتظار أو نشط.

تلميح! المس أي إدخال لسجل مكالمة واحدة لعرض تاريخ المكالمة، ووقتها ومدتها.

ملاحظة: سيفرض عليك رسم مقابل كل مكالمة تجريها.

عرض سجلات المكالمات

المس المحفوظات الأخيرة في علامة التويب للاتصال.

تلميح! المس أي إدخال لسجل مكالمة واحدة لعرض تاريخ المكالمة، ووقتها ومدتها.

المكالمات

استخدام تحويل المكالمات

1 المس إعدادات المكالمات في علامة التبويب الإعدادات.

2 المس تحويل المكالمات.

3 اختر ما إذا كنت تريد تحويل المكالمات الصوتية عندما يكون الخط مشغولاً أو عند عدم الرد أو عندما لا يكون الاتصال بك ممكناً.

4 أدخل الرقم الذي تريد أن يتم تحويل المكالمات إليه.

5 المس طلب للتنشيط.

ملاحظة: يتم فرض رسوم على تحويل المكالمات. يرجى الاتصال بموفر الشبكة للحصول على تفاصيل.

استخدام حظر المكالمات

1 المس إعدادات المكالمات في علامة التبويب الإعدادات.

2 المس حظر المكالمات.

3 اختر أحد الخيارات الستة أو كلها:

كل الصادرة

المكالمات الدولية الصادرة

المكالمات الدولية الصادرة باستثناء المحلية

كل الواردة

الواردة عند السفر

إلغاء تنشيط الكل

4 أدخل كلمة مرور حظر المكالمات. يرجى التحقق من توفر هذه الخدمة مع مشغل الشبكة.

تلميح! حدد أرقام الاتصال الثابتة من خيارات إعدادات المكالمات لتنشغيل وتجميع قائمة بالأرقام التي يمكن الاتصال بها من الهاتف. ستحتاج إلى الحصول على رمز PIN2 من المشغل. وحدها الأرقام المضمنة في قائمة الاتصال المحدد هي الأرقام التي يمكن طلبها من هاتفك.

تلميح! لإيقاف تشغيل كل عمليات تحويل المكالمات، حدد إلغاء تنشيط الكل من قائمة تحويل المكالمات.

تغيير إعدادات المكالمات العام

1 المس إعدادات المكالمات في علامة التبويب الإعدادات.

2 قم بالتمرير والمس الإعدادات العامة. من هنا يمكنك تعديل إعدادات الخيارات التالية:

الأسماء

البحث عن جهة اتصال

هناك طريقتان للبحث عن جهة اتصال:

- 1 المس الأسماء في علامة التبويب الاتصال.
- 2 المس بحث.
- 3 تظهر قائمة الأسماء. وعندما تكتب الحرف الأول من اسم جهة الاتصال في حقل الاسم، تظهر قائمة بالجهات التي تبدأ بهذا الحرف.

تلميح! يتم عرض لوحة المفاتيح الأبجدية حالما تقوم بضغط حقل الاسم.

إضافة جهة اتصال جديدة

- 1 المس الأسماء في علامة التبويب الاتصال والمس إضافة جهة اتصال.
- 2 اختر ما إذا كنت تريد حفظ جهة الاتصال في الهاتف أو SIM.
- 3 أدخل الاسمين الأول والأخير.
- 4 يمكنك أن تدخل حتى خمسة أرقام مختلفة لجهة اتصال واحدة. يتميز كل إدخال بنوع معين مسبقاً خاص به المحمول والمنزل والمكتب وجهاز الاستدعاء والفاكس.
- 5 إضافة عنواني بريد إلكتروني. يمكنك إدخال حتى عنواني بريد إلكتروني مختلفين لجهة الاتصال الواحدة.

رفض المكالمة - مرر المفتاح إلى بدء التشغيل لتحديد قائمة الرفض. يمكنك لمس مربع النص للاختيار من كل المكالمات أو الأسماء أو المجموعات المحددة أو من الأرقام غير المسجلة (غير المضمنة في الأسماء) أو من دون معرف المتصل. المس حفظ لتغيير الضبط.

إرسال رقمي - اختر ما إذا كنت ترغب في أن يظهر رقمك عند اتصالك بأحدهم.

معاودة الاتصال التلقائي - مرر المفتاح إلى اليسار لبدء التشغيل أو إلى اليمين لإيقاف التشغيل.

وضع الرد - اختر ما إذا كنت تريد الرد على الهاتف باستخدام مفتاح الإرسال أو أي مفتاح.

منبه الدقائق - مرر المفتاح إلى اليسار لبدء تشغيل سماع نغمة كل دقيقة خلال فترة المكالمة.

وضع الرد BT - حدد لا يدوي لتمكّن من الرد على مكالمة باستخدام سماعة رأس بلوتوث، أو حدد هاتف للضغط على مفتاح موجود على الهاتف للرد على مكالمة.

حفظ رقم جديد - حدد نعم لحفظ رقم جديد.

الأسماء

6 قم بتعيين جهة الاتصال إلى مجموعة أو أكثر. يمكنك تعيين حتى ثلاث مجموعات لجهة اتصال واحدة. اختر من ضمن **بلا مجموعة**، أو **عائلة**، أو **أصدقاء**، أو **زملاء**، أو **مدرسة**، أو **أشخاص مهمون جدا**.

7 كما يمكنك إضافة **نغمة رنين** و **عيد ميلاد** و **ذكرى** و **صفحة رئيسية** و **عنوان منزل** و اسم **شركة** و **مهنة** و **عنوان شركة** و **مذكرة** و **Livecon**.

8 المس **حفظ** ل حفظ جهة الاتصال.

تلميح! يمكن الوصول إلى عنصر واجهة استخدام عيد الميلاد من خلال تحديد الرمز  يعرض هذا العنصر أعياد الميلاد المقبلة بالترتيب للشهر الجاري من خلال أخذ أعياد الميلاد المحفوظة في الأسماء. يسهل عنصر واجهة الاستخدام هذا الاتصال بجهة الاتصال التي تحتفل بعيد ميلادها من خلال تمكين ميزات مثل الاتصال والرسائل والبريد الإلكتروني.

إنشاء مجموعة

1 المس **الأسماء** في علامة التبويب الاتصال. والمس **المجموعات**.

2 المس **إضافة مجموعة** أو المس  وحدد **إضافة مجموعة**.

3 أدخل اسماً للمجموعة الجديدة. يمكنك أيضاً أن تحدد نغمة رنين خاصة بالمجموعة.

4 المس **حفظ**.

ملاحظة: إذا قمت بحذف مجموعة، ف لن تقف الأسماء التي كان قد تم تعيينها إلى تلك المجموعة. سيبقى موجودة في **الأسماء**.

تغيير إعدادات الأسماء

يمكنك تكييف إعدادات الأسماء بحيث تتناسب الأسماء لديك مع تفضيلاتك.

1 المس **الأسماء** في علامة التبويب الاتصال ثم المس **الإعدادات**.

2 من هنا يمكنك ضبط الإعدادات التالية:

إعدادات قائمة الأسماء - ضبط سطوع موقع الأسماء، اسم العرض وإعدادات مفتاح الأمر السريع.

نسخ - قم بنسخ الأسماء من الجهاز إلى بطاقة SIM أو من SIM إلى الجهاز. يمكن اختيار واحدة في كل مرة أو الكل دفعة واحدة.

نقل - يعمل هذا الخيار بالطريقة نفسها التي يعمل بها النسخ، غير أنه يتم حفظ جهة الاتصال في الموقع الذي نقلتها إليه فقط.

تلميح! يسمح لك استخدام الحفظ في الأسماء في Facebook برؤية معلومات مستخدم Facebook الشخصية وحالته بما في ذلك الاسم ورقم جهة الاتصال والبريد الإلكتروني والصورة.

لا يسمح للمستخدم بتعديل هذه المعلومات ويمكنه تحديثها بالنقر فوق تحديث على الشاشة.

يرجى مراجعة Linkbook للحصول على مزيد من المعلومات حول الحفظ في جهة الاتصال في Facebook.

إرسال كل الأسماء عبر بلوتوث - أرسل كل الأسماء إلى جهاز آخر باستخدام بلوتوث. سيتم مطالبته ببدء تشغيل بلوتوث إذا قمت بتحديد هذا الخيار.

نسخ احتياطي للأسماء - انظر نسخ احتياطي للمعلومات على الهاتف واستعادتها.

استعادة الأسماء - انظر نسخ احتياطي للمعلومات على الهاتف واستعادتها.

مسح الأسماء - قم بحذف كل الأسماء المتوفرة لديك. اختر بين الهاتف و SIM والمس نعم إذا كنت تريد بالتأكيد مسح الأسماء.

عرض المعلومات

1 المس الأسماء في علامة التبويب الاتصال ثم المس معلومات.

2 من هنا يمكنك عرض أرقام الاتصال بالخدمة، ورقمك الخاص ومعلومات الذاكرة. (إظهار المساحة الفارغة في الذاكرة) و وضعي الشخصي.

تلميح! إضافة بطاقة العمل الخاصة بك، حدد وضعي الشخصي وأدخل التفاصيل كما تقوم عادة بالنسبة لأي جهة اتصال. المس حفظ للانتهاء.

الرسائل

الرسائل

يجمع الهاتف GM360i ميزات إرسال رسائل SMS و MMS في قائمة واحدة بديهية وسهلة الاستخدام.

إرسال رسالة

- 1 الممس الرسائل في علامة التبويب الاتصال. والمس رسالة جديدة لبدء إنشاء رسالة جديدة.
- 2 الممس إدخال لإضافة صورة وملف فيديو وصوت ونموذج وهكذا.
- 3 الممس المستلم في أسفل الشاشة لإدخال المستلمين. ثم أدخل الرقم أو الممس لتحديد جهة اتصال. كما يمكنك إضافة جهات اتصال عديدة.
- 4 الممس إرسال عندما تصبح جاهزاً.

⚠ تحذير: إذا تمت إضافة صورة أو فيديو أو صوت إلى رسالة SMS سيتم تحويلها تلقائياً إلى MMS وسيُفرض رسم عليك وفقاً لذلك.

إدخال النص

هناك خمس طرق لإدخال نص: لوحة المفاتيح و لوحة المفاتيح الأفقية و شاشة الكتابة اليدوية و صندوق الكتابة اليدوية و صندوق الكتابة اليدوية المزدوج.

يمكنك اختيار أسلوب الإدخال بلمس  وأسلوب الإدخال.

الممس  لتتغلب وضع T9. يعرض هذا الرمز فقط عندما تختار لوح المفاتيح كأسلوب إدخال.

الممس  لاختيار لغة الكتابة.

الممس  للتبديل بين الأرقام والرموز وإدخال النص.

استخدم مفتاح Shift للتبديل بين إدخال الأحرف الكبيرة أو الصغيرة.

وضع T9

يستخدم وضع T9 قاموساً مضمناً للتعرف على الكلمات التي تكتبها استناداً إلى تسلسل المفاتيح التي لمستها. يقوم بتوقع الكلمة التي تقوم بإدخالها ويقترح كلمات بديلة.

التعرف على الكتابة اليدوية

في وضع الكتابة اليدوية ما عليك إلا أن تكتب على الشاشة وسيقوم GM360i بتحويل كتابتك اليدوية إلى رسالتك. حدّد شاشة الكتابة اليدوية أو صندوق الكتابة اليدوية وفق طريقة العرض المفضلة لديك.

إعداد البريد الإلكتروني

المس البريد الإلكتروني في علامة التوبيو
الاتصال.

إذا لم يتم تعيين حساب البريد الإلكتروني، فابدأ
بتعيين معالج البريد الإلكتروني وإنهائه.

يمكنك التحقق من الإعدادات وتعديلها بتحديد .
كما يمكنك التحقق من الإعدادات الإضافية التي
تمت تعيينها تلقائياً عندما أنشأت الحساب.

استرداد رسائل البريد الإلكتروني

يمكنك أن تتحقق من وجود رسائل بريد إلكتروني
جديدة في حسابك تلقائياً أو يدوياً. للتحقق يدوياً:

1 المس البريد الإلكتروني في علامة التوبيو
الاتصال.

2 المس الحساب الذي تريد استخدامه.

3 حدد صندوق الوارد

4 لاستلام بريد إلكتروني، اختر استرداد أو
مزامنة في قائمة الخيارات.

إرسال بريد إلكتروني باستخدام حسابك الجديد

1 المس بريد إلكتروني جديد فيفتح بريد إلكتروني
جديد.

2 إكمال الرسالة.

3 المس إرسال فيتم إرسال البريد الإلكتروني.

تغيير إعدادات البريد الإلكتروني

1 المس البريد الإلكتروني في علامة التوبيو
الاتصال.

2 المس  وحدد إعدادات البريد الإلكتروني
ثم يمكنك تكيف الإعدادات التالية:

حسابات البريد الإلكتروني البريد الإلكتروني المفضل

السماح بالرد على البريد الإلكتروني - اختر
السماح بإرسال رسائل تأكيد القراءة.

طلب الرد على البريد الإلكتروني - اختر ما إذا
كان يجب طلب رسائل تأكيد القراءة.

الفصل الزمني للاسترداد - اختر مدى تكرار
قيام GM360i بالتحقق من وجود رسائل بريد
إلكتروني جديدة.

عدد الرسائل لاستردادها - اختر عدد رسائل
البريد الإلكتروني التي تود استردادها في
أن واحد.

تضمين الرسالة في إعادة التوجيه والرد -
اختر تضمين الرسالة الأصلية في رنك.

تضمين الرسالة في إعادة التوجيه والرد - اختر
تضمين الرسالة الأصلية في رنك.

استرداد تلقائياً أثناء التحوال - اختر ما إذا
كنت ترغب في استرداد رسائلك تلقائياً أثناء
تواجذك في الخارج (التحوال).

إعلام بورود بريد إلكتروني جديد - اختر ما
إذا كان يجب أو لا يجب تنبيهك عند وصول
رسائل بريد إلكتروني جديدة.

التوقيع - أنشئ توقيعاً على البريد الإلكتروني
وشغل هذه الميزة.

الرسائل

تغيير إعدادات الرسائل النصية
المس الرسائل في علامة التبويب الاتصال والمس
الإعدادات. حدد رسالة نصية. يمكنك إدخال
تغييرات على:

مركز الرسائل النصية - أدخل تفاصيل مركز
الرسائل.

تقارير استلام - مرر المفتاح إلى اليسار لاستلام
تأكيد بأنه تم تسليم رسائلك.

مدة الصلاحية - اختر فترة تخزين رسائلك في
مركز الرسائل.

أنواع الرسائل - حول نصك إلى نص أو صوت أو
فاكس **X.400** أو بريد إلكتروني.

ترميز الحروف - اختر طريقة ترميز الحروف.
ويؤثر هذا الأمر على حجم رسائلك وبالتالي على
رسوم البيانات.

إرسال نص طويل ك - اختر إرسال رسالة طويلة
كرسائل **SMS** متعددة أو **MMS**.

الألوية - اختر مستوى الأولوية لرسائل البريد
الإلكتروني.

حجم البريد المرسل - قم بتعيين الحد الأقصى
لحجم البريد الإلكتروني الذي ترسله.

عداد البريد الإلكتروني - أدخل التاريخ
الذي تريده. يمكن التحقق من رسائل البريد
الإلكتروني التي أرسلتها خلال تلك الفترة.

حافظات الرسائل

هناك خمس حافظات في قائمة الرسائل.

صندوق الوارد - توضع في صندوق الوارد كل
الرسائل التي تستلمها.

المسودات - إذا لم تكن قد انتهيت من كتابة رسالة،
يمكن حفظ ما قمت به في هذه الحافظة.

صندوق الصادر - عبارة عن حافظة لحفظ الرسائل
مؤقتاً فيما يكون إرسالها جارياً.

العناصر المرسله - يتم وضع كل الرسائل التي
أرسلتها في هذه الحافظة.

حافظتي - إنشاء حافظات لتخزين رسائلك.

تغيير إعدادات رسائل الوسائط المتعددة

المس الرسائل في علامة التبويب الاتصال. قم بالتمرير واختر الإعدادات ورسالة الوسائط المتعددة. يمكنك إدخال تغييرات على:

وضع الاسترداد - اختر بين الشبكة المحلية أو شبكة التجوال. إذا اخترت يدوي فستنتقى إعلام برسائل MMS فقط ويمكنك حينئذ أن تقرر ما إذا كنت ترغب في تنزيلها بشكل كامل.

تقرير الاستلام - اختر السماح بتقرير الاستلام و/أو طلبه.

قراءة الرد - اختر السماح و/أو طلب قراءة الرد. الأولوية - اختر مستوى أولوية رسالة الوسائط المتعددة.

مدة الصلاحية - اختر فترة تخزين رسالتك في مركز الرسائل.

مدة الشريحة - اختيار مدة ظهور الشرائح على الشاشة بشكل افتراضي.

وضع الإنشاء - اختر إنشاء رسائل وسائط متعددة حرة أو مقيدة.

وقت الاستلام - اختيار المدة قبل تسليم كل رسالة.

مركز رسائل الوسائط المتعددة - اختر أو أضف مركز رسائل وسائط متعددة.

تغيير الإعدادات الأخرى

المس الرسائل في علامة التبويب الاتصال. والمس الإعدادات.

البريد الصوتي - المس  لإضافة خدمة بريد صوتي جديدة. اتصل بمشغل الشبكة للحصول على مزيد من المعلومات حول الخدمة التي يقدمها.

رسالة الخدمة - اختر استلام أو حظر رسائل الخدمة. كما يمكنك تعيين حماية الرسالة وذلك بإنشاء قوائم بالمرسلين الموثوق بهم وغير الموثوق بهم في الخيار أمان الخدمة.

عداد الرسائل - اختر تعيين فترة وقت محدّد لعدّ الرسائل.

خدمة المعلومات - اختر ما إذا كنت تريد تشغيل/ إيقاف تشغيل البث الخلوي وحدد القنوات واللغات.

الرسائل

خدمات الشبكة الاجتماعية (SNS)

إن هاتف GM360i مزود بـ SNS للاستمتاع بالشبكة الاجتماعية وإدارتها. يمكنك تحديث حالة موضع SN وعرض تحديثات SN الخاصة بأصدقائك.

المس قائمة الشبكة الاجتماعية وحدد الموقع كما هو مبين أدناه: Facebook و Twitter و Myspace.

تلميح! إن تطبيق Facebook أصلي محمّل مسبقاً إلى هاتفك وهو سهل الاستخدام. إن تطبيق Twitter هو تطبيق java يستند إلى تقنية java. تصل التطبيقات الأخرى إلى خدمات WAP (بروتوكول التطبيقات اللاسلكية).

ملاحظة: ميزة SNS هي تطبيق مكثف البيانات. قد تفرض تكاليف إضافية عند الاتصال بخدمات على الإنترنت واستخدامها. للحصول على تفاصيل تتعلق بالرسوم المفروضة على البيانات، اتصل بموفر الشبكة.

Facebook

الصفحة الرئيسية: عند تسجيل الدخول سترى حالة أصدقائك المحدثة. أدخل تعليقك على الحالة الجديدة أو تحقق من التعليقات الأخرى. المس خيارات لاختيار تحديث، أو عامل تصفية آخر الأخبار (تحديثات الحالة، الصور)، أو حذف أو الإعدادات. يمكنك أيضاً كتابة تعليقات من خلال تحديد الرمز +.

الوضع: يمكنك تحديد حائط < تحديثات الحالة وكتابة الحالة الحالية. انظر إلى تفاصيل المعلومات وقم بتحميل الصورة من خلال لمس اليوم < تحميل صورة. اختر من ضمن الانتقال إلى الصور أو النقاط صورة، ثم أدخل شرحاً مع الصور.

الأصدقاء: يمكنك العثور على العديد من الأصدقاء في SNS وعرض حالتهم. ابحث عن أصدقائك في facebook من خلال تحديد علامة التبويب البحث.

الرسالة: تعرض كل رسائل SN. يمكنك رؤيةحافظة صندوق الوارد/المرسلة، وكتابة رسالة SN.

Linkbook

إذا تم تعيين وضع SNS إلى تشغيل، فيمكنك حفظ المعلومات الشخصية الخاصة بجهات اتصال Facebook، كالاسم ورقم الهاتف وعنوان البريد الإلكتروني والصورة في الأسماء. استخدم الزر حفظ في الأسماء في Facebook لحفظ المعلومات الشخصية الخاصة بها. يمكنك التحقق من المعلومات المخزنة في عرض جهة الاتصال. إذا تم تعيين وضع SNS إلى إيقاف التشغيل، فلا يتم عرض معلومات SNS في لائحة الأسماء.

تلميح! استخدام عنصر واجهة استخدام موجز المتصفح Facebook. يمكنك إضافة عنصر واجهة استخدام موجز المتصفح Facebook إلى الشاشة الرئيسية. اسحب عنصر واجهة استخدام موجز المتصفح facebook من علبة المس موافق.

إذا تم تسجيل عنصر واجهة استخدام facebook في الشاشة الرئيسية، فستظهر موجزات المتصفح الثلاث الأخيرة من موقع SN. يمكنك أيضا الوصول إلى تطبيق facebook مباشرة من خلال لمس عنصر واجهة استخدام موجز المتصفح.

تتوفر ميزات تشغيل/إيقاف تشغيل SNS وتسجيل الدخول وحذف (تسجيل الخروج) حساب SNS في ضبط SNS. كما يمكن تشغيل/إيقاف تشغيل SNS تلقائياً من خلال ضبط فترة زمنية في قائمة الاتصال التلقائي.

الكاميرا

التعرّف على محدّد المنظر



تلميح! يمكنك إحصار الخيارات بالضغط على الشاشة. وهي تتوقف عن التشغيل تلقائياً بعد بضع ثوانٍ.

التقاط صورة سريعة

- 1 اضغط على المفتاح  الموجود في الجانب الأيمن من الهاتف.
- 2 عندما تركز الكاميرا على موضوع الصورة، المس  في وسط الشاشة الأيمن للالتقاط صورة. كما يمكنك الضغط على مفتاح  الموجود في جانب الهاتف بقوة.

تلميح! للتبديل إلى وضع الكاميرا أو وضع الفيديو، ادفع رمز الكاميرا أو الفيديو إلى الأعلى/الأسفل في الوسط الأيسر من محدد المنظر.

بعد التقاط الصورة

- تظهر الصورة الملتقطة على الشاشة. ويظهر اسم الصورة عبر أسفل الشاشة.
-  المس لإرسال الصورة كرسالة، أو بريد إلكتروني أو عبر بلوتوث.
-  المس لتعيين صورة الشاشة الرئيسية.
-  المس لتعديل الصورة.
-  المس لتعديل اسم الصورة المحددة.
-  المس لحذف الصورة التي التقطتها للتو وأكد بلمس **نعم**. تظهر الرسالة "مخوفة".
-  المس للانتقال إلى الاستوديو.



الكاميرا

استخدام الإعدادات المتقدمة

من محدّد المنظر، المس  لفتح كل خيارات الإعدادات المتقدمة.

وضع الانتقال - يمكنك هذا الخيار من تحديد وضعي الانتقال.

تأثير الألوان - اختر درجة اللون التي تريد تطبيقها على الصورة التي تلتقطها. هناك أربعة خيارات لدرجة اللون: لا لون أسود وأبيض سالب أو بني داكن.

توازن اللون الأبيض - اختر من ضمن تلقائي متوهج شمس فلورسنت أو غائم.

وضع الليل - يعتبر استخدامه مفيداً في الأماكن الداكنة.

المؤقت الذاتي - يسمح لك المؤقت الذاتي بتعيين فترة تأخير قبل التقاط الكاميرا الصورة، بعد الضغط على زر الانتقال. اختر من ضمن 3 ثوانٍ، أو 5 ثوانٍ أو 10 ثوانٍ. يعتبر هذا الأمر جيداً لصورة المجموعة التي تريد أن تكون جزءاً منها.

الجودة - اختر من ضمن دقيق جداً، ودقيق وعادي. بقدر ما تكون الجودة دقيقة بقدر ما تكون الصورة واضحة المعالم ولكن حجم الملف سيكون أكبر. أي أنك ستتمكن من تخزين عدد أقل من الصور في الذاكرة.

البؤرة - يضبط بؤرة الكاميرا.

وضع العرض - اختر بين ملئ الشاشة أو صورة كاملة. قد يتم اقتصاص الصورة في وضع ملئ الشاشة للاحتواء ضمن الشاشة.

تحديد موقع التخزين - اختر ما إذا كنت تريد حفظ الصور في ذاكرة الهاتف أو في الذاكرة الخارجية.

إظهار الصورة الملتقطة - اختر عرض الصورة مع خيارات بعد التقاط صورة.

إخفاء رموز - اختر رموز إعدادات الكاميرا لإخفائها يدوياً أو تلقائياً.

صوت الغالق - حدّد خياراً من ضمن خيارات صوت الغالق الثلاثة.

شاشة الشبكة - اختر من ضمن إيقاف التشغيل تقاطع بسيط أو ثلاثية الأقسام.

إعادة تعيين الإعدادات - إعادة تعيين كل إعدادات الكاميرا.

كاميرا الفيديو التعرّف على محدّد المنظر



تلميح! يمكنك إغلاق كل خيارات القائمة المختصرة للحصول على شاشة أوضح لمحدّد المنظر. ما عليك إلا لمس وسط محدّد المنظر مرة واحدة. لاستدعاء الخيارات، المس الشاشة مرة أخرى.

كاميرا الفيديو

إنشاء فيديو سريع

1 اضغط مفتاح الكاميرا الموجود في الجانب الأيسر من الهاتف ليضع ثوانٍ.

تلميح! للتبديل إلى وضع الكاميرا أو وضع الفيديو، انقر رمز الكاميرا أو الفيديو إلى الأعلى/الأسفل في الوسط الأيسر من محدّد المنظر.

2 مع حمل الهاتف أفقياً، صوّب العدسة باتجاه موضوع الفيديو.

3 اضغط مفتاح الكاميرا  في الهاتف مرة واحدة لبدء التسجيل. أو المس النقطة الحمراء .

4 سيظهر تسجيل في أسفل محدّد المنظر مع مؤقت في الأسفل يظهر طول الفيديو.

5 لإيقاف الفيديو مؤقتاً المس  وللاستئناف حدد .

6 المس  على الشاشة أو اضغط على  مرة ثانية لإيقاف التسجيل.

بعد إنشاء الفيديو

ستظهر على الشاشة صورة ثابتة تمثل الفيديو الملتقط. ويمتد اسم الفيديو عبر أسفل الشاشة مع سبعة رموز في الجانبين الأيمن والأيسر في الأسفل.

 المس لتسجيل الفيديو.

 المس لإرسال الفيديو كرسالة أو بريد إلكتروني أو بواسطة بلوتوث.

 المس لتعديل الفيديو.

 المس لتعديل اسم الصورة المحددة.

 المس لحذف الفيديو الذي قمت بالتقاطه لتتأكد أنك بلمس نعم. يظهر محدّد المنظر من جديد.

 المس لالتقاط فيديو آخر على الفور.

 المس لعرض استوديو الصور وملفات الفيديو المحفوظة.



استخدام الإعدادات المتقدمة

في محدد المنظر المس الإعدادات لفتح كل خيارات الإعدادات المتقدمة.

تأثير الألوان - اختر درجة اللون لاستخدامها على الفيديو الجديد. لا لون أو أسود وأبيض أو سالب أو بني داكن.

توازن اللون الأبيض - يضمن توازن الأبيض ظهور أي لون أبيض في الفيديو كواقعي. لكي تضبط الكاميرا بشكل صحيح توازن اللون الأبيض، قد تحتاج إلى تحديد شروط الإضاءة. اختر من ضمن تلقائي، متوهج، مشمس، فلورسنت أو غلم.

الجودة - اختر من ضمن دقيق جداً، ودقيق وعادي. بقدر ما تكون الجودة دقيقة بقدر ما يكون الفيديو واضح المعالم ولكن حجم الملف سيكون أكبر. ونتيجة لذلك، سيكون عدد ملفات الفيديو التي يمكنك تخزينها في ذاكرة الهاتف أقل.

المدة - قم بتعيين مدة زمنية للفيديو. اختر ما إذا كنت تريد إرسال الفيديو كرسالة MMS.

تلميح! إذا اخترت مدة MMS، فإن اختيار جودة أقل للصورة سيمكنك من التقاط مقطع فيديو أطول.

تحديد موقع التخزين - اختر ما إذا كنت تريد حفظ ملفات الفيديو في ذاكرة الهاتف أو في الذاكرة الخارجية.

الصوت - اختر ما إذا كنت تريد تسجيل فيديو مع صوت.

إخفاء رموز - اختر رموز إعدادات الكاميرا لإخفائها يدوياً أو تلقائياً.

إعادة تعيين الإعدادات - قم بإعادة تعيين إعدادات كاميرا الفيديو كافة.

الصور و مقاطع الفيديو

عرض الصور وملفات الفيديو

مشاهدة الصور كعرض شرائح

يُظهر عرض الشرائح كل الصور الموجودة في الاستوديو كل صورة على حدة كعرض شرائح. ولا يمكن عرض مقاطع الفيديو كعرض شرائح.

1  في الاستوديو، ثم قم بالتمرير وحدد عرض الشرائح.

2 سيبدأ عرض الشرائح.

المس لإيقاف عرض الشرائح مؤقتاً على صورة معينة:

المس  للعودة.

المس لإيقاف عرض الشرائح مؤقتاً على صورة معينة.

المس مجدداً لاستئناف التشغيل.

المس لعرض عشوائي.

المس لزيادة سرعة عرض الشرائح أو

إنقاص سرعته.

1 المس الاستوديو في علامة التويب ترفيه. أو المس  على شاشة المعاينة الخاصة بالكاميرا. يمكنك التحقق من الصور وملفات الفيديو.

2 يظهر الاستوديو على الشاشة.

3 المس الفيديو أو الصورة لفتحهما كلياً.

4 لتشغيل الفيديو المس . لإيقاف التشغيل مؤقتاً المس .

تلميح! انقر إلى اليمين أو إلى اليسار لعرض صور أخرى أو ملفات فيديو أخرى.

التقاط صورة من فيديو

1 حدد الفيديو الذي تريد التقاط صورة منه.

2 المس  لإيقاف الفيديو مؤقتاً على الإطار

الذي تريد تحويله إلى صورة والمس جانب الشاشة الأيمن العلوي لفتح قائمة .

3 من قائمة الخيارات حدد .

4 تظهر الصورة على الشاشة مع الاسم المعين لها.

5 المس  للعودة إلى الفيديو.

6 تُحفظ الصورة في حافظة ألبوماتي وتظهر في الاستوديو.

⚠ تحذير: قد لا تعمل بعض الوظائف بشكل صحيح إذا لم يكن ملف الوسائط المتعددة مسجلاً في الهاتف.

تعيين صورة كخلفية الشاشة

- 1 المس الاستوديو في علامة التبويب ترفيه.
- 2 المس الصورة التي ترغب في تعيينها كخلفية الشاشة لفتحها.
- 3 المس الشاشة لفتح القائمة.
- 4 المس .
- 5 يمكنك تغيير حجم الصورة بواسطة .
- 6 إذا كانت الصورة توافق متطلباتك، فالمس **تعيين**.
- 7 اختر من ضمن الخيارات ما ترغب في تغييره: **الكل عنصر واجهة الاستخدام أو الاتصال السريع**.

تعديل الصور

- 1 افتح الصورة التي ترغب في تعديلها  لإحضار الخيارات.
- 2 المس الرموز لتغيير صورتك:  حرّك إصبعك عبر الشاشة لتحديد المنطقة.

 ارسم شيئاً على الشكل الحر لصورتك. حدد سماكة الخط من ضمن الخيارات الأربعة واللون الذي تود استخدامه.

 أضف كتابة إلى الصورة.

 قم بتزيين صورتك بواسطة الطوابع. اختر من ضمن مختلف الطوابع والألوان المتوفرة والمس الصورة حينما ترغب في وضع هذه الطوابع.

 امسح ما ترسمه. كما يمكنك اختيار حجم الممحاة.

 المس للعودة إلى الاستوديو.

 حفظ التغييرات التي أدخلتها إلى الصور. حدد لحفظ التغييرات فوق **الملف الأصلي**، أو **ملف جديد**. إذا حدّدت **ملف جديد**، فأدخل اسم ملف.

 التراجع عن التأثير الأخير أو التعديل الذي أدخلته على الصورة.

 المس لفتح خيارات عامل التصفية. يمكنك ضبط الصورة المحددة.



الصور و مقاطع الفيديو

إضافة تأثير إلى صورة

- 1 في شاشة التعديل، المس .
- 2 اختر تطبيق أي من الخيارات على الصورة:
تجميل الوجه - يكشف تلقائياً وجهها في الصورة ويجعله ساطعاً.
تأثير النفق - تأثير الكاميرا الومو.
لون سالب - تأثير لون سالب.
أسود وأبيض - تأثير الألوان أسود وأبيض.
بني داكن - إضفاء تأثير بني داكن.
غير واضح - إضفاء تأثير غير واضح.
زيادة التركيز - حرك العلامة على طول الشريط لزيادة التركيز على الصورة. حدد الرمز **موافق** لتطبيق التغييرات أو اختر  للإلغاء.
غشاوة فسيفسائية - المس لتطبيق تأثير فسيفسائي ذات غشاوة على الصورة.
رسم بالزيت - إضفاء تأثير الرسم بالزيت.
التخطيط - تطبيق تأثير لتبدو الصورة كتخطيط.
زخرفة - إضفاء تأثير زخرفة.
زاهية - تأثير يبعث الوضوح والإشراق.
ضوء القمر - تغيير الضوء ليبدو كضوء القمر.
معتق - إضفاء تأثير مظهر قديم.
توهج - إضفاء تأثير شعاع ضوء.
رسوم متحركة - إضفاء تأثير رسوم متحركة.
ألوان مائية - إضفاء تأثير ألوان مائية.
- 3 للترجع عن أحد التأثيرات، ما عليك إلا لمس **تراجع** .

الوسائط المتعددة

- صور الأسماء** - تعيين صورة إلى شخص معين في قائمة الأسماء المتوفرة لديك بحيث تظهر صورته عند اتصاله بك.
- صورة بدء التشغيل** - تعيين صورة بحيث تظهر عند تشغيل الهاتف.
- صورة إيقاف التشغيل** - تعيين صورة بحيث تظهر عند إيقاف تشغيل الهاتف.

طباعة صورة

- 1 المس **أشيائي** في علامة التبويب الترفيه وحدد **الصور**. حدد الصورة التي تريدها. والمس .
- 2 المس **طباعة** ثم اختر بين **بلوتوث** و **PictBridge**.

تلميح! يمكنك الطباعة عبر بلوتوث أو عبر الاتصال بطابعة PictBridge متوافقة.

يمكنك تخزين أي ملفات وسائط متعددة في ذاكرة الهاتف بحيث يتوفر لديك الوصول السهل إلى كل الصور والأصوات وملفات الفيديو والألعاب. كما يمكنك حفظ ملفاتك في بطاقة الذاكرة. يتيح لك استخدام بطاقة ذاكرة تحرير مساحة على ذاكرة الهاتف. يمكنك العثور على هذه الملفات في القائمة **أشيائي** في علامة التبويب ترفيه.

الصور

تحتوي **الصور** على قائمة بالصور بما فيها الصور الافتراضية التي تم تحميلها مسبقاً إلى هاتفك، وصوراً قمت أنت بتنزيلها وصوراً تم التقاطها بكاميرا الهاتف.

إرسال صورة

- 1 المس **أشيائي** في علامة التبويب الترفيه وحدد **الصور**. حدد الصورة التي تريدها.
- 2 المس **إرسال** واختر من ضمن **رسالة** و**وسائط متعددة** و **بريد إلكتروني** و **بلوتوث**.

استخدام صورة

يمكنك اختيار الصور لاستخدامها كخلفيات للشاشة وعند إقفال الشاشة أو حتى لتعريف المتصل.

- 1 المس **أشيائي** في علامة التبويب الترفيه وحدد **الصور**. حدد الصورة التي تريدها. والمس .

- 2 المس **استخدام** كـ واختر من ضمن:

صورة الشاشة الرئيسية - تعيين خلفية للشاشة الرئيسية.

صورة إقفال - تعيين خلفية عند إقفال الشاشة.

الوسائط المتعددة

نقل ملف أو نسخه

يمكنك نقل ملف أو نسخه بين ذاكرة الهاتف وبطاقة الذاكرة. ويمكنك القيام بذلك إما لتحرير بعض المساحة في إحدى وحدات الذاكرة أو لمنع فقدان الصور.

- 1 المس أسياي في علامة التبويب الترفيه، وحدد الصور والمس .
- 2 حدد نقل أو نسخ.

3 يمكنك تحديد/إلغاء تحديد الصور بواسطة الضغط عليها بالتتابع. حدد الصورة التي تريد أن تنقلها أو تنسخها والمس **نسخ/نقل**.

أصوات

تحتوي الأصوات على قائمة أصوات تشمل الأصوات التي تم تنزيلها والأصوات الافتراضية والتسجيلات الصوتية. من هنا يمكنك إدارة الأصوات أو إرسالها أو تعيينها كغمات رنين.

استخدام صوت

- 1 المس أسياي في علامة التبويب الترفيه وحدد الأصوات.
- 2 حدد الصوت الذي تريده وتظهر رسالة تأكيد.
- 3 المس نعم. يبدأ التشغيل.
- 4 المس  وحدد استخدام ك.
- 5 اختر من ضمن نغمة رنين و نغمة رسالة و بدء التشغيل و إيقاف التشغيل.

ملفات الفيديو

تعرض ملفات الفيديو قائمة بملفات الفيديو التي تم تنزيلها إلى هاتفك أو تسجيلها عليه.

مشاهدة فيديو

- 1 المس أسياي في علامة التبويب ترفيه وحدد ملفات الفيديو.
- 2 حدد فيديو ليتم تشغيله.

إرسال فيديو كليب

- 1 حدّد فيديو.
- 2 المس  ثم إرسال واختر من ضمن رسالة و بريد إلكتروني و بلوتوث.

الألعاب والتطبيقات

يمكنك تثبيت ألعاب وتطبيقات جديدة إلى هاتفك لمساعدتك على التسلية عندما يكون لديك بعض الوقت للقيام بذلك.

كما يمكنك الوصول إلى ذلك باستخدام القائمة الألعاب والتطبيقات في علامة التبويب الترفيه.

تشغيل لعبة

- 1 المس الألعاب والتطبيقات في علامة التبويب الترفيه.
- 2 حدّد الألعاب، ثم اختر لعبة لتشغيلها.

المستندات

من قائمة المستندات في أجهزتي يمكنك عرض كل ملفات المستندات. من هنا يمكنك عرض ملفات Excel و PowerPoint و Word و Text و PDF.

نقل ملف إلى هاتفك

تعتبر تقنية بلوتوث الطريقة الأسهل على الأرجح لنقل ملف من الكمبيوتر إلى هاتفك. كما يمكنك استخدام وسيلة التخزين ذات السعة الكبيرة أو LG PC Suite عبر كبل المزامنة.

النقل باستخدام بلوتوث:

- 1 تأكد من تشغيل بلوتوث على الهاتف والكمبيوتر ومن كونهما مرئيين لبعضهما بعض.
- 2 استخدم الكمبيوتر لإرسال الملف عبر بلوتوث.
- 3 عندما يُرسل الملف إليك سيترتب عليك قبوله على الهاتف وذلك بلمس نعم.
- 4 يجب أن يظهر الملف في حافظتي كافتراضي، علامة التبويب الثانية في أجهزتي. يمكنك معاينة الملف إذا كانت الحافظة ممتلئة.

أخرى

تحتوي حافظتي أخرى على قائمة ملفات ليست عبارة عن صور أو أصوات أو ملفات فيديو أو مستندات أو ألعاب أو تطبيقات.

الوسائط المتعددة

الموسيقى

يكون مشغل الموسيقى مضمناً في الهاتف LG GM360i بحيث يمكنك تشغيل كل مسارات الموسيقى المفضلة لديك. للوصول إلى مشغل الموسيقى، المس الموسيقى في علامة التنويب الترفيه. من هنا يمكنك الوصول إلى عدد من الحافظات:

تم تشغيلها مؤخراً - يقوم بتشغيل الأغاني التي قمت بتشغيلها مؤخراً.

ملاحظة: يمكن أن تكون حقوق النشر لمفاتيح الموسيقى محمية بموجب المعاهدات الدولية وقوانين حقوق النشر الوطنية. ولهذا، فقد يكون من الضروري الحصول على إذن أو ترخيص لإعادة إنتاج الموسيقى أو نسخها. يمنع القانون الوطني في بعض البلدان النسخ الخاص للمواد المحمية بحقوق النشر. قبل تحميل أو نسخ الملف، يُرجى التحقق من القانون الوطني للبلد المعني والمتعلق باستخدام مثل هذه المواد.

كل المسارات - يحتوي على الأغاني الموجودة في هاتفك بابتداءً الموسيقى العشوائية التي تم تنزيلها مسبقاً.

القانون - الاستعراض عبر مجموعتك الموسيقية بحسب الفنان.

الألبومات - الاستعراض عبر مجموعتك الموسيقية بحسب الألبوم.

الأنواع - الاستعراض عبر مجموعتك الموسيقية بحسب النوع.

قوائم التشغيل - تحتوي على كل قوائم التشغيل التي أنشأتها.

مزج المسارات - شغل المسارات بترتيب عشوائي.

نقل الموسيقى إلى الهاتف

الطريقة الأسهل لنقل الموسيقى إلى الهاتف تتم عبر بلوتوث أو كبل المزامنة.

يمكن أيضاً استخدام LG PC Suite. للنقل باستخدام بلوتوث:

- 1 تأكد من إيقاف تشغيل بلوتوث في الجهازين ومن كونهما مرئيين لبعضهما البعض.
- 2 حدد ملف الموسيقى على الجهاز الآخر واختار إرساله عبر بلوتوث.
- 3 عندما يصبح الملف جاهزاً للإرسال، يجب أن تقبله على هاتفك بالضغط على نعم.
- 4 يجب أن يظهر الملف في الموسيقى < كل المسارات.

تشغيل أغنية

- 1 المس الموسيقى في علامة التنويب ترفيه.
- 2 حدد إحدى الحافظات والأغنية التي تريد تشغيلها.
- 3 المس **||** لإيقاف الأغنية مؤقتاً.
- 4 المس **▶▶** للانتقال إلى الأغنية التالية.
- 5 المس **◀◀** للعودة إلى الأغنية السابقة.
- 6 المس **↶** للعودة إلى قائمة الموسيقى. يمكن للمس أكثر من مرة واحدة للعودة إلى القائمة.

إنشاء قائمة تشغيل

يمكنك إنشاء قوائم التشغيل الخاصة بك وذلك بإنشاء مجموعة مختارة من الأغاني من حافظه قائمة التشغيل.

- 1 المس الموسيقى في علامة التويب ترفيه.
- 2 المس قوائم التشغيل، ثم إضافة قائمة تشغيل جديدة، وأدخل اسم قائمة التشغيل والمس حفظ.
- 3 تعرض حافظه كل المسارات كل الأغاني الموجودة على هاتفك. المس كل الأغاني التي تريد تضمينها في قائمة التشغيل، فتظهر علامة إلى جانب اسم كل أغنية.
- 4 المس تم.

راديو FM

تتوفر في الهاتف GM360i من LG ميزة راديو FM بحيث يمكنك ضبط محطاتك المفضلة للاستماع إليها أثناء التنقل. يجب أن تدخل سماعات الرأس لكي تتمكن من الاستماع إلى الراديو.

البحث عن محطات

يمكنك ضبط محطات الراديو في هاتفك وذلك بالبحث عنها إما يدوياً أو تلقائياً. وسيتم حينئذٍ حفظها في أرقام قنوات معينة بحيث لن تعود بحاجة إلى إعادة ضبطها. عليك أولاً توصيل سماعة الرأس بالهاتف إذ إنها تعمل كهوائي للضبط تلقائياً:

- 1 قم بالتمرير والمس راديو FM في علامة التويب ترفيه، ثم .
- 2 المس تفحص تلقائياً. تظهر رسالة تأكيد. حدد نعم، فيتم العثور على المحطات تلقائياً وتخصيصها إلى قناة في هاتفك.

ملاحظة: يمكنك أيضاً ضبط إحدى المحطات يدوياً باستخدام  والذي يظهر في وسط الشاشة. إذا ضغطت باستمرار  و ، فسيتم العثور على المحطات تلقائياً.

إعادة تعيين القنوات

- 1 قم بالتمرير والمس راديو FM في علامة التويب ترفيه، ثم .
- 2 اختر إعادة تعيين القناة لإعادة التعيين ثم اختر إعادة تعيين كل القنوات لإعادة تعيين كل القنوات. تعود كل قناة إلى معدل التردد 87.5 ميجاهرتز.

منظم المواعيد

إضافة حدث إلى التقويم

- 1 المس منظم المواعيد في علامة التويب أدوات المساعدة وحدد التقويم.
 - 2 حدّد التاريخ الذي تريد إضافة حدث إليه.
 - 3 المس  ثم إضافة حدث.
 - 4 المس فئة ثم اختر من ضمن موعد أو ذكرى أو عيد ميلاد.
 - 5 أدخل موضوعاً.
 - 6 تحقّق من التاريخ والوقت وأدخل الوقت الذي تريد أن يبدأ عنده الحدث. بالنسبة إلى الموعد ومناسبة الذكرى السنوية أدخل تاريخ ووقت انتهاء الحدث في المرعين السفليين للتاريخ والوقت. أدخل الموقع إذا كان موعداً.
 - 7 عيّن منبه و تكرر.
 - 8 حدّد حفظ فيتم حفظ الحدث في التقويم. يقوم رأس مؤشر مربع الشكل بتحديد اليوم الذي تم حفظ أية أحداث فيه وسيرن جرس في وقت البدء المعين للحدث، بحيث يمكنك أن تحافظ على تنظيم أوقاتك.
- ### إضافة عنصر إلى قائمة المهام
- 1 المس منظم المواعيد في علامة التويب أدوات المساعدة.
 - 2 حدد المهام والمس إضافة مهمة.
 - 3 عين تاريخ المهمة، وأضف ملاحظات وحدّد مستوى للأولوية: عالية أو متوسطة أو منخفضة.
 - 4 قم بحفظ المهمة عبر تحديد حفظ.
- ### استخدام الباحث عن التاريخ
- الباحث عن التاريخ هو أداة سهلة تساعدك على احتساب تاريخ الأيام القليلة المقبلة. مثلاً بعد 60 يوماً من التاريخ 10.10.07 سيكون التاريخ 09.12.2007
- 1 المس منظم المواعيد في علامة التويب أدوات المساعدة.
 - 2 حدد الباحث عن التاريخ.
 - 3 قم بتعيين التاريخ المطلوب في علامة التويب من.
 - 4 حدّد عدد الأيام في علامة التويب بعد.
 - 5 يظهر التاريخ الهدف أذناه.

إضافة مذكرة

1 المس المذكرات في علامة التويب أدوات مساعدة.

2 المس إضافة مذكرة.

3 اكتب مذكرتك، ثم المس حفظ.

4 تظهر المذكرة على الشاشة في تطبيق الذاكرة.

ضبط المنبه

1 المس منبه في علامة التويب أدوات مساعدة. يجب أن يظهر منبه عنصر واجهة الاستخدام في القائمة كافتراضي ولا يمكنك حذفه.

2 المس إضافة منبه.

3 عيّن الوقت الذي تريد أن يبدأ فيه المنبه بالرنين في حقل البحث الوقت.

4 اختر كيف تريد أن يتكرر المنبه في صندوق

التكرار : غير مكرر، مكرر يوميًا، الاثنين ~

الجمعة، الاثنين ~ السبت، السبت ~ الأحد،

باستثناء أيام العطل أو اختر يوم الأسبوع.

تشير الرموز إلى يوم الأسبوع الذي اخترته.

5 حدّد نوع المنبه لتحديد نوع المنبه المطلوب.

6 اختر جرس المنبه وحدّد صوتاً من الحافظة. للاستماع إلى الأصوات، المس الصوت، يليه



7 أضف مذكرة للمنبه في صندوق المذكرة.

8 أخيراً، يمكنك تعيين الفاصل الزمني للانتظار إلى 5 أو 10 أو 20 أو 30 دقيقة أو 1 ساعة أو إيقاف التشغيل.

9 بعد انتهائك من تعيين المنبه، المس حفظ.

ملاحظة: يمكنك إعداد 5 منبهات كحد أقصى بما في ذلك منبه عنصر واجهة الاستخدام.

تلميح! قم بتمرير مفتاح التشغيل/إيقاف التشغيل الخاص بالمنبه لتعيينه.

إضافة مذكرة بواسطة لوحة الرسم

1 قم بالتمرير والمس لوحة الرسم في علامة التويب أدوات المساعدة.

2 المس إضافة رسم.

3 ارس مذكرتك على شاشة اللمس LCD يتبعها



4 المس نعم، فتظهر المذكرة على الشاشة في

تطبيق لوحة الرسم.

منظم المواعيد

التقاط صورة شاشة

مفتاح الكاميرا موجود في الجانب الأيمن من الهاتف. يمكن التقاط صورة شاشة بمجرد ضغط مفتاح الكاميرا مرتين. يتم حفظ الصورة التي تم التقاطها في المعرض وفي حافظة الصور في أنشيتاتي. تلتقط هذه الميزة الصور التالية: WAP و SNS ومعذ البريد الإلكتروني وشاشة العرض، ومعذ الرسالة والرسائل المستلمة، وغير ذلك.



مفتاح الكاميرا



يمكن التقاط صورة شاشة بمجرد ضغط مفتاح الكاميرا مرتين.

مسجل الصوت

استخدم مسجل الصوت لتسجيل مذكرات صوتية أو ملفات صوت أخرى.

المس مسجل الصوت في علامة التبويب أدوات المساعدة وحدد ، ثم الإعدادات لتغيير الإعدادات:

المدة - تعيين مدة التسجيل. اختر من ضمن بلا تحديد أو حجم رسالة MMS أو 1 دقيقة.

الجودة - حدد جودة الصوت. اختر من ضمن دقيق جدا، دقيق أو عادي.

الذاكرة المستخدمة - حدد المكان الذي تريد حفظ ملفات الصوت فيه. اختر من ضمن الذاكرة الخارجية أو ذاكرة الهاتف.

تسجيل ملف صوتي أو صوت

- 1 المس  لبدء التسجيل.
- 2 المس  لإيقاف التسجيل مؤقتاً.
- 3 المس  لإنهاء التسجيل.
- 4 المس  للاستماع إلى تسجيلك.

استخدام الحاسبة

- 1 المس أدوات في علامة التبويب أدوات مساعدة.
- 2 حدّد الحاسبة.
- 3 المس المفاتيح الرقمية باستخدام لوحة المفاتيح لإدخال الأرقام.

- 4 بالنسبة إلى العمليات الحسابية البسيطة، المس
الوظيفة المطلوبة (+، -، x، ÷). يتبعها =.
- 5 بالنسبة إلى الحسابات الأكثر تعقيداً، المس 
واختر من ضمن sin أو cos أو tan أو
log أو ln أو exp أو sqrt أو deg أو
rad الخ.

تحويل وحدة

- 1 المس أدوات في علامة التنبؤ أدوات مساعدة.
- 2 حدد محول الوحدة.
- 3 اختر ما إذا كنت ترغب في تحويل العملة أو
المساحة أو الطول أو الوزن أو درجة الحرارة
أو الحجم أو السرعة.
- 4 يمكنك الآن تحديد الوحدة وإدخال القيمة التي
تريد التحويل منها، تتبعها الوحدة التي تريد
التحويل إليها.

5 تظهر القيمة المناسبة على الشاشة.

إضافة مدينة إلى ساعتك العالمية

- 1 المس أدوات في علامة التنبؤ أدوات مساعدة.
- 2 حدد الساعة العالمية.
- 3 المس  ، يتبعه مدينة جديدة.

- 4 قم بتمرير الكرة الأرضية، المس المنطقة التي
تريد واختر المدينة على الخريطة.
- 5 أو المس  وكتب اسم المدينة المطلوبة في
مربع حقل البحث.

استخدام ساعة الإيقاف

- 1 المس أدوات في علامة التنبؤ أدوات مساعدة.
- 2 حدد ساعة الإيقاف.
- 3 المس بدء في أسفل الشاشة لبدء تشغيل المؤقت.
- 4 المس الدورة إذا أردت تسجيل وقت الدورة.
- 5 المس إيقاف لإيقاف تشغيل المؤقت.
- 6 المس استئناف لإعادة تشغيل ساعة الإيقاف في
الوقت الذي توقفت فيه أو المس إعادة التعيين
لإعادة بدء التوقيت من جديد.

مزمنة الكمبيوتر الشخصي

يمكنك مزمنة الكمبيوتر مع الهاتف للتأكد من تطابق كافة التفاصيل والتواريخ الهامة. كما يمكنك إجراء نسخة احتياطية لمفاتيح للاطمئنان.

تثبيت LG PC Suite على الكمبيوتر

1 في الشاشة الرئيسية اضغط  وحدد **التوصيل** في علامة التبويب الإعدادات.

2 حدد **وضع اتصال USB** والمس **PC Suite**.

3 قم بتوصيل الهاتف والكمبيوتر عبر كبل USB وانتظر لبرهة. تظهر رسالة دليل التثبيت.

4 اتبع الإرشادات التي تظهر على الشاشة لإكمال معالجة مثبت LG PC Suite.

5 عند اكتمال عملية التثبيت، يظهر رمز LG PC Suite على سطح المكتب.

توصيل الهاتف والكمبيوتر

1 في الشاشة الرئيسية اضغط  وحدد **التوصيل** في علامة التبويب الإعدادات.

2 حدد **وضع اتصال USB**.

3 المس **PC Suite**.

4 قم بتوصيل الهاتف والكمبيوتر عبر كبل USB وانتظر لبرهة. يعمل PC Suite بشكل تلقائي.

نسخ احتياطي للمعلومات على الهاتف واستعادتها

1 قم بتوصيل الهاتف بالكمبيوتر كما تم توضيحه أعلاه.

2 انقر فوق **نسخ احتياطي** و **استعادة** في الأنوات.

3 حدد المحتوى الذي ترغب في إجراء نسخ احتياطي له أو استعادته. حدد الموقع حيث تريد إجراء نسخ احتياطي للمعلومات أو استعادة المعلومات منه. انقر فوق **رمز تشغيل**.

4 سيتم إجراء نسخ احتياطي للمعلومات أو استعادتها.

عرض ملفات الهاتف على الكمبيوتر

1 قم بتوصيل الهاتف بالكمبيوتر كما تم توضيحه سابقاً.

2 انقر فوق **رمز الصور**.

3 سيتم تحميل ملفات الصور إلى الكمبيوتر. سيتم عرضها عند النقر فوق ذاكرة الهاتف.

4 انقر فوق **رمز ملفات الفيديو**.

5 سيتم تحميل ملفات الفيديو الموجودة في الهاتف إلى الكمبيوتر. سيتم عرضها عند النقر فوق ذاكرة الهاتف.

تلميح! يساعدك عرض محتويات الهاتف على الكمبيوتر على ترتيب الملفات، وتنظيم المستندات وإزالة المحتوى الذي لم تعد بحاجة إليه.

مزامنة الأسماء

- 1 توصيل الهاتف بالكمبيوتر.
- 2 انقر فوق رمز الأسماء.
- 3 سيقوم الكمبيوتر الآن باستيراد وعرض كل الأسماء المحفوظة في الهاتف. (انقر فوق مزامنة الأسماء، فيتم تحميل الأسماء الموجودة في الهاتف)
- 4 انقر فوق ملف وحدد تصدير. يمكنك الآن تحديد الهدف والموقع حيث تريد حفظ الأسماء.

مزامنة الرسائل

- 1 قم بتوصيل الهاتف بالكمبيوتر.
- 2 انقر فوق رمز الرسائل.
- 3 تظهر كل رسائل الهاتف في الحافظات على الشاشة.
- 4 انقر فوق عنوان الأعمدة لإعادة ترتيب الرسائل التي تم فرزها بحسب المرسل المحتويات و تاريخ الاستلام.

استخدام الهاتف كجهاز تزامن الموسيقى

يمكنك أن تستخدم هاتفك كجهاز تزامن الموسيقى لمزامنة ملفات الموسيقى فقط.

يمكنك تنفيذ مزامنة الموسيقى باستخدام Windows Media Player 10/11 وهو يعتمد ذاكرة الهاتف وبطاقة ذاكرة خارجية.

- 1 افصل الهاتف عن الكمبيوتر.
- 2 في الشاشة الرئيسية حدد ، ثم حدّد التوصيل في علامة التبويب الإعدادات.
- 3 حدد وضع اتصال USB .
- 4 المس مزامنة الموسيقى.
- 5 توصيل الهاتف بالكمبيوتر. ستظهر على شاشة هاتفك الكلمة التالية: متصل.

المتصفح

الوصول إلى المتصفح

- 1 المس المتصفح في علامة التثبيت أدوات مساعدة.
- 2 للانتقال مباشرة إلى صفحة المستعرض الرئيسية، حدد الصفحة الرئيسية. كطريقة بديلة، حدد إدخال العنوان واكتب عنوان URL، يتبعه اتصال.

استخدام قارئ RSS

إن RSS أو توزيع المحتوى والتطبيقات عبارة عن مجموعة من أشكال تغذية المتصفح يتم استخدامها لنشر محتوى يتكرر تحديثه مثل إعلانات المدونات أو عناوين الأخبار أو البث الصوتي على المتصفح podcasts. ويحتوي مستند RSS والذي يسمى تغذية أو تغذية المتصفح أو قناة على ملخص محتوى من موقع المتصفح مرتبط أو على النص الكامل. ويفضل تغذية RSS سيتمكن الأشخاص من الاحتفاظ بمواقعهم المفضلة على المتصفح بشكل تلقائي. هذه الطريقة أسهل من التحقق من تلك المواقع يدوياً. وبإستطاعة المستخدم أن يشترك في قناة عبر إدخال ارتباط القناة في القارئ أو بالنقر فوق رمز RSS في مستعرض يبدأ عملية الاشتراك. ويتحقق القارئ من القنوات التي اشترك فيها المستخدم بشكل دوري بحثاً عن محتوى جديد، ويقوم بتنزيل أي تحديثات يعثر عليها.

ملاحظة: يتم فرض رسم إضافي عند الاتصال بهذه الخدمة وتنزيل المحتوى. للحصول على تفاصيل تتعلق بالرسوم المفروض على البيانات، اتصل بموفر الشبكة.

إضافة الإشارات المرجعية والوصول إليها

- لكي تتمكن من الوصول إلى مواقعك المفضلة على المتصفح بشكل سريع وسهل، يمكنك إضافة إشارات مرجعية وحفظ صفحات المتصفح.
- 1 المس المتصفح في علامة التثبيت أدوات مساعدة.
 - 2 حدد الإشارات المرجعية. تظهر قائمة بالإشارات المرجعية على الشاشة.
 - 3 لإضافة إشارة مرجعية جديدة، المس إضافة إشارة مرجعية. أدخل اسماً للإشارة المرجعية يتبعه URL في مربع الحقل المطبق.
 - 4 المس حفظ. تظهر إشارتك المرجعية الآن في قائمة الإشارات المرجعية.

حفظ صفحة

- 1 انتقل إلى صفحة المتصفح المطلوبة كما تم وصفه أعلاه.
- 2 المس  وحدد حفظ هذه الصفحة.
- 3 أدخل اسماً لصفحة المتصفح بحيث يمكنك التعرف عليها بسهولة.
- 4 المس حفظ.

استخدام الهاتف كمودم

بإمكان وظيفة الهاتف GM360i أن تكون مضاعفة إذ باستطاعته أن يعمل كمودم للكمبيوتر، ما يوفر لك الوصول إلى البريد الإلكتروني وإنترنت حتى عندما لا يكون باستطاعتك الاتصال باستخدام الأسلاك. ويمكنك استخدام إما كبل USB أو بلوتوث.

استخدام كبل USB:

- 1 تأكد من تثبيت LG PC Suite على الكمبيوتر.
 - 2 قم بتوصيل الجهاز GM360i والكمبيوتر باستخدام كبل USB كما تم توضيحه سابقاً وابدأ بتشغيل البرنامج LG PC Suite.
 - 3 انقر فوق مجموعة إنترنت على الكمبيوتر. ثم انقر فوق الزر إضافة وحدد مودم.
 - 4 اكتب الوضع الذي يجعلك تتصل بالإنترنت واحفظ القيم.
 - 5 سيظهر الوضع الذي أنشأته على شاشة الكمبيوتر. حده وانقر فوق اتصال. سيتصل الكمبيوتر من خلال GM360i.
- ملاحظة: لمزيد من المعلومات حول إجراء المزامنة باستخدام LG PC Suite.

الوصول إلى صفحة محفوظة

المس المتصفح في علامة التبويب أدوات مساعدة. ثم حدد الصفحات المحفوظة. يمكنك عرض الصفحات المحفوظة هنا.

عرض محفوظات المتصفح

المس المتصفح في علامة التبويب أدوات مساعدة. ثم حدد المحفوظات.

تغيير إعدادات المتصفح

المس المتصفح في علامة التبويب أدوات مساعدة. ثم حدد الإعدادات.

يمكنك أن تختار تعديل الأوضاع أو إعدادات المظهر أو ذاكرة التخزين المؤقت أو ملفات تعريف الارتباط أو إعدادات الأمان.

المتصفح

استخدام بلوتوث:

الوصول إلى Google
يمكنك استخدام خدمة Google باستخدام هذه القائمة.
توفر خدمة Google فرصة استخدام البحث.

- 1 تأكد من كون بلوتوث في وضع التشغيل ومن كونه مرنيا بالنسبة إلى الكمبيوتر والهاتف GM360i.
- 2 قم بإقران الكمبيوتر و GM360i بحيث يكون رمز المرور مطلوباً للاتصال.
- 3 استخدم معالج الاتصال على LG PC Suite لإنشاء اتصال بلوتوث نشط.
- 4 انقر فوق مجموعة إنترنت على الكمبيوتر. ثم انقر فوق الزر جديد.
- 5 اختر مودم USB لمحمول LG وحدد موافق. يظهر الآن على الشاشة.
- 6 اكتب الوضع الذي يجعلك تتصل بالإنترنت واحفظ القيم.
- 7 سيظهر الوضع الذي أنشأته على شاشة الكمبيوتر. حدده وانقر فوق اتصال. سيصل الكمبيوتر من خلال GM360i.

الإعدادات

تخصيص الأوضاع

يمكنك أن تقوم بسرعة بتغيير وضعك على الشاشة الرئيسية.

يمكنك تخصيص إعدادات الوضع باستخدام قائمة الإعدادات.

1 **المس الأوضاع في علامة التبويب إعدادات.**
2 اختر الوضع الذي تريد تعديله.

3 يمكنك حينئذٍ تغيير كل خيارات الأصوات والتنبيهات المتوفرة في القائمة، بما فيها إعدادات نغمة الرنين ومستوى الصوت، ونغمة الرسالة وغيرها.

تغيير إعدادات الشاشة

المس إعدادات الشاشة علامة التبويب الإعدادات.
إعدادات الشاشة

خلفية الشاشة - اختر سمة الشاشة الرئيسية أو عند إقفال الشاشة.

نموذج شاشة عنصر واجهة المستخدم الرئيسية - اختر نموذج للشاشة الرئيسية.

Livesquare - المس دليل
Livesquare للتحقق من وظائفه.

سمة سماعة الهاتف - اختر أسود أو أبيض (Cartoon styled UI).

القائمة العلوية - اختر وضع القائمة العلوية، الخطوط المتعرجة أو التمرير أو شاشة تلو الأخرى.

إقفال الشاشة - اختر أسلوب الإقفال.

حركة إقفال الشاشة - اختر نوع حركة إقفال الشاشة.

الطلب - قم بضبط لون الرقم.

الخط - قم بضبط حجم الخط. هناك أربعة خيارات: **صغير ومتوسط وكبير وكبير جداً.**

ملاحظة: بقدر ما تطول الفترة التي تكون خلالها الإضاءة الخلفية قيد التشغيل، بقدر ما يتم استخدام طاقة البطارية. قد تحتاج إلى شحن هاتفك بشكل متكرر أكثر.

السطوع - قم بضبط سطوع الشاشة.

رسالة الترحيب - اختر تشغيل أو إيقاف التشغيل وقم بملئ رسالة الترحيب في حقل النص.

اسم الشبكة - اختر تشغيل أو إيقاف تشغيل.

بدء التشغيل/إيقاف التشغيل - اختر سمة شاشة بدء التشغيل/إيقاف التشغيل.

تغيير إعدادات الهاتف

استمتع بحرية تكييف كيفية عمل GM360i مع أسلوبك الخاص.

المس إعدادات الهاتف في علامة التبويب الإعدادات ثم اختر من القائمة أدناه.

إعدادات الهاتف

التاريخ والوقت - اضبط إعدادات التاريخ والوقت أو اختر تحديث الوقت تلقائياً أو استخدام خيار التوقيت الصيفي.

توفير الطاقة - اختر تشغيل/إيقاف تشغيل إعدادات توفير الطاقة التي تم تعيينها في الشركة المصنعة أو الليل فقط.

اللغات - قم بتغيير لغة شاشة الهاتف GM360i.

الإعدادات

ذكرة SIM - عرض الذاكرة المتوفرة في بطاقة SIM.

الذاكرة الخارجية - عرض الذاكرة المتوفرة في بطاقة الذاكرة الخارجية (قد تحتاج إلى شراء بطاقة الذاكرة بشكل منفصل).

ضبط التخزين الأساسي - اختر الموقع الذي تفضل حفظ العناصر فيه بين الهاتف والذاكرة الخارجية.

تغيير إعدادات التوصيل

تم مسبقاً إعداد إعدادات التوصيل بواسطة مشغل الشبكة، بحيث يمكنك أن تتمتع باستخدام هاتفك الجديد فوراً. لتغيير هذه الإعدادات، استخدم هذه القائمة:

المس التوصيل في علامة التبويب الإعدادات.

إعدادات الشبكة

تحديد الشبكة - إذا قمت بالتحديد إلى تلقائي، فسيبحث GM360i تلقائياً عن الشبكة ويسجل الهاتف على الشبكة. ننصح بهذا الأمر للحصول على خدمة وجودة أفضل. إذا قمت بالتحديد إلى يدوي، فستظهر كل الشبكات المتوفرة حالياً ويمكنك تحديد واحدة منها للتسجيل.

القوائم المفضلة - يمكنك إضافة شبكة مفضلة للاتصال بها. إذا كانت الشبكة تجري بحثاً تلقائياً، اختر شبكة من قائمة الشبكات أو قم بإضافة شبكة جديدة يدوياً.

أوضاع إنترنت - تعرض هذه القائمة أوضاع إنترنت. لا يمكنك حذف أو تعديل التكوينات الافتراضية وهذا يتوقف على متغيرات البلدان.

نقاط الوصول - قام مشغل الشبكة بحفظ هذه المعلومات مسبقاً. يمكنك إضافة نقاط وصول جديدة باستخدام هذه القائمة.

قفل المفاتيح تلقائياً - تم بإقبال لوحة المفاتيح تلقائياً في الشاشة الرئيسية.

الحماية - اضبط إعدادات الحماية، وهذا يشمل رموز PIN وقفل الهاتف.

معلومات الذاكرة - راجع استخدام إدارة الذاكرة للحصول على مزيد من المعلومات.

إعادة تعيين الإعدادات - يقوم هذا الخيار باستعادة كل الإعدادات إلى إعدادات الحماية اضية للشركة المصنعة.

معلومات - حدد تعليمات لعرض معلومات الهاتف GM360i التقنية. يمكنك أيضاً ترقية البرنامج معلومات الهاتف.

استخدام إدارة الذاكرة

تتوفر في GM360i ثلاثة أنواع من الذاكرة: الهاتف، وبطاقة SIM وبطاقة ذاكرة خارجية. ويمكنك استخدام إدارة الذاكرة لمعرفة طريقة استخدام كل نوع من أنواع الذاكرة والمساحة المتوفرة في كل منها.

المس إعدادات الهاتف في علامة التبويب الإعدادات، ثم معلومات الذاكرة.

الذاكرة العامة للهاتف - عرض الذاكرة المتوفرة في GM360i للصور والأصوات وملفات الفيديو وMMS والبريد الإلكتروني وتطبيقات Java وغير ذلك.

ذاكرة الهاتف المحجوزة - عرض الذاكرة المتوفرة في الهاتف لرسائل SMS والأسماء والتويم وقائمة المهام والمذكرة والمنبه ومحفوظات المكالمات والإشارات المرجعية وعناصر متفرقة.

لاستلام ملف:

- 1 لاستلام ملفات، يجب أن يكون بلوتوث في وضع التشغيل و مرئياً. انظر تغيير إعدادات بلوتوث أدناه للحصول على مزيد من المعلومات.
- 2 تظهر رسالة تطالبك بقبول الملف من المرسل. المس نعم لاستلام الملف.
- 3 ستشاهد الموقع الذي تم حفظ الملف فيه. بالنسبة إلى ملفات الصور، يمكنك اختيار عرض الملف أو استخدام كخلفية للشاشة. يتم عادةً حفظ الملفات في الحافظة المناسبة في أجهزتي.

تغيير إعدادات بلوتوث:

المس بلوتوث في علامة التبويب الإعدادات. وحدد  واختر الإعدادات. أدخل تغييراتك على:

- إمكانية رؤية جهاز - اختر أن يكون الجهاز مرئياً، أو مخفياً أو مرئياً لدقيقة واحدة.
- اسم الجهاز - أدخل اسماً لـ GM360i.
- الخدمات المعتمدة - اختر الطريقة التي تريدها لاستخدام بلوتوث مع مختلف الخدمات.
- وضع SIM عن بُعد - تشغيل أو إيقاف تشغيل.
- عنواني - عرض عنوان بلوتوث.

اتصال حزم البيانات - اختر الوقت الذي تريد أن يتصل فيه هاتفك بشبكة حزم البيانات.

ضبط وضع اتصال USB - اختر خدمة البيانات من الخيارات وقم بمزامنة هاتف GM360i باستخدام البرنامج LG PC Suite لنسخ الملفات من الهاتف. انظر مزامنة الكمبيوتر الشخصي للحصول على مزيد من المعلومات حول المزامنة. إذا كنت تستخدم مزامنة الموسيقى مع Windows Media Player، حدد مزامنة الموسيقى في هذه القائمة. مزامنة الموسيقى متوفرة فقط لمحتويات الموسيقى.

إرسال الملفات واستلامها باستخدام بلوتوث

لإرسال ملف:

- 1 افتح الملف الذي تريد إرساله، وهو عادةً عبارة عن صورة أو فيديو أو ملف موسيقى.
- 2 اختر إرسال. اختر بلوتوث.
- 3 إذا قمت مسبقاً بإقران جهاز بلوتوث، فلن يقوم GM360i بالبحث تلقائياً عن أجهزة بلوتوث أخرى. وإلا، فسيبحث الهاتف GM360i تلقائياً عن أجهزة بلوتوث أخرى تم تمكينها ضمن النطاق.
- 4 اختر الجهاز الذي تريد إرسال الملف إليه.
- 5 سيتم إرسال ملفك.

تلميح! تحقق من شريط التقدم للتأكد من إرسال الملف.

الإعدادات

الاقتران بجهاز بلوتوث آخر

عند إجراء اقتران لهاتف GM360i بجهاز آخر، يمكنك إعداد اتصال محمي برمز مرور.

1 تحقق من كون بلوتوث في وضع التشغيل و مرنياً. يمكنك تغيير الرؤية في القائمة الإعدادات.

2 المس بحث.

3 يبحث الهاتف GM360i عن الأجهزة. عند اكتمال عملية البحث، يظهر تجديد على الشاشة.

4 اختر الجهاز الذي تريد الاقتران به وأدخل رمز المرور، ثم المس موافق.

5 يتصل هاتفك حينئذٍ بالجهاز الآخر، حيث عليك إدخال رمز المرور نفسه.

6 لقد أصبح اتصال بلوتوث المحمي برمز مرور أمناً الآن.

استخدام سماعة رأس بلوتوث

1 تأكد من كون بلوتوث في وضع التشغيل ومن كونه مرنياً.

2 اتبع الإرشادات التي تصحب سماعة الرأس لوضعها في وضع الاقتران وإجراء اقتران للأجهزة.

3 المس السؤال قبل الاتصال أو الاتصال دوماً والمس نعم للاتصال الآن. يقوم الهاتف GM360i بالتبديل تلقائياً إلى وضع سماعة الرأس.

Wi-Fi

يتيح لك مدير التشغيل اللاسلكي إدارة اتصالات إنترنت عبر Wi-Fi (شبكة LAN اللاسلكية) على جهازك.

يتيح للهاتف الاتصال بالشبكات اللاسلكية المحلية، أو الوصول إلى إنترنت لاسلكياً.

Wi-Fi أسرع وذات نطاق أوسع من تقنية بلوتوث اللاسلكية، وبالتالي يمكن استخدامه لإرسال رسائل بريد إلكتروني سريعاً ولاستعراض إنترنت.

ملاحظة: يعتمد الهاتف GM360i تشفير WEP و WPA و WPA2 و WPA ليس تشفير EAP و WPS. إذا قام موفر خدمة Wi-Fi أو مسؤول الشبكة بتعيين التشفير لحماية الشبكة، فعليك ملئ المفتاح في الحقل "نوع الحماية". إذا لم يتم تعيين التشفير، فسيكون الحقل غير نشط مع قيمة "إلا". يمكنك الحصول على المفتاح من موفر خدمة Wi-Fi لديك أو من مسؤول الشبكة.

تحديث البرنامج

برنامج تحديث برنامج الهاتف المحمول من LG

لمزيد من المعلومات حول تثبيت هذا البرنامج واستخدامه، يرجى زيارة موقع <http://update.lgmobile.com>. يتيح لك هذه الميزة ترقية برنامجك إلى الإصدار الأخير بسرعة وبشكل مريح على إنترنت من دون الحاجة إلى زيارة مركز الخدمة الخاص بنا. بما أن برنامج ترقية برنامج الهاتف المحمول يتطلب انتباه المستخدم الكامل لمدة عملية الترقية، يرجى التحقق من التعليمات والملاحظات التي تظهر في كل خطوة قبل المتابعة. تجدر الملاحظة إلى أن إزالة كبل اتصال بيانات USB أو البطاريات أثناء التحديث قد يتسبب بإلحاق ضرر بالغ بهاتفك المحمول. وبما أن جهة التصنيع لا تتحمل أي مسؤولية تجاه خسارة بيانات أثناء عملية التحديث، ننصحك بتدوين أي معلومات مهمة لتوخي الأمان.

الملحقات

تم تزويدك بهذه الملحقات مع الهاتف GM360i.



كبل البيانات



الشاحن



البطارية



سماعة رأس
استيريو

ملاحظة:

- استخدم ملحقات LG الأصلية دائماً.
- يؤدي عدم القيام بذلك إلى إبطال الضمان.
- قد تختلف الملحقات من منطقة لأخرى؛ يرجى مراجعة شركة أو وكيل الخدمة الإقليمي لمزيد من الاستفسارات.

بيانات تقنية

عام

اسم المنتج : GM360i

النظام : GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900

درجات الحرارة المحيطة

الحد الأقصى : +55 درجة مئوية (تفريغ)،

+45 درجة مئوية (شحن)

الحد الأدنى : -10 درجات مئوية

إرشادات لاستخدام آمن و فعال

- معلومات بيانات SAR للمقيمين في بلدان/مناطق تتبنى حد SAR الموصى به من قبل معهد المهندسين الكهربائيين والإلكترونيين (IEEE) هو 1.6 واط/كيلوجرام كمتوسط لكل جرام واحد (1) من النسيج.

العناية بالمنتج وصيانتة

⚠ تحذير

استخدم فقط البطاريات، والشواحن، والملحقات الموافق على استخدامها مع طراز الهاتف المعين هذا. إن استخدام أي أنواع أخرى قد يؤدي إلى إبطال أي ضمان أو موافقة تنطبق على الهاتف المحمول، وقد يكون خطيراً.

- لا تقم بتفكيك الوحدة. اعمل على نقل الوحدة إلى تقني صيانة مؤهل عندما تكون بحاجة إلى تنفيذ عمل ما عليها لإصلاحها.
- ضع هذه الوحدة في مكان بعيد عن الأجهزة الإلكترونية مثل أجهزة التلفزيون، والراديو، وأجهزة الكمبيوتر الشخصي.
- يجب إبقاء الوحدة بعيدة عن مصادر السخونة مثل الأجهزة المشعة للحرارة أو الأفران المنزلية.
- تجنب إسقاط الوحدة.
- لا تعرّض هذه الوحدة للاهتزاز الميكانيكي أو الصدمات.
- أوقف تشغيل الهاتف في أي منطقة حيث القوانين الخاصة تطالبك بذلك. على سبيل المثال، لا تستخدم الهاتف في المستشفيات إذ قد يؤثر على المعدات الطبية الحساسة.

يرجى قراءة هذه الإرشادات البسيطة. عدم التقيد بهذه الإرشادات قد يكون أمراً خطراً أو غير قانوني.

التعرّض لطاقة التردد اللاسلكي

معلومات حول التعرّض للموجات اللاسلكية ومعدل الامتصاص المحدد (SAR). لقد تم تصميم طراز الهاتف المحمول GM360i هذا بحيث يفي بمتطلبات السلامة القابلة للتطبيق المتعلقة بالتعرّض للموجات اللاسلكية. وتستند هذه المتطلبات إلى إرشادات عملية تتضمن هوامش سلامة مصممة لضمان السلامة لكل الأشخاص، دون أخذ العمر والصحة بعين الاعتبار.

- تستخدم إرشادات التباين للموجات اللاسلكية وحدة قياس معروفة بمعدل الامتصاص المحدد، أو SAR. وتجرى اختبارات SAR باستخدام أساليب قياسية فيما ينفذ الهاتف عملية الإرسال بأعلى مستوى طاقة مسموح به في كل نطاقات التردد التي تم اختبارها.
- وعلى الرغم من وجود اختلافات بين مستويات SAR لمختلف طرازات هاتف LG، فهي كلها مصممة بحيث تفي بالإرشادات المتعلقة بالتعرّض للموجات اللاسلكية.
- حد SAR الذي توصي به اللجنة الدولية للحماية من الإشعاع غير المؤين (ICNIRP) هو 2 واط/كيلوجرام وهو حد مقسم على نحو متناسب إلى 10 جرامات من النسيج.
- تبلغ أعلى قيمة SAR لطرز الهاتف هذا الذي تم اختياره بواسطة DASy4 للاستخدام على الأذن 1.33 واط/كيلوجرام (10 جرام) وعند الحمل على الجسد تبلغ 1.31 واط/كيلوجرام (10 جرام).

- الجيب على مستوى الصدر.
- قد تسبب بعض الهواتف المحمولة الإزعاج للأدوات المساعدة للسمع.
- قد يؤثر الحد الأدنى من التشويش على أجهزة التلفزيون والراديو والكمبيوتر الشخصي.

السلامة على الطرقات

- تحقق من القوانين والأنظمة المتعلقة باستخدام الهواتف المحمولة في المناطق أثناء القيادة.
- لا تستخدم هاتفًا محمولًا باليد أثناء القيادة.
- عليك دومًا تركيز كامل الانتباه على القيادة.
- استخدم مجموعة أدوات لا يدوية، إذا كانت متوفرة.
- توقف عند جانب الطريق قبل إجراء مكالمة أو الإجابة على المكالمة إذا كانت ظروف القيادة تستدعي ذلك.
- قد تؤثر طاقة RF على بعض الأنظمة الإلكترونية في المركبة مثل الاستيريو ومعدات السلامة في السيارة.
- عندما تكون المركبة مزودة بكيس هوائي، عليك عدم إعاقة عمله بواسطة تجهيزات لاسلكية مثبتة أو محمولة. قد يبطل ذلك عمل الكيس الهوائي أو قد يتسبب ذلك بإصابات خطيرة بسبب أداء غير صحيح.
- إذا كنت تستمع إلى الموسيقى أثناء تنفك، فتأكد من كون مستوى الصوت معقولًا بحيث تكون مدركًا لما يحيط بك. هذا الأمر يعتبر ملزمًا خاصة بالقرب من الطرقات.

- لا تمسك الهاتف بيدين رطبتين فيما يكون شحنه جارٍ. فقد يتسبب هذا الأمر بحدوث صدمة كهربائية أو إلحاق ضرر بالغ بالهاتف.
- يجب عدم شحن الهاتف بالقرب من مواد قابلة للاشتعال إذ قد يصبح الهاتف ساخنًا وقد يؤدي ذلك إلى اندلاع حريق.
- استخدم قطعة قماش جافة لتنظيف الوحدة من الخارج (لا تستخدم مواد مذيبة كالبنزين أو التينر أو الكحول).
- لا تشحن الهاتف عندما يكون موضوعًا على أثاث ناعم.
- يجب أن يتم شحن الهاتف في منطقة ذات تهوية جيدة.
- لا تعرض هذه الوحدة للدخان أو الغبار الزائد.
- لا تضع الهاتف بالقرب من بطاقات الائتمان أو تذاكر النقل؛ فقد يؤثر ذلك على المعلومات الموجودة على الأشرطة المعدنية.
- لا تضغط على الشاشة بواسطة شيء حاد إذ قد يؤدي ذلك إلى إلحاق الضرر بالهاتف.
- لا تعرض الهاتف للسوائل أو الرطوبة.
- استخدم الملحقات كسماعات الأذن مثلًا بحذر. لا تلمس الهوائي دون وجود سبب يدعوك إلى ذلك.

تشغيل فَعَالٍ للهاتف

الأجهزة الإلكترونية

- قد تتعرض كل الهواتف المحمولة للتشويش، ما قد يؤثر على أدائها.
- لا تستخدم الهاتف المحمول بالقرب من الأجهزة الطبية دون طلب الإذن للقيام بذلك. تجنب وضع الهاتف على أجهزة ضبط النبض، مثلًا، في

إرشادات لاستخدام آمن و فعال

تجنّب إلحاق الضرر بسمك

قد يؤدي تعرّضك إلى أصوات عالية لفترات وقت طويلة إلى إلحاق الضرر بسمك، ونوصي بالتالي، بالألا تقوم بتشغيل الهاتف أو إيقافه عندما يكون قريباً من أذنك. كما نوصي بضبط مستوى صوت معقول للموسيقى والمكالمات.

القطع الزجاجية

بعض قطع الجهاز المحمول مصنوعة من الزجاج. قد ينكسر الزجاج في حال وقع الجهاز على سطح صلب أو تلقى ضربة قوية. في حال انكسر الزجاج، لا تلمسه أو تحاول إزالته. توقف عن استخدام الجهاز المحمول إلى أن يتم استبدال الزجاج من قِبل موفر خدمة معتمد.

مناطق التفجير

لا تستخدم الهاتف في الأماكن حيث تكون عمليات التفجير جارية. التزم بالقيود، واتبع الأنظمة أو القوانين.

مناطق تتسم أجواؤها بالقابلية للانفجار

- لا تستخدم الهاتف في نقطة إعادة التزويد بالوقود.
- لا تستخدم الهاتف بالقرب من الوقود أو المواد الكيميائية.
- لا تقم بنقل أو تخزين غاز أو سائل قابل للاشتعال أو متفجرات في حجرة السيارة نفسها التي تحتوي على الهاتف المحمول وملحقاته.

في الطائرة

- باستطاعة الأجهزة اللاسلكية أن تتسبب بحوث تشويش في الطائرة.
- أوقف تشغيل الهاتف المحمول قبل الصعود على متن أي طائرة.
- لا تستعمله على الأرض من دون الحصول على إذن من قِبل طاقم الطائرة.

الأطفال

ضع الهاتف في مكان آمن بعيداً عن متناول الأطفال. فهو يحتوي على أجزاء صغيرة قد تنفصل عنه وتتسبب بالاختناق.

مكالمات الطوارئ

قد لا تكون مكالمات الطوارئ متوفرة ضمن شبكات الهاتف المحمول كافة. وبالتالي عليك ألا تعتمد فقط على هاتك المحمول لمكالمات الطوارئ. راجع موفر الخدمة المحلي لديك لمزيد من المعلومات.

معلومات حول البطارية والعناية بها

- لست بحاجة إلى إفراغ البطارية بشكل كامل قبل إعادة شحنها. وبخلاف أنظمة البطاريات الأخرى، ليس هناك من تأثير للذاكرة يمكنه تخفيض أداء البطارية.
- استخدم بطاريات وشاحن LG فقط. فشواحن LG مصممة لإطالة فترة عمل البطارية.
- لا تعمل على تفكيك البطارية أو تعريضها لحوادث تماس.
- حافظ على نظافة الموصلات المعدنية الموجودة على البطارية.

- استبدل البطارية عندما يصبح أداؤها غير مقبول. قد يعاد شحن البطارية مئات المرات قبل أن تصبح بحاجة إلى الاستبدال.
- أعد شحن البطارية إذا كنت قد توقفت عن استخدامها لفترة طويلة وذلك لزيادة صلاحية استعمالها إلى الحد الأقصى.
- لا تعرّض شاحن البطارية لنور الشمس المباشر أو لا تستخدمه في أماكن عالية الرطوبة، مثل الحمام.
- لا تترك البطارية في الأماكن الساخنة أو الباردة، فقد يؤدي ذلك إلى التراجع في أداء البطارية.
- هناك خطر انفجار، إذا تم استبدال البطارية ببطارية أخرى من نوع غير صحيح.
- تتخلص من البطاريات المستعملة طبقاً لتعليمات الشركة المصنّعة. يرجى إعادة التصنيع عندما يكون ذلك ممكناً. لا تتخلص منها كمهملات منزلية.
- إذا كنت بحاجة إلى استبدال البطارية، خذها إلى أقرب فرع للصيانة أو وكيل معتمد من LG Electronics للحصول على المساعدة.
- قم دائماً بفصل الشاحن عن المقبس بعد شحن الهاتف بالكامل لتقادي استهلاك الشاحن طاقة غير ضرورية.
- إن عمر البطارية الفعلي يتوقف على تكوين الشبكة وإعدادات المنتج والنقوش المستخدمة والبطارية والأوضاع البيئية.



Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



GM360i User Guide

Congratulations on your purchase of the advanced and compact GM360i phone by LG, designed to operate with the latest digital mobile communication technology.

Contents


Getting to know your phone	6	Changing the common call setting	20
Open view	7	Contacts.....	21
Installing the SIM and battery	8	Searching for a contact.....	21
Charging your phone.....	9	Adding a new contact.....	21
Memory card.....	10	Creating a group	22
Using your touch screen	11	Changing your contact settings.....	22
Touch screen tips	11	Viewing information.....	23
Control the touch screen	11	Messaging.....	24
Your home screen	13	Messaging.....	24
The quick keys.....	14	Sending a message	24
The status bar.....	15	Entering text.....	24
Changing your Status from		T9 mode	24
the status bar.....	16	Handwriting recognition	24
Using the Multi-tasking		Setting up your email.....	25
function.....	16	Retrieving your emails	25
Calls	17	Sending an email using your new	
Making a call.....	17	account.....	25
Making a call from your contacts..	17	Changing your email settings	25
Answering and rejecting a call.....	17	Message folders.....	26
In-call options	18	Changing your text message	
Speed dialling	19	settings.....	26
Making a second call	19	Changing your multimedia message	
Viewing your call logs	19	settings	27
Using call divert.....	20	Changing your other settings	27
Using call barring.....	20		

Contents

Social Network Services (SNS)	28	Sending a photo.....	39
Social network services (SNS).....	28	Using an image.....	39
Facebook.....	28	Printing an image	39
Linkbook.....	29	Moving or copying a file.....	40
Camera	30	Sounds.....	40
Getting to know the viewfinder	30	Using a sound	40
Taking a quick photo	31	Videos	40
After taking a photo.....	31	Watching a video	40
Using the advanced settings	32	Sending a video clip	40
Video camera	33	Games & Apps	40
Getting to know the viewfinder	33	Playing a game	40
Making a quick video	34	Documents	41
After making a video	34	Transferring a file to your phone....	41
Using the advanced settings	35	Others	41
Your photos and videos	36	Music	42
Viewing your photos and videos ...	36	Transferring music onto your phone	
Capturing an image from a video..	36	42
Viewing your photos as a slide show		Playing a song.....	42
.....	36	Creating a playlist	43
Setting a photo as wallpaper.....	37	FM Radio	43
Editing your photos	37	Searching for stations	43
Adding an effect to a photo.....	38	Resetting channels.....	43
Multimedia.....	39	Utilities	44
Pictures	39	Adding an event to your calendar.	44
		Adding an item to your task list	44
		Using date finder	44

Adding a memo.....	45	Using RSS reader	50
Setting your alarm.....	45	Saving a page.....	51
Adding a memo with the drawing Panel	45	Accessing a saved page	51
Screen Capture	46	Viewing your browser history	51
Voice recorder	46	Changing the web browser settings	51
Recording a sound or voice	46	Using your phone as a modem.....	51
Using your calculator.....	46	Access to Google.....	52
Converting a unit.....	47	Settings	53
Adding a city to your World clock..	47	Personalising your profiles	53
Using the stopwatch	47	Changing your screen settings	53
PC Sync.....	48	Changing your phone settings	54
Installing LG PC Suite on your computer	48	Using memory manager	54
Connecting your phone and PC.....	48	Changing your connectivity settings	55
Backing up and restoring the information on your phone	48	Sending and receiving your files using Bluetooth.....	56
Viewing phone files on your PC.....	48	Changing your Bluetooth settings:56	
Synchronising your contacts	49	Pairing with another Bluetooth device.....	57
Synchronising your messages.....	49	Using a Bluetooth headset	57
Using your phone as a Music Sync device	49	Wi-Fi.....	57
The web	50	Software Upgrade	58
Accessing the web	50	Accessories	59
Adding and accessing your bookmarks	50	Technical data.....	60
		Guidelines for safe and efficient use.	61

Getting to know your phone

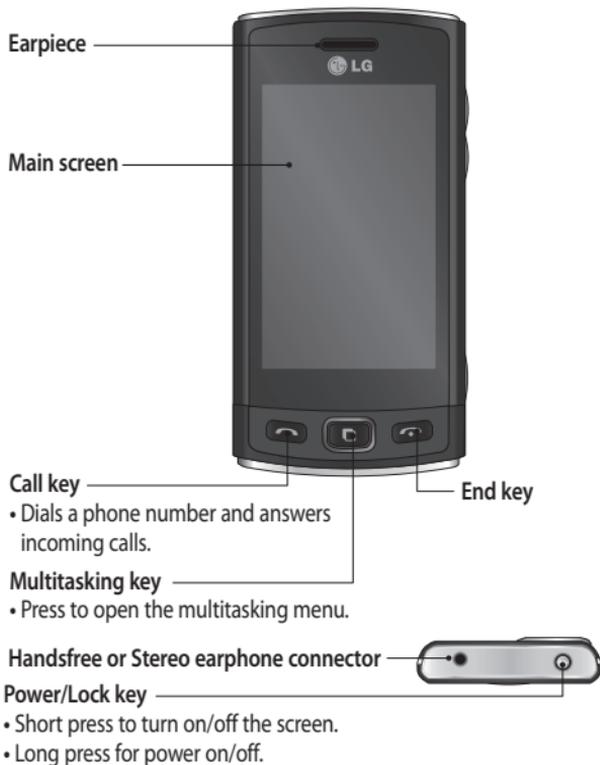

⚠ WARNING: Placing a heavy object on the phone or sitting on it can damage the phone's LCD and touch screen functionality.

Open view



Side keys


- When the screen is at the Home screen: Ring tone and Touch tone volume
- During a call: Earpiece volume.

Camera key

- Go to the camera menu directly by pressing and holding the key.



Charger, cable

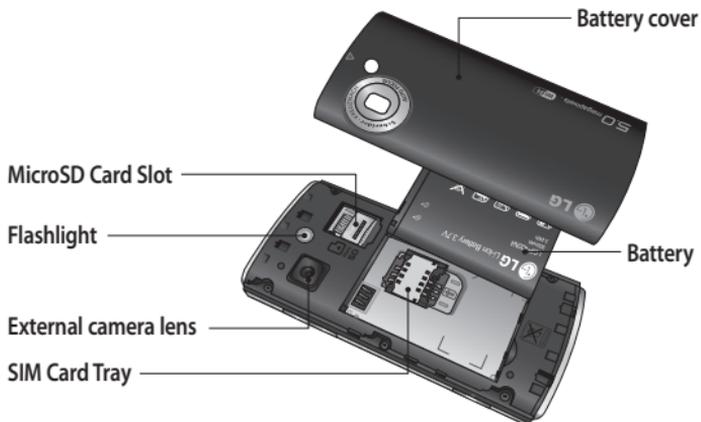

Installing the SIM and battery

1 Remove the battery cover

Slide the battery cover towards the bottom of the phone and away from it.



WARNING: Do not use your fingernail to remove the battery.

WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

2 Install the SIM card

Slide the SIM card into the SIM card holder making sure that the gold contact area on the card is facing downwards. To remove the SIM card, pull it gently outwards.



3 Install the battery

Insert the left side of the battery into the top edge of the battery compartment first. Ensure that the battery contacts align with the phone's terminals. Press the right side of the battery until down it clicks into place.



Charging your phone

Remove the charger socket cover on the side of your GM360i. Connect the Travel Adapter (Charger) and the included USB cable. Connect the USB cable into the phone and plug it into a power socket. Your GM360i must be charged until the "Battery full" message appears on the screen.

NOTE: The battery must be fully charged initially to improve battery lifetime.



Memory card

Installing a memory card

You can expand the memory space on your phone by using a MicroSD memory card.

NOTE: A memory card is an optional accessory.

- 1 Open the microSD card slot cover on the left-hand edge of the phone.



- 2 Slide the microSD card into the slot until it clicks into place. Make sure the gold contact area is facing downwards.

Formatting the memory card

Your memory card may already be formatted. If it isn't, you will need to format it before you can start to use it.

- 1 From the Home screen select , then **Phone settings** in **SETTINGS** tab.
- 2 Touch **Memory info** then choose **External memory**.
- 3 Touch **Format** and then confirm your choice.
- 4 Enter the password, if one is set. Your card will then be formatted and ready to use.

NOTE: If there is existing content on your memory card, the folder structure may be different after formatting since all files will have been deleted.

Using your touch screen

Touch screen tips

- To select an item, touch the centre of the icon.
- Do not press too hard. The touchscreen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- Whenever your GM360i is not in use, it will return to the lock screen.

Control the touch screen

The controls on the GM360i touch screen change dynamically depending on the task you are carrying out.

Opening Applications

To open any application, simply touch its icon.



Scrolling

Drag from side to side to scroll. On some screens, such as the call history list, you can also scroll up or down.



Using your touch screen

Lock screen gesture

Lock screen gesture - set a gesture to the 9 extended shortcut applications. Gesture in Lock screen allows users to unlock the phone and execute the applications directly as they draw a gesture on the screen.

To set up this feature,

- 1 Select  - Screen settings - Lock screen gesture

- 2 Drag & drop the preferred gesture from the bottom of the screen to the applications you want to assign them to.

TIP! Draw ? shape to go to Lock screen gesture menu in the lock screen.


TIP! This function is only available when locked from Idle screen.



Your home screen

You can drag and click what you need right away in all home screen types.

Active

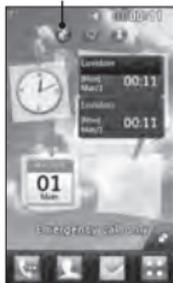

Widget home screen - When you touch  on the bottom right of the screen, the mobile widget panel appears. When you register widget by dragging it, the widget is created in the spot where it was dropped.

Active



Speed dial home screen - When you touch , the speed dial list appears. You can call, send a message, edit or delete the contact directly in this home screen.

Active



Livesquare home screen - On the Livesquare screen, You can easily make a call and send a message to the number allocated to an avatar. To use the call, messaging or contacts function, select an avatar and choose the **Quick key** you want to use.

TIP! The User Interface is based on three types of Homescreen. To swap between the home screens just wipe quickly over the display from left to right, or from right to left.

Your home screen

The quick keys

The quick keys on your home screen provide easy, one-touch access to the functions you use the most.



Touch to bring up the touch dialling pad to make a call.



Touch to open your **Contacts**. To search for the number you want to call, enter the name of the contact at the top of the screen using the touchpad. You can also create new contacts and edit existing ones.



Touch to access the **Messaging** menu. From here you can create a new SMS or MMS, or view your message folder.



Touch to open the full **Top menu** which is divided into four categories.

The status bar

The status bar uses various icons to indicate things like signal strength, new messages and battery life, as well as telling you whether your Bluetooth or GPRS is active.

Below is a table which explains the meaning of the icons you're most likely to see in the status bar.

Icon	Description
	Multitasking
	Network signal strength (number of bars will vary)
	No network signal
	Remaining battery life
	Battery empty
	New text message
	New voice message
	Message inbox is full
	Message sending failed
	Multimedia message sending failed
	An alarm is set

Icon	Description
	Customised Profile in use (The number in the icon will vary)
	Normal profile in use
	Outdoor profile in use
	Silent profile in use
	Headset in use
	Calls are diverted
	EDGE in use
	Roaming
	Flight mode is on
	Bluetooth is active
	BGM play
	BGM pause
	Memory card is enabled for use

Your home screen

Icon	Description
	<p>For incoming Push email Check Push email: Touch Games & Applications in the Entertainment and then touch Applications.</p> <p>*Attention: Depending on the region or SIM operator, user may not be able to use push e-mail and access WAP (or MMS) simultaneously.</p>
	Wi-fi is on

Using the Multi-tasking function

Press the multi-tasking hard key  to open the Multitasking menu. From here you can view all the applications that are running and access them with one touch.

When you have an application running in the background (e.g. a game or the FM radio),  will appear in the status bar.

Changing your Status from the status bar

Touch the centre of the status bar to open the Status Summary. It shows the current Time, Network, SVC ID, Battery, Handset memory, External Memory, Profile, MP3s, Wifi and Bluetooth status. Here you can set the Profile type, play/pause MP3s and activate/deactivate wifi and Bluetooth.

Calls

Making a call

- 1 Touch  to open the keypad.
- 2 Key in the number using the keypad.
- 3 Touch  to initiate the call.
- 4 To end the call, press the End key .

TIP! To enter + for making an international call, press and hold .

TIP! Press the power key to lock the touchscreen to prevent calls being made by mistake.

Making a call from your contacts

- 1 From the home screen touch  to open the **Contacts**.
- 2 Tap the Name field box on the top of the screen and enter the first few letters of the contact you would like to call using the keypad.
- 3 From the filtered list, touch the Call icon next to the contact you want to call. The call will use the default number if there is more than one for that contact.
- 4 Or, you can touch the contact name and select the number to use if there is more than one for that contact to use. You can also touch  to initiate the call to the default number.

Answering and rejecting a call

When your phone rings, touch the End key  to answer the call.

To mute the ringing, slide up the cover. This will unlock the phone if it is locked, then tap . This is useful if you forgot to change your profile to Silent for a meeting. Touch  to reject an incoming call.

Calls

In-call options



Hold - Touch  to put a call on hold.

Mute - Touch  to turn off the microphone so the person you are talking to cannot hear you.

Speaker - Touch  to turn the speaker phone on.

Options - Touch  to bring up a list of further in-call options.

Touch  to search your contacts during a call.

Touch  to add another person to the call.

Touch  to open a numerical keypad for making a second call. This function also allows you to navigate menus with numbered options when you dial automated telephone services, such as call centres.

TIP! To scroll through a list of options or your list of contacts, touch the last item visible and slide your finger up the screen. The list will move up so more items become visible.

Speed dialling

You can assign a frequently-called contact to a speed dial number.

- 1 Select **Contacts** in the **COMMUNICATION** tab and select **Speed dials**.
- 2 Your voicemail is already set to speed dial 1. You cannot change this. Touch any other number to assign it a speed dial contact.
- 3 Your Contacts will open. Select the contact you want to assign to that number by touching their phone number once. To find a contact, tap the Name field box and enter the first letter of the name of the contact required.

Making a second call

- 1 During your initial call, touch  and type the number you want to call.
- 2 Touch  to connect the call.
- 3 Both calls will be displayed on the call screen. Your initial call will be locked and the caller put on hold.
- 4 To change between the calls, touch  or press the number of the held call.
- 5 To end one or both calls press  and select **End Calls** followed by **Active, Held** or **All calls**.

TIP! Touch any single call log entry to view the date, time and duration of the call.

NOTE: You will be charged for each call you make.

Viewing your call logs

Touch **Recent history** in the **COMMUNICATION** tab.

TIP! Touch any single call log entry to view the date, time and duration of the call.

Calls

Using call divert

- 1 Touch **Call settings** in the **SETTINGS** tab.
- 2 Touch **Call divert**.
- 3 Choose whether to divert all voice calls, when the line is busy, when there is no answer or when you cannot be contacted.
- 4 Enter the number you want to divert to.
- 5 Touch **Request** to activate.

NOTE: Charges are incurred for diverting calls. Please contact your network provider for details.

TIP! To turn off all call diverts, select **Deactivate all** from the **Call divert** menu.

Outgoing international calls except home country

All incoming

Incoming when abroad

- 4 Enter the call barring password. Please check with your network operator about this service.
- 5 To turn off all call barrings, select **Deactivate all** from the **Call barring** menu.

TIP! Select **Fixed dial numbers** from the **Call settings** options to turn on and compile a list of numbers which can be called from your phone. You'll need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

Using call barring

- 1 Touch **Call settings** in the **SETTINGS** tab.
- 2 Touch **Call barring**.
- 3 Choose any or all of the Five options:
All outgoing
Outgoing international

Changing the common call setting

- 1 Touch **Call settings** in the **SETTINGS** tab.
- 2 Scroll and touch **Common settings**. From here you can adjust the settings for:

Contacts

Call reject - Slide the switch to ON to highlight the Reject list. You can touch the text box to choose from all calls, specific contacts or groups, or those from unregistered numbers (those not in your contacts) or with no caller ID. Touch **Save** to change the setting.

Send my number - Choose whether your number will be displayed when you call someone.

Auto redial - Slide the switch left for ON or right for OFF.

Answer mode - Choose whether to answer the phone using the send key or any key.

Minute minder - Slide the switch left to ON to hear a tone every minute during a call.

BT answer mode - Select **Hands-free** to be able to answer a call using a Bluetooth headset, or select **Handset** to press a key on the handset to answer a call.

Save new number - Select **Yes** to save a new number.

Searching for a contact

There are two ways to search for a contact:

- 1 Touch **Contacts** in the COMMUNICATION tab.
- 2 Touch **Search**.
- 3 You see a list of contacts. Typing in the first letter of a contact's name in the Name field will jump the menu to that alphabetical area of the list.

TIP! The alphabetical keypad is displayed once you tap the Name field.

Adding a new contact

- 1 Touch **Contacts** in the COMMUNICATION tab and touch **Add contact**.
- 2 Choose whether to save the contact to your **Handset** or **SIM**.
- 3 Enter your first and last name.
- 4 You can enter up to five different numbers per contact. Each entry has a preset type **Mobile**, **Home**, **Office**, **Pager**, **Fax** and **General**.
- 5 Add an email addresses. You can enter up to two different email addresses per contact.

Contacts

- 6 Assign the contact to one or more groups. You can assign up to three groups per contact. Choose between **No group**, **Family**, **Friends**, **Colleagues**, **School** or **VIP**.
- 7 You can also add a **Ringtone**, **Birthday**, **Anniversary**, **Homepage**, **Home address**, **Company name**, **Job title**, **Company address**, **Memo** and **Livecon**.
- 8 Touch **Save** to save the contact.

TIP! Birthday widget can be accessed by selecting the icon . It displays upcoming birthdays chronologically for the month by taking birthdays that are saved in Contacts. This widget also facilitates communication to a contact that has birthday by allowing features such as Call, Messaging and Email.

Creating a group

- 1 Touch **Contacts** in the **COMMUNICATION** tab. And touch **Groups**.
- 2 Touch **Add group** or touch  and select **Add group**.
- 3 Enter a name for your new group. You can also assign a ringtone to the group.

- 4 Touch **Save**.

NOTE: If you delete a group, the contacts which were assigned to that group will not be lost. They will remain in your **Contacts**.

Changing your contact settings

You can adapt your contact settings so that your **Contacts** suits your own preferences.

- 1 Touch **Contacts** in the **COMMUNICATION** tab and touch **Settings**.
- 2 From here, you can adjust the following settings:

Contact list settings - Adjust the **Contacts location**, **Name display** and **Quick command key** settings.

Copy - Copy your contacts from your handset to your SIM or from your SIM to your handset. You can choose one at a time, or all at once.

Move - This works in the same way as Copy, but the contact will only be saved to the location you've moved it to.

Send all contacts via Bluetooth -

Send all of your contacts to another device using Bluetooth. You will be prompted to turn on Bluetooth if you select this option.

Backup contacts - See Backing up information on your phone.

Restore contacts - See restoring information on your phone.

Clear contacts - Delete all your contacts. Choose between **Handset** and **SIM** and touch **Yes** if you are sure you want to wipe your contacts.

TIP! Using Save to Contact on Facebook allows you to see personal information and status of Facebook user including name, contact number, email and photo.

User is not allowed to edit those information and can update the information by clicking refresh on the screen.

Please refer to Linkbook for more about Save to Contact on Facebook.

Viewing information

- 1 Touch **Contacts** in the **COMMUNICATION** tab and touch **Information**.
- 2 From here you can view your **Service dial numbers**, your **Own number**, your **Memory info**. (showing your memory usage) and **My profile**.

TIP! To add your own business card, select **My profile** and enter your details as you would for any contact. Touch **Save** to finish.

Messaging

Messaging

Your GM360i combines SMS and MMS into one intuitive and easy-to-use menu.

Sending a message

- 1 Touch **Messaging** in the **COMMUNICATION** tab. And touch **New message** to begin composing a new message.
- 2 Touch **Insert** to add an image, video, sound, template and so on.
- 3 Touch **Recipient** at the bottom of the screen to enter the recipients. Then enter the number or touch  to select a contact. You can even add multiple contacts.
- 4 Touch **Send** when ready.

 **WARNING:** If an image, video or sound is added to an SMS it will be automatically converted to an MMS and you will be charged accordingly.

Entering text

There are five ways to enter text:

Keypad, Keyboard, Handwriting-Screen, Handwriting-Box, Handwriting-Double Box.

You can choose your input method by tapping  and **Input method**.

Touch  to turn on T9 mode. This icon is only shown when you choose **Keypad** as the input method.

Touch  to choose the writing language.

Touch  to change between numbers, symbols and text input. Use **Shift** key to change between capital or lowercase input.

T9 mode

The T9 mode uses a built-in dictionary to recognise the words you're writing based on the sequence of keys you've touched. It predicts the word you are inputting and suggests alternatives.

Handwriting recognition

In Handwriting mode you simply write on the screen and your GM360i will convert your handwriting into your message. Select **Handwriting-Screen** or **Handwriting-Box** according to your preferred view.

Setting up your email

Touch **E-mail** in the COMMUNICATION tab.

If the email account is not set up, start the email set up wizard and finish it.

You can check and edit settings by selecting . You can also check the additional settings that were filled in automatically when you created the account.

Retrieving your emails

You can automatically or manually check your account for new emails. To check manually:

- 1 Touch **E-mail** in the COMMUNICATION tab.
- 2 Touch the account you want to use.
- 3 Select **Inbox**
- 4 To receive an E-mail, choose either **Retrieve** or **Synchronisation** in Option menu.

Sending an email using your new account

- 1 Touch **New e-mail** and a new email will open.
- 2 Complete the message.
- 3 Touch **Send** and your email will be sent.

Changing your email settings

- 1 Touch **E-mail** in the COMMUNICATION tab.
- 2 Touch  and select **E-mail settings** and then you can adapt the following settings:

E-mail accounts **Preferred e-mail**

Allow reply e-mail - Choose to allow the sending of read confirmation messages.

Request reply e-mail - Choose whether to request read confirmation messages.

Retrieve interval - Choose how often your GM360i checks for new email messages.

Retrieve amount - Choose the number of emails to be retrieved at any one time.

Include message in Fwd. & Reply - Choose to include the original message in your reply.

Include attachment - Choose to include the original attachment in any reply.

Auto retrieval in roaming - Choose whether to retrieve your messages automatically when abroad (roaming).

Messaging

New e-mail notification - Choose whether to be alerted to new emails.

Signature - Switch this feature **ON** and create an email signature.

Priority - Choose the priority level of your email messages.

Maximum sending size - Set the maximum size of sending mail.

E-mail counter - Input the date you want. You can check emails you sent during that period.

Message folders

There are five folders in Messaging menu.

Inbox - All the messages you receive are placed into your inbox.

Drafts - If you do not finish writing a message, you can save what you have done in this folder.

Outbox - This is a temporary storage folder while messages are being sent.

Sent items - All the messages you have sent are placed in this folder.

My folders - Create folders to store your messages.

Changing your text message settings

Touch **Messaging** in the **COMMUNICATION** tab and touch **Settings**. Select **Text message**. You can make changes to:

Text message centre - Enter the details of your message centre.

Delivery report - Slide the switch left to receive confirmation that your messages have been delivered.

Validity period - Choose how long your messages are stored at the message centre.

Message types - Convert your text into **Text, Voice, Fax, X.400** or **E-mail**.

Character encoding - Choose how your characters are encoded. This impacts the size of your messages and therefore data charges.

Send long text as - Choose to send long messages as **Multiple SMS** or as an **MMS**.

Changing your multimedia message settings

Touch **Messaging** in the **COMMUNICATION** tab. Scroll and choose **Settings** and **Multimedia message**. You can make changes to:

Retrieval mode - Choose between **Home network** or **Roaming network**.

If you then choose **Manual** you will receive only notifications of MMS and you can then decide whether to download them in full.

Delivery report - Choose to request and/or allow delivery reports.

Read reply - Choose to request and/or allow read replies.

Priority - Choose the priority level of your multimedia message.

Validity period - Choose how long your messages are stored at the message centre.

Slide duration - Choose how long your slides appear on the screen by default.

Creation mode - Choose to create multimedia messages freely or restrictively.

Delivery time - Choose how long to wait before a message is delivered.

Multi msg centre - Choose or add a multimedia message centre.

Changing your other settings

Touch **Messaging** in the **COMMUNICATION** tab. And touch **Settings**.

Voicemail - Touch  to add a new Voicemail service. Contact your network operator for more information about the service they provide.

Service message - Choose to receive or block service messages. You can also set your message security by creating trusted and untrusted lists of senders in **Service security** option.

Message counter - Choose to set period for counting messages.

Info. service - Choose whether to turn Cell broadcast on/off and select your channels and languages.

Social Network Services (SNS)

Social network services (SNS)

Your GM360i has SNS that lets you enjoy and manage your social network. You can update your own SN place status and view your friends' SN updates.

Touch **Social network** menu and select the site as below: Orkut, Facebook, Twitter, Picasa, Flickr and Myspace.

TIP! Facebook is a native application preloaded onto your phone, and easy to access. Twitter is a java application based on Java technology. Other applications access to the WAP(Wireless Application Protocol) services.

NOTE: SNS feature is a data intensive application. An additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

Facebook

Home: Log in and you will see your friend's updated status. Input your comment about new status or check others. Touch Options to choose Refresh, News Feed filter(Status

updates, Photo), Delete or Settings. You can also write comments by selecting + icon.

Profile: You can select the Wall > Status updates and write the current status. See your info detail and upload the photo by touching Album > Upload Photo. Choose from Go to images or Take a picture, and then input some caption with images.

Friends: You can find many friends in SNS and view their status. Search your friends in facebook by selecting Search tap.

Message: It will show all your SN messages. You can see the Inbox/Sent folder, and write a SN message.

TIP! Using Facebook Feed Widget
You can add the facebook feed widget to your home screen. Drag the facebook feed widget from widget tray and touch **OK**.
If the facebook widget registered on home screen, it will show latest 3 feeds from your SN site. You can also access the facebook application directly by touching up the feed widget.


There are SNS on/off, SNS account login & Delete(logout) in SNS setting. And SNS can be on/off automatically by setting a certain period of time in Auto connection menu.

Linkbook

If the SNS Mode is set to On, you can save the personal information of your Facebook contacts, such as name, phone number, email address, and photo, into Contacts. Use the Save to Contact button on Facebook to save their personal information. You can check the stored information in the Contact view. If the SNS Mode is set to off, SNS information is not displayed in Contacts list.

Camera

Getting to know the viewfinder

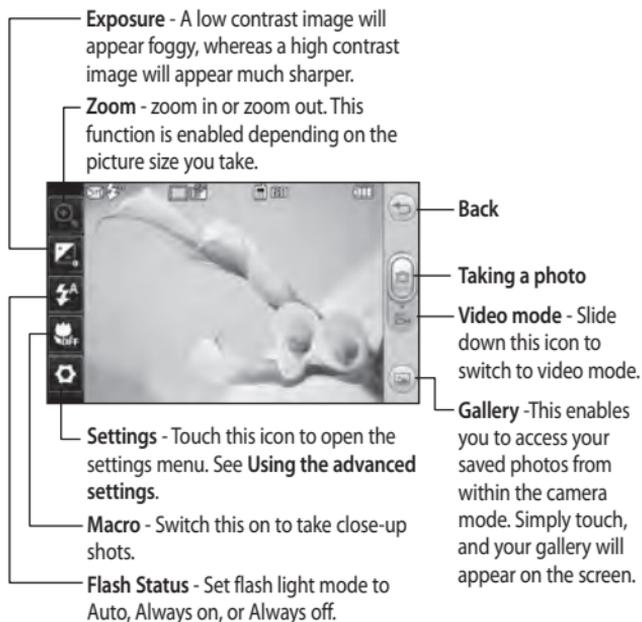

TIP! You can bring up the options by tapping the screen. They automatically turn off after a few seconds.

Taking a quick photo

- 1 Press the  key on the right side of the phone.
- 2 When the camera has focused on your subject, touch the  on the right-centre of the screen to take a photo. You can also press the  key on the side of the phone firmly.

TIP! To switch to the camera mode or video mode, slide up/down the camera or video icon on the centre-right of the viewfinder.

After taking a photo

Your captured photo will appear on the screen. The name of the image runs along the bottom of the screen.

-  Touch to send the photo as a message, email or via Bluetooth.
-  Touch to set a Home screen, contacts, startup or shutdown image.
-  Touch to edit the photo.
-  Touch to edit the name of the selected picture.
-  Touch to delete the photo you have just taken and confirm by touching **Yes**. The “Deleted” message appears.
-  Touch to move to your gallery.



Camera

Using the advanced settings

From the viewfinder, touch  to open all the advanced settings options.

Size - Change the size of the photo to save memory space or take a picture preset to the correct size for a contact.

Select a pixel value from the seven numerical options: **5M** (2560x1920), **3M** (2048x1536), **2M** (1600x1200), **1M** (1280x960), **VGA** (640x480), **WQVGA** (400x240), **QVGA** (320x240).

Shot mode - This enables you to select the two shooting modes.

Colour Effect - Choose a colour tone to apply to the photo you're taking. There are four colour tone options:

Off, **Black & White**, **Negative** or **Sepia**.

White balance - Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent** or **Cloudy**.

Night mode - Useful to use in dark places.

Self-timer - The self-timer allows you to set a delay before the camera takes the picture, after the capture button is pressed. Choose from **3 seconds**, **5 seconds** or **10 seconds**. Great for the

group photo you want to be part of.

Quality - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality the sharper a photo will be, but the file size will increase. This means you'll be able to store fewer photos in your memory.

Focus - Sets the focus of camera.

View mode - Choose between Full screen or Full image. In Full screen, the image may be cropped to fit the screen.

Select storage - Choose whether to save your photos to the Handset memory or to the External memory.

Show captured image - Choose to view the picture with options after taking a photo.

Hide icons - Choose the camera settings icons to be hidden manually or automatically.


Shutter sound - Select one of the three shutter sounds.

Grid screen - Choose from **Off**, **Simple cross** or **Trisection**.

Reset settings - Reset all the camera settings.

Video camera

Getting to know the viewfinder

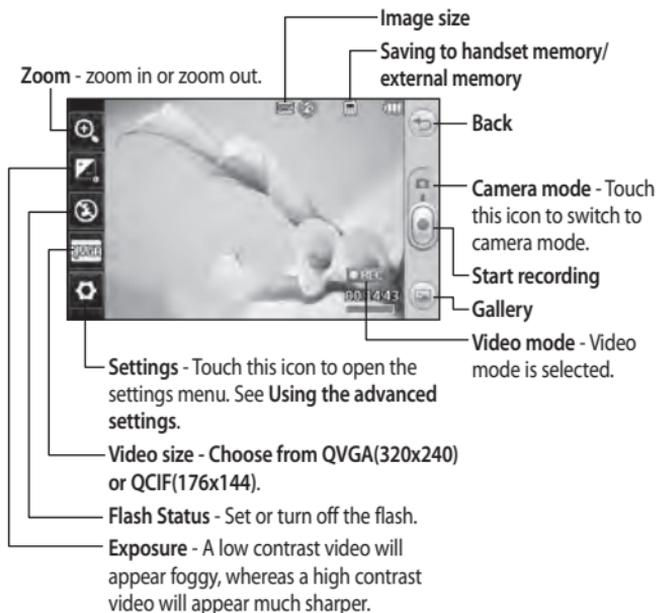

TIP! You can close all shortcut options for a clearer viewfinder screen. Simply touch the centre of the viewfinder once. To recall the options, touch the screen again.

Video camera

Making a quick video

- 1 Press the camera key on the right side of the phone for a few seconds.

TIP! To switch to the camera mode or video mode, slide up/down the camera or video icon on the right centre of the viewfinder.

- 2 Holding the phone horizontally, point the lens towards the subject of the video.
- 3 Press the camera key  on the phone once to start recording. Or touch the red dot .
- 4 **Rec** will appear at the bottom of the viewfinder with a timer at the bottom showing the length of the video.
- 5 To pause the video, touch  and resume by selecting .
- 6 Touch  on screen or press the  a second time to stop recording.

After making a video

A still image representing your captured video will appear on the screen. The name of the video runs along the bottom of the screen together with seven icons down the left and right sides .

-  Touch to play the video.
 -  Touch to send the video as a **Message or Email** or by **Bluetooth**.
 -  Touch to edit the video.
 -  Touch to edit the name of the selected picture.
 -  Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.
- Touch  to shoot another video straight away.
-  Touch to view a gallery of saved videos and images.



Using the advanced settings

From the viewfinder, touch **Settings** to open all the advanced settings options.

Colour Effect - Choose a colour tone to use on your new video. **Off, Black & White, Negative, Sepia.**

White balance - The white balance ensures that any white in your videos is realistic. In order for your camera to correctly adjust the white balance, you may need to determine the light conditions. Choose from **Auto, Incandescent, Sunny, Fluorescent** or **Cloudy.**

Quality - Choose between **Super fine, Fine** and **Normal.** The finer the quality, the sharper a video will be, but the file size will increase. As a result, you will be able to store fewer videos in the phone's memory.

Duration - Set a time limit for your video. Choose whether or not to send the video as an MMS.

TIP! If you choose MMS duration, choosing a lower image quality will enable you to shoot a longer video.

Select storage - Choose whether to save your videos to the Handset memory or to the External memory.

Voice - Choose whether or not to record a video with sound.

Hide icons - Choose the camera settings icons to be hidden manually or automatically.

Reset settings - Reset all the video camera settings.

Your photos and videos

Viewing your photos and videos

- 1 Touch **Gallery** in the ENTERTAINMENT tab. Or Touch  on your camera preview screen. You can check your pictures and videos.
- 2 Your gallery will appear on the screen.
- 3 Touch the video or photo to open it fully.
- 4 To play the video touch . To pause playback touch .

TIP! Flick left or right to view other photos or videos.

Capturing an image from a video

- 1 Select the video you would like to capture an image from.
- 2 Touch  to pause the video on the frame you'd like to convert to an image and touch the upper left side of the screen to open the  menu.
- 3 From the options menu select .
- 4 The image will appear on the screen, with its image name.

- 5 Touch  to return to the video.
- 6 The image will be saved in your **My stuff** folder and appear in the gallery.

 **WARNING:** Some functions will not work properly if the multimedia file has not been recorded on the phone.

Viewing your photos as a slide show

Slideshow mode will show all the photos in your gallery one at a time as a slideshow. Videos can not be viewed as a slideshow.

- 1 Touch  in the **Gallery**, then scroll and select **Slide show**.
- 2 The slideshow will begin.

There are options within slideshows:

Touch  to go back.

 Touch to pause the slideshow on a particular photo.

 Touch again to resume playback.

 Touch to show random.

 Touch to increase or decrease the speed of the slideshow.

Setting a photo as wallpaper

- 1 Touch **Gallery** in the ENTERTAINMENT tab.
- 2 Touch the photo you would like to set as wallpaper.
- 3 Touch the screen to open the menu.
- 4 Touch .
- 5 You can change the size of the picture with .
- 6 When you are happy with the picture touch **Set**.
- 7 Choose from the options what you want to change: **All**, **Widget**, **Speed dial**.

Editing your photos

- 1 Open the photo you'd like to edit and touch  to bring up the options.
- 2 Touch the icons to alter your photo:
 -  Move your finger across the screen to select the area.
 -  Draw something on your photo freehand. Select the line thickness from the four options, then the colour you want to use.
 -  Add writing to the picture.

 Decorate your photo with stamps. Choose from the different stamps and colours and touch your photo where you want to place them.

 Erase whatever you draw. You can also select the eraser size.

 Touch to return to the gallery.

 Save the changes you have made to the photos. Select to save the changes over the **Original file**, or as a **New file**. If you select **New file**, enter a file name.

 Undo the last effect or edit you made to the photo.

 Touch to open the Filter options.

 You can adjust the selected photo.



Your photos and videos

Adding an effect to a photo

- 1 From the editing screen, touch



- 2 Choose to apply any of the options to the photo:

Face beautify - Automatically detect a face in the image and brighten it up.

Tunnel effect - Lomo camera effect.

Colour negative - Colour negative effect.

Black and white - Black and white colour effect.

Sepia - Give a Sepia effect.

Blur - Give a blurred effect.

Sharpen - Move the marker along the bar to sharpen the focus of the photo. Select **OK** icon to apply the changes or choose  to cancel.

Mosaic blur - Touch to apply a blurred mosaic effect to the photo.

Oil painting - Give an Oil painting effect.

Sketch - Apply an effect that makes the picture look like a sketch.

Solarize - Change the effect of exposure to the light.

Emboss - Give an Emboss effect.

Vivid - Give an effect of clearness and brilliance.

Moonlight - Change the light to look like moonlight.

Antique - Give an old-looking effect.

Glow - Give a light beam effect.

Cartoon - Give a cartoon effect.

Water color - Give a watercolour effect.

- 3 To undo an effect simply touch

Undo .

Multimedia

You can store any multimedia files on your phone's memory so that you have easy access to all your pictures, sounds, videos and games. You can also save your files to a memory card. Using a memory card allows you to free space in your phone's memory. You can find these files in the menu **My stuff** in the ENTERTAINMENT tab.

Pictures

Images contains a list of pictures including default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.

Sending a photo

- 1 Touch **My stuff** in the ENTERTAINMENT tab and select **Images**. Select the picture you want.
- 2 Touch **Send** and choose from **Multimedia message**, **Email** and **Bluetooth**.

Using an image

You can choose images to use as wallpapers and the lock screen or even to identify a caller.

- 1 Touch **My stuff** in the ENTERTAINMENT tab and select **Images**. Select the picture you want. And touch .
- 2 Touch **Use as** and choose from:
 - Homescreen image** - Set a wallpaper for the home screen.
 - Lock screen image** - Set a wallpaper for the lock screen.
 - Contacts image** - Allocate an image to a particular person in your contacts list so that their picture shows when they call you.
 - Start up image** - Set an image to appear when you switch the phone on.
 - Shut down image** - Set an image to appear when you switch the phone off.

Printing an image

- 1 Touch **My stuff** in the ENTERTAINMENT tab and select **Images**. Select the picture you want. And touch .
- 2 Touch **Print** then choose between **Bluetooth** and **PictBridge**.

TIP! You can print via bluetooth or by connecting to a PictBridge compatible printer.

Multimedia

Moving or copying a file

You can move or copy a file between the phone memory and the memory card. You might want to do this to either free some space in one of the memory banks or to safeguard your images from being lost.

- 1 Touch **My stuff** in the ENTERTAINMENT tab, select **Images** and touch .
- 2 Select **Move** or **Copy**.
- 3 You can mark/unmark the images by tapping it sequentially. Mark the image that you want to move or copy and touch **Copy/Move**.

Sounds

The **Sounds** contains a list of sounds including the downloaded sounds, default sounds and voice recordings. From here you can manage or send sounds or set them as a ringtone.

Using a sound

- 1 Touch **My stuff** in the ENTERTAINMENT tab and select **Sounds**.
- 2 Select a sound you wants to play.
- 3 Touch  and select Use as.

- 4 Choose from **Ringtone**, **Message tone**, **Start-up** and **Shut down**.

Videos

The **Videos** shows a list of downloaded videos and videos you have recorded on your phone.

Watching a video

- 1 Touch **My stuff** in the ENTERTAINMENT tab and select **Videos**.
- 2 Select a video to play.

Sending a video clip

- 1 Select a video.
- 2 Touch  then **Send** and choose from **Message**, **Email**, **Bluetooth**.

Games & Apps

You can install new games and applications on your phone to keep you amused when you have spare time.

You can also access this using the menu **Games & Apps** in the ENTERTAINMENT tab.

Playing a game

- 1 Touch **Games & Apps** in the ENTERTAINMENT tab.

- 2 Select **Games**, then choose a game to launch.

GM360i also comes with some preloaded applications.

Opera Mini 5 - It is a Java application that can be accessed from the Games&Apps menu in your phone. Some of the salient features of this browser are Multiple Windows, Security, Touch zooming, Book Marks, History, Saved Pages, Speed Dial.

NOTE: To browse using Opera Mini 5, Data Connection is required.

Push e-mail - With a push email application, the client's mailbox is constantly updated with arriving email without user intervention.

NOTE: Make sure that Auto update is on before using Push E-mail.

Documents

From the **Documents** menu in **My stuff**, you can view all your document files. From here, you can view your Excel, PowerPoint, Word, Text and pdf files.

Transferring a file to your phone

Bluetooth is probably the easiest way of transferring a file from your computer to your phone. You can also use the Mass storage or LG PC Suite via your sync cable.

To transfer using Bluetooth:

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in your Corresponding folder.

Others

The **Others** contains a list of the files which are not pictures, sounds, videos, documents, games or applications.

Multimedia

Music

Your LG GM360i has a built-in music player so you can play all your favourite tracks. To access the music player, touch **Music** in the ENTERTAINMENT tab. From here, you can access a number of folders:

Recently played - Plays the songs you have played recently.

NOTE: The copyright of music files can be protected by international treaties and national copyright laws. It may be necessary to obtain permission or a license to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Before downloading or copying the file, please check the national legislation of the applicable country concerning the use of such material.

All tracks - Contains all the songs you have on your phone except the pre-loaded default music.

Artists - Browse through your music collection by artist.

Albums - Browse through your music collection by album.

Genres - Browse through your music collection by genre.

Playlists - Contains all the playlists you have created.

Shuffle tracks - Play your tracks in a random order.

Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or your sync cable.

You can also use LG PC Suite. To transfer using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and can see each other.
- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is ready to be sent you should accept it on your phone by touching **Yes**.
- 4 The file should appear in **Music > All tracks**.

Playing a song

- 1 Touch **Music** in the ENTERTAINMENT tab.
- 2 Select one of the folders and the song you want to play.
- 3 Touch  to pause the song.
- 4 Touch  to skip to the next song.

- 5 Touch  to go back to the previous song.
- 6 Touch  to return to the **Music** menu. You may touch more than once to return to the menu.

Creating a playlist

You can create your own playlists by choosing a selection of songs from the **Playlists** folder.

- 1 Touch **Music** in the ENTERTAINMENT tab.
- 2 Touch **Playlists**, then **Add new playlist**, enter the playlist name and touch **Save**.
- 3 The **All tracks** folder will show all the songs in your phone. Touch all of the songs that you would like to include in your playlist; a tick will show next to the track names.
- 4 Touch **Done**.

FM Radio

Your LG GM360i has an FM radio feature so you can tune into your favourite stations to listen on the move.

You must attach your headphones to listen to the radio.

Searching for stations

You can tune your phone to radio stations by searching for them either manually or automatically. They will then be saved to specific channel numbers, so you don't have to keep re-tuning. You must first attach the headset to the phone as this acts as the aerial.

To auto tune:

- 1 Scroll and touch **FM radio** in the ENTERTAINMENT tab, then .
- 2 Touch **Auto scan**. A confirmation message appears. Select **Yes**, then the stations will be automatically found and allocated to a channel in your phone.

NOTE: You can also manually tune into a station by using  and  displayed in the centre of the screen. If you press and hold  and , the stations will be automatically found.

Resetting channels

- 1 Scroll and touch **FM radio** in the ENTERTAINMENT tab, then .
- 2 Choose **Reset channel** to reset the choose **Reset all channels** to reset all of the channels. Each channel will return to the starting 87.5Mhz frequency.

Utilities

Adding an event to your calendar

- 1 Touch **Organiser** in the UTILITIES tab and select **Calendar**.
- 2 Select the date you would like to add an event to.
- 3 Touch  then **Add event**.
- 4 Touch **Category** then choose from **Appointment**, **Anniversary** or **Birthday**.
- 5 Enter **Subject**.
- 6 Check and enter the date and the time you would like your event to begin. For **Appointment** and **Anniversary** enter the time and date your event finishes in the lower two time and date boxes. Enter the location if it is an **Appointment**.
- 7 Set **Alarm** and **Repeat**.
- 8 Select **Save** and your event will be saved in the calendar. A square cursor will mark the day that any events have been saved to and a bell will ring at the start time of your event, so that you can stay organised.

Adding an item to your task list

- 1 Touch **Organiser** in the UTILITIES tab.
- 2 Select **Tasks** and touch **Add Task**.
- 3 Set the date for the task, add notes and select a priority level: **High**, **Medium** or **Low**.
- 4 Save your task by selecting **Save**.

Using date finder

Date finder is a handy tool to help you calculate what the date will be after a certain amount of days has passed.

- 1 Touch **Organiser** in the UTILITIES tab.
- 2 Select **Date finder**.
- 3 Set the required date in the **From** tab.
- 4 Set the number of days in the **After** tab.
- 5 The **Target date** will be shown below.

Adding a memo

- 1 Touch **Memo** in the UTILITIES tab.
- 2 Touch **Add memo**.
- 3 Type your memo, then touch **Save**.
- 4 Your memo will then appear on the screen in the **Memo** application.

Setting your alarm

- 1 Touch **Alarm** in the UTILITIES tab. **Widget alarm** should appear in the list as default and you can not delete it.
- 2 Touch **Add alarm**.
- 3 Set the time you would like the alarm to sound in the **Time** field box.
- 4 Choose how you would like your alarm to repeat in the **Repeat box**: **Not repeated**, **Daily**, **Mon ~ Fri**, **Mon ~ Sat**, **Sat ~ Sun**, **Except holiday** or **Select day**.
The icons then indicate the weekday you select.

- 5 Select **Alarm type** to select the type of alarm you want.
- 6 Choose **Alarm bell** and select a sound from the folder. To listen to sounds, touch the sound, followed by .
- 7 Add a memo for the alarm in the **Memo** box.
- 8 Finally, you can set the snooze interval to 5, 10, 20, or 30 minutes, 1 hour or off.
- 9 Once you have set your alarm, touch **Save**.

NOTE: You can set up to 5 alarms including **Widget alarm**.

TIP! Slide the switch **ON/OFF** to the alarm to set it.

Adding a memo with the drawing Panel

- 1 Scroll and touch **Drawing Panel** in the UTILITIES tab.
- 2 Touch **Add drawing**.
- 3 Draw your memo on the touch screen LCD followed by .
- 4 Touch **Yes**, then your memo will appear on the screen in the **Drawing Panel** application.

Utilities

Screen Capture



The camera key is located on the right side of the phone. By pressing the Camera key twice, the screen can be captured. Captured image will be saved in Gallery as well as in Image in My Stuff.

This feature captures following screens:

WAP, SNS, Email composer & view screen, Message composer & Received messages etc.

Camera key



By pressing the Camera key twice, the screen can be captured.

Voice recorder

Use your voice recorder to record voice memos or other audio files.

Touch **Voice recorder** in the UTILITIES tab and select , then **Settings** to change Settings:

Duration - Set the recording duration. Choose from **No limit**, **MMS** or **1 min**.

Quality - Select the sound quality. Choose from **Super fine**, **Fine** or **Normal**.

Memory in use - Select where to save the audio files. Choose between **External memory** and **Handset memory**.

Recording a sound or voice

- 1 Touch  to begin recording.
- 2 Touch  to pause recording.
- 3 Touch  to end recording.
- 4 Touch  to listen to your recording.

Using your calculator

- 1 Touch **Tools** in the UTILITIES tab.
- 2 Select **Calculator**.
- 3 Touch the numeric keys using the keypad to input numbers.

- 4 For simple calculations, touch the function you require (+, -, ×, ÷), followed by =.
- 5 For more complex calculations, touch  and choose from **sin**, **cos**, **tan**, **log**, **ln**, **exp**, **sqrt**, **deg** or **rad** etc.

Converting a unit

- 1 Touch **Tools** in the UTILITIES tab.
- 2 Select **Unit converter**.
- 3 Choose whether you would like to convert **Currency**, **Area**, **Length**, **Weight**, **Temperature**, **Volume** or **Velocity**.
- 4 You can then select the unit, and enter the value you would like to convert from, followed by the unit you would like to convert to.
- 5 The corresponding value will appear on the screen.

Adding a city to your World clock

- 1 Touch **Tools** in the UTILITIES tab.
- 2 Select **World clock**.
- 3 Touch the , followed by **New city**.

- 4 Scroll the globe, touch the area you want and choose the city on the map.
- 5 Or touch the  and type the name of the city you require in the search field box.

Using the stopwatch

- 1 Touch **Tools** in the UTILITIES tab.
- 2 Select **Stopwatch**.
- 3 Touch **Start** on the bottom of the screen to begin the timer.
- 4 Touch **Lap** if you want to record a lap time.
- 5 Touch **Stop** to end the timer.
- 6 Touch **Resume** to restart the stopwatch at the time you stopped it at, or touch **Reset** to begin the time again.

PC Sync

You can synchronise your PC with your phone to make sure all your important details and dates match. You can also backup your files to put your mind at ease.

Installing LG PC Suite on your computer

- 1 From the Home screen press  and select **Connectivity** on the SETTINGS tab.
- 2 Select **USB connection mode** and touch **PC Suite**.
- 3 Connect the handset and PC via USB cable and wait for a while. Installation guide message will be displayed.
- 4 Follow the instructions on the screen to complete the LG PC Suite Installer wizard.
- 5 Once installation is complete, the LG PC Suite icon will appear on your desktop.

Connecting your phone and PC

- 1 From the Home screen press  and select **Connectivity** on the SETTINGS tab.
- 2 Select **USB connection mode**.
- 3 Touch **PC Suite**.

- 4 Connect the handset and PC via USB cable and wait for a while. PC Suite runs automatically.

Backing up and restoring the information on your phone

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Backup & Restore** at the Tools.
- 3 Mark the content you would like to backup or restore. Select the location you would like to backup information to, or restore information from. Click **Backup/Restore** icon.
- 4 Your information will be backed up or restored.

Viewing phone files on your PC

- 1 Connect your phone to your PC as outlined previously.
- 2 Click on the **Photos** icon.
- 3 Phone image files will be loaded on the PC. When you click on the Phone Memory, they will be displayed.
- 4 Click on the **Videos** icon.

- 5 Phone video files will be loaded on the PC. When you click on the Phone Memory, they will be displayed.

TIP! Viewing the contents of your phone on your PC helps you to arrange files, organise documents and remove content that you no longer need.

Synchronising your contacts

- 1 Connect the phone to your PC.
- 2 Click on the **Contacts** icon.
- 3 Your PC will now import and display all contacts saved to your handset. (Click on Sync Contacts, then it will load contacts of phone)
- 4 Click on File and select **Export**. You can now select the target and where you want to save your contacts to.

Synchronising your messages

- 1 Connect the phone to your PC.
- 2 Click on the **Messages** icon.
- 3 All your phone messages will be displayed in folders on the screen.
- 4 Click the title of the columns to rearrange messages sorted by From, **Message** and **Date Received**.

Using your phone as a Music Sync device

Your Phone can be used as a Music Sync device for Sync Music Files only. Music Sync can be carried out using Windows Media Player 10/11 and supports both Handset Memory and an External Memory Card.

- 1 Disconnect your phone from your PC.
- 2 From the Home screen select , then select **Connectivity** on the SETTINGS tab.
- 3 Select **USB connection mode**.
- 4 Touch **Music sync**.
- 5 Connect the phone to your PC. Your phone will read: **Connected**.

The web

Accessing the web

- 1 Touch the **Browser** in UTILITIES tab.
- 2 To go straight to the browser home page, select **Home**. Alternately, select **Enter address** and type in the URL, followed by **Connect**.

NOTE: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

Adding and accessing your bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 Touch **Browser** in the UTILITIES tab.
- 2 Select **Bookmarks**. A list of your Bookmarks will appear on the screen.
- 3 To add a new bookmark, touch **Add bookmark**. Enter a name for your bookmark followed by the URL in the corresponding field box.
- 4 Touch **Save**. Your Bookmark will now appear in the list of bookmarks.

- 5 To access the bookmark simply touch the **Connect** icon next to the bookmark or touch the bookmark title and then touch **Connect**. You will be connected to your bookmark.

Using RSS reader

RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content such as blog entries, news headlines or podcasts. An RSS document, which is called a feed, web feed, or channel, contains either a summary of content from an associated web site or the full text. RSS makes it possible for people to keep up with their favourite web sites automatically. It is much easier than checking them manually. The user subscribes to a feed by entering the feed's link into the reader or by clicking an RSS icon in a browser that initiates the subscription process. The reader checks the user's subscribed feeds regularly for new content, downloading any updates that it finds.

Saving a page

- 1 Access your required webpage as described above.
- 2 Touch  and select **Save this page**.
- 3 Enter a name for the webpage so you can easily recognise it.
- 4 Touch **Save**.

Accessing a saved page

Touch **Browser** in the UTILITIES tab. And select **Saved pages**. You can view the saved pages here.

Viewing your browser history

Touch **Browser** in the UTILITIES tab. And select **History**.

Changing the web browser settings

Touch **Browser** in the UTILITIES tab. And select **Settings**.

You can choose to edit **Profiles**, **Appearance settings**, **Cache**, **Cookies** or **Security** settings.

Using your phone as a modem

Your GM360i can double as a modem for your PC, giving you email and internet access even when you can't connect using wires. You can use either the USB cable or Bluetooth.

Using the USB cable:

- 1 Ensure you have the LG PC Suite installed on your PC.
- 2 Connect your GM360i and your PC using the USB cable as outlined previously and launch the LG PC Suite software.
- 3 Click **InternetKit** on your PC. Then click **Add** button and select **Modem**.
- 4 Write the Profile that can connect to the Internet and save the values.
- 5 The profile that you create will appear on your PC screen. Select it and click **Connect**. Your PC will connect through your GM360i.

NOTE: For more information about synchronising using the LG PC Suite.

The web

Using Bluetooth:

- 1 Ensure Bluetooth is switched **On** and **Visible** for both your PC and GM360i.
- 2 Pair your PC and GM360i so that a passcode is required for connection.
- 3 Use the **Connection wizard** on your LG PC Suite to create an active Bluetooth connection.
- 4 Click **Internet Kit** on your PC. Then click **New** button.
- 5 Choose **LG Mobile USB Modem** and select **OK**. It will now appear on screen.
- 6 Write the Profile that can connect to the Internet and save the values.
- 7 The profile that you create will appear on your PC screen. Select it and click **Connect**.
Your PC will connect through your GM360i.

Access to Google

You can use Google service using this menu.

Google service offers user a chance to use **Search**.

Settings

Personalising your profiles

You can quickly change your profile on the Home screen.

You can personalise each profile setting using the settings menu.

- 1 Touch **Profiles** in the **SETTINGS** tab.
- 2 Choose the profile you want to edit.
- 3 You can then change all the sounds and alert options available in the list, including your **Ringtone** and **Volume, Message tone** settings and more.

Changing your screen settings

Touch **Screen settings** in **SETTINGS** tab.

Screen settings

Wallpaper - Choose the theme for your home screen or lock screen.

Widget home template - Choose a home template.

Livesquare - Touch **Livesquare guide** to check its functions.

Handset theme - Choose black or white (Cartoon styled UI).

Top menu - Choose the style of the top menu, **Zigzag**, **Scrolling** or **Screen by screen**.

Lock screen - Choose the way of unlock.

Lock screen gesture - Choose the gesture type in a lock screen.

Dialling - Adjust the number colour.

Font - Adjust the font size. There are four options: **Small**, **Medium**, **Large** and **Very large**.

NOTE: The longer the backlight is on, the more battery power is used. This may result in your needing to charge your phone more often.

Brightness - Adjust the screen brightness.

Greeting message - Choose **ON** or **OFF** and fill in the greeting message in the text field.

Start-up/Shut down - Choose an image for your start-up/shut down screen.

Settings

Changing your phone settings

Enjoy the freedom of adapting how your GM360i works for your own style.

Touch **Phone settings** in the **SETTINGS** tab, then choose from the list below.

Anti Theft Mobile Tracker - When the handset is stolen, handset sends the SMS to the pre-defined numbers configured by real owner.

ATMT SMS will contain information about the stolen phone IMEI, current location (captured as per Cell Broadcast message) & Phone number of the person who is using that handset.

To activate the ATMT feature, you will need to set ATMT 'ON', and configure the ATMT settings with Owner name and Alternate numbers. Default ATMT code is "000000."

Phone settings

Date & Time - Adjust your date and time settings or choose whether to update the time automatically or to use the daylight saving option.

Power save - Choose to switch the factory set power saving settings on/off or Night only.

Languages - Change the language of your GM360i's display.

Auto keylock - Lock the keypad automatically in the Home screen.

Security - Adjust your security settings, including PIN code request, handset lock, Change codes and ATMT.

Memory info - See **Using memory manager** for more information.

Reset settings - Restores all settings to their factory defaults.

Information - View the technical information for your GM360i. And you can upgrade software with **Handset information**.

Using memory manager

Your GM360i has three memories available: the phone, the SIM Card and an external memory card.

You can use memory manager to see how each memory is been used and see how much space is available.

Touch **Phone settings** in the **SETTINGS** tab, then **Memory info**.

Handset common memory - View the memory available on your GM360i for Pictures, Sounds, Videos, MMS, Email, Java applications and others.

Handset reserved memory - View the memory available on your handset for SMS, Contacts, Calendar, Task list, Memo, Alarm, Call history, Bookmarks and Miscellaneous items.

SIM memory - View the memory available on your SIM Card.

External memory - View the memory available on your external memory card (you may need to purchase the memory card separately).

Primary storage setting - Choose the location you prefer items to be saved to between Handset and External memory.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone immediately. To change any settings, use this menu: Touch **Connectivity** in the **SETTINGS** tab.

Network settings

Select network - If you select Automatic, the GM360i automatically searches for the network and registers the handset to the network. This is recommended for best service and quality. If you select Manual, all the currently available networks are shown and you can select one of them for registration.

Preferred lists - You can add a preferred network to connect to. If the network is searching automatically, simply choose one from the network list and if not, add a new network manually.

Internet profiles - This menu shows the Internet profiles. You cannot delete or edit default configurations depending on your country variant.

Access points - Your network operator has already saved this information. You can add new access points using this menu.

Packet data conn. - Choose when your device should be connected to network for packet data.

Settings

Java settings - Allows you to set profiles for connections made by Java programs and to view certificates.

USB connection mode - Choose a Data service from the options and synchronise your GM360i using the LG PC Suite software to copy files from your phone. See **PC Sync** for more information on synchronisation. If you use Music sync with Windows Media Player, select **Music sync** in this menu. **Music sync** is only available for music content.

Sending and receiving your files using Bluetooth

To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Choose **Send**.
Choose **Bluetooth**.
- 3 If you have already paired the **Bluetooth** device, your GM360i will not automatically search for other **Bluetooth** devices. If not, your GM360i will search for other **Bluetooth** enabled devices within range.

- 4 Choose the device you want to send the file to.
- 5 Your file will be sent.

TIP! Check the progress bar to make sure your file is sent.

To receive a file:

- 1 To receive files, your Bluetooth must be both **ON** and **Visible**. See **Changing your Bluetooth settings** below for more information.
- 2 A message will prompt you to accept the file from the sender. Touch **Yes** to receive the file.
- 3 You will see where the file has been saved. For image files, you can choose to **View** the file or **Use as wallpaper**. Files will usually be saved to the appropriate folder in **My stuff**.

Changing your Bluetooth settings:

Touch **Bluetooth** in the **SETTINGS** tab. And select  and choose **Settings**.

Make your changes to:

My device visibility - Choose to be **Visible**, **Hidden** or **Visible for 1 min**.

My device name - Enter a name for your GM360i.

Supported services - Select how to use Bluetooth in association with different services.

Remote SIM Mode - Turn on or off.

My address - Show your Bluetooth address.

Pairing with another Bluetooth device

By pairing your GM360i and another device, you can set up a passcode protected connection.

- 1 Check that your Bluetooth is **ON** and **Visible**. You can change your visibility in the **Settings** menu.
- 2 Touch **Search**.
- 3 Your GM360i will search for devices. When the search is completed, **Retry** will appear on screen.
- 4 Choose the device you want to pair with and enter the passcode, then touch **OK**.
- 5 Your phone will then connect to the other device, on which you will need to enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that came with your headset to put it in pairing mode and pair your devices.
- 3 Touch **Ask** always or **Allow** without **ask** and touch **Yes** to **Connect now**. Your GM360i will automatically switch to **Headset profile**.

Wi-Fi

Wireless Manager allows you to manage Internet connections per Wi-Fi (Wireless LAN) on your device.

It allows the phone to connect to local wireless networks or access the Internet wirelessly.

Wi-Fi is faster and has a greater range than Bluetooth wireless technology and can be used for fast emailing and Internet browsing.

Settings

NOTE: The GM360i supports WEP, WPA and WPA2 encryption, and not EAP, WPS encryption. If your Wi-Fi service provider or network administrator sets encryption for network security, fill in the key in the "security type" field. If encryption is not set, this field will be inactive with the value "None". You can obtain the key from your Wi-Fi service provider or network administrator.

damage your mobile phone. As the manufacturer takes no responsibility for loss of data during the upgrade process, you are advised to note down any important information in advance for safekeeping.

Software Upgrade


LG Mobile Phone Software Upgrade Program

For more information on installing and using this program, please visit <http://update.lgmobile.com>. This feature allows you to upgrade your software to the latest version quickly and conveniently on the Internet without needing to visit our service centre. As the mobile phone software upgrade program requires the user's full attention for the duration of the upgrade process, please be sure to check any instructions and notes that appear at each step before proceeding. Please note that removing the USB data communication cable or batteries during the upgrade may seriously

Accessories

These accessories are supplied with the GM360i.

Charger



Data cable



Battery



Stereo headset



NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

Technical data

General

Product name : GM360i

System : GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900

Ambient Temperatures

Max : +55°C (discharging),
+45°C (charging)

Min : -10°C

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information. This mobile phone model GM360i has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 1.33 W/kg (10 g) and when worn on the body is 1.31 W/kg(10 g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.

Guidelines for safe and efficient use

- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorised service provider.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Guidelines for safe and efficient use

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.

- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

