

عربي
ENGLISH



ENGLISH
عربي



دليل مستخدم

CE0168 ⓘ **LG-T325**

www.lg.com

P/N : MFL66992401 (1.0)

USER GUIDE

LG-T325 **CE0168** ⓘ

P/N : MFL66992401 (1.0)



www.lg.com

Downloaded from <http://www.gsmarc.com>

Bluetooth QD ID B016937

Downloaded from <http://www.gsmarc.com>

LG-T325 User Guide - English

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



Contents

Guidelines for safe and efficient use.....	4	Messaging	17
Installing the SIM card and the handset battery	10	Entering Text.....	18
Installing the SIM Card	10	Handwriting recognition	18
Illustrations.....	10	Setting up your email	18
Phone Components.....	11	Changing your text message settings	18
Using your touch screen.....	12	Changing your multimedia message settings.....	19
Touch screen tips.....	12	Social network services (SNS).....	20
Control the touch screen	12	Facebook (Continued SNS)..	20
Your home screen.....	13	Camera	21
Your menu screen.....	14	Taking a quick photo	21
Calls.....	15	After taking a photo.....	21
Making a Call.....	15	Using the advanced settings.....	21
Making a call from your contacts	15	Video camera.....	23
Changing the common call setting.....	15	Making a quick video	23
Contacts.....	16	After making a video	23
Searching for a contact	16	Using the advanced settings	24
Adding a new contact.....	16	Music	25
Changing your contact settings	17	Transferring music onto your phone	25

Managing files	26	Sending and receiving your files using Bluetooth.....	30
Games and Applications	26	Pairing with another Bluetooth device	31
FM Radio	26		
Searching for stations	26		
Application.....	27	Wi-Fi	31
Adding an event to your calendar	27	Software update	32
Setting your alarm.....	27	Phone Software update	32
Voice recorder	27	Accessories	33
Using your calculator	27	Technical data.....	34
Converting a unit.....	27	Troubleshooting	35
PC Suite	28		
Installing the LG PC Suite on your computer	28		
The web.....	28		
Accessing the web	28		
Access to Google Service ...	29		
Settings	29		
Personalising your profiles ..	29		
Changing your phone settings	29		
Using memory manager	29		
Changing your connectivity settings	30		

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model LG-T325 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all users, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using

standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.

- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionising Radiation Protection (ICNIRP) is 2 W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use close to the ear is 1.23 W/kg (10g) and when worn on the body is 1.21 W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR

limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

Product care and maintenance

 **WARNING:** Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).

Guidelines for safe and efficient use

- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well-ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid, moisture or humidity.
- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use the phone or accessories in places with high humidity such as pools, greenhouses, solariums or tropical environments, it may cause damage to the phone and invalidation of warranty.

Efficient phone operation

Electronic devices

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, i.e. in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.

- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct it with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly important when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn the handset on or off close to your ear. We also recommend that music and call volumes are set to a reasonable level.

NOTE: Excessive sound and pressure from earphones can causing hearing loss.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow the rules and regulations.

Potentially explosive atmospheres

- Do not use the phone at a refuelling point.

Guidelines for safe and efficient use

- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available with all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.

- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is a risk of explosion if the battery is replaced by an incorrect type.
- Dispose off used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

Installing the SIM card and the handset battery

Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

Important!


The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all

SIM cards out of the reach of small children.



Illustrations

Always switch the device off and disconnect the charger before removing the battery.


- 1 Remove the back cover.
- 2 Lift battery away.
- 3 Insert the SIM card.
- 4 Insert the battery pack.
- 5 Attach the back cover.
- 6 Charge the battery.

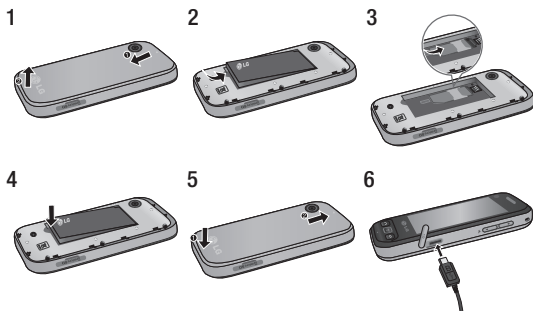

Phone Components

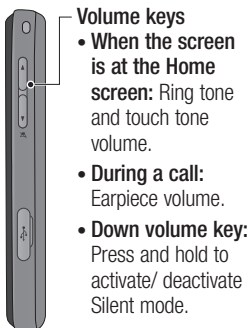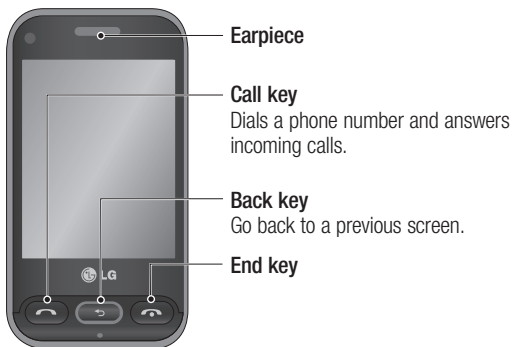

- Power/Lock key**
- Short press to turn on/off the screen.
 - Long press for power on/off.

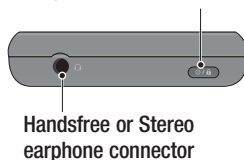

Using your touch screen

Touch screen tips

- To select an item, touch the centre of the icon.
- Do not press too hard. The touchscreen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- Whenever your LG-T325 is not in use, it will return to the lock screen.



Scrolling

Drag from side to side to scroll. On some screens, such as the Logs list, you can also scroll up or down.

Control the touch screen

The controls on the LG-T325 touch screen change dynamically depending on the task you are carrying out.

Opening Applications

To open any application, simply touch its icon.



Your home screen

You can drag and click what you need right away in all home screen types.

Active



Widget home screen - When you touch  on the bottom left of the screen, the mobile widget panel appears. When you register widget by dragging it, the widget is created in the spot.

Active



Speed dial home screen - When you touch , the speed dial list appears. You can call, send a message or edit the contact directly in this home screen.

Your menu screen

You can drag from side to side to scroll what you need right away in all menu screen. To swap between the menu screens just wipe quickly over the display from left to right, or right to left.

Screen 1

You can open Contacts, Messages, Voice call, Logs, Camera, Music, Calendar, Alarms, Memo, Browser, Games and apps and Settings modules from this screen."



Screen 2


You can open E-mail, SNS, Google search, My stuff, Messenger, Gallery, FM radio,

Voice recorder, Tasks, Profiles, Wi-Fi and Bluetooth modules from this screen.



Screen 3

You can open World clock, Calculator, Unit converter, Stopwatch, Date finder, STK (if supported by network) modules from this screen.

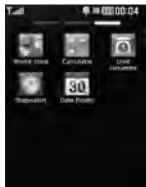

Calls

Making a Call

- 1 Touch  to open the keypad.
- 2 Key in the number using the keypad.
- 3 Touch  to initiate the call.

TIP! To enter + for making an international call, press and hold .

Press the power key to lock the touchscreen to prevent calls being made by mistake.

Making a call from your contacts

- 1 From the home screen touch  to open the **Contacts**.
- 2 Tap the Name field box on the top of the screen and enter the first few letters of the contact you would like to call using the keypad.

- 3 From the filtered list, touch the Call icon next to the contact you want to call. The call will use the default number if there is more than one for that contact.
- 4 Or, you can touch the contact name and select the number to use if there is more than one for that contact to use. You can also touch  to initiate the call to the default number.

Changing the common call setting

- 1 Touch **Call settings** in the **Settings** menu.
- 2 Scroll and touch **Common settings**.
 - **Call reject** - Slide the switch left for ON. You can touch the Reject list to choose All calls, Contacts, Groups, All unknown callers, All unknown numbers.

- **Send my number** - Choose whether to display your number on an outgoing call.
- **Auto-redial** - Slide the switch left for ON or right for OFF.
- **Answer mode**
Press send key: Allows you to only answer an incoming call by pressing the  key.
Press any key: Allows you to answer an incoming call by pressing any key, except the  key.
- **Minute minder** - Slide the switch left to ON to hear a tone every minute during a call.
- **BT answer mode** - Select Handsfree to be able to answer a call using a Bluetooth headset, or select Handset to press a handset key to answer a call.
- **Save new number** - Select ON or OFF to save a new number.

Contacts

Searching for a contact

- 1 Touch **Contacts**.
- 2 You see a list of contacts. Typing in the first letter of a contact's name in the Name field will jump the menu to that alphabetical area of the list.

Adding a new contact

- 1 Touch **Contacts** and touch **Add**.
- 2 Choose whether to save the contact to your **Internal memory** or **SIM**.
- 3 Enter your first and last name.
- 4 You can enter up to five different numbers per contact.
- 5 Add an email addresses. You can enter up to two different email addresses per contact.
- 6 Assign the contact to one or more groups.

- 7 Touch **Save** to save the contact.

Changing your contact settings

You can adapt your contact settings so that your **Contacts** suits your own preferences.

Touch **Options key**  and touch **Settings**.

- **Display name** - Choose whether to display the first or last name of a contact first.
- **Copy** - Copy your contacts from your SIM to Internal memory, or vice versa.
- **Move** - This works in the same way as Copy, but the contact is stored at the new location only. Therefore, once a contact is moved from the SIM to the Internal memory it will be deleted from the SIM memory.

- **Send all contacts via Bluetooth** - Sends all contacts to other handset via Bluetooth.
- **Backup contacts/ Restore contacts** - Save or restore the contacts data to the other storage.
- **Delete all contacts** - Delete all your contacts. Touch Yes if you are sure you want to delete all your contacts from internal memory or SIM.

Messaging

Your LG-T325 combines SMS and MMS into one intuitive and easy-to-use menu.

Sending a message

- 1 Touch **Messages** in menu. And touch **Write message** to begin composing a new message.
- 2 Touch **Insert** to add an image, video, sound, template and so on.

- 3 Touch **To** at the top of the screen to enter the recipients. Then enter the number or touch  to select a contact. You can even add multiple contacts.
- 4 Touch **Send** when ready.



WARNING: If an image, video or sound is added to an SMS it will be automatically converted to an MMS and you will be charged accordingly.

Entering Text

You can choose your input method by tapping  and **Input method**.

Touch  to turn on T9 mode. This icon is only shown when you choose **Keypad** as the input method.

Touch to  change between numbers, symbols and text input.

Use **Shift** key to change between capital or lowercase input.

Handwriting recognition

In Handwriting mode you simply write on the screen and your LG-T325 will convert your handwriting into your message.

Setting up your email

Touch **E-mail** in Application screen.

If the email account is not set up, start the email set up wizard and finish it.

You can check and edit settings also you can check the additional settings that were filled in automatically when you created the account.

Changing your text message settings

Touch **Messages** and touch **Settings**. Select **Text message**.

Text message centre - Enter the details of your message centre.

Delivery report - Slide the switch left to receive confirmation that your messages have been delivered.

Validity period - Choose how long your messages are stored at the message centre.

Message types - Convert your text into **Text, Voice, Fax, X.400** or **E-mail**.

Character encoding - Choose how your characters are encoded. This impacts the size of your messages and therefore data charges.

Send long text as - Choose to send long messages as **Multiple SMS** or as an **MMS**.

Changing your multimedia message settings

Touch **Messages** and, touch **Settings** and **Multimedia message**.

Retrieval mode - Choose between **Home network** or **Roaming network**. If you then choose **Manual** you will receive only notifications of MMS and you can then decide whether to download them in full.

Delivery report - Choose to request and/or allow a delivery report.

Read receipt - Choose to request and/or allow a reply.

Priority - Choose the priority level of your MMS.

Validity period - Choose how long your message is stored at the message centre.

Slide duration - Choose how long your slides appear on the screen.

Unsupported attachment - Choose whether the unsupported attachment is restricted or not.

Delivery time - Choose how long to wait before a message is delivered.

MMS centre - Choose one from the list or add a new message centre.

Social network services (SNS)

Your LG-T325 has SNS that lets you enjoy and manage your social network.

TIP: Facebook, Twitter and Myspace are java applications based on java technology.

NOTE: SNS feature is a data intensive application. An additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

Facebook (Continued SNS)

Home: Log in and you will see your friend's updated status. Input your comment about new status or check others.

Profile: You can select the **Wall > Status updates** and write the current status. See your info detail and upload the photo by touching **Photos > Upload Photo**.

Friends: Search your friends in facebook by selecting Search tap.

Inbox: You can see the Inbox/Sent folder, and write a SN message.

Camera

Taking a quick photo

- 1 Touch **Camera** menu.
- 2 When the camera has focused on your subject, touch the  on the right-center of the screen to take a photo.

TIP: To switch to the camera mode or video mode, slide up/down the camera or video icon on the centre-right of the viewfinder.

After taking a photo

Your captured photo will appear on the screen.

The following options are available.

Touch .

Send - Touch to send the photo as a **Message**, **E-mail** or via **Bluetooth**.

Set as - Touch to set a screen image (Homescreen wallpaper, Lockscreen wallpaper, Contacts image, Incoming call image, Outgoing call image, Startup image and Shut down image).

Rename - Touch to rename the photo.

Edit - Touch to edit the photo.



Touch to delete the image.



Touch to take another photo immediately.



Touch to view a gallery of your saved photos.

Using the advanced settings

From the viewfinder, touch  to open all advanced settings options.

After selecting the option, touch the **OK** button.

Size - Change the size of the photo to save memory.

White balance - Choose between **Auto, Incandescent, Sunny, Fluorescent,** and **Cloudy.**

Colour effect - Choose a color tone for your new photo.

Continuous shot - Position the subject in the viewfinder, then press the capture button as if taking a normal photo. The camera will take shots in quick succession.

Self-timer - The self-timer allows you to set a delay after the shutter is pressed. Select **Off, 3 seconds, 5 seconds,** or **10 seconds.** This is ideal if you want to be included in a photo.

Night mode - Useful to user in dark places.

Image quality - Choose between **Super fine, Fine,** and **Normal.** The finer the quality, the sharper the photo. However, the file size will increase as a result, which means you'll be able to store fewer photos in the memory.

Select storage - Choose whether to save your photos to the Handset memory or to the External memory.

Hide icons - Choose the camera setting icons to hide manually or automatically.

Show captured image - Choose On to check the picture you took right away.

Shutter sound - Select one of the three shutter sounds.

Grid screen - Choose between **Off, Simple cross,** or **Trisection.**

Reset settings - Restore all camera default settings.

Video camera

Making a quick video

To switch to the camera mode or video mode, slide up/down the camera or video icon on the right centre of the viewfinder.

- 1 Holding the phone horizontally, point the lens towards the subject of the video.
- 2 Press the red dot .
- 3 ● **Rec** will appear at the bottom of the viewfinder with a timer at the bottom showing the length of the video.
- 4 To pause the video, touch  and resume by selecting .
- 5 Touch  on screen to stop video recording.

After making a video

A still image representing your captured video will appear on the screen. The name of the video runs along the bottom of the screen together with icons down the left and right sides.



Touch to play the video.

The following options are available.

Touch .

Send - Touch to send the video as a **Message**, **E-mail** or via **Bluetooth**.

Rename - Touch to rename the video.



Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.



Touch to shoot another video immediately. Your current video will be saved.



Touch to view a gallery of saved videos and images.

Using the advanced settings

From the viewfinder, touch 

to open all advanced settings options. You can change the video camera setting by scrolling the wheel. After selecting the option, touch the **OK** button.

Colour Effect - Choose a color tone to use for your new view.

White balance - The white balance ensures any the white areas in your video are realistic. To enable your camera to adjust the white balance correctly, you may need to determine the light conditions. Choose between **Auto**, **Incandescent**, **Sunny**, **Fluorescent**, and **Cloudy**.

Quality - Choose between **Super fine**, **Fine** and **Normal**.

The finer the quality, the sharper a video will be, but the file size will increase. As a result, you will be able to store fewer videos in the phone's memory.

Duration - Set a duration limit for your video. Choose between Normal and MMS to limit the maximum size to send as an MMS message.

Select storage - Choose whether to save your videos to the Handset memory or to the External memory.

Audio recording - Choose Mute to record a video without sound.

Hide icons - Select whether to hide the icons in the camera menu automatically or manually.

Reset settings - Reset all the video camera settings.

Music

To access the music player, touch **Music**. From here, you can access a number of folders:

Recently played - Plays the songs you have played recently.

All tracks - Contains the songs you have on your phone except the pre-loaded default music.

Artists - Browse through your music collection by artist.

Albums - Browse through your music collection by album.

Genres - Browse through your music collection by genre.

Playlists - Contains all the playlists you have created.

Shuffle tracks - Play your tracks in a random order.

Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or the data cable.

To transfer music using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are connected to each other.
- 2 Select the music file on the other device and select send via Bluetooth.
- 3 When the file is sent, you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in **Music > All tracks**.

Managing files

You can store multimedia files in your phone's memory so you have easy access to all your pictures, sounds, videos and games. You can also save your files to a memory card. Using a memory card allows you to free up space in your phone's memory.

By touching **My stuff**, you can open a list of the folders that store all your multimedia files.

Games and Applications

You can download new games and applications to your phone to keep you enjoy.

FM Radio

Your LG-T325 has an FM radio feature so you can tune into your favourite stations to listen to while on the move.

Searching for stations

You can tune your phone to radio stations by searching for them either manually or automatically. They will then be saved to specific channel numbers, so you don't have to keep re-tuning. You must first attach the headset to the phone as this acts as the aerial.

To auto tune:

- 1 Scroll and touch **FM radio**, and touch .
- 2 Touch **Auto scan**. A confirmation message appears. Select **Yes**, then the stations will be automatically found and allocated to a channel in your phone.

NOTE: You can also manually tune into a station by using ◀ and ▶ displayed in the centre of the screen. If you press and hold ◀ and ▶, the stations will be automatically found.

Application

Adding an event to your calendar

- 1 Touch **Calendar**.
- 2 Select the date you would like to add an event to.
- 3 Touch **Add**.

Setting your alarm

- 1 Touch **Alarms**.
- 2 Touch **Add**, then you can set and save your alarm in this menu.

Voice recorder

Use your voice recorder to record voice memos or other audio files.

Using your calculator

- 1 Touch **Calculator**.
- 2 Touch the number keys to enter numbers.

Converting a unit

- 1 Touch **Unit converter**.
- 2 Choose whether you want to convert **Currency, Area, Length, Weight, Temperature, Volume or Velocity**.
- 3 Then select the unit and enter the value you would like to convert from.

PC Suite

You can synchronise your PC with your phone to make sure all your important details and dates match. You can also backup your files to put your mind at ease.

Installing the LG PC Suite on your computer

- 1 Touch **Settings** and select **Connectivity**.
- 2 Select **USB connection mode** and click **PC Suite**.
- 3 Connect handset and PC via USB cable and wait for a while. Installation guide message will be displayed.
- 4 Follow the instructions on the screen to complete the LG PC Suite Installer wizard.
- 5 Once installation is complete, the LG PC Suite icon will appear on your desktop.



WARNING: Do not disconnect your phone during the transfer.

The web

Browser gives you a fast, full-colour world of games, music, news, sport, entertainment and loads more, straight to your mobile phone. Wherever you are and whatever you're into.

Accessing the web

- 1 Touch the **Browser**.
- 2 To go straight to the browser home page, select **Home**. Alternately, select **Enter address** and type in the URL, followed by **Connect**.

NOTE: You will incur extra cost by connecting to these services and downloading content. Check data charges with your network provider.

Access to Google Service

You can launch google services in this application. Touch **Google search** in the Multimedia screen.

Settings

Personalising your profiles

You can quickly change your profile by touching the Multimedia screen.

You can personalise each profile setting using the settings menu.

- 1 Touch **Profiles**.
- 2 Choose the profile you want to edit.
- 3 You can then change all the sounds and alert options available in the list, including your Ringtone and Volume, Message tone settings and more.

Changing your phone settings

Use the freedom of adapting the LG-T325 to your own preferences.

From the home screen, select  then scroll to **Settings**.

Using memory manager

From the home screen select  then scroll to **Device settings**. Select **Memory info**.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone immediately. To change any settings, use this menu: Touch **Connectivity**.

Sending and receiving your files using Bluetooth

To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Choose **Send via**. Choose **Bluetooth**.
- 3 If you have already paired the **Bluetooth** device, your LG-T325 will not automatically search for other **Bluetooth** devices. If not, your LG-T325 will search for other **Bluetooth** enabled devices within range.

- 4 Choose the device you want to send the file to.
- 5 Your file will be sent.

To receive a file:

- 1 To receive files, your Bluetooth must be both **ON** and **Visible**. See **Changing your Bluetooth settings** below for more information.
- 2 A message will prompt you to accept the file from the sender. Touch Yes to receive the file.
- 3 You will see where the file has been saved. For image files, you can choose to **View** the file. Files will usually be saved to the appropriate folder in **My stuff**.

Changing your Bluetooth settings:

Touch **Bluetooth** in the **SETTINGS** tab. And select  and choose **Settings**.

Pairing with another Bluetooth device

By pairing your LG-T325 and another device, you can set up a passcode protected connection.

- 1 Check that your Bluetooth is **ON** and **Visible**. You can change your visibility in the **Settings** menu.
- 2 Touch **Search**.
- 3 Your LG-T325 will search for devices. When the search is completed, Retry will appear on screen.
- 4 Choose the device you want to pair with and enter the passcode, then touch **OK**.
- 5 Your phone will then connect to the other device, on which you will need to enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

Wi-Fi

Wireless Manager allows you to manage Internet connections your phone's Wi-Fi (a wireless LAN). It allows the phone to connect to local wireless networks or access the Internet wirelessly. Wi-Fi is faster and has a greater range than Bluetooth wireless technology. It allows fast emailing and Internet browsing.

NOTE: The LG-T325 supports WEP and WPA/WPA2-PSK security. If your Wi-Fi service provider or network administrator sets encryption for network security, fill in the key in the pop-up window. If encryption is not set, this pop-up window will not be shown. You can obtain the key from your Wi-Fi service provider or network administrator.

Software update

Phone Software update

LG Mobile Phone Software update from internet

For more information on using this function, please visit the <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> → select country and language → Support.

This Feature allows you to update the firmware of your phone to the latest version conveniently from the internet without the need to visit a service centre.

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage you mobile phone.

Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

Charger



Stereo headset



Battery



Data cable and CD



NOTE

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may vary in different regions.

Technical data

Ambient Temperatures

Max.: +55°C (discharging) +45°C (charging)

Min.: -10°C

Declaration of Conformity			LG Electronics
Supplier Details			
Name LG Electronics Inc			
Address LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721			
Product Details			
Product Name GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment			
Model Name LG-T325			
Trade Name LG			
		CE 0168 	
Applicable Standards Details			
R&TTE Directive 1999/5/EC EN 301 489-01 v1.8.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v2.1.1 / EN 301 489-24 v1.4.1 EN 300 328 v1.7.1 EN 60950-1:2001 EN 50360:2001 / EN62209-1:2006 EN 301 511 v9.0.2 EN 301 908-1 v3.2.1 / EN 301 908-2 v3.2.1			
Supplementary information			
The conformity to above standards is verified by the following Notified Body(BAST)			
BAST, Foreyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom Notified Body Identification Number : 0168			
Declaration			
I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives		Name Doo Haeng Lee / Director	Issued Date 06. Sep. 2010
LG Electronics Inc. - EU Representative Veluwezoom 15, 1327 AE Almere, The Netherlands		 Signature of representative	

Troubleshooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy to correct yourself.

Message	Possible Causes	Possible Corrective Measures
USIM error	There is no USIM card in the phone or it is inserted incorrectly.	Make sure that the SIM card is correctly inserted.
No network connection/ Loosing network	Weak Signal outside of GSM network area Operator applied new services	Move towards a window or into an open area. Check the network operator coverage map. See if the SIM card is older than 6~12 month. If so, change your SIM at the office of your network provider.
Codes do not match	To change a security code, you will need to confirm the new code by entering it again. The two codes you have entered do not match.	The default code is [0000]. If you forget the code, contact your service provider.
Any application cannot be set	Not supported by service provider or registration required	Contact your service provider.

Troubleshooting

Message	Possible Causes	Possible Corrective Measures
Calls not available	Dialing error	New network not authorised.
	New SIM card inserted	Check for new restrictions.
	Prepaid charge limit reached	Contact your service provider or reset limit with PIN 2.
Phone cannot be switched on	On/Off key pressed long enough	Press the On/Off key down for at least two seconds.
	Battery is not charged	Keep charger attached for a longer time Clean the contacts.
	Battery contacts are dirty	Take out the battery and insert again.
Charging error	Battery is not charged	Charge battery.
	Outside temperature is too hot or cold	Make sure phone is charging under normal temperatures.
	Contact problem	Check the charger and connection to the phone. Check the battery contacts and clean them if necessary.
	No voltage	Plug into a different socket.
	Charger defective	If the charger does not warm up, replace it.
	Wrong charger	Only use original LG accessories.
	Battery defective	Replace battery.

Message	Possible Causes	Possible Corrective Measures
Touch function doesn't work or is abnormal	Touchpad calibration fault	Perform the touchpad calibration via phone setting menu.
Number not permitted	The Fixed Dial Number function is on.	Check settings.
Impossible to receive/send SMS & Picture	Memory full	Delete some existing messages in the phone.
Files not open	Unsupported file format	Check the file format that can be supported
SD Card not working	FAT 16 file system supported only	Check SD card file system via card reader or format SD card using phone
The screen does not turn on when I receive a call.	Proximity sensor problem	If you use any protection tape or case, check it is covered the area around proximity sensor Make sure that the area around the proximity sensor is clean.
No sound	Vibration or manner mode	Check the setting status of sound menu to make sure you are not in vibrate or silent mode.
Hang up or freeze	Intermittent software problem	Take out the battery and insert battery. Turn on the phone. Try to do software update service via web site

[illegible]

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

[illegible]

[illegible]

[illegible]

[illegible]

[illegible]

استكشاف الأخطاء وإصلاحها

الرسالة	الأسباب المحتملة	حلول ممكنة
خاصية اللمس لا تعمل	خطأ في معايرة شاشة اللمس	قم بإعادة معايرة شاشة اللمس من اعدادات الهاتف
تعذر ارسال الرسائل النصية و الرسائل متعددة الوسائط	الذاكرة ممتلئة	قم بإزالة بعضا من الرسائل من هاتفك
الملف لا يفتح	الملف غير مدعوم	تأكد من نوع الملف فيما اذا كان مدعوما
الذاكره الخارجية لا تعمل	الذاكرة من نوع Fat16 مدعومة فقط	افحص الذاكرة بوساطة قارئ الذاكره
الشاشة لا تضيء عند استقبال المكالمات	المستشعر لا يعمل	اذا كنت تستعمل حافظات للشاشة فتأكد من ازالته حول الحساسات او في حال اتساخها قم بتنظيف المنطقة حولها
لا يوجد صوت	الهاتف في الاهتزاز	التأكد من وضع الجهاز حتى لا يكون في وضع الاهتزاز او الصامت
التوقف عن العمل	مشكلة في النظام	قم بإزالة البطارية و إعادة تركيبها ثم شغل الهاتف . قم بتحديث النظام(البرنامج) عن طريق الانترنت

الرسالة	الأسباب المحتملة	حلول ممكنة
يبتعد تشغيل الهاتف.	لم يتم الضغط على مفتاح التشغيل/إيقاف يكفي. البطارية فارغة. ملاامسات البطارية متسخة.	اضغط على مفتاح التشغيل/إيقاف التشغيل لثانيتين على الأقل. اترك الشاحن متصلاً لفترة أطول. قم بتنظيف ملاامسات البطارية.
خطأ في الشحن	البطارية فارغة بالكامل. درجة الحرارة خارج النطاق. مشكلة في ملاامسات البطارية. لا فولتية للمأخذ الكهربائي. خلل في الشاحن.	اشحن البطارية. تأكد من أن درجة الحرارة المحيطة جيدة وانتظر قليلاً ثم حاول الشحن مرة أخرى. تحقق من وحدة التزويد بالطاقة والاتصال بالهاتف. دقق في ملاامسات البطارية. وقم بتنظيفها إذا اقتضى الأمر. قم بالتوصيل بمقبس آخر أو دقق في الفولتية. إذا لم يسخن الشاحن. فقم باستبداله. استخدم ملحقات LG الأصلية فقط. استبدل البطارية.
الهاتف ينقطع عن الشبكة	الإشارة ضعيفة جداً.	إعادة الاتصال بموفر خدمة آخر تتم تلقائياً.
الرقم غير مسموح به	وظيفة رقم الاتصال المحدد قيد التشغيل.	تحقق من الإعدادات.

استكشاف الأخطاء وإصلاحها

يسرد هذا الفصل بعض المشاكل التي قد تصادفها أثناء استخدام الهاتف. بعض المشاكل تتطلب منك الاتصال بموفر الخدمة، ولكن معظم المشاكل تكون سهلةً ويمكنك تصحيحها بنفسك.

الرسالة	الأسباب المحتملة	حلول ممكنة
خطأ SIM	لا يوجد بطاقة SIM في الهاتف أو ربما قمت بإدخالها بشكل غير صحيح.	تأكد من إدخال بطاقة SIM بالطريقة الصحيحة.
لا يوجد اتصال بالشبكة	الإشارة ضعيفة. خارج شبكة GSM.	توجه قرب النافذة أو إلى منطقة مكشوفة. تحقق من خريطة التغطية التي يزودك بها موفر الخدمة.
الرموز غير متطابقة	لتغيير رمز الحماية. عليك تأكيد الرمز الجديد وذلك بإدخاله مرة أخرى.	اتصل بموفر الخدمة لديك.
يتعذر ضبط الوظيفة	غير معتمد من قبل موفر الخدمة أو التسجيل مطلوب.	اتصل بموفر الخدمة لديك.
المكالمات غير متوفرة	خطأ في الطلب تم إدراج بطاقة SIM جديدة. تم بلوغ الحد الخاص برسوم المكالمات	شبكة جديدة غير مصرّح لها. تحقق من القيود الجديدة. اتصل بموفر الخدمة أو أعد تعيين الحد بواسطة PIN 2.

البيانات التقنية

درجات الحرارة المحيطة

الحد الأقصى: +55 درجة مئوية (تفريغ) +45 درجة مئوية (شحن)

الحد الأدنى: -10 درجات مئوية


Declaration of Conformity  LG Electronics	
Suppliers Details	
Name LG Electronics Inc	
Address LG Twin Tower 20,Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721	
Product Details	
Product Name GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment	
Model Name LG-T325	
Trade Name LG	
CE 0168 	
Applicable Standards Details	
RAITTE Directive 1999/5/EC EN 301 489-01 v1.8.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v2.1.1 / EN 301 489-24 v1.4.1 EN 300 328 v1.7.1 EN 60950-1:2001 EN 50360:2001 / EN62209-1:2006 EN 301 511 v9.0.2 EN 301 908-1 v3.2.1 / EN 301 908-2 v3.2.1	
Supplementary information	
The conformity to above standards is verified by the following Notified Body(BABT) BABT, Foreyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom Notified Body Identification Number : 0168	
Declaration	
I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives	Name Doo Haeng Lee / Director 06, Sep., 2010  Signature of representative
LG Electronics Inc. - EU Representative Veluwezoom 15, 1327 AE Almere, The Netherlands	

الملحقات

هناك ملحقات متنوعة خاصة بهاتفك المحمول. يمكنك تحديد هذه الخيارات وفقاً لمتطلبات اتصالاتك الشخصية.



سماعة
رأس
استيريو



الشاحن



كابل
البيانات
والقرص
المضغوط
للبيانات



البطارية

ملاحظة

- استخدم ملحقات LG الأصلية دائماً.
- يؤدي عدم القيام بذلك إلى إبطال الضمان.
- قد تختلف الملحقات من منطقة إلى أخرى.

تحديث البرنامج

تحديث برنامج الهاتف

تحديث برنامج هاتف إل جي من
الإنترنت

للمزيد من المعلومات حول
استخدام هذه الخاصية، يرجى زيارة
الموقع الإلكتروني :

<http://update.lgmobile.com>

or <http://www.lg.com/>

[common/index.jsp](#) ← اختيار

الدولة و اللغة ← الدعم

هذه الخاصية تتيح للمستخدم
خدمة تحديث برنامج الهاتف إلى
أحدث نسخة دون الحاجة إلى زيارة
مركز الخدمات.

نظراً لحاجة تحديث برنامج الهاتف
إلى اهتمام المستخدم الكامل طوال
فترة عملية التحديث، الرجاء التأكد
من جميع الإرشادات و الملاحظات
التي تظهر في كل خطوة قبل
المتابعة في عملية التحديث.

الرجاء ملاحظة أن إزالة الكيبل (يو
إس بي) أو البطارية أثناء عملية
التحديث قد يسبب أضرار خطيرة
بالهاتف

6 لقد أصبح اتصال Bluetooth
المحمي يرمز مرور آمناً الآن.

Wi-Fi

يسمح لك مدير التشغيل اللاسلكي
الخاص Wi-Fi بإدارة اتصالات إنترنت
لاسلكية محلية. كما يتيح لهاتفك
الاتصال بالشبكات اللاسلكية
المحلية (LAN) أو الوصول للإنترنت
لاسلكياً. حيث أن Wi-Fi أسرع و ذات
نطاق أوسع من تقنية اللاسلكية
Bluetooth. وهو يوفر إرسال البريد
الإلكتروني واستعراض الإنترنت
بشكل سريع.

ملاحظة: يدعم LG-T325 حماية
WEP و WPA/WPA2-PSK. إذا
قام مووفر خدمة Wi-Fi أو مسؤول
الشبكة بتعيين التشفير لحماية
الشبكة، فعليك ملئ المفتاح في
الإطار المنبثق. إذا لم يتم تعيين
التشفير، فلن يظهر الإطار المنبثق
هذا. يمكنك الحصول على المفتاح
من مووفر خدمة Wi-Fi لديك أو من
مسؤول الشبكة.

تغيير إعدادات Bluetooth:

المس Bluetooth في علامة
التبويب الإعدادات. حدد  واختر
إعدادات.

الاقتران بجهاز Bluetooth
آخر

عند إجراء اقتران لهاتف LG-T325
بجهاز آخر، يمكنك إعداد اتصال
محمي يرمز مرور.

1 تأكد من كون Bluetooth في
وضع التشغيل ومن كونه مرئياً.
يمكنك تغيير الرؤية في قائمة
الإعدادات.

2 المس بحث.

3 يبحث الهاتف LG-T325 عن
الأجهزة. عند اكتمال عملية
البحث، يظهر إعادة المحاولة
على الشاشة.

4 اختر الجهاز الذي تريد الاقتران
به وأدخل رمز المرور. ثم المس
موافق.

5 يتصل هاتفك حينئذٍ بالجهاز
الآخر. حيث عليك إدخال رمز
المرور نفسه.

استخدام إدارة الذاكرة

على الشاشة الرئيسية، حدد  ثم قم بالتمرير إلى ضوابط الهاتف، حدد معلومات الذاكرة.

تغيير ضوابط إمكانية الاتصال

تم مسبقاً إعداد ضوابط إمكانية الاتصال بواسطة مشغل الشبكة، بحيث يمكنك أن تتمتع باستخدام هاتفك الجديد فوراً. لتغيير هذه الإعدادات، استخدم هذه القائمة: المس اتصال.

إرسال الملفات واستلامها باستخدام Bluetooth

لإرسال ملف:

1 افتح الملف الذي تريد إرساله، وهو عادةً عبارة عن صورة أو فيديو أو ملف موسيقى.

2 اختر إرسال، اختر Bluetooth.

3 إذا قمت مسبقاً بإقران جهاز Bluetooth، فلن يقوم LG-T325 بالبحث تلقائياً عن أجهزة Bluetooth أخرى، وإلا.

فسيسبح الهاتف LG-T325 عن أجهزة Bluetooth أخرى تم تمكينها ضمن النطاق.

4 اختر الجهاز الذي تريد إرسال الملف إليه.

5 سيتم إرسال ملفك، لاستلام ملف:

1 لاستلام ملفات، يجب أن يكون Bluetooth في وضع التشغيل و مرئياً، انظر تغيير إعدادات Bluetooth أدناه للحصول على مزيد من المعلومات.

2 تظهر رسالة تطالبك بقبول الملف من المرسل، المس نعم لاستلام الملف.

3 ستشاهد الموقع الذي تم حفظ الملف فيه، بالنسبة إلى ملفات الصور، يمكنك اختيار عرض الملف أو استخدام خلفية للشاشة، يتم عادةً حفظ الملفات في الحافظة المناسبة في أشيائي.

الوصول إلى ويب

1 المس المستعرض.

2 للانتقال مباشرة إلى الصفحة الرئيسية للمستعرض. حدد الصفحة الرئيسية. كطريقة بديلة، حدد إدخال العنوان واكتب عنوان URL. يتبعه اتصال.

ملاحظة: سيتم فرض رسم إضافي عليك عند الاتصال بهذه الخدمات وتنزيل المحتوى. اتصل بموفر الشبكة للتحقق من رسوم البيانات.

الوصول إلى خدمة Google

يمكنك بدء تشغيل خدمات Google في هذا التطبيق. المس Google في شاشة الوسائط المتعددة.

الإعدادات

تخصيص الأوضاع

يمكنك أن تقوم بسرعة بتغيير الوضع من خلال لمس شاشة القائمة الرئيسية. يمكنك تخصيص الأوضاع باستخدام قائمة الإعدادات.

1 المس الأوضاع.

2 اختر الوضع الذي تريد تعديله.

3 يمكنك حينئذٍ تغيير كل خيارات الأصوات والتنبيهات المتوفرة في القائمة، بما فيها إعدادات نغمة الرنين ومستوى الصوت ونغمة الرسالة وغيرها.

تغيير إعدادات الهاتف

استمتع بحرية تكيف هاتف LG-T325 وفق تفضيلاتك الخاصة. على الشاشة الرئيسية، حدد  ثم قم بالتمرير إلى إعدادات الهاتف.

تحويل وحدة

- 1 المس محول الوحدة في شاشة التطبيقات.
- 2 اختر ما إذا كنت ترغب في تحويل وحدات العملة أو المساحة أو الطول أو الوزن أو درجة الحرارة أو مستوى الصوت أو السرعة.
- 3 ثم حدد الوحدة وأدخل القيمة التي تريد التحويل منها.

PC Suite

يمكنك مزامنة الكمبيوتر مع الهاتف للتأكد من تطابق كافة التفاصيل والتواريخ الهامة. كما يمكنك إجراء نسخة احتياطية لملفاتك للاطمئنان.

تثبيت برنامج LG PC Suite على الكمبيوتر

- 1 المس إعدادات وحدد إمكانية الاتصال.

- 2 حدد وضع اتصال **USB** وانقر فوق **PC Suite**.

- 3 قم بتوصيل الهاتف بالكمبيوتر مستخدماً كبل USB ثم انتظر قليلاً. تظهر رسالة دليل التثبيت.

- 4 اتبع الإرشادات التي تظهر على الشاشة لإكمال معالج مثبت LG PC Suite.

- 5 عند اكتمال عملية التثبيت، يظهر رمز LG PC Suite على سطح المكتب.

 تحذير: لا تقم بفصل الهاتف أثناء النقل.

ويب

المستعرض يصلك بعالم سريع وكامل من الألعاب، والموسيقى، والأخبار، والرياضة، والترفيه وغيرها. مباشرة من هاتفك المحمول. حيثما كنت ومهما كنت تفعل.

البحث عن محطات

تطبيق

يمكنك ضبط محطات الراديو في هاتفك وذلك بالبحث عنها إما يدوياً أو تلقائياً، وسيتم حينئذٍ حفظها في أرقام قنوات معيّنة بحيث لن تعود بحاجة إلى إعادة ضبطها. عليك أولاً توصيل سماعة الرأس بالهاتف إذ إنها تعمل كهوائي.

للضبط تلقائياً:

1 قم بالتمرير والمس راديو FM والمس .

2 المس بحث تلقائي. تظهر رسالة تأكيد. حدّد نعم. فيتم تلقائياً العثور على المحطات وتخصيصها إلى قناة في هاتفك.

ملاحظة: يمكنك أيضاً ضبط إحدى المحطات يدوياً باستخدام  و  الذي يظهر في وسط الشاشة. إذا ضغطت باستمرار  و  فسيتم العثور على المحطات تلقائياً.

إضافة حدث إلى التقويم

1 المس التقويم.

2 حدّد التاريخ الذي تريد إضافة حدث إليه.

3 المس إضافة.

ضبط المنبه

1 المس منبهات.

2 المس إضافة. ومن ثم يمكنك تعيين المنبه وحفظه في هذه القائمة.

مسجل الصوت

استخدم مسجل الصوت لتسجيل مذكرات صوتية أو ملفات صوت أخرى.

استخدام الحاسبة

1 المس الحاسبة في شاشة القائمة الرئيسية.

2 المس مفاتيح الأرقام لإدخال الأرقام.

إدارة الملفات

يمكنك تخزين ملفات الوسائط المتعددة في ذاكرة الهاتف بحيث يتوفر لديك وصول سهل إلى كل الصور، والأصوات، ومقاطع الفيديو والألعاب. كما يمكنك حفظ ملفاتك في بطاقة الذاكرة. يسمح لك استخدام بطاقة الذاكرة بتحرير مساحة في ذاكرة الهاتف. من خلال لمس أشياء، يمكنك فتح قائمة بالحافظات التي تخزن كل ملفات الوسائط المتعددة.

الألعاب والتطبيقات

يمكنك تنزيل ألعاب وتطبيقات جديدة إلى هاتفك لمساعدتك على التسلية.

راديو FM

تتوفر في هاتف LG-T325 ميزة راديو FM بحيث يمكنك ضبط محطاتك المفضلة للاستماع إليها أثناء التنقل.

الأنواع - الاستعراض عبر مجموعتك الموسيقية بحسب النوع.

قوائم التشغيل - تحتوي على كل قوائم التشغيل التي أنشأتها.

مسارات عشوائية - شغل المسارات بترتيب عشوائي.

نقل الموسيقى إلى الهاتف

الطريقة الأسهل لنقل الموسيقى إلى الهاتف تتم عبر Bluetooth أو كبل البيانات.

لنقل الموسيقى باستخدام Bluetooth:

- 1 تأكد من تشغيل Bluetooth على الجهازين ومن كونهما متصلين ببعضهما.
- 2 حدد ملف الموسيقى على الجهاز الآخر ثم حدد إرسال عبر Bluetooth.
- 3 عندما يرسل الملف إليك، اقبله على الهاتف بلمس نعم.
- 4 يجب أن يظهر الملف في الموسيقى < كل المسارات.

مسجل الصوت - اختر كتم الصوت
لتسجيل فيديو بدون صوت.

إخفاء الرمز - حدد ما إذا كنت تريد
إخفاء الرمز في قائمة الكاميرا ألياً
أو يدوياً.

إعادة تعيين الضوابط - قم بإعادة
تعيين ضوابط كاميرا الفيديو كافةً.

الموسيقى

للوصول إلى مشغل الموسيقى.
المس الموسيقى. من هنا يمكنك
الوصول إلى عدد من الحافظات:
تم تشغيلها مؤخراً - يقوم بتشغيل
الأغاني التي قمت بتشغيلها مؤخراً.
كل المسارات - يحتوي على الأغاني
الموجودة في هاتفك باستثناء
الموسيقى العشوائية التي تم
تنزيلها مسبقاً.

الفنانون - الاستعراض عبر
مجموعتك الموسيقية بحسب
الفنان.

الألبومات - الاستعراض عبر
مجموعتك الموسيقية بحسب
الألبوم.

تأثير الألوان - اختر درجة اللون
لاستخدامها مع العرض الجديد
لديك.

توازن اللون الأبيض - يضمن توازن
اللون الأبيض ظهور أي مناطق
بيضاء في الفيديو بصورة واقعية.
لتمكين الكاميرا من ضبط توازن
اللون الأبيض بطريقة صحيحة. قد
تحتاج إلى تحديد شروط الإضاءة.
اختر بين تلقائي ومتوهج ومشمس
وفلورسنت وغائم.

الجودة - اختر من ضمن دقيق جداً.
ودقيق وعادي. بقدر ما تكون الجودة
دقيقة بقدر ما يكون الفيديو واضح
المعالم ولكن حجم الملف سيكون
أكبر. ونتيجة لذلك، سيكون عدد
ملفات الفيديو التي يمكنك تخزينها
في ذاكرة الهاتف أقل.

المدة - قم بتعيين حد لمدة
الفيديو. اختر بين عادي وMMS
لتحديد الحد الأقصى لحجم
الإرسال كرسالة MMS.

تحديد موقع التخزين - اختر ما إذا
كنت تريد حفظ ملفات الفيديو
في ذاكرة الهاتف أو في الذاكرة
الخارجية.

كاميرا الفيديو

إنشاء فيديو سريع

للتبديل إلى وضع الكاميرا أو وضع الفيديو. ادفع رمز الكاميرا أو الفيديو إلى الأعلى/الأسفل في الوسط الأيسر من محدّد المنظر.

- 1 مع حمل الهاتف أفقيًا، صوّب العدسة باتجاه موضوع الفيديو.
- 2 اضغط على النقطة الحمراء.
- 3 سيظهر تسجيل في أسفل محدّد المنظر مع مؤقت في الأسفل يظهر طول الفيديو.
- 4 لإيقاف الفيديو مؤقتًا، المس  ولاستئناف حدد .
- 5 المس  على الشاشة لإيقاف التسجيل.

بعد إنشاء الفيديو

ستظهر على الشاشة صورة ثابتة تمثل الفيديو الملتقط. ويمتد اسم الصورة عبر أسفل الشاشة مع ثمانية رموز في الجانب الأيسر والأيمن السفليين.

المس لتشغيل الفيديو.

الخيارات التالية متوفرة.

المس .

إرسال - المس لإرسال الفيديو كرسالة، أو بريد إلكتروني أو عبر Bluetooth.

إعادة التسمية - المس لإعادة تسمية الفيديو.

المس لحذف الفيديو الذي قمت بالتقاطه لتوّك وأكد بلمس نعم. يظهر محدّد المنظر من جديد.

المس لالتقاط فيديو آخر على الفور. وسيتم حفظ الفيديو الحالي.

المس لعرض استوديو الصور وملفات الفيديو المحفوظة.

استخدام الإعدادات المتقدمة

في محدّد المنظر، المس  لفتح جميع خيارات الإعدادات المتقدمة. يمكنك تغيير ضبط كاميرا الفيديو عبر تمرير الزر. بعد تحديد الخيار، المس زر موافق.

استخدام الإعدادات المتقدمة

في محدد المنظر، المس  لفتح جميع خيارات الإعدادات المتقدمة.

بعد تحديد الخيار، المس زر موافق.

الحجم - غير حجم الصورة لتوفير مساحة في الذاكرة

توازن اللون الأبيض - اختر من بين تلقائي ومتوهج ومشمس وفلورسنت وغائم.

تأثير الألوان - اختر درجة اللون للصورة الجديدة.

لقطة متواصلة - حدد مكان موضوع الصورة في محدد المنظر، ثم اضغط على زر الالتقاط كما تفعل لالتقاط صورة عادية، تأخذ الكاميرا لقطات بطريقة متتابعة وسريعة.

المؤقت الذاتي - يسمح لك المؤقت الذاتي بتعيين فترة تأخير بعد ضغط زر الغالق. حدد إيقاف التشغيل أو 3 ثوان أو 5 ثوان أو 10 ثوان. هذا خيار مثالي إن أردت تضمين نفسك في الصورة.

وضع الليل - يُعتبر استخدامه مفيداً في الأماكن الداكنة.

جودة الصورة - اختر بين دقيقة جداً ودقيقة وعادية، بقدر ما تكون الجودة دقيقة بقدر ما تكون الصورة واضحة، إلا أن حجم الملف سيزداد مما يعني أنك ستكون قادراً على تخزين صور أقل في الذاكرة.

تحديد موقع التخزين - اختر ما إذا كنت تريد حفظ الصور في ذاكرة الهاتف أو في الذاكرة الخارجية.

إخفاء رموز - اختر إخفاء رموز ضبط الكاميرا يدوياً أو تلقائياً.

عرض الصورة الملتقطة - اختر بدء التشغيل لمراجعة الصورة التي التقطتها فوراً.

صوت الإلتقاط - حدد واحد من أصوات الإلتقاط الثلاثة.

شاشة الشبكة - اختر بين إيقاف التشغيل أو تقاطع بسيط أو ثلاثية الأجزاء.

إعادة تعيين الضوابط - يقوم هذا الخيار باستعادة كل الضوابط الافتراضية للكاميرا.

الخيارات التالية متوفرة.

المس .

إرسال - المس لإرسال الصورة
كرسالة، أو بريد إلكتروني أو عبر
Bluetooth.

ضبط ك - المس لتعيين صورة
شاشة (خلفية الشاشة الرئيسية،
وخلفية شاشة الإقفال، وصورة
جهات اتصال، وصورة المكالمة
الواردة، وصورة المكالمة الصادرة،
وصورة بدء التشغيل، وصورة إيقاف
التشغيل).

إعادة التسمية - المس لإعادة
تسمية الصورة.

تحرير - المس لتعديل الصورة.

المس لحذف الصورة. 

المس لالتقاط صورة أخرى
على الفور. 

المس لعرض استوديو الصور
المحفوظة. 

صندوق الوارد: يمكنك رؤية حافظة
صندوق الوارد/المرسلة، وكتابة
رسالة SN.

الكاميرا

التقاط صورة سريعة

1 المس قائمة الكاميرا.

2 عندما تركز الكاميرا على

موضوع الصورة، المس 
الموجود في وسط الجانب
الأيسر من الشاشة لالتقاط
صورة.

تلميح: للتبديل إلى وضع الكاميرا
أو وضع الفيديو، ادفع رمز الكاميرا
أو الفيديو إلى الأعلى/الأسفل في
الوسط الأيمن من محدّد المنظر.

بعد التقاط الصورة

تظهر الصورة الملتقطة على
الشاشة.

ملاحظة: ميزة SNS هي تطبيق مكثف البيانات، قد تفرض تكاليف إضافية عند الاتصال بخدمات على الإنترنت واستخدامها، للحصول على تفاصيل تتعلق بالرسوم المفروض على البيانات، اتصل بموفر الشبكة.

Facebook (تتمة SNS)

الصفحة الرئيسية: عند تسجيل الدخول سترى حالة أصدقائك المحدثه، أدخل تعليقك على الحالة الجديدة أو تحقق من التعليقات الأخرى.

الوضع: يمكنك تحديد حائط < تحديثات الحالة وكتابة الحالة الحالية. انظر إلى تفاصيل المعلومات وقم بتحميل الصورة من خلال لمس ألبوم < تحميل صورة. الأصدقاء: ابحث عن أصدقائك في facebook من خلال تحديد علامة التبويب بحث.

وقت التسليم - اختيار المدة قبل تسليم الرسالة.

مركز MMS - اختر مركزاً من ضمن القائمة أو أضف مركز رسالة جديد.

خدمات الشبكة الاجتماعية (SNS)

إن هاتف LG-T325 مزود بـ SNS للاستمتاع بالشبكة الاجتماعية وإدارتها.

ملاحظة: إن تطبيق Facebook أصلي محمّل مسبقاً إلى هاتفك وهو سهل الاستخدام. إن تطبيق Twitter هو تطبيق java يستند إلى تقنية java.

تغيير إعدادات رسائل الوسائط المتعددة

المس الرسائل والمس الإعدادات
ورسالة وسائط متعددة.

وضع الاسترداد - اختر بين شبكة محلية أو شبكة جوال. إذا اخترت يدوي فستلقى إعلام برسائل MMS فقط ويمكنك حينئذ أن تقرر ما إذا كنت ترغب في تنزيلها بشكل كامل.

تقرير الاستلام - اختر السماح بتقرير الاستلام و/أو طلبه.
إعلام بالقراءة - اختر السماح بالرد و/أو طلبه.

الأولوية - اختر مستوى أولوية رسالة MMS.

فترة الصلاحية - اختر فترة تخزين رسالتك في مركز الرسائل.

مدة الشريحة - اختر المدة التي تظهر خلالها الشرائح على الشاشة.

مرفق غير معتمد - اختر ما إذا كنت تريد تقييد المرفق غير المعتمد أم لا.

يمكنك التحقق من الإعدادات. كما يمكنك التحقق من الإعدادات الإضافية التي تمت تعبئتها تلقائياً عندما أنشأت الحساب.

تغيير الإعدادات الرسائل النصية

المس الرسائل والمس إعدادات. حدد رسالة نصية.

مركز الرسائل النصية - أدخل تفاصيل مركز الرسائل.

تقرير الاستلام - مرر المفتاح إلى اليسار لاستلام تأكيد بأنه تم تسليم رسالتك.

مدة الصلاحية - اختر فترة تخزين رسالتك في مركز الرسائل.

أنواع الرسائل - حوّل نصك إلى نص أو أصوت أو فاكس أو X.400 أو بريد إلكتروني.

ترميز الحروف - اختر طريقة ترميز الحروف. يؤثر هذا الأمر في حجم الرسائل وبالتالي في التكلفة.

إرسال نص طويل - اختر إرسال الرسائل الطويلة كرسائل SMS متعددة أو كرسالة MMS.

المراسلة

يجمع الهاتف LG-T325 ميزات إرسال رسائل SMS وMMS في قائمة واحدة بديهية وسهلة الاستخدام.

إرسال رسالة

- 1 المس الرسائل في القائمة. والمس كتابة رسالة لبدء إعداد رسالة جديدة.
- 2 المس إدراج لإضافة صورة، أو فيديو، أو صوت، أو نموذج وهكذا.
- 3 المس إلى في أعلى الشاشة لإدخال المستلمين. ثم أدخل الرقم أو المس  لتحديد جهة اتصال. كما يمكنك إضافة جهات اتصال عديدة.
- 4 المس إرسال عندما تصبح جاهزًا.

إدخال النص

يمكنك أن تختار أسلوب الإدخال بواسطة الضغط على  وأسلوب الإدخال.

المس  لتشغيل وضع T9.

يظهر هذا الرمز فقط عند اختيار لوحة المفاتيح كأسلوب الإدخال.

المس  للتغيير بين الأرقام

والرموز وإدخال النص.

استخدم مفتاح **Shift** للتغيير

بين إدخال الأحرف الكبيرة أو الأحرف الصغيرة. في حالة الكتابة باللغة الإنجليزية.

التعرّف على الكتابة اليدوية

في وضع الكتابة اليدوية ما عليك إلا أن تكتب على الشاشة وسيقوم LG-T325 بتحويل كتابتك اليدوية إلى رسالتك.

إعداد البريد الإلكتروني

المس البريد الإلكتروني في القائمة الرئيسية.

إذا لم يكن حساب البريد الإلكتروني قد تم تعيينه، فأبدأ معالج إعداد البريد الإلكتروني وقم بإنهائه.

 تحذير: إذا تمت إضافة صورة، أو فيديو أو صوت إلى رسالة SMS فسيتم تحويلها تلقائياً إلى MMS وسيُفرض رسم عليك وفقاً لذلك.

- نسخ - انسخ الأسماء من بطاقة SIM إلى الهاتف، أو من الهاتف إلى بطاقة SIM. يمكنك القيام بذلك لكل إسم على حدة، أو لكل الأسماء دفعة واحدة.

- نقل - يعمل هذا الأمر بالطريقة نفسها التي يعمل فيها النسخ. غير أنه يتم تخزين اسم في الموقع الجديد فقط، وبالتالي، ما أن يتم نقل الإسم من SIM إلى الذاكرة الداخلية، فسيتم حذفها من ذاكرة SIM.

- إرسال كل الأسماء عبر **Bluetooth** - يرسل هذا الأمر كل الأسماء إلى هاتف آخر عبر Bluetooth.

- إجراء نسخ احتياطي للأسماء / استعادة الأسماء - حفظ بيانات الأسماء أو استعادتها إلى موقع التخزين الآخر.

- حذف كل الأسماء - حذف كل الأسماء المتوفرة لديك. المس نعم إذا كنت تريد بالتأكيد حذف كل الأسماء لديك.

4 يمكنك أن تدخل حتى خمسة أرقام مختلفة لجهة اتصال واحدة.

5 إضافة عناوين بريد إلكتروني. يمكنك أن تدخل حتى عنواني بريد إلكتروني مختلفين لجهة اتصال واحدة.

6 قم بتعيين جهة الاتصال إلى مجموعة أو أكثر.

7 المس حفظ لحفظ جهة الاتصال.

تغيير إعدادات الأسماء

يمكنك تكييف إعدادات الإسم بحيث تتناسب جهات الاتصال مع تفضيلاتك الخاصة.

المس المفتاح خيارات  والمس إعدادات.

- اسم العرض - اختر ما إذا كنت تريد عرض اسم جهة الاتصال الأول أو الأخير أولاً.

- حفظ رقم جديد - حدد بدء التشغيل أو إيقاف التشغيل لحفظ رقم جديد.

الأسماء

البحث عن اسم

- 1 المس الأسماء.
- 2 المس بحث.
- 3 تظهر قائمة بالأسماء. عندما تكتب الحرف الأول من اسم جهة الاتصال في حقل الاسم، تنتقل القائمة إلى منطقة الجهات التي تبدأ بهذا الحرف في القائمة.

إضافة اسم جديد

- 1 المس الأسماء والمس إضافة.
- 2 اختر ما إذا كنت تريد حفظ جهة الاتصال في الذاكرة الداخلية أو SIM.
- 3 أدخل الاسم الأول والأخير.

- إرسال رقمي - يسمح لك هذا الخيار تحديد عرض رقمك في المكالمة الصادرة.

- معاودة الاتصال التلقائي - مرر المفتاح إلى اليسار لبدء التشغيل أو إلى اليمين لإيقاف التشغيل.

- وضع الرد

اضغط على مفتاح الإرسال: يسمح لك بالرد على مكالمة واردة عبر الضغط على مفتاح فقط.

اضغط على أي مفتاح: يسمح لك بالرد على مكالمة واردة عبر الضغط على أي مفتاح. باستثناء مفتاح.

- منبه الدقائق - مرر المفتاح إلى اليسار لبدء التشغيل لسماع نغمة كل دقيقة خلال فترة المكالمة.

- وضع الرد BT - حدد تحرير اليدين لتمكين من الرد على مكالمة باستخدام سماعة رأس Bluetooth. أو حدد هاتف للضغط على مفتاح على الهاتف للرد على مكالمة.

المكالمات

إجراء مكالمة

1  **المس** لفتح لوحة المفاتيح.

2 أدخل الرقم باستخدام لوحة المفاتيح.

3  **المس** لبدء المكالمة.

تلميح! لإدخال + لإجراء مكالمة دولية، اضغط باستمرار على .

3 في القائمة التي تمت تصفيتها.

المس رمز المكالمة إلى جانب جهة الاتصال التي تريد الاتصال بها. سيتم الاتصال بالرقم الافتراضي إذا توفر لديك أكثر من رقم لجهة الاتصال هذه.

4 أو يمكنك لمس اسم جهة الاتصال وتحديد الرقم الذي تريد استخدامه إذا توفر لديك أكثر من رقم لجهة الاتصال هذه. يمكنك أيضاً لمس  لبدء الاتصال بالرقم الافتراضي.

تغيير ضبط المكالمات العام

1 **المس إعدادات المكالمات** في قائمة الإعدادات.

2 **قم بالتمرير والمس الإعدادات العامة.**

- **رفض المكالمات - مرر المفتاح إلى اليسار** لبدء التشغيل. يمكنك لمس قائمة الرفض لاختيار كل المكالمات أو الأسماء معينة أو مجموعات أو مكالمات من أرقام غير مسجلة (أي تلك الأرقام غير الموجودة في الأسماء).

اضغط على مفتاح التشغيل لإقفال شاشة اللمس وذلك لمنع إجراء مكالمات عن طريق الخطأ.

إجراء مكالمة من الأسماء

1 **على الشاشة الرئيسية، المس**  لفتح الأسماء.

2 **اضغط** خانة حقل الاسم في أعلى الشاشة وأدخل الأحرف القليلة الأولى من الاسم التي ترغب في الاتصال به باستخدام لوحة المفاتيح.

شاشة القائمة

يمكنك السحب من جانب إلى جانب لتمرير كل ما تحتاجه فوراً في شاشة القائمة كلها. للتبديل بين شاشات القائمة، قم بالمسح بسرعة فوق الشاشة من اليسار إلى اليمين أو من اليمين إلى اليسار.

1 شاشة المكالمات- أرسل رسالة أو قم بإجراء مكالمة في هذه القائمة



2 شاشة الوسائط المتعددة- استخدم قائمة Google أو أرسل بريدًا إلكترونيًا.



3 شاشة التطبيقات- استخدم التطبيقات في هذه القائمة.



الشاشة الرئيسية الخاصة بك

يمكنك أن تقوم بسحب وإفلات ما تحتاج إليه فورًا في كل أنواع الشاشات الرئيسية.

نشط

عنصر واجهة استخدام الشاشة الرئيسية -
عند لمس  في الجانب الأيسر في أسفل
الشاشة، تظهر لوحة عنصر واجهة الاستخدام
النقال. عند تسجيل عنصر واجهة الاستخدام
بسحبه، يتم إنشاء العنصر في النقطة حيث
تم إسقاطه.



نشط

الشاشة الرئيسية للاتصال السريع - عند
لمس ، تظهر قائمة الاتصال السريع.
يمكنك الاتصال أو إرسال رسالة أو تعديل
جهة اتصال مباشرة في الشاشة الرئيسية.



استخدام شاشة اللمس

تلميحات شاشة اللمس

- لتحديد عنصر اللمس وسط الرمز.
- لا حاجة إلى الضغط بقوة.
- شاشة اللمس حساسة بشكل كافٍ يتيح لها التعرف على لمسة خفيفة ولكن ثابتة.
- استخدم رأس إصبعك لللمس
- الخيار المطلوب. احترس من عدم لمس أي مفاتيح أخرى.

- عندما لا يكون الهاتف LG-T325 قيد الاستخدام، يعود إلى شاشة الإقفال.

التحكم بشاشة اللمس

تتغير مفاتيح التحكم في شاشة لمس الهاتف LG-T325 بسرعة، وهذا يتوقف على المهمة التي تقوم بها.

فتح التطبيقات

افتح أي تطبيق. اللمس الرمز.



التمرير

قم بالسحب من جهة إلى جهة للتمرير. على بعض الشاشات، كقائمة سجلات المكالمات، يمكنك أيضاً التمرير لأعلى أو لأسفل.



مكونات الهاتف



- مفتاح الطاقة/الإيقاف
- اضغط ضغطة قصيرة لتشغيل/إيقاف تشغيل الشاشة.
 - اضغط طويلاً للتشغيل/إيقاف التشغيل.



موصل سماعة أذن استيريو أو
تحرير اليدين

- مفاتيح مستوى الصوت
- عندما تكون الشاشة في وضع الشاشة الرئيسية: مستوى صوت نغمة الرنين ونغمة اللمس.
 - أثناء مكالمة: مستوى صوت سماعة الأذن.
 - مفتاح خفض مستوى الصوت: اضغط باستمرار لتنشيط/إلغاء تنشيط وضع الصامت.



تثبيت بطاقة SIM وبطارية الهاتف

تثبيت بطاقة SIM

عندما تشترك بشبكة الهاتف الخليوي، يتم تزويدك ببطاقة SIM مصحوبة بتفاصيل حول اشتراكك، مثل رمز PIN، وأي خدمات اختيارية متوفرة وغير ذلك.

هام!

يمكن إلحاق ضرر ببطاقة SIM وملاسماتها بسهولة عن طريق الخدش أو الثني، لذا كن حذراً عند التعامل معها وعند إدراجها أو إخراجها. يجب إبقاء كل بطاقات SIM بعيداً عن متناول الأطفال.

الأشكال التوضيحية

قم دائماً بإيقاف تشغيل الجهاز وبفصل الشاحن قبل إخراج البطارية.

1 انزع الغطاء الخلفي.


2 أخرج البطارية.

3 قم بإدراج بطاقة SIM.

4 قم بإدراج حزمة البطارية.

5 أرفق الغطاء الخلفي.

6 اشحن البطارية.

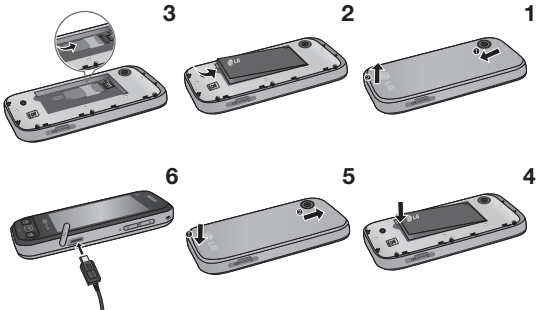

- لا تعمل على تفكيك البطارية أو تعريضها لحدوث تماس.
- حافظ على نظافة الموصلات المعدنية الموجودة على البطارية.
- استبدل البطارية عندما يصبح أداؤها غير مقبول. قد يعاد شحن البطارية مئات المرات قبل أن تصبح بحاجة إلى الاستبدال.
- أعد شحن البطارية إذا كنت قد توقفت عن استخدامها لفترة طويلة وذلك لزيادة صلاحية استعمالها إلى الحد الأقصى.
- لا تعرّض شاحن البطارية لنور الشمس المباشر أو لا تستخدمه في أماكن عالية الرطوبة، مثل الحمام.
- لا تترك البطارية في الأماكن الساخنة أو الباردة. فقد يؤدي ذلك إلى التراجع في أداء البطارية.
- هناك خطر انفجار إذا تم استبدال البطارية ببطارية أخرى من نوع غير صحيح.
- تخلّص من البطاريات المستعملة طبقاً لتعليمات الشركة المصنّعة. يرجى إعادة التصنيع عندما يكون ذلك ممكناً. لا تخلّص منها كمهملات منزلية.
- إذا كنت بحاجة إلى استبدال البطارية، خذها إلى أقرب فرع للصيانة أو وكيل معتمد من LG Electronics للحصول على المساعدة.
- قم دائماً بفصل الشاحن عن المقبس بعد شحن الهاتف بالكامل لتفادي استهلاك الشاحن طاقة غير ضرورية.
- إن عمر البطارية الفعلي يتوقف على تكوين الشبكة وضوابط المنتج والنقوش المستخدمة والبطارية والأوضاع البيئية.

إرشادات لاستخدام آمن وفعال

الأطفال

ضع الهاتف في مكان آمن بعيداً عن متناول الأطفال. فهو يحتوي على أجزاء صغيرة قد تنفصل عنه وتسبب بالاختناق.

مكالمات الطوارئ

قد لا تكون مكالمات الطوارئ متوفرة ضمن شبكات الهاتف المحمول كافة. وبالتالي عليك ألا تعتمد فقط على هاتفك المحمول لمكالمات الطوارئ. راجع موفر الخدمة المحلي لديك لمزيد من المعلومات.

معلومات حول البطارية والعناية بها

- لست بحاجة إلى إفراغ البطارية بشكل كامل قبل إعادة شحنها. وبخلاف أنظمة البطاريات الأخرى ليس هناك من تأثير للذاكرة يمكنه تخفيض أداء البطارية.
- استخدم بطاريات وشواحن LG فقط. فشواحن LG مصممة لإطالة فترة عمل البطارية.

مناطق التفجير

لا تستخدم الهاتف في الأماكن حيث تكون عمليات التفجير جارية. التزم بالقيود. واتبع القوانين والأنظمة.

مناطق تتسم أجواؤها بالقابلية للانفجار

- لا تستخدم الهاتف في نقطة إعادة التزويد بالوقود.
- لا تستخدم الهاتف بالقرب من الوقود أو المواد الكيميائية.
- لا تقم بنقل أو تخزين غاز أو سائل قابل للاشتعال أو متفجرات في حجرة السيارة نفسها التي تحتوي على الهاتف المحمول وملحقاته.

في الطائرة

- باستطاعة الأجهزة اللاسلكية أن تتسبب بحدوث تشويش في الطائرة.
- أوقف تشغيل الهاتف المحمول قبل الصعود على متن أي طائرة.
 - لا تستعمله على الأرض من دون الحصول على إذن من قبل طاقم الطائرة.

- عندما تكون المركبة مزودة بكيس هوائي، لا تعوق وظيفته بتجهيزات لاسلكية مثبتة أو محمولة، فقد يبطل ذلك عمل الكيس الهوائي أو قد يتسبب ذلك بإصابات خطيرة بسبب أداء غير صحيح.

- إذا كنت تستمع إلى الموسيقى أثناء تنقلك، فتأكد من كون مستوى الصوت معقولاً بحيث تكون مدركاً لما يحيط بك، هذا الأمر يعتبر ملحاً خصوصاً بالقرب من الطرقات.

تجنّب إلحاق الضرر بسمّعك

- قد يؤدي تعرّضك إلى أصوات عالية لفترات وقت طويلة إلى إلحاق الضرر بسمّعك، ونوصي بالتالي بالآتي:
• بتشغيل الهاتف أو إيقافه عندما يكون قريباً من أذنك، كما نوصي بضبط مستوى صوت معقول للموسيقى والمكالمات.

ملاحظة : قد يؤدي الصوت والضغط المرتفعان والمتوتّبان من سماعات الرأس إلى فقدان السمع.

- قد تؤثر بعض الهواتف على الأدوات المساعدة للسمع
- قد يؤثر الحد الأدنى من التشويش على أجهزة التلفزيون والراديو والكمبيوتر الشخصي.

السلامة على الطرقات

- تحقق من القوانين والأنظمة المتعلقة باستخدام الهواتف المحمولة في المناطق أثناء القيادة.
- لا تستخدم هاتفاً محمولاً باليد أثناء القيادة.
- عليك دوماً تركيز كامل الانتباه على القيادة.
- استخدم مجموعة أدوات تحرير اليدين، إذا كانت متوفرة.
- توقّف عند جانب الطريق قبل إجراء مكالمة أو الإجابة على المكالمة إذا كانت ظروف القيادة تستدعي ذلك.
- قد تؤثر طاقة RF على بعض الأنظمة الإلكترونية في المركبة مثل الاستيريو ومعدات السلامة في السيارة.

إرشادات لاستخدام آمن وفعال

- لا تمسك الهاتف بيدتين رطبتين فيما يكون شحنه جار. فقد يتسبب هذا الأمر بحدوث صدمة كهربائية أو إلحاق ضرر بالغ بالهاتف.
 - يجب عدم شحن الهاتف بالقرب من مواد قابلة للاشتعال إذ قد يصبح الهاتف ساخناً وقد يؤدي ذلك إلى اندلاع حريق.
 - استخدم قطعة قماش جافة لتنظيف الوحدة من الخارج (لا تستخدم مواد مذيبة كالبنزين أو التينر أو الكحول).
 - لا تشحن الهاتف عندما يكون موضوعاً على أثاث ناعم.
 - يجب أن يتم شحن الهاتف في منطقة ذات تهوية جيدة.
 - لا تعرّض هذه الوحدة للدخان أو الغبار الزائد.
 - لا تضع الهاتف بالقرب من بطاقات الائتمان أو تذاكر النقل؛ فقد يؤثر ذلك على المعلومات الموجودة على الأشرطة المعدنية.
 - لا تضغط على الشاشة بواسطة شيء حاد إذ قد يؤدي ذلك إلى إلحاق الضرر بالهاتف.
 - لا تعرّض الهاتف للسوائل أو الرطوبة.
 - استخدم الملحقات مثل سماعات الأذن بحذر. لا تلمس الهوائي دون وجود سبب يدعوك إلى ذلك.
 - لا تستعمل الهاتف أو ملحقاته في الأماكن ذات الرطوبة العالية مثل برك السباحة و الدفيئة و الحمامات الشمسية و المناطق ذات البيئة الإستوائية، ان ذلك قد يسبب تلف الهاتف أو ابطال الضمان.
- ### تشغيل فعال للهاتف
- #### الأجهزة الإلكترونية
- لا تستخدم الهاتف المحمول بالقرب من الأجهزة الطبية دون طلب الإذن للقيام بذلك. تجنّب وضع الهاتف على أجهزة ضبط النبض. أي الجيب على مستوى الصدر.

- أعلى قيمة SAR لطراز الهاتف هذا الذي تم اختباره بواسطة DASY4 للاستخدام على الأذن تعادل 1.23 واط/كيلوجرام (10 جرامات) وعند الحمل على الجسد تكون 1.21 واط/كيلوجرام (10 جرامات).
- معلومات بيانات SAR للمقيمين في بلدان/مناطق تبني حد SAR الموصى به من قبل معهد المهندسين الكهربائيين والإلكترونيين (IEEE) هو 1.6 واط/كيلوجرام كمتوسط لكل جرام واحد (1) من النسيج.
- لا تقم بتفكيك الوحدة. اعمل على نقل الوحدة إلى تقني صيانة مؤهل عندما تكون بحاجة إلى تنفيذ عمل ما عليها لإصلاحها.
- ضع هذه الوحدة في مكان بعيد عن الأجهزة الإلكترونية مثل أجهزة التلفزيون، والراديو، وأجهزة الكمبيوتر الشخصي.
- يجب إبقاء الوحدة بعيدة عن مصادر السخونة مثل الأجهزة المشعة للحرارة أو الأفران المنزلية.
- تجنب إسقاط الوحدة.
- لا تعرّض هذه الوحدة للاهتزاز الميكانيكي أو الصدمات.
- أوقف تشغيل الهاتف في أي منطقة حيث القوانين الخاصة تطالبك بذلك، على سبيل المثال، لا تستخدم الهاتف في المستشفيات إذ قد يؤثر على المعدات الطبية الحساسة.

العناية بالمنتج وصيانتة

 تحذير: استخدم فقط البطاريات والشواحن والملحقات الموافق على استخدامها مع طراز الهاتف المعين هذا. إن استخدام أي أنواع أخرى قد يؤدي إلى إبطال أي ضمان أو موافقة تنطبق على الهاتف المحمول. وقد يكون خطيراً.

إرشادات لاستخدام آمن وفعال

- يرجى قراءة هذه الإرشادات البسيطة. عدم التقيد بهذه الإرشادات قد يكون أمراً خطراً أو غير قانوني.
- تستخدم إرشادات التباين للموجات اللاسلكية وحدة قياس معروفة بمعدل الامتصاص المحدد، أو SAR. وتجرى اختبارات SAR باستخدام أساليب قياسية فيما ينفذ الهاتف عملية الإرسال بأعلى مستوى طاقة مسموح به في كل نطاقات التردد التي تم اختبارها.

التعرض لطاقة التردد اللاسلكي

معلومات حول التعرض للموجات اللاسلكية ومعدل الامتصاص المحدد (SAR)

- لقد تم تصميم طراز الهاتف المحمول LG-T325 هذا بحيث يفي بمتطلبات السلامة القابلة للتطبيق المتعلقة بالتعرض للموجات اللاسلكية. تستند هذه المتطلبات إلى إرشادات علمية تتضمن هوامش سلامة مصممة لضمان السلامة لكل المستخدمين. من دون أخذ العمر والصحة بالاعتبار.
- وعلى الرغم من وجود اختلافات بين مستويات SAR لمختلف طرازات هاتف LG، فهي كلها مصممة بحيث تفي بالإرشادات المتعلقة بالتعرض للموجات اللاسلكية.
- حد SAR الذي توصي به اللجنة الدولية للحماية من الإشعاع غير المؤين (ICNIRP) هو 2 واط/كيلوجرام وهو حد مقسم على نحو متناسب إلى 10 جرامات من النسيج.

تغيير ضوابط إمكانية	24.....الموسيقى
الاتصال.....29	25..نقل الموسيقى إلى الهاتف
إرسال الملفات واستلامها	25.....إدارة الملفات
29..... باستخدام Bluetooth	25.....الألعاب والتطبيقات
الاقتراح بجهاز Bluetooth	25.....راديو FM
آخر.....30	26.....البحث عن محطات
30..... Wi-Fi	26.....تطبيق
تحديث البرنامج.....31	26.....إضافة حدث إلى التقويم
31..... تحديث برنامج الهاتف	26.....ضبط المنبه
32.....الملحقات	26.....مسجل الصوت
33.....البيانات التقنية	27.....تحويل وحدة
34.....استكشاف الأخطاء وإصلاحها	27..... PC Suite
36.....استكشاف الأخطاء وإصلاحها	تثبيت برنامج LG PC Suite على
	27..... الكمبيوتر
	27.....ويب
	28.....الوصول إلى ويب
	28.. الوصول إلى خدمة Google
	28.....الإعدادات
	28.....تخصيص الأوضاع
	28.....تغيير إعدادات الهاتف
	29.....استخدام إدارة الذاكرة

المحتويات

المحتويات.....	2
إرشادات لاستخدام آمن وفعال.....	4
تنشيط بطاقة SIM وبطارية	
الهاتف.....	10
تنشيط بطاقة SIM.....	10
الأشكال التوضيحية.....	10
مكونات الهاتف.....	11
استخدام شاشة اللمس.....	12
تلميحات شاشة اللمس.....	12
التحكم بشاشة اللمس.....	12
الشاشة الرئيسية الخاصة بك.....	13
شاشة القائمة.....	14
المكالمات.....	15
إجراء مكالمة.....	15
إجراء مكالمة من الأسماء.....	15
تغيير ضبط المكالمات	
العام.....	15
الأسماء.....	16
البحث عن اسم.....	16
إضافة اسم جديد.....	16
تغيير إعدادات الأسماء.....	17
المراسلة.....	18
إرسال رسالة.....	18
إدخال النص.....	18
التعرف على الكتابة اليدوية.....	18
إعداد البريد الإلكتروني.....	18
تغيير الإعدادات الرسائل	
النصية.....	19
تغيير إعدادات رسائل الوسائط	
المتعددة.....	19
خدمات الشبكة الاجتماعية	
(SNS).....	20
Facebook (تنمة SNS).....	20
الكاميرا.....	21
التقاط صورة سريعة.....	21
بعد التقاط الصورة.....	21
استخدام الإعدادات	
المتقدمة.....	22
كاميرا الفيديو.....	23
إنشاء فيديو سريع.....	23
بعد إنشاء الفيديو.....	23
الخيارات التالية متوفرة.....	23
استخدام الإعدادات	
المتقدمة.....	23

دليل مستخدم LG-T325 — العربية

قد تختلف بعض المحتويات الموجودة في هذا الدليل عن هاتفك وذلك استناداً إلى برنامج الهاتف أو موفر الخدمة.

