



繁體中文
簡體中文
ENGLISH



使用手冊

GD350



CE0168
Downloaded from <http://www.gsmarc.com>

P/N : MMBB0366919 (1.1)

www.lg.com

Bluetooth QD ID B016112

Downloaded from <http://www.gsmarc.com>

GD350 使用手冊 — 繁體中文

本使用手冊幫助您掌握新型手機的操作。提供有助於您使用手機功能的相關解釋。

此手冊中的部份內容可能會因手機程式之改良或不同網絡商提供的服務而令實際情況有所不同,這並不會另行通知。



了解您的手機

主屏幕

軟鍵

這些軟鍵會執行緊接於其上方的畫面文字所指示的功能

「確定」鍵

選擇功能表選項並確認操作。

音樂鍵

直接轉至音樂功能。

通話鍵

撥打電號碼及接聽來電。

導覽鍵


用於快速存取手機功能。


相機鍵

轉至相機功能。

結束/電源鍵

結束或拒接通話。
開啓/關閉手機。
使用此功能表時將返回至桌面。

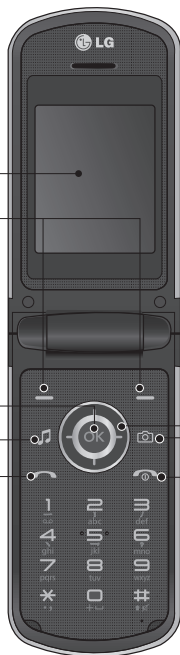

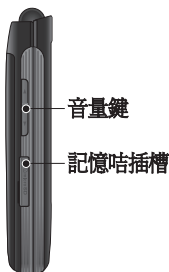

安裝記憶咭

打開記憶咭蓋並插入 記憶咭，確保記憶咭金色接觸區面向下。關閉記憶咭蓋，直至聽到咔嗒聲。

要取出記憶咭，輕輕推動記憶咭，如圖所示。



注意：記憶咭是選購配件。

格式化記憶咭

從桌面按功能表並選擇設定。

選擇記憶體資訊，選擇外置記憶體並按格式化，輸入安全密碼。

警告：格式化記憶咭時，所有的內容將會被清除。 如果不想丟失記憶咭上的資料，請先進行備份。

安裝智能咭和為電池充電

安裝智能咭

申請手機網絡後，您將獲得一張智能咭，當中有申請的詳細資料，如 PIN 碼、各種可選服務和其他內容。

重要資訊：

- 由於智能咭容易因刮痕或彎曲而損壞，因此在使用、插入或取出智能咭時要加倍小心。
- 將所有智能咭放置在兒童無法觸及的地方。

插圖

- 1 取下電池蓋
- 2 取下電池
- 3 插入智能咭
- 4 插入電池
- 5 裝回電池蓋
- 6 為電池充電



警告：手機開機時，不要取下電池，因為這樣會損壞手機。

功能表總覽

1. 訊息

- 1.1 建立訊息
- 1.2 收件匣
- 1.3 我的郵箱
- 1.4 草稿
- 1.5 寄件匣
- 1.6 已發送項目
- 1.7 已儲存的項目
- 1.8 情感圖示
- 1.9 訊息設定

2. 通訊錄

- 2.1 通訊錄
- 2.2 設定
- 2.3 群組
- 2.4 快速撥號
- 2.5 服務撥號號碼
- 2.6 本手機號碼
- 2.7 我的名片

3. 通話記錄

- 3.1 通話記錄
- 3.2 未接來電
- 3.3 已接來電
- 3.4 已撥號碼
- 3.5 通話時間
- 3.6 分組資料用量
- 3.7 通話費用

4. 設定

- 4.1 情景模式
- 4.2 顯示
- 4.3 日期與時間
- 4.4 連接
- 4.5 通話
- 4.6 手機
- 4.7 網絡
- 4.8 互聯網設定
- 4.9 存取點
- 4.10 分組數據連線

4.11 安全

- 4.12 記憶體資訊
- 4.13 恢復出廠設定

5. 媒體匣

- 5.1 我的記憶咭
- 5.2 我的圖像
- 5.3 我的聲音
- 5.4 我的影片
- 5.5 我的遊戲及應用程式
- 5.6 其他

6. 多媒體

- 6.1 相機
- 6.2 影片
- 6.3 音樂
- 6.4 FM 收音機
- 6.5 語音備忘錄
- 6.6 鈴聲創作器

7. 記事簿

- 7.1 鬧鐘
- 7.2 日曆
- 7.3 待辦事項列表
- 7.4 筆記
- 7.5 秘密備註
- 7.6 現金記帳簿
- 7.7 BMI 計算器
- 7.8 計算機
- 7.9 秒錶
- 7.10 日期搜尋器
- 7.11 單位轉換器
- 7.12 世界時間

7.13 轉至

7.14 智能咭服務 (視乎網絡商)

7.15 設定

8. 應用程式

8.1 我的遊戲及 應用程式

8.2 設定

9. Web

- 9.1 主頁
- 9.2 書籤
- 9.3 最後存取的
網址
- 9.4 設定
- 9.5 轉至網址
- 9.6 儲存的網頁

通話功能

撥打電話

- 1 使用鍵盤輸入號碼。要刪除數字，請按清除。
- 2 按  開始通話。
- 3 要結束通話，請按 .

提示！ 若要在撥打國際電話時輸入「+」，請按住 0。

提示！ 要在通話期間調節音量，請按音量鍵。

透過通訊錄撥打電話

- 1 從桌面選擇通訊錄。
- 2 使用鍵盤輸入您要通話的聯絡人的姓名首字母。
- 3 從選項中選擇撥打電話，或按  開始通話。

接聽來電和拒接來電

手機響鈴後，按  鍵接聽來電。

要使響鈴中的手機靜音，只需選擇靜音即可。如果在開會時忘記將情景模式變更為靜音，此功能將十分有用。

按  或選擇拒絕以拒接來電。

使用揚聲器

通話期間，您可按  啓動揚聲器，亦可使用手機。

如果已啓動揚聲器，再次按  恢復正常手機通話模式。

快速撥號

按功能表，選擇通訊錄，然後選擇快速撥號。

您可為常撥聯絡人指定一個快速撥號號碼。

快速撥號 1 設定為留言訊息，無法更改。

檢視通話記錄

按功能表，選擇通話記錄，然後選擇通話記錄。

如果網絡支援服務區域內的來電線路識別 (CLI)，則您可以查看未接來電、已接來電和已撥號碼。

變更通話設定

可設定與通話相關的功能表。按功能表，選擇設定並選擇通話。

來電轉駁 - 選擇是否轉駁您的通話。

通話限制 - 選擇何時限制通話。

固定撥號號碼 - 選擇可從您的手機撥號的號碼列表。您需要從您的網絡商處得到一個 PIN2 碼。僅固定撥號清單中包含的號碼可從手機撥出。

來電等候 - 有來電等候時，手機會提示您。（這取決於您的網絡供應商。）

來電拒接 - 選擇關閉或開啓並選擇拒接來自所有通話、通訊錄、群組、無名稱記錄或無來電號碼的來電。

發送我的號碼 - 選擇撥出通話時，是否顯示您的號碼。（這取決於您的網絡供應商。）

自動重撥 - 可讓您在撥打電話失敗時設定自動重撥功能。

接聽模式 - 可讓您設定接聽方式。您可以選擇按發送鍵、開啓翻蓋或按任何鍵。

免費通話時間追蹤 - 選擇是否顯示免費通話時間。

分鐘提示 - 確定是否在通話過程中播放分鐘提示音。

藍芽接聽模式 - 選擇使用藍芽耳機時的接聽方式。設定免提或手機。

儲存新號碼 - 選擇是或否。

通訊錄

搜尋聯絡人

- 1 從桌面選擇通訊錄。
- 2 使用鍵盤輸入要通話聯絡人的首個字母。
- 3 要捲動聯絡人及其不同的號碼，請使用導覽鍵。

新增聯絡人

- 1 按功能表並選擇通訊錄，然後選擇通訊錄。按選項，然後選擇新增通訊錄。
- 2 輸入新聯絡人的名字和姓氏。您不必同時輸入名和姓，但必須輸入其中一個。
- 3 輸入號碼並選擇選項，然後選擇儲存。

備註：如果新增多項資訊，請按選項並選擇編輯，然後選擇所需選項。

新增聯絡人至群組

您可將聯絡人儲存至群組中，從而將工作同事和家庭成員分開。手機上存在很多已設定好的群組，包括家庭、朋友、同事、學校和重要人士。

訊息

GD350 包含與 SMS（文字訊息服務）、MMS（多媒體訊息服務）、電子郵件及網絡服務訊息相關的功能。

發送訊息

- 1 按功能表，選擇訊息，並選擇建立訊息。
- 2 選擇訊息以發送文字訊息或多媒體訊息。
- 3 新訊息編輯器將開啓。訊息編輯器將文字訊息和多媒體訊息結合在一個易於切換的編輯器中。訊息編輯器的原初設定為文字訊息。

- 4 輸入電話號碼或按選項，選擇發送從通訊錄列表中選擇一名聯絡人。可透過選擇新增收件者新增多名聯絡人。

備註：訊息也可發送至群組。編輯訊息，然後按發送，選擇通訊錄群組，然後選擇所需的群組。

- 5 輸入訊息。
6 選擇選項，選擇附加新增圖像、影片剪輯、聲音檔、日程表、名片、備註、文字欄位、待辦事項或文字範本。

- 7 按發送。

提示！ 當在訊息欄位中輸入的文字長度超過 1 頁時，您可選擇訊息類型為多個文字訊息或多媒體訊息。如需更改要發送的訊息類型，按功能表 > 訊息 > 訊息設定 > 文字訊息，然後選擇發送長文字時設為。

警告：圖像、影片剪輯、聲音檔、日程表、名片、文字欄位或標題將被新增至訊息編輯器，並將自動轉換為多媒體訊息模式，而您亦需為此支付相應費用。

輸入文字

使用手機鍵盤，您可輸入英數字元。手機中提供以下輸入法模式：英文字典模式 (T9 模式)、ABC 模式和 123 模式。

備註：部份欄位只可使用一種文字輸入模式（例如通訊錄欄位中僅可輸入電話號碼）。

英文字典模式(T9 模式)

T9 模式使用內置字典，識別根據按按鍵順序寫入的單字。只需點按與要輸入字母關聯的數字按鍵，且只要輸入所有字母，字典便可識別要輸入的單字。

使用 T9 模式

- 1 在 T9 文字輸入模式中，按下按鍵  至  開始輸入單字。每一個字母只需按一次鍵。
 - 如果鍵入完成後文字還是不對，請按  鍵一次或多次，以循環顯示其他文字。
 - 如果單字選擇列表中沒有所需的單字，請使用 Abc 模式新增單字。
- 2 在編輯或刪除任何按鍵輸入之前，輸入整個單字。
 - 要刪除字母，按清除。
 - 按  鍵可在每個單字後加入空格。

Abc 模式

使用此模式時，按一次、兩次、三次或四次標示有所需字母的按鍵，直到所需字母顯示，即可輸入該字母。

123 模式

只要按一次按鍵即可輸入一個數字。在字母模式下也可

輸入數字，方法是長按相應的數字鍵。

設定電子郵件

縱使出門在外，您亦可使用 GD350 上的電子郵件功能與他人保持聯絡。設定 POP3 或 IMAP4 電子郵件帳戶簡單方便。

- 1 按功能表，選擇訊息並選擇訊息設定。
- 2 選擇電子郵件及電子郵件帳戶。
- 3 按新增並按照快顯指示，然後輸入所需資訊。

透過新帳戶發送電子郵件

要發送/接收電子郵件，您可設定電子郵件帳戶。

- 1 選擇功能表，選擇訊息並選擇建立訊息。
- 2 選擇電子郵件，將開啓一個新電子郵件。
- 3 輸入收件者地址並撰寫標題。
- 4 輸入訊息。

- 5 按選項，選擇附加以新增圖像、影片剪輯、聲音檔、名片、日程表或備註。
- 6 按發送，將發送您的電子郵件。

訊息資料夾

按功能表，選擇訊息。
GD350 使用的資料夾結構可一目了然。

建立訊息 - 允許您建立新訊息。

收件匣 - 收到的所有訊息將置於您的收件匣中。您可從此處進行回覆、轉寄和更多操作。

我的郵箱 - 您接收的所有電子郵件都置於我的郵箱中。

草稿 - 若不夠時間完成編寫訊息，您可以將寫完的部分儲存於此。

寄件匣 - 這裡是發送中的訊息之臨時存放資料夾。

已發送項目 - 所有已發送訊息的備份被儲存於已發送項目中。

已儲存的項目 - 您可以存取您已儲存訊息、文字範本與多媒體範本。

情感圖示 - 已編寫好的有用的情感圖示，方便快速回覆。您可以新增、編輯和刪除情感圖示。您可在編寫訊息時插入喜愛的情感圖示。

訊息設定 - 訊息設定為預先定義，以便您可立即發送訊息。如果要變更此設定，可使用設定選項來完成。

相機

使用手機內置的相機，可以拍攝相片。此外，你亦可以將照片發送給其他人及選擇將照片設為牆紙。

快速拍照

- 1 按功能表並選擇多媒體。
選擇相機開啓取景器。
- 2 握穩手機，將鏡頭對準拍照對象。
- 3 按 **OK** 拍照。

視像攝錄機

拍攝快速影片

- 1 按功能表並選擇多媒體，然後選擇影片。
- 2 將鏡頭對準拍攝對象。
- 3 按 **OK** 開始錄製。
- 4 Rec 將顯示在取景器中，計時器將顯示拍攝影片的長度。
- 5 選擇停止停止錄製。

音樂

GD350 具有內置音樂播放機，這樣，您可播放所有喜愛的曲目。

播放歌曲

- 1 按功能表並選擇多媒體，然後選擇音樂。
- 2 選擇全部曲目，然後選擇您要播放的歌曲。
- 3 選擇 **||** 暫停歌曲。
- 4 選擇 **▶▶** 跳至下一首歌曲。

- 5 選擇 **◀◀** 跳至上一首歌曲。

- 6 選擇返回停止音樂，並返回到音樂播放器功能表。

備註：音樂版權受國際公約及國內版權法的保護。需要取得授權或許可才可以複寫或複製音樂。在部份國家，國家法禁止私人複製受版權保護的材料。請檢查適用國家關於使用此類材料的國家法律。

FM 收音機

GD350 配備有 FM 收音機功能，您在外出途中可以調諧至最愛的電台進行收聽。

備註：您需要插入耳機才可收聽收音機。將耳機插入耳機插孔中，即可收聽廣播並保持良好的接收效果。

搜尋電台

- 1 按功能表並選擇多媒體，然後選擇 FM 收音機。
- 2 選擇選項並選擇自動掃描，然後選擇是。亦可使用左右鍵搜尋電台。

收聽收音機

- 1 按功能表並選擇多媒體，然後選擇 FM 收音機。
- 2 選擇要收聽電台的頻道編號。

提示！ 可透過內置揚聲器收聽廣播。按選項，選擇透過揚聲器收聽。

錄製廣播

- 1 收聽廣播時按 (OK)。
- 2 錄製時間將顯示在手機上。如要停止錄製，按 (OK)。錄製完成後，錄製內容將作為 mp3 檔案儲存在廣播錄製中。

語音備忘錄

使用語音備忘錄錄製語音備忘錄或其他聲音。

錄製語音備忘錄

- 1 按功能表並選擇多媒體，然後選擇語音備忘錄。
- 2 按 (OK) 開始錄音。
- 3 選擇 (OK) 結束錄音。

- 4 按選項，然後選擇播放以聆聽錄音。

鈴聲創作器

建立鈴聲

- 1 按功能表並選擇多媒體，然後選擇鈴聲創作器。
- 2 從音樂列表中選擇要使用的音樂，然後選擇 (OK)。
- 3 播放音樂時，開始錄音後選擇剪下，以作為鈴聲。
- 4 選擇停止停止錄製。
- 5 選擇儲存並從原始檔案或新檔案中選擇。然後選擇儲存。

媒體匣

您可將媒體檔案儲存在手機記憶體中，以便輕鬆存取所有圖像、聲音、影片、其他內容和遊戲。亦可將檔案儲存至記憶咭中。使用記憶咭的好處在於，您可以釋放手機記憶體的空間。所有多媒體檔案將儲存在圖片集中。

按功能表然後選擇圖片集以開啓資料夾清單。

應用程式

GD350 手機提供了預載遊戲，可讓您在休閒時娛樂。如果您選擇下載任何其他遊戲或應用程式，下載的遊戲或應用程式將儲存於此資料夾中。按功能表並選擇應用程式。選擇我的遊戲及應用程式。

備註：連接至此服務時，需另行收費。請向網路提供商查詢資料費用。

記事簿

設定鬧鐘

(功能表 > 記事簿 > 鬧鐘)

可設定五個鬧鐘在指定時間響鈴。

使用日曆

(功能表 > 記事簿 > 日曆)

進入此功能表時，日曆將會出現。在當前日期上將會標有一個方形游標。可透過導覽鍵移動游標至其他日期。

新增項目至您的待辦事項列表 (功能表 > 記事簿 > 待辦事項列表)

您可檢視、修改和新增要完成的工作。

新增筆記

(功能表 > 記事簿 > 筆記)

可在此處註冊您自己的筆記。

秘密備註

(功能表 > 記事簿 > 秘密備註)

您可編寫秘密備註以保護自己的私隱。您可輸入安全密碼以使用此功能表。

使用現金記帳簿

(功能表 > 記事簿 > 現金記帳簿)

現金記帳簿是一種簡單的記帳簿，可用於記錄現金收據以及付款等基本資訊。現金記帳簿可使您方便地瞭解入帳與出帳情況。

計算 BMI

(功能表 > 記事簿 > BMI 計算器)

BMI(身體質量指數)可根據身高與體重計算體內脂肪量。要計算您的 BMI，按編輯并選擇性別，輸入您的體重與身高。然後選擇完成。

使用計算機

(功能表 > 記事簿 > 計算機)

計算機可提供基本的數學運算功能：加、減、乘、除以及科學應用。

使用秒錶

(功能表 > 記事簿 > 秒錶)

此選項可使您使用秒錶功能。

日期搜尋器

(功能表 > 記事簿 > 日期搜尋器)

日期搜尋器是一款極為方便的工具，可幫助您計算特定天數之後的日期。

轉換單位

(功能表 > 記事簿 > 單位轉換器)

此功能可將多種測量數據轉換至所需的單位。

新增城市至世界時間 (功能表 > 記事簿 > 世界時間)

可新增所需城市至世界時鐘列表。亦可檢查世界主要城市的目前時間。

轉至

(功能表 > 記事簿 > 轉至)

幫助您轉至您所搜尋的功能表。您可以將項目設定為「轉至」。

智能咭服務

(功能表 > 記事簿 > 智能咭服務)

此功能取決於智能咭和網絡服務。

如果智能咭支援 SAT (即智能咭應用程式工具集) 服務，本功能表將出現智能咭上儲存之網絡商服務名稱。

Web

存取瀏覽器

您可以啟動瀏覽器，並在網絡設定上存取已啟動設定檔的主頁。您可以手動輸入網址並存取相關的頁面。

- 1 按功能表並選擇網絡。
- 2 要直接存取瀏覽器主頁，請選擇主頁。或者，選擇轉至網址並輸入所需的網址。

注意：連線至此服務並下載內容時，會產生其他費用。請向網路提供商諮詢資料費用。

設定

個人化情景模式

(功能表 > 設定 > 情景模式)

您可個人化每個情景模式設定。選擇所需的情景模式，然後依次選擇 選項和編輯。

使用飛航模式

(功能表 > 設定 > 情景模式 > 飛航模式)

使用此功能，開啓飛航模式。開啓飛航模式後，您將無法撥打電話、連接至互聯網或發送訊息。

變更您的顯示設定

(功能表 > 設定 > 顯示)

可更改手機畫面的設定。

變更您的日期和時間

(功能表 > 設定 > 日期與時間)

您可設定與日期和時間相關的功能。

變更連接設定

您可在功能表設定藍芽或USB連接模式設定。

按功能表並選擇設定，然後選擇連接。您可從以下選項中選擇：

藍芽 - 設定 GD350 手機，以便使用藍芽。您可調整是否向其他裝置顯示您的手機，或搜尋手機已配對的裝置。

USB 連接模式 - 您可在手機上選擇 USB 連接模式以用於不同場合。

- **大容量儲存**：選擇此選項，然後將手機連接至電腦，將檔案拖放至 GD350 的資料夾。
- **PC Suite**：選擇此選項，然後將手機設為 PC Sync 模式並連接至電腦。
- **每次詢問**：選擇此選項，每當手機連接至電腦，系統會提供選項，讓您選擇連接模式。

備註：要使用 USB 大容量儲存功能，您需要在手機中插入一個外置記憶咭。

變更您的藍芽設定

- 1 按功能表並選擇設定，然後選擇連接。
- 2 選擇藍芽並選擇設定。
對以下選項作出變更：

顯示我的手機 - 選擇手機是否可見、隱藏或可見時間為 1 分鐘。

我的手機名稱 - 為 LG GD350 輸入一個名稱。

支援的服務 - 顯示可支援的服務。

我的位址 - 檢視您的藍芽地址。

同其他藍芽裝置配對

- 1 檢查藍芽是否為開啓和可見。您可在藍芽設定功能表中，透過選擇我的手機的可見狀態，然後變更裝置的可見性。
- 2 從藍芽功能表選擇裝置使用中。
- 3 GD350 將搜尋裝置。完成搜尋後，將在屏幕上顯示新增和更新選項。

- 4 選擇您想要配對的裝置，預設狀態下，每當您想要進行連接時，手機都會建立一個密碼。
- 5 手機將連接至其他裝置。
- 6 密碼保護藍芽連接已準備就緒。

在電腦上安裝 LG PC Suite

- 1 轉至 www.lgmobile.com 並選擇您所在區域，然後選擇國家。
- 2 選擇「產品」功能表，選擇「手冊及軟件」並按「轉至手冊及軟件下載部分」進行下載。
- 3 選擇執行安裝程式時使用的語言並按一下「確定」。
- 4 遵循屏幕上的說明，完成 LG PC Suite 安裝程式精靈。
- 5 安裝完成後，LG PC Suite 圖示將顯示於桌面上。

變更其他設定

網絡 - 使用此功能表選擇網絡模式設定。您還可新增連接至首選列表的首選網絡。

互聯網設定 - 此功能表顯示互聯網設定。透過選項功能表，您可新增互聯網設定、刪除或編輯這些設定。但是，您無法刪除或編輯預設設定。

存取點 - 此功能表可顯示存取點列表。透過使用選項功能表，您可新增存取點、刪除或編輯這些設定。但是，您無法刪除或編輯預設設定。

分組數據連線 - 若選擇「可使用時」，手機在開機時會自動註冊 GPRS 網絡。若選擇「需要時」，手機會在連接到網絡或應用程式時建立 GPRS 連接。

變更手機設定

(功能表 > 設定 > 手機)

按照個人偏好進行調整，體驗 GD350 帶來的自由與舒適。

我的瀏覽鍵 - 可更改四個導覽鍵的捷徑設定。

語言 - 您可更改手機中顯示文字的語言。此更改亦會影響語言輸入模式。

電源節省 - 選擇電源節省設定模式為自動、常開或關閉。如設定為常開，可節省電池電力。

手機資訊 - 檢視 GD350 手機的技術資訊。

變更安全性設定

(功能表 > 設定 > 安全)

更改安全設定，保護 GD350 中重要資訊的安全。

PIN 密碼要求 - 選擇開啓手機時，需要輸入密碼。

手機鎖 - 選擇鎖定您的手機。

若 SIM 變更鎖定手機 - 如啓動此選項，手機將在您更換智能咭時要求輸入安全密碼。

手機遺失追蹤 - 如果手機被盜，手機會向真正所有者配置的號碼發送文字訊息。若要啓用手机遺失追蹤功能，您需要設為開啓，並設定正在發送號碼清單的名稱、號碼、主要號碼及次要號碼。預設手機追蹤密碼為「0000」。

手機遺失追蹤文字訊息將包含被盜手機的 IMEI、目前所在位置（根據區域廣播訊息確定）及目前正在使用此手機的使用者的電話號碼。

更改密碼 - 更改 PIN 碼（如果 PIN 碼要求被設為「開啓」將顯示此功能表項）、PIN2 碼、安全密碼或防盜代碼。

檢視記憶體狀態 (功能表 > 設定 > 記憶體 資訊)

您可使用記憶體管理確定已使用了多少記憶體，查看可用的空間：共用、預留、智能咭和外置記憶體，並在插入記憶咭時設定主要儲存設定。

重設手機 (功能表 > 設定 > 恢復出 廠設定)

使用恢復出廠設定將所有設定重設為原廠設定。您需要安全密碼，才能啓用此功能。預設安全密碼是「0000」。

手機軟件更新

LG 手機軟件更新程式

有關安裝和使用此程式的更多資訊，請瀏覽 <http://update.lgmobile.com>。

此功能可讓您在互聯網上快捷方便地將軟件更新到最新版本。

手機軟件更新程式在更新過程中需要用戶格外留意。在繼續下一步操作之前，請務必仔細閱讀各步驟中顯示的任何說明和注意事項。另請注意，在更新過程中移除 USB 線或電池可能會對手機造成嚴重損壞。製造商不會對在升級過程中造成的資料損失擔任任何責任。建議您事先對任何重要的資訊執行備份。

安全及有效使用指南

射頻能量暴露準則

無線電波暴露及比吸收率 (SAR) 資訊。

本 GD350 型號手機設計符合適用的無線電波暴露安全要求。此要求包括可確保所有使用者安全的設計準則，範圍涵蓋各年齡階層與所有的健康狀況。

- 無線電波暴露指引的量子度單位叫作比吸收率或 SAR。SAR 測試使用標準方法進行，用手機以在所有使用的頻帶最高的合格電源水平傳輸。
- 雖然不同型號的 LG 電話的 SAR 水平有所差異，但所有這些電話的設計都符合無線電波暴露的相關指引。
- 國際非離子化輻射保護委員會 (ICNIRP) 建議的 SAR 限制為平均 10 克組織 2 瓦/千克。
- 經 DASY4 測試，本型號手機在耳朵旁邊使用時的最高 SAR 值為 0.955 瓦/千克 (10 克)，佩戴在身上時的最高 SAR 值為 0.686 瓦/千克 (10 克)。
- 採用了電氣與電子工程師學會 (IEEE) 建議的 SAR 限制，即平均 1 克組織 1.6 瓦/千克 SAR 數據資訊。

產品護理及維修

 **警告：**只可以使用經認可用於此特定手機型號的電池、充電器及配件。使用其他種類的配件可能會導致手機的認可或保養失效，並可能引致危險。

- 請勿拆開此裝置。需要對手機進行維修時，請將其帶到合資格的維修技師處。

- 請遠離如電視、收音機或個人電腦等電器產品而使用手機。
- 裝置需遠離發熱來源，如散熱器或烹調器具。
- 請勿摔落手機。
- 請勿讓此裝置遭機械震動或電擊。
- 請於任何有特殊限制的地方關閉手機。例如，請勿在醫院內使用手機，否則，它可能會對敏感的醫療設備造成影響。
- 請勿以潮濕的雙手對充電中的手機進行操作。這可能會引致觸電和造成手機嚴重損壞。
- 請不要在易燃材料附近為手機充電，因為充電期間手機會發熱並導致火災。
- 使用乾布清潔裝置表面（請勿使用如苯、稀釋劑或酒精等溶劑）。
- 切勿在柔軟家具上為手機充電。
- 手機應在通風良好的環境中充電。
- 請勿讓此裝置接觸過多煙或塵埃。
- 請勿將手機置於信用卡或車票附近，這可能會影響磁帶上的資料。
- 請勿以尖銳物件敲打屏幕，否則可能會對手機造成損毀。
- 請勿將手機暴露於液體或濕氣中。
- 請小心使用配件，如耳機。如非必要，請勿觸及天線。

安全及有效使用指南（續）

有效手機操作

電子裝置

- 請勿在未得到批准下在醫療儀器附近使用您的手機。避免將手機放置在起搏點上，亦即您的胸部口袋。
- 某些助聽設備可能會受到手機使用的干擾。
- 輕微干擾可影響電視、收音機、個人電腦等。

道路安全

檢查您駕車所在區域有關手機使用的法律和法規。

- 駕駛時勿使用手持手機。
- 請專心駕駛。
- 如有免提耳機，請使用免提耳機。

- 若有駕駛條例要求，請駛離馬路並停泊好汽車後才撥打或接聽電話。
- 射頻能量可能會影響車內某些電子系統，例如車載立體聲音響及安全設備等。
- 如果您的汽車配有氣囊，切勿讓已安裝的無線設備或手提無線設備阻擋氣囊。使用不當可能會導致氣囊無法打開或嚴重人員傷害。
- 如果在外出時聆聽音樂，請確保將音量設定至合適水平，以便可以對週圍環境產生警覺。在馬路旁邊時尤其必要。

避免損害您的聽覺

如果長時間以較大音量收聽，可能會對聽覺造成損害。因此，在開啓或關閉手機時，建議不要靠耳朵太近。我們亦建議將音樂及通話音量設定至合適水平。

爆破地區

請勿在進行爆破時使用手機。請嚴格遵守相關限制、規定或條例。

潛在爆炸氣壓

- 請勿在燃料補給點使用手機。
- 請勿在燃料或化學物質旁使用。
- 請勿使用放置了手機及配件的汽車傳輸或放置易燃氣體、液體或爆炸物。

在飛機上

無線裝置可引致飛機受到干擾。

- 登機前，請先關掉手機。
- 未經機組人員批准，請勿在飛機上使用手機。

兒童

請將手機放在兒童接觸不到的安全地方。

手機包含微細零件，如果拆開，可能造成哽咽危險。

緊急撥號

緊急電話可能在某些流動網絡中不能發出。因此，您不應僅倚賴手機作為緊急電話方式。請向您本地的服務供應商查詢。

安全及有效使用指南（續）

電池資料及保護

- 充電前，您無須完全放電。跟其他電池系統不同，沒有記憶影響可緩和電池的效能。
- 只使用 LG 電池及充電器。LG 充電器是為將電池壽命擴至最大而設。
- 請勿拆解電池組或造成電池組短路。
- 請保持電池組的金屬接點清潔。
- 當電池不再提供可接受的效能，請更換電池。電池組可重充數百次直至需要更換為止。
- 如果電池很久沒有使用來擴展其用量，需重充電池。
- 請勿直接將充電器暴露於日光下或高濕度環境（如浴室）中。
- 請勿將電池置於過熱或過冷處，此類場合可能會損害電池效能。
- 若使用類型不當的電池，則有發生爆炸的危險。
- 請根據製造商的指示來處理廢棄電池。請盡量回收利用。請勿將電池作為生活垃圾丟棄。
- 如果需要更換電池，請帶同手機前往最近的授權 LG 電子產品服務點或經銷商以尋求協助。
- 請謹記在手機完全充電後從牆壁插座拔出充電器，避免充電器造成不必要的電力損耗。
- 電池的實際壽命將取決於網絡設定、產品設定、使用模式、電池及環境條件。

技術數據

一般資訊

產品名稱：GD350

系統： GSM 850 / E-GSM 900
/ DCS 1800 / PCS 1900

環境溫度

最高： +55°C (放電)
+45°C (充電)

最低： -10°C

Bluetooth QD ID B016112

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band Terminal Equipment

Model Name

GD350

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v1.2.1

EN 300 328 V 1.7.1

EN 60950-1 : 2001

EN 50360:2001/EN62209-1:2006

EN 301 511 V9.0.2

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36-547 - 8940, Fax : +31-36-547-8794
e-mail : jacob@lge.com

Name

Issued Date

Seung Hyoun, Ji / Director

12. Nov. 2009

Signature of representative

GD350 用户手册 – 简体中文

此指南有助于您了解您的新手机。 它将提供关于手机功能的有用说明。

视话机软件或服务提供商而定，本手册中的部分内容可能与您的手机有所不同。



开始了解您的手机

主屏

软键

这两个按键分别执行它们上方的屏幕文字所指示的功能。

确定键

选择菜单选项并确认操作。

音乐键

直接转到音乐功能。

通话键

拨打电话并接听来电。

导航键


用于快速访问手机功能。


相机键

转到相机功能。

结束/电源键

挂断或拒接来电。
开机/关机。
使用菜单时返回主屏。

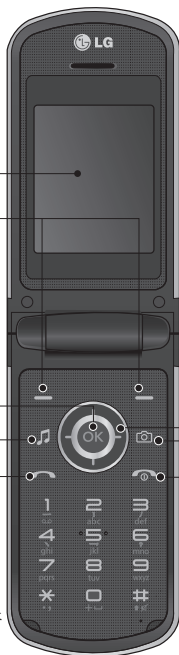

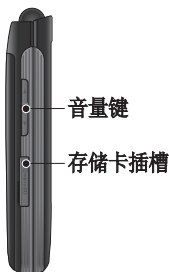

安装存储卡

打开存储卡盖，将金色接触区域朝下插入 micro SD 卡。关闭存储卡盖，使其卡合。

要取出存储卡，如图所示轻推。



备注：存储卡是可选配件。

格式化存储卡

从主屏上按菜单，然后选择设置。

依次选择内存信息、外部存储器，然后按格式化并插入安全码。

警告：格式化卡时，所有内容将被擦除。如果不想失去存储卡中的数据，请先备份。

安装 SIM 卡和充电

安装 SIM 卡

当您预定了手机网络后，您将得到一个 SIM 卡，该卡上载入了您的预定详细信息，如您的 PIN 码、任何可用的可选服务以及其他服务。

重要！

› SIM 卡很容易因刮擦或弯折而损坏，因此，在处理、插入或取出卡时，请小心谨慎。请将所有 SIM 卡置于儿童无法接触的地方。

说明

- 1 打开电池盖
- 2 取出电池
- 3 插入 SIM 卡
- 4 插入电池
- 5 关闭电池盖
- 6 充电



警告：手机开机时，不要取出电池，这可能会损坏手机。

功能表

1. 信息

- 1.1 创建信息
- 1.2 收件箱
- 1.3 我的电子邮箱
- 1.4 草稿箱
- 1.5 发件箱
- 1.6 已发件箱
- 1.7 保存的项目
- 1.8 情绪符
- 1.9 信息设置

2. 电话簿

- 2.1 姓名
- 2.2 设置
- 2.3 群组
- 2.4 快速拨号
- 2.5 服务号码
- 2.6 本机号码
- 2.7 我的商务名片

3. 通话记录

- 3.1 通话记录
- 3.2 未接来电
- 3.3 已接来电
- 3.4 已拨号码
- 3.5 通话时间
- 3.6 数据量
- 3.7 通话费用

4. 设置

- 4.1 情景模式
- 4.2 显示
- 4.3 日期和时间
- 4.4 连接
- 4.5 通话
- 4.6 手机
- 4.7 网络
- 4.8 互联网配置文件
- 4.9 存取点
- 4.10 分组数据连接

4.11 安全性

- 4.12 存储器资料
- 4.13 恢复出厂设置

5. 图片库

- 5.1 我的存储卡
- 5.2 我的图像
- 5.3 我的声音
- 5.4 我的视频
- 5.5 下载
- 5.6 其它

6. 多媒体

- 6.1 相机
- 6.2 视频
- 6.3 音乐
- 6.4 FM 收音机
- 6.5 录音机
- 6.6 铃声创作

7.14 SIM 卡服务

7.15 设置

8. 应用程序

- 8.1 下载
- 8.2 设置

9. 网络

7. 管理器

- 7.1 闹钟
- 7.2 日程表
- 7.3 任务列表
- 7.4 备注
- 7.5 私人备忘录
- 7.6 Cash Book
- 7.7 BMI
Calculator
- 7.8 计算器
- 7.9 秒表
- 7.10 日期搜索器
- 7.11 换算器
- 7.12 世界时间
- 7.13 转至

9.1 主页

9.2 书签

9.3 上一个网址

9.4 设置

9.6 转到网址

9.7 已保存页面

通话

拨打电话

- 1 使用键盘键入号码。要删除一个数字，请按清除。
- 2 按  开始通话。
- 3 要结束通话，请按 。

提示！ 要输入 + 以拨打国际电话，请按住 0。

提示！ 要在通话时控制音量，请按音量键。

从电话本拨打电话

- 1 从主屏选择姓名。
- 2 使用键盘输入您要呼叫的联系人第一个字母。
- 3 从选项选择呼叫，或按  开始通话。

接听和拒绝电话

手机响起时，按  接听来电。

要在手机响铃时静音，选择静音即可。如果您在开会时忘记将情景模式更改为静音，这非常有帮助。

按  或拒绝拒接来电。

使用扬声器

通话期间，您可以通过按  激活扬声器，并且您可以通过免提方式使用手机。

如果扬声器处于活动状态，再次按  将恢复标准手机会话模式。

快速拨号

按功能表并选择电话本，然后选择快速拨号。

您可以为常用联系人指定快速拨号号码。

快速拨号 1 设置为您的语音邮件，不能更改。

查看通话记录

按功能表并选择通话记录，然后选择通话记录。

仅当网络支持服务区内的主叫线路识别 (CLI) 时，您才能检查未接来电、已接来电和已拨电话。

更改呼叫设置

您可以设置与呼叫相关的菜单。按功能表，选择设置，然后选择通话。

呼叫转移 - 选择是否要转接呼叫。

呼叫限制 - 选择何时限制呼叫。

固定拨号号码 - 选择可从此手机拨出的号码列表。您需要运营商提供的 PIN2 码。仅可以使用手机拨打此号码列表中的号码。

呼叫等待 - 有等待呼叫时会收到通知。（这取决于网络提供商。）

拒接来电 - 选择打开或关闭，选择拒接所有来电、拒接来自特定组、联系人的来电；或拒接未注册号码（不在联系人列表中）或禁显号码。

发送我的号码 - 选择当您呼叫对方时是否显示您的号码。（这取决于网络提供商。）

自动重拨 - 允许您在呼叫尝试失败时设置自动重拨功能。

接听模式 - 允许您设置应答方式。您可以从按发送键、打开翻盖或按任意键接听中选择。

免费通话时间跟踪器 - 选择是否显示免费通话时间。

分钟提示音 - 确定在开机状态下是否按设定的时间间隔发出提示音。

蓝牙接听模式 - 选择在使用蓝牙耳机时如何接听来电。选择免提或手机。

保存新号码 - 选择是或否。

电话簿

正在搜索联系人

- 1 从主屏选择姓名。
- 2 使用键盘输入您要呼叫的联系人的第一个字母。
- 3 要在联系人及其不同电话号码间滚动，请使用导航键。

添加新联系人

- 1 按功能表并选择电话本，然后选择姓名。按选项，然后选择新增联系人。
- 2 输入新联系人的姓氏和名称。您无需同时输入姓氏和名称，但必须输入一个。
- 3 输入号码并选择选项，然后选择保存。

备注：如果要添加更多信息，请按选项，然后选择添加详情并选择所需的选项。

将联系人添加到群组

您可以将联系人保存到群组，例如，将工作同事和家人分开。手机中已设置多个群组，包括：家人、朋友、同事、同学和重要人士。

信息

GD350 包含与短信（短信服务）、彩信（多媒体信息服务）、电子邮件，以及网络服务消息相关的功能。

发送信息

- 1 按功能表，选择信息，然后选择创建信息。
- 2 选择信息以发送短信或多媒体信息。
- 3 此时将打开新信息编辑器。信息编辑器是一款直观易用的工具，将短信和多媒体信息组合在一起，可在编辑器中轻松切换。信息编辑器的默认设置为短信模式。

- 4 输入电话号码或按选项，然后按发送以从电话本列表添加联系人。您甚至可以通过选择添加收件人来添加多个联系人。

备注：信息也可以发送给群组。编辑信息然后按发送，选择联系人群组再选择所需的群组。

- 5 输入您的信息。
- 6 依次选择选项、插入添加图像、视频剪辑、声音剪辑、日程表、名片、备忘录、文本字段、任务或文本模板。

- 7 按发送。

提示！ 当您在信息字段中输入的文本超过 1 页时，您可以选择是将短信还是彩信作为信息类型。如果要更改要发送的信息类型，请按功能表 > 信息 > 信息设置 > 文本信息，然后选择将长文本另发发送为。

警告：如果在信息编辑器中添加了图像、视频剪辑、声效剪辑、日程表、名片、文本字段或主题，系统将自动转换到彩信模式，您将需要支付相应的费用。

输入文本

您可以使用手机键盘输入字母数字字符。手机中可以使用以下文本输入法：T9 模式、Abc 模式和 123 模式。

备注：某些字段可能只允许以一种文本输入模式输入（如在地址簿字段输入电话号码）。

T9 模式

T9 模式使用内置字典，根据您的按键的顺序识别您写入的内容。只需按与您要输入的字母关联的数字键即可，输入所有字母后，字典将识别您输入的内容。

使用 T9 模式

- 1 当处于 T9 预测性文本输入模式时，通过按  到  键开始输入单词。每个字母按一次键。
 - 如果在完成输入之后单词仍不正确，按键一次或多次  键以循环选择其它单词。
 - 如果单词选择列表中没有所需的单词，请使用 Abc 模式添加该单词。
- 2 输入整个单词之后再对输入的内容进行编辑或删除。
 - 要删除字母，请按清除键。
 - 按空格或  键以空格结束每个单词。

Abc 模式

在此模式中，输入字母时，按标示为所需字母的按键一次、两次、三次或四次，直到显示该字母。

123 模式

以每个数字一次击键的方式输入数字。在字母模式下，通过按住相应按键，也可以输入数字。

设置您的电子邮件

使用 GD350 中的电子邮件，您可以在旅途中随时与他人保持联系。设置 POP3 或 IMAP4 电子邮件帐户非常快捷。

- 1 按功能表，选择信息，然后选择信息设置。
- 2 选择电子邮件，然后选择电子邮件帐户。
- 3 按添加，按照弹出说明输入所需的信息。

使用新帐户发送电子邮件

要发送/接收电子邮件，您应设置电子邮件帐户。

- 1 选择功能表，然后依次选择信息和创建信息。
- 2 选择电子邮件，新电子邮件将打开。

- 3 输入收件人的地址，然后写主题。
- 4 输入您的信息。
- 5 按选项，选择插入以添加图像、视频剪辑、声效剪辑、名片、日程表或备忘录。
- 6 按发送，您的电子邮件将被发送。

信息文件夹

按功能表并选择信息。
GD350 上使用的文件夹结构无需进行说明。

创建信息 – 您可以创建新信息。

收件箱 – 您接收到的所有信息将放置在收件箱中。在此，您可以进行回复、转发等操作。

我的电子邮箱 – 接收到的所有电子邮件均保存在我的电子邮箱中。

草稿箱 – 如果您来不及写完一条信息，您可以将已写信息保存在此。

发件箱 – 这是发送信息时使用的临时储存文件夹。

已发件箱 – 您发送的所有信息的副本将放置在已发送文件夹中。

保存的项目 – 可以访问保存的信息、文本模板和多媒体模板。

情绪符 – 一个已编写好的有用图释，用于快速回复。您可以添加、编辑和删除图释。您可以在写信息时插入所需图释。

信息设置 – 已预定义信息设置，因此，您可以立即发送信息。如果要更改设置，则可使用设置选项执行此操作。

相机

使用手机内置的相机模式，您可以拍摄人物照片。此外，您可以将照片发送给其他人，或将照片用作墙纸。

快速拍照

- 1 按功能表，然后选择媒体。选择相机以打开取景器。
- 2 握住手机，将镜头对准要拍摄的物体。
- 3 按  拍照。

摄像机

快速摄像

- 1 按功能表，选择媒体，然后选择视频。
- 2 将相机镜头对准要拍摄的物体。
- 3 按  开始拍摄。
- 4 Rec 出现在取景器上，计时器将显示视频长度。
- 5 选择停止可以停止录制。

音乐

GD350 拥有内置音乐播放器，因此，您可以播放所有喜爱的曲目。

播放歌曲

- 1 按功能表，选择媒体，然后选择音乐。
- 2 选择所有曲目，然后选择要播放的歌曲。
- 3 选择  暂停歌曲。
- 4 选择  跳到下一首歌曲。
- 5 选择  跳到上一首歌曲。
- 6 选择返回停止音乐，然后返回“音乐播放器”菜单。

备注：音乐的版权受国际条约和国家版权法保护。可能需要获得许可或许可证才能复制音乐。在某些国家，国际法禁止私人复制版权所有的材料。请查看有关使用此材料的适用国家的国家立法。

FM 收音机

GD350 拥有 FM 收音机功能，因此您在路上也能转到喜爱的电台并收听无线广播。

备注：要收听收音机，您需要插入耳机。将插头接入耳机接口以便收听无线广播并确保良好的无线电接收效果。

搜索电台

- 1 按功能表，选择媒体，然后选择 FM 收音机。
- 2 选择选项，选择自动扫描，然后选择是。您也可以使用左右导航键搜索电台。

收听收音机

- 1 按功能表，选择媒体，然后选择 FM 收音机。
- 2 选择您要收听的电台的频道编号。

提示！您可以通过内置扬声器收听收音机。按选项，选择通过扬声器收听。

录制收音机内容

- 1 在收听收音机的过程中按 **OK**。
- 2 录制时间将显示在手机上。如果要停止录音，请按 **OK**。如果录音完成，所录制的内容将以 MP3 文件格式保存在图片库中。

录音机

使用录音机录制语音备忘录或其它声音。

录制语音备忘录

- 1 按功能表，选择媒体，然后选择录音机。
- 2 按 **OK** 开始录音。
- 3 选择 **OK** 结束录音。
- 4 按选项，然后选择播放收听录音。

铃音创建工具

创建铃音

- 1 按功能表，选择媒体，然后选择铃音创建工具。
- 2 在音乐列表中选择您要使用的音乐，然后选择 (OK)。
- 3 播放音乐时，如要开始录制音乐以用作铃音，请选择剪切。
- 4 选择停止可停止录音。
- 5 选择保存，从原文件或新文件中选择。然后选择保存。

图片库

您可以将任意媒体文件存储到手机内存中，这样，您可以轻松访问所有图片、声音、视频和游戏。您也可以将文件保存到存储卡中。使用存储卡的优点是：您可以释放手机内存的存储空间。所有多媒体文件保存在图片库中。按功能表，然后选择图片库打开文件夹列表。

使用多个

GD350 中预安装了多款游戏，供您在闲暇时娱乐。如果选择要下载其它游戏或应用程序，它们将保存到此文件夹中。按功能表，然后选择应用程序。选择下载。

备注：连接此服务时，可能会产生额外费用。查看网络提供商要求的数据付费。

管理器

设置闹钟

(功能表 > 管理器 > 闹钟)

您最多可以将 5 个闹钟设置为在指定时间停止响铃。

使用日历

(功能表 > 管理器 > 日历)

当进入此菜单时，屏幕上出现日历。当前日期上有一方形光标。您可以使用导航键将光标移到另一日期。

向任务列表添加项目 (功能表 > 管理器 > 任务列表)

您可以查看、编辑和添加要执行的任务。

添加备忘录 (功能表 > 管理器 > 备忘录)

您可以在此注册个人备忘录。

私人备忘录 (功能表 > 管理器 > 私人备忘录)

您可以撰写私人备忘录以保护自己的隐私。您可以使用此菜单输入安全密码。

使用 Cash Book (功能表 > 管理器 > Cash Book)

Cash Book 是一个简单的帐簿，用于记录有关现金流水的基本信息。它提供了一个简易的方法，让您对现金的入帐和出帐了然于胸。

计算 BMI (功能表 > 管理器 > BMI Calculator)

BMI (体质指数) 是根据身高和体重衡量身体胖瘦的标准。要计算您的 BMI，请按编辑并选择性别，输入您的体重和身高。然后选择完成。

使用计算器 (功能表 > 管理器 > 计算器)

计算器提供基本的数学运算功能：加、减、乘、除及科学运算等等。

使用秒表 (功能表 > 管理器 > 秒表)

使用此选项可使用秒表功能。

日期搜索器 (功能表 > 管理器 > 日期搜索器)

日期搜索器是一款便捷的工具，有助于您计算特定天数后的日期。

换算单位

(功能表 > 管理器 > 换算器)

此功能用于将任一度量值转换成所需的单位。

为世界时间添加城市 (功能表 > 管理器 > 世界城市)

您可以将所需的城市添加到世界时列表。您还可以查看世界各地主要城市的当前时间。

转到

(功能表 > 管理器 > 转到)

帮助您转到要搜索的菜单。您可以将项目设为“转到”。

SIM 卡服务

(功能表 > 管理器 > SIM 卡服务)

此功能视 SIM 卡和网络服务而定。

如果 SIM 卡支持 SAT (即, SIM 卡应用程序套件) 服务, 则此菜单将是 SIM 卡上储存的运营商特定服务的名称。

网络

访问 WAP 浏览器

您可以启动网络浏览器并访问在“网络设置”中激活的网络设定的主页。您也可以手动输入 URL 地址并访问相关网页。

- 1 按功能表, 然后选择网络。
- 2 要直接访问 WAP 浏览器主页, 请选择主页。或者, 选择转到网址或键入所需 URL。

备注: 连接此服务并下载内容时, 可能会产生额外费用。查看网络提供商要求的数据付费。

设置

个性化情景模式

(功能表 > 设置 > 情景模式)

您可以个性化每种情景模式。选择您需要的情景模式, 选择选项, 然后选择编辑。

使用飞行模式

(功能表 > 设置 > 情景模式 > 飞行模式)

使用此功能，将飞行模式设为打开。飞行模式被设为打开时，您将无法拨打电话、连接互联网或发送信息。

更改显示设置

(功能表 > 设置 > 显示)

您可以更改手机显示的设置。

更改日期和时间

(功能表 > 设置 > 日期和时间)

您可以设置与日期和时间相关的功能。

更改连接设置

网络运营商已为您设置连接设置，因此，您开机即可使用手机。如果要更改设置，请使用此菜单。在此菜单中，您可以配置网络设置和数据访问配置文件。

按功能表，选择设置，然后选择连接。选项包括：

蓝牙 - 设置 GD350 以使用蓝牙。您可以调整对其它设备的可见性，或搜索您可以与之配对的设备。

USB 连接模式 - 您可以在手机上选择用于多种用途的 USB 连接模式。

- **数据存储：**选择此选项并将手机连接到电脑，将文件拖放到 GD350 可移动设备文件夹。
- **PC 套件：**选择此选项并以 PC Sync 模式将手机连接到电脑。
- **始终询问：**选择此选项，每次手机连接到电脑时会提供一个选项，以供选择模式。

备注：要使用 USB 数据存储功能，您需要在手机中插入外部存储卡。

更改蓝牙设置

- 1 按功能表，选择设置，然后选择连接。
- 2 选择蓝牙，然后选择设置。进行更改：

显示本机号码 - 选择您的设备对于其他人可见、隐藏还是可见 1 分钟。

我的手机名称 - 为您的 LG GD350 输入一个名称。

支持的服务 - 显示支持哪些服务。

我的地址 - 查看您的蓝牙地址。

与其它蓝牙设备配对

- 1 查看蓝牙是否为开且可见。您可以在蓝牙设置菜单中更改可见性：选择我的手机可见性，然后选择可见。
- 2 从蓝牙菜单中选择激活设备。
- 3 GD350 将搜索设备。搜索完成时，屏幕上将显示添加和刷新。
- 4 选择您要与之配对的设备，随后，每次连接时，手机将会默认创建一个通行码。
- 5 随后，手机将连接到其它设备。

6 现在，受通行码保护的蓝牙连接已经准备就绪了。

在计算机上安装 LG PC 套件

- 1 转到 www.lgmobile.com，先选择您所在区域，然后选择国家/地区。
- 2 选择产品菜单，选择手册和软件，然后单击转到手册和软件下载部分以下载。
- 3 选择安装程序运行的语言，然后单击“确定”。
- 4 根据屏幕说明完成 LG PC 套件安装程序向导。
- 5 安装完成后，桌面上将显示 LG PC 套件图标。

更改其它设置

网络 - 使用此菜单选择网络模式设置。此外，您还可以向首选列表添加要连接的可选网络。

互联网配置文件 - 此菜单显示互联网网络设定。您可以使用选项菜单新建、删除或

编辑配置文件。但是，您不能删除或编辑默认配置。

存取点 - 此菜单显示接入点列表。您可以使用选项菜单新建、删除或编辑配置文件。但是，您不能删除或编辑默认配置。

分组数据连接 - 如果选择“可用时”，手机将在开机时自动注册 GPRS 网络。如果选择“需要时”，GPRS 连接将仅在 WAP 或应用程序连接时建立。

更改手机设置

(功能表 > 设置 > 手机)

您可以根据自己的需要，随心所欲地对 GD350 进行调节。

My Navi Key - 您可以更改 4 个导航键的快捷方式。

语言 - 您可以更改手机中显示文本的语言。此更改还将影响语言输入模式。

省电 - 选择该选项可将省电设置切换为自动、始终打开或关闭。如果设为始终打

开，可以节省电池电量。

手机信息 - 查看 GD350 的技术信息。

更改安全设置

(功能表 > 设置 > 安全性)

更改安全设置以保护 GD350 及重要信息。

PIN 码请求 - 选择开机时要请求的 PIN 码。

手机锁 - 选择以锁定手机。

SIM 卡更换时锁定 - 如果启动此选项，手机将在您更换 SIM 卡时请求安全码。

防盗手机追踪器 - 一旦被盜，手机将发送一条短信至真正的手机主人所配置的号码。要激活手机防盗追踪器功能，您将需要将手机防盗追踪器设置为开，并使用名称、主要号码和辅助号码来配置发送号码列表。默认手机防盗追踪器码为“0000”。

手机防盗追踪器短信将包含有关被盜手机的相关信息：

IMEI 号、目前使用该手机的人所在的位置（根据小区广播信息获取）和所用的号码。

更改密码 - 更改 PIN 码（如果将 IPN 码请求设为“开”，将显示此菜单项）、PIN2 码、安全码或防盗码。

查看内存状态 (功能表 > 设置 > 内存信息)

您可以使用内存管理器确定各存储器的使用情况并查看剩余可用空间：公用内存、预留内存、SIM 卡和外置存储器，在插入存储卡时还可以设置主存储器。

重设手机 (功能表 > 设置 > 恢复出厂设置)

使用恢复出厂设置将所有设置恢复到出厂时的设定。要启动此功能，您需要安全密码。默认安全密码设为“0000”。

手机软件更新

LG 手机软件更新程序

有关安装和使用此程序的详细信息，请访问 <http://update.lgmobile.com>。

使用此功能，您可快速方便地将软件更新到最新版本。

手机软件更新程序要求用户在更新过程期间保持全部注意力。请留意每一个步骤中出现的任何说明和提示。还请注意，在更新过程中移除 USB 数据线或取出电池将严重损坏您的手机。

对于更新过程中造成的任何数据丢失，制造商不承担任何责任。安全起见，建议您提前备份好所有重要信息。

关于安全有效使用手机的准则

暴露在射频能量之下

无线电波暴露和“特定吸收率”(SAR)信息。

此款 GD350 型手机已设计为遵守有关适用的无线电波暴露安全要求。此要求基于相关的科学准则，其中包括为确保所有用户（无论年龄和健康状况）安全而设计的安全裕量。

- 无线电波暴露准则采用一种称为“特定吸收率”或 SAR 的测量单位。SAR 测试是在所有用到的频带中以手机的最高认可功率电平进行发射时使用标准化方法执行的。
- 不同的 LG 手机型号可能有不同的 SAR 能级，但它们均符合相关的无线电波暴露准则。

- 国际非电离辐射防护委员会 (ICNIRP) 建议的 SAR 上限值为：每 10 g 重的人体组织吸收的能量平均值不超过 2 W/Kg。
- 由 DASY4 对该型号手机进行的测试，人耳能够承受的 SAR 最大值为 0.955 W/kg (10 克)，戴在身体上时，其值为 0.686 W/kg (10 克)。
- 电气电子工程师协会 (IEEE) 建议的 SAR 上限值为 1.6 W/kg，平均值超过 1 克薄纸，此 SAR 数据适用于各个国家/地区的居民。

产品保养和维护

 **警告：**仅使用经核准为用于此特定手机型号的电池、充电器和配件。使用任何其它类型可能导致适用于此手机的许可或保修失效，并可能造成危险。

- 不要拆解本机。当需要维修时，请将手机送往合格的服务技术人员处。
- 远离诸如电视、收音机或个人计算机之类的电器。
- 远离诸如暖气片或厨灶之类的热源。
- 小心不要让手机摔落。
- 不要让手机受到机械振动或撞击。
- 在任何有特殊条例要求的区域关闭手机。例如，请勿在医院使用手机，因为它可能影响敏感的医疗装置。
- 手机充电时，请勿用湿手操作手机。这可能会导致电击或手机严重受损。
- 请勿在靠近易燃物体的位置充电，因为手机可能因加热而引发火灾。
- 用包装材料或乙烯基包装纸包裹手机可能会损坏手机涂层。
- 如果手机置于柔软物体之上，请不要充电。
- 应将手机放在完全通风的位置充电。
- 不要在烟雾或灰尘过多的环境中使用或存放手机。
- 不要将手机放在信用卡或卡式车票旁边，它可能会影响磁条上的信息。
- 不要用尖锐物体敲击屏幕，这可能会损坏手机。
- 不要将手机暴露在液体或潮气中。
- 谨慎使用诸如耳机之类的配件。在不必要的情况下，不要触摸天线。

有效的手机操作

电子设备

- 在未经允许的情况下，不得在医疗装置附近使用手机。不要将手机放在心脏起搏点上，即胸前的口袋内。
- 手机可能会对某些助听器造成干扰。
- 微弱的干扰可能会影响电视、收音机、个人计算机等。

行车安全

查阅有关在驾驶时使用手机的本地法律法规。

- 不要在驾驶时使用手持式手机。
- 将注意力完全集中在驾驶上。
- 如果有免提装置，请使用免提装置。

- 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。
- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。
- 如果车辆配备气囊，不要让安装的或便携式的无线设备阻挡气囊。由于不当的个人行为，可能造成严重伤害。
- 如果您在外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。在过马路时，尤其要注意这一点。

防止损伤您的听力

如果您长时间置于高音环境中，那么您的听力可能会遭到伤害。因此，我们建议您在开机或关机时不要将手机置于耳边。同时，我们还建议您将音乐和通话音量设置为合理的音量级别。

爆破区域

不要在正进行爆破的地区使用手机。请依照有关限制，并遵守任何规定或规章。

易爆环境

- 不要在加油站内使用手机。
- 不要在靠近燃料或化学制品处使用手机。
- 不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

在飞机上

无线设备可能对飞机造成干扰。

- 登机前，请关机。
- 未经机务人员允许，不得在飞机上使用手机。

儿童

将手机放在儿童接触不到的安全地方。
手机中包含细小零件，如果脱落可能导致窒息危险。

紧急电话

并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急呼叫功能。请向本地的服务提供商核准。

电池信息及保养

- 您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
- 只能使用 LG 电池和充电器。LG 充电器设计为最大程度地延长电池使用寿命。
- 不要拆解电池组或将其短路。
- 保持电池组的金属触点清洁。
- 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。
- 如果电池已经使用很长一段时间，请对电池再次进行充电以保持最佳使用状态。
- 不要将电池充电器暴露在直射阳光下，也不要再在诸如浴室之类的高湿环境中使用。
- 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。
- 替换电池类型不当时可能会有爆炸危险。
- 请按制造商的说明处置用过的电池。如果可能，请循环使用电池。不要将电池当作家用废物丢弃。
- 如果要更换电池，请将其携带至 LG Electronics 授权服务点或经销商处寻求帮助。
- 手机充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。
- 实际的电池寿命将取决于网络配置、产品设置、使用方式、电池和环境条件。

技术参数

标准

产品名称: GD350

系统: GSM 850 / E-GSM 900 /
DCS 1800 / PCS 1900

外部环境

最高温度: +55° C (放电)
+45° C (充电)

最低温度: -10° C

Bluetooth QD ID B016112

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band Terminal Equipment

Model Name

GD350

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v1.2.1

EN 300 328 V 1.7.1

EN 60950-1 : 2001

EN 50360:2001/EN62209-1:2006

EN 301 511 V9.0.2

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36-547 - 8940, Fax : +31-36-547-8794
e-mail : jacob@lge.com

Name

Issued Date

Seung Hyoun, Ji / Director

12. Nov. 2009

Signature of representative


GD350 User Guide — English



This guide will help you understand your new mobile phone. It will provide you with useful explanations of features on your phone.

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



Getting to know your phone

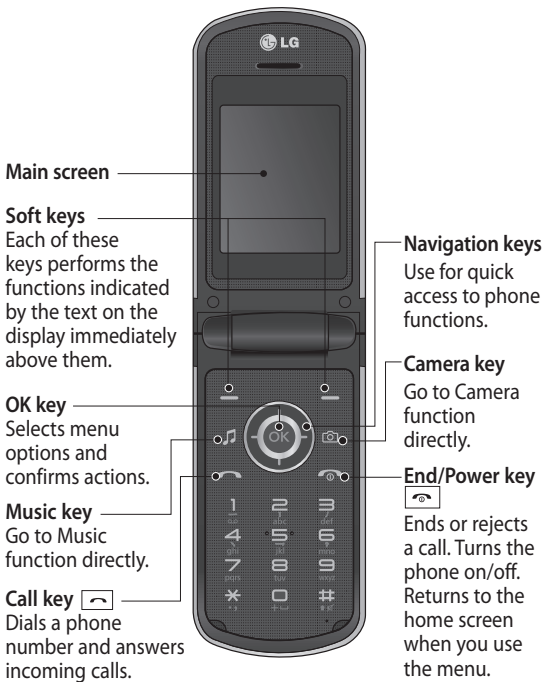

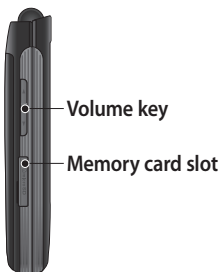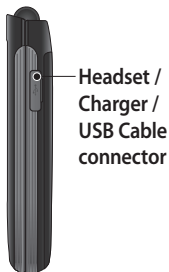

Installing a memory card

Lift the memory card cover and insert a micro SD card with the golden contact area facing downwards. Close the memory card cover so that it clicks shut.

To remove the memory card, gently push it as shown in the diagram.



Note: A memory card is an optional accessory.

Formatting the memory card

From your home screen, press **Menu** and select **Settings**. Choose **Memory Info**, select **External memory** and press **Format**, and insert security code.

WARNING: When you format your memory card, all the content will be wiped. If you do not want to lose the data on your memory card, back it up first.

Installing the SIM Card and Charging the Battery

Installing the SIM Card

When you subscribe to a cellular network, you are provided with a SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

Important!

› The SIM card can be easily damaged by scratches or bending, so be careful when

handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

Illustrations

- 1 Open battery cover
- 2 Remove the battery
- 3 Insert your SIM
- 4 Insert your battery
- 5 Close the battery cover
- 6 Charge your battery



WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

Menu map

1. Messaging

- 1.1 Create message
- 1.2 Inbox
- 1.3 My mailbox
- 1.4 Drafts
- 1.5 Outbox
- 1.6 Sent items
- 1.7 Saved items
- 1.8 Emoticons
- 1.9 Message settings

2. Contacts

- 2.1 Names
- 2.2 Settings
- 2.3 Groups
- 2.4 Speed dials
- 2.5 Service dial numbers
- 2.6 Own number
- 2.7 My business card

3. Call log

- 3.1 Call log
- 3.2 Missed calls
- 3.3 Received calls
- 3.4 Dialed numbers
- 3.5 Call duration
- 3.6 Packet data counter
- 3.7 Call costs

4. Settings

- 4.1 Profiles
- 4.2 Display
- 4.3 Date and time
- 4.4 Connectivity
- 4.5 Call
- 4.6 Phone
- 4.7 Network
- 4.8 Internet profiles
- 4.9 Access points

- 4.10 Packet data conn.

- 4.11 Security

- 4.12 Memory info.

- 4.13 Restore factory settings

5. Gallery

- 5.1 My memory card
- 5.2 My images
- 5.3 My sounds
- 5.4 My videos
- 5.5 My games & apps
- 5.6 Others

6. Media

6.1 Camera

6.2 Video

6.3 Music

6.4 FM radio

6.5 Voice recorder

6.6 Ringtone
creator

7.14 SIM Services

7.15 Settings

8. Applications

8.1 My games &
apps

8.2 Settings

9. Web

7. Organiser

7.1 Alarm clock

7.2 Calendar

7.3 To-do list

7.4 Notes

7.5 Secret notes

7.6 Cash Book

7.7 BMI Calculator

7.8 Calculator

7.9 Stopwatch

7.10 Date finder

7.11 Converter

7.12 World time

7.13 Go to

9.1 Home

9.2 Bookmarks

9.3 Last web
address

9.4 Settings

9.5 Go to address

9.6 Saved pages

Calls

Making a call

- 1 Key in the number using the keypad. To delete a digit press **CLR**.
- 2 Press  to initiate the call.
- 3 To end the call, press .

TIP! To enter + when making an international call, press and hold **0**.

TIP! To control the volume during a call, press volume key.

Making a call from your contacts

- 1 Select **Names** from the home screen.
- 2 Using the keypad, enter the first letter of the contact you want to call. For example, for **Office**, Press 6 three times to select the first character, "O".
- 3 Select **Make call** from **Options** or press  to initiate the call.

Answering and rejecting a call

When your phone rings, press  to answer the call.

To mute your phone while it is ringing, simply select **Silent**. This is useful if you have forgotten to change your profile to **Silent** for a meeting.

Press  or select **Reject** to reject the incoming call.

Using the speakerphone

During a call, you can activate speakerphone by pressing  key and you can use the handset in hands-free.

If the speakerphone is active, press  key again to resume normal handset conversation mode.

Speed dialling

Press **Menu** and select **Contacts**, then choose **Speed dials**.

You can assign a speed dial number to a contact you call frequently.

Speed dial 1 is set to your voice mail and you can not change it.

Viewing your call logs

Press **Menu** and select **Call log**, then choose **Call log**.

You can check the call record of missed, received, and dialled calls only if the network supports the Calling Line Identification (CLI) within the service area.

Changing the call settings

You can set the menu relevant to a call. Press **Menu**, select **Settings** and choose **Call**.

- **Call divert** - Choose whether to divert your calls.
- **Call barring** - Select when you would like calls to be barred.
- **Fixed dial numbers** - Choose a list of numbers that can be called from your phone. You'll need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.
- **Call waiting** - Be alerted when you have a call waiting. (Depends on your network provider.)
- **Call reject** - Select **Off** or **On** and choose to reject all calls, those from specific groups, contacts, unregistered numbers (those not in your list of contacts) or those with no caller ID.
- **Send my number** - Choose whether your number will be displayed when you call someone. (Depends on your network provider.)

- **Auto redial** - Allows you to set the auto redial function when a call attempt has failed.
- **Answer mode** - Allows you to set the answering method. You can choose from **Press send key**, **Open flip** or **Press any key**.
- **Free Call Time Tracker** - Choose whether to show your free call time or not.
- **Minute minder** - Determines whether to sound a tone when you are on the phone as per the set time.
- **BT answer mode** - Choose how to answer a call when using a Bluetooth headset. Set **Hands-free** or **Handset**.
- **Save new number** - Choose **Yes** or **No**.

Contacts

Searching for a contact

- 1 Select **Names** from the home screen.
- 2 Using the keypad enter the first letter of the contact you want to call.
- 3 To scroll through the contacts and their different numbers use the navigation keys.

Adding a new contact

- 1 Press **Menu** and select **Contacts** then choose **Names**. Press **Options** and **Add new contact**.
- 2 Enter the first and last name of your new contact. You do not have to enter both, but you must enter one or the other.
- 3 Enter the number and select **Options** then choose **Save**.

Note: If you add more information, press **Options** and choose **Add detail** then select options you want.

Adding a contact to a group

You can save your contacts into groups, for example, keeping your work colleagues and family separate. There are a number of groups including **Family, Friends, Colleague, School** and **VIP** already set up on the phone.

Messaging

Your GD350 includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service), e-mail as well as the network's service messages.

Sending a message

- 1 Press **Menu**, select **Messaging**, and choose **Create message**.
- 2 Choose **Message** to send an SMS or MMS.
- 3 A new message editor will open. The message editor combines **Text message** and **Multimedia messages** into one intuitive and easy to switch between editor. The default setting of the message editor is text message.
- 4 Enter the phone number or press **Options** and select **Send** to add a contact from the list of your contacts. You can even add multiple contacts by selecting **Add recipient**.

Note: Message can be sent to a group also. Edit the message then press send and select contact group and select the group you want.

- 5 Enter your message.
- 6 Select **Options** and choose **Insert** to add an **Image**, **Video clip**, **Sound clip**, **Schedule**, **Business card**, **Note**, **Text field**, **To do**, or a **Text template**.
- 7 Press **Send**.

TIP! You can select your message type as SMS or MMS when you enter a text longer than 1 page in the message field. If you want to change the type of message to send, press **Menu > Messaging > Message settings > Text message**, and choose **Send long text as**.

WARNING: Image, Video clip, Sound clip, Schedule, Business card, Text field or Subject is added to the message editor, it will be automatically converted to MMS mode and you will be charged accordingly.

Entering text

You can enter alphanumeric characters using the phone's keypad. The following text input methods are available in the phone: T9 mode, Abc mode and 123 mode.

Note: Some fields may allow only one text input mode (e.g. telephone number in address book fields).

T9 mode

T9 mode uses a built-in dictionary to recognise words you're writing based on the key sequences you press. Simply press the number key associated with the letter you want to enter, and the dictionary will recognise the word once all the letters are entered.

Using the T9 Mode

- 1 When you are in the T9 predictive text input mode, start entering a word by pressing keys  to . Press one key per letter.
 - If the word is still incorrect after typing completely, press the  key once or more to cycle through the other word options.
 - If the desired word is missing from the word choices list, add it by using the Abc mode.
- 2 Enter the whole word before editing or deleting any keystrokes.
 - To delete letters, press the CLR.
 - Complete each word with a space by pressing the  key.

Abc mode

This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

123 mode

Type numbers using one keystroke per number. You can also add numbers while remaining in letter modes by pressing and holding the desired key.

Setting up your e-mail

You can stay in touch on the move using e-mail on your GD350. It's quick and simple to set up a POP3 or IMAP4 e-mail account.

- 1 Press **Menu**, select **Messaging**, and choose **Message Settings**.
- 2 Select **E-mail** then **E-mail accounts**.

- 3 Press **Add** and follow the pop up instruction and enter the information required.

Sending an e-mail using your new account

To send/receive an e-mail, you should set up an e-mail account.

- 1 Select **Menu**, select **Messaging** and choose **Create message**.
- 2 Choose **E-mail** and a new e-mail will open.
- 3 Enter the recipient's address and write a subject.
- 4 Enter your message.
- 5 Press **Options**, select **Insert** to add an **Image**, **Video clip**, **Sound clip**, **Business card**, **Schedule** or a **Note**.
- 6 Press **Send** and your e-mail will be sent.

Message folders

Press **Menu**, select **Messaging**. The folder structure used on your GD350 is fairly self explanatory.

Create message - Allows you to create new message.

Inbox - All the messages you receive are placed into your **Inbox**. From here you can reply, forward and more.

My mailbox - All your e-mails you receive are placed into **My mailbox**.

Drafts - If you don't have time to finish writing a message, you can save what you have written so far in here.

Outbox - This is a temporary storage folder used while messages are being sent.

Sent items - Copies of all the messages you send are kept into your **Sent items**.

Saved Items - You can access your **Saved messages**, **Text templates** and **Multimedia templates**.

Emoticons - A list of useful emoticons already written for a quick reply. You can add, edit and delete emoticons. You can insert the emoticon which you preferred on writing a message.

Message settings - Your message settings are pre-defined so that you can send messages immediately. If you would like to change the settings, you can do this using the settings options.

Camera

Using the camera module built in your phone, you can take pictures of people. Additionally, you can send photos to other people and select photos as wallpaper.

Taking a quick photo

- 1 Press **Menu** and select **Media**. Select **Camera** to open the viewfinder.
- 2 Holding the phone and, point the lens towards the subject of the photo.
- 3 Press **(OK)** key to take a photo.

Video camera

Shooting a quick video

- 1 Press **Menu** and select **Media**, then choose **Video**.
- 2 Point the camera lens towards the subject of the video.
- 3 Press **(OK)** key to start recording.
- 4 REC will appear in the viewfinder and a timer will show the length of your video.
- 5 Select **Stop** to stop recording.

Music

Your GD350 has a built-in music player so you can play all your favourite music.

Playing a song

- 1 Press **Menu** and select **Media**, then choose **Music**.
- 2 Choose **All tracks** then select the song you want to play.
- 3 Select **||** to pause the song.
- 4 Select **▶▶** to skip to the next song.
- 5 Select **◀◀** to skip to the previous song.
- 6 Select **Back** to stop the music and return to the music player menu.

Note: Music is copyright protected in international treaties and national copyright laws. It may be necessary to obtain permission or licence to reproduce or copy music. In some countries national law

prohibits private copying of copyrighted material. Please check the national legislation of the applicable country concerning the use of such materials.

FM radio

Your GD350 has an **FM radio** feature so you can tune into your favourite stations and listen on the move.

Note: You will need to insert your headset in order to listen to the radio. Insert the plug into the headset connector in order to listen to the radio and keep the good radio reception.

Searching for stations

- 1 Press **Menu** and select **Media**, then choose **FM radio**.
- 2 Select **Option** and choose **Auto scan** then select **Yes**. You can also use the left and right navigation keys to search for stations.

Listening to the radio

- 1 Press **Menu** and select **Media**, then choose **FM radio**.
- 2 Select the channel number of the station you would like to listen to.

TIP! You can listen to the radio via built-in speaker. Press **Options**, select **Listen via speaker**.

Recording the Radio

- 1 Press **OK** key during listening to the radio.
- 2 The recording time is displayed on your phone. If you want to stop the recording, press **OK** key. If recording is done, the recorded contents will be saved in **Gallery** as mp3 file.

Voice recorder

Use your **Voice recorder** to record voice memos or other sounds.

Recording your voice memo

- 1 Press **Menu** and select **Media**, then choose **Voice recorder**.
- 2 Press **OK** key to begin recording.
- 3 Choose **OK** key to end the recording.
- 4 Press **Options** and select **Play** to listen to the recording.

Ringtone creator

Creating your ringtone

- 1 Press **Menu** and select **Media**, then choose **Ringtone creator**.
- 2 Select the music what you would like to use in music lists, and then select **OK** key.
- 3 Select **Cut** when you want to start recoding music to use as a Ringtone while playing music.
- 4 Select **Stop** to stop.

- 5 Select **Save** and choose from **Original file** or **New file**. Then select **Save**.

Gallery

You can store any media files into your phone's memory so that you have easy access to all of your images, sounds, videos, others and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory. All your multimedia files will be saved in **Gallery**. Press **Menu** then select **Gallery** to open a list of folders.

Applications

Your GD350 comes with preloaded games to keep you amused when you have time to spare. If you choose to download any additional

games or applications they will be saved into this folder. Press **Menu** and select **Applications**. Choose **My games & apps**.

Note: An additional cost is incurred when connecting to this service. Check your data charges with your network provider.

Organiser

Setting your alarm
(Menu > Organiser > Alarm clock)

You can set up to 5 alarm clocks to go off at a specified time.

Using the calendar
(Menu > Organiser > Calendar)

When you enter this menu, a calendar appears. A square cursor is located on the current date. You can move the cursor to another date using the navigation keys.

Adding an item to your to do list (Menu > Organiser > To-do list)

You can view, edit and add tasks to do.

Adding a note (Menu > Organiser > Notes)

You can register your own notes here.

Secret notes (Menu > Organiser > Secret notes)

You can write the private memo to protect your privacy. You enter the security code to use this menu.

Using cash book (Menu > Organiser > Cash Book)

Cash book is a simple accounting book that is used to record basic information about cash receipts and payments. It provides you an easy way of keeping up with how much

money is coming in and what bills are getting paid.

Calculating your BMI (Menu > Organiser > BMI Calculator)

BMI (Body Mass Index) is a measure of body fat based on height and weight.

To calculate your BMI, press **Edit** and choose gender, enter your weight and height. Then select **Done**.

Using your calculator (Menu > Organiser > Calculator)

The calculator provides the basic arithmetic functions: addition, subtraction, multiplication, division and Scientific applications also.

Using the stopwatch (Menu > Organiser > Stopwatch)

This option allows you to use the function of a stopwatch.

Date finder

(Menu > Organiser > Date finder)

Date finder is a handy tool to help you calculate what the date will be after a certain amount of days has passed.

Converting a unit

(Menu > Organiser > Converter)

This converts many measurements into a unit you want.

Adding a city to your world time (Menu > Organiser > World time)

You can add a required city to the list of world clock. You can also check the current time of major cities around the world.

Go to

(Menu > Organiser > Go to)

It helps you to go to the menu you search for. You can set the item as Go to.

SIM services

(Menu > Organiser > SIM services)

This feature depends on SIM and the network services. In case the SIM card supports SAT (i.e. SIM Application Toolkit) services, this menu will be the operator specific service name stored on the SIM card.

Web

Accessing the wap browser

You can launch the wap browser and access the homepage of the activated profile on Web settings. You can also manually enter an URL address and access the associated wap page.

- 1 Press **Menu** and select **Web**.
- 2 To access the wap browser homepage directly, select **Home**. Alternately, select

Go to address and type in your desired URL.

Note: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

Settings

Personalising your profiles (Menu > Settings > Profiles)

You can personalise each profile setting. Choose the profile you want and select **Options** and choose **Edit**.

Using flight mode (Menu > Settings > Profiles > Flight mode)

Use this function to switch the flight mode on. You will not be able to make calls, connect to the Internet, send messages when flight mode is switched on.

Changing your display settings (Menu > Settings > Display)

You can change the settings for the phone display.

Changing your date & time (Menu > Settings > Date and time)

You can set functions relating to the date and time.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone from switch on. If you want to change any settings, use this menu. You can configure the network setting and data access profiles in this menu. Press **Menu** and select **Settings** then choose **Connectivity**. Your options are:

Bluetooth - Set up your GD350 for Bluetooth use. You can adapt your visibility to other devices or search through devices your phone is paired with.

USB connection mode - You can select the USB connection mode on your phone for several uses.

- **Mass storage:** Select this and connect the handset to your computer and drag and drop files to the GD350 removable device folder.
- **PC Suite:** Select this and connect the handset to your computer in PC Sync mode.
- **Always Ask:** Selecting this, will give an option, to select the mode, when handset is connected to the computer, every time.

Note: To use the USB mass storage function, you will need to insert an external memory card in your phone.

Changing your Bluetooth settings

- 1 Press **Menu** and select **Settings** then choose **Connectivity**.
- 2 Choose **Bluetooth** and select **Settings**.
Make your changes to:
 - **My phone's visibility** - Choose whether to **Visible**, **Hidden** or **Visible for 1 min** your device to others.
 - **My phone's name** - Enter a name for your LG GD350.
 - **Supported services** - Shows what it supports.
 - **My address** - View your Bluetooth address.

Pairing with another Bluetooth device

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Bluetooth Settings** menu, by selecting **My phone's visibility**, then **Visible**.

- 2 Select **Active device** from the **Bluetooth** menu.
- 3 Your GD350 will search for devices. When the search is completed **Add** and **Refresh** will appear on screen.
- 4 Choose the device you want to pair with, then handset create passcode by default everytime you connect.
- 5 Your phone will then connect to the other device.
- 6 Your passcode protected Bluetooth connection is now ready.

Installing LG PC Suite on your computer

- 1 Go to www.lgmobile.com and choose your region first and then your country.
- 2 Choose Products menu, select Manual & Software and click Go to Manual & S/W download section to download.
- 3 Select the language you would like the installer to run in and click OK.
- 4 Follow the instructions on screen to complete the LG PC Suite Installer wizard.
- 5 Once installation is complete, the LG PC Suite icon will appear on your desktop.

Changing your other settings

- **Network** - Select network mode settings using this menu. Also you can add a preferable network to be connected to Preferred lists.
- **Internet profile** - This menu shows the Internet profiles. You can create new profiles, delete or edit them using the options menu. However, you cannot delete or edit default configurations.
- **Access points** - This menu shows the access points list.

You can create new profiles, delete or edit them by using the options menu. However, you cannot delete or edit default configurations.

- **Packet data conn.** - If you select "When available", your phone is automatically registered to a GPRS network when you switch the phone on. If you select "When needed", the GPRS connection is established for the duration of a WAP or application connection.

Changing your phone settings

(Menu > Settings > Phone)

Enjoy the freedom of adapting how your GD350 works for your own style.

My Navi Key - You can change the shortcuts of 4 navigation keys.

Language - You can change the language for the display texts in your phone. This change will also affect the language input mode.

Power save - Choose to switch the power save settings **Auto**, **Always on** or **Off**. If you set **Always on**, you can save the battery power.

Information - View the technical information for your GD350.

Changing your security settings

(Menu > Settings > Security)

Change your security settings to keep your GD350 and the important information it holds protected.

- **PIN code request** - Choose a PIN code to be requested when you turn your phone on.
- **Handset lock** - Choose to lock your handset.

- **Lock if SIM is changed**
- If you activate this option, your phone will request a security code when you change your SIM card.
- **Anti-theft mobile tracker**
- When the handset is stolen, handset sends the SMS to the numbers configured by real owner. To activate the ATMT feature, you will need to set ATMT on, and configure the Sending number list with name, primary number and secondary number. Default ATMT code is "0000." ATMT SMS will contain information about the stolen phone IMEI, current location (captured as per Cell Broadcast message) & number of the person who is using that handset.
- **Change codes** - Change your **PIN code** (This menu item will appear if PIN code

request is set to On), **PIN2 code**, **Security code** or **Anti-theft code**.

Viewing memory status (Menu > Settings > Memory info.)

You can use the memory manager to determine how each memory is used and see how much space is available: common, reserved, SIM and external memory and also set the primary storage when the memory card is inserted.

Resetting your phone (Menu > Settings > Restore factory settings)

Use **Restore factory settings** to reset all the settings to their factory definitions. You need the security code to activate this function. The default security code is set to "0000".

Software Upgrade

LG Mobile Phone Software Upgrade Program

For more information on installing and using this program, please visit <http://update.lgmobile.com>.

This feature allows you to upgrade your software to the latest version quickly and conveniently on the Internet without needing to visit our service center.

As the mobile phone software upgrade program requires the user's full attention for the duration of the upgrade process, please be sure to check any instructions and notes that appear at each step before proceeding.

Please note that removing the USB data communication cable or batteries during the upgrade may seriously damage your mobile phone.

As the manufacturer takes no responsibility for loss of data during the upgrade process, you are advised to note down any important information in advance for safekeeping.

Guidelines for Safe and Efficient Use

Exposure to Radio Frequency Energy

Radio Wave Exposure and Specific Absorption Rate (SAR) Information

This GD350 mobile phone model has been designed to comply with the applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to ensure the safety of all users, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. SAR tests are conducted using standardized methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels for various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10 g of tissue.
- The highest SAR value for this phone model tested by DASY4 for use close to the ear is 0.955 W/kg (10 g), and when worn on the body is 0.686 W/kg (10 g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1 g of tissue.

Product Care and Maintenance



WARNING: Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).

Guidelines for Safe and Efficient Use (Continued)

- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well-ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient Phone Operation

Electronic Devices

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, i.e. in your breast pocket.
- Some hearing aids might experience disturbance due to mobile phones.
- Minor interference may affect TVs, radios, PCs etc.

Road Safety

Check the laws and regulations on the use of mobile phones in the areas where you drive.

- Do not use a hand-held phone while driving.
- Give your full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle, such as car stereos and safety equipment.
- If your vehicle is equipped with an airbag, do not obstruct it with installed or portable wireless equipment. This may cause the airbag to fail or cause serious injury due to improper performance.
- If you are listening to music while out and about, please ensure that the volume is at a reasonable level

so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid Damage to Your Hearing

Damage to your hearing can occur if you are exposed to loud sounds for long periods of time. We therefore recommend that you do not turn the handset on or off when it is close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Blasting Area

Do not use the phone where blasting is in progress. Observe restrictions, and follow the rules and regulations.

Guidelines for Safe and Efficient Use (Continued)

Potentially Explosive Atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In Aircraft

Wireless devices can cause interference to aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the aircraft without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children.

It includes small parts which may cause a choking hazard if detached.

Emergency Calls

Emergency calls may not be available under all mobile networks. You should therefore never depend solely on the phone for emergency calls. Check with your local service provider.

Battery Information and Care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.

- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in places with high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, as this may deteriorate the battery performance.
- There is a risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose of batteries in the household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

Technical Data

General

Product Name: GD350

System: GSM 850 / E-GSM 900 /
DCS 1800 / PCS 1900

Ambient Temperatures

Max.: +55°C (discharging)
+45°C (charging)

Min.: -10°C

Bluetooth QD ID B016112

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band Terminal Equipment

Model Name

GD350

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v1.2.1

EN 300 328 V 1.7.1

EN 60950-1 : 2001

EN 50360:2001/EN62209-1:2006

EN 301 511 V9.0.2

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36-547 - 8940, Fax : +31-36-547-8794
e-mail : jacob@lge.com

Name

Issued Date

Seung Hyoun, Ji / Director

12. Nov. 2009

Signature of representative



Warranty Card

產品保用證

Mobile Phone
手提電話

Warranty Card

產品保用證

LG Customer Care Centre
客戶維修服務中心

Welcome to contact for detailed information
歡迎致電查詢詳細資料

Customer Service Hotline 客戶服務熱線 : (852) 3543 7777
E-mail Us 客戶查詢電郵 : cshelpdesk@lge.com
LG Website 瀏覽網站 : www.lg.com

If you want to receive an additional 3 months warranty, please complete warranty registration within 1 month after purchase at
<http://www.lg.com/hk/support/registration/support-sign-in.jsp>
or (852) 3543 7777.

如欲享受額外3個月產品保養，請在購買產品後1個月內登入
<http://www.lg.com/hk/support/registration/support-sign-in.jsp>
或致電(852) 3543 7777登記

Privacy Statement

You are aware that any information supplied by you after purchase of our product will be retained by LG Electronics HK Ltd. and will not be released to third parties. You also authorize LG Electronics HK Ltd. to send you direct promotion materials. Please contact our Customer Service Hotline at (852) 3543 7777 if you wish to modify or erase your provided personal information.

私隱聲明

閣下在購買本公司產品後所提供的任何資料，將會由LG Electronics HK Ltd. 保有，不會透露給予第三方，並授權本公司對閣下發出直接推廣通訊。如希望修改或刪除所提供的個人資料，可聯絡本公司客戶服務熱線(852) 3543 7777作出相關安排。

Thank you for your purchase of LG Electronics product under the terms and conditions listed on this warranty card.

多謝閣下購買及使用本公司之產品，請參閱保用證所列之產品保用條款。

IMPORTANT : Please keep and present this warranty card and purchase invoice when services are rendered. Otherwise, this warranty will be voided.

重要事項 : 顧客請保留此保用證及購貨發票，並需在檢查/維修時出示，否則保用無效。

Mobile Phone Warranty Policy

手提電話保用條款

- (1) LG Electronics Hong Kong Limited (hereafter LGEHK) provides warranty period from the date of purchase are as follows and only valid for mobile purchase in Hong Kong only (any promotion gift item is not included):
 - (i) Handset : 12 months
 - (ii) Charger : 6months
 - (iii) Battery : 6months
 - (iv) Hand free earphone : 3months
 - (2) Warranty is valid only for authorized product; parallel import and counterfeit product are invalid.
 - (3) Product is under warranty against manufacturing defects by reason of faulty workmanship or internal electronic parts materials. This warranty does not cover defects arising from natural wear of the product (including casing, key pad, display, antenna, and accessories, etc.)
 - (4) If check-up or repairing are required, customer must present the original invoice and warranty card on which the relevant IMEI number was printed. Upon any failure to present the above documentation, customer must pay for the costs of the services provided.
 - (5) All parts replaced within the warranty period are the property of LGEHK. We have rights to handle those parts as necessary.
 - (6) Data stored in handsets may be lost after the repair and thus should be properly stored by customer beforehand.
 - (7) Warranty will be voided under the following conditions, and LGEHK reserves the right to refuse providing service and/or shall demand charges for any costs of servicing from customer:
 - (i) Product has been tampered with or undergone unauthorized repair by third parties, improper installation, alternation or modification to this product, or damage, tearing, removal of the warranty sticker that is affixed to this product.
 - (ii) Defects arising from misuse, mishandling, abuse, accident, negligence and damage caused directly or indirectly by fire, flood, liquid water, corrosion, convulsion of nature, war, riot or civil commotion.
 - (iii) The IMEI number sticker on this product has been erased or modified.
 - (iv) The content of warranty policy has been modified without authorization.
 - (8) LGEHK is not responsible for any loss of data or system corruption during the process of transportation or repair to and from the Service Centre and due to the forces of nature.
 - (9) LGEHK reserves the right to terminate or modify the terms of this warranty card. For exceptional cases, subject to report of our investigation, we reserve the right to terminate this warranty card or modify terms of warranty policy.
 - (10) Our company will not be liable for any loss directly or indirectly caused by the breakdown of the product.
 - (11) This warranty card is restricted within Hong Kong SAR only.
 - (12) LG and its Authorized Service Centers reserve the right to use refurbished or reconditioned parts or whole products for the same or functionally equivalent model when conducting product repairs and replacement.
-
- (1) 本公司為客戶提供保修期如下，只適用於香港購買之手機，並不包括各促銷活動之贈品(由購買日起計)
 - (i) 機身 : 12個月
 - (ii) 充電器 : 6個月
 - (iii) 電池 : 6個月
 - (iv) 免提耳機 : 3個月
 - (2) 保修服務只適用於原裝行貨；水貨及冒牌貨均屬無效。
 - (3) 此保修只適用於生產上的瑕疵，如電子零件偶然出現毛病，並不包括手機的自然磨損包括外殼、鍵盤、顯示屏、天線、附件等。
 - (4) 用戶要求維修服務時，須同時攜同手機、保用證及印有IMEI號碼之有效發票正本到本公司指定之維修中心進行維修，否則保修服務無效，客戶須繳付維修費用。
 - (5) 在保修期內維修更換後的所有零件、配置及附件，均屬本公司所有，本公司有權作出任何處理。
 - (6) 手機內存資料有可能因維修後遺失，請顧客要自行保存。
 - (7) 在下列情況下本保用證將自動失效，本公司有權拒絕維修該手機或向客人徵收所有的維修費用。
 - (i) 手機曾作未許可之維修、不適當的安裝、更改，或貼於其上的維修貼紙遭受損毀、撕破、除去，保修服務即無效。
 - (ii) 手機曾被錯誤使用，錯誤處理，疏忽使用，直接或間接意外由火、液體、火災、腐蝕、地震、戰爭、暴亂或天災所造成的損壞。
 - (iii) 手機上的IMEI號碼貼紙一經修改或除去，保修服務即無效。
 - (iv) 擅自修改本保用證的內容。
 - (8) 本公司將對任何於使用、維修或運送時引致之系統錯誤及資料流失，或因天然災害、意外事件造成之損失概不負責。
 - (9) 本保用證的發出及終止權均屬本公司所有。就不明的情況或個案，經審查後，本公司有權發出或終止本保用證。
 - (10) 本公司將不負責由於產品損壞而直接或間接引致之任何損失。
 - (11) 此保用證只適用於香港特別行政區範圍內。
 - (12) 本公司及其授權之維修中心在維修或更換產品時，保留使用與產品或功能相同的部分或全部再生零件之權利。

Service Commitment

服務承諾

LG's mission is to create value for customers. We are committed to improve the life of our customers by putting the customers first, and delivering the best possible pre and after sales services in the way they want.

為顧客創造價值乃LG一貫宗旨。我們致力提供最貼心的售前及售後服務，一切以顧客為先，希望為客戶帶來最優質的生活。

[illegible]

[illegible]

[illegible]