



ENGLISH
हिंदी



User Guide

उपयोगकर्ता मार्गदर्शिका

LG-T515



CE0168!

P/N : MFL67202050 (1.1)

www.lg.com

Note: Changing the local language settings.

You can change the language setting for your phone by pressing Menu->Settings->Device settings->Languages , then select Language.

टिप्पणी: स्थानीय भाषा सेटिंग्स बदलें

मेनू का उपयोग करके आप अपने फोन के लिए भाषा सेटिंग को बदल सकते हैं. मेनू ->सेटिंग्स-> डिवाइस सेटिंग्स-> भाषाएं, भाषा का चयन करें.

ಗಮನಿಸಿ : ಸ್ಥಳೀಯ ಭಾಷೆಯ ಸೆಟ್ಟಿಂಗ್ ಗಳನ್ನು ಬದಲಾಯಿಸಲಾಗುತ್ತಿದೆ.

ನೀವು ನಿಮ್ಮ ಫೋನ್ ನ ಭಾಷೆಯ ಸೆಟ್ಟಿಂಗ್ ಗಳನ್ನು ಬದಲಾಯಿಸಲು, ಮೆನು ->ಸೆಟ್ಟಿಂಗ್ಸ್ ->ಸಾಧನ ಸೆಟ್ಟಿಂಗ್ಸ್ -> ಭಾಷೆಗಳು .

ಅನ್ನು ಒತ್ತಿ ಅನಂತರ ಭಾಷೆಯನ್ನು ಆಯ್ಕೆ ಮಾಡಿ.

குறிப்பு: உள்ளூர் மொழிகளின் அமைப்புகளை மாற்றியமைத்தல்.

உங்களுக்கு தொலைபேசிக்க கு மொழியை மாற்ற வேண்டுமானால் மெனு->அமைப்புகள்->கருவி->மொழிகள்->கருவி மொழியை தேர்வு செய்யவும்.

नोध: स्थानीय भाषा माई सेटिंग्स बदलो.

मेनू -> सेटिंग्स->डिवाइस सेटिंग्स->भाषाएं. पछी भाषा पसंद करी, आनो उपबोधा करी तमारा छेल माई भाषा सेटिंग्स नै बदलि शक्री छी..

ಗಮನಿಸಿ : ಸ್ಥಾನಿಕ ಭಾಷಾ ಸೆಟ್ಟಿಂಗ್‌ಗಳನ್ನು ಮಾರ್ಪಡಿಸಿ.

ಮೀರು ಮಿ ಲೆವೆನ್ ಭಾಷಾ ಸೆಟ್ಟಿಂಗ್‌ಗಳನ್ನು ಮಾರ್ಪಡಿಸುವಿಕೆಗೆ ಇಲ್ಲಾ ಇಯಂಡೆ. ಮೆನು -> ಸೆಟ್ಟಿಂಗ್‌ಗಳು-> ಏಕಕರಂ ಸೆಟ್ಟಿಂಗ್‌ಗಳು-> ಭಾಷೆಗಳು-> ರೆಕ್ಯಾಡ್ ಲೆಖರು ಭಾಷೆನ್ನು ನಿರ್ದಿಷ್ಟಪಡಿಸಿ.

नोट : आपने सवाली भाषा की सेटिंग्स बदलें.

उसी मीनू कडवा के आपने देन दीआ भाषा सेटिंग्स बदल सकलें छे. मीनू->सेटिंग्स->डिवाइस सेटिंग्स->भाषाएं, देन भाषा चुने |

LG-T515 User Guide - English

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



Disposal of your old appliance

1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the e-waste (Management and Handling) Rules, 2011.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.
5. This product does not contain any of the hazardous substances as specified in the rule 13 (1) and (2) of the e-waste (Management and Handling) Rules, 2011.

Product Registration Program

Dear LG Mobile customer,

You are entitled for one year warranty on this model.

For automatic registration, One SMS containing the IMEI no. of your phone will be automatically sent to LG servers @ Rs.0.06p only.

In return you will get one year warranty from the date of purchase at any authorized LG Mobile Service center.

We assure you the information will be kept confidential and used for internal purpose only.

LG Electronics India Pvt. Ltd. does not have any revenue sharing with any cellphone operators for proceeds from SMS of automatic registration.

Contents

Guidelines for safe and efficient use.....	4	Contacts.....	18
Installing the SIM card and the handset battery	10	Searching for a contact ...	18
Installing the SIM Card	10	Adding a new contact.....	18
Illustrations.....	10	Changing your contact settings.....	19
Installing a Memory Card..	10	Messaging	20
Phone Components.....	11	Keypad Information	21
Using your touch screen.....	12	Entering Text.....	26
Touch screen tips.....	12	Handwriting recognition ..	26
Control the touch screen ..	12	Setting up your email	26
Your home screen.....	13	Changing your text message settings	27
Your menu screen.....	15	Changing your multimedia message settings.....	27
Calls.....	16	Messenger	29
Making a Call.....	16	Social network services (SNS).....	29
Making a call from your contacts.....	16	Games and apps.....	29
Answering and rejecting a call	17	NewsHunt	30
Changing the call setting..	17	Camera	30
Changing the common call setting	18	Taking a quick photo.....	30
		After taking a photo	30

Using the advanced settings.....	31	Profiles.....	36
Video camera.....	32	Personalising your profiles..	36
Making a quick video.....	32	Dual SIM setting	37
After making a video.....	32	Settings	37
Using the advanced settings.....	33	Changing your phone settings.....	37
Music	33	SOS Service settings	38
Transferring music onto your phone.....	34	Changing your connectivity settings.....	38
Managing files	34	Sending and receiving your files using Bluetooth..	38
Application.....	35	Pairing with another Bluetooth device.....	40
Adding an event to your calendar	35	Wi-Fi	40
Setting your alarm	35	Software update	41
Voice recorder.....	35	Phone Software update ...	41
Using your calculator	35	Accessories	42
Converting a unit	35	Technical data.....	43
PC Suite	35	Troubleshooting	44
The web.....	36		
Accessing the web	36		
Access to Google Service ..	36		

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model LG-T515 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all users, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised

methods with the phone transmitting at its highest certified power level in all used frequency bands.

- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionising Radiation Protection (ICNIRP) is 2 W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use close to the ear is 0.924 W/kg (10g) and when worn on the body is 0.859 W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR

limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

Product care and maintenance

 **WARNING:** Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).

Guidelines for safe and efficient use

- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well-ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid, moisture or humidity.
- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use the phone or accessories in places with high humidity such as pools, greenhouses, solariums or tropical environments, it may cause damage to the phone and invalidation of warranty.

Efficient phone operation

Electronic devices

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, i.e. in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.

- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct it with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly important when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn the handset on or off close to your ear. We also recommend that music and call volumes are set to a reasonable level.

NOTE: Excessive sound pressure from earphones can cause hearing loss.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow the rules and regulations.

Guidelines for safe and efficient use

Potentially explosive atmospheres

- Do not use the phone at a refuelling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the aircraft without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available with all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.

- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is a risk of explosion if the battery is replaced by an incorrect type.
- Dispose off used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

Installing the SIM card and the handset battery

Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

Important!

The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

Illustrations

Always switch the device off and disconnect the charger before

removing the battery.

- 1 Remove the back cover.
- 2 Lift battery away.
- 3 Insert the SIM card.
- 4 Insert the battery pack.
- 5 Attach the back cover.
- 6 Charge the battery.

Installing a Memory Card

Remove the Memory card slot cover. Push the memory card inside with the gold contact facing upward. To remove the memory card, gently push it.

NOTE: A memory card is an optional accessory.



Phone Components



Earpiece

Call key

Dials a phone number and answers incoming calls.

Back key

Go back to a previous screen.

End key

- End or reject a call.
- Come back to idle screen from menu.



Volume keys

- **When the screen is at the Home screen:** Ring tone and touch tone volume.
- **During a call:** Earpiece volume.
- **Down volume key:** Press and hold to activate/ deactivate Silent mode.

Power/Lock key

- Short press to turn on/off the screen.
- Long press for power on/off.



Handsfree or Stereo earphone connector



Using your touch screen

Touch screen tips

- To select an item, touch the centre of the icon.
- Do not press too hard. The touch screen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- Whenever your LG-T515 is not in use, it will return to the lock screen.



Scrolling

Drag from side to side to scroll. On some screens, such as the Logs list, you can also scroll up or down.

Control the touch screen

The controls on the LG-T515 touch screen change dynamically depending on the task you are carrying out.


Opening Applications

To open any application, simply touch its icon.





Your home screen

- 1 When you touch  on the bottom right of the screen.



- 2 Select **Add**, the list panel appears.



- 3 Select among of Contacts or Widgets or Shortcut. And you choice the items what you want to add on the your home screen.



TIP! You can use all the three screens in the same way.

TIP! Live square widget can be added on home screen, through which you can easily make call, send messages to the number allocated to an Avatar.



TIP! SNS Feeds/Status widget can be added on home screen, through which you can get recent updates and status from your friends.

TIP! AccuWeather is a widget where in you can get the updates on weather of any selected city.

TIP! You can download available widgets from different category from the Download Widgets link.

Your menu screen

You can drag from side to side to scroll what you need right away in all menu screen. To swap between the menu screens just wipe quickly over the display from left to right, or right to left.

Screen 1


You can open Contacts, Messages, Voice call, Logs, Camera, Music, Calendar, Alarms, Memo, Browser, Games and Settings modules from this screen.



Screen 2

You can open E-mail, SNS, Google, My stuff, Messenger, YouTube, Gallery, FM Radio,

Tasks, Date finder, Profiles and Dual SIM settings modules from this screen.

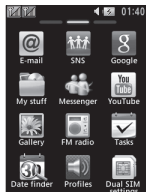



Screen 3

You can open Voice recorder, Bluetooth, Wi-Fi, World clock, Calculator, Unit converter, Stopwatch modules from this screen.




Calls

Making a Call



- 1 Touch  to open the keypad.
- 2 Key in the number using the keypad.
- 3 Touch  to initiate the call.

NOTE: To make a call from SIM2 touch the forward arrow mark on  icon.

TIP! To enter + for making an international call, press and hold .

Press the power key to lock the touch screen to prevent calls being made by mistake.

Making a call from your contacts

- 1 From the home screen touch  to open the **Contacts**.
- 2 Tap the search field box on the top of the screen and enter the first few letters of the contact you would like to call using the keypad.
- 3 From the filtered list, touch the Call icon next to the contact you want to call. The call will use the default number if there is more than one for that contact.
- 4 Or, you can touch the contact name and select the number to use if there is more than one for that contact to use. You can also touch  to initiate the call to the default number.

NOTE:

Self call - Self call imitates a real incoming call. Press '#*#' on the home screen to make a self call. This doesn't charge any fee

Answering and rejecting a call

When your phone rings, press  key to answer the call.


To mute the ringing, touch on Silent tab in alerting screen. This is useful if you forgot to change your profile to Silent for a meeting. Touch on Reject tab to reject an incoming call in alerting screen.


Changing the call setting

- 1 Touch **Call settings** in the **Settings** menu.
- 2 From the screen touch SIM1/ SIM2.
 - **Call reject** - Slide the switch left for ON. You can touch the Reject list to choose All calls, Contacts, Groups, All unknown callers and All unknown numbers.
 - **Send my number** - Choose whether to display your number on an outgoing call.
 - **Auto-redial** - Slide the switch left for ON or right for OFF.
 - **Minute minder** - Slide the switch left to ON to hear a tone every minute during a call.
 - **Save new number** - Select ON or OFF to save a new number.

Changing the common call setting

- **Answer mode**

Press send key: Allows you to only answer an incoming call by pressing the  key.

Press any key: Allows you to answer an incoming call by pressing any key, except the  key.

- **BT answer mode** - Select Always to handsfree to be able to answer a call using a Bluetooth headset, or select Always to handset to press a handset key to answer a call.

Contacts

Searching for a contact

- 1 Touch **Contacts**.
- 2 You see a list of contacts. Typing in the first letter of a contact's name in the Search field will jump the menu to that alphabetical area of the list.

Adding a new contact

- 1 Touch Contacts and touch Add.
- 2 Choose whether to save the contact to your **Internal memory**, **SIM1** or **SIM2**.
- 3 Enter your first and last name.
- 4 You can enter up to five different numbers per contact.
- 5 Add an email addresses. You can enter up to two different email addresses per contact.
- 6 Assign the contact to one or more groups.

- 7 Touch **Save** to save the contact.

Changing your contact settings

You can adapt your contact settings so that your **Contacts** suits your own preferences.

Touch **Options key**  and touch **Settings**.


- **Display name** - Choose whether to display the first or last name of a contact first.
- **Contacts view** - Choose whether to display **Name** or **Name & number**.
- **Copy** - Copy your contacts from your SIM1 to your handset, SIM2 to your handset or vice versa, SIM1 to SIM2 or vice versa. You can do this one contact at a time, or all at once.
- **Move** - This works in the same way as Copy, but the contact is stored at the new location only. Therefore, once a contact is moved from the SIM to the Internal memory it will be deleted from the SIM memory.
- **Send all contacts via Bluetooth** - Sends all contacts to other handset via Bluetooth.
- **Back up contacts/ Restore contacts** - Save or restore the contacts data to the other storage.
- **Delete all contacts** - Delete all your contacts. Touch Yes if you are sure you want to delete all your contacts.

TIP: LG Customer Care number is available by default in Contact list (18001809999)

Messaging

Your LG-T515 combines SMS and MMS into one intuitive and easy-to-use menu.

Sending a message

- 1 Touch **Messages** in menu and touch **Write message** to begin composing a new message.
- 2 Touch **Insert** to add an image, video, sound, template and so on.
- 3 Touch **To** at the top of the screen to enter the recipients, then enter the number or touch  to select a contact. You can even add multiple contacts.
- 4 Touch  when ready.

NOTE: To send a message from SIM2 touch the forward arrow mark on  icon.



WARNING: If an image, video, sound, New slide and so on is added to an SMS it will be automatically converted to an MMS and you will be charged accordingly.

TIP: User can Copy a selected text from any editor and can paste the same in any other editor.


Ex: Go to Message Editor, Type some text. Now Select the Text you want to copy by scrolling over the text. Now Place the cursor at a point you want to paste the text. Go to Option and Click on Paste, so that copied text will get Pasted.

NOTE: Spam Message - You can block the unwanted messages by giving numbers or specific words. Those messages will get stored in Spam Box Folder.



1	౧	౨	౩	౪	౫	౬	౭	౮	౯	౧౦	౧౧	౧౨	౧౩	౧౪	౧౫	౧౬	౧౭	౧౮	౧౯	౨౦	౨౧	౨౨	౨౩	౨౪	౨౫	౨౬	౨౭	౨౮	౨౯	౩౦	౩౧	౩౨	౩౩	౩౪	౩౫	౩౬	౩౭	౩౮	౩౯	౪౦	౪౧	౪౨	౪౩	౪౪	౪౫	౪౬	౪౭	౪౮	౪౯	౫౦	౫౧	౫౨	౫౩	౫౪	౫౫	౫౬	౫౭	౫౮	౫౯	౬౦	౬౧	౬౨	౬౩	౬౪	౬౫	౬౬	౬౭	౬౮	౬౯	౭౦	౭౧	౭౨	౭౩	౭౪	౭౫	౭౬	౭౭	౭౮	౭౯	౮౦	౮౧	౮౨	౮౩	౮౪	౮౫	౮౬	౮౭	౮౮	౮౯	౯౦	౯౧	౯౨	౯౩	౯౪	౯౫	౯౬	౯౭	౯౮	౯౯	౧౦౦
2	౧౦౧	౧౦౨	౧౦౩	౧౦౪	౧౦౫	౧౦౬	౧౦౭	౧౦౮	౧౦౯	౧౧౦	౧౧౧	౧౧౨	౧౧౩	౧౧౪	౧౧౫	౧౧౬	౧౧౭	౧౧౮	౧౧౯	౧౨౦	౧౨౧	౧౨౨	౧౨౩	౧౨౪	౧౨౫	౧౨౬	౧౨౭	౧౨౮	౧౨౯	౧౩౦	౧౩౧	౧౩౨	౧౩౩	౧౩౪	౧౩౫	౧౩౬	౧౩౭	౧౩౮	౧౩౯	౧౪౦	౧౪౧	౧౪౨	౧౪౩	౧౪౪	౧౪౫	౧౪౬	౧౪౭	౧౪౮	౧౪౯	౧౫౦	౧౫౧	౧౫౨	౧౫౩	౧౫౪	౧౫౫	౧౫౬	౧౫౭	౧౫౮	౧౫౯	౧౬౦	౧౬౧	౧౬౨	౧౬౩	౧౬౪	౧౬౫	౧౬౬	౧౬౭	౧౬౮	౧౬౯	౧౭౦	౧౭౧	౧౭౨	౧౭౩	౧౭౪	౧౭౫	౧౭౬	౧౭౭	౧౭౮	౧౭౯	౧౮౦	౧౮౧	౧౮౨	౧౮౩	౧౮౪	౧౮౫	౧౮౬	౧౮౭	౧౮౮	౧౮౯	౧౯౦	౧౯౧	౧౯౨	౧౯౩	౧౯౪	౧౯౫	౧౯౬	౧౯౭	౧౯౮	౧౯౯	౨౦౦
3	౧౦౦౧	౧౦౦౨	౧౦౦౩	౧౦౦౪	౧౦౦౫	౧౦౦౬	౧౦౦౭	౧౦౦౮	౧౦౦౯	౧౦౦౧౦	౧౦౦౧౧	౧౦౦౧౨	౧౦౦౧౩	౧౦౦౧౪	౧౦౦౧౫	౧౦౦౧౬	౧౦౦౧౭	౧౦౦౧౮	౧౦౦౧౯	౧౦౦౨౦	౧౦౦౨౧	౧౦౦౨౨	౧౦౦౨౩	౧౦౦౨౪	౧౦౦౨౫	౧౦౦౨౬	౧౦౦౨౭	౧౦౦౨౮	౧౦౦౨౯	౧౦౦౩౦	౧౦౦౩౧	౧౦౦౩౨	౧౦౦౩౩	౧౦౦౩౪	౧౦౦౩౫	౧౦౦౩౬	౧౦౦౩౭	౧౦౦౩౮	౧౦౦౩౯	౧౦౦౪౦	౧౦౦౪౧	౧౦౦౪౨	౧౦౦౪౩	౧౦౦౪౪	౧౦౦౪౫	౧౦౦౪౬	౧౦౦౪౭	౧౦౦౪౮	౧౦౦౪౯	౧౦౦౫౦	౧౦౦౫౧	౧౦౦౫౨	౧౦౦౫౩	౧౦౦౫౪	౧౦౦౫౫	౧౦౦౫౬	౧౦౦౫౭	౧౦౦౫౮	౧౦౦౫౯	౧౦౦౬౦	౧౦౦౬౧	౧౦౦౬౨	౧౦౦౬౩	౧౦౦౬౪	౧౦౦౬౫	౧౦౦౬౬	౧౦౦౬౭	౧౦౦౬౮	౧౦౦౬౯	౧౦౦౭౦	౧౦౦౭౧	౧౦౦౭౨	౧౦౦౭౩	౧౦౦౭౪	౧౦౦౭౫	౧౦౦౭౬	౧౦౦౭౭	౧౦౦౭౮	౧౦౦౭౯	౧౦౦౮౦	౧౦౦౮౧	౧౦౦౮౨	౧౦౦౮౩	౧౦౦౮౪	౧౦౦౮౫	౧౦౦౮౬	౧౦౦౮౭	౧౦౦౮౮	౧౦౦౮౯	౧౦౦౯౦	౧౦౦౯౧	౧౦౦౯౨	౧౦౦౯౩	౧౦౦౯౪	౧౦౦౯౫	౧౦౦౯౬	౧౦౦౯౭	౧౦౦౯౮	౧౦౦౯౯	౧౦౧౦౦
4	౧౦౦౦౧	౧౦౦౦౨	౧౦౦౦౩	౧౦౦౦౪	౧౦౦౦౫	౧౦౦౦౬	౧౦౦౦౭	౧౦౦౦౮	౧౦౦౦౯	౧౦౦౦౧౦	౧౦౦౦౧౧	౧౦౦౦౧౨	౧౦౦౦౧౩	౧౦౦౦౧౪	౧౦౦౦౧౫	౧౦౦౦౧౬	౧౦౦౦౧౭	౧౦౦౦౧౮	౧౦౦౦౧౯	౧౦౦౦౨౦	౧౦౦౦౨౧	౧౦౦౦౨౨	౧౦౦౦౨౩	౧౦౦౦౨౪	౧౦౦౦౨౫	౧౦౦౦౨౬	౧౦౦౦౨౭	౧౦౦౦౨౮	౧౦౦౦౨౯	౧౦౦౦౩౦	౧౦౦౦౩౧	౧౦౦౦౩౨	౧౦౦౦౩౩	౧౦౦౦౩౪	౧౦౦౦౩౫	౧౦																																																																

21




TAMIL (QWERTY)

22



GUJARATI (QWERTY)


24





PUNJABI (QWERTY)

25

Entering Text

You can choose your input method by tapping  and **Input method**.

Touch  to turn on T9 mode. This icon is only shown when you choose **Keypad** as the input method. Touch to  change between numbers, symbols and text input. Use **Shift** key to change between capital or lowercase input.

Handwriting recognition

In Handwriting mode you simply write on the screen and your LG-T515 will convert your handwriting into your message.

Setting up your email

Touch **E-mail** from screen 2.

If the email account is not set up, start the email set up wizard and finish it.

You can check and edit settings also you can check the

additional settings that were filled in automatically when you created the account.

Note:

After creating the account, Go to Settings → Refresh → Show amount.

On this screen, 3 options will be displayed and user can select any one. By default, only 25 messages will be shown. If user wants to see more emails, then either increase the count to 50 or 100 from this menu.

Changing your text message settings

Touch **Messages** and touch **Settings**. Select **Text message**.

Text message centre - Enter the details of your message centre.

Delivery report - Slide the switch left to receive confirmation that your messages have been delivered.

Validity period - Choose how long your messages are stored at the message centre.

Message types - Convert your text into **Text, Voice, Fax, X.400** or **E-mail**.

Character encoding - Choose how your characters are encoded. This impacts the size of your messages and therefore data charges.

Send long text as - Choose to send long messages as **Multiple SMS** or as an **MMS**.

Changing your multimedia message settings

Touch **Messages** and, touch **Settings** and **Multimedia message**.

Retrieval mode - Choose between **Home network** or **Roaming network**. If you then choose **Manual** you will receive only notifications of MMS and you can then decide whether to download them in full.

Delivery report - Choose to request and/or allow a delivery report.

Read receipt - Choose to request and/or allow a reply.

Priority - Choose the priority level of your MMS.

Validity period - Choose how long your message is stored at the message centre.

Slide duration - Choose how long your slides appear on the screen.

Unsupported attachment -

Choose whether the unsupported attachment is restricted or not.

Delivery time - Choose how long to wait before a message is delivered.

MMS centre - Choose one from the list or add a new message centre.

TIP: You can send SMS to many contacts at a time. User can select/deselect all contacts for sending the message. Only 20 contacts can be marked and if user select Select all only first 20 contacts will be marked.

To send the SMS to a particular group of contacts select Group Option and select particular group.

NOTE:

Excuse message:

During Incoming call alert, a preset Message can be send as SMS on clicking Excuse msg.

NOTE:

SMS Sorting:

Inbox Messages can be sorted with the given sorting options for an easy access of messages. (Date, Sender and Read/Unread)

Messenger

It provides MSN chat application. You can login with your MSN account.

Social network services (SNS)

Your LG-T515 has SNS that lets you enjoy and manage your social network.

NOTE: SNS feature is a data intensive application. An additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

TIP: Facebook and Twitter are java application based on Java technology.

NOTE: Please ensure Auto Update is On before using the SNS Applications.

Facebook (Continued SNS)

Home: Log in and you will see your friend's updated status. Input your comment about new status or check others.

Profile: You can select the **Wall > Status updates** and write the current status. See your info detail and see your uploaded photos.

Friends: Search your friends in facebook by selecting Search field.

Message: You can see the Inbox, Sent Folder and Updates.

Twitter

Twitter is a social networking service which enables its users to send and read other users' messages called tweets.

Games and apps

If you choose to download any additional games or applications they will be saved into this folder.

NOTE: An additional cost is incurred when connecting to this service. Check your data charges with your network provider.

TIP: To switch to the camera mode or video mode, slide up/down the camera or video icon on the centre-right of the viewfinder.


NewsHunt

News Hunt is a unique mobile application designed to enable viewing and reading newspapers in the regional languages on the go.

NOTE: Please ensure Auto Update is On before using this Applications.

Camera

Taking a quick photo

- 1 Touch **Camera** menu.
- 2 When the camera has focused on your subject, touch the  on the right-center of the screen to take a photo.

After taking a photo

Your captured photo will appear on the screen.

The following options are available.

Touch .

Upload - Touch to upload the photo.

Send Via - Touch to send the photo as a **Message**, **Email** or via **Bluetooth**.

Set as - Touch to set as Homescreen wallpaper, Lockscreen wallpaper, Contacts image.

Edit - Touch to edit the photo.

 Touch to delete the image.




Touch to take another photo immediately.



Touch to view a gallery of your saved photos.

Using the advanced settings

From the viewfinder, touch  to open all advanced settings options.

After selecting the option, touch the **OK** button.

Size - Change the size of the photo to save memory.

White balance - Choose between **Auto**, **Incandescent**, **Sunny**, **Fluorescent**, and **Cloudy**.

Colour effect - Choose a color tone for your new photo.

Continuous shot - Position the subject in the viewfinder, then press the capture button as if taking a normal photo. The camera will take shots in quick succession.

Self-timer - The self-timer allows you to set a delay after the shutter is pressed. Select **Off**, **3 seconds**, **5 seconds**, or **10 seconds**. This is ideal if you want to be included in a photo.

Night mode - Useful to user in dark places.

Select storage - Choose whether to save your photos to the Handset memory or to the External memory.

Show captured image - Choose On to check the picture you took right away.





Shutter sound - Select to make Shutter Sound On or Off.

Reset settings - Restore all camera default settings.

Video camera

Making a quick video

To switch to the camera mode or video mode, slide up/down the camera or video icon on the right centre of the viewfinder.

- 1 Holding the phone horizontally, point the lens towards the subject of the video.
- 2 Press the red dot .
- 3 ● **Rec** will appear at the bottom of the viewfinder with a timer at the bottom showing the length of the video.
- 4 To pause the video, touch , and resume by selecting .
- 5 Touch  on screen to stop video recording.

After making a video


A still image representing your captured video will appear on the screen. The name of the video runs along the bottom of the screen together with icons down the left and right sides.


 Touch to play the video.

The following options are available.

Touch .


Send Via - Touch to send the video as a **Message**, **Email** or via **Bluetooth**.

 Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.

 Touch to shoot another video immediately. Your current video will be saved.

 Touch to view a gallery of saved videos and images.

Using the advanced settings

From the viewfinder, touch  to open all advanced settings options. You can change the video camera setting after selecting the option, touch the **OK** button.

Colour Effect - Choose a color tone to use for your new view.

White balance - The white balance ensures any the white areas in your video are realistic. To enable your camera to adjust the white balance correctly, you may need to determine the light conditions. Choose between **Auto**, **Incandescent**, **Sunny**, **Fluorescent**, and **Cloudy**.

Duration - Set a duration limit for your video. Choose between Normal and MMS to limit the maximum size to send as an MMS message.

Select storage - Choose whether to save your videos to the Handset memory or to the External memory.

Reset settings - Reset all the video camera settings.

Music

To access the music player, touch **Music**. From here, you can access a number of folders:

Recently played - Plays the songs you have played recently.

All tracks - Contains the songs you have on your phone except the pre-loaded default music.

Artists - Browse through your music collection by artist.

Albums - Browse through your music collection by album.

Genres - Browse through your music collection by genre.

Playlists - Contains all the playlists you have created.

Shuffle tracks - Play your tracks in a random order.

Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or the data cable.

To transfer music using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are connected to each other.
- 2 Select the music file on the other device and select send via Bluetooth.
- 3 When the file is sent, you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in **Music > All tracks**.

Managing files

You can store multimedia files in your phone's memory so you have easy access to all your images, sounds, videos, documents and Other content. You can also save your files to a memory card. Using a memory card allows you to free up space in your phone's memory. By touching **My stuff**, you can open a list of the folders that store all your multimedia files.


TIP: Secret box

You can add secret data. You need to enter the security code to use this menu to protect your secret data privacy. In order to hide your data go through following step:  > Screen2 > My stuff > any image,sound or any file >  > Move to Secret box.

Application

Adding an event to your calendar

- 1 Touch **Calendar**.
- 2 Select the date you would like to add an event to.
- 3 Touch **Add**.

TIP: User can schedule an SMS, so that it can be sent to the pre define number/contact on Set date and Set time from option list  > New scheduled SMS.

Setting your alarm

- 1 Touch **Alarms**.
- 2 Touch **Add**, then you can set and save your alarm in this menu.

Voice recorder

Use your voice recorder to record voice memos or other audio files.

Using your calculator

- 1 Touch **Calculator**.
- 2 Touch the number keys to enter numbers.

Converting a unit

- 1 Touch **Unit converter**.
- 2 Choose whether you want to convert Currency, Area, Length, Weight, Temperature, Volume or Velocity.
- 3 Then select the unit and enter the value you would like to convert from.

PC Suite

You can synchronise your PC with your phone to make sure all your important details and dates match. You can also backup your files to put your mind at ease.

NOTE: Install PC Suite using CD provided and follow the Installation Guide.

WARNING: Do not disconnect your phone during the transfer.

NOTE:

On - Screen Phone:

On-Screen Phone allows you to view your mobile phone screen from a PC via a USB or Bluetooth connection.

The web

Browser gives you a fast, colourful world of games, music, news, sport, entertainment and loads more, straight to your mobile phone. Wherever you are and whatever you're into.

Accessing the web

- 1 Touch the **Browser**.
- 2 To go straight to the browser home page, select **Home**. Alternately, select **Enter address** and type in the URL, followed by **Connect**.

NOTE: You will incur extra cost by connecting to these services and downloading content. Check data charges with your network provider.

Access to Google Service

Touch **Google** Search to launch google search application.

Profiles

Personalising your profiles

You can personalise each profile setting.

- 1 Touch **Profiles**.
- 2 Choose the profile you want to edit.
- 3 You can then change all the sounds and alert options available in the list, including your Ringtone and Volume, Message tone settings and more.

NOTE: Timed Profile (Menu > Screen2 > Profiles>Touch on any Profile > Scroll Down > Time Settings) User can set a required profile automatically for the pre define Time.

For Ex: If user wants handset profile to be silent from 2:00 PM~3:00 PM, then set the time and select profile as silent for the time frame.

Dual SIM setting

You can see two Network Signal icons on the left-top of the screen when you insert two SIM-Card.


To select or switch the SIMcard, press Menu and select Dual SIM settings.

Settings

Changing your phone settings

Use the freedom of adapting the LG-T515 to your own preferences.

From the home screen, select  and touch **Settings** then scroll to **Device settings**.

NOTE: Anti Theft Mobile Tracker - ( > Settings > Device settings > Security > Anti-theft Mobile tracker) When the handset is stolen, handset sends the SMS to the pre-defined numbers configured by real owner.

ATMT SMS will contain information about the stolen phone IMEI, Owners name & Phone number of the person who is using that handset.

To activate the ATMT feature, configure the ATMT settings with Owner Name, Alternate numbers(5) and set ATMT 'ON'. Default ATMT code is "0000."

SOS Service settings

SOS Service- This enables SOS mode. After enabling if you press down volume key 4 times when screen is locked, the SOS message is sent and the phone stays in SOS Mode.

In the emergency situation SOS message will be sent to the assigned receivers and incoming calls by them will be automatically accepted. All notification sound will be muted. To exit the SOS mode, press the End key in Homescreen.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone immediately. To change any settings, use this menu: Touch **Connectivity**.

Sending and receiving your files using Bluetooth

To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Choose **Send via**. Choose **Bluetooth**.

- 3 If you have already paired the **Bluetooth** device, your LG-T515 will not automatically search for other **Bluetooth** devices. If not, your LG-T515 will search for other **Bluetooth** enabled devices within range.
- 4 Choose the device you want to send the file to.
- 5 Your file will be sent.

To receive a file:

- 1 To receive files, your Bluetooth must be both **ON** and **Visible**. See **Changing your Bluetooth settings** below for more information.
- 2 A message will prompt you to accept the file from the sender. Touch Yes to receive the file.
- 3 You will see where the file has been saved. For image files, you can choose to **View** the file. Files will usually be saved to the appropriate folder in **My stuff**.

TIP!

- 1 When you use a Bluetooth headset , A2DP and AVRCP profiles are not supported while you play video. It means you will not listen video sound if you use Bluetooth headset.
- 2 Bluetooth file transferring function will be blocked under some applications running. (Voice call, Camera, Music Player, UMS/PCSync)

Changing your Bluetooth settings:

Touch **Bluetooth** then select **Options** and choose **Settings**.

Pairing with another Bluetooth device

By pairing your LG-T515 and another device, you can set up a passcode protected connection.

- 1 Check that your Bluetooth is **ON** and **Visible**. You can change your visibility in the **Settings** menu.
- 2 Touch **Search**.
- 3 Your LG-T515 will search for devices. When the search is completed, **Refresh** will appear on screen.
- 4 Choose the device you want to pair with and enter the passcode, then touch **OK**.
- 5 Your phone will then connect to the other device, on which you will need to enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

Wi-Fi

Wireless Manager allows you to manage Internet connections your phone's Wi-Fi (a wireless LAN). It allows the phone to connect to local wireless networks or access the Internet wirelessly. Wi-Fi is faster and has a greater range than Bluetooth wireless technology. It allows fast emailing and Internet browsing.

NOTE: The LG-T515 supports WEP and WPA/WPA2-PSK security. If your Wi-Fi service provider or network administrator sets encryption for network security, fill in the key in the pop-up window. If encryption is not set, this pop-up window will not be shown. You can obtain the key from your Wi-Fi service provider or network administrator.

Software update

Phone Software update

LG Mobile Phone Software update from internet

For more information on using this function, please visit the <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> → select country and language → Support. This Feature allows you to update the firmware of your phone to the latest version conveniently from the internet without the need to visit a service centre. As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage you mobile phone.

Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

Charger



Stereo headset



Battery



Data cable and CD



NOTE





- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may vary in different regions.

Technical data

Ambient Temperatures

Max.: +55°C (discharging) +45°C (charging)

Min.: -10°C

Declaration of Conformity		 LG Electronics
Suppliers Details		
Name	LG Electronics Inc	
Address	LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721	
Product Details		
Product Name	GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band Terminal Equipment	
Model Name	LG-T515	
Trade Name	LG	
CE0168  		
Applicable Standards Details		
R&TTE Directive 1999/5/EC		
EN 301 489-01 v1.8.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v2.1.1		
EN 300 328 v1.7.1		
EN 60950-1:2006+A11:2009		
EN 50360:2001 / AC:2006		
EN 62209-1:2006 / EN 62209-2:2010		
EN 301 511 v9.0.2		
Supplementary Information		
The conformity to above standards is verified by the following Notified Body(BABT)		
BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom		
Notified Body Identification Number : 0168		
Declaration		
I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards, regulation and directives	Name Doo Haeng Lee / Director 	Issued Date 25, May, 2011
LG Electronics Inc. - EU Representative Veluwezoom 15, 1327 AE Almere, The Netherlands Signature of representative		

Troubleshooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy to correct yourself.

Message	Possible Causes	Possible Corrective Measures
USIM error	There is no USIM card in the phone or it is inserted incorrectly.	Make sure that the SIM card is correctly inserted.
No network connection/ Loosing network	Weak Signal outside of GSM network area Operator applied new services	Move towards a window or into an open area. Check the network operator coverage map. See if the SIM card is older than 6~12 month. If so, change your SIM at the office of your network provider.
Codes do not match	To change a security code, you will need to confirm the new code by entering it again. The two codes you have entered do not match.	The default code is [0000]. If you forget the code, contact your service provider.
Any application cannot be set	Not supported by service provider or registration required	Contact your service provider.

Message	Possible Causes	Possible Corrective Measures
Calls not available	Dialing error	New network not authorised.
	New SIM card inserted	Check for new restrictions.
	Prepaid charge limit reached	Contact your service provider or reset limit with PIN 2.
Phone cannot be switched on	On/Off key pressed long enough	Press the On/Off key down for at least two seconds.
	Battery is not charged	Keep charger attached for a longer time Clean the contacts.
	Battery contacts are dirty	Take out the battery and insert again.
Charging error	Battery is not charged	Charge battery.
	Outside temperature is too hot or cold	Make sure phone is charging under normal temperatures.
	Contact problem	Check the charger and connection to the phone. Check the battery contacts and clean them if necessary.
	No voltage	Plug into a different socket.
	Charger defective	If the charger does not warm up, replace it.
	Wrong charger	Only use original LG accessories.
	Battery defective	Replace battery.

Troubleshooting

Message	Possible Causes	Possible Corrective Measures
Touch function doesn't work or is abnormal	Touchpad calibration fault	Perform the touchpad calibration via phone setting menu.
Number not permitted	The Fixed Dial Number function is on.	Check settings.
Impossible to receive/send SMS & Picture	Memory full	Delete some existing messages in the phone.
Files not open	Unsupported file format	Check the file format that can be supported
The screen does not turn on when I receive a call.	Proximity sensor problem	If you use any protection tape or case, check it is covered the area around proximity sensor Make sure that the area around the proximity sensor is clean.
No sound	Vibration or manner mode	Check the setting status of sound menu to make sure you are not in vibrate or silent mode.
Hang up or freeze	Intermittent software problem	Take out the battery and insert battery. Turn on the phone. Try to do software update service via web site

LG-T515 उपयोगकर्ता मार्गदर्शिका - हिंदी

इस मैनुअल की कुछ सामग्री फोन के सॉफ्टवेयर या आपके सेवा प्रदाता के आधार पर आपके फोन से अलग हो सकती है।



अपने पुराने उपकरण का निपटारा

1. जब यह पहिये वाले कौंस बिन का चिह्न किसी उत्पाद के साथ संलग्न होता है तो इसका अर्थ है उत्पाद ई-वेस्ट (प्रबंधन और हैंडलिंग) नियम 2011 के अन्तर्गत आता है ।
2. सभी इलेक्ट्रिकल और इलेक्ट्रॉनिक उत्पादों को सरकार या स्थानीय अधिकारियों के द्वारा नियुक्त नगरपालिका अपशिष्ट धारा से अलग प्रधिकृत की गई संग्रह सुविधाओं के माध्यम से नष्ट किया जाना चाहिए ।
3. सही तरीके से अपने पुराने उपकरणों का निपटारा, वातावरण और मानवीय स्वास्थ्य के लिए संभावित ऋणात्मक परिणामों को रोकने में मदद करेगा ।
4. अपने पुराने उपकरणों के निपटारा के संबंध में और अधिक विस्तृत जानकारी के लिए, कृपया अपने नगर कार्यालय, अपशिष्ट निपटारा सेवा या जहां से आपने उत्पाद खरीदा था, वहां संपर्क करें ।
5. इस उत्पाद में ई-वेस्ट (प्रबंधन और हैंडलिंग) नियम, 2011 नियम 13(1) और 13(2) में निर्दिष्ट अनुसार कोई भी हानिकारक पदार्थ शामिल नहीं हैं ।

उत्पाद पंजीकरण प्रोग्राम

प्रिय एलजी मोबाइल ग्राहक,

आप इस मॉडल पर एक वर्ष की वारंटी के पात्र हैं ।

स्वतः पंजीकरण के लिए , एक एसएमएस @रू.0.06p IMEI सहित आप के फोन से एलजी सर्वर पर भेजा जाएगा । इसके बदले में आप को किसी भी अधिकृत एलजी मोबाइल सेवा केंद्र पर खरीद की तारीख से एक साल की वारंटी मिलेगी ।

हम आपको विश्वास दिलाते हैं , की यह जानकारी गोपनीय रखी जाएगी और केवल आंतरिक उद्देश्य के लिए ही इस्तेमाल कि जायेगी ।

एलजी इलेक्ट्रॉनिक्स इंडिया प्राइवेट लिमिटेड का स्वतः पंजीकरण के एसएमएस से आय के लिए किसी भी सेल फोन ऑपरेटरों के साथ किसी भी प्रकार का राजस्व साझा नहीं है ।

सामग्री

सुरक्षित और प्रभावी उपयोग के लिए मार्गदर्शिकाएँ.....	4
--	---

सिम कार्ड और हैंडसेट बैटरी स्थापित करना	10
---	----

सिम कार्ड स्थापित करना	10
------------------------------	----

उदाहरण.....	10
-------------	----

मेमोरी कार्ड स्थापित करना	10
---------------------------------	----

फोन घटक	11
---------------	----

टच स्क्रीन का उपयोग करना.....	12
-------------------------------	----

टच स्क्रीन टिप्स.....	12
-----------------------	----

टच स्क्रीन को नियंत्रित करें.....	12
-----------------------------------	----

आपकी होम स्क्रीन.....	13
-----------------------	----

आपकी मेनू स्क्रीन.....	15
------------------------	----

कॉल्स.....	18
------------	----

कॉल करना.....	18
---------------	----

अपने संपर्कों से कॉल करना	18
---------------------------------	----

कॉल को स्वीकार और	
-------------------	--

अस्वीकार करना	19
---------------------	----

सामान्य कॉल सेटिंग में	
------------------------	--

परिवर्तन	19
----------------	----

3 सेटिंग्स मेनू में कॉल सेटिंग	
--------------------------------	--

टच करें और सामान्य सेटिंग्स	
-----------------------------	--

पर टच करें.....	19
-----------------	----

संपर्क.....	20
-------------	----

संपर्क खोजना.....	20
-------------------	----

नया संपर्क जोड़ना.....	20
------------------------	----

अपनी संपर्क सेटिंग्स को	
-------------------------	--

बदलना	20
-------------	----

संदेश भेजना	21
-------------------	----

पाठ दर्ज करना.....	22
--------------------	----

अपनी ईमेल सेट करना	23
--------------------------	----

अपनी पाठ संदेश सेटिंग्स	
-------------------------	--

परिवर्तित करना	23
----------------------	----

अपनी मल्टीमीडिया संदेश	
------------------------	--

सेटिंग्स परिवर्तित करना	24
-------------------------------	----

संदेश वाहक.....	25
-----------------	----

सामाजिक नेटवर्क सेवाएँ (SNS)....	25
----------------------------------	----

Facebook (जारी SNS).....	26
--------------------------	----

Twitter	26
---------------	----

गेम्स और एप्लिकेशंस	26
---------------------------	----

NewsHunt.....	26
---------------	----

कैमरा	26
-------------	----

तुरंत फोटो लेना.....	26
----------------------	----

फोटो लेने के बाद	27
------------------------	----

उन्नत सेटिंग्स का उपयोग	
-------------------------	--

करना.....	27
-----------	----

वीडियो कैमरा.....	28	डुअल सिम.....	33
तुरंत वीडियो बनाना	28	अपने प्रोफाइल को व्यक्तिगत	
वीडियो बनाने के बाद.....	28	रूप देना.....	33
उन्नत सेटिंग्स का उपयोग		सेटिंग्स	33
करना	29	अपने फोन की सेटिंग्स बदलना ..	33
संगीत.....	29	संकट संदेश सेवा सेटिंग.....	34
अपने फोन पर संगीत		अपनी संयोजकता सेटिंग्स	
स्थानांतरित करना.....	30	बदलना	34
फाइलें प्रबंधित करना.....	30	किसी अन्य ब्लूटूथ डिवाइस	
अनुप्रयोग	31	से युग्मित करना.....	36
अपने कैलेंडर पर इवेंट जोड़ना ..	31	Wi-Fi.....	36
अपना अलार्म सेट करना	31	सॉफ्टवेयर नवीनीकरण.....	37
वॉइस रिकॉर्डर	31	फोन सॉफ्टवेयर नवीनीकरण.....	37
अपने कैलकुलेटर का उपयोग		सहायक उपकरण	38
करना	31	तकनीकी डेटा.....	39
इकाई कनवर्ट करना	32		
PC सूट.....	32		
वेब.....	32		
वेब तक पहुँच प्राप्त करना	32		
Google सर्विस तक पहुँचना	33		

सुरक्षित और प्रभावी उपयोग के लिए मार्गदर्शिकाएँ

कृपया इन सरल दिशानिर्देशों को पढ़ें। इन दिशानिर्देशों का पालन न करना खतरनाक या गैरकानूनी हो सकता है।

रेडियो फ्रीक्वेंसी ऊर्जा के संपर्क में आना

रेडियो तरंग एक्सपोजर और स्पेसिफिक अब्सोर्प्शन रेट (SAR) की जानकारी

यह मोबाइल फोन LG-T515 रेडियो तरंगों के एक्सपोजर के लिए लागू सुरक्षा आवश्यकताओं के साथ अनुपालन करने के लिए डिज़ाइन किया गया है। यह आवश्यकताएँ उन वैज्ञानिक मार्गदर्शिकाओं के आधार पर बनाई गई हैं, जो कि आयु और स्वास्थ्य पर ध्यान दिए बिना सभी उपयोगकर्ताओं की सुरक्षा को सुनिश्चित करने के लिए डिज़ाइन किए गए सुरक्षा उपायों को शामिल करता है।

- रेडियो तरंग एक्सपोजर दिशानिर्देश, स्पेसिफिक अब्सोर्प्शन रेट या SAR कहलाने वाली एक मापन इकाई का उपयोग करते हैं। SAR के परीक्षण, उपयोग किए गए सभी फ्रीक्वेंसी बैंड्स में उच्चतम

प्रमाणित पॉवर स्तर पर संप्रेषण करने वाले फोन के साथ मानव विधियों के उपयोग से किए जाते हैं।

- वैसे तो कई LG फोन मॉडल के SAR स्तर में भिन्नता हो सकती है, किंतु उन सभी को रेडियो तरंगों के प्रति एक्सपोजर के लिए संबद्ध दिशानिर्देशों को पूरा करने के लिए बनाया गया है।
- गैर-आयनाइजिंग रेडियेशन प्रोटेक्शन (ICNIRP) पर अंतर्राष्ट्रीय कमीशन द्वारा अनुशंसित SAR सीमा, 10g टिशू पर 2 W/kg की औसत से है।
- DASY4 द्वारा परिक्षित, कान के पास उपयोग के लिए इस मॉडल फोन का उच्चतम SAR मान 0.924W/kg (10ग्राम) है और जब शरीर पर पहना जाए तो 0.859 W/kg (10ग्राम) है।
- जिन देशों/क्षेत्रों ने इंस्टीट्यूट ऑफ इलेक्ट्रिकल एंड इलेक्ट्रॉनिक्स इंजीनियर्स (IEEE) द्वारा अनुशंसित SAR सीमा को स्वीकार किया है, वहाँ के निवासियों के लिए SAR डेटा जानकारी 1g टिशू पर औसतन 1.6 W/kg है।

उत्पाद की देखभाल और रखरखाव



चेतावनी: इस विशेष मॉडल के लिए स्वीकृत बैटरियों, चार्जर्स और सहायक उपकरण का ही उपयोग करें। किसी भी दूसरे प्रकार का उपयोग करने पर फोन पर लागू होने वाले अनुमोदन या वॉरंटी अमान्य हो सकती हैं और यह खतरनाक हो सकता है।

- इस यूनिट को न खोलें। सुधारने की आवश्यकता होने पर इसे योग्य सेवा तकनीशियन के पास ले जाएँ।
- बिजली के उपकरणों जैसे टीवी, रेडियो और पर्सनल कंप्यूटर से दूर रखें।
- यूनिट को गर्मी के स्रोतों जैसे रेडिएटर्स या कुकर से दूर रखना चाहिए।
- इसे गिराएँ नहीं।
- यूनिट को मैकेनिकल कंपन या झटकों से बचाएँ।
- जिस किसी भी क्षेत्र में विशेष नियम के तहत आवश्यक हो, वहाँ फोन बंद कर दें। उदाहरण के लिए, अपने फोन का उपयोग अस्पतालों में न करें, क्योंकि यह संवेदनशील मेडिकल उपकरणों को प्रभावित कर सकता है।
- चार्ज होते समय फोन को गीले हाथों से न पकड़ें। इससे बिजली का झटका लग सकता है और आपके फोन को गंभीर रूप से क्षति हो सकती है।
- हैंडसेट को ज्वलनशील पदार्थों के नजदीक चार्ज न करें, क्योंकि हैंडसेट गर्म हो सकता है और आग के खतरे का कारण बन सकता है।
- यूनिट को बाहर से साफ करने के लिए सूखे कपड़े का उपयोग करें (ब्रेशीन, थिनर, या एल्कोहल जैसे विलायकों का उपयोग न करें)।
- फोन को हल्के साज-सामान पर रख कर चार्ज न करें।
- फोन को अच्छे हवादार क्षेत्र में चार्ज किया जाना चाहिए।
- इस यूनिट को अत्यधिक धुएँ या धूल में न रखें।

सुरक्षित और प्रभावी उपयोग के लिए मार्गदर्शिकाएँ

- फोन को क्रेडिट कार्ड्स या ट्रांसपोर्ट टिकटों के पास न रखें यह चुंबकीय पट्टियों पर अंकित जानकारी को प्रभावित कर सकता है।
- स्क्रीन को नुकीली वस्तु से न ठकठकाएँ, क्योंकि इससे फोन को नुकसान हो सकता है।
- फोन को तरल पदार्थ या नमी में न रखें।
- ईयरफोन जैसे सहायक उपकरण का उपयोग सावधानी से करें। एंटीना को अनावश्यक रूप से न छुएँ।

कार्यकुशल फोन कार्यवाही

इलेक्ट्रॉनिक डिवाइसेज

- बिना अनुमति के अपने मोबाइल फोन का उपयोग मेडिकल उपकरण के पास न करें। फोन को पेसमेकर के पास अर्थात् अपने शर्ट ऊपरी जेब में न रखें।
- मोबाइल फोन द्वारा कुछ श्रवण सुविधाएँ बाधित हो सकती हैं।
- छोटा—सा व्यवधान भी टीवी, रेडियो, पीसी इत्यादि को प्रभावित कर सकता है।

सड़क सुरक्षा

- जिन क्षेत्रों में आप वाहन चलाते हैं, वहाँ मोबाइल फोन के उपयोग से संबंधित कानून और नियमों की जानकारी ले लें।
- वाहन चलाते समय हैंड-हेल्ड फोन का उपयोग न करें।
 - वाहन चलाने पर पूरा ध्यान दें।
 - यदि उपलब्ध हो, तो हैंड्स-फ्री किट का उपयोग करें।
 - यदि वाहन चलाते समय आवश्यक हो, तो कॉल करने या उत्तर देने से पहले वाहन को सड़क के किनारे लगाएँ।
 - RF ऊर्जा आपके वाहन के कुछ इलेक्ट्रॉनिक सिस्टम्स जैसे कार स्टीरियो और सुरक्षा उपकरण को प्रभावित कर सकती है।
 - जब आपका वाहन एयर बैग से सुसज्जित हो, तो इसमें स्थापित या पोर्टेबल वायरलेस उपकरण से बाधा न डालें। इससे एयर बैग विफल हो सकता है या अनुपयुक्त कार्य के चलते गंभीर चोट पहुँचा सकता है।

- यदि आप यात्रा के समय संगीत सुन रहे हैं, तो कृपया सुनिश्चित करें कि वॉल्यूम उचित स्तर पर रहे, जिससे आप अपने चारों ओर के वातावरण के प्रति सचेत रहें। विशेष रूप से सड़कों के पास होने पर यह महत्वपूर्ण होता है।

अपने सुनने की क्षति से बचें

यदि आप लंबे समय तक तेज ध्वनि सुनते हैं तो आपकी सुनने की क्षमता को क्षति पहुँच सकती है। इसलिए हम सलाह देते हैं कि आप कान के पास हैंडसेट को चालू या बंद न करें। हम इसकी भी सलाह देते हैं कि संगीत और कॉल वॉल्यूम उचित स्तर पर सेट हों।

नोट :

ईयरफोन के अधिक ध्वनि दबाव से सुनने की क्षमता को क्षति पहुँच सकती है।

विस्फोटन क्षेत्र

फोन का उपयोग ऐसे स्थान पर न करें जहाँ विस्फोट हो रहे हों। प्रतिबंधों पर ध्यान दें, और नियमों-विनियमों का पालन करें।

संभावित रूप से विस्फोट वाले वातावरण

- ईंधन भरने के स्थान पर फोन का उपयोग न करें।
- ईंधन या रसायनों के पास उपयोग न करें।
- मोबाइल फोन और सहायक उपकरणों को ज्वलनशील गैस, तरल या विस्फोटकों के साथ अपने वाहन में न ले जाएँ या न ही रखें।

विमान में

वायरलेस डिवाइस से एयरक्रॉफ्ट में व्यवधान उत्पन्न हो सकता है।

- किसी भी एयरक्रॉफ्ट में चढ़ते समय अपना मोबाइल फोन बंद कर दें।
- क्रू की अनुमति के बिना विमानतल पर इसका उपयोग न करें।

सुरक्षित और प्रभावी उपयोग के लिए मार्गदर्शिकाएँ

बच्चे

फोन को छोटे बच्चों की पहुँच से दूर किसी सुरक्षित स्थान पर रखें। इसमें छोटे-छोटे भाग होते हैं जो यदि अलग हो जाएँ तो गले में फँस सकते हैं।

आपातकालीन कॉल्स

आपातकालीन कॉल्स सभी मोबाइल नेटवर्क्स के साथ उपलब्ध हो सकती हैं। इसलिए, आपको आपातकालीन कॉल्स के लिए केवल फोन पर ही निर्भर नहीं रहना चाहिए। अपने स्थानीय सेवा प्रदाता से इसकी जानकारी लें।

बैटरी जानकारी और देखभाल

- बैटरी रिचार्ज करने के पहले आपको उसे पूरी तरह डिस्चार्ज करने की आवश्यकता नहीं है। अन्य बैटरी सिस्टम्स के विपरीत, ऐसा कोई मेमोरी प्रभाव नहीं है जिससे बैटरी के प्रदर्शन पर असर पड़ता है।

- केवल LG बैटरियों और चार्जर्स का उपयोग करें। LG चार्जर्स, बैटरी की आयु अधिकतम सीमा तक बढ़ाने के लिए डिज़ाइन किए गए हैं।
- बैटरी पैक को अलग-अलग न करें या उसे शार्ट सर्किट से बचाएँ।
- बैटरी पैक के धातु वाले हिस्सों को साफ रखें।
- बैटरी का प्रदर्शन अपेक्षानुसार न रहने पर उसे बदल दें। बैटरी पैक को सैकड़ों बार रीचार्ज किया जा सकता है, जब तक कि इसे बदलने की आवश्यकता न हो।
- यदि बैटरी को लंबे समय से प्रयोग नहीं किया गया है, तो इसकी उपयोगिता को अधिकतम बढ़ाने के लिए इसे रीचार्ज करें।
- बैटरी को गर्म या ठंडे स्थानों पर न रखें, इससे बैटरी के प्रदर्शन पर बुरा असर हो सकता है।
- यदि बैटरी को गलत प्रकार की बैटरी से बदला जाता है तो विस्फोट का खतरा है।

- उपयोग की गई बैटरियों का निपटान, निर्माता के निर्देशों के अनुसार ही करें. जब भी संभव हो इसे रीसायकल करें. इसे घरेलू कचरे की तरह न फेंकें.
- यदि आपको बैटरी बदलने की आवश्यकता हो, तो सहायता के लिए इसे निकटतम अधिकृत LG Electronics सर्विस पॉइंट या डीलर के पास ले जाएं.
- फोन पूरी तरह चार्ज हो जाने पर चार्जर को वॉल सॉकेट से निकाल दें ताकि चार्जर की अनावश्यक ऊर्जा खपत को बचाया जा सके.
- वास्तविक बैटरी जीवन नेटवर्क कॉन्फिगरेशन, उत्पाद सेटिंग्स, उपयोग पद्धति, बैटरी और वातावरण की परिस्थितियों पर निर्भर करेगा.

सिम कार्ड और हैंडसेट बैटरी स्थापित करना

सिम कार्ड स्थापित करना

जब आप किसी सेल्युलर नेटवर्क की सदस्यता लेते हैं, तो आपको आपकी सदस्यता विवरणों से लोड किया गया एक प्लग-इन सिम कार्ड प्रदान किया जाता है, जैसे आपका पिन, कोई उपलब्ध वैकल्पिक सेवाएँ और अनेक अन्य.

महत्वपूर्ण!

प्लग-इन सिम कार्ड और उसके संपर्क, खरोचनें या मुड़ने से आसानी से खराब हो सकते हैं, इसलिए कार्ड को हैंडल करते समय, डालते और निकालते समय सावधानी रखें. सभी सिम कार्ड छोटे बच्चों की पहुँच से दूर रखें.

- 1 बैटरी कवर निकालें.
- 2 बैटरी बाहर निकालें.
- 3 सिम कार्ड डालें.
- 4 बैटरी पैक डालें.
- 5 बैक कवर संलग्न करें.
- 6 बैटरी चार्ज करें.

मेमोरी कार्ड स्थापित करना


मेमोरी कार्ड स्लट कवर निकालें. मेमोरी कार्ड का गोल्ड संपर्क भाग ऊपर की तरफ़ कर उसे अंदर पुश करें ।

मेमोरी कार्ड निकालने के लिए उसे धीरे से धकेलें ।

उदाहरण

बैटरी निकालने से पहले डिवाइस हमेशा बंद करें और चार्जर डिस्कनेक्ट कर दें.

नोट : मेमोरी कार्ड एक वैकल्पिक सहायक उपकरण हैं ।

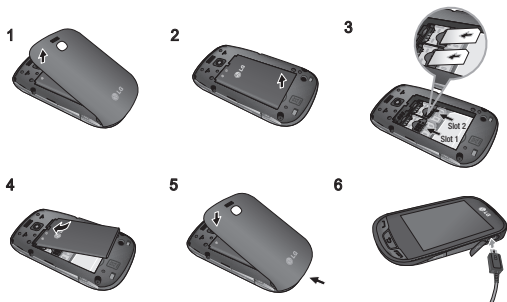

फोन घटक



ईयरपीस

कॉल कुंजी

इससे फोन नंबर डायल किए जाते हैं और आवक कॉल के उत्तर दिए जाते हैं.

साफ कुंजी

किसी पिछली स्क्रीन पर वापस जाने के लिए.

समाप्त कुंजी

- काल समाप्त या रद्द करने के लिए.
- मेनु से अइडल स्क्रीन में वापस जाने के लिए.



वॉल्यूम कुंजियाँ

- जब स्क्रीन होम स्क्रीन पर हो: रिंग टोन और टच टोन वॉल्यूम.
- कॉल के दौरान: इयरपीस वॉल्यूम.
- नीचे वॉल्यूम कुंजी: शांत मोड को सक्रिय/निष्क्रिय करने के लिए दबाकर रखें.

पावर/लॉक कुंजी

- स्क्रीन को चालू/बंद करने के लिए कम दबाएँ.
- पावर चालू/बंद करने के लिए देर तक दबाएँ.



हैंड्सफ्री या स्टीरियो ईयरफोन कनेक्टर

टच स्क्रीन का उपयोग करना

टच स्क्रीन टिप्स

- किसी आइटम का चयन करने के लिए, आइकन के मध्य को टच करें.
- ज्यादा जोर से न दबाएँ. टचस्क्रीन लाइट, फर्म टच को पिक अप करने के लिए अधिक संवेदनशील है.
- आपको जिस विकल्प की आवश्यकता है, उसे टच करने के लिए अपनी अंगुली के टिप का उपयोग करें. सावधान रहें कि अन्य कुंजियाँ टच न हों.
- जब भी आपका LG-T515 उपयोग में न हो, तो यह लॉक स्क्रीन पर वापस चला जाएगा.



स्कॉलिंग

स्कॉल करने के लिए किनारे से किनारे तक खींचें. कुछ स्क्रीनों पर, जैसे कॉल इतिहास सूची, आप ऊपर या नीचे स्कॉल कर सकते हैं.



टच स्क्रीन को नियंत्रित करें

आप जो कार्य कर रहे हैं, उस पर निर्भर करते हुए LG-T515 टच स्क्रीन पर नियंत्रण डायनेमिक रूप से बदलते हैं.

अनुप्रयोग खोलना

कोई अनुप्रयोग खोलने के लिए, केवल इसके आइकन को टच करें.

आपकी होम स्क्रीन


- 1 जब आप नीचे से दायें ओर स्पर्श करते हैं.



- 2 सूची पैनल में जोड़ें दिखाई देगी उसे चुनें.



- 3 संपर्क या विड्जेट्स या शॉर्टकट के बीच में से चयन करें. और आप अपने चुने हुए आइटमों को अपने होम स्क्रीन पर जोड़ सकते हैं.

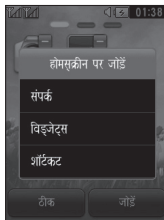

युक्ति! आप एक ही तरह से, तीनों स्क्रीनों को उपयोग कर सकते हैं.

युक्ति! विड्जेट्स डाउनलोड करें: आप डाउनलोड विड्जेट्स लिंक से अलग अलग वर्ग के उपलब्ध विड्जेट्स डाउनलोड कर सकते हैं .

युक्ति! AccuWeather एक विड्जेट है , जहाँ आप किसी भी चयनित शहर के मौसम पर अद्यतन प्राप्त कर सकते हैं.

युक्ति! एस एन एस फीड/एस एन एस स्थिति विड्जेट होम स्क्रीन में जोड़ा जा सकता है। जिसके माध्यम से आप अपने दोस्तों के हाल ही में अद्यतन और स्थिति के जानकारी को प्राप्त कर सकते हैं।

युक्ति! होम स्क्रीन में लाइव स्क्वेर विड्जेट जोड़ा जा सकता है। जिसके माध्यम से आप आसानी से किसी भी जुड़े हुए संपर्क के व्यक्ति को कॉल या संदेश भेज सकते हैं।

आपकी मेनू स्क्रीन

आपको सभी मेनू स्क्रीन में जिसकी आवश्यकता है, उसे स्क्रॉल करने के लिए आप किनारे से किनारे तक खींचें. मेनू स्क्रीन के बीच स्वेप करने के लिए, प्रदर्शन पर बाएँ से दाएँ या दाएँ से बाएँ केवल तीव्रता से वाइप करें.

स्क्रीन 1

आप इस स्क्रीन से संपर्क ,संदेश , वॉइस कॉल, लॉग्स, कैमरा, संगीत, कैलेंडर, अलार्म , मेमो, ब्राउज़र ,गेम्स और एप्लिकेशंस , सेटिंग्स भाग खोल सकते हैं ।



स्क्रीन 2

आप इस स्क्रीन से ई-मेल, SNS, Google, मेरी चीजें,संदेश वाहक, YouTube , गैलेरी, FM रेडियो ,कार्य, प्रोफाइल्स , तिथि खोजक , दोहरा SIM सेटिंग्स भाग खोल सकते हैं ।



स्क्रीन 3

आप इस स्क्रीन से वॉइस रिकॉर्डर ए ब्लूटूथ , Wi-Fi, विश्व घड़ी , कैलकुलेटर , इकाई परिवर्तक , स्टॉपवॉच भाग खोल सकते हैं ।



कुंजीपटल तालिका

ौ	ै	ा	ी	ू	ब	ह	ग	द	ज
औ	ऐ	आ	ई	ऊ	भ	ङ	घ	ध	झ
१	२	३	४	५	६	७	८	९	०




ो	े	्	ि	ु	प	र	क	त	.
ओ	ए	अ	इ	उ	फ	र	ख	थ	।
ॐ	ँ	ॐ				र	क्ष	व	
ओ	ँ					र			

ट	म	न	व	ल	स	ष	य
ठ	ण		ं	ळ	श	ँ	य
			ः		श		

ड	च
ढ	छ

कॉल्स


कॉल करना

- 1 कीपैड को खोलने के लिए  पर टच करें.
- 2 कीपैड का उपयोग करके संख्या लिखें.
- 3 कॉल आरंभ करने के लिए  SIM1 पर टच करें.
SIM2 से कॉल करने के लिए  SIM1 आइकन से फरवर्ड एरो मार्क पर टच करें


युक्ति! अंतर्राष्ट्रीय कॉल करने हेतु + दर्ज करने के लिए 0 दबाए रखें.

गलती से कॉल आरंभ होने से बचने के लिए टचस्क्रीन को लॉक करने हेतु पावर कुंजी दबाएँ.

अपने संपर्कों से कॉल करना

- 1 होम स्क्रीन से संपर्कों को खालेने के लिए  पर टच करें.
- 2 स्क्रीन के शीर्ष पर नाम फील्ड बॉक्स थपथपाएँ और आप जिस


संपर्क को कॉल करना चाहते हैं, कीपैड का उपयोग करते हुए उसके नाम के पहले कुछ अक्षर दर्ज करें.

- 3 फिल्टर की गई सूची से, आप जिस संपर्क को कॉल करना चाहते हैं उसके आगे कॉल आइकन को टच करें. यदि उस संपर्क के लिए एक से अधिक नंबर हुए, तो कॉल डिफॉल्ट नंबर का उपयोग करेगी.
- 4 या आप संपर्क के नाम को टच कर सकते हैं और यदि उस संपर्क के लिए उपयोग करने हेतु एक से अधिक नंबर हैं, तो आप नंबर का चयन कर सकते हैं. डिफॉल्ट नंबर पर कॉल आरंभ करने के लिए भी आप  टच कर सकते हैं.

युक्ति!

सेल्फ कॉल: सेल्फ कॉल एक असली आवक कॉल का नकल करते हैं. सेल्फ कॉल करने के लिए होम स्क्रीन पर # * # दबाएँ. यह कोई शुल्क चार्ज नहीं करता है ।.

कॉल को स्वीकार और अस्वीकार करना

जब आपका फोन रिंग करता है तब आप  कुंजी दबाकर कॉल का उत्तर दे सकते हैं। रिंग को मौन करने के लिए स्क्रीन पर “मौन” टैब को टच करें, यह उपयोगी है अगर आप मीटिंग से पहले प्रोफाइल को मौन करना भूल गए हैं। कॉल निष्क्रिय करने के लिए स्क्रीन पर “अस्वीकार” टैब को टच करें।

सामान्य कॉल सेटिंग में परिवर्तन

- 1 सेटिंग्स मेनू में कॉल सेटिंग टच करें.
- 2 SIM1/SIM2 पर टच करें.
- **कॉल छोड़ें** – स्विच को बाएँ खिसकाकर चालू करें. आप, सभी कॉल्स, संपर्क या समूह या सभी अज्ञात कालर्स, सभी अज्ञात नंबर्स (अर्थात् जो आपकी संपर्क सूची में नहीं हैं) को चुनने के लिए, सूची अस्वीकार करें टच कर सकते हैं।
- **मेरा नंबर भेजें** – चुनें कि आउटगोइंग कॉल पर आपका नंबर प्रदर्शित करें या नहीं.

- **आटो-रीडायल** – स्विच को चालू करने के लिए बाएँ या बंद करने के लिए दाएँ खिसकाएँ.
- **मिनट माइंडर** – कॉल के दौरान प्रत्येक मिनट एक टोन सुनने के लिए स्विच को चालू करने के लिए बाएँ खिसकाएँ.
- **नया नंबर सहेजें** – नया नंबर सहेजने के लिए चालू या बंद का चयन करें.

3 सेटिंग्स मेनू में कॉल सेटिंग टच करें और सामान्य सेटिंग्स पर टच करें.

- **उत्तर मोड**
भेजें कुंजी दबाएँ:  कुंजी, आपको केवल इनकमिंग कॉल का उत्तर देने की अनुमति देता है।
कोई कुंजी दबाएँ:  कुंजी के अलावा कोई भी कुंजी दबाकर, आपको इनकमिंग कॉल का उत्तर देने की अनुमति देता है।
- **BT उत्तर मोड** – ब्लूटूथ हेडसेट के उपयोग से कॉल का उत्तर देने के योग्य होने के लिए हमेशा हैंडसफ्री का चयन करें या कॉल का उत्तर देने हेतु हैंडसेट की दबाने के लिए हमेशा हैंडसेट का चयन करें.

संपर्क

संपर्क खोजना

- 1 संपर्कों को टच करें.
- 2 खोजें टच करें.
- 3 आप संपर्कों की एक सूची देखते हैं. नाम फील्ड में संपर्क नाम का प्रथम अक्षर लिखने पर मेनू को सूची के उस वर्णमाला क्षेत्र पर ले जाएगा.


नया संपर्क जोड़ना

- 1 संपर्कों को टच करें और जोड़ें को टच करें.
- 2 आपकी आंतरिक मेमरी या SIM पर संपर्क सहेजें, चुनें.
- 3 अपना प्रथम और अंतिम नाम दर्ज करें.
- 4 एक संपर्क के साथ आप पांच नंबरों तक दर्ज कर सकते हैं.
- 5 ईमेल पता जोड़ें. आप प्रति संपर्क दो भिन्न ईमेल पते दर्ज कर सकते हैं.
- 6 संपर्क को एक या अधिक समूहों को असाइन करें.

- 7 संपर्क सहेजने के लिए रक्षित करें टच करें.

अपनी संपर्क सेटिंग्स को बदलना

आप अपनी संपर्क सेटिंग्स को अनुकूल बना सकते हैं ताकि आपके संपर्क आपकी अपनी प्राथमिकताओं को सूट करें.

विकल्प कुंजी टच करें  और सेटिंग्स टच करें.

- **नाम दर्शाएँ** – पहले संपर्क का प्रथम या अंतिम नाम प्रदर्शित करें या नहीं, चुनें.
- **कॉपी** – अपने सिम से अपने हैंडसेट में या इसके उलट संपर्कों को कॉपी करें. आप एक समय में एक संपर्क या सभी एक बार में कॉपी कर सकते हैं.
- **स्थानांतरण** – यह कॉपी की तरह कार्य करता है, लेकिन केवल संपर्क नए स्थान पर संग्रहीत किया जाता है. इसलिए, संपर्क को एकबार सिम से आंतरिक मेमोरी पर ले जाए जाने पर उसे सिम मेमोरी से हटा दिया जाएगा.




- **ब्लूटूथ द्वारा सभी संपर्क भेजें** – ब्लूटूथ द्वारा सभी संपर्कों को अन्य हैंडसेट पर भेजता है.
- **संपर्क का बैकअप लें / संपर्क की पूर्वावस्था को प्राप्त करें** – संपर्कों का डेटा अन्य संग्रहण पर सहेजें या पुनर्स्थापित करें.
- **सभी संपर्क हटाएँ** – अपने सभी संपर्कों को हटाएँ. यदि आप सुनिश्चित हैं कि आप अपने सभी संपर्कों को हटाना चाहते हैं तो हाँ टच करें.

युक्ति: LG कस्टमर केयर का नंबर पहले से ही संपर्क लिस्ट में उपलब्ध है (18001809999).

संदेश भेजना

आपका LG-T515, SMS और MMS को एक सहज और आसानी से उपयोग किए जाने वाले मेनू में संयुक्त करता है.

संदेश भेजना

- 1 मेनू में संदेश को टच करें और नया संदेश लिखना शुरू करने के लिए, संदेश लिखें टच करें.
- 2 चित्र, वीडियो, ध्वनि, टेम्पलेट और इत्यादि जोड़ने के लिए, सम्मिलित टच करें.
- 3 प्राप्तकर्ताओं को दर्ज करने के लिए स्क्रीन के ऊपरी हिस्से में, का पर टच करें. संपर्क का चयन करने के लिए नंबर दर्ज करें या  टच करें. आप एकाधिक संपर्क भी जोड़ सकते हैं.
- 4 तैयार होने पर  टच करें. SIM2 से संदेश भेजने के लिए  आइकन से फरवर्ड एरो मार्क पर टच करें

⚠ चेतावनी: यदि चित्र, वीडियो या ध्वनि SMS पर जोड़े जाते हैं, तो वे स्वचालित रूप से MMS पर कनवर्ट किए जाएंगे और आपको उसी के अनुसार शुल्क देना होगा.

युक्ति!


उपयोगकर्ता संपादक से चयनित पाठ की प्रतिलिपि बनाकर और किसी अन्य संपादक में उसको पेस्ट कर सकते हैं।


उदाहरण स्वरूप : संदेश संपादक में जाकर कुछ पाठ टाइप करें। पाठ के ऊपर स्क्रॉल करके उस पाठ का चयन करें, जिसका आप प्रतिलिपि बनाना चाहते हैं। आप अब पाठ जहाँ पेस्ट करना चाहते हैं, उस बिंदु पर कर्सर रखें और विकल्प में जाकर पेस्ट चुनें, ताकि प्रतिलिपि किए गए पाठ पेस्ट हो सकें।


नोट :

स्पैम संदेश : कोई नंबर या विशिष्ट शब्द देकर , आप अनावश्यक संदेशों को ब्लॉक कर सकते हैं और वही सारे संदेश स्पैम बॉक्स फोल्डर में संग्रहीत हो जाएंगे .

पाठ दर्ज करना

आप  पर टैपिंग और निवेष्टन विधि द्वारा अपनी निवेष्टन विधि चुन सकते हैं.


टच करें  T9 मोड चालू करने के लिए. यह आइकन केवल तभी दिखाया जाता है, जब आप कीपैड को निवेष्टन विधि के रूप में चुनते हैं.

टच करें  नंबरर्स, प्रतीकों और पाथ इनपुट के बीच बदलने के लिए.

SHIFT कुंजी का उपयोग करें, कैपिटल या लोअरकेस इनपुट के बीच बदलने के लिए.

अपनी ईमेल सेट करना

स्क्रीन 2 में ई-मेल टच करें.

यदि ईमेल खाता सेट नहीं है, तो ईमेल सेटअप विजार्ड प्रारंभ करें और समाप्त करें. चयन करने के द्वारा आप सेटिंग्स की जाँच और संपादन कर सकते  हैं.

आप स्वचालित रूप से आपके द्वारा खाता बनाए जाने पर भरी गई अतिरिक्त सेटिंग्स भी जाँच सकते हैं.

नोट :

अकाउन्ट बनाने के बाद सेटिंग्स -> पुनश्चर्या -> मात्रा दिखाएँ पर जाएँ।

इस स्क्रीन पर 3 विकल्प दिखेंगे और उपयोगकर्ता कोई भी एक का चयन कर सकते हैं। अपने आप सिर्फ 25 संदेश दिखेंगे। अगर आप ज्यादा ई-मेल देखना चाहते हैं तो इसी मेनु से आप संख्या 50 या 100 कर सकते हैं

अपनी पाठ संदेश सेटिंग्स परिवर्तित करना

संदेशों को टच करें और सेटिंग्स टच करें. चयन करें पाठ्य संदेश.

संदेश केन्द्र – अपने संदेश केन्द्र के विवरण दर्ज करें.

डेलिवरी रिपोर्ट – यह पुष्टिकरण प्राप्त करने के लिए स्विच को बाएँ खिसकाएँ कि आपके संदेश डेलिवर हो गए हैं.

मान्यता अवधि – चुनें, संदेश केंद्र पर आपके संदेश कितने समय तक संग्रहीत रहते हैं.

संदेश प्रकार – अपने पाठ्य को पाठ्य, वाइस, .फ़ैक्स, x.400 या ई-मेल में कनवर्ट करें.

वर्ण एन्कोडिंग – चुनें, आपके वर्ण कैसे एनकोडेड किए जाते हैं. इससे आपके संदेशों का आकार और फलतः डेटा शुल्क प्रभावित होता है.

लंबे संदेशों को इस रूप में भेजें – बड़े संदेशों को एकाधिक SMS या MMS के रूप में भेजना चुनें.

अपनी मल्टीमीडिया संदेश सेटिंग्स परिवर्तित करना

संदेशों को टच करें और, सेटिंग्स और मल्टीमीडिया संदेश टच करें.

पुनर्प्राप्ति मोड – घरेलू तंत्र या रोमिंग तंत्र के बीच चुनें. यदि आप चुनते हैं मैन्युअल, तो आप केवल MMS की सूचनाएँ प्राप्त करेंगे और आप फिर निर्णय कर सकते हैं उन्हें पूरे में डाउनलोड करें या नहीं.

डेलिवरी रिपोर्ट – अनुरोध और/या डेलिवरी रिपोर्ट की अनुमति दें, चुनें.

प्राप्ति पढ़ना – अनुरोध और/या उत्तर की अनुमति दें, चुनें.

प्राथमिकता – अपने MMS का प्राथमिकता स्तर चुनें.

मान्यता अवधि – चुनें कि आपका संदेश कब तक संदेश केंद्र में संग्रह किया जाना है.

स्लाइड की अवधि – आपकी स्लाइड्स स्क्रीन पर कब तक प्रकट रहेंगी, चुनें.

असमर्थित संलग्नक – असमर्थित संलग्नक प्रतिबंधित है या नहीं, चुनें.

वितरण समय – संदेश वितरण किए जाने से पहले कब तक प्रतीक्षा करें, चुनें.

मल्टीमीडिया संदेश केंद्र – सूची से एक चुनें या एक नया संदेश केंद्र जोड़ें.

नोट :

जानकारी सेवा को केवल सिम1 के लिए उपयोग किया गया है ।

युक्ति!

उपयोगकर्ता एक समय में कई संपर्कों को एसएमएस भेज सकते हैं । उपयोगकर्ता संपर्कों का चयन/अचयन कर के संदेश भेज सकते हैं। केवल 20 संपर्क चयन कर सकते हैं, अगर उपयोगकर्ता " सभी चुनें " चयन करते हैं तो केवल पहले 20 संपर्क चिन्हित होंगे । किसी विशेष समूह को एसएमएस भेजने के लिये भेजें विकल्प से 'समूह' विकल्प चुनें और ठीक दबाएँ ।

नोट :

इनबॉक्स के संदेश तक आसानी से पहुंचने के लिए, दिए गए सॉर्टिंग विकल्पों (से क्रमबद्ध करें) के साथ सॉर्ट किया जा सकता है (दिनांक, प्रेषक, पढ़ा गया/न पढ़ा गया)।

नोट :

खेद संदेश: इनकमिंग कॉल के दौरान खेद संदेश पर क्लिक करके एक पूर्वनिश्चित मैसेज SMS के रूप में भेजा जा सकता है।

संदेश वाहक

यह MSN चैट अनुप्रयोग प्रदान करता है। आप अपने MSN खाते के साथ लॉग इन कर सकते हैं।

सामाजिक नेटवर्क सेवाएँ (SNS)

आपके LG-T515 में SNS है, जो आपको आपके सामाजिक नेटवर्क का आनंद लेने और उसे प्रबंधित करने देता है।

नोट: SNS सुविधा एक डेटा

प्रधान अनुप्रयोग है। ऑनलाइन सेवाएँ कनेक्ट करने और उपयोग करते समय, अतिरिक्त शुल्क लग सकता है। अपने नेटवर्क प्रदाता से अपना डेटा शुल्क जाँचें।

युक्ति!

Facebook, और Twitter जावा अनुप्रयोग है जो जावा तकनीक पर आधारित है।

नोट:

SNS अनुप्रयोग उपयोग करने से पहले कृपाया सुनिश्चित करें कि स्वतः अधतम चालु हैं।

Facebook (जारी SNS)

होम: लॉग इन करें और आप अपने मित्र की अद्यतन स्थिति देखेंगे. नई स्थिति के बारे में अपनी टिप्पणी इनपुट करें या अन्य की जाँच करें.

प्रोफाइल: आप वॉल > स्थिति अपडेट का चयन कर सकते हैं और वर्तमान स्थिति लिखें. अपनी जानकारी विवरण देखें और एल्बम टच कर फोटो अपलोड करें > फोटो अपलोड करें.

मित्र: खोज टैप का चयन कर facebook में अपने मित्र खोजें.

संदेश: आप इनबॉक्स/भेजें फोल्डर देख सकते हैं ।

Twitter

एक समाजिक नेटवर्किंग सेवा है जो उपयोगकर्ताओं को अन्य उपयोगकर्ताओं के संदेश भेजने और पढ़ने के लिए उपयोग होता है इसे tweets कहते हैं।

गेम्स और एप्लिकेशंस

आप आनंद लेने के लिए, अपने फोन पर नए खेल और सुविधायें डाउनलोड कर सकते हैं ।

यदि आप कोई भी अतिरिक्त गेम या सुविधायें डाउनलोड करना चुनते हैं, तो वे इस फोल्डर में सहेजे जाएँगे. सुविधायें

मेनू दबाएँ ए गेम्स और एप्लिकेशंस से सुविधायें का चयन करें.


NewsHunt

राह में होने पर भी क्षेत्रीय में न्यूज़पेपर्स देखने और पढ़ने हेतु सक्षम किए जाने के लिए डिज़ाइन किया गया एक मोबाइल अनुप्रयोग हैं ।

नोट: ये अनुप्रयोग उपयोग करने से पहले कृपाया सुनिश्चित करे कि स्वतः अधतम चालु हैं ।

कैमरा

तुरंत फोटो लेना

- 1 कैमरा मेनू टच करें.
- 2 जब कैमरे का फोकस आपकी वस्तु पर हो, तो फोटो लेने के लिए स्क्रीन के दाएँ-केंद्र पर  को टच करें.

युक्ति: कैमरा मोड या वीडियो मोड पर स्विच करने के लिए, व्यूफाइंडर के दाएँ-केंद्र में कैमरा या वीडियो आइकन को ऊपर/नीचे खिसकाएँ.

फोटो लेने के बाद

आपके द्वारा कैप्चर किया गया फोटो स्क्रीन पर प्रकट होगा.

निम्न विकल्प उपलब्ध हैं.

टच .

भेजें – फोटो को संदेश, ईमेल के रूप में या ब्लूटूथ द्वारा भेजने के लिए टच करें.

ऐसे सेट करें – स्क्रीन छवि

(मुखपृष्ठ स्क्रीन वॉलपेपर, लॉकस्क्रीन वॉलपेपर, संपर्क छवि) सेट करने के लिए टच करें.

अपलोड – फोटो अपलोड करने के लिए टच करें.

संपादित करें – फोटो संपादित करने के लिए टच करें.



छवि हटाने के लिए टच करें.




तुरंत एक अन्य फोटो लेने के लिए टच करें.



आपकी सहेजी गई फोटो की गैलरी देखने के लिए टच करें.

उन्नत सेटिंग्स का उपयोग करना

व्यूफाइंडर से, सभी उन्नत सेटिंग्स विकल्प खोलने के लिए  टच करें.

विकल्प का चयन करने के बाद, ठीक बटन टच करें.

आकार – मेमोरी बचाने के लिए फोटो का आकार बदलें.

व्हाइट बैलेंस – ऑटो, उद्दीप्त, धूप, प्रतिदीप्त और मेघाच्छादित के बीच चुनें.

रंग प्रभाव – अपनी नई फोटो के लिए एक रंग टोन चुनें.

शॉट जारी – व्यूफाइंडर में वस्तु को उपयुक्त स्थिति में रखें, यदि सामान्य फोटो लेनी है, तो फिर कैप्चर बटन दबाएँ. कैमरा तुरंत अनुक्रम में शॉट लेगा.

सेल्फ-टाइमर – सेल्फ-टाइमर, शटर दबाने के बाद आपको विलंब सेट करने की अनुमति देता है. 3 सेकंड, 5 सेकंड या 10 सेकंड में बंद का चयन करें. यदि आप फोटो में शामिल होना चाहते हैं, तो यह उपयुक्त है.

नाइट मोड – उपयोगकर्ता के लिए अंधेरे स्थानों में उपयोगी है।

संग्रह चुनें – अपनी फोटोज हैंडसेट मेमोरी या बाह्य मेमोरी में सहेजने के लिए चुनें।

कैप्चर की गई छवि दिखाएँ – आपने चित्र सही तरीके से लिया है, जांचने के लिए चालू करें।


शटर ध्वनि – शटर ध्वनि को ऑन या ऑफ करें।


सेटिंग्स रीसेट करें – सभी डिफॉल्ट कैमरा सेटिंग्स को पुनर्स्थापित करें।




वीडियो कैमरा

तुरंत वीडियो बनाना

कैमरा मोड या वीडियो मोड पर स्विच करने के लिए, व्यूफाइंडर के दाएं केंद्र में कैमरा या वीडियो आइकन को ऊपर/नीचे स्लाइड करें।


- 1 फोन को क्षैतिज रूप से पकड़ कर, लेंस को वीडियो के विषय पर केंद्रित करें।
- 2 लाल बिंदु दबाएं .
- 3 व्यूफाइंडर के नीचे टाइमर के साथ

वीडियो की लंबाई दिखाते हुए  Rec दिखाई देगा।

- 4 वीडियो को विराम देने के लिए,  का चयन करते हुए  टच करें और दुबारा शुरू करें।
- 5 खत्म करने के लिए स्क्रीन पर टच  करें।

वीडियो बनाने के बाद


स्क्रीन पर आपके कैप्चर किए गए वीडियो को प्रस्तुत करने वाली एक स्थिर छवि प्रकट होगी। स्क्रीन के नीचे बाईं और दाईं ओर आइकन्स के साथ वीडियो का नाम चलता है।

 वीडियो चलाने के लिए टच करें।

निम्न विकल्प उपलब्ध हैं।

टच कर .


भेजें – वीडियो को संदेश, ईमेल के रूप में या ब्लूटूथ के माध्यम से भेजने के लिए टच करें।

 आपने अभी जो वीडियो बनाया है, उसे हटाने के लिए टच करें और हाँ टच कर पुष्टि करें। व्यूफाइंडर पुनः प्रकट होगा।

● तुरंत एक अन्य वीडियो शूट करने के लिए टच करें. आपका वर्तमान वीडियो सहेजा जाएगा.

🖼 सहेजे गए वीडियोज और छवियों की गैलरी देखने के लिए टच करें.

उन्नत सेटिंग्स का उपयोग करना

ब्यूफाइंडर से, सभी उन्नत सेटिंग्स विकल्प खोलने के लिए  टच करें. आप व्हील को स्क्रॉल करते हुए वीडियो कैमरा सेटिंग्स बदल सकते हैं. विकल्प का चयन करने के बाद, ठीक बटन टच करें.

रंग प्रभाव – अपने नए व्यू के लिए उपयोग करने हेतु रंग टोन चुनें.

व्हाइट बैलेंस – व्हाइट बैलेंस सुनिश्चित करता है कि आपके वीडियो में कोई भी व्हाइट क्षेत्र वास्तविक है. अपने कैमरे का व्हाइट बैलेंस सही रूप से समायोजित करने के लिए सक्षम करने हेतु, आपको प्रकाश परिस्थितियों को निर्धारित करने की आवश्यकता हो सकती है. ऑटो, उद्दीप्त, धूप, प्रतिदीप्त और मेघाच्छादित के बीच चुनें.

अवधि – अपने वीडियो के लिए अवधि सीमा सेट करें. MMS संदेश के रूप में भेजने के लिए अधिकतम आकार सीमा हेतु सामान्य और MMS के बीच चुनें.

संग्रह चुनें – चुनें कि आपके वीडियोज हैंडसेट मेमोरी में सहेजने हैं या बाह्य मेमोरी में.

सेटिंग्स रीसेट करें – वीडियो कैमरा की सभी सेटिंग्स को रीसेट करें.

संगीत

म्यूजिक प्लेयर तक पहुंच ने के लिए, टच करें संगीत. यहां से आप अनेक फोल्डर्स तक पहुंच सकते हैं.

हाल ही में चलाया गया – आपके द्वारा हाल ही में चलाए गए गाने चलाता है.

सभी ट्रैक्स – इसमें पहले से लोड डिफॉल्ट संगीत को छोड़ कर वे सभी गाने होते हैं, जो आपके फोन में हैं.

कलाकार – संगीत संग्रह में कलाकार के अनुसार ब्राउज करता है.

एल्बम्स – आपके संगीत संग्रह को एल्बम के अनुसार ब्राउज करता है.

विद्या — आपके संगीत संग्रह में विद्या के अनुसार ब्राउज करता है.

प्लेलिस्ट — इसमें आपके द्वारा बनाई गई सभी प्लेलिस्ट्स होती हैं.

ट्रैक्स शफल करें — आपके ट्रैक्स को आकस्मिक क्रम में चलाता है.

अपने फोन पर संगीत

स्थानांतरित करना

संगीत को अपने फोन पर स्थानांतरित करने का सबसे आसान तरीका ब्लूटूथ या डेटा केबल के माध्यम से करना है.

ब्लूटूथ का उपयोग करते हुए संगीत स्थानांतरित करने के लिए:

- 1 सुनिश्चित करें कि दोनों डिवाइसेज पर ब्लूटूथ स्विच ऑन हो और वे एक-दूसरे से कनेक्ट हों.
- 2 अन्य डिवाइस पर संगीत फाइल का चयन करें और ब्लूटूथ के माध्यम से भेजने का चयन करें.
- 3 जब फाइल भेजी जाती है, तो आपको इसे अपने फोन पर हां टच करते हुए स्वीकार करना होगा.


- 4 फाइल संगीत > सभी ट्रैक्स में प्रकट होनी चाहिए.

फाइलें प्रबंधित करना


आप अपनी फोन मेमोरी में मल्टीमीडिया फाइलों को संग्रहित कर सकते हैं, ताकि आप अपने सभी चित्रों, ध्वनियों, वीडियोज और गेम्स तक आसानी से पहुंचें. आप अपनी फाइलों को मेमोरी कार्ड में भी सहेज सकते हैं. मेमोरी कार्ड का उपयोग करना, आपको, आपके फोन की मेमोरी में स्पेस मुक्त करने की अनुमति देता है.

मेरी चीजें टच कर, आप उन फोल्डर्स की सूची खोल सकते हैं, जिनमें आपकी सभी मल्टीमीडिया फाइलें संग्रहित होती हैं.

सुझाव! गुप्त बॉक्स

आप गुप्त डेटा जोड़ सकते हैं। आपको अपनी गुप्त डेटा गोपनीयता सुरक्षित करने हेतु यह मेनू उपयोग करने के लिए सुरक्षा कोड दर्ज करने की आवश्यकता है। आपके डेटा छिपाने के लिए निम्न चरण पर जाएँ।  > स्क्रीन 2 > मेरी चीजें > कोई भी छवि, ध्वनि या कोई भी फाइल >  > गुप्त बॉक्स में भेजें पर जाएँ

सुझाव: उपयोगकर्ता कोई SMS

शेड्यूल कर सकते हैं, ताकि विकल्प सूची से यह सेट की गई दिनांक और सेट किए गए समय पर पहले से निर्धारित नंबर/संपर्क को भेजा जा सके। निम्न चरण पर जाएँ। (कैलेंडर >  > नया शेड्यूल सन्देश)

अनुप्रयोग

अपने कैलेंडर पर इवेंट जोड़ना

- 1 कैलेंडर टच करें।
- 2 आप उस दिनांक का चयन करें, जिस पर आप इवेंट जोड़ना चाहेंगे।
- 3 जोड़ें टच करें।

अपना अलार्म सेट करना

- 1 अलार्म टच करें।
- 2 टच करें जोड़ें, फिर आप इस मेनू में अपना अलार्म सेट और सहेज सकते हैं

वॉइस रिकॉर्डर

स्क्रीन 3 में वॉइस रिकॉर्डर टच करें। वॉइस मेमोज या अन्य ऑडियो फाइलों को रिकॉर्ड करने के लिए अपना वॉइस रिकॉर्डर उपयोग करें।

अपने कैलकुलेटर का उपयोग करना

- 1 स्क्रीन 3 में कैलकुलेटर टच करें।
- 2 संख्याएँ दर्ज करने के लिए संख्या कुंजियों को टच करें।

इकाई कनवर्ट करना

- 1 स्क्रीन 3 में इकाई परिवर्तक टच करें.
- 2 चुनें कि आप मुद्रा, क्षेत्र, लंबाई, भार, तापमान, वॉल्यूम या वेग कनवर्ट करना चाहते हैं.
- 3 फिर इकाई का चयन करें और वह मान दर्ज करें, जिससे आप कनवर्ट करना चाहेंगे.

PC सूट

आप अपने PC को अपने फोन के साथ सिंक्रनाइज कर सकते हैं. यह आपके सभी महत्वपूर्ण विवरण और दिनांक का मिलन सुनिश्चित करेगा और एक बैकअप के रूप में भी कार्य करेगा ताकि आप निश्चित रह सकें

नोट: प्रदान किए गए CD उपयोग करके PC सुइट इंस्टाल करें एवं इंस्टालेशन गाइड का पालन करें

चेतावनी: आप अपने फोन को स्थानांतरित के दौरान डिस्कनेक्ट ना करें

नोट: ऑन - स्क्रीन फोन :

ऑन - स्क्रीन फोन , आपको आपको मोबाइल फोन के स्क्रीन को USB या ब्लूटूथ कनेक्शन के माध्यम से PC में देखने की अनुमति देता है.

वेब

ब्राउजर सीधे आपके फोन पर तेज, गेम्स, संगीत, समाचार, खेल, मनोरंजन और अधिक की पूर्ण रंग दुनिया देता है. चाहें आप कहीं भी हों और कुछ भी कर रहे हों.

वेब तक पहुँच प्राप्त करना

- 1 ब्राउजर टच करें.
- 2 सीधे ब्राउजर के होम पृष्ठ पर जाने के लिए, होम का चयन करें. वैकल्पिक रूप से, चयन करें पता दर्ज करें और कनेक्ट करने के बाद URL में लिखें.

नोट: इन सेवाओं से कनेक्ट करने और सामग्री डाउनलोड करने पर आपको अतिरिक्त शुल्क लगेगा. अपने नेटवर्क प्रदाता से डेटा शुल्क जाँचें.

Google सर्विस तक पहुंचना

Google खोज अनुप्रयोग खोलने के लिए "Google" पर टच करें।

डुअल सिम

(मेनू > स्क्रीन 2 > दोहरा SIM सेटिंग्स) – जब आप दो सिम-कार्ड डालते हैं तो स्क्रीन के ऊपरी-बाएँ तरफ दो नेटवर्क सिग्नल आइकन देख सकते हैं।

जब दो SIM कार्ड्स स्थापित हों, तो आप दो में से एक या दोनों SIM कार्ड्स को सक्रिय / निष्क्रिय कर सकते हैं।

अपने प्रोफाइल को व्यक्तिगत रूप देना

आप स्क्रीन 2 से प्रोफाइल्स के उपयोग से, प्रत्येक प्रोफाइल सेटिंग को व्यक्तिगत बना सकते हैं।

- 1 प्रोफाइल्स टच करें।
- 2 वह प्रोफाइल चुनें, जिसे आप संपादित करना चाहते हैं।
- 3 आप फिर सूची में उपलब्ध सभी ध्वनियाँ और अलर्ट विकल्प बदल सकते हैं, साथ ही अपनी ध्वनि

और वॉल्यूम, संदेश टोन सेटिंग्सए समय सेटिंग और अधिक.


नोट: टाइमड प्रोफाइल: (मेनू > स्क्रीन 2 > प्रोफाइल्स > कोई भी प्रोफाइल को टच करें > नीचे स्कल कर समय सेटिंग चुनें) आवश्यक प्रोफाइल को पूर्वनिर्धारित समय पर स्वचालित रूप से सेट कर सकते हैं।

उदाहरण स्वरूपरू यदि उपभोक्ताकर्ता हैंडसेट प्रोफाइल को 2:00~3:00 बजे तक मौन चाहते हैं तो समय और उस समय सीमा के लिए प्रोफाइल को मौन के रूप में चुनें।

सेटिंग्स


अपने फोन की सेटिंग्स बदलना

अपनी स्वयं की प्राथमिकताओं के लिए, LG-T515 रूपान्तरित करने की स्वतंत्रता का उपयोग करें.

होम स्क्रीन से,  का चयन करें, फिर सेटिंग्स का चयन करें और डिवाइस सेटिंग्स पर स्क्रॉल करें.

युक्ति!

एंटी थेक्ट मोबाइल ट्रेकर :

 > सेटिंग्स > डिवाइस
सेटिंग्स > सुरक्षा > एंटी थेक्ट
मोबाइल ट्रेकर

ATMT आपका खोया हुआ फोन ट्रेक करने की सुविधा देता है । जब कोई आप की अनुमति के बिना आपके फोन का उपयोग करता है तो ट्रेकिंग सेवा सक्रिय हो जायेगी । आपको इस अनाधिकृत उपयोगकर्ता को बताए बिना सेट किए गए डिफॉल्ट फोन नंबर पर भेजे गए पाठ संदेश द्वारा याद दिलाया जाता है । आप हमेशा ATMT का सक्रिय कर सकते हैं और अपनी व्यक्तिगत सेटिंग कन्फिगर करें । डिफॉल्ट ATMT कोड 0000 है । ATMT पाठ संदेश : चोरी फोन IMEI वर्तमान स्थान और व्यक्ति की नंबर जो कि हैंडसेट इस्तेमाल कर रहा है उसके बारे में जानकारी देता है.

संकट संदेश सेवा सेटिंग

यह SOS मोड सक्षम करता है. सक्षम करने के बाद लॉक स्क्रीन में यदि आप डाउन वॉल्यूम कुंजी को चार बार तक दबाते हैं, तो SOS संदेश भेजा जाता है और फोन SOS मोड में रहेता है ।

असाइन किए गए प्राप्तकर्ताओं को SOS संदेश भेजा जाता है और उनके इनकमिंग कॉल स्वचालित रूप से स्वीकार किए जाते हैं. सभी सूचना ६ वनि म्यूट किए जाएंगे. SOS मोड से बाहर निकलने के लिए, होमस्क्रीन में समाप्ति कुंजी दबाएँ.

अपनी संयोजकता सेटिंग्स

बदलना

आपकी संयोजकता सेटिंग्स, आपके नेटवर्क ऑपरेटर के द्वारा पहले ही सेट कर दी गई है, ताकि आप अपने नए फोन का आनंद तुरंत ले सकें. कोई सेटिंग्स बदलने के लिए, इस मेनू का उपयोग करें:

संयोजकता टच करें.

ब्लूटूथ का उपयोग करके अपनी फाइलें भेजना या प्राप्त करना.

भेजने के लिए:

- 1 उस फाइल को खोलें जिसे आप भेजना चाहते हैं, विशिष्ट रूप से यह कोई फोटो, वीडियो या संगीत फाइल होगी.
- 2 भेजें चुनें. ब्लूटूथ चुनें.
- 3 यदि आपने पहले से ब्लूटूथ डिवाइस युग्मित किया है, तो आपका LG-T515 स्वचालित रूप से अन्य ब्लूटूथ डिवाइसेज नहीं खोजेगा. यदि नहीं, तो आपका LG-T515 सीमा के अंदर अन्य ब्लूटूथ सक्षम किए डिवाइसेज खोजेगा.
- 4 वह डिवाइस चुनें, जिस पर आप फाइल भेजना चाहते हैं.
- 5 आपकी फाइल भेजी जाएगी.

फाइल प्राप्त करने के लिए:

- 1 फाइलें प्राप्त करने के लिए, आपका ब्लूटूथ चालू और दृश्यमान, दोनों होना आवश्यक है. अधिक जानकारी के लिए नीचे देखें अपनी ब्लूटूथ सेटिंग्स बदलना.

- 2 आपको प्रेषक की ओर से फाइल स्वीकार करने के लिए एक संदेश द्वारा संकेत मिलेगा. फाइल प्राप्त करने के लिए हाँ टच करें.
- 3 आप देखेंगे, फाइल कहाँ सहेजी गई है. छवि फाइलों के लिए, आप फाइल देखने या वॉलपेपर के रूप में उपयोग करना चुन सकते हैं. सामान्यतः फाइलें उचित फोल्डर में मेरी चीजें पर सहेजी जाएँगी.

युक्ति!

- 1 जब आप विडियो प्ले करेगे तब ब्लूटूथ हेडसेट, A2DP और AVRCP का प्रयोग नहीं कर सकते हैं. यानि विडियो के ध्वनि ब्लूटूथ हेडसेट से नहीं सुन सकते.
- 2 कुछ अनुप्रयोगों के अंतर्गत ब्लूटूथ फाइल स्थानांतरित समारोह बंद हो जाएगा. (जैसे की वोइस कॉल, कैमेरा, म्यूजिकप्लेयर, UMS/PC Sync)

ब्लूटूथ सेटिंग्स बदलना :

ब्लूटूथ टच करें फिर विकल्प और सेटिंग्स टच करें।

किसी अन्य ब्लूटूथ डिवाइस से युग्मित करना

अपना LG-T515 और अन्य डिवाइस युग्मित कर, आप पासकोड रक्षित कनेक्शन सेट कर सकते हैं।

- 1 जाँचे कि आपका ब्लूटूथ चालू और दृश्यमान है. सेटिंग्स में नू में आप अपनी दृश्यता बदल सकते हैं.
- 2 खोजें टच करें.
- 3 आपका LG-T515 डिवाइस खोजेगा. जब खोज पूर्ण हो जाती है, ताजा करें स्क्रीन पर प्रकट होगा.
- 4 वह डिवाइस चुनें, जिसके साथ आप युग्म करना चाहते हैं और पासकोड दर्ज करें, फिर टच करें ठीक.
- 5 आपका फोन फिर अन्य डिवाइस से कनेक्ट होगा, जिस पर आपको वही पासकोड दर्ज करने की आवश्यकता होगी.
- 6 अब आपका पासकोड रक्षित ब्लूटूथ कनेक्शन तैयार है.

Wi-Fi

वायरलेस प्रबंधक आपको अनुमति देता है कि आप इंटरनेट कनेक्शन का प्रबंधन अपने फोन के Wi-Fi (वायरलेस लैन) में उपयोग कर सकते हैं ।

यह फोन स्थानीय वायरलेस नेटवर्क से कनेक्ट करने के लिए या इंटरनेट को बिना वायर के उपयोग करने की अनुमति देता है । Wi-Fi तेज है और इसकी सीमा ब्लूटूथ वायरलेस तकनीक से भी ज्यादा है । यह तेजी से ई-मेल और इंटरनेट ब्राउजिंग की अनुमति देता है ।

नोट: LG-T515 WEP और WPA/WPA2-PSK सुरक्षा का समर्थन करता है. यदि आपके Wi-Fi सेवा प्रदाता या नेटवर्क व्यवस्थापक नेटवर्क सुरक्षा के लिए एन्क्रिप्शन सेट करे, तो आप पॉप अप विंडो में कुंजी को भरें । अगर एन्क्रिप्शन सेट नहीं है, तो पॉप अप विंडो दिखाई नहीं देगा । आप अपने Wi-Fi सेवा प्रदाता या नेटवर्क व्यवस्थापक से कुंजी प्राप्त कर सकते हैं ।

सॉफ्टवेयर नवीनीकरण

फोन सॉफ्टवेयर नवीनीकरण

LG मॉबाइल फोन सॉफ्टवेयर नवीनीकरण प्रोग्राम

इस प्रोग्राम को स्थापित और उपयोग करने की अधिक जानकारी के लिए, कृपया : <http://update.lgmobile.com>. और <http://www.lg.com/common/index.jsp> . पर जाएँ → देश चयन करें . यह सुविधा आपको हमारे सेवा केंद्र पर जाए बिना आपके सॉफ्टवेयर को इंटरनेट पर जल्दी और आसानी से नवीनतम संस्करण में नवीनीकृत करने की अनुमति देता है । जैसे की मॉबाइल फोन में सॉफ्टवेयर अपडेट होता रहता है उस वक्त उपयोगकर्ता का पूरा ध्यान रहना चाहिए , कृपया आगे बढ़ने से पहले सभी निर्देशों और नोट को अच्छी तरह जाँच लें. कृपया ध्यान रखें कि नवीनीकरण के दौरान यूएसबी या डाटा केबल को निकालने से आपके फोन का गंभीर रूप से नुकसान हो सकता है

सहायक उपकरण

आपके मोबाइल फोन के लिए विभिन्न सहायक उपकरण हैं। आप इन विकल्पों का अपनी व्यक्तिगत संचार आवश्यकताओं के अनुसार चयन कर सकते हैं।

चार्जर



स्टीरियो
हेडसेट



बैटरी



डेटा केबल
और सीडी



नोट

- हमेशा प्रामाणिक LG सहायक उपकरणों का उपयोग करें।
- ऐसा नहीं करने पर आपकी वॉरंटी अमान्य हो सकती है।
- सहायक उपकरण विभिन्न क्षेत्रों में भिन्न हो सकते हैं।

तकनीकी डेटा

परिवेशी तापमान

अधिकतम: +55°C (डिस्चार्जिंग) +45°C (चार्जिंग)

न्यूनतम: -10°C

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band Terminal Equipment

Model Name

LG-T515

Trade Name

LG

CE 0168 !

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.8.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v2.1.1

EN 300 328 v1.7.1

EN 60950-1:2006+A11:2009

EN 50360:2001 / AC:2006

EN 62209-1:2006 / EN 62209-2:2010

EN 301 511 v9.0.2

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom

Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards, regulation and directives

LG Electronics Inc. - EU Representative
Veluwezoom 15, 1327 AE Almere, The Netherlands

Name

Doo Haeng Lee / Director

Issued Date

25, May, 2011

Signature of representative



CHOLAMANDALAM MS GENERAL INSURANCE CO. LTD.
Delhi Regional Office Plot no. 6, First Floor,Opp.
HP Petrol Pump, Near Metro Pillar No. 81
Pusa Road, Delhi - 110005

TO

CHOLAMANDALAM MS GENERAL
INSURANCE CO. LTD.
Delhi Regional Office Plot no. 6,
First Floor,Opp. HP Petrol Pump,
Near Metro Pillar No. 81 Pusa Road,
Delhi - 110005

DATE...../...../.....

Dear Sir,

RE: Loss of mobile phone no.:

MAKEMODEL

This is to inform that my mobile phone has been lost due to theft on
.....at.....FIR/DD entry has been lodged
with Police Station. I am enclosing the Claim
Form cum Bill along with required documents for settlement of the claims.

Thanking you

Yours Sincerely,

Signature of the Insured

Name



CLAIM FORM CUM CLAIM BILL

To be filled in by the ultimate consumer

Name

Present Address

Tel. No.

Make & Model of the Handset

Invoice No. Date of Purchase

Dealer Name

Address

Tel. No.

IMEI No.

Date of Theft Time

Place of Theft

Details of Theft

FIR No./DD No. Date

Police Station

Amount Claimed

Block the SIM Card within 3 days YES ☐ NO ☐

DATE

PLACE

SIGNATURE OF CUSTOMER

TERMS AND CONDITIONS:

POLICY COVERAGE

1. Theft coverage of LG GSM HANDSET for one year from the date of purchase/invoice only. No other loss covered.
2. Offer applicable on all purchases made from April 7, 2011 to April 6, 2012, under Policy No. **PBG-00030389-000-00**. Dated 07/04/11
3. Only theft registered under section 379 IPC or theft reported under Daily Dairy with Police FIR is covered.
4. Reimbursement will be subject to following depreciation/ deduction on the invoice value from date of purchase:

Handset upto 3 months old	-10%
More than 3 months upto 6 months	-15%
More than 6 months upto 9 months	-25%
More than 9 months upto 12 months	-35%

CLAIM PROCESSING DOCUMENTS

In the event of handset loss, the buyer should follow the understated procedure:

- a) (i) Lodge FIR under Section 379 IPC or theft to be entered in Daily Dairy with the Police Station in whose jurisdiction the theft occurred within 24 hours of occurrence of the same.
- (ii) Block the SIM Card with your service provider within 3 days.
- (iii) Send information to the insurance company within 7 days of the loss.
- b) Documents required:
 - (i) Original Invoice & Cash Memo.
 - (ii) Original certified copy of DD/FIR u/s 379 by the police authority.
 - (iii) Translation of vernacular documents in English/Hindi.
 - (iv) Complete claim Form cum Bill and Discharge Voucher.

These documents should be sent to the Policy Issuing Office within 7 days of the loss by regd. post/courier. All document to be submitted in English/Hindi language. The company reserves the right to call for any other necessary document in addition to the documents listed above.

Subject to all the conditions being fulfilled, claim will be settled within 15 days of our receipt of the above documents.

Deduction of Rs. 350/- will be applicable towards accessories.



Note: In case the handset cost is more than Rs. 20,000/-, a survey is required. Contact nearest office of Cholamandalam MS General Insurance Co. Ltd. for survey.

For any future queries assistance related to the policy exclusion and claim settlement you may write to Cholamandalam MS General Insurance Co. Ltd. Delhi Regional Office Plot no. 6, First Floor, Opp. HP Petrol Pump, Near Metro Pillar No. 81 Pusa Road, Delhi - 110005

Tel: +91-11-39813100, Fax: +91-11-39813110

e-mail id : customercare@cholams.murugappa.com



DISCHARGE VOUCHER

Received from Cholamandalam MS General Insurance Co. Ltd. under Policy No..... in full and final discharge of our claim, the sum of (in words) Rs.

Signature of Insured /Customer
across revenue stamp

Affix Re.1 revenue stamp

Date:

Place:

Customer Information Center

For any query related to the after sales service and customer support please contact us at below details

 **LG** **24 x 7 CALL CENTER**


CALL

1800-180-9999
(Toll Free)


SMS

5757554
(Send SMS)


CLICK

www.lg.com
serviceindia@lge.com

[illegible]

[illegible]
